

#### **ASSEMBLY INSTRUCTION**

#### **EDMUNDSTON**

Bedside

ITEM CODE 9389

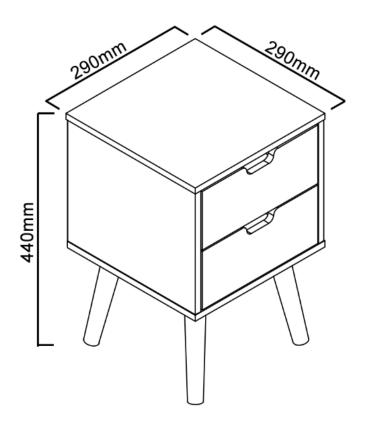

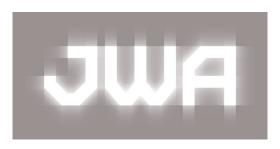


Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia. For any assistance with assembly or for missing parts please refer to your receipt

#### PRE-ASSEMBLY PREPARATION

#### **Before you start:**

- 1.Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
- 2.Take care when lifting. Product should be assembled as near as possible to the point of use
- 3.Ensure that you have all required contents for complete assembly
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6.Do not over tighten the screws and bolts as this may damage the threads

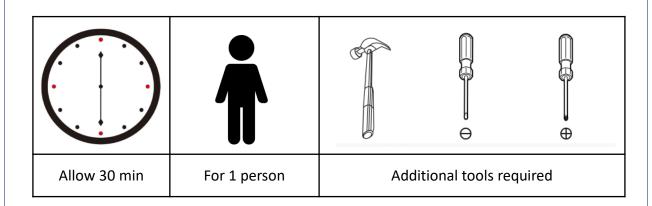




#### **PARTS LIST**

NO.	ITEM	QTY	NO.	ITEM	QTY
Α	Ф6х35	12PCS	Τ	<b>₩</b> ₩₩₩	2PCS
В	φ15x10	12PCS	_	Ф3х10	24PCS
С	Ф6х30	8PCS	P1		2PCS
D	<b>Φ4</b> x35	12PCS	P2		2PCS
Е	Ф4х10	20PCS	P3	3 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	2PCS
F		4PCS	P4		2PCS
G	Ф3х12	10PCS			

NO.	ITEM	QTY
1	TOP PANEL	1 PCE
2	BOTTOM PANEL	1 PCE
3	LEFT SIDE PANEL	1 PCE
4	RIGHT SIDE PANEL	1 PCE
5	SUPPORT PANET	1 PCE
6	BACK PANEL	1 PCE


NO.	ITEM	QTY
7	LEG	4 PCS
8	DRAWER FRONT PANEL	1 PCE
9	DRAWER LEFT PANEL	1 PCE
10	DRAWER RIGHT PANEL	1 PCE
11	DRAWER BACK PANEL	1 PCE
12	DRAWER BOTTOM PANEL	1 PCE

# **PARTS LIST**

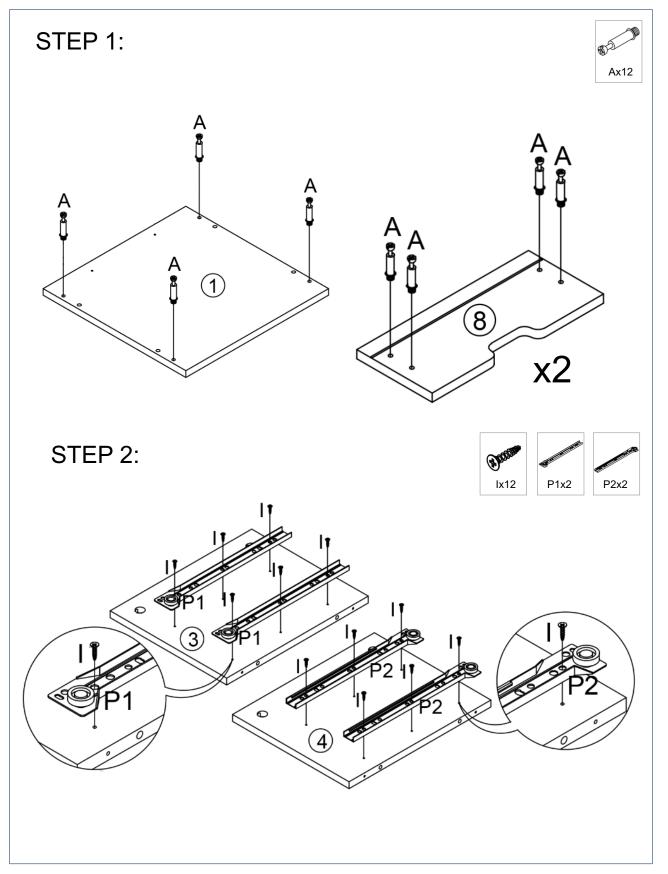

# STEP 3:




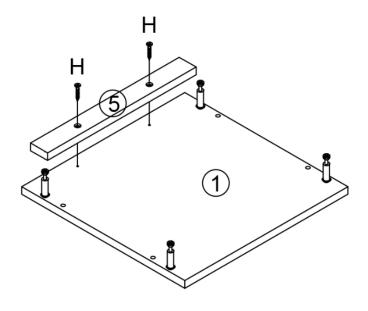

STEP 4:






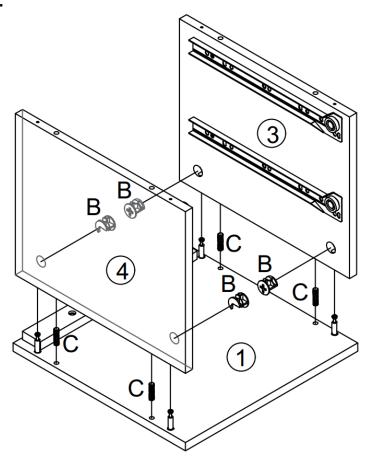


# STEP 5:



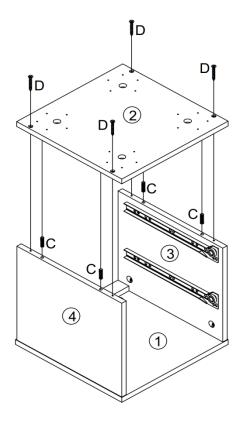

STEP 6:

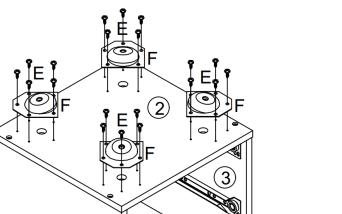







# STEP 7:



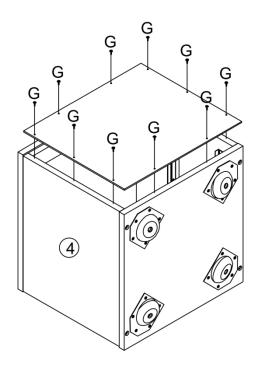


# STEP 8:

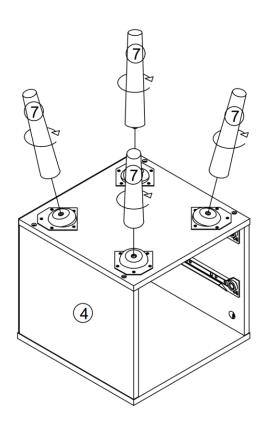


# STEP 9:




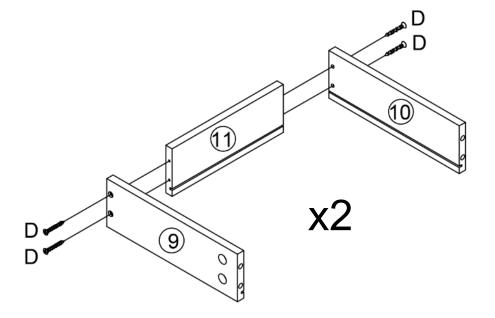


# STEP 10:



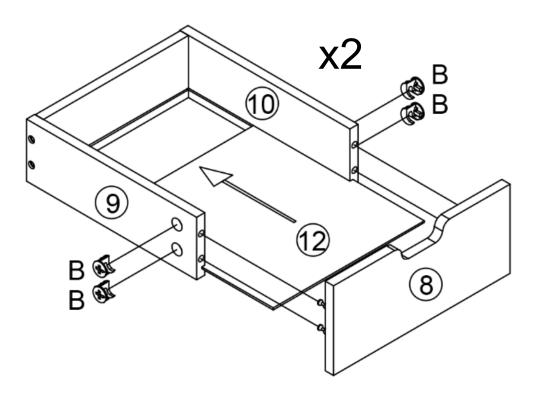

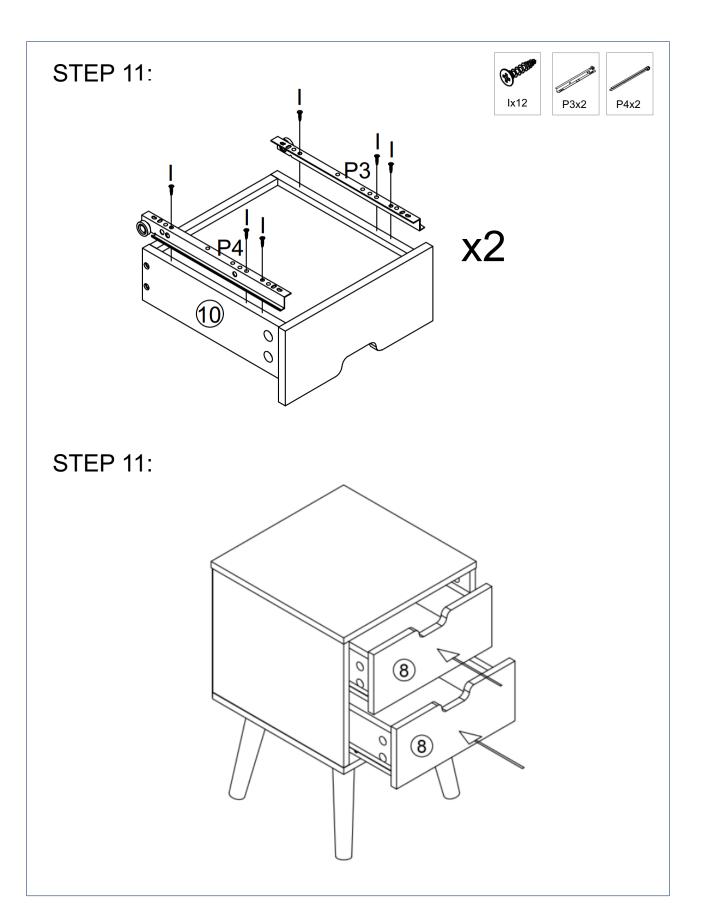


#### ASSEMBLY IS COMPLETE

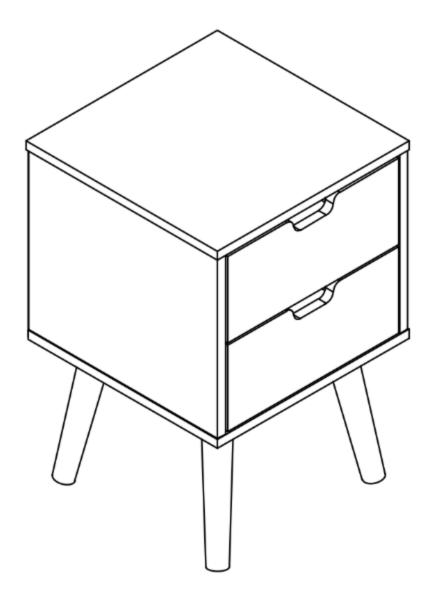

# SAFETY BRACKETS INSTRUCTIONS

- Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
- Attach the second Mounting Plate to the furniture frame with the Short Screws.
- Move the furniture to its final position. Thread a Wall Strap through the both
  Mounting Plates and tighten until snug. Do not over tighten.
- 4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

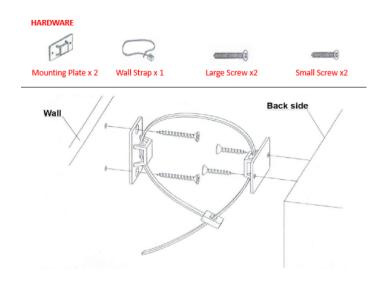

#### To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void