
# ASSEMBLY INSTRUCTION GATES

**6 DRAWER DRESSER** 

ITEM CODE 75260/75257

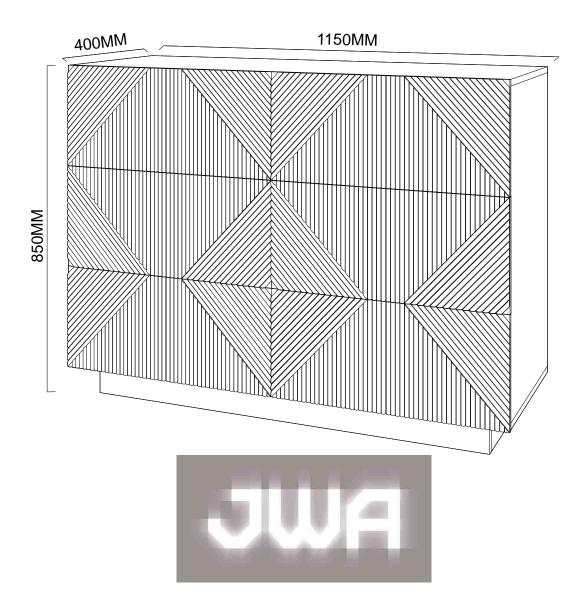


Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia. For any assistance with assembly or for missing parts please refer to your receipt

#### PRE-ASSEMBLY PREPARATION

#### **Before you start:**

- 1.Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use
- 3. Ensure that you have all required contents for complete assembly
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6.Do not over tighten the screws and bolts as this may damage the threads

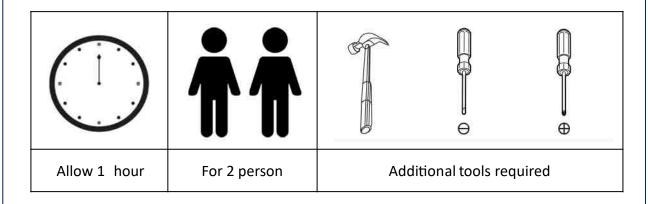




# **PARTS LIST** (B) X2 1 **6** 4


## **PARTS LIST**


NO.	ITEM	QTY	NO.	ITEM	QTY
Α	Φ 6*35	60PCS	ı		10PCS
В	Φ15*10	68PCS	J	<b>Φ 3*16</b>	10PCS
С	Ф 6*30	20PCS		© ® O O O O O O O O O O O O O O O O O O	
D	<b>● 1</b> 2440	6PCS	K	DL	6PCS
Е		2PCS	] '`	CR	0000
F	<b>DININGGIANA</b> Ф 4*35	30PCS		DR	
G		1PC	L		4PCS
Н	Φ3*12	72PCS	М	(ξ) (2) (2) (3) (4) (4) (4) (4) (4) (4) (4) (4) (4) (4	4PCS


## **PARTS LIST**


NO.	ITEM	QTY	NO.	ITEM	QTY
1	TOP PANEL	1 PC	10	DRAWER RIGHT SIDE PANEL	6 PCE
2	LEFT SIDE PANEL	1 PC	11)	DRAWER BACK PANEL	6 PCE
3	RIGHT SIDE PANEL	1 PC	12	DRAWER BOTTOM PANEL	6 PCE
4	BOTTOM PANEL	1 PC	13	DRAWER FRONT PANEL	2 PCE
5	BACK PANEL	2 PCE	14)	DRAWER FRONT PANEL	2 PCE
6	CROSSING BAR	4 PCE	15	DRAWER SUPPORT PANEL	6 PCE
7	LEG	2 PCE	16	MIDDLE PANEL	1 PC
8	LEG	2 PCE	17	DRAWER FRONT PANEL	1 PC
9	DRAWER LEFT SIDE PANEL	6 PCE	18	DRAWER FRONT PANEL	1 PC

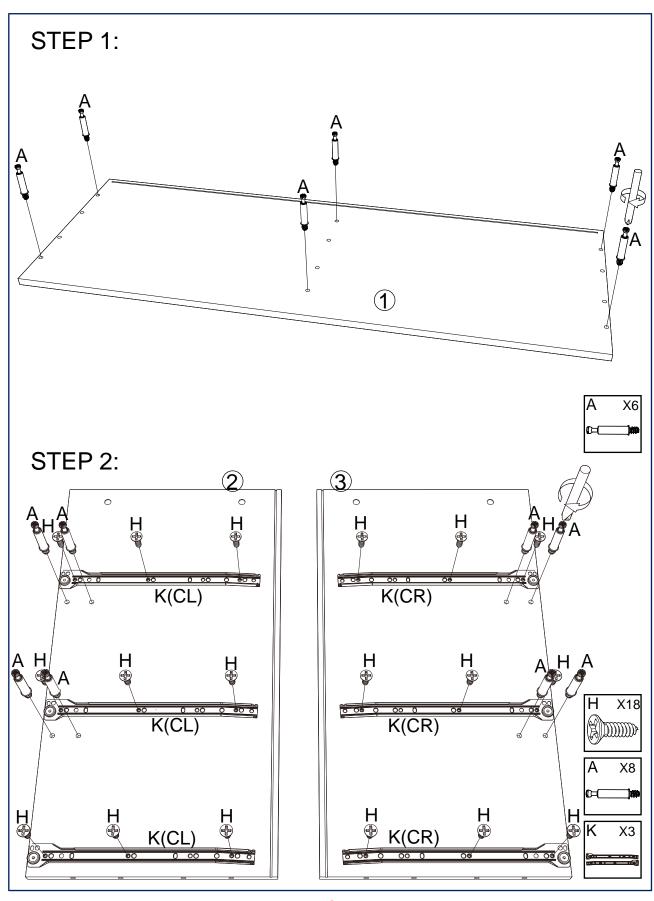


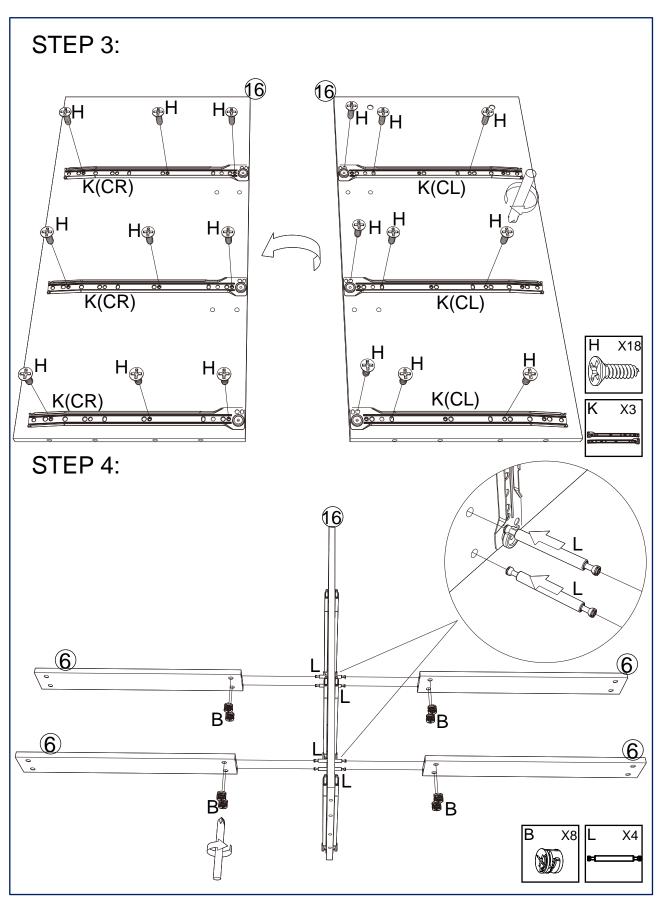


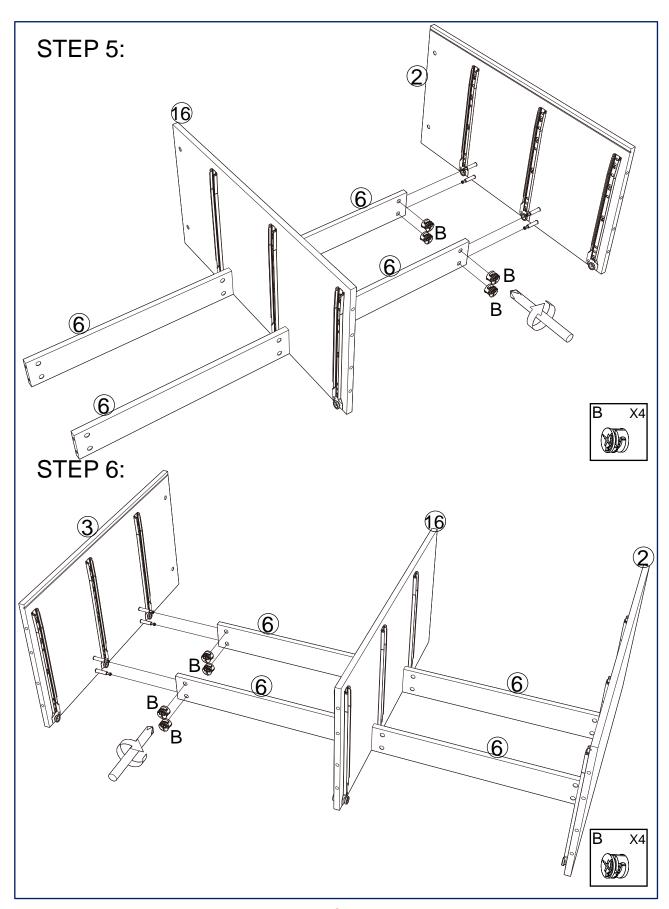


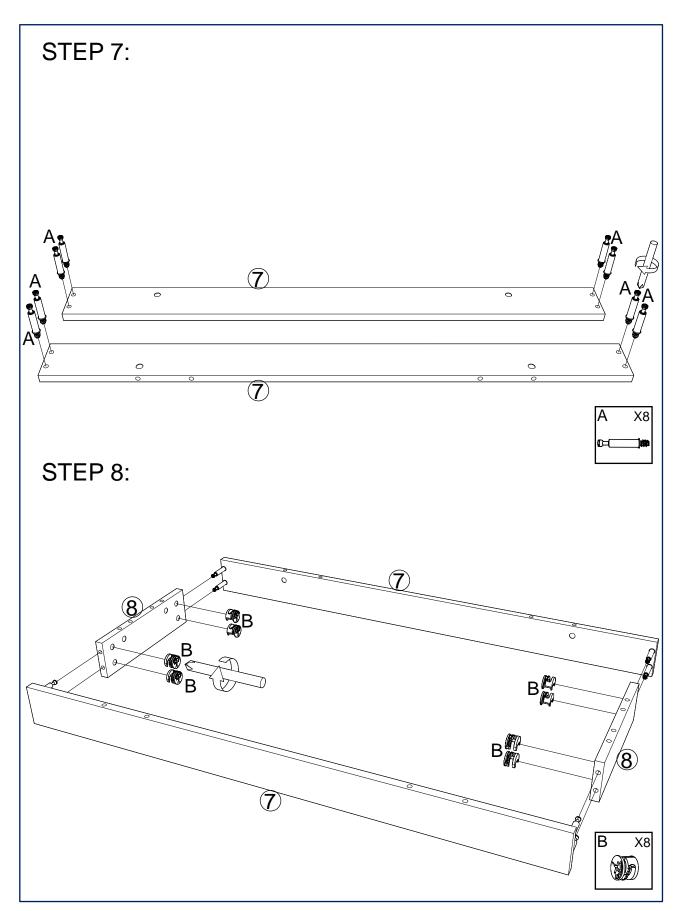


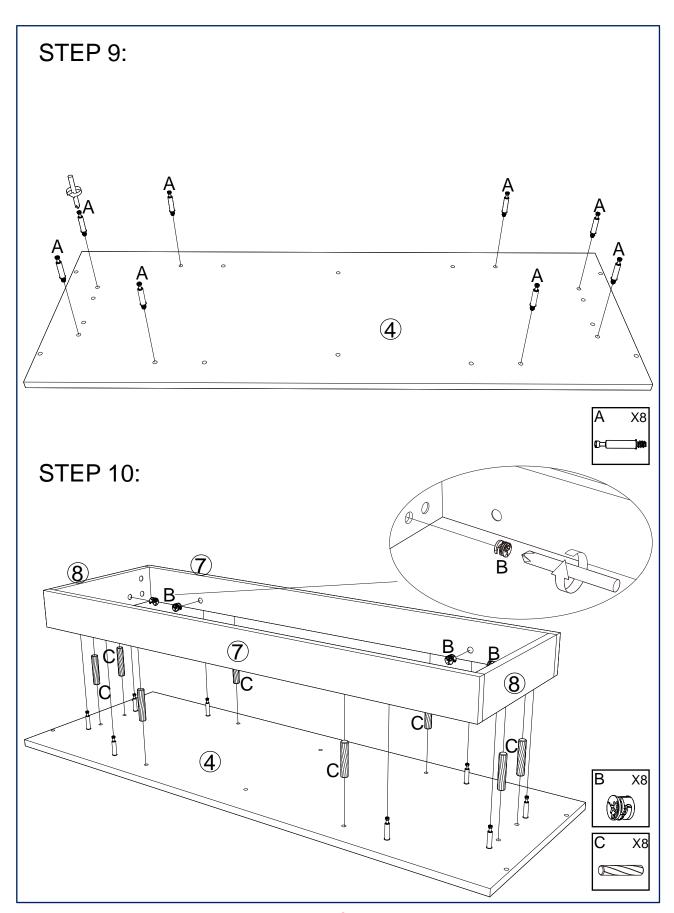


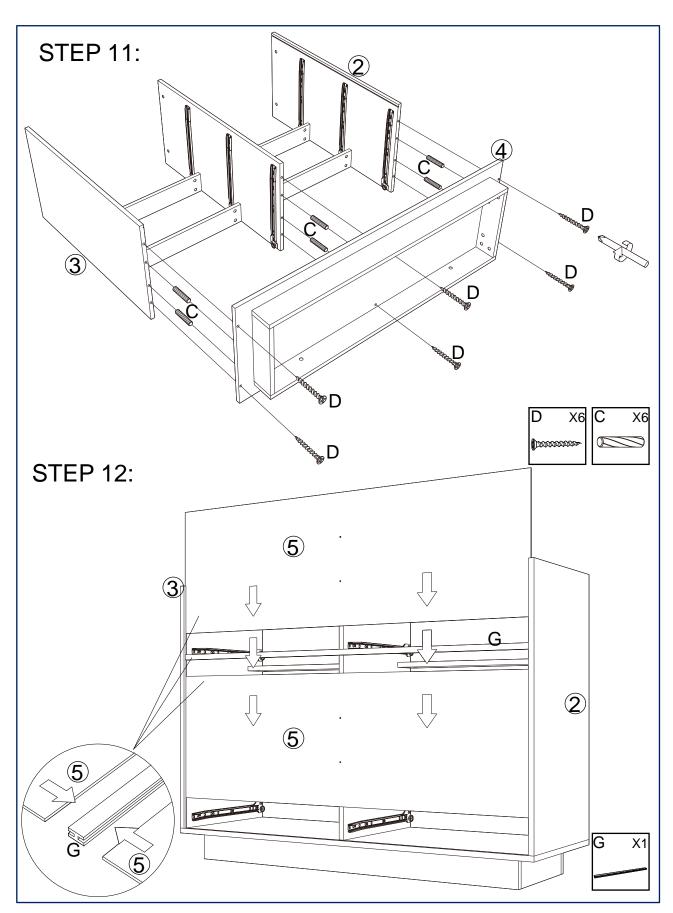

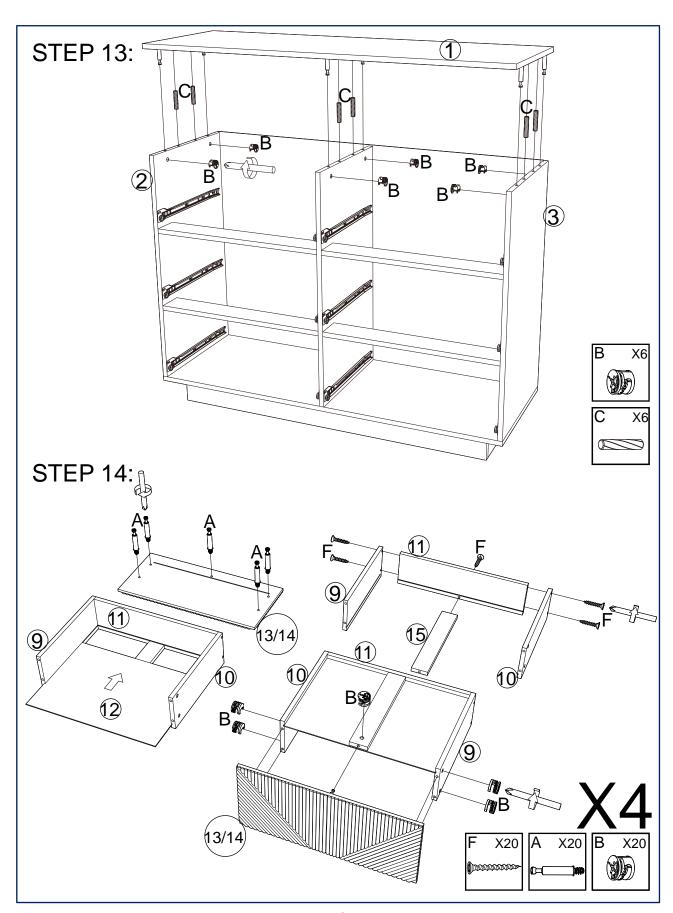


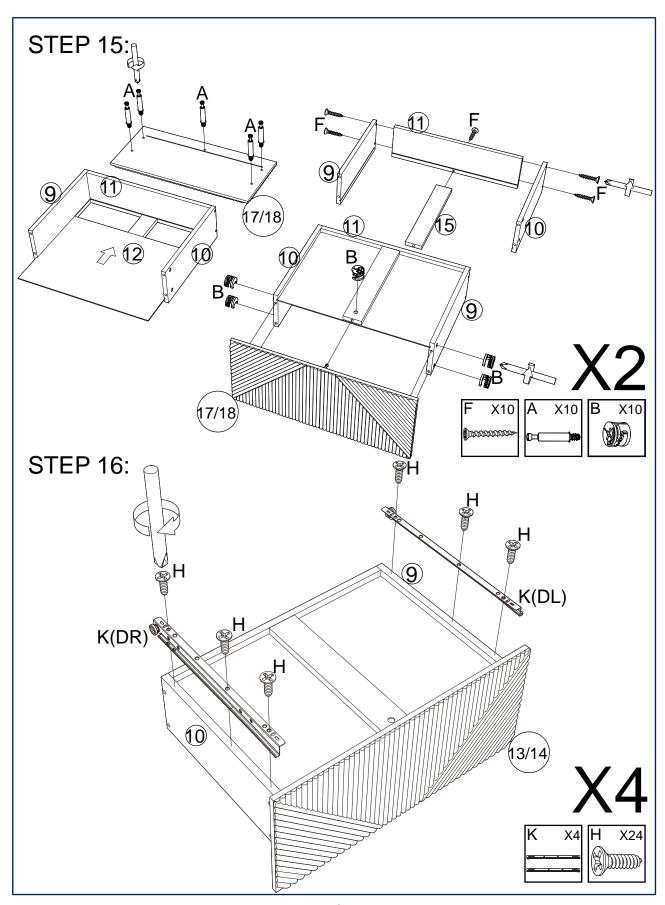

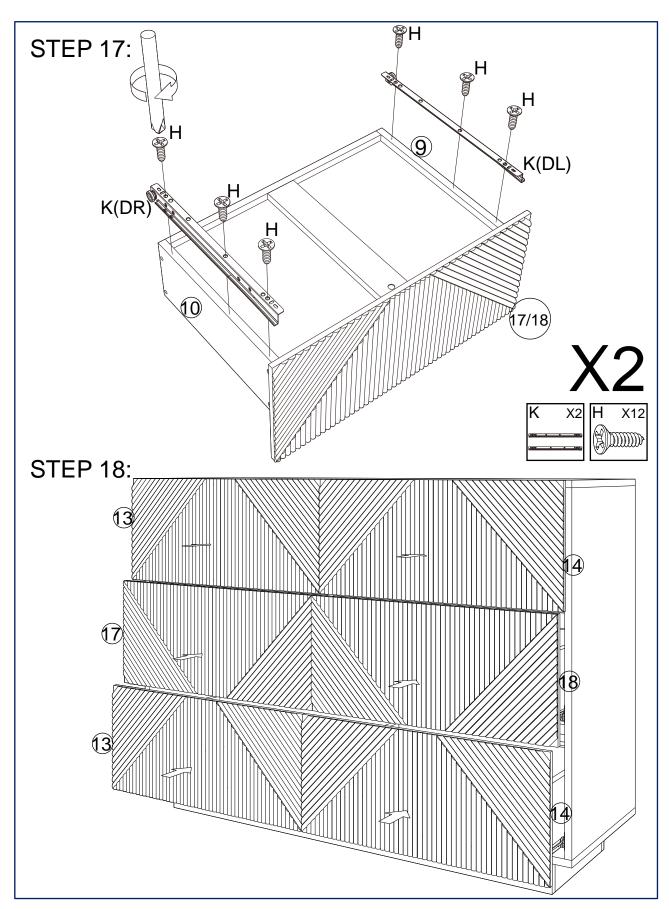

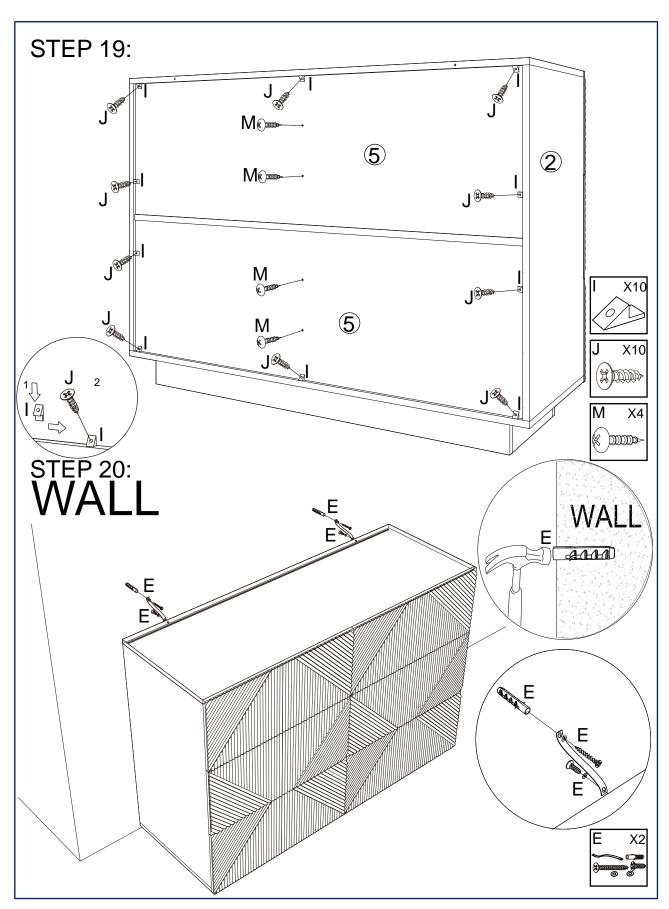


#### **ASSEMBLY IS COMPLETE**

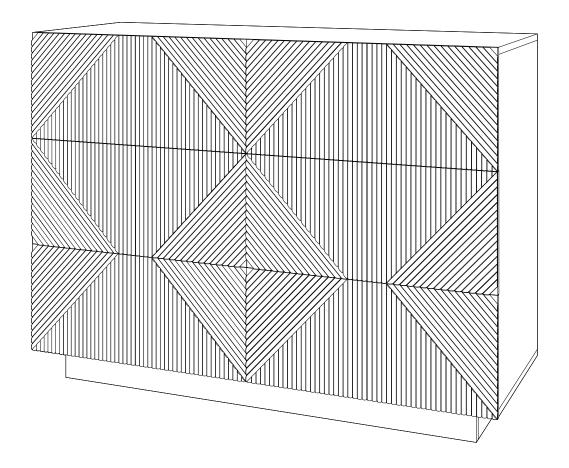

CAUTION: Always Lift Your Furniture When Moving /Relocating - Do Not Drag. Dragging Can Cause The Legs To Bend/Break.

# SAFETY BRACKETS INSTRUCTIONS

- Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
- Attach the second Mounting Plate to the furniture frame with the Short Screws.
- Move the furniture to its final position. Thread a Wall Strap through the both
   Mounting Plates and tighten until snug. Do not over tighten.
- Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

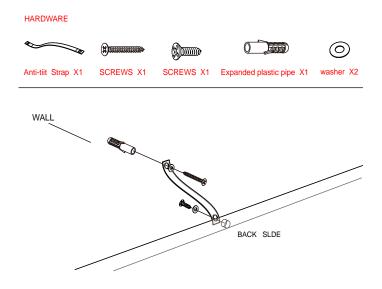

### To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void