

ASSEMBLY INSTRUCTION

KLEIN BED BASE

ITEM CODE 74180 / 74181 / 74182 / 74183

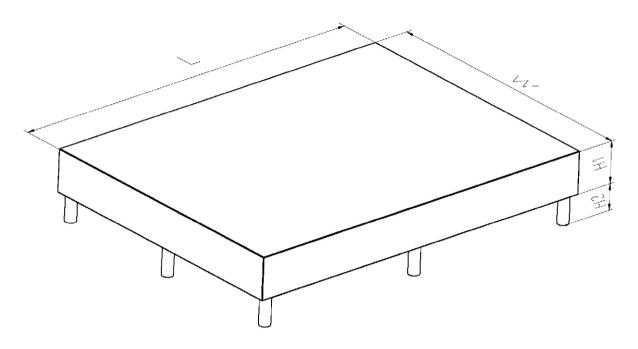

Item Code	Product Description	L (mm)	W (mm)	H1 (mm)	H2 (mm)
74180	SINGLE BED BASE	1870	920	203	145
74181	DOUBLE BED BASE	1870	1370	203	145
74182	QUEEN BED BASE	2030	1530	203	145
74183	KING BED BASE	2030	1830	203	145

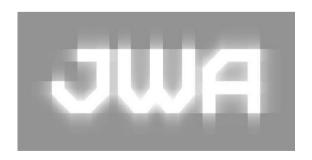


Imported by JWA Furniture Pty Ltd, Brisbane Qld, Australia. For any assistance with assembly or for missing parts please refer to your receipt


PRE-ASSEMBLY PREPARATION


Before you start:

- 1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use
- 3. Ensure that you have all required contents for complete assembly
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6. Do not over tighten the screws and bolts as this may damage the threads
- 7. Assembly is to be carried out by a competent adult(s) ONLY
- 8. During assembly, children should be kept away from the product due to possible risk to injury.
- 9. Do not use this item if any components are missing or damaged.
- 10. Please keep the instructions for future reference.

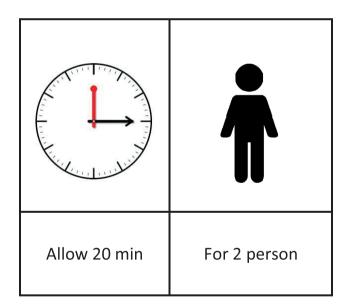


PARTS LIST

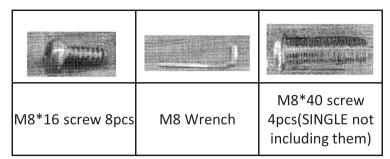


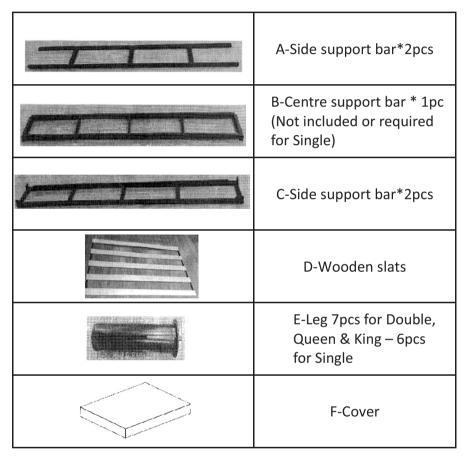

STEP 1:


• Connect the A side support bar with C side support bar, use M8*16 screw(8 pcs).

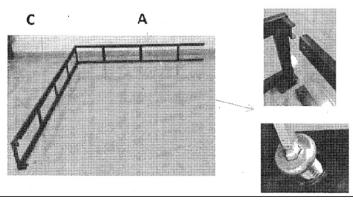

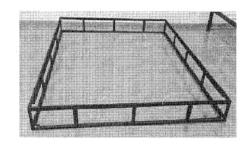


STEP 2:

• Connect side support bars with center support bar, use M8*40 screw(SINGLE don't have center support bar).

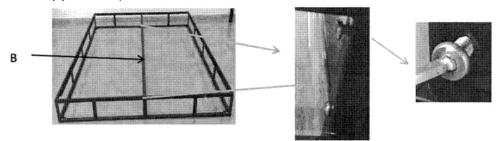


STEP 3:

• Stick the wooden slats on the side support bar.

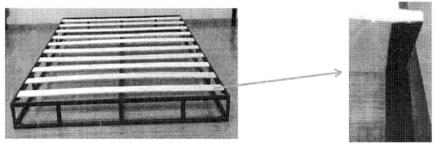

STEP 4:

Assemble the legs, (the legs you can choose assembled or unassembled).

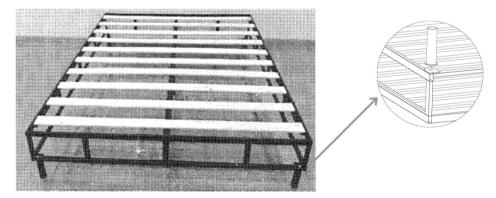

STEP 5:

• Pack the non-woven fabric cover.

