
ASSEMBLY INSTRUCTION

MILLS 3 DRAWER SHOE CABINET

ITEM CODE 74697

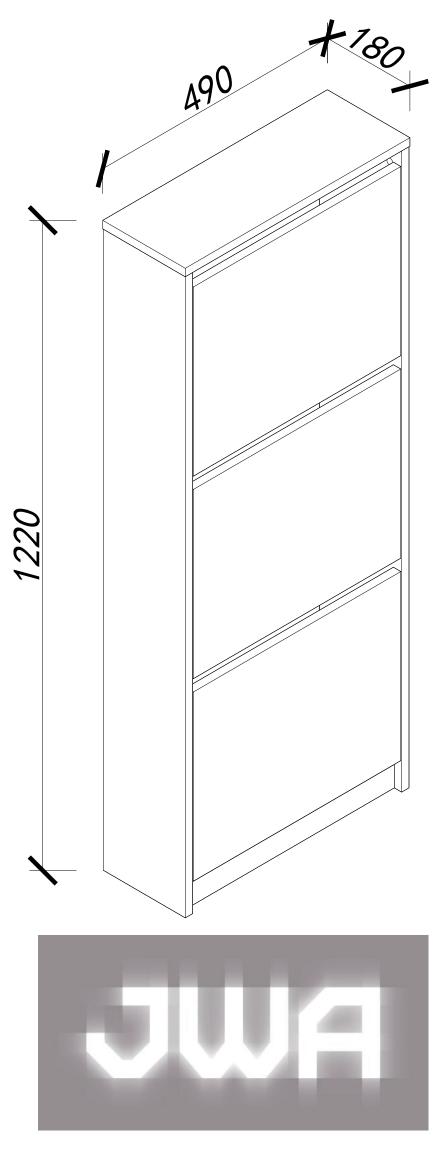


Imported by JWA Furniture Pty Ltd, Brisbane Qld, Australia. For any assistance with assembly or for missing parts please refer to your receipt

PRE-ASSEMBLY PREPARATION


Before you start:


- 1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use
- 3. Ensure that you have all required contents for complete assembly
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6. Do not over tighten the screws and bolts as this may damage the threads
- 7. Assembly is to be carried out by a competent adult(s) ONLY
- 8. During assembly, children should be kept away from the product due to possible risk to injury.
- 9. Do not use this item if any components are missing or damaged.
- 10. Please keep the instructions for future reference.

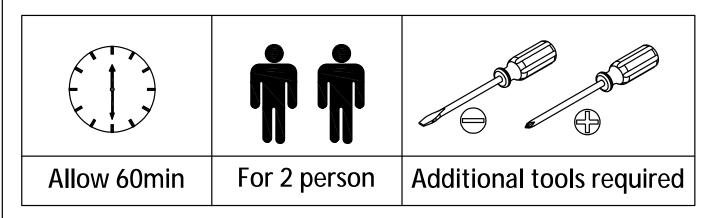





CAM LOCK INSTALL METHOD AS FOLLOWS

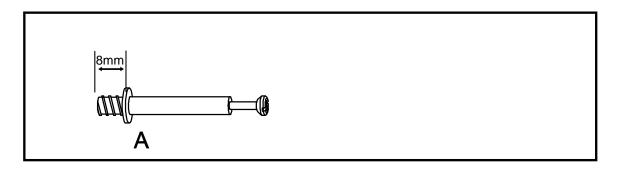

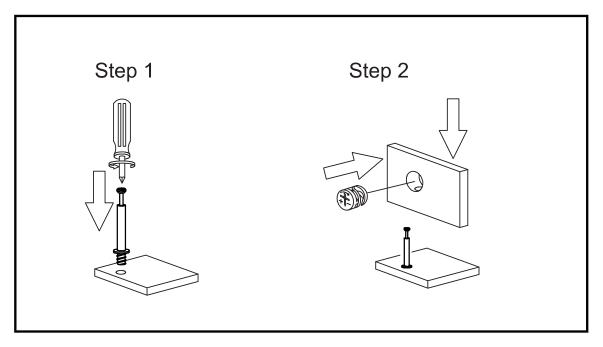

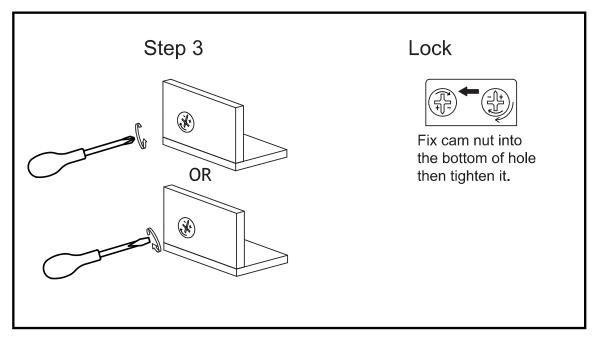



PARTS LIST

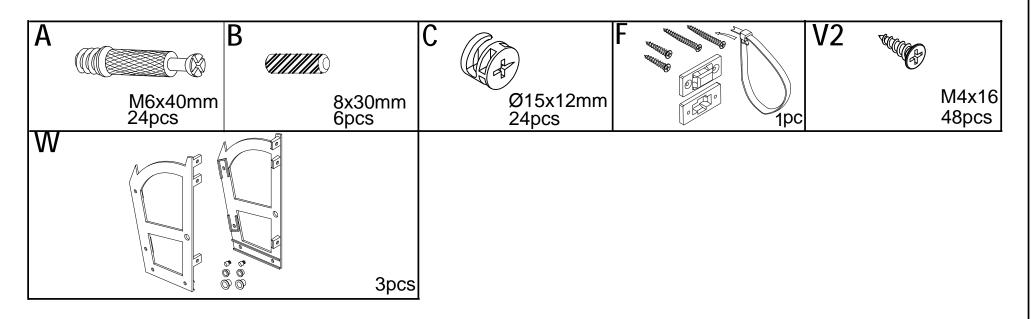


Panel No	Panel Sizes	Quantity
1	490*180*16	1
2	456*163*16	1
3	1204*179*16	1
4	1204*179*16	1
5	456*60*16	3

Panel No	Panel Sizes	Quantity
6	456*44*16	1
7	452*355*16	3
8	442*139*12	3
9	442*70*12	3

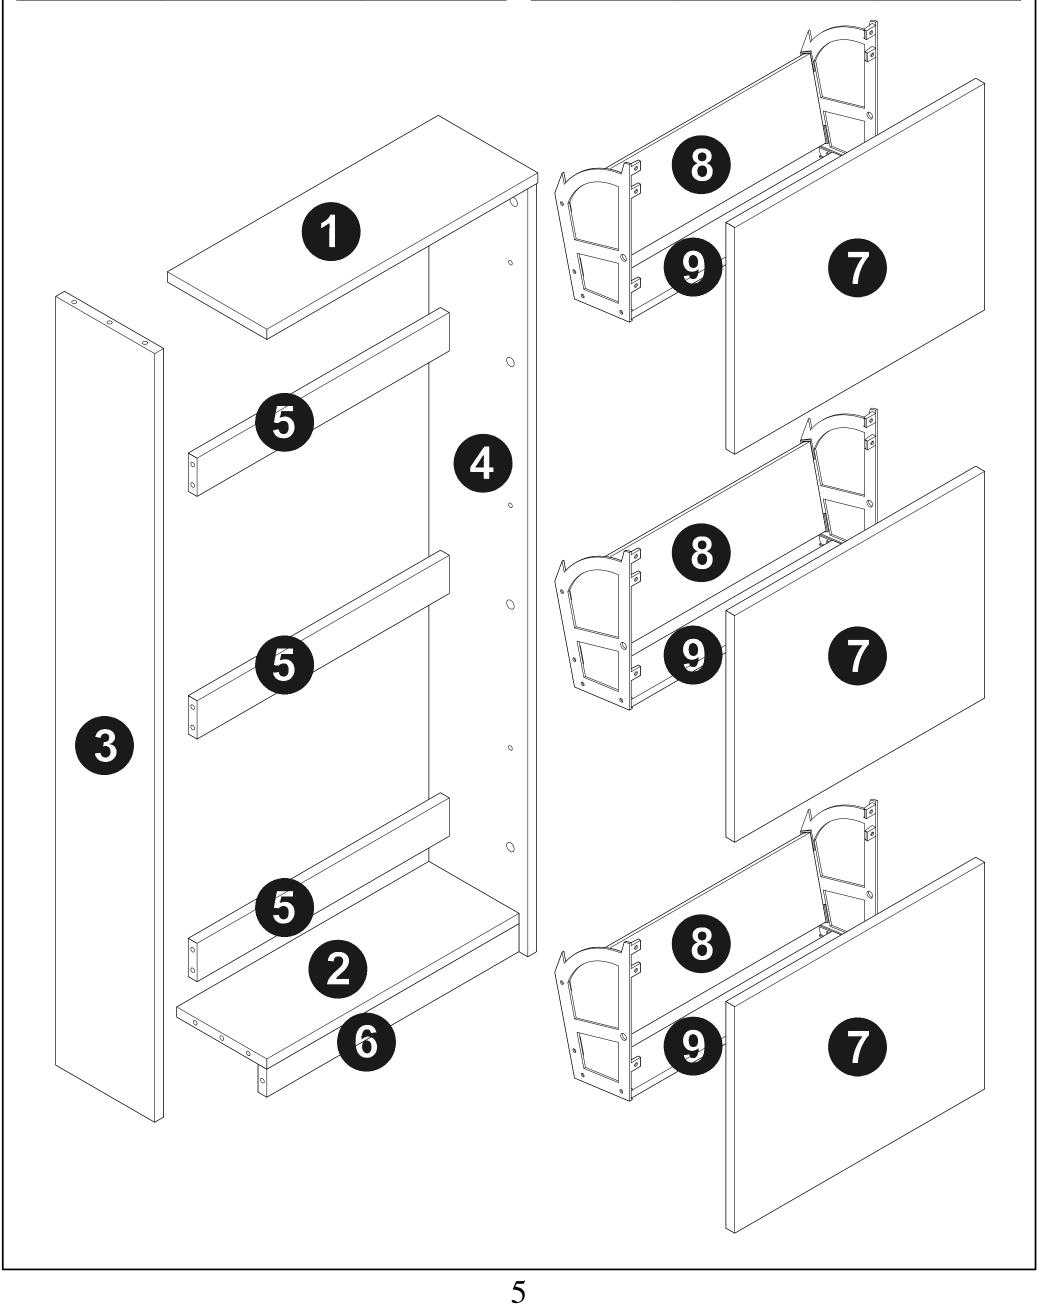


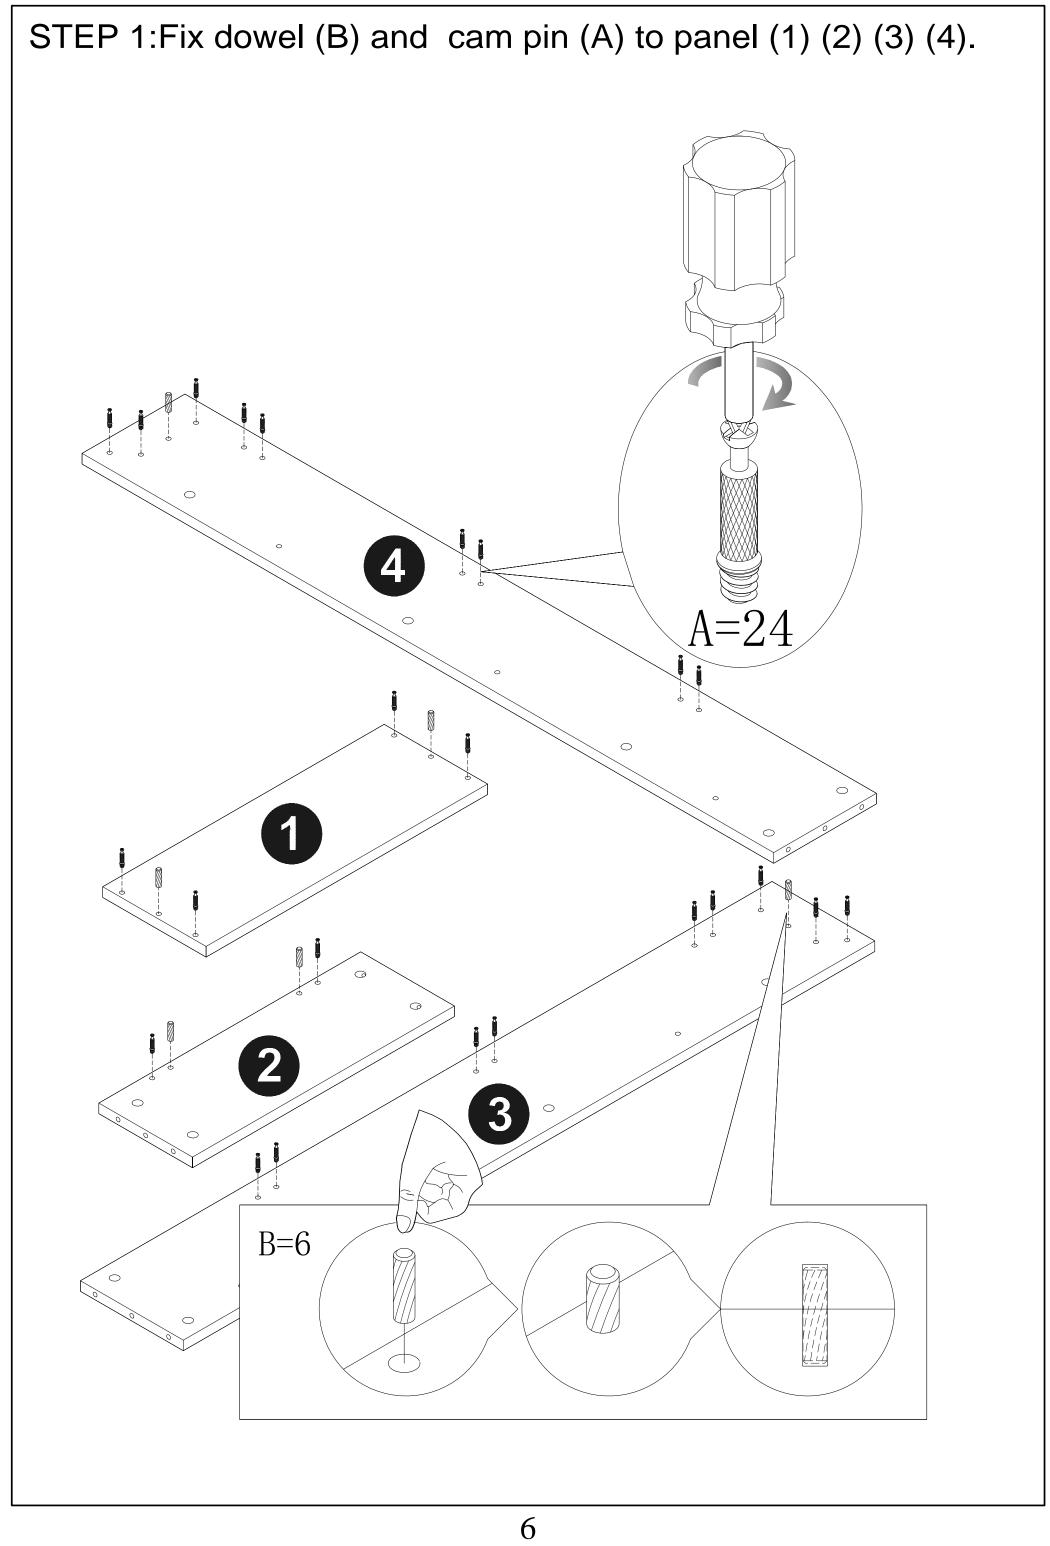


STEP 2:Fix panel (6) to panel (2) with cam lock (C).

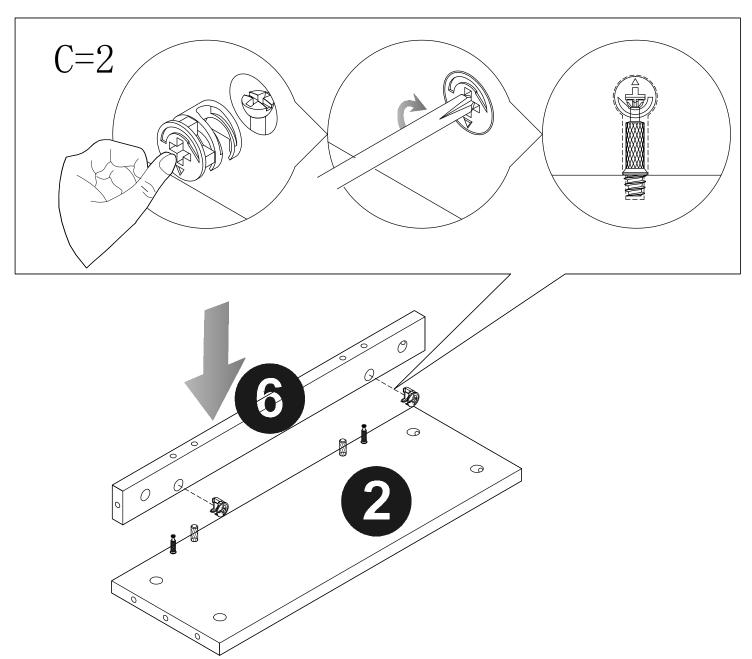


STEP 3:Insert panel (3) (4) into the holes in the panel (2) (5) (6).

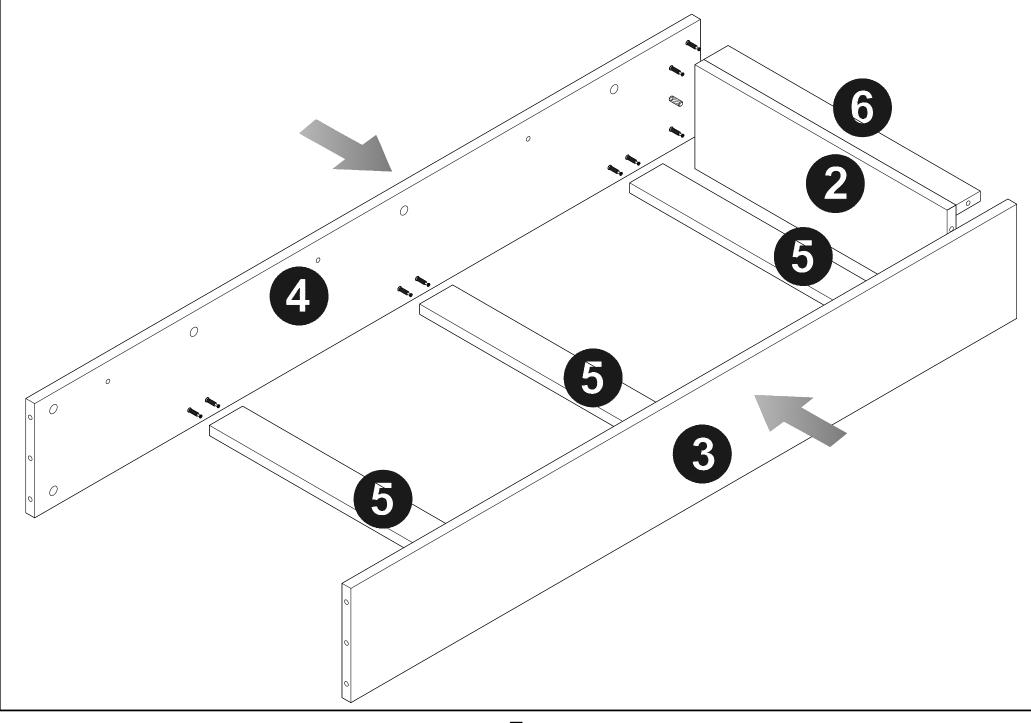

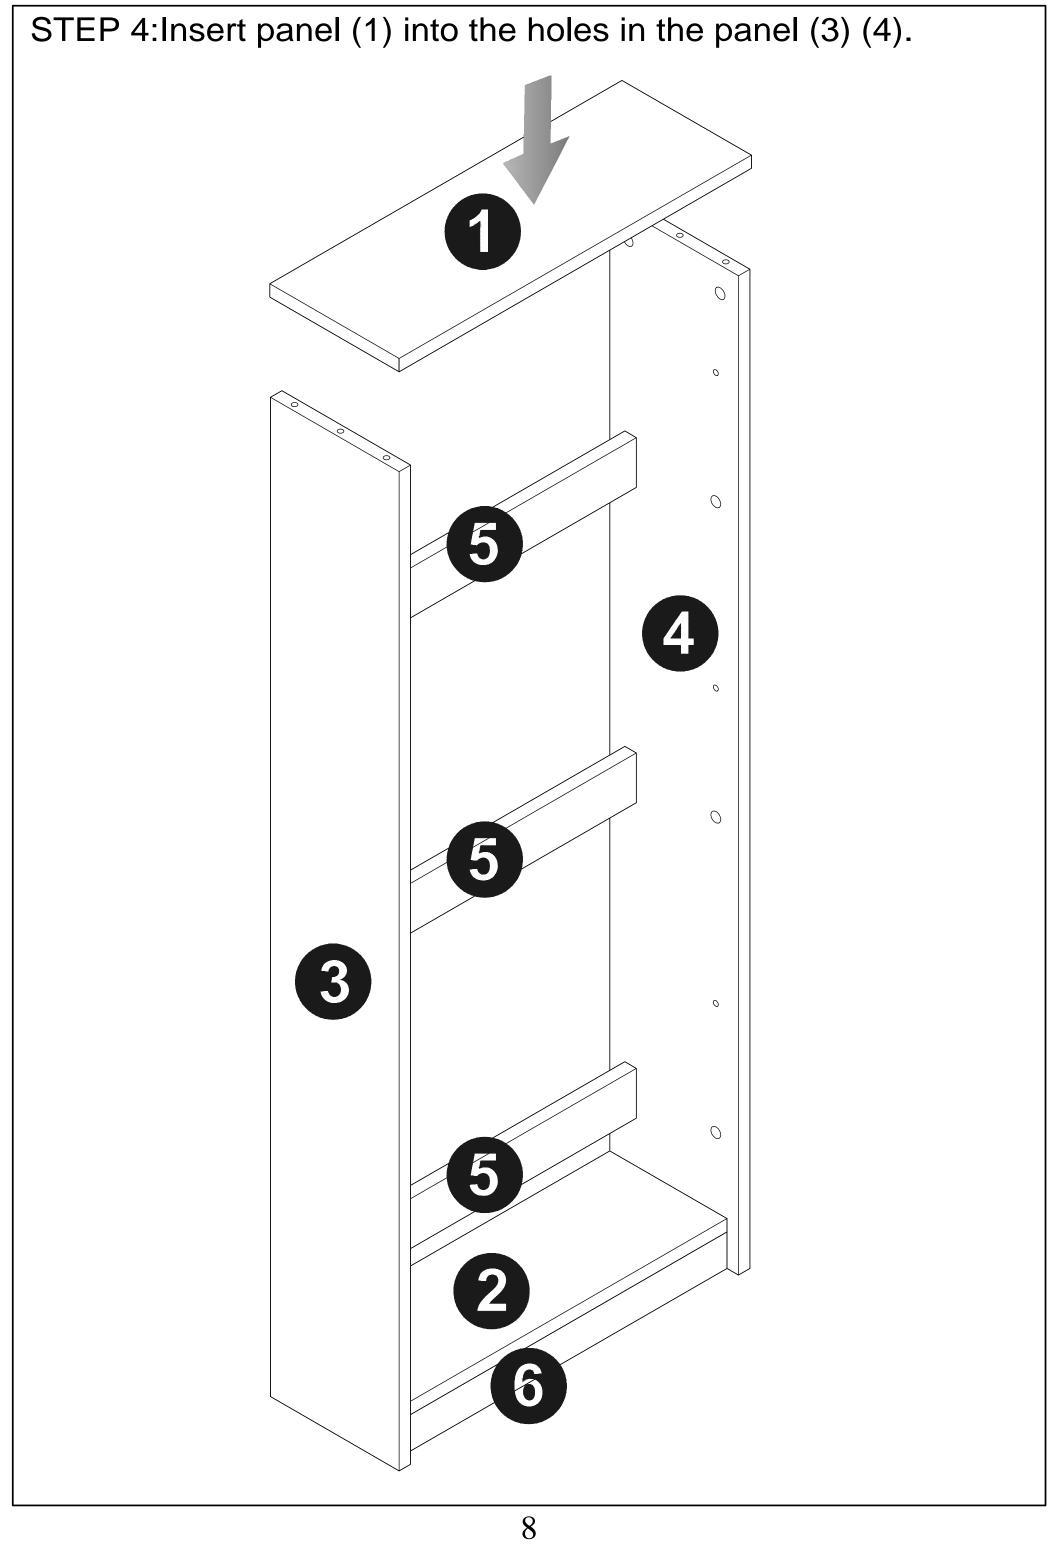


STEP 5:Fix panel (1) (2) (5) (6) to panel (3) (4) with cam lock (C). C = 220

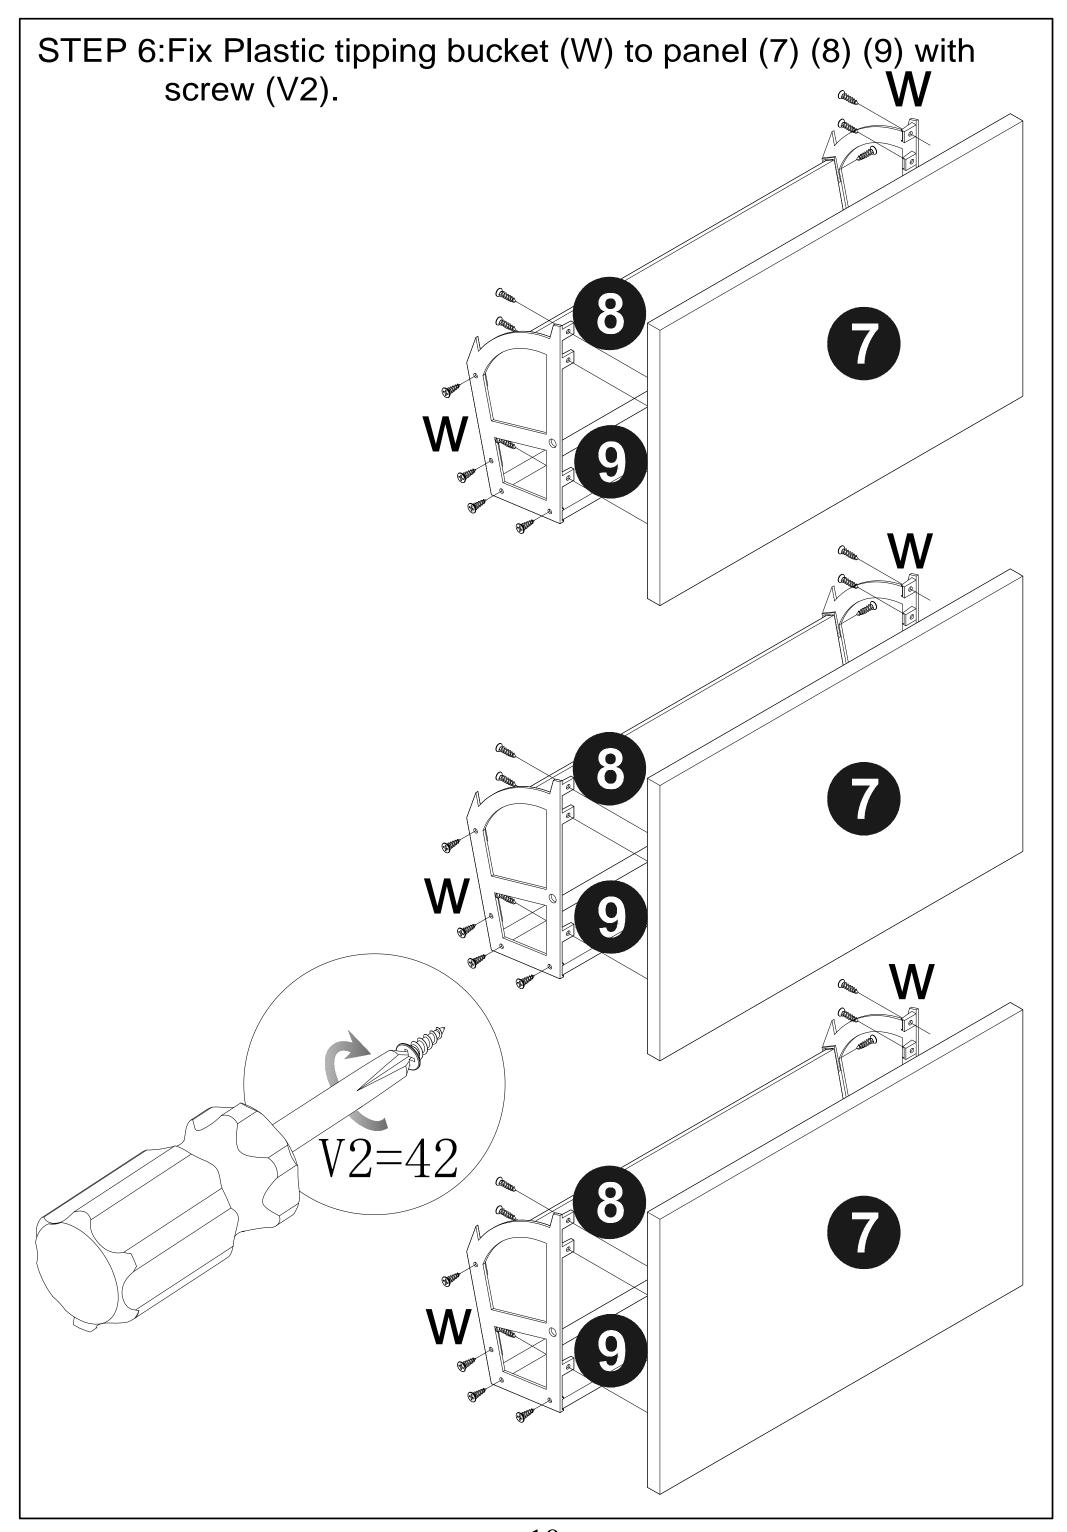


STEP 7: Put the plastic retention plug into the hole of the panel (3) Fix Plastic tipping bucket (W) to panel (3) (4) with screw (V2). $(4)_{\circ}$ V2=6

SAFETY BRACKETS INSTRUCTIONS

- 1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
- 2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
- 3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
- 4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

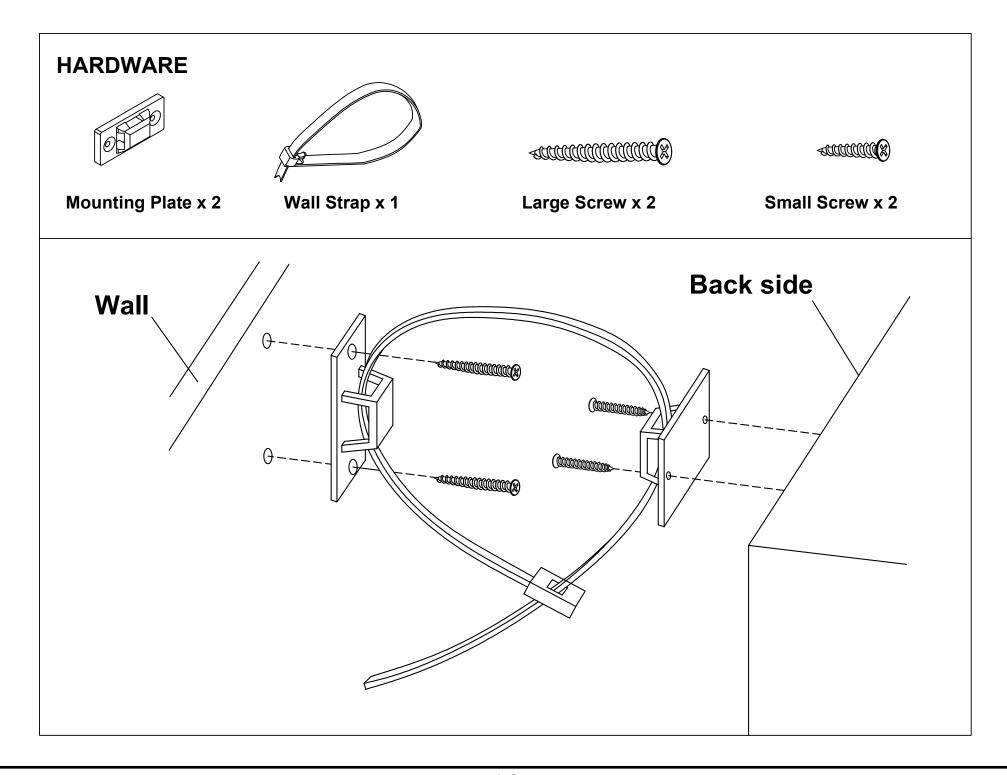

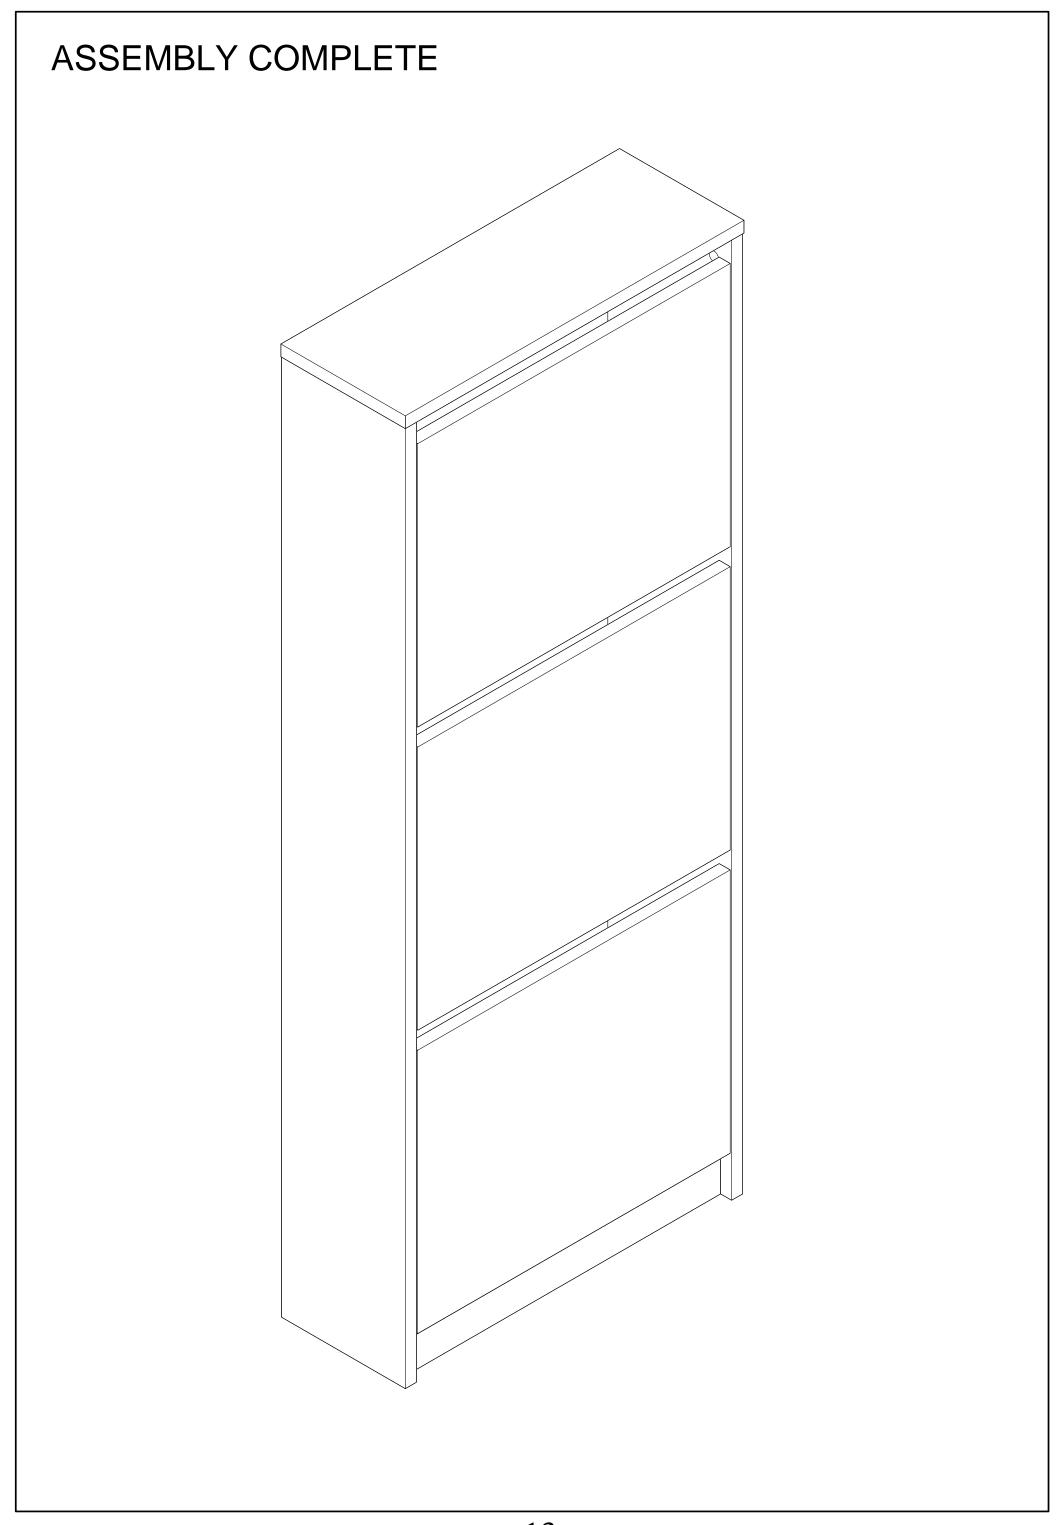

To protect your furniture, we suggest the following:

- · Avoid placing your furniture in direct sunlight.
- · Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void