
ASSEMBLY INSTRUCTION

EDGAR

1 DRAWER DESK

ITEM CODE 68430

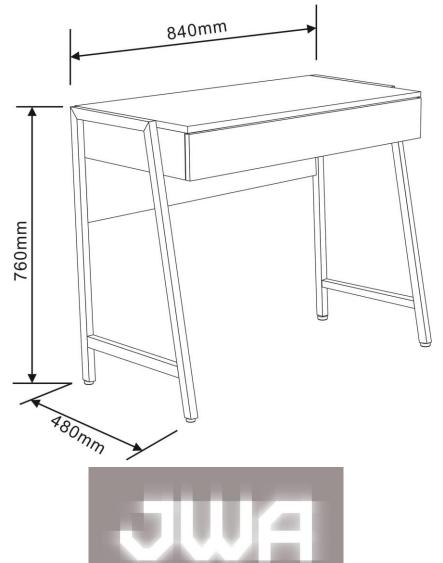


Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia. For any assistance with assembly or for missing parts please refer to your receipt

PRE-ASSEMBLY PREPARATION


Before you start:

- 1.Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use
- 3.Ensure that you have all required contents for complete assembly
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6.Do not over tighten the screws and bolts as this may damage the threads

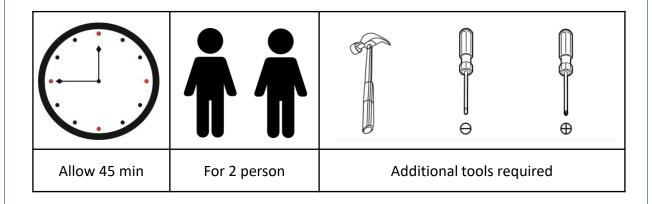




PARTS LIST

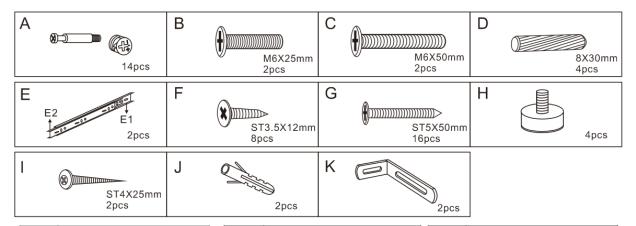


1	Desktop panel
2	Left side panel
3	Right side panel
4	Back panel


5	Drawer panel
6	Drawer left side panel
7	Drawer right side panel
8	Drawer middle panel


9	Drawer back panel
10	Drawer bottom panel
P1	Metal panel
P2	Support pipe

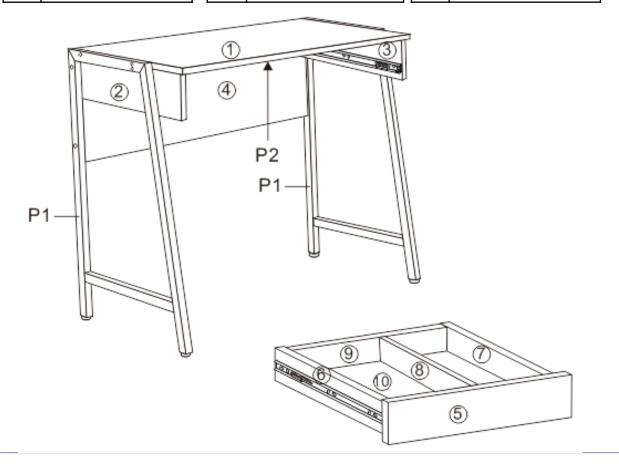

CAM LOCK INSTALL METHOD AS FOLLOWS

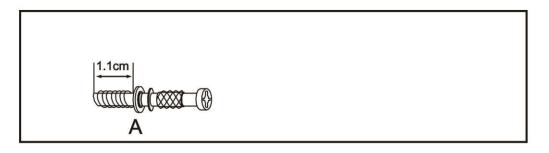


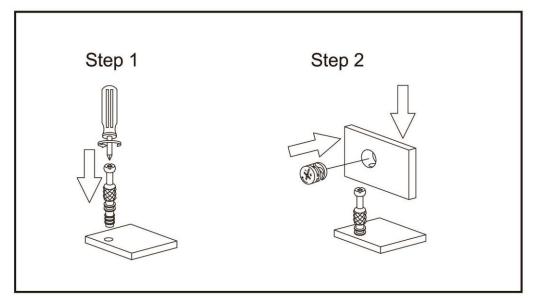

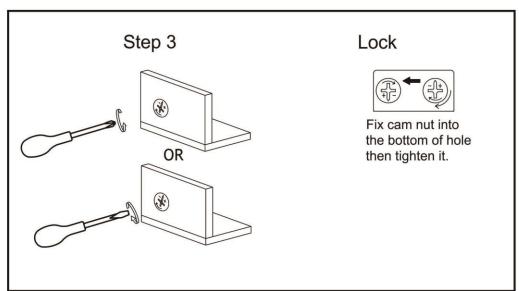


STEP 1:

Load the fitting H into the metal frame P1.

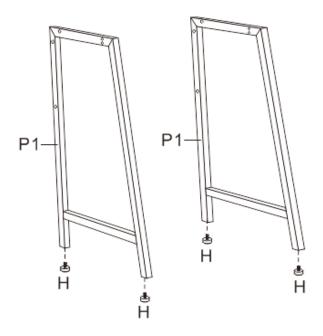


STEP 2: Press the plastic part on the E2 and separate E1 and E2.

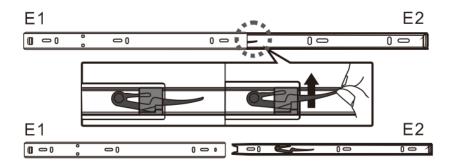


STEP 3:

The disconnected part E1 corresponds to the lead hole on panel 2 and 3 respectively, and is locked and fixed with part F; Pay attention to distinguish the opening direction of E1 parts.

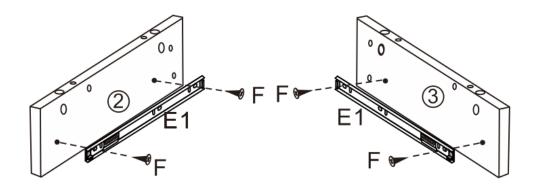


STEP4:

Connect and lock the assembled panel 2, 3 and 4 with fitting G.

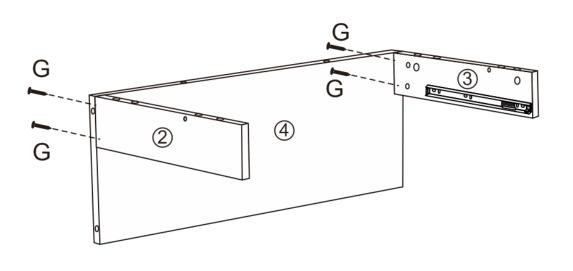


STEP 5:

Fix the metal pipe P2 on panel 1 with fitting B.

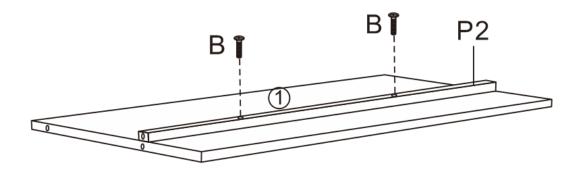

STEP 6:


Connect and fix panel 1 and panel 4 with fitting A and D.

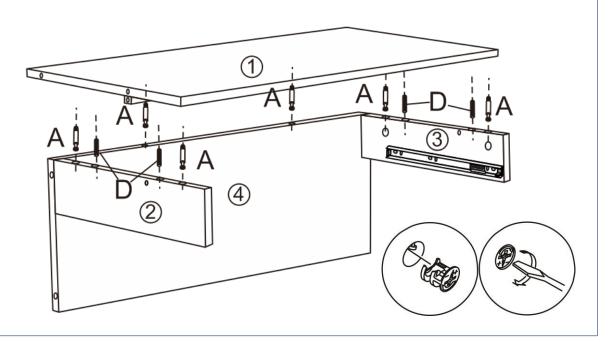

STEP 7:


Fix the metal frame P1 in the assembled panel assembly with

fitting G.

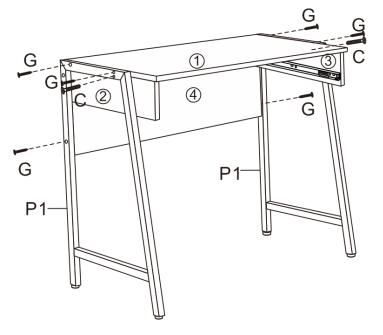


STEP 8:

- 1) Fix panel 6 and panel 7 on panel 9 with fitting G;
- 2) Load panel 10 into the corresponding slot of panel 6,7 and 9;
- 3) Connect panel 8 to panel 9 with fitting A;
- 4) Connect and fix panel 5 with panel 6,7 and 8 with fitting A.

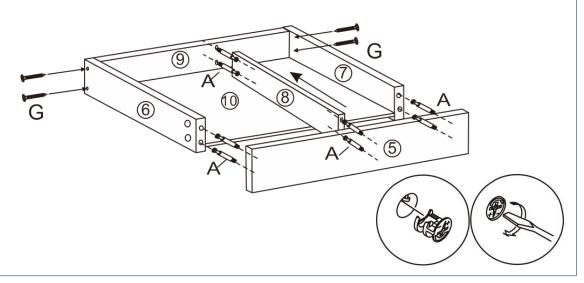

STEP 9:

Fix E2 on panel 6 and panel 7 with fitting F.

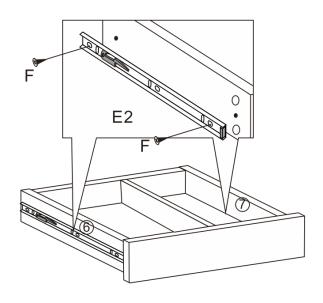

STEP 10:

Put the assembled drawers into the corresponding position of the desk.




STEP 11: Install a fall preventer.

ASSEMBLY IS COMPLETE

SAFETY BRACKETS INSTRUCTIONS

- Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
- Attach the second Mounting Plate to the furniture frame with the Short Screws.
- Move the furniture to its final position. Thread a Wall Strap through the both
 Mounting Plates and tighten until snug. Do not over tighten.
- 4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

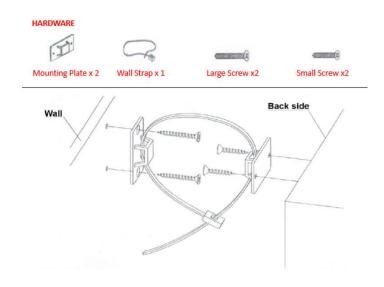

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void