


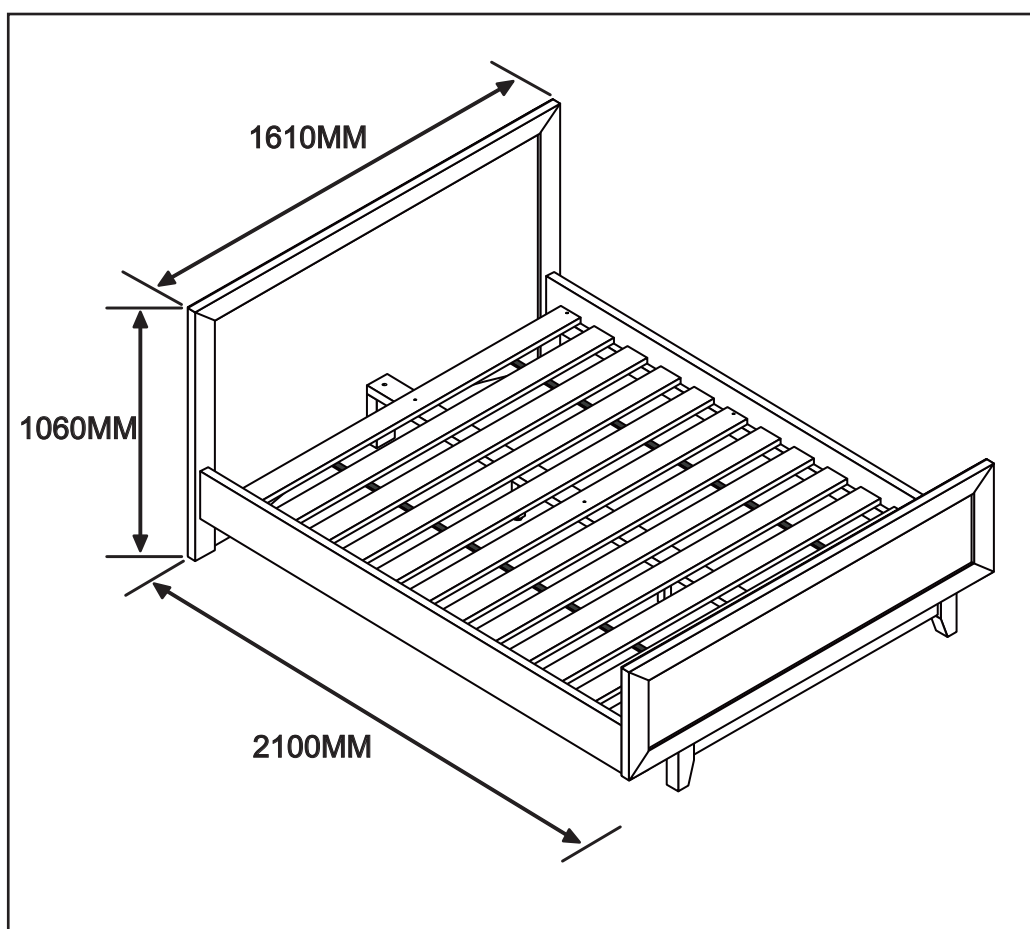

ASSEMBLY INSTRUCTION ANDI QUEEN BED ITEM CODE 54894

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Free call 1800 351 084



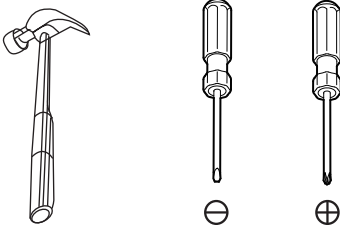




Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Free call 1800 351 084

PRE-ASSEMBLY PREPARATION

Before you start:


1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

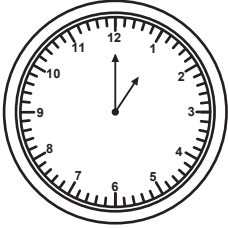

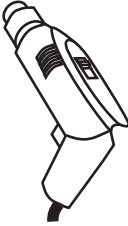





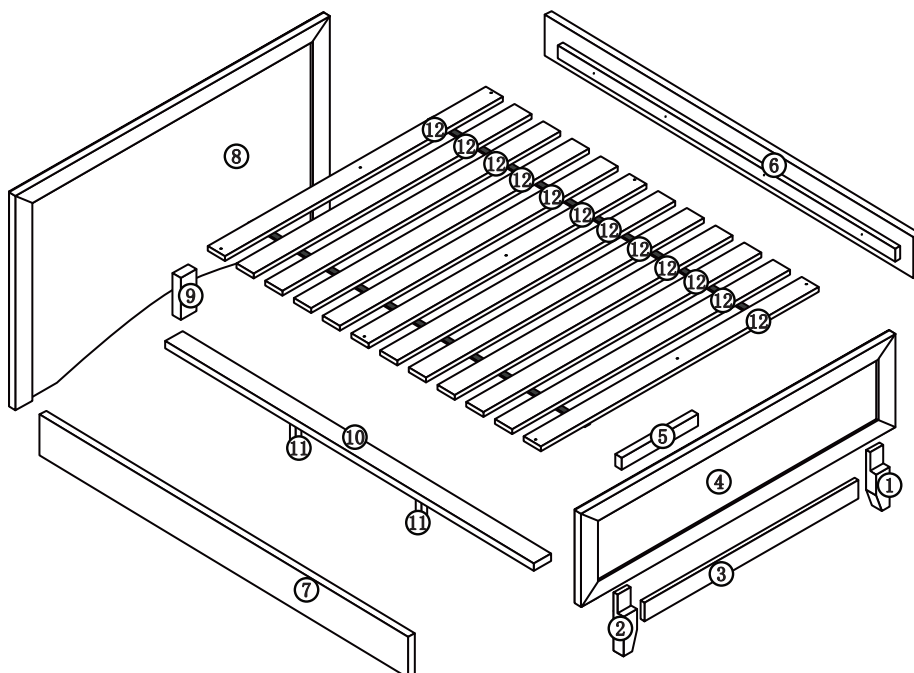












	 x 2
ALLOW 60 MINUTES	PEOPLE REQUIRED
	
TOOLS REQUIRED	

		<p>We recommend using a screwdriver to put this item together. However if you choose to use a power drill it must be used on LOW SPEED (LOW TORQUE) as too much pressure could damage the product</p>
---	---	--

EXPLODED EXAMPLE


1	RINGT LEG
2	LEFT LEG
3	CROSSING BAR
4	FOOTBOARD
5	SUPPORT BAR
6	RIGHT SIDE PANEL
7	LEFT SIDE PANEL
8	HEADBOARD
9	SUPPORT LEG
10	MIDDLE SUPPORT PANEL
11	SUPPORT LEGS
12	SLATS 1540x75mm




A <input type="checkbox"/> adjustable leg  M30x20mm Ax2	B <input type="checkbox"/> cam pin  M7x54mm Bx2	C <input type="checkbox"/> cam lock  M14.8x12mm Cx2	D <input type="checkbox"/> crescent nut  M30x14mm Dx8	E <input type="checkbox"/> dowel  M8x50mm Ex10
F <input type="checkbox"/> hexagon socket screw  M8x30mm Fx4	G <input type="checkbox"/> 6MM nut  Gx8	H <input type="checkbox"/> 6MM wrench  Hx1	I <input type="checkbox"/> screw  M6x45mm Ix4	J <input type="checkbox"/> hexagon socket screw  M6x40mm Jx4
K <input type="checkbox"/> screw  M4x35mm Kx9	L <input type="checkbox"/> screw  M5x40mm Lx3	M <input type="checkbox"/> screw  M7x50mm Mx2	N <input type="checkbox"/> screw  M6x65mm Nx4	O <input type="checkbox"/> 8MM spring washer  Ox4
P <input type="checkbox"/> 8MM spring washer  Px4	Q <input type="checkbox"/> 6MM spring washer  Qx12	R <input type="checkbox"/> 5MM allen key  Rx1	S <input type="checkbox"/> 4MM allen key  Sx1	T <input type="checkbox"/> hexagon socket screw  M6x40mm Tx4
U <input type="checkbox"/> 6MM spring washer  Ux12				

PART NUMBER	QTY	DIMENSIONS (MM)
1&2	2	65x210x42
3	1	50x1200x25
4	1	350x1610x42
5	1	45x390x25
6&7	2	180x2050x25
8	1	1060x1610x30
9	1	70x195x40
10	1	70x2060x24
11	2	30x30x190
12	12	75x1540x15


CAM LOCK INSTALL METHOD AS FOLLOWS

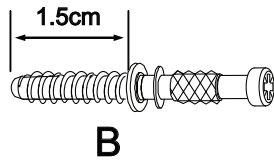


Step 1

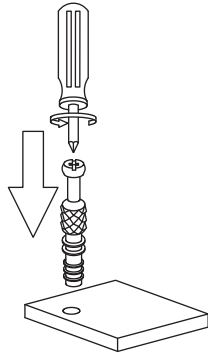


Step 2

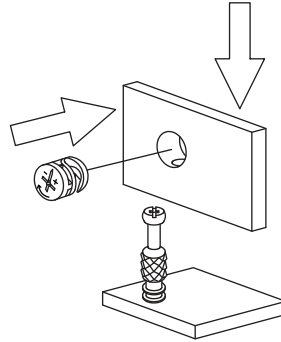

Step 3

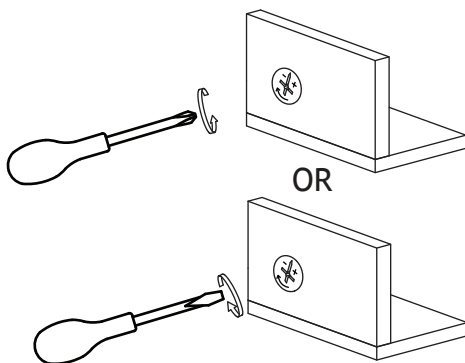


Lock




Fix cam nut into the bottom of hole then tighten it.


STEP 1: Fix cam pin ① to legs ① ② .Insert dowel ⑤ to crossing bar ③ . Attach left leg ② and right leg ① to crossing bar ③ using cam locks ③ .

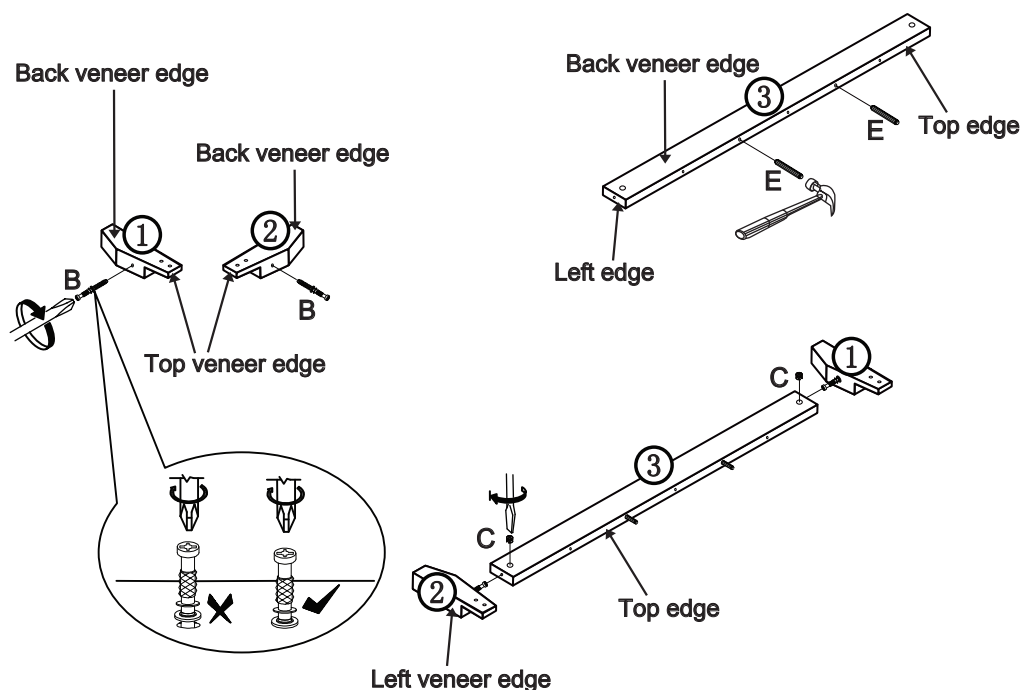


STEP 2: Attach support bar ⑤ to footboard ④ using hexagon socket screws ①, 4MM allen key ⑤, and 6MM spring washers ⑧ ⑨. Attach crossing bar ③ to footboard ④ using screws ①.

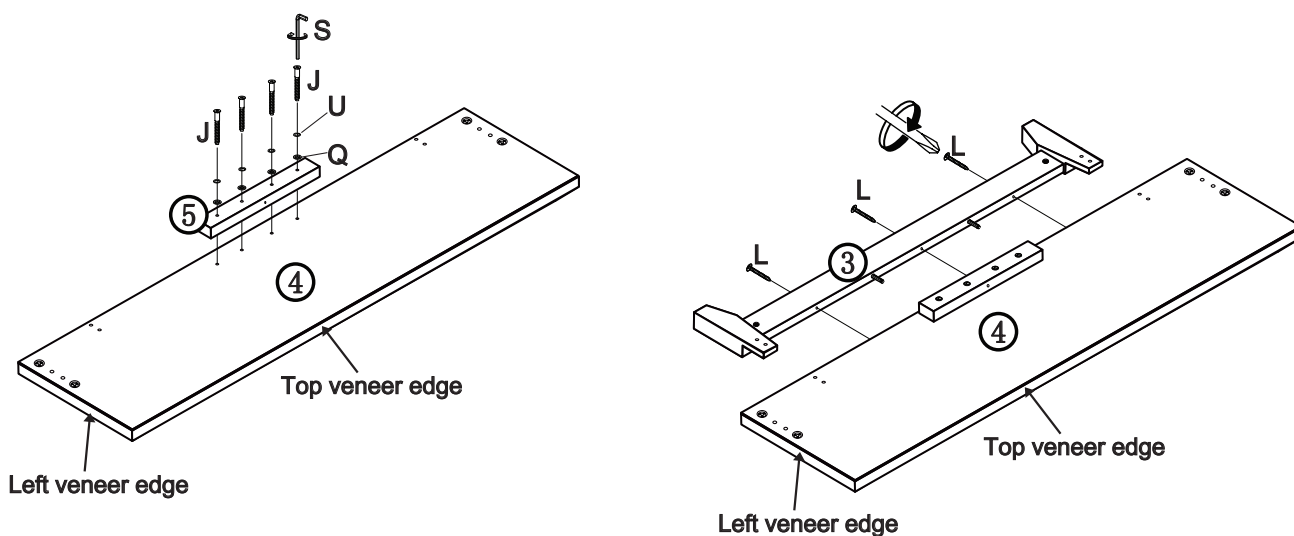


STEP 3: Attach left leg ② and right leg ① to footboard ④ using screws ⑥, 8MM spring washers ⑦ and 8MM spring washers ⑧ with allen key ⑨. Fix screws ⑩ to footboard ④.

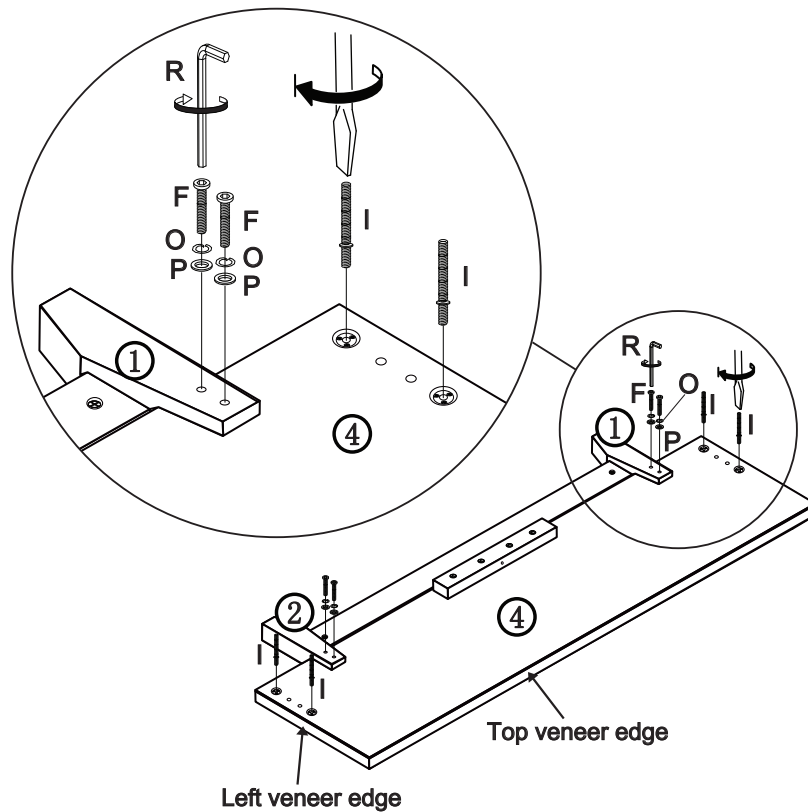


STEP 4: Insert dowel ⑪ to left side panel ⑥ and right side panel ⑦.

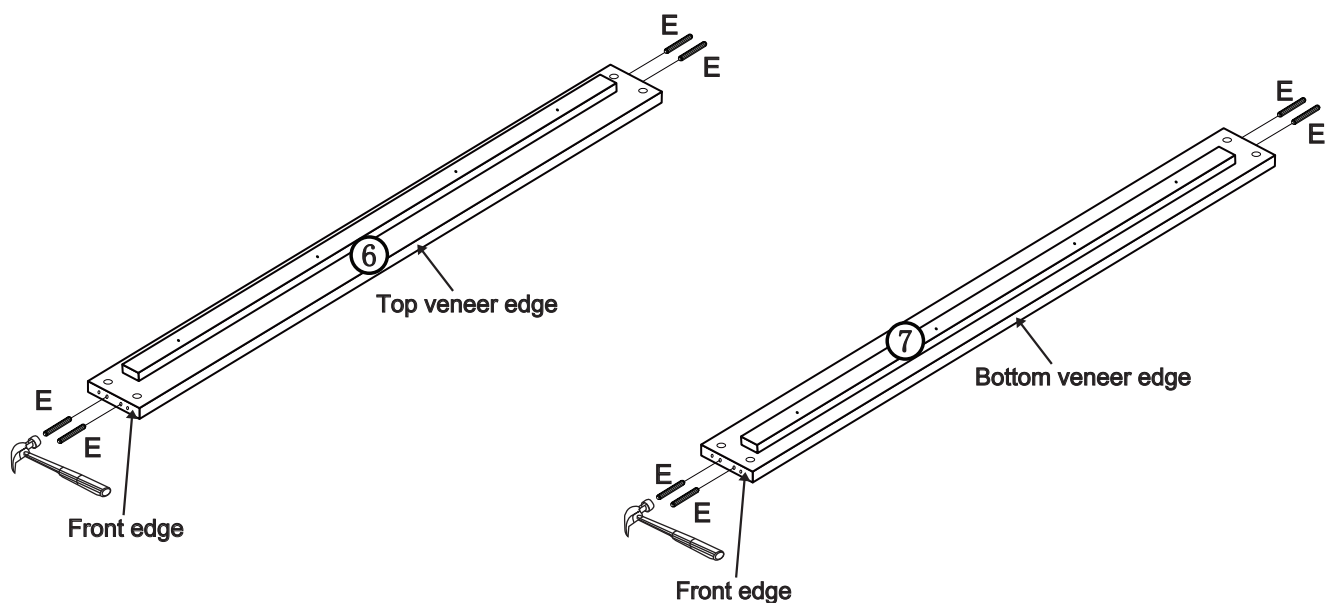


STEP 5: Attach left side panel ⑦ and right side panel ⑥ to headboard ⑧ using hexagon socket screws ①, crescent nut ②, allen key ③, 6MM spring washers ④⑤ and nut ⑥ with wrench ⑦.

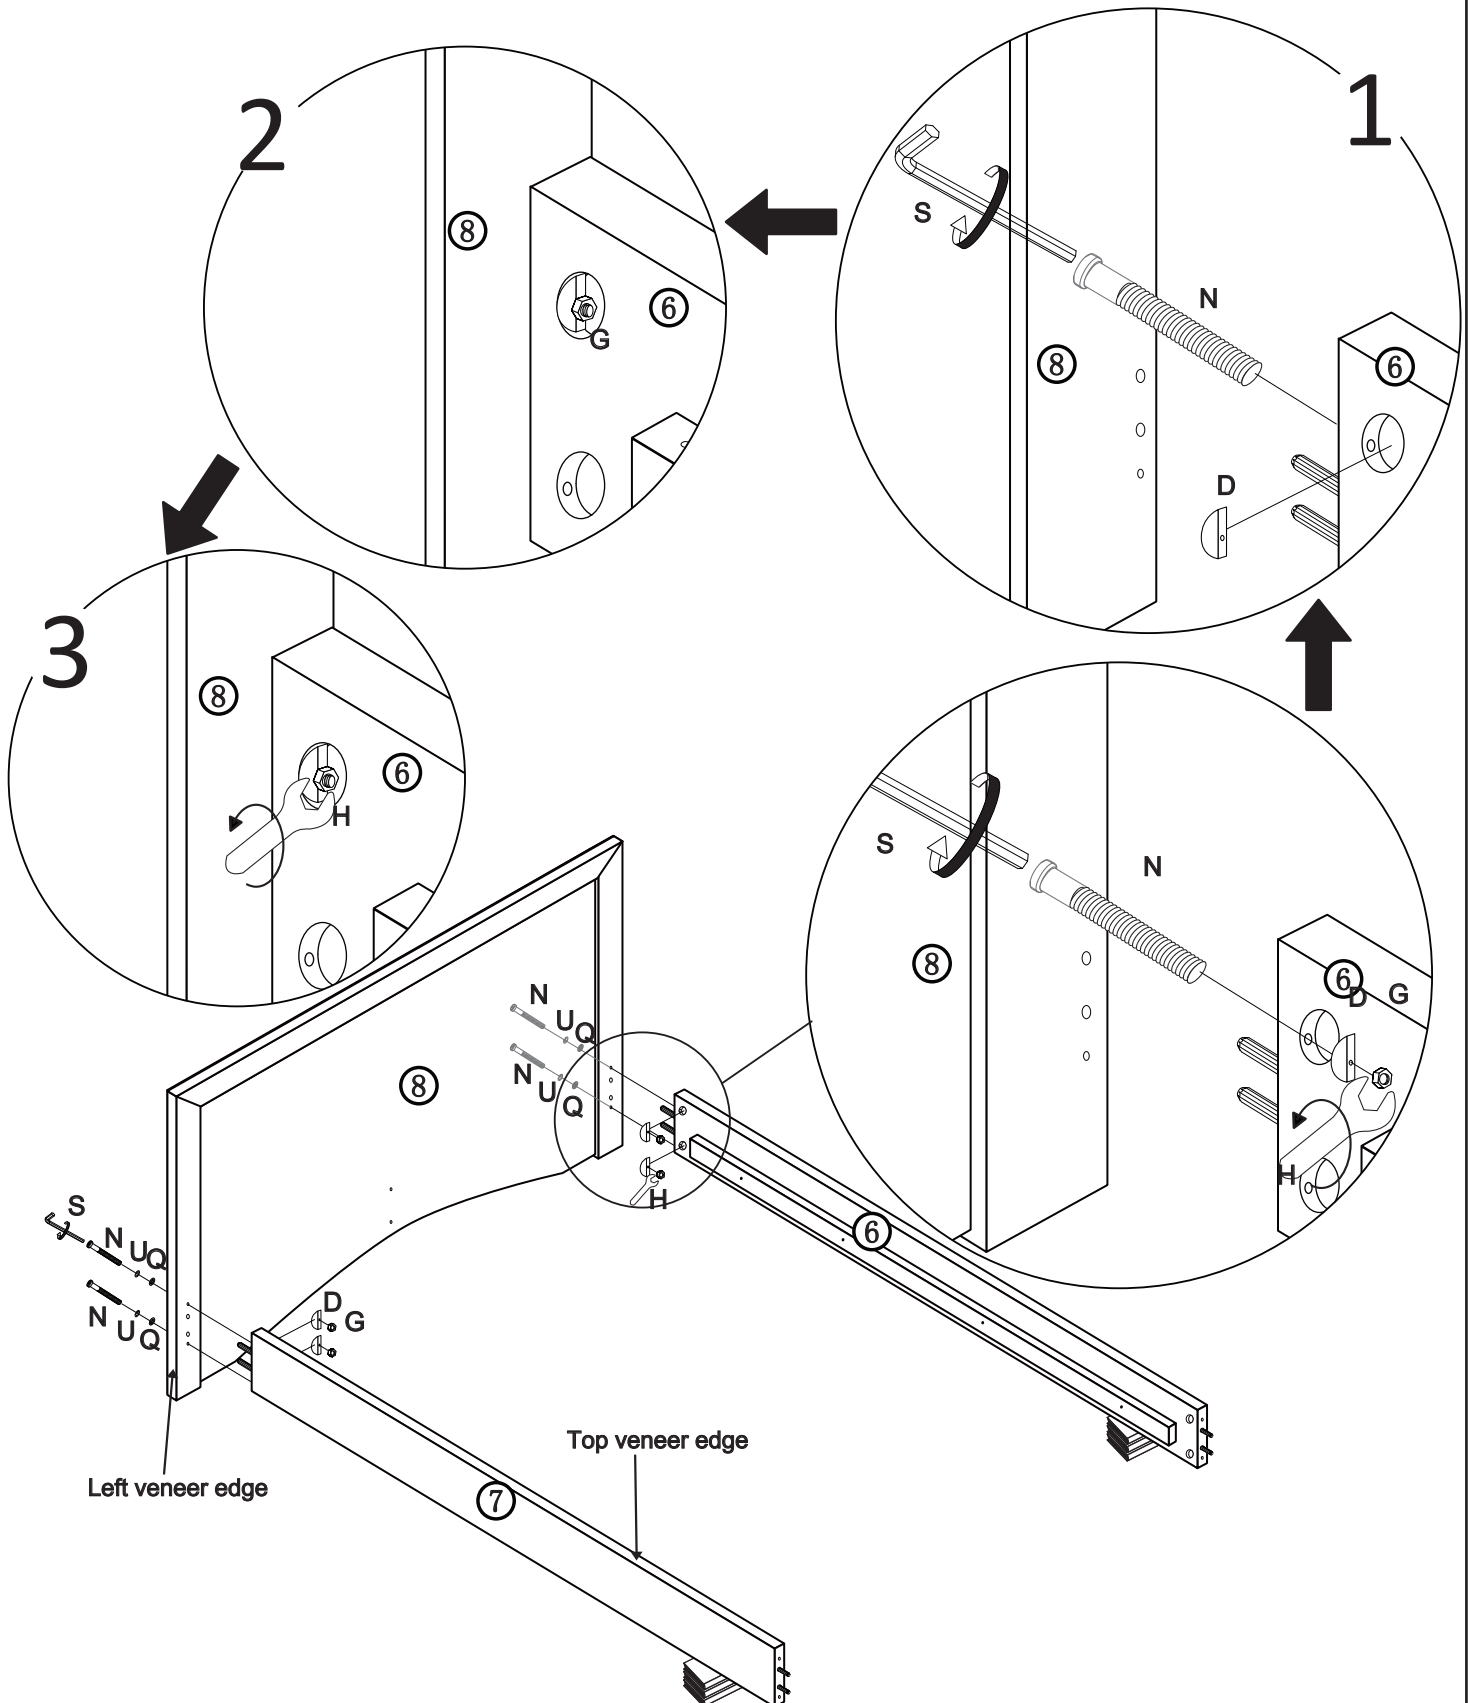


STEP 6: Attach left side panel ⑦ and right side panel ⑥ to and footboard ④ using screws ①, crescent nut ② and nut ③ with wrench ④.

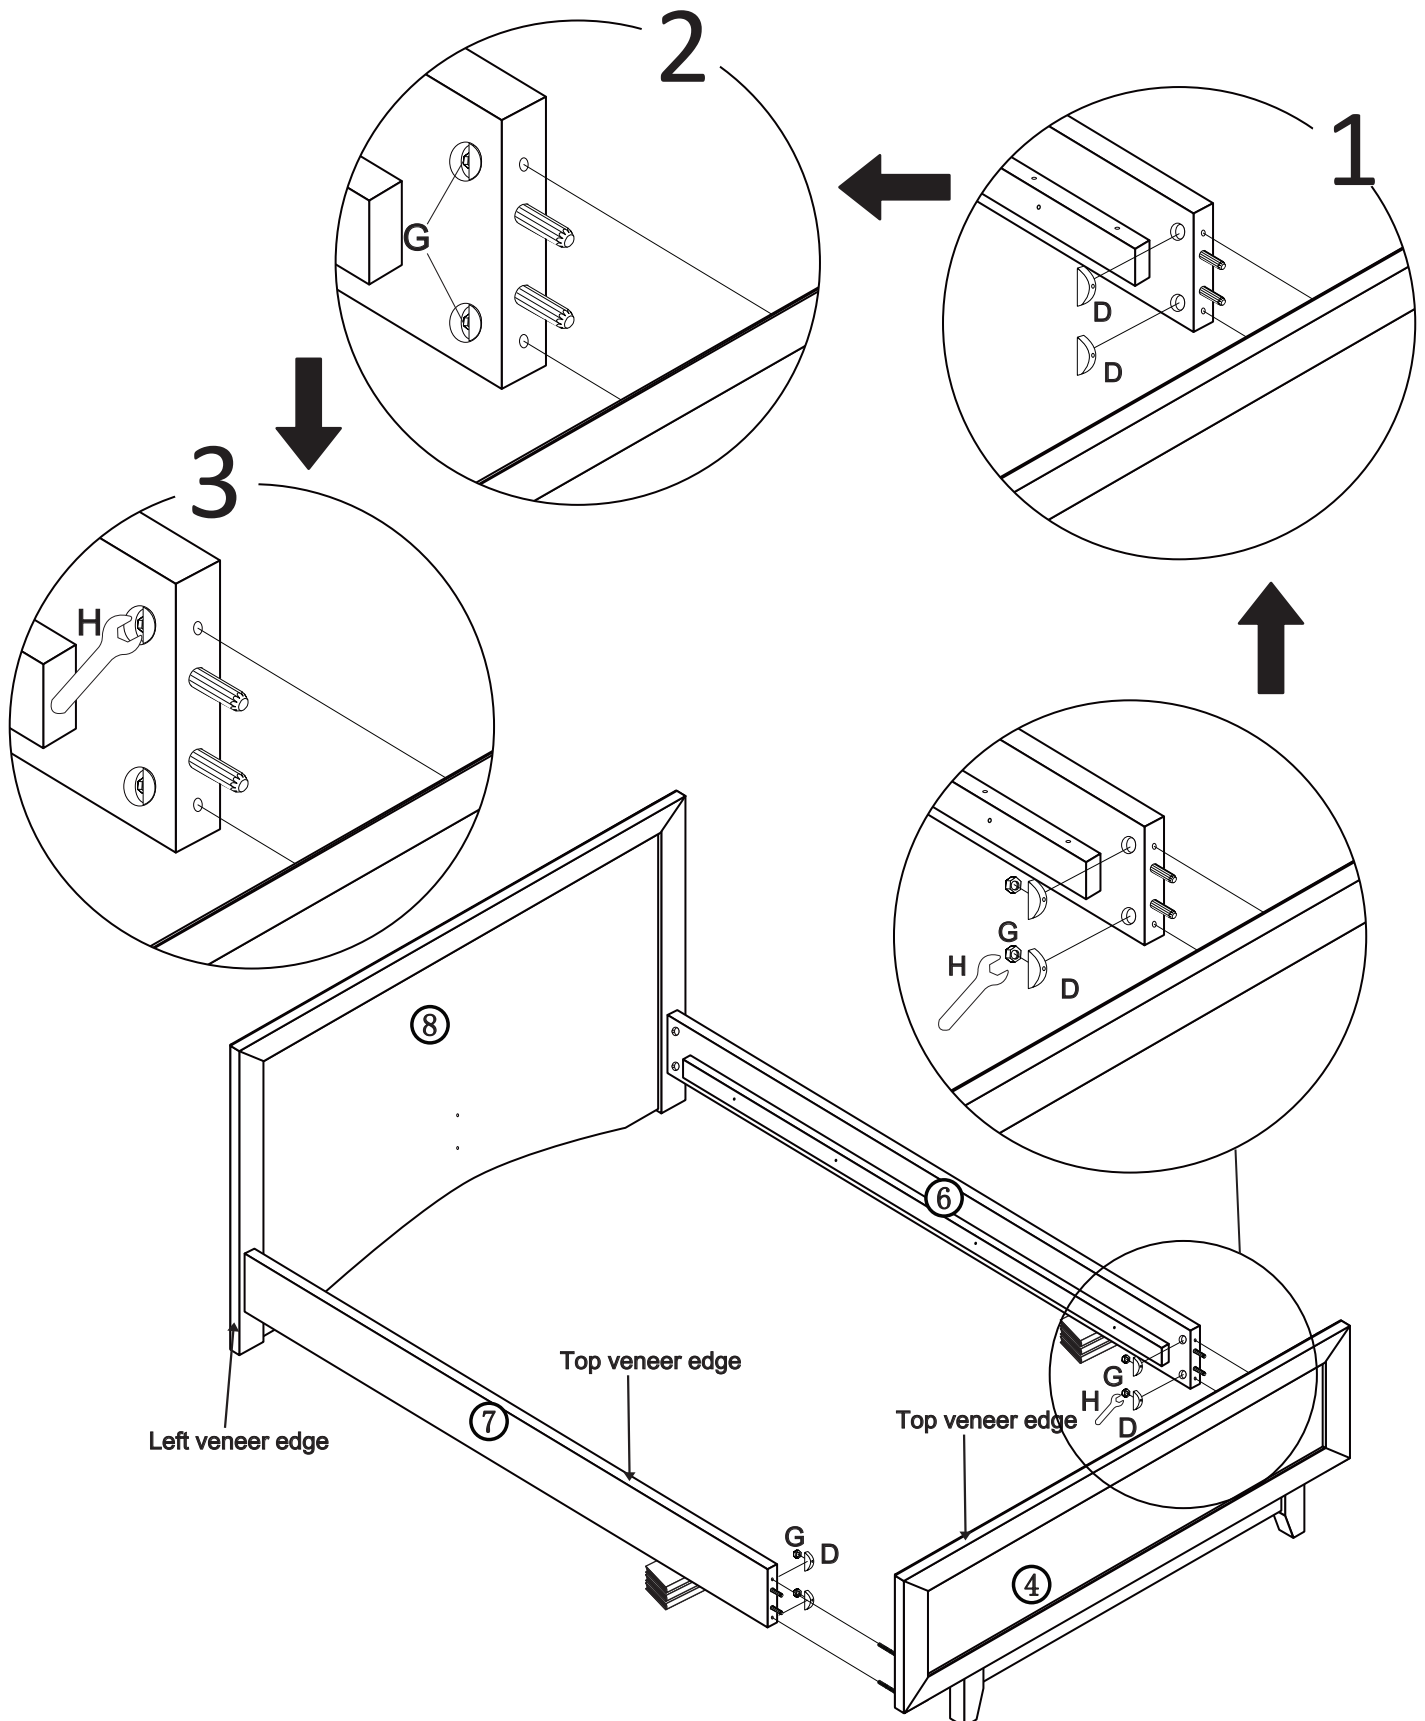


STEP 7: Attach leg⑨to headboard⑧using hexagon socket screws ① ,4MM allen key⑤ and 6MM spring washers④⑥.

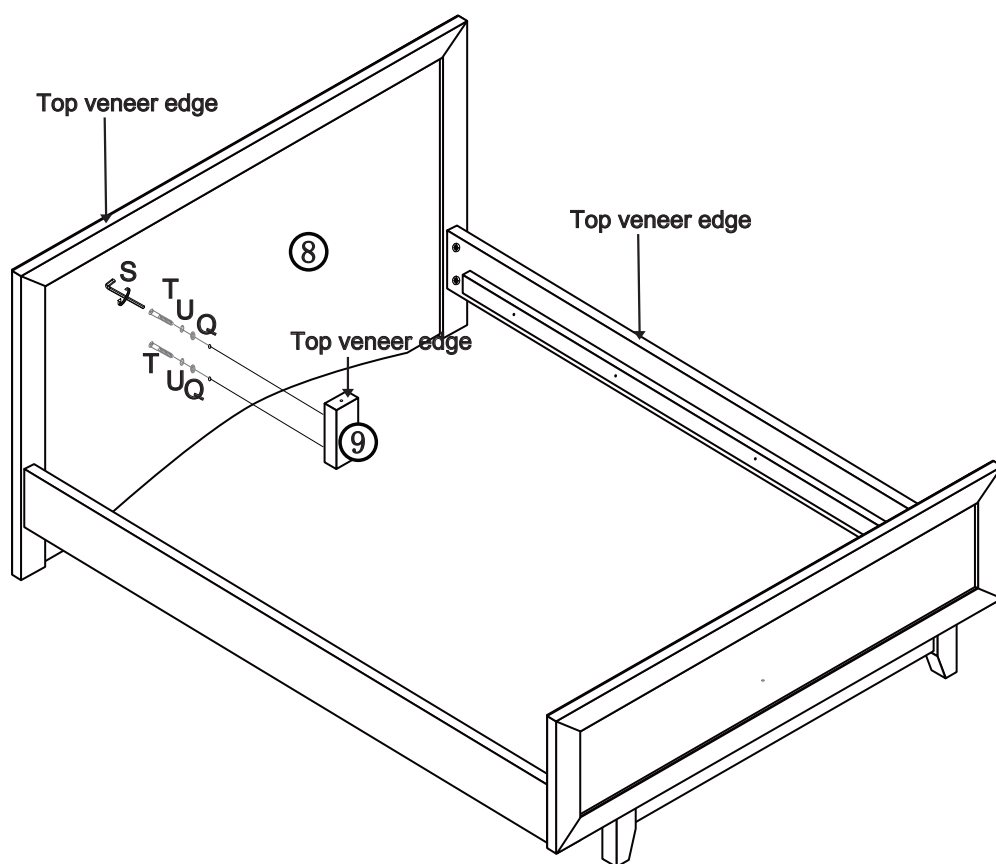


STEP 8: Attach foot nail ① to legs ⑪. Attach legs ⑪ to middle support panel ⑩ using hexagon socket screws ③ and allen key ⑤.

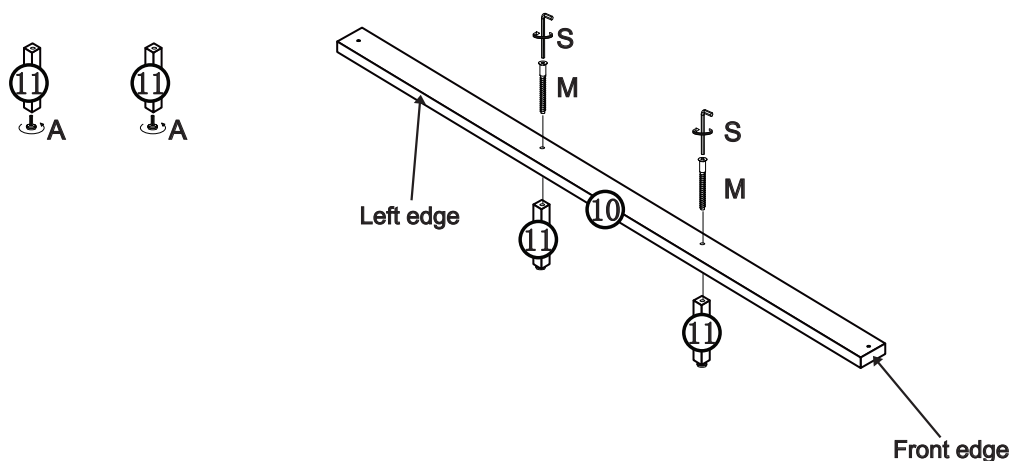

STEP 9: Attach middle support panel ⑩ to support leg ⑨ and support bar ⑤ using hexagon socket screws ③, allen key ⑤ and 6MM spring washers ④ ⑥.

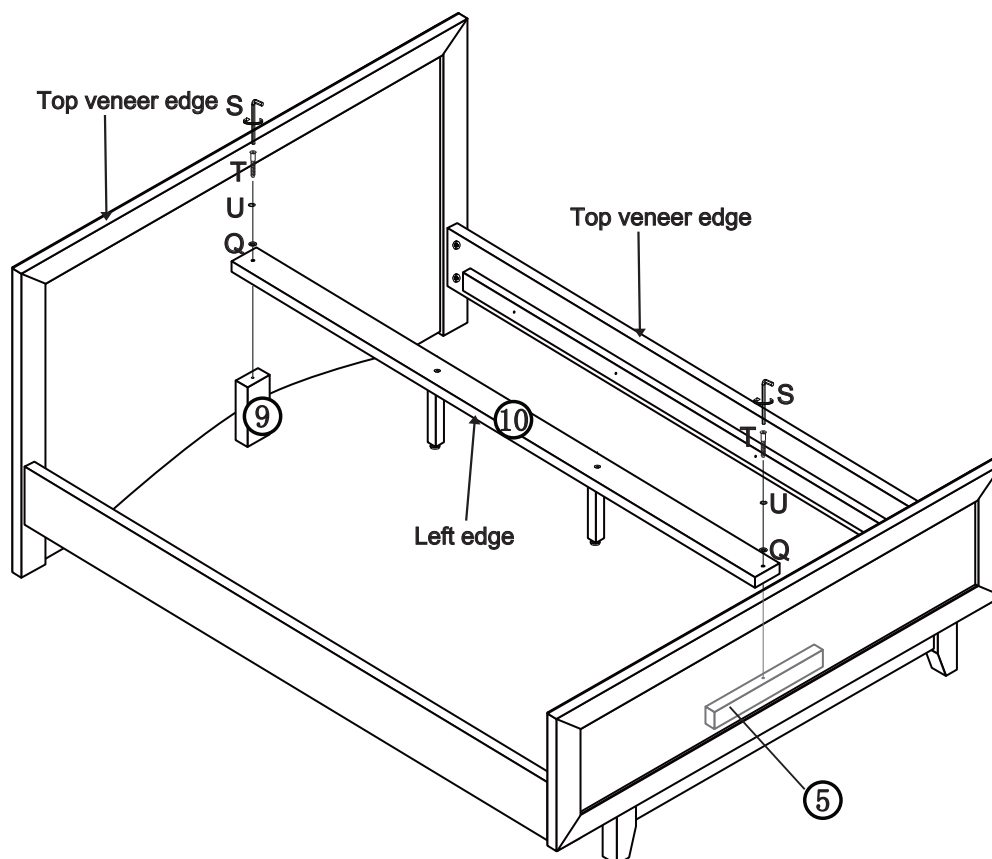


STEP 10: Attach slats ⑫ to the existing unit using screws ①.

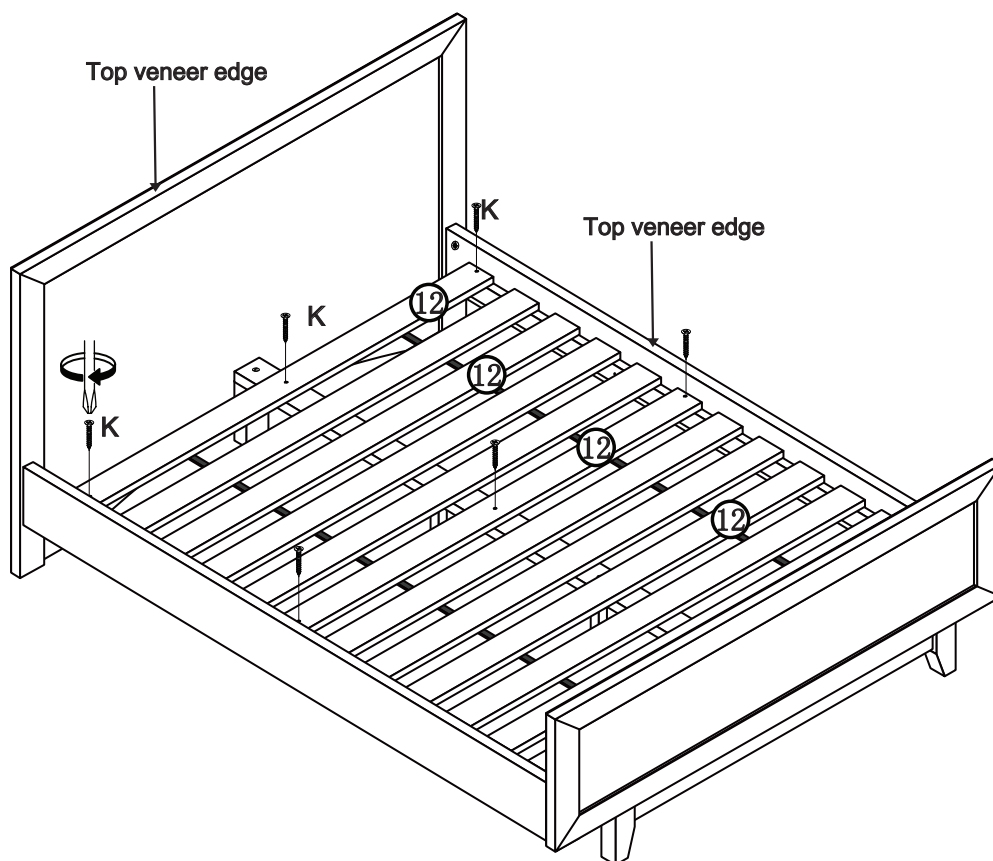

ASSEMBLY COMPLETE

DO NOT PUSH OR DRAG THIS FURNITURE – IT WILL CAUSE
DAMAGE TO THE LEGS

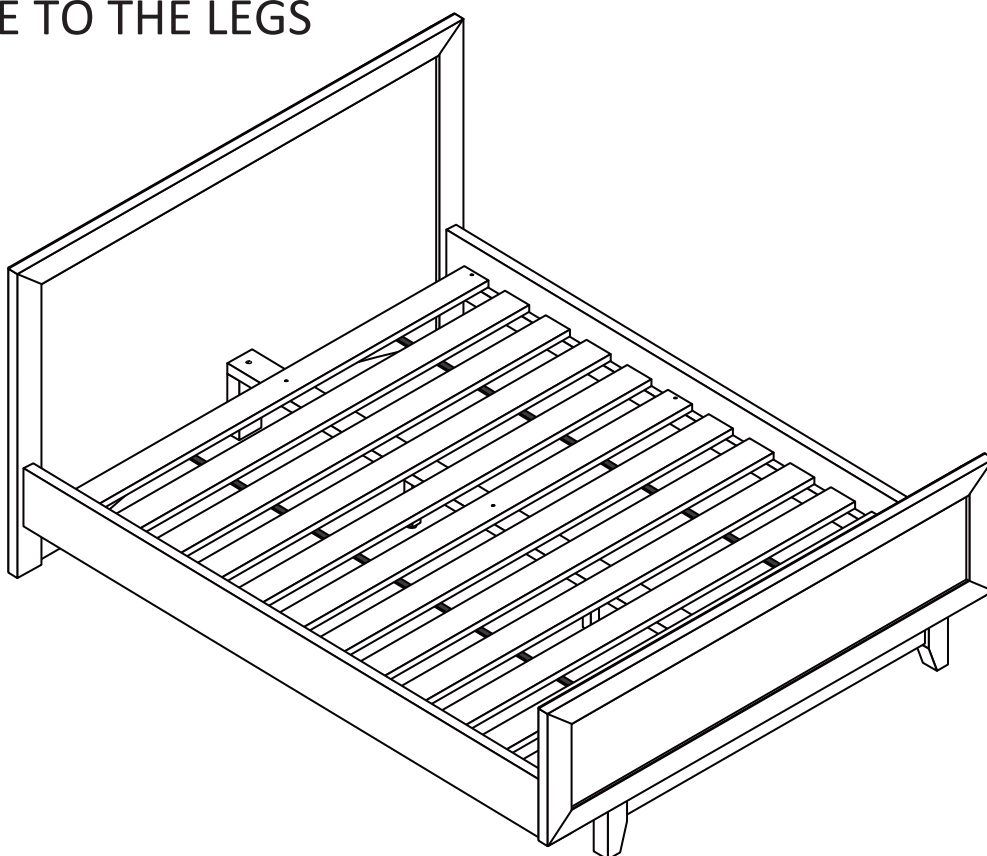

PRODUCT CARE:

To protect your furniture, we suggest the following:

- *Avoid placing your furniture in direct sunlight.
- *Do not place furniture directly under windows.
- *Do not place sharp materials(knife, fork, etc) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- *Protective padding is strongly recommended when using your furniture .
- *Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- *Use a clean, soft, dry, lint free absorbant cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void.