


## ASSEMBLY INSTRUCTION

Spacemaster Babylon Large Robe Frame

ITEM CODE 54925

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.

For any assistance with assembly or for missing parts please phone  
Amart Furniture Ewing Road, Customer Service Free call 1800 351 084

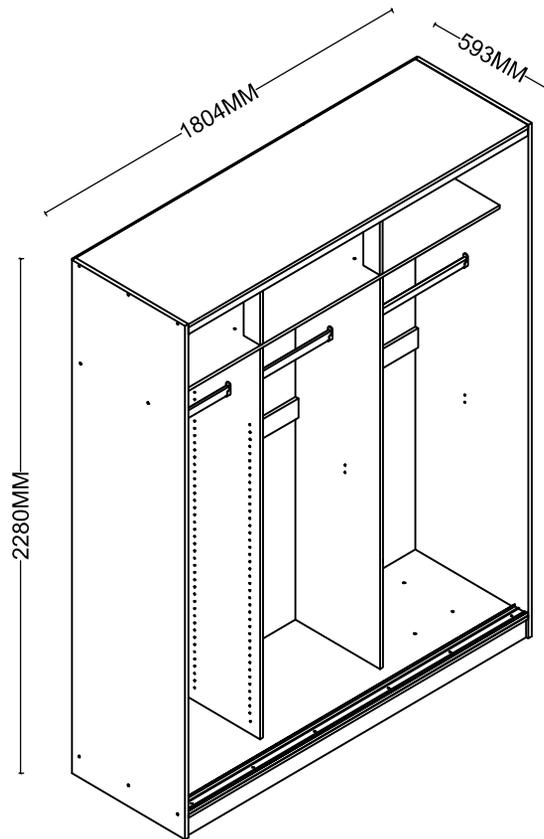


Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.

For any assistance with assembly or for missing parts please phone  
Amart Furniture Ewing Road, Customer Service Free call 1800 351 084


# PRE-ASSEMBLY PREPARATION

Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.

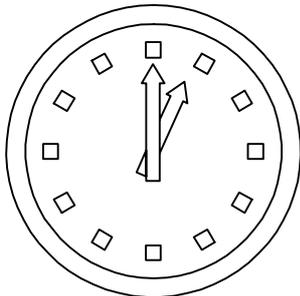



141 min

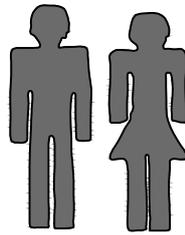

2 People Required



Low speed (Ø6mm)



ADDITIONAL TOOLS REQUIRED



## TIPPING WARNING



**Serious or fatal injuries may occur from furniture toppling over. To help avoid this please follow the below recommendations:**

- Install the provided "Tipping Kit" as per the instructions
- Never allow children to climb on or hang off of any part of this product
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product

If this product has drawers:

- Place the heaviest items in lowest drawers
- Do not open more than 1 drawer at a time as this may cause the product to become unbalanced
- Do not tamper with or remove any drawer interlocking/running system

**Note: The use of the provided "Tipping Kit" may reduce but not necessarily eliminate the risk of furniture toppling over. Please use this product with caution.**


*This is a permanent label. Do not attempt to remove!*

# SAFETY BRACKETS INSTRUCTIONS


This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

1. Attach one Mounting plate to the wall with the Large screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
2. Attach the second Mounting Plate to the furniture frame with the Short screws .
3. Move the furniter to its final position. Thread a Wall Strap through the both Mounting Plated and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plated are firmly attached to the wall and fumiture and that the Wall Strap is snug.


## HARDWARE




2 PCS  
20 x 40 x 1.2mm  
Wall Bracket




2 PCS  
Ø9 x Ø6 x 25mm  
Plastic Screw




2 PCS  
Ø9 x Ø4 x 15mm  
Screw



2 PCS  
Ø9 x Ø4 x 25mm  
Screw

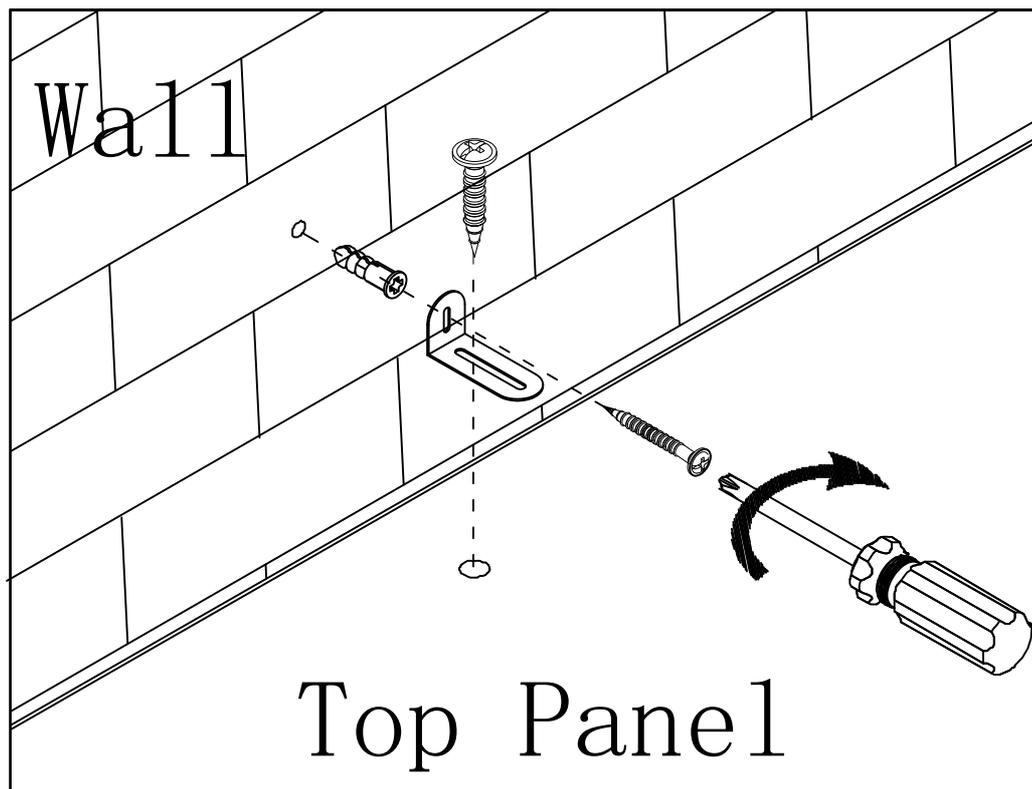

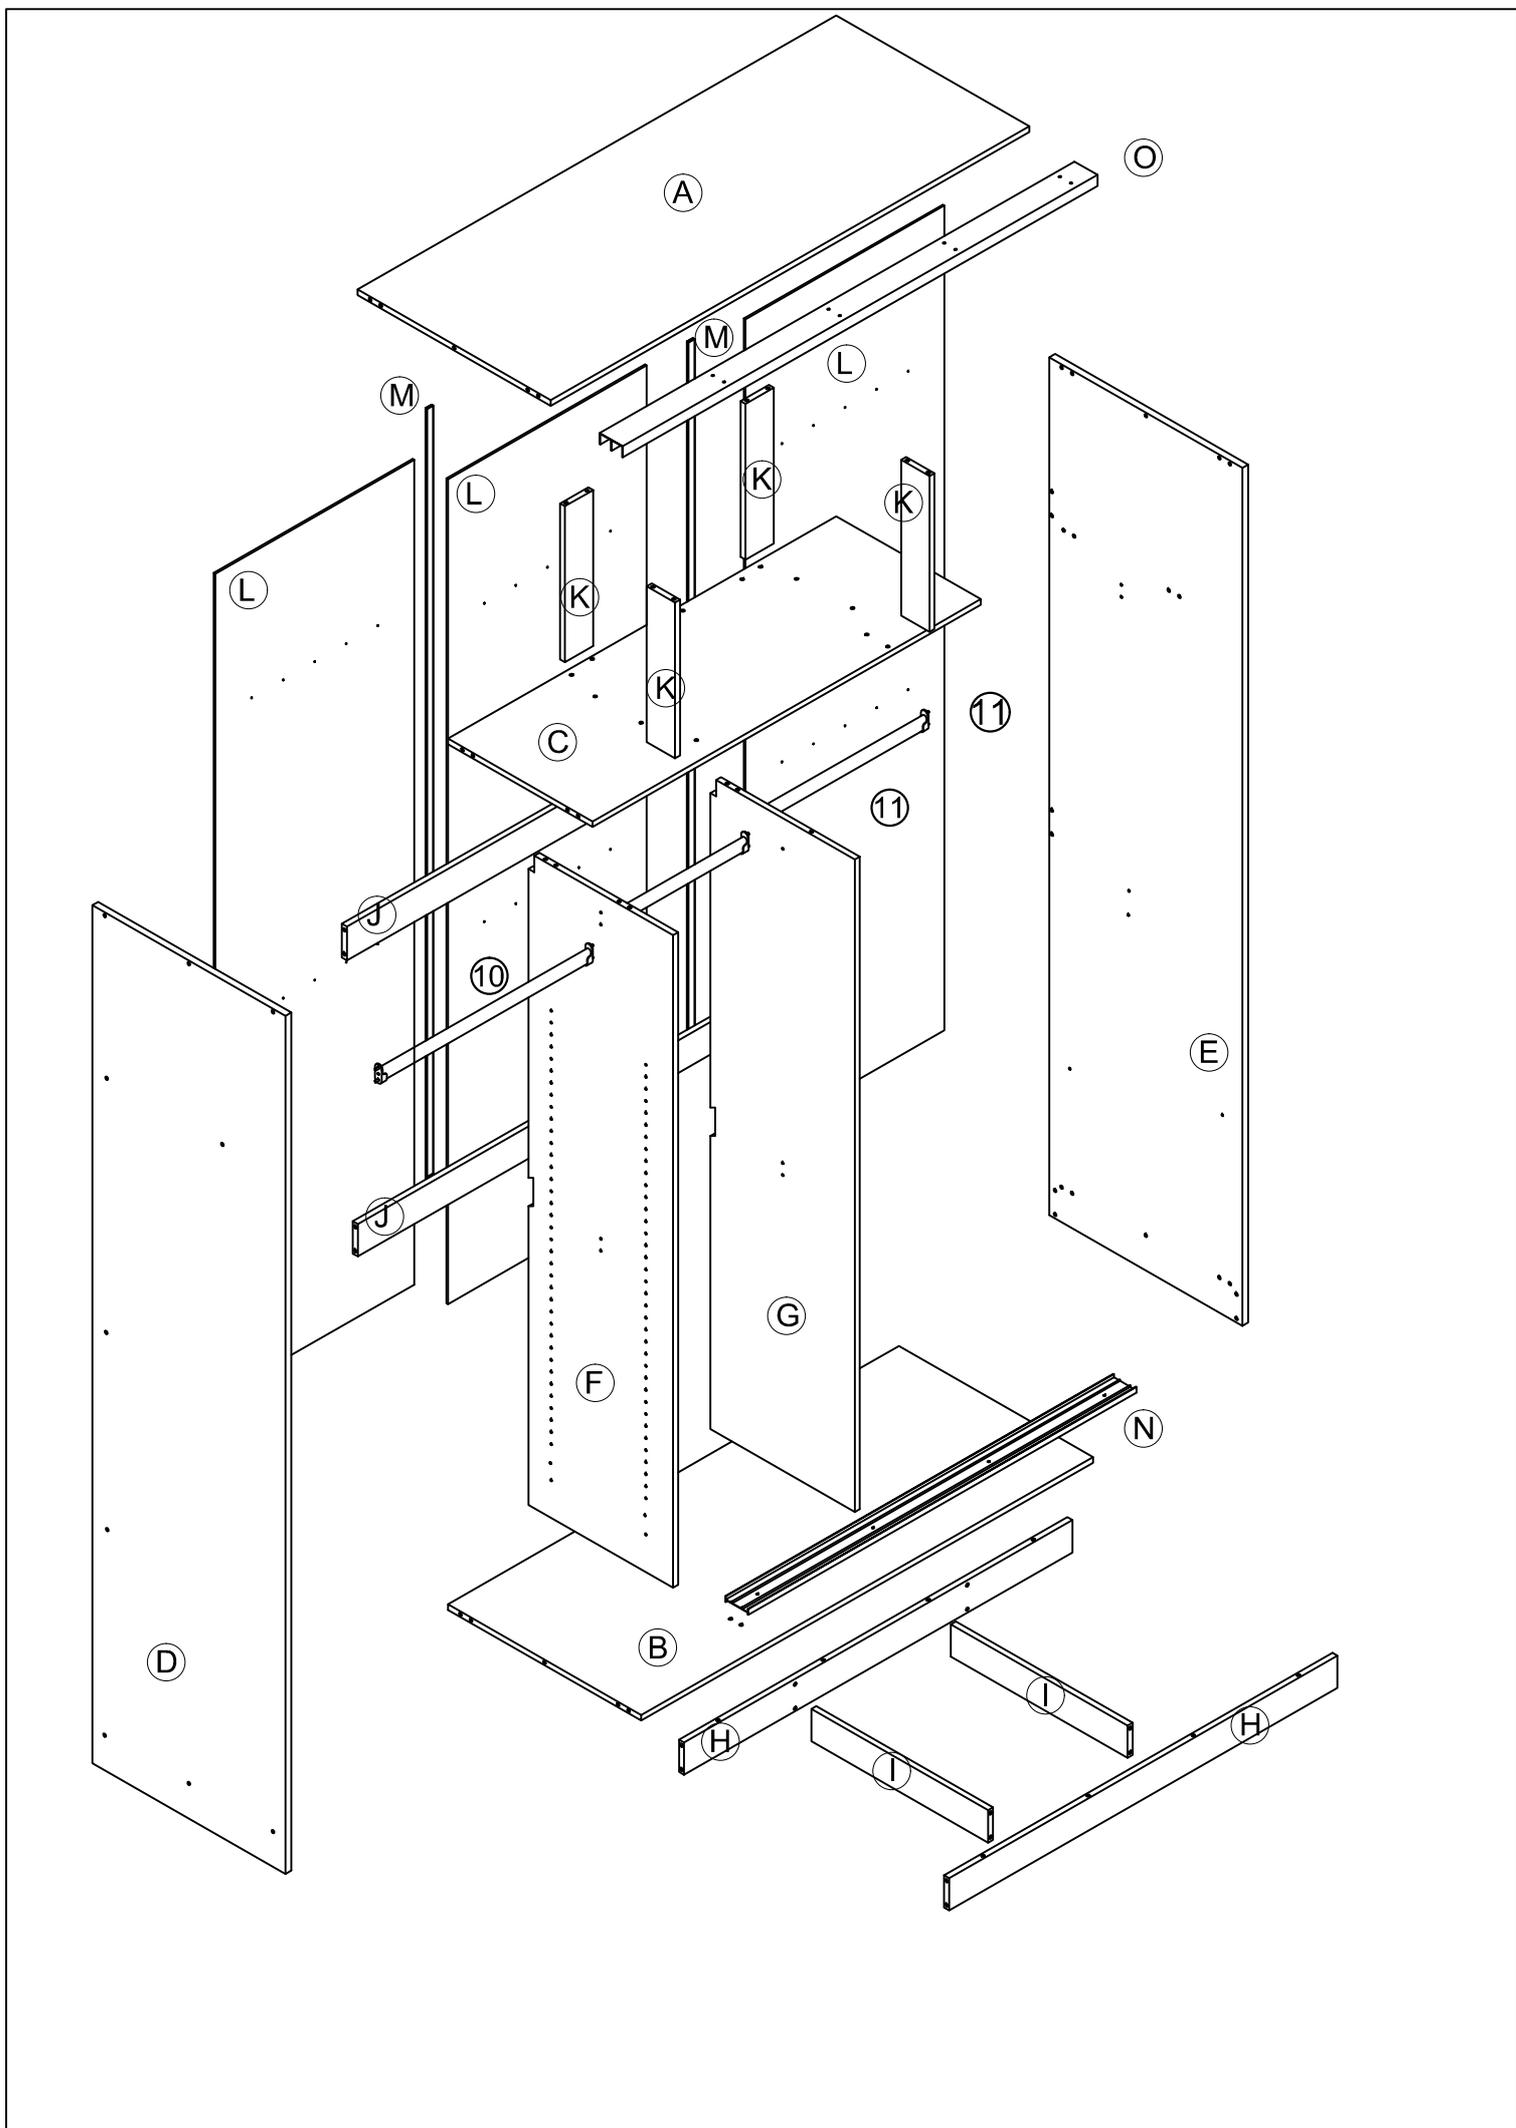




20min

Item Code- 54925

Panel(Mark)	Packing carton	Quantity	Picture	Dimension
A	(Box 1)	1 PC		1768*588*15mm
B	(Box 2)	1 PC		1768*588*15mm
C	(Box 2)	1 PC		1768*440*15mm
D	(Box 1)	1 PC		2280*591*18mm
E	(Box 1)	1 PC		2280*591*18mm
F	(Box 2)	1 PC		1730*440*15mm
G	(Box 2)	1 PC		1730*440*15mm
H	(Box 2)	2 PCS		1768*90*15mm
I	(Box 1)	2 PCS		537*90*15mm
J	(Box 2)	2 PCS		1768*90*15mm
K	(Box 1)	4 PCS		414*90*15mm
L	(Box 1)	3 PCS		2190*598*5mm
M	(Box 1)	2 PCS		2158*15*9mm
N	(Box 2)	1 PC		1767*70*15mm
O	(Box 2)	1 PC		1767*65*30mm

① 64 PCS  Ø8 x 30 mm	② 36 PCS  Ø10xM7x49 mm	③ 24PCS  Ø15 x 5 mm	④ 12 PCS  4 x 18mm	⑤ 6 PCS  4 x 22mm	⑥ 46 PCS  3.5 x 14 mm	⑦ 30 PCS  Ø9 x Ø3 x 14 mm
⑧ 74 PCS  Ø3 x M1.5 x18mm	⑨ 6 PCS  40*20*13mm	⑩ 1PC  514x 15 x 28 mm	⑪ 2PCS  600x 15 x 28 mm	⑫ 10 PCS  29x 18 x 18 mm	⑬ 1 PC  Ø4 x 60 x 20mm	⑭ 2 PCS  20 x 40 x 1.2mm
⑮ 2 PCS  Ø9 x Ø6 x 25mm	⑯ 2 PCS  Ø9 x Ø4 x 15mm	⑰ 2 PCS  Ø9 x Ø4 x25mm				

Please note - All Hardwares in box 2.





# 1

① x 28



3min

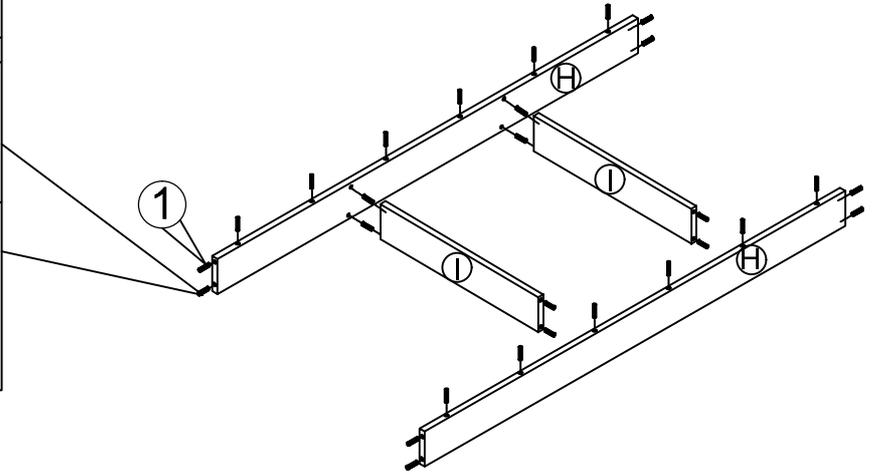
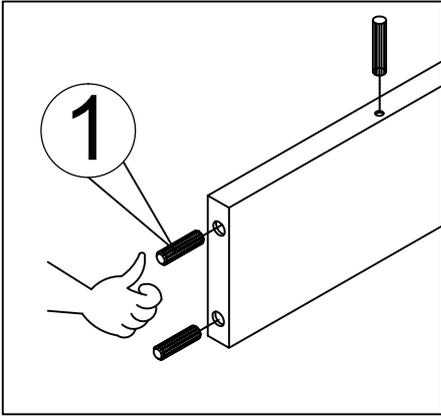


# 2

① x 4




30S

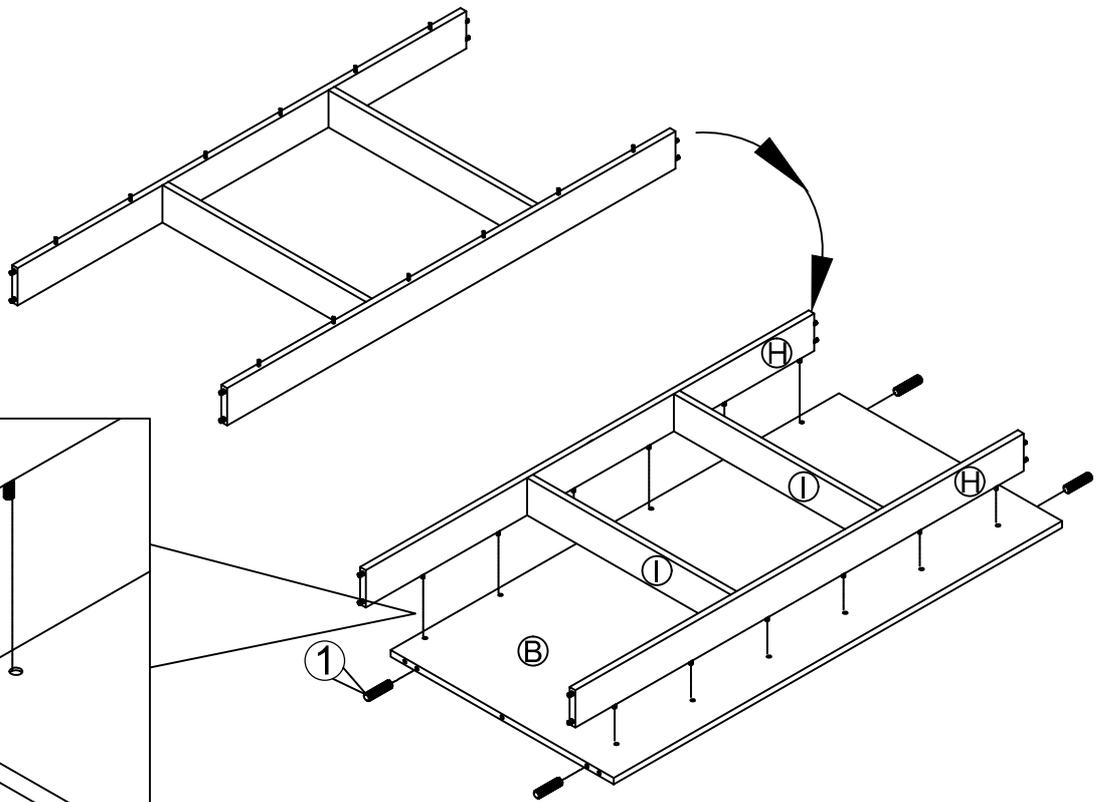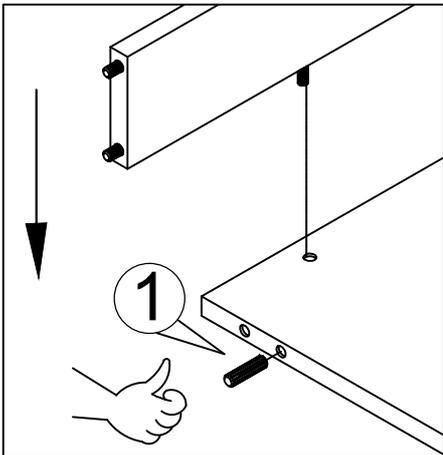

# 3


 **6** x 40

 **12** x 10

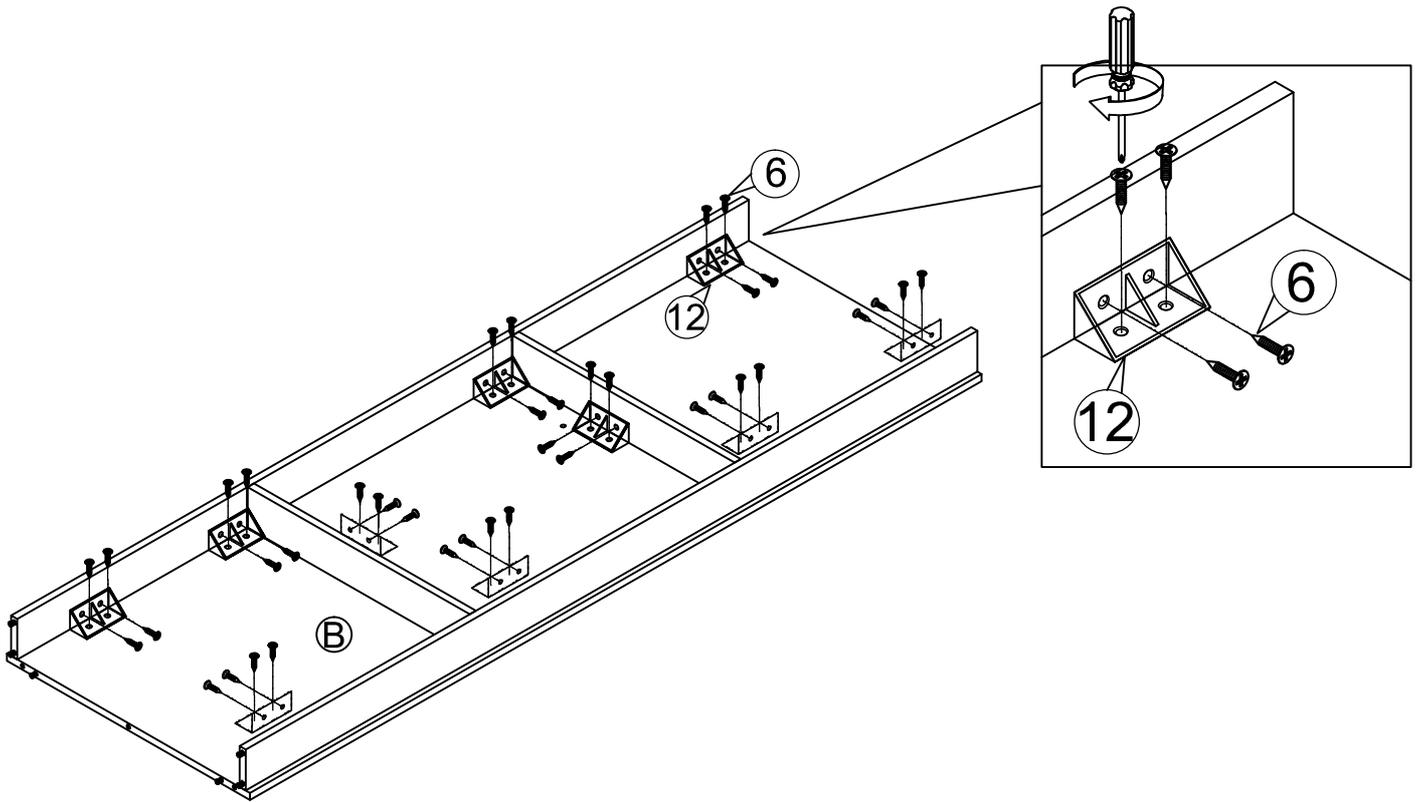

# 4

 **5** x 6

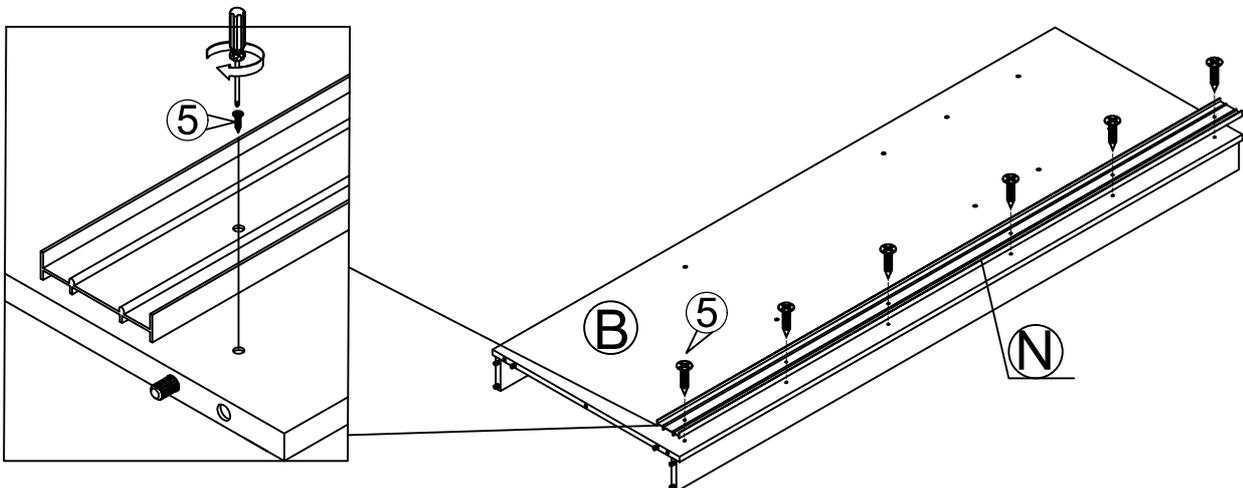

# 5


① x4

⑥ x1

⑨ x1



2min

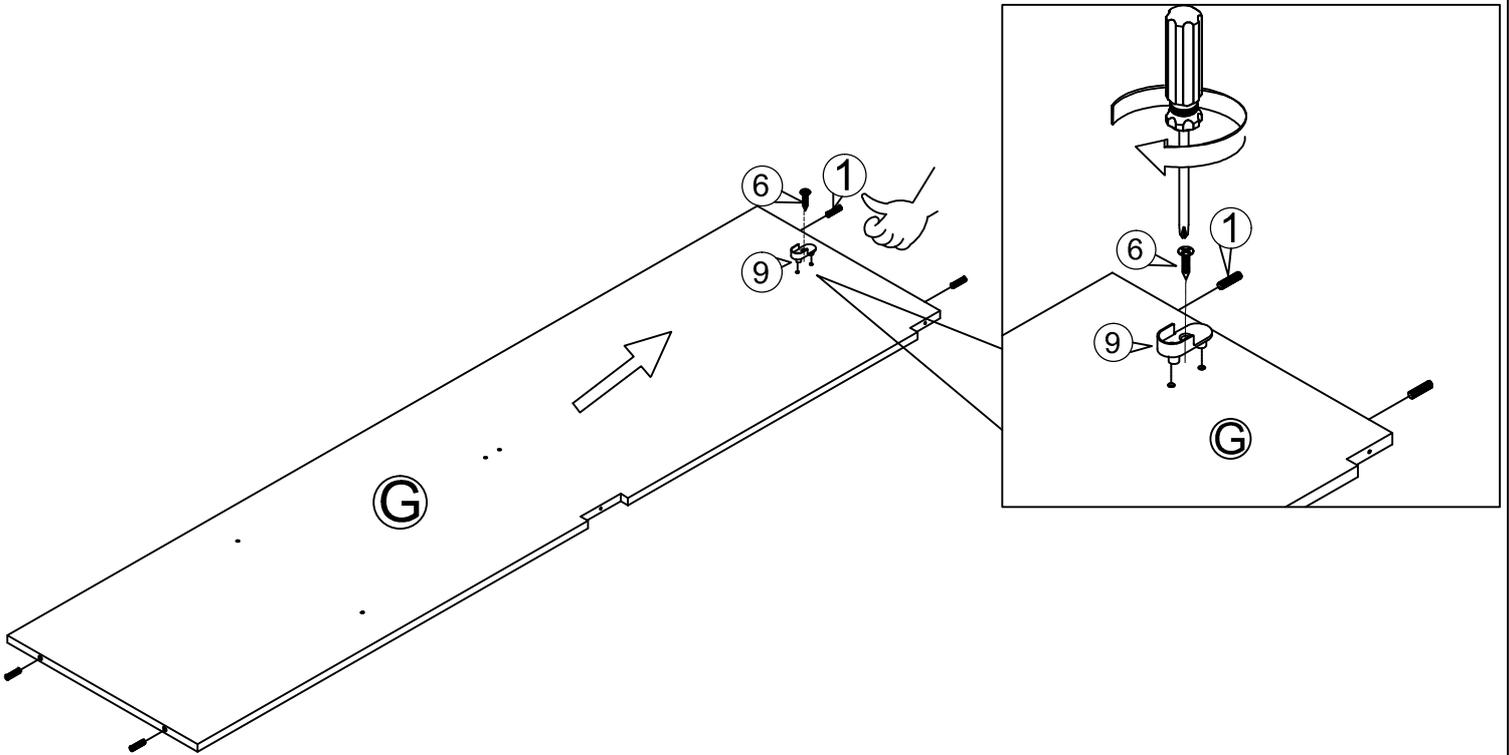


# 6

⑥ x1

⑨ x1



1min


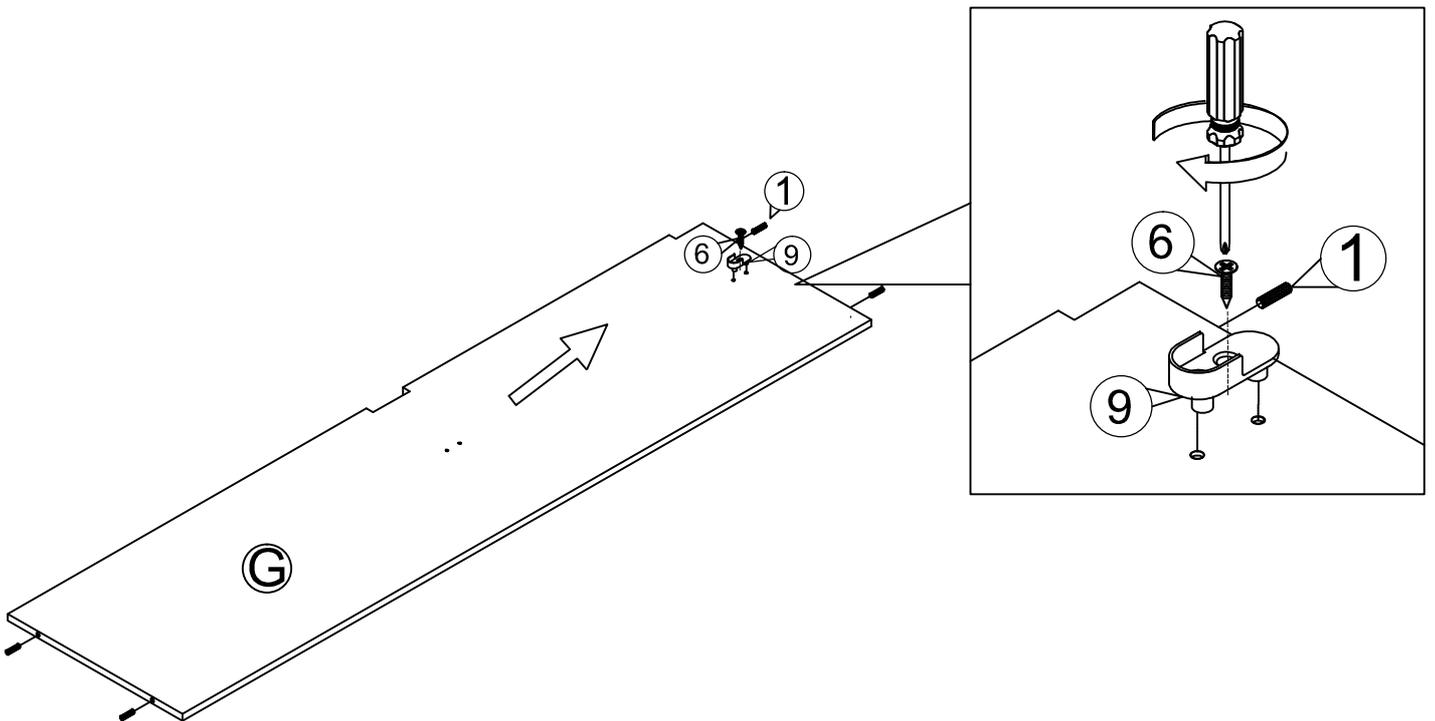


# 7

⑥ x1    ⑨ x1



1min

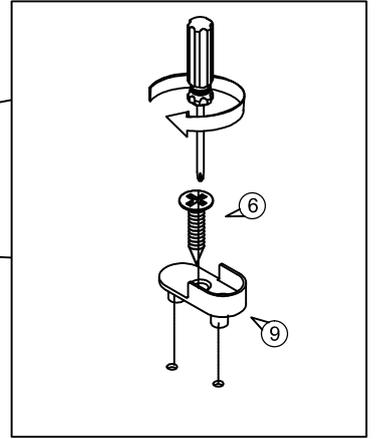
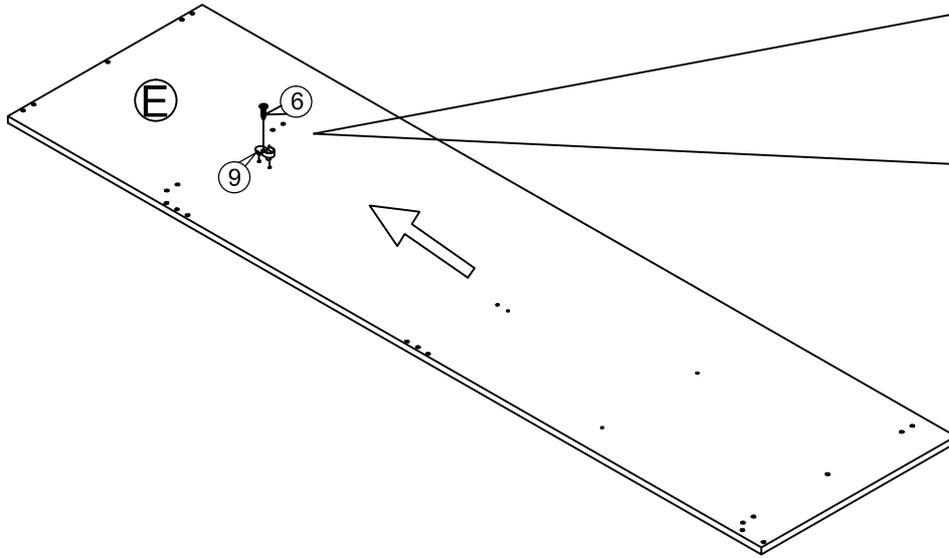


# 8

① x4    ⑥ x1    ⑨ x1




2min

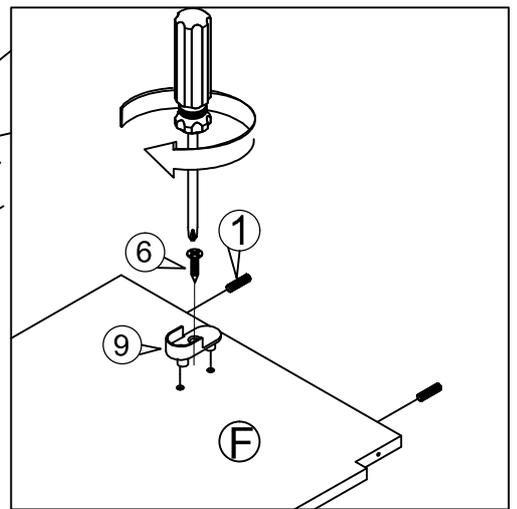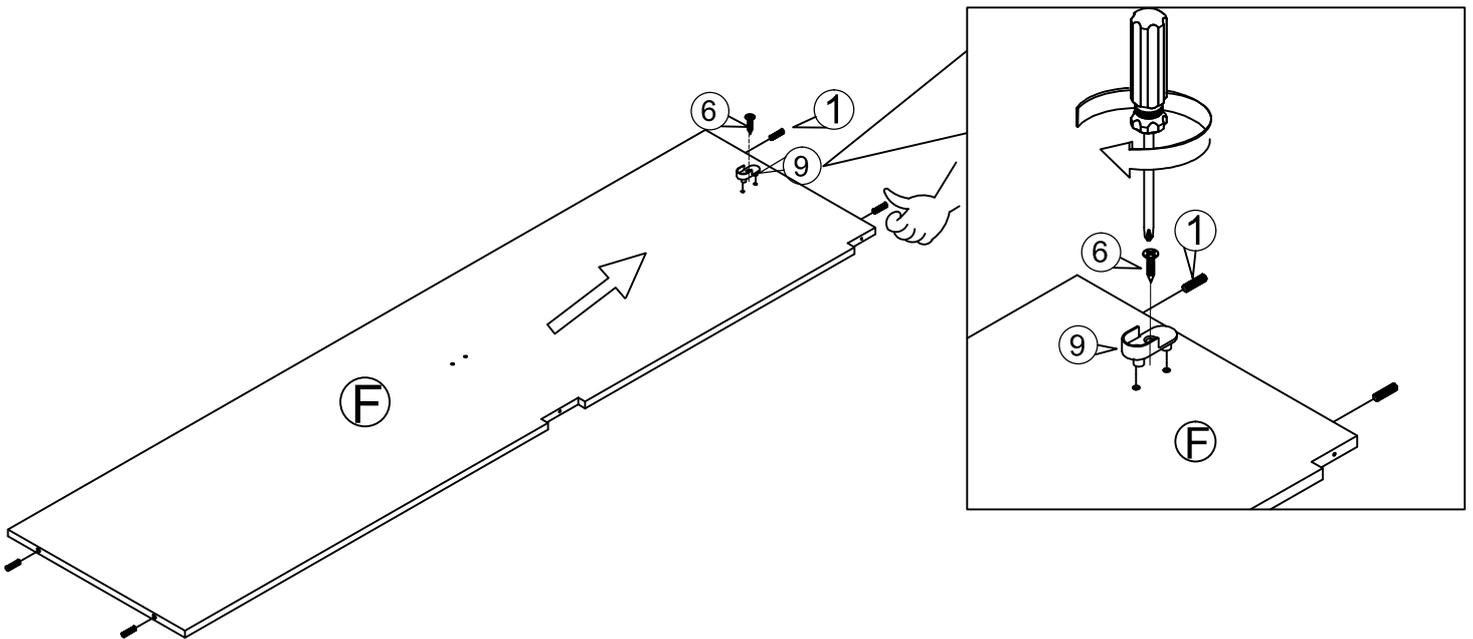


# 9

⑥ x1    ⑨ x1

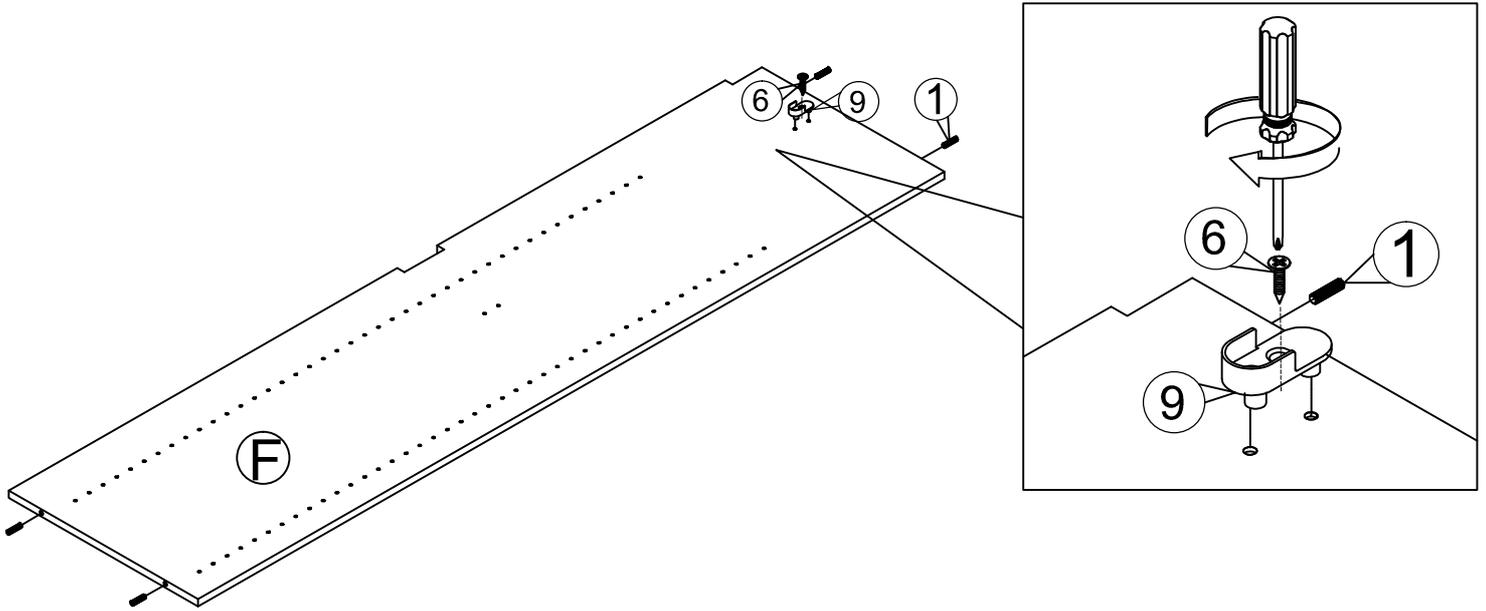



# 10

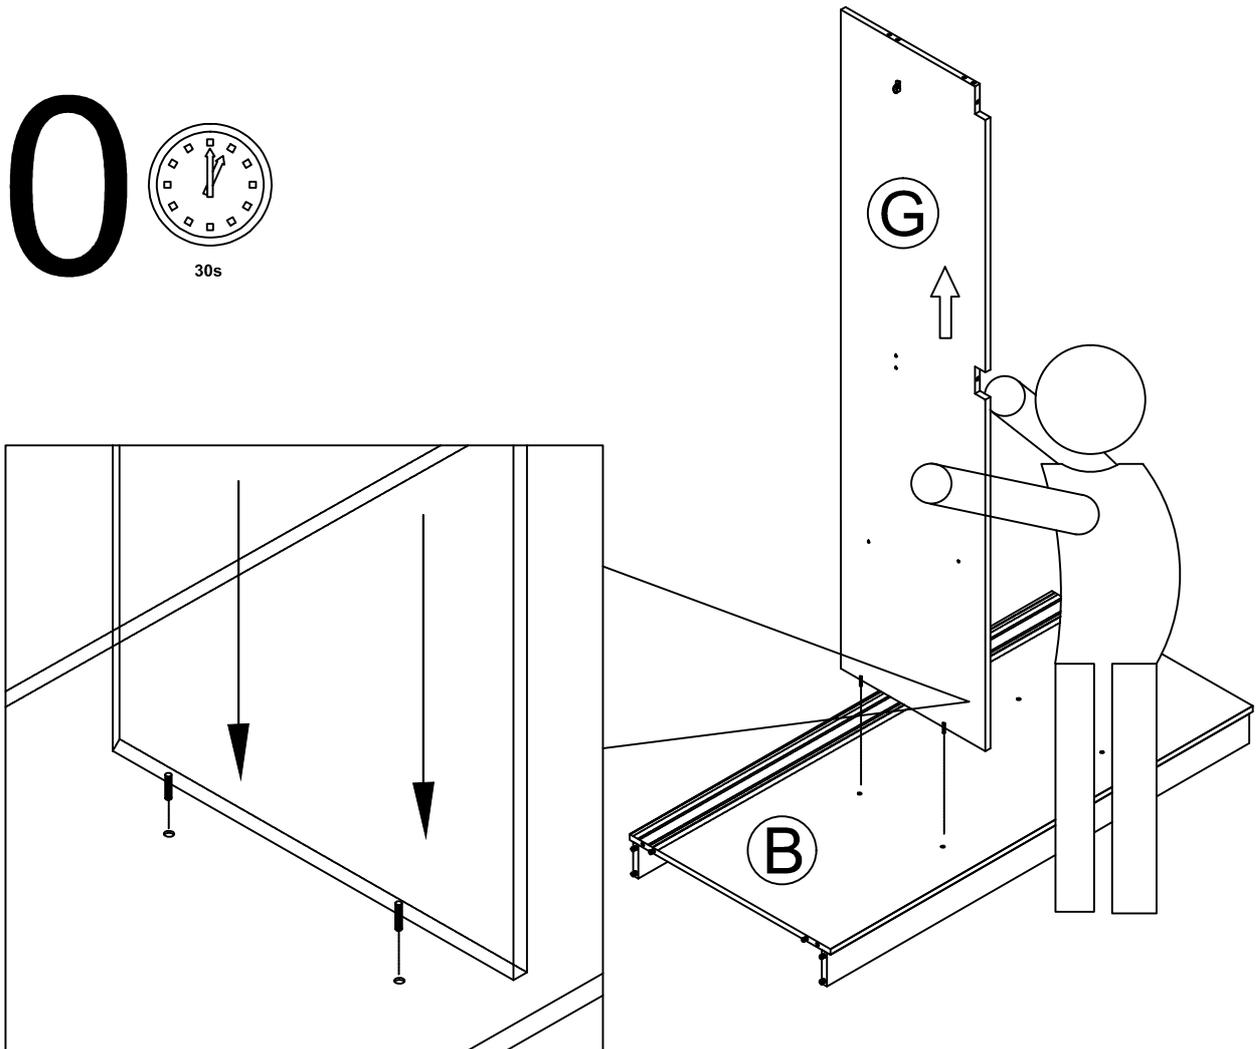


# 11





30s

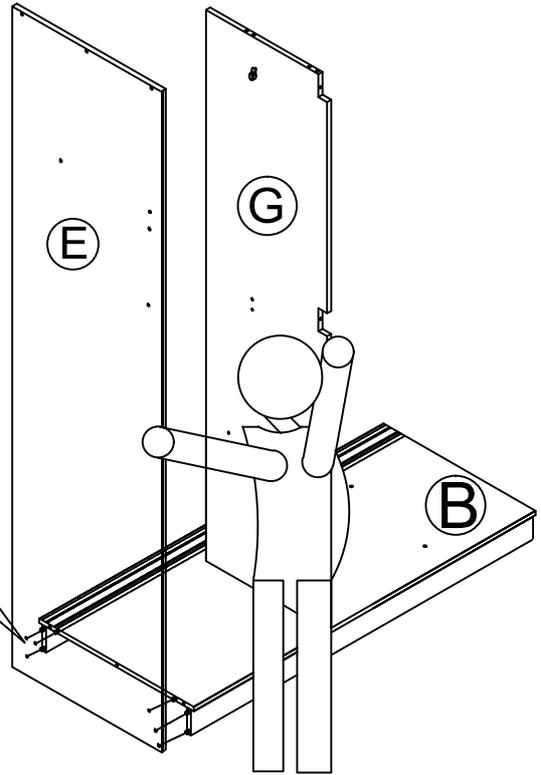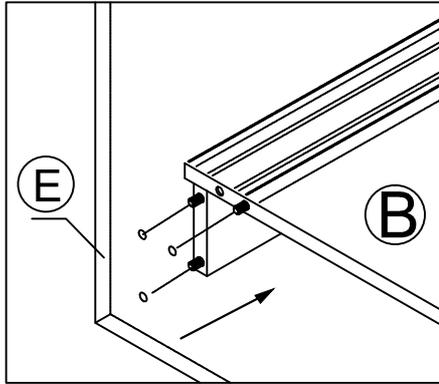

# 12

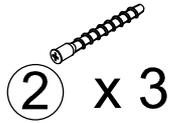


1min

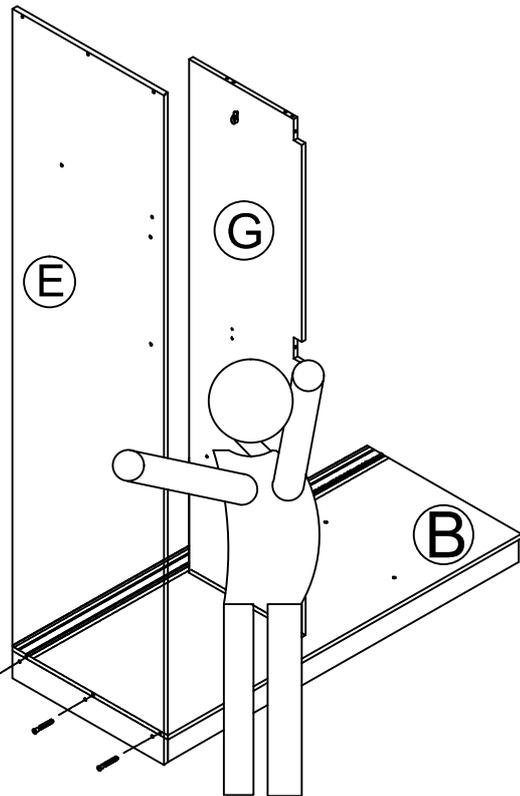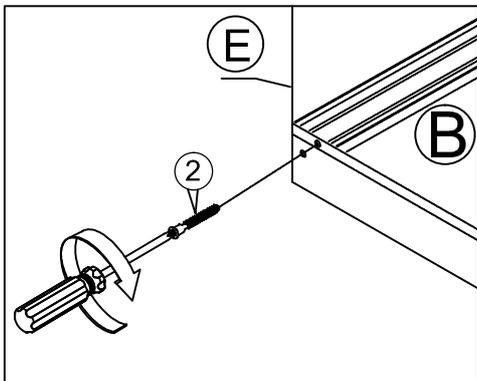


# 13

  
① x 8

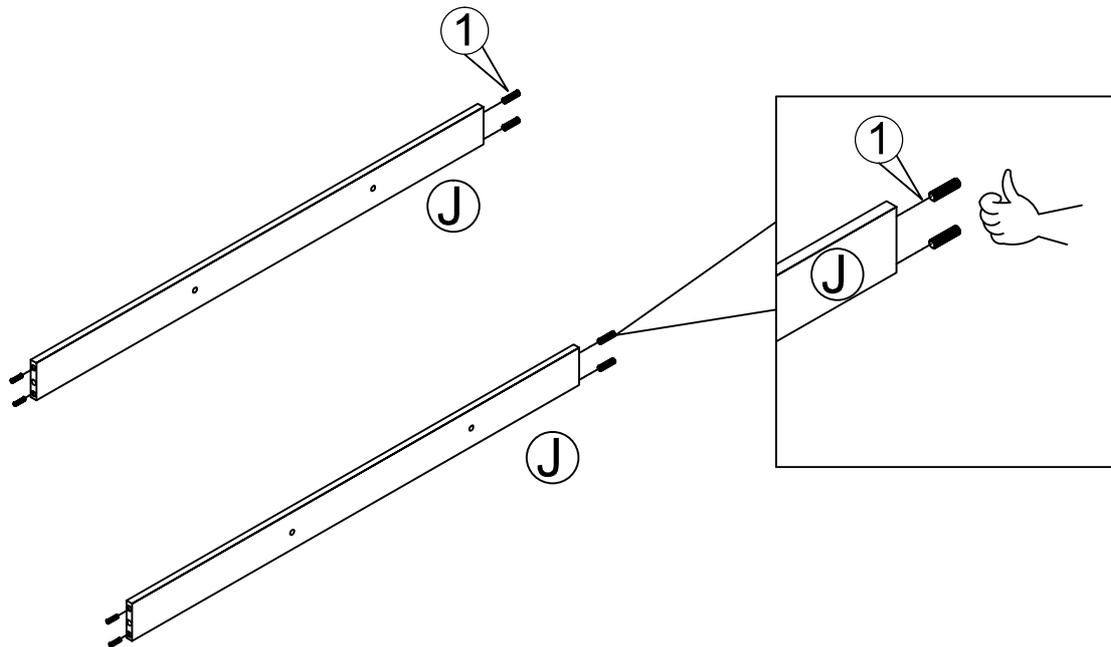

# 14



  
② x 2

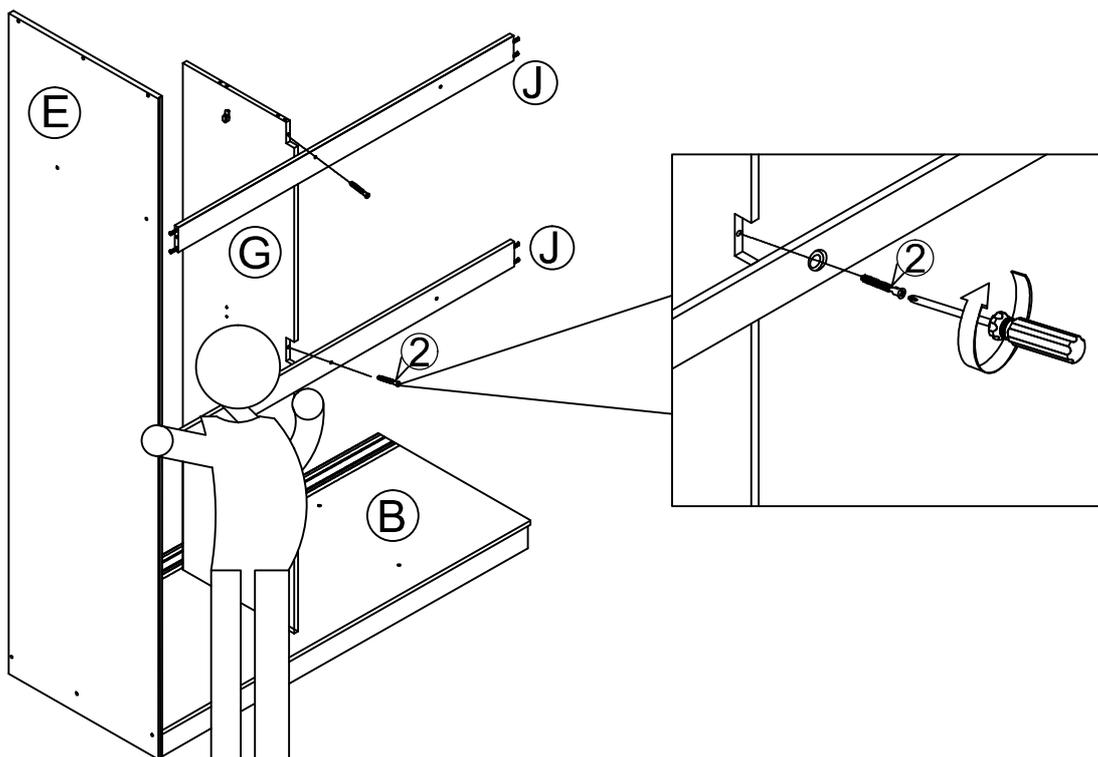


# 15





30s

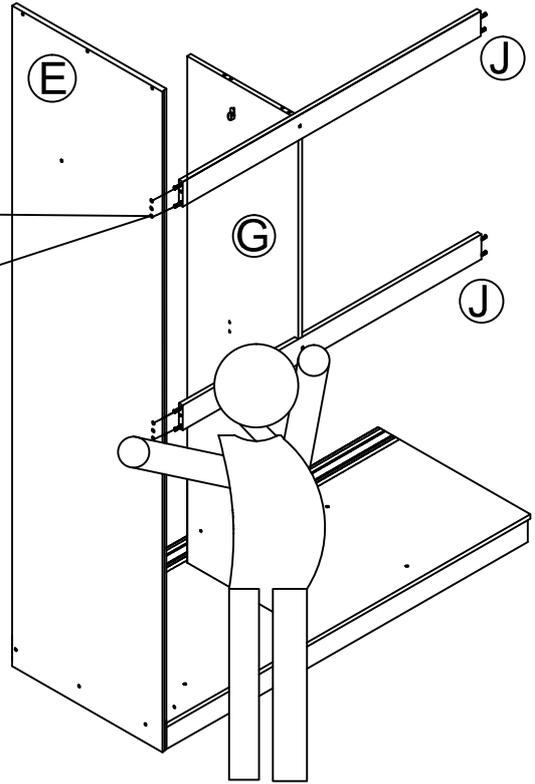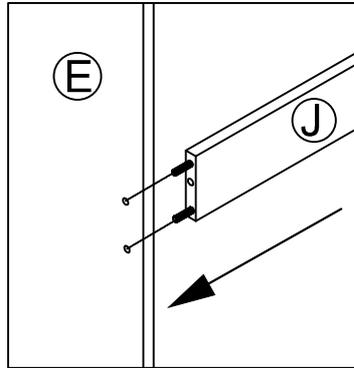

# 16

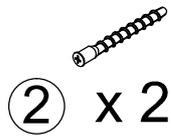



1min

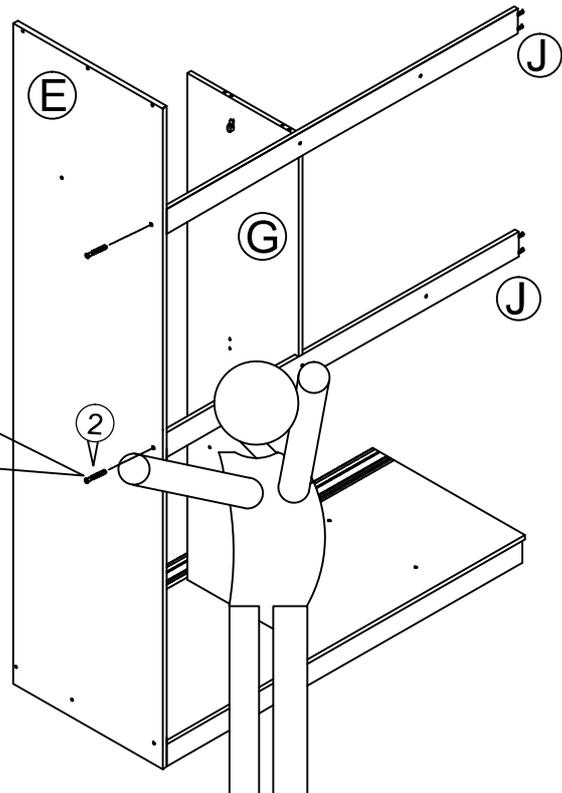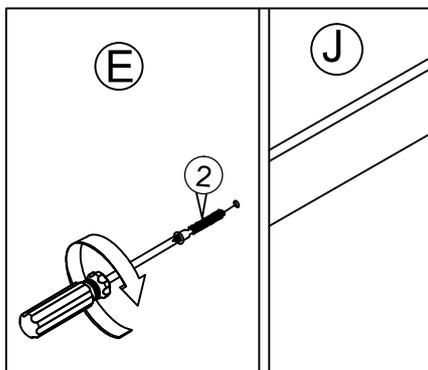


# 17



30s

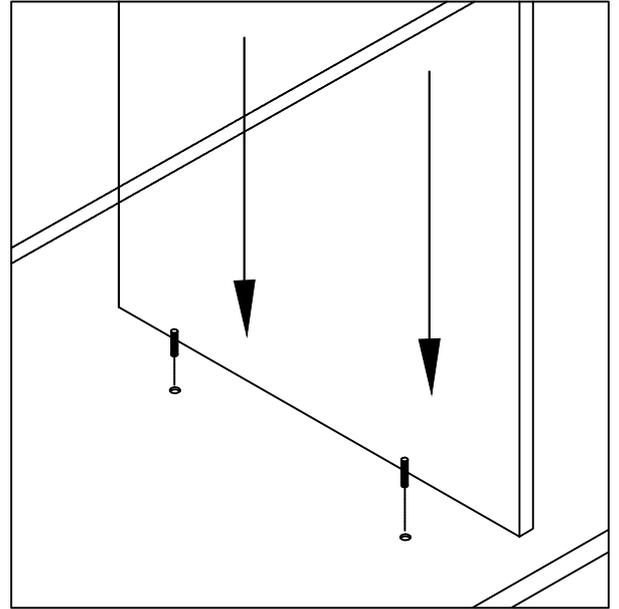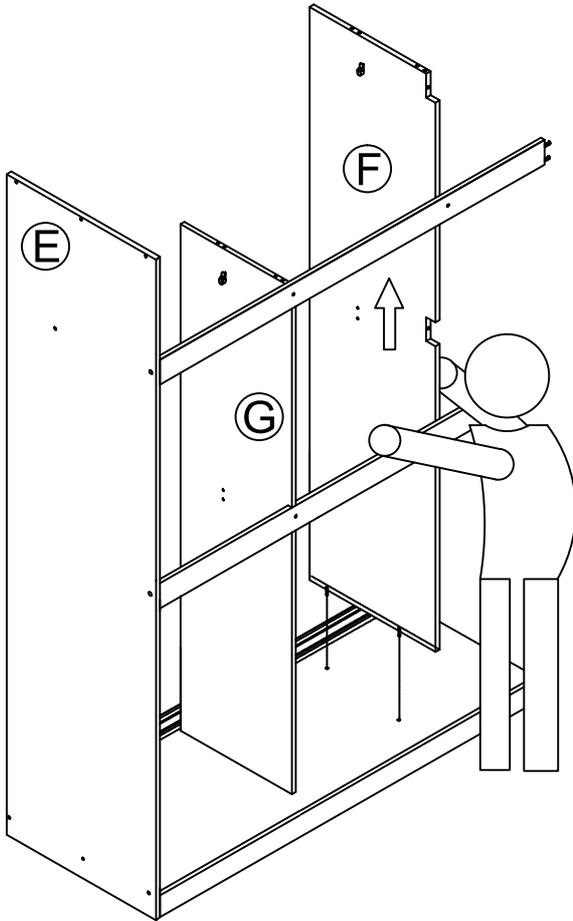



# 18

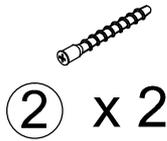

② x 2




1min

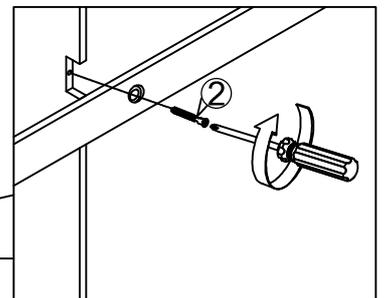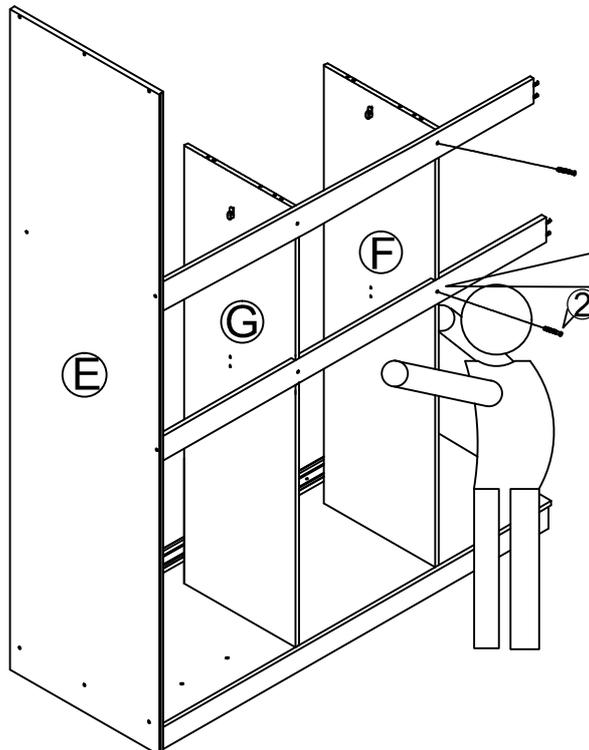


# 19

 ① x 4

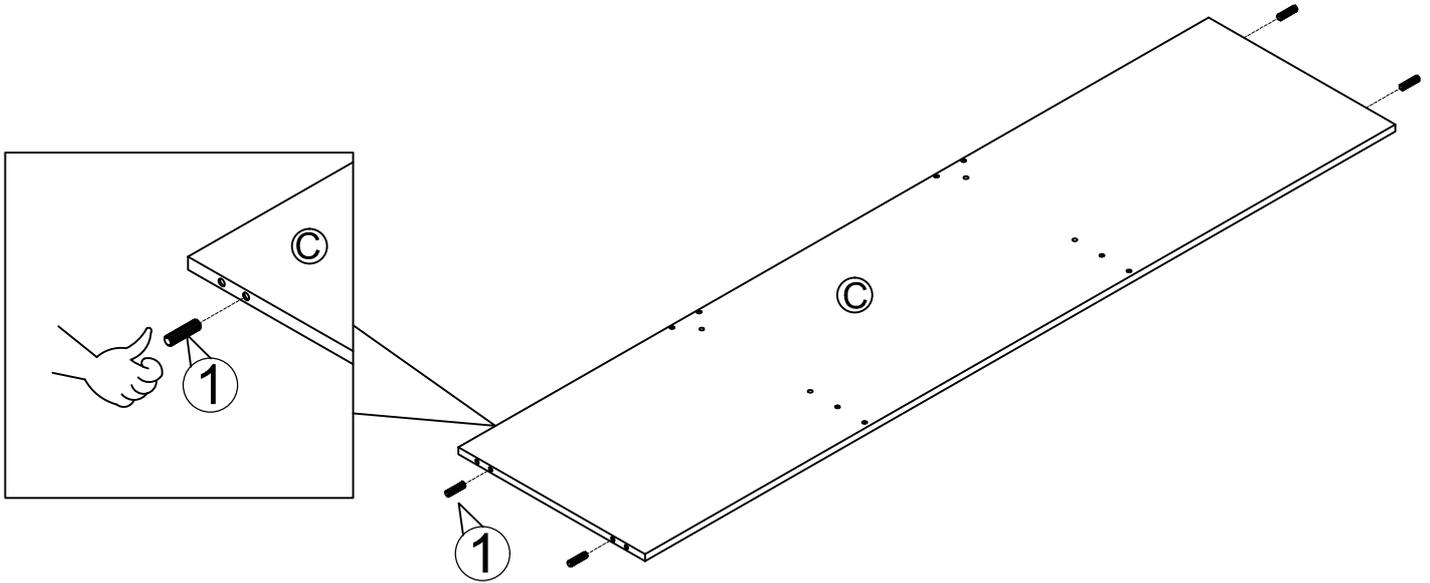


# 20

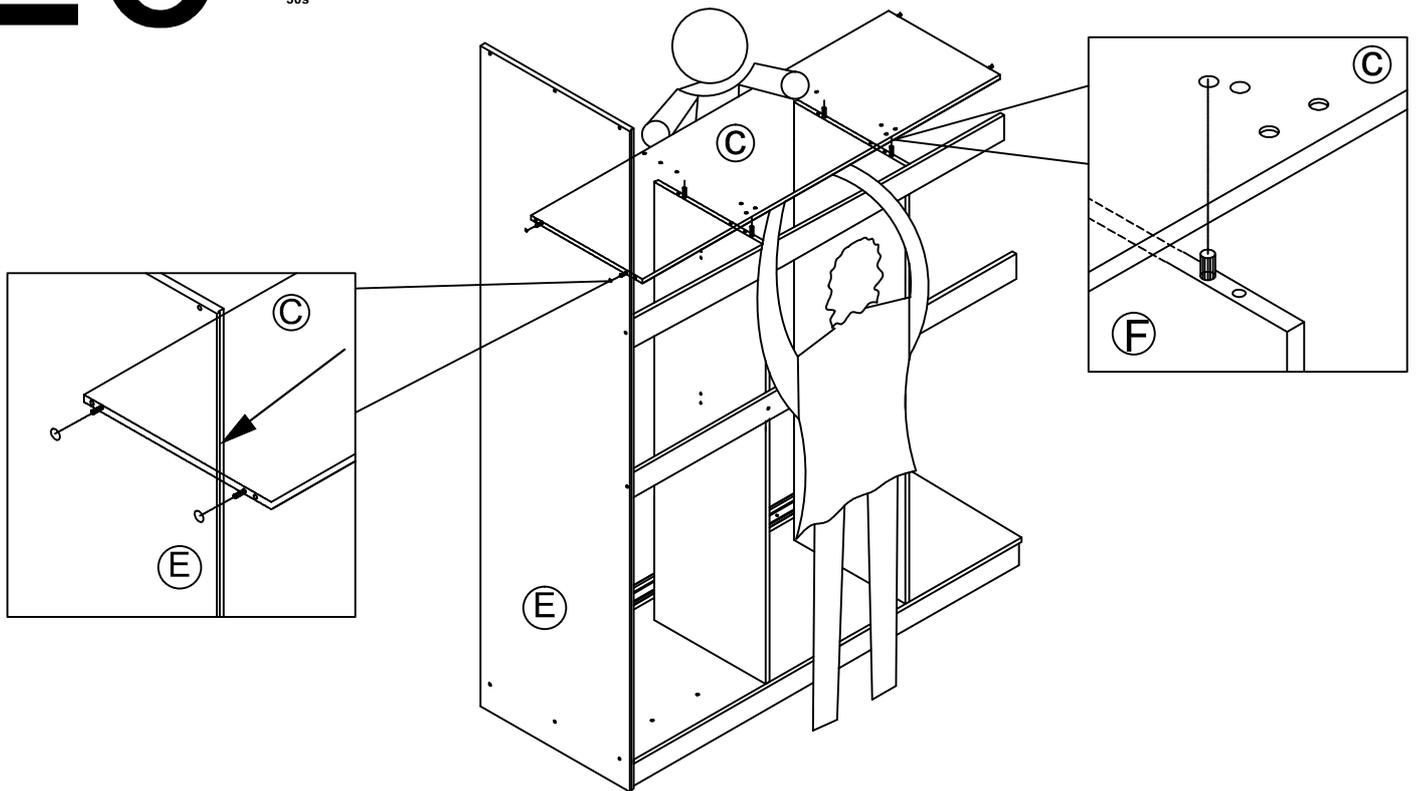

# 21


 ② x 6

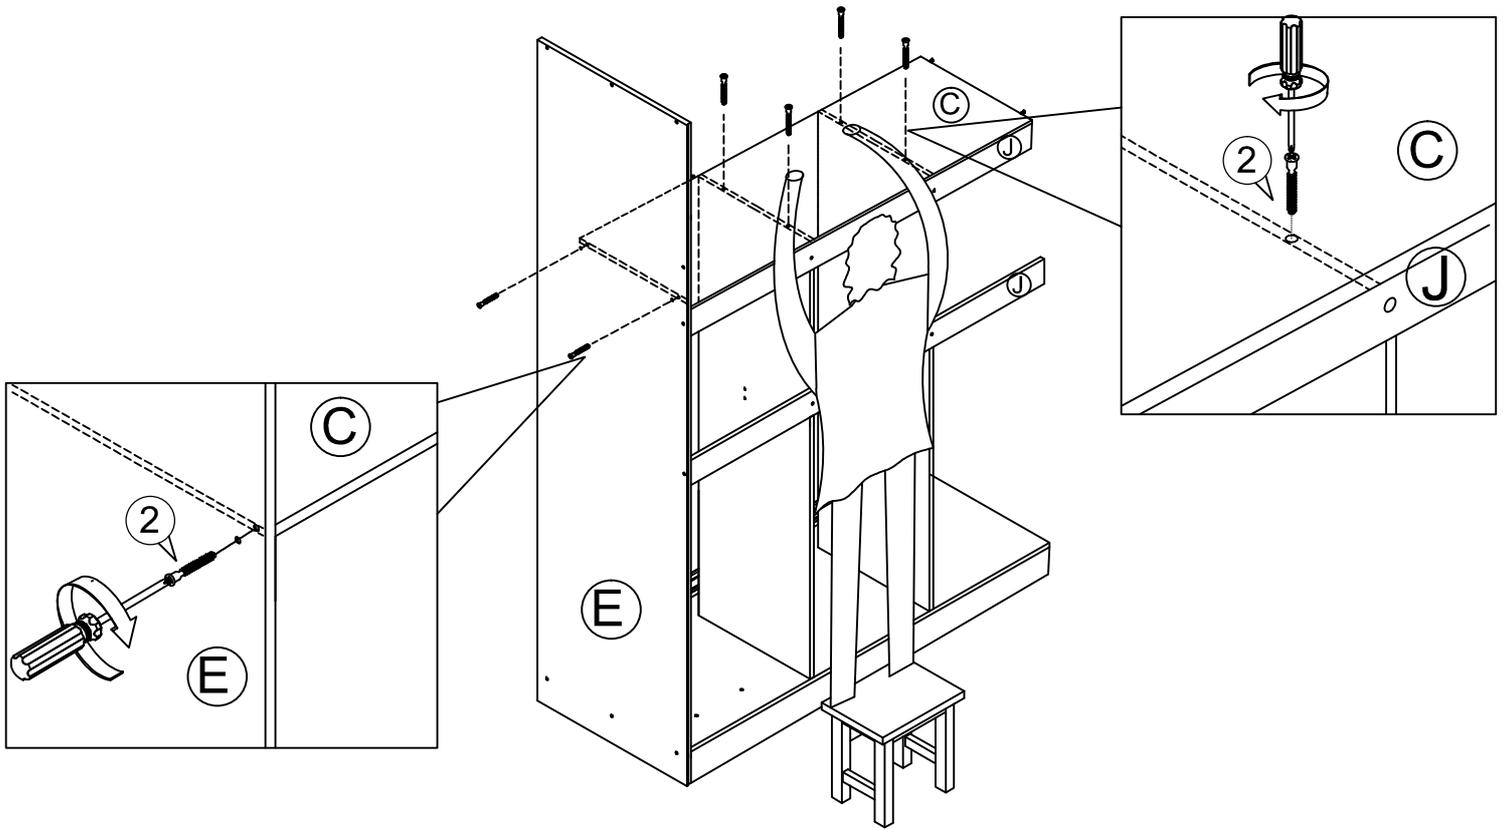

# 22


 ① x 4

 ④ x 12

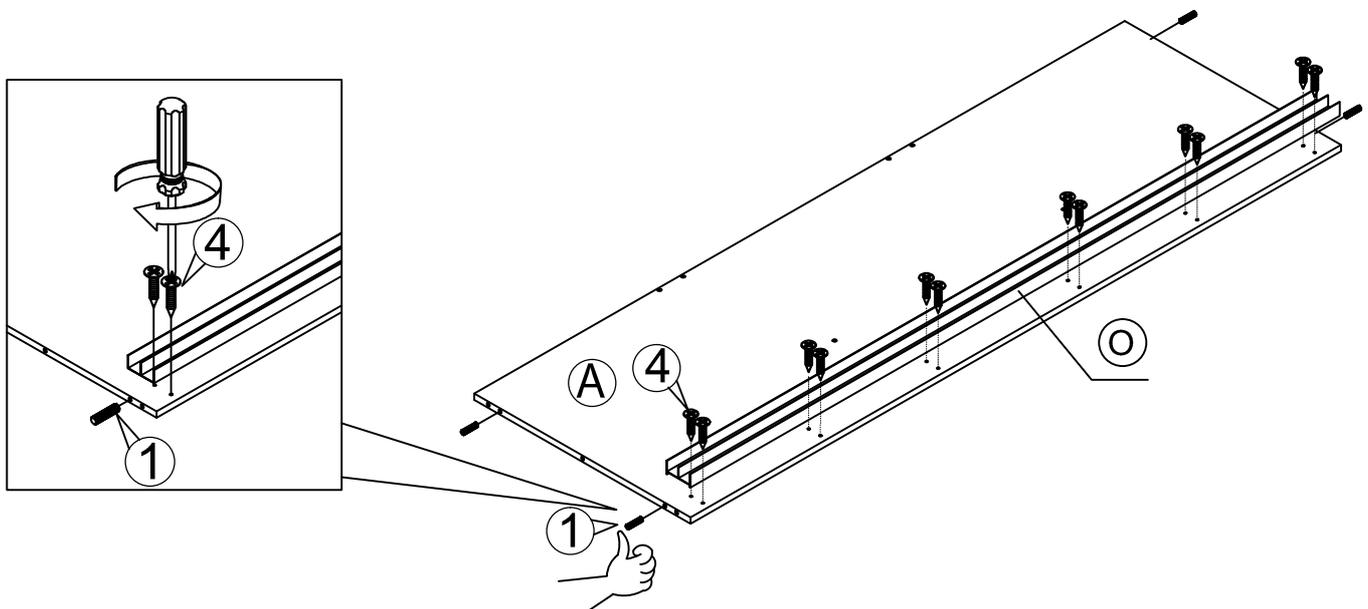


# 23

 ② x 8

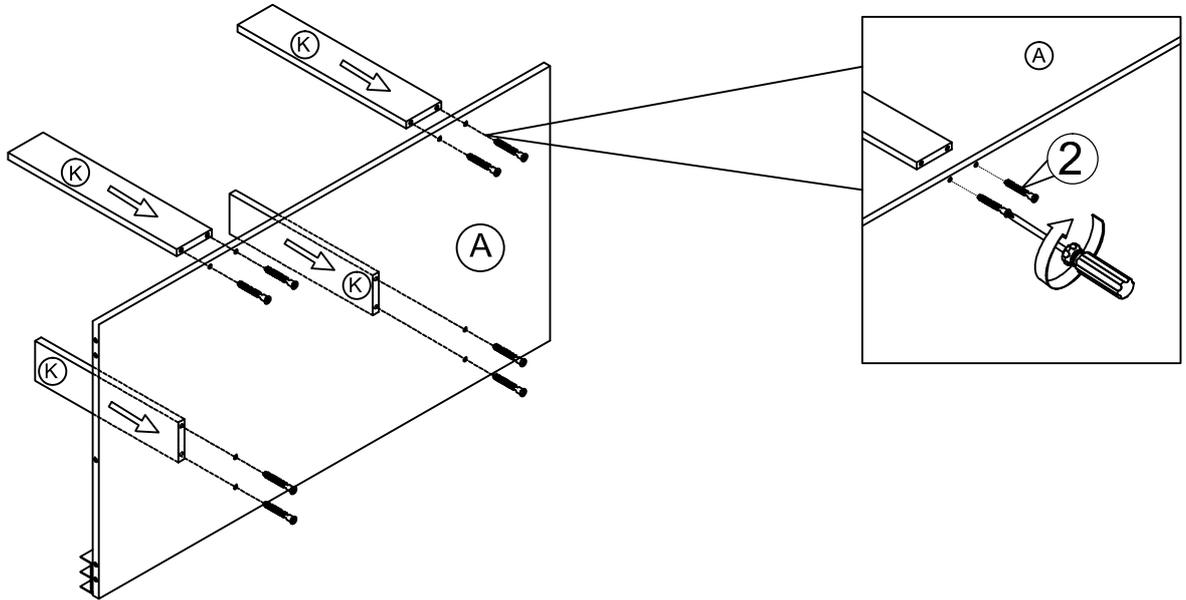


# 24



 ① x 8

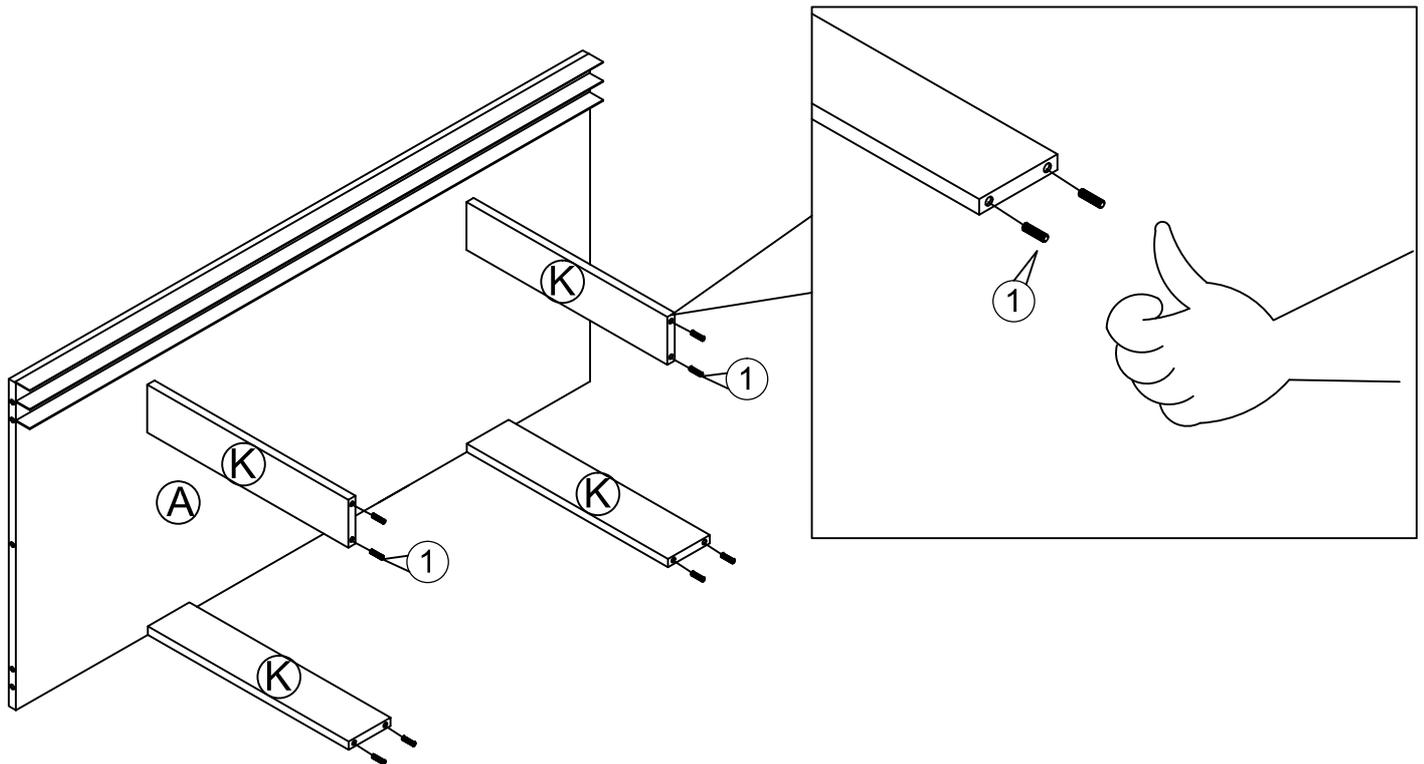

# 25

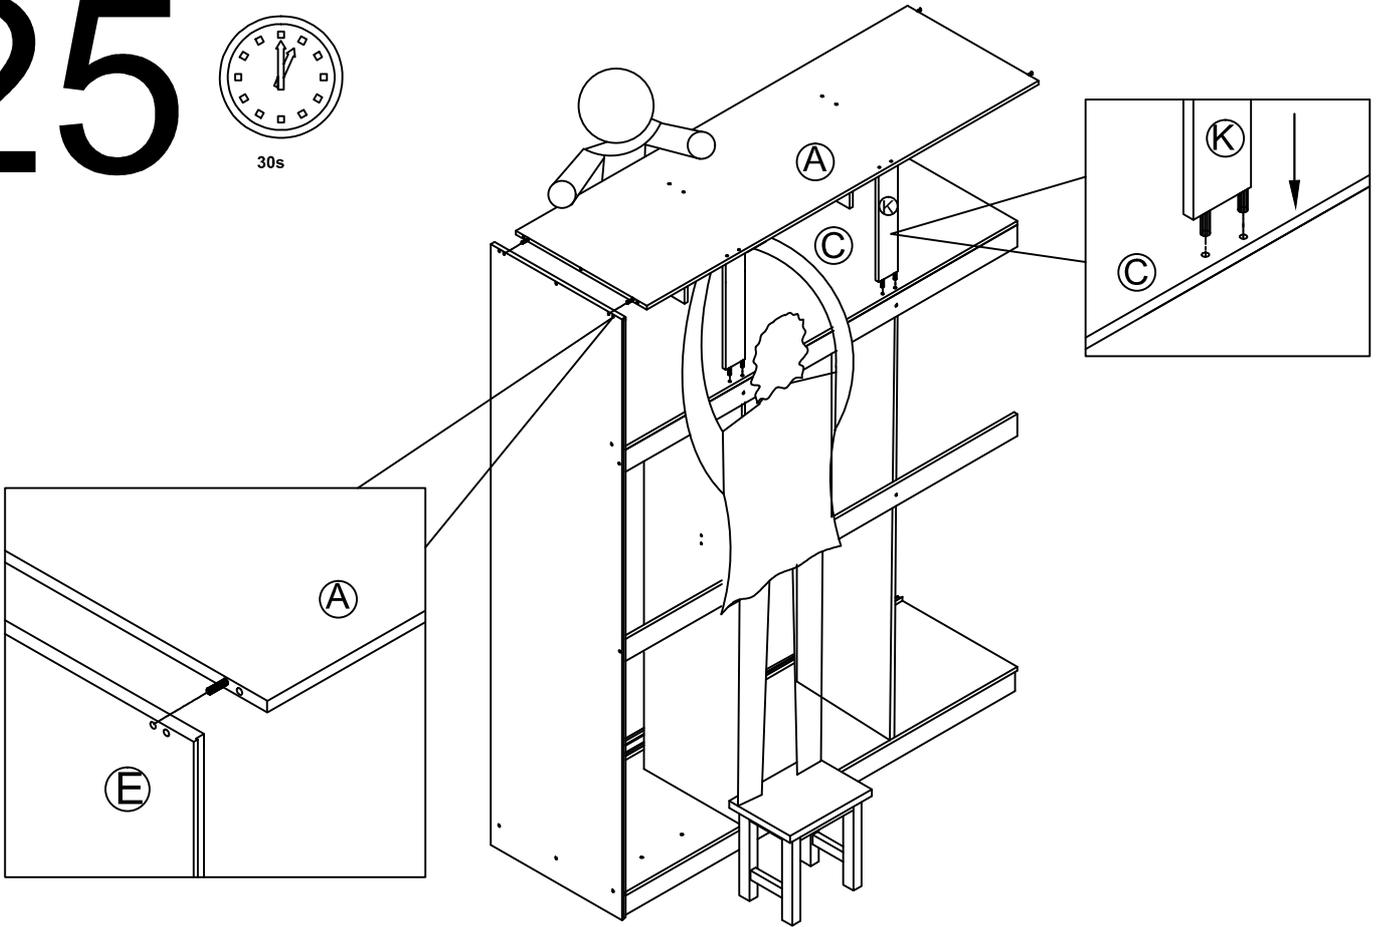

# 26

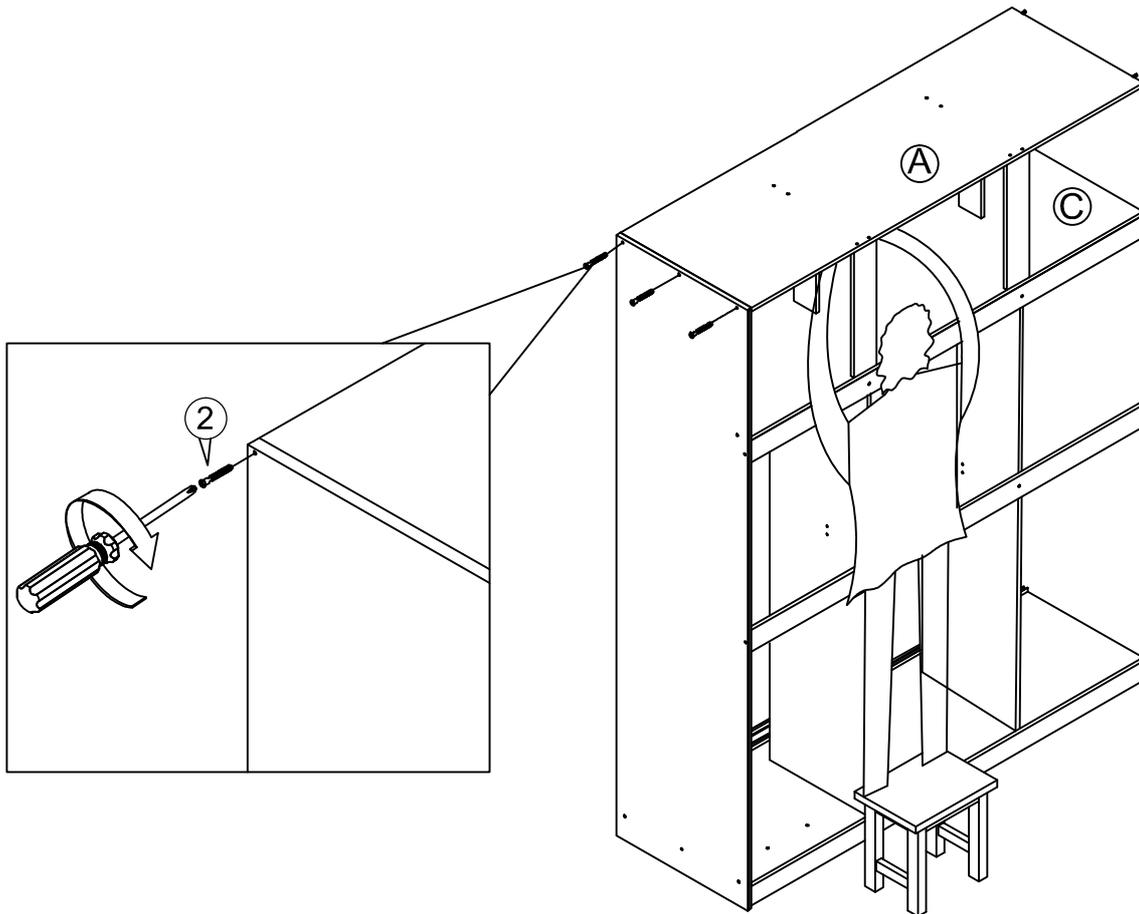
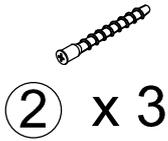


# 27

⑥ x1    ⑨ x1





1min

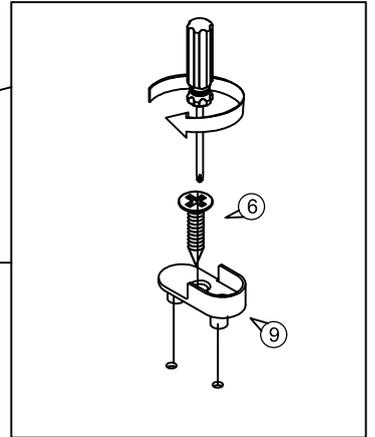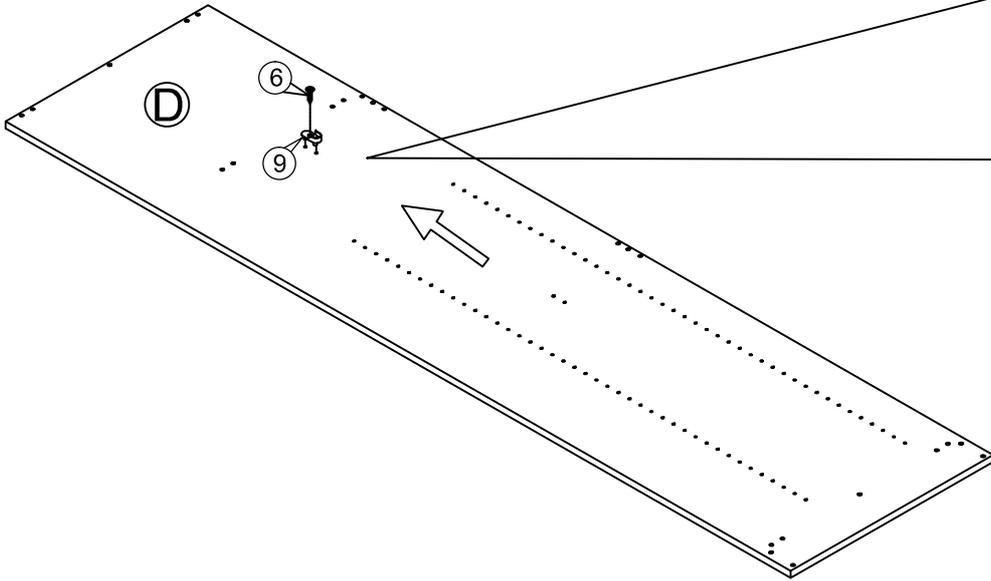

# 28




1min

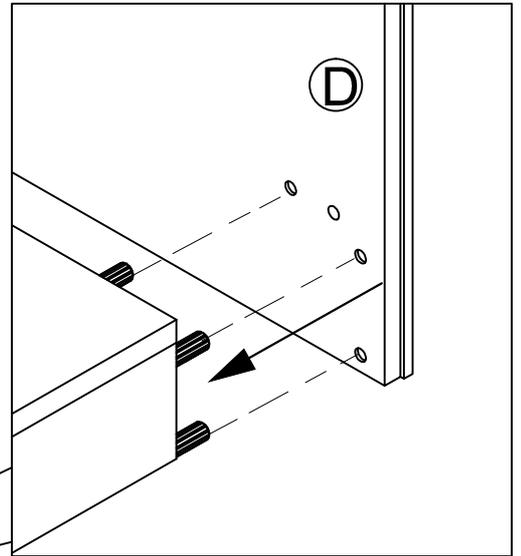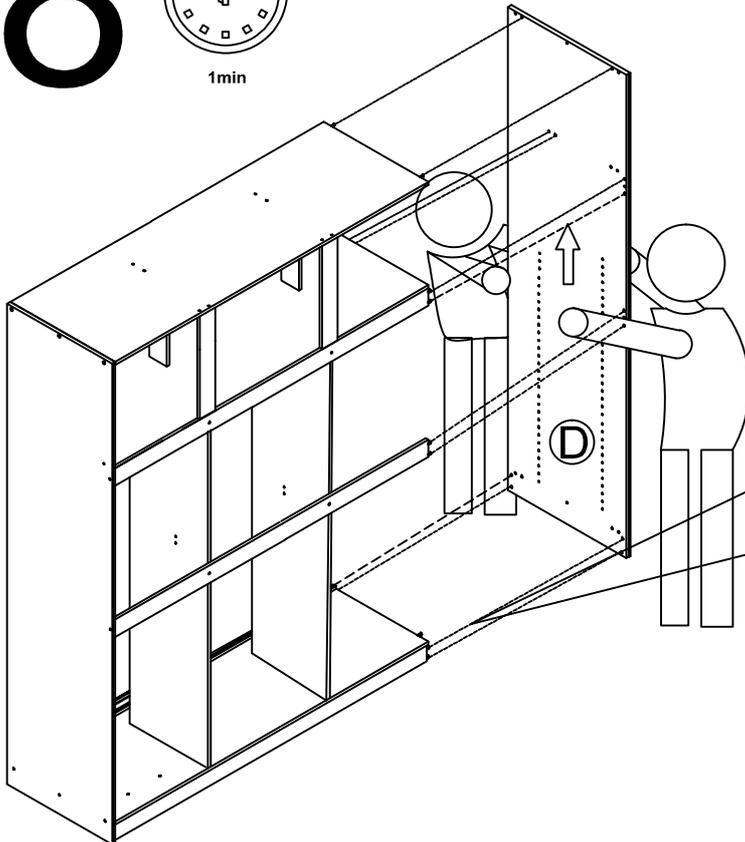


# 29

  
② x 10

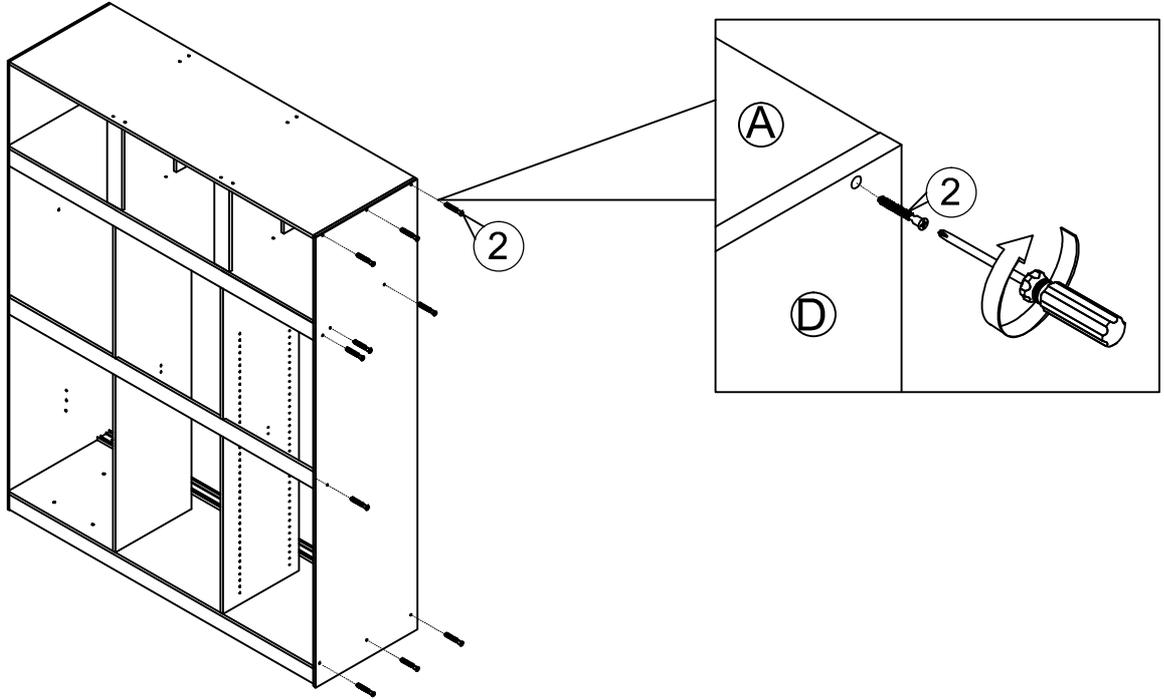

# 30



  
③ x 24

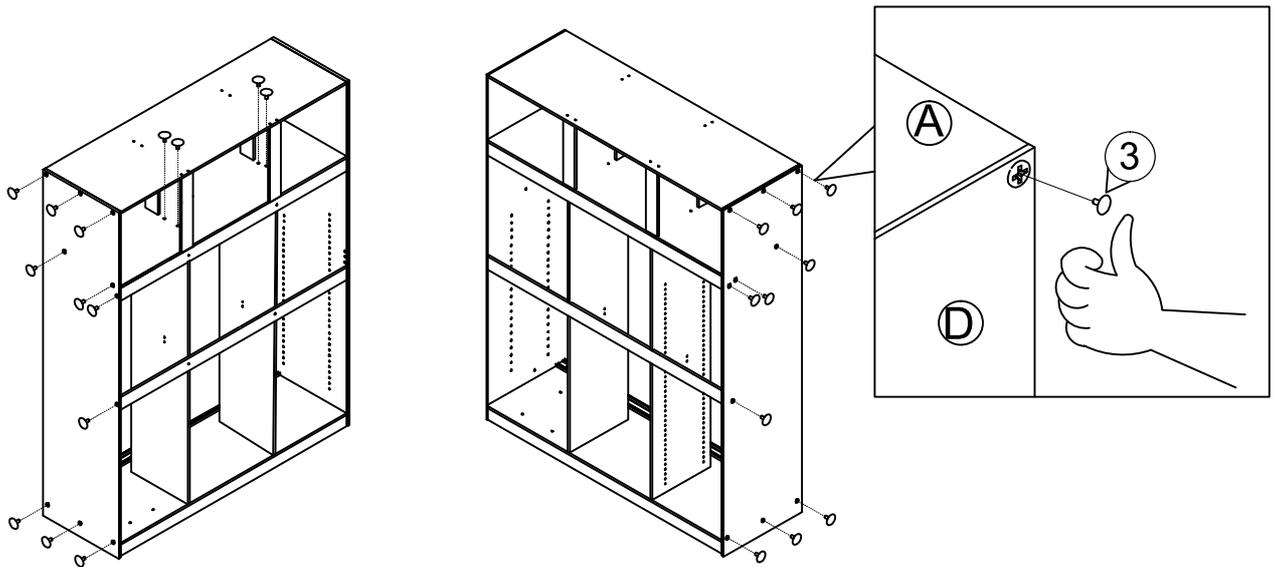

# 31





6min

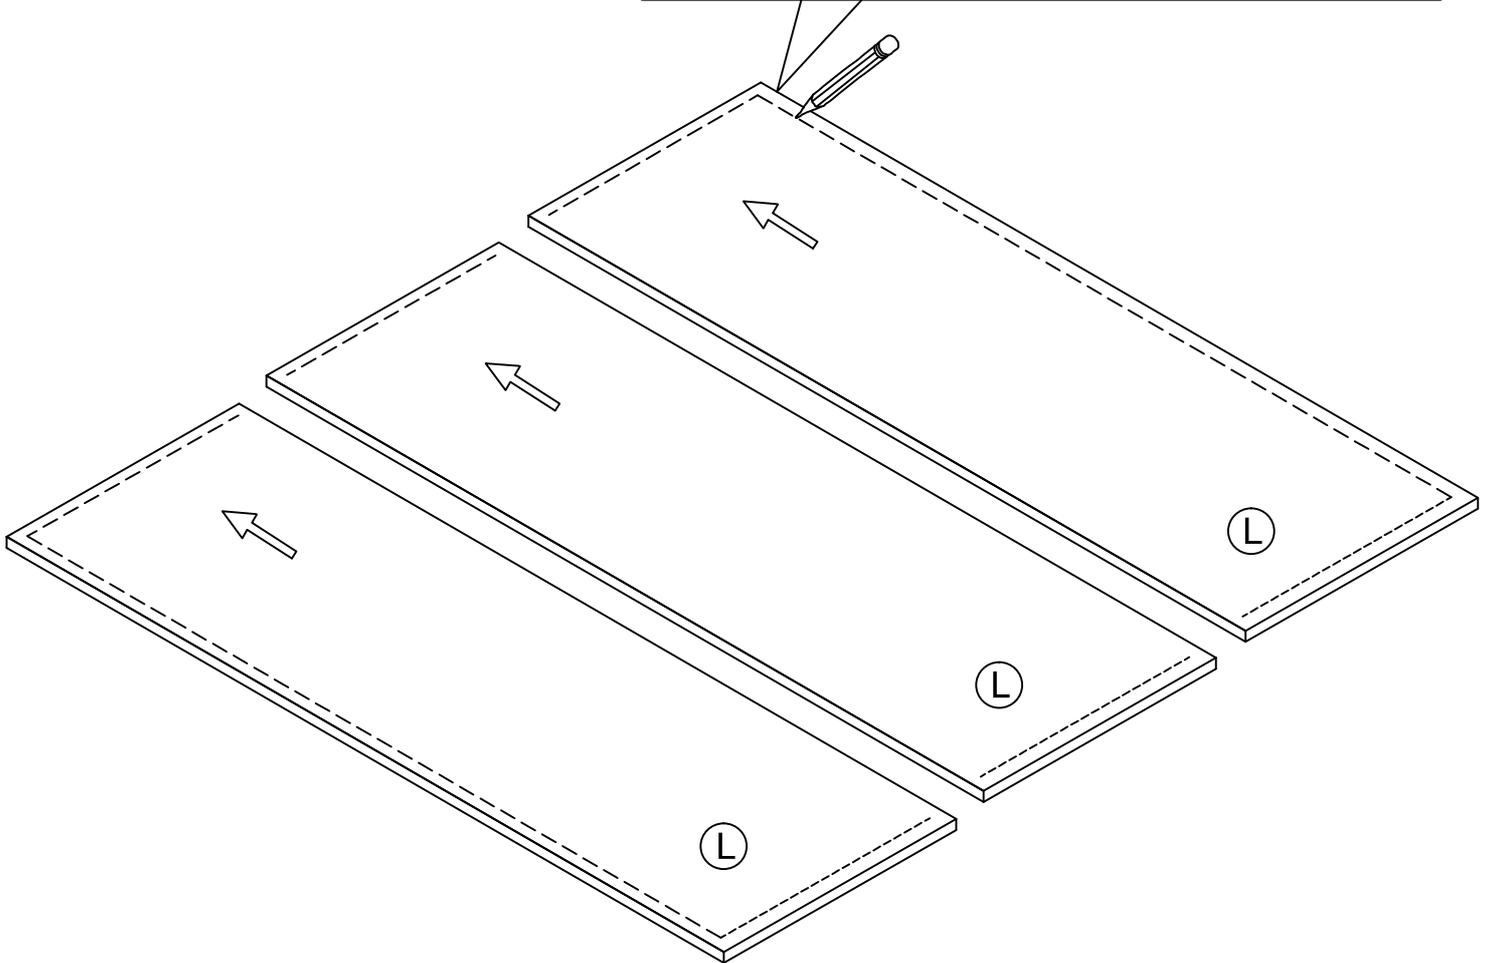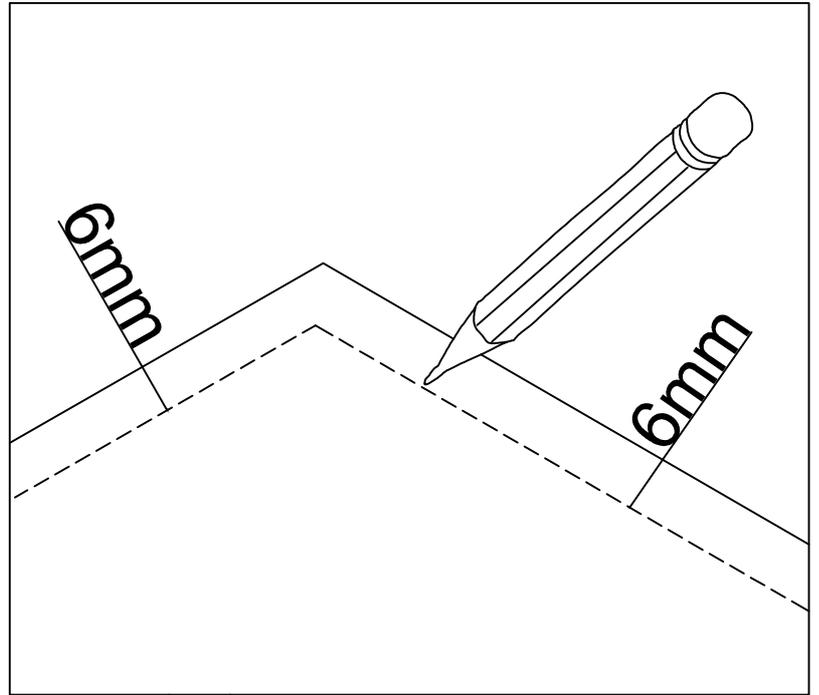

# 32



30s


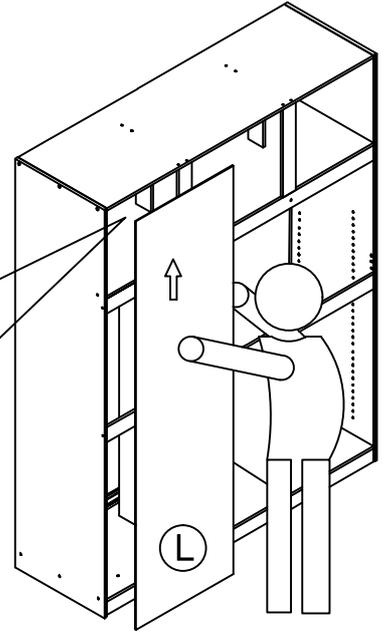
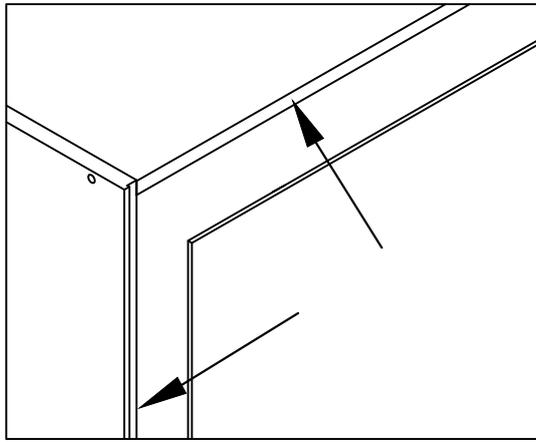


# 33

  
⑧ x 30




10min

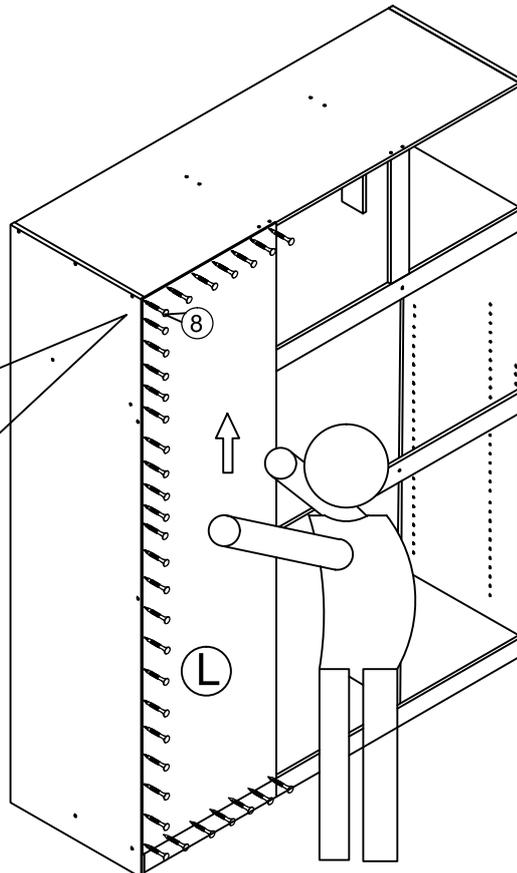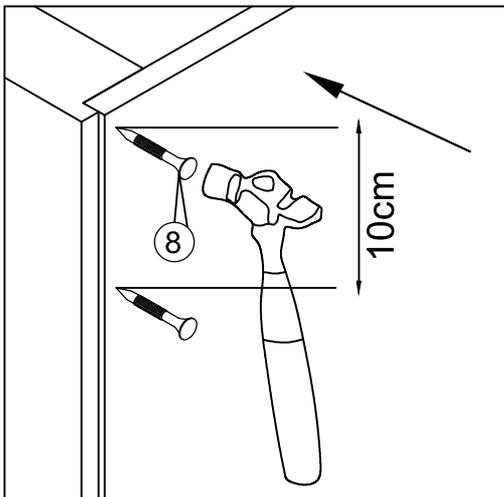

# 34




30s

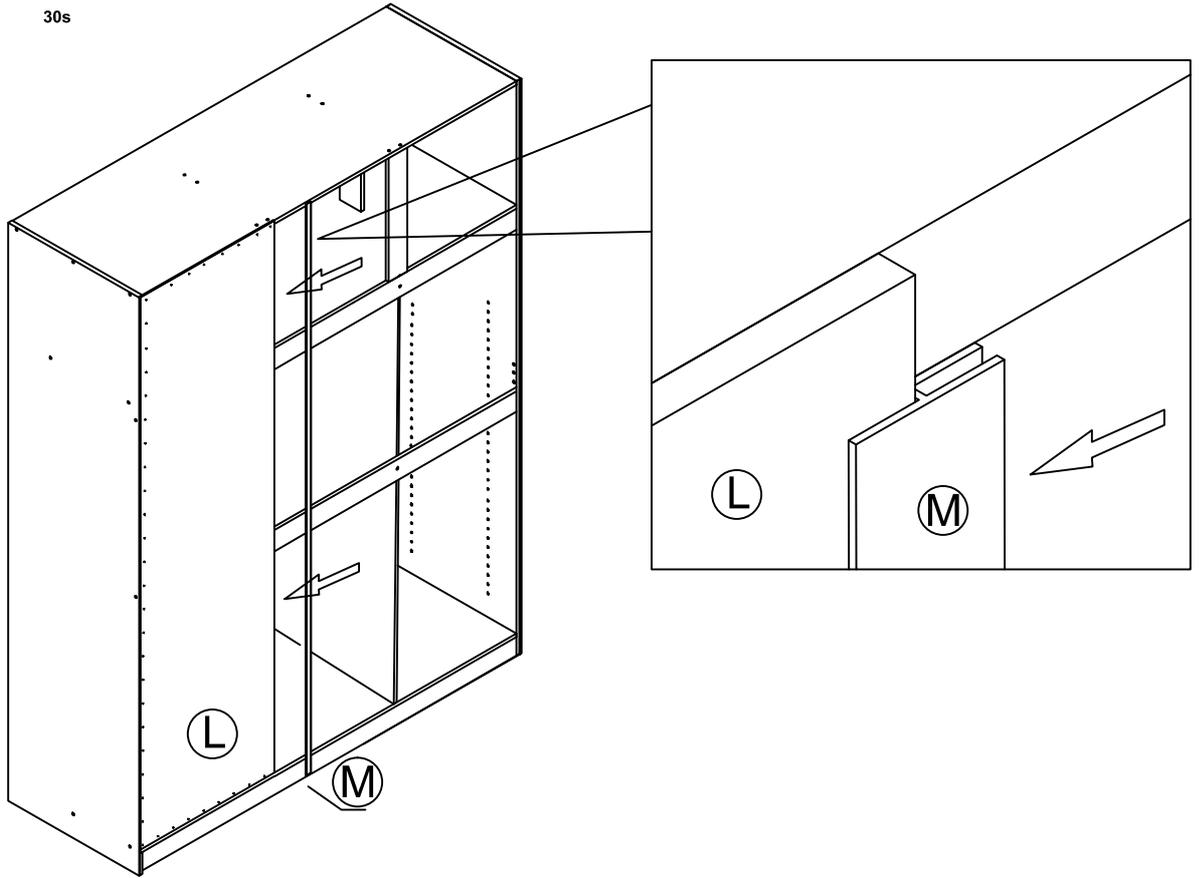

# 35



30s



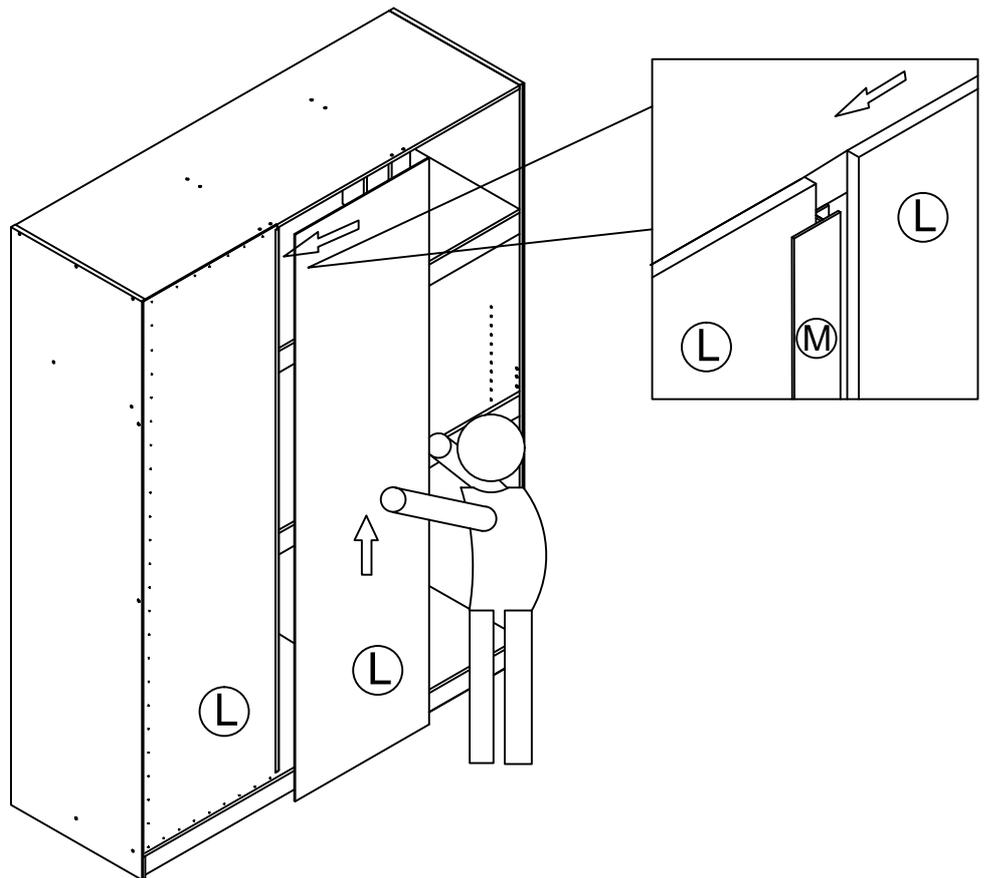


# 36

8 x 14





5min

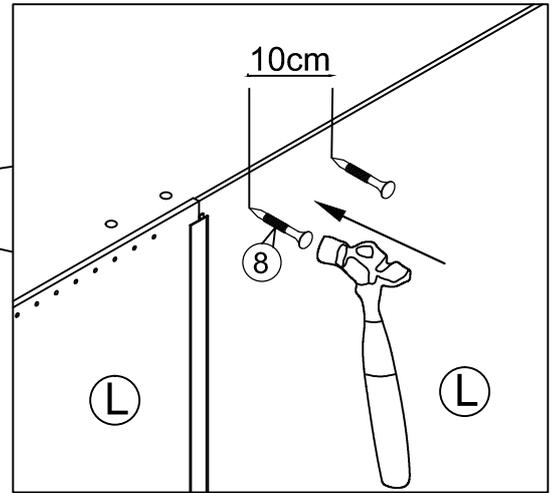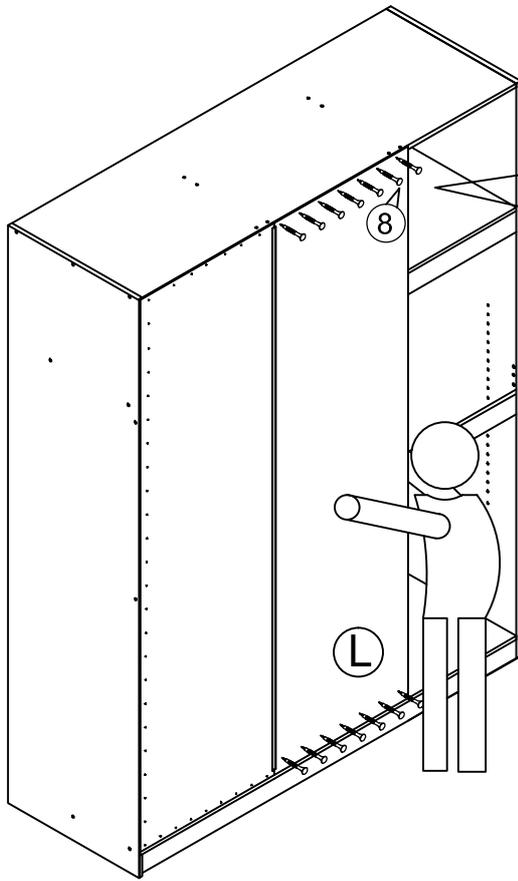

# 37




30s

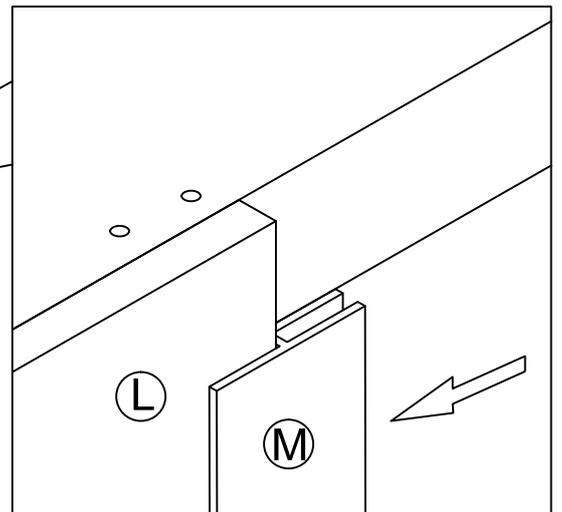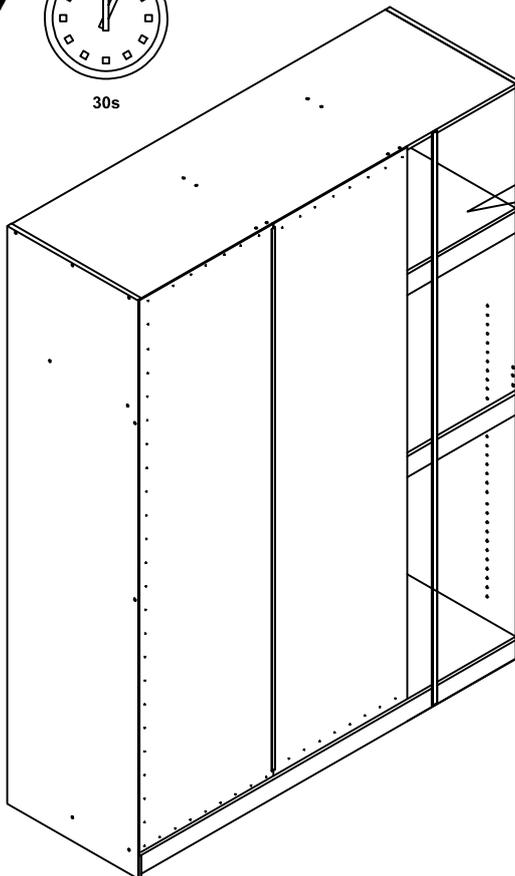

# 38



30s

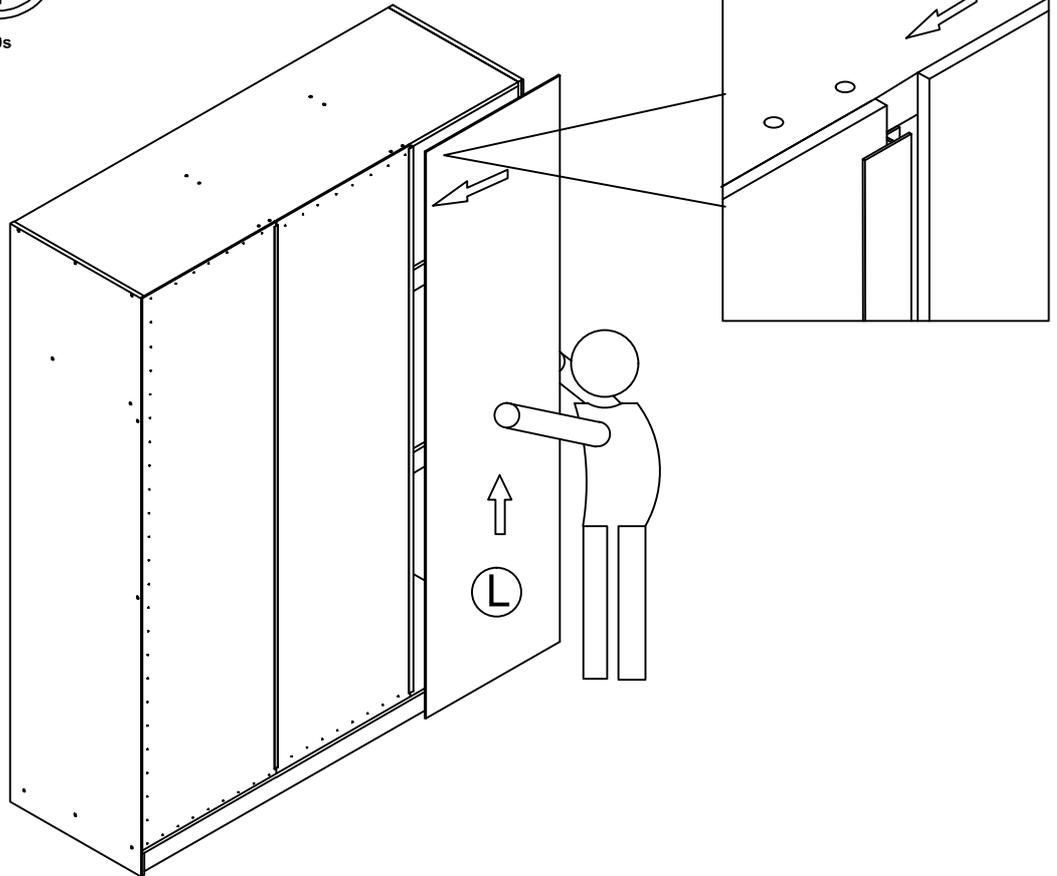


# 39

  
8 x 30





10min


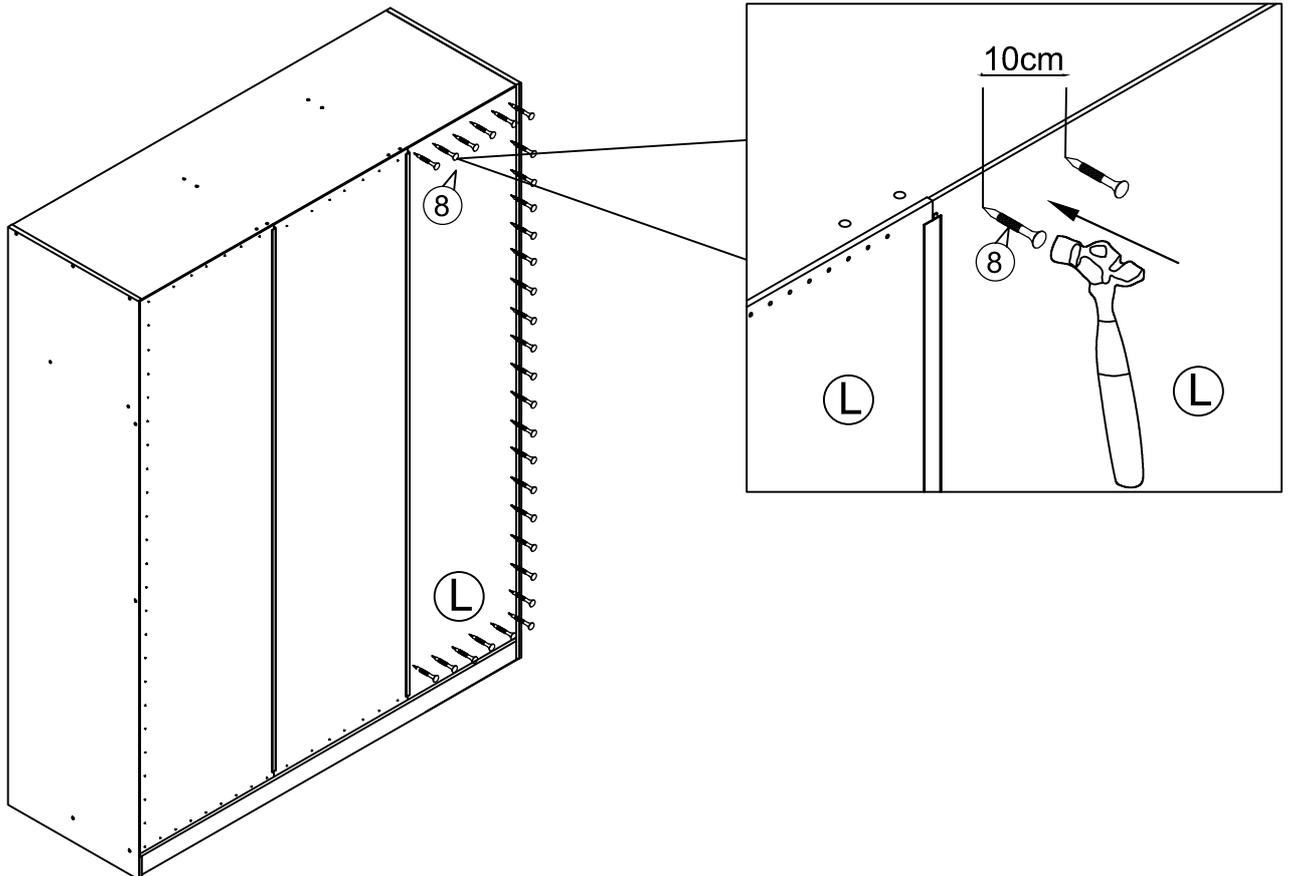


# 40




7 X 30

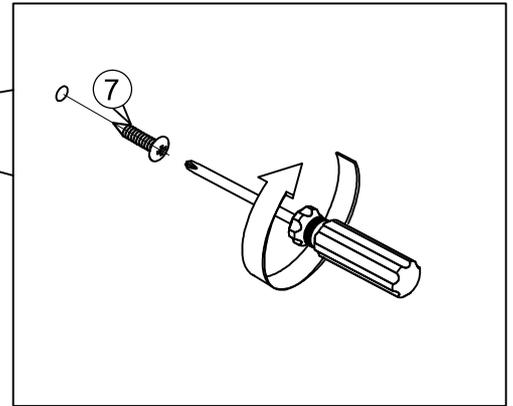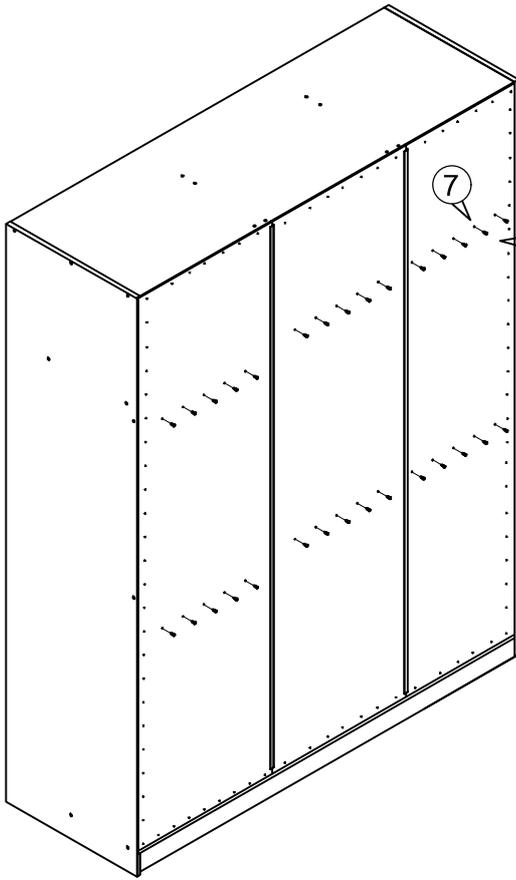





# 41

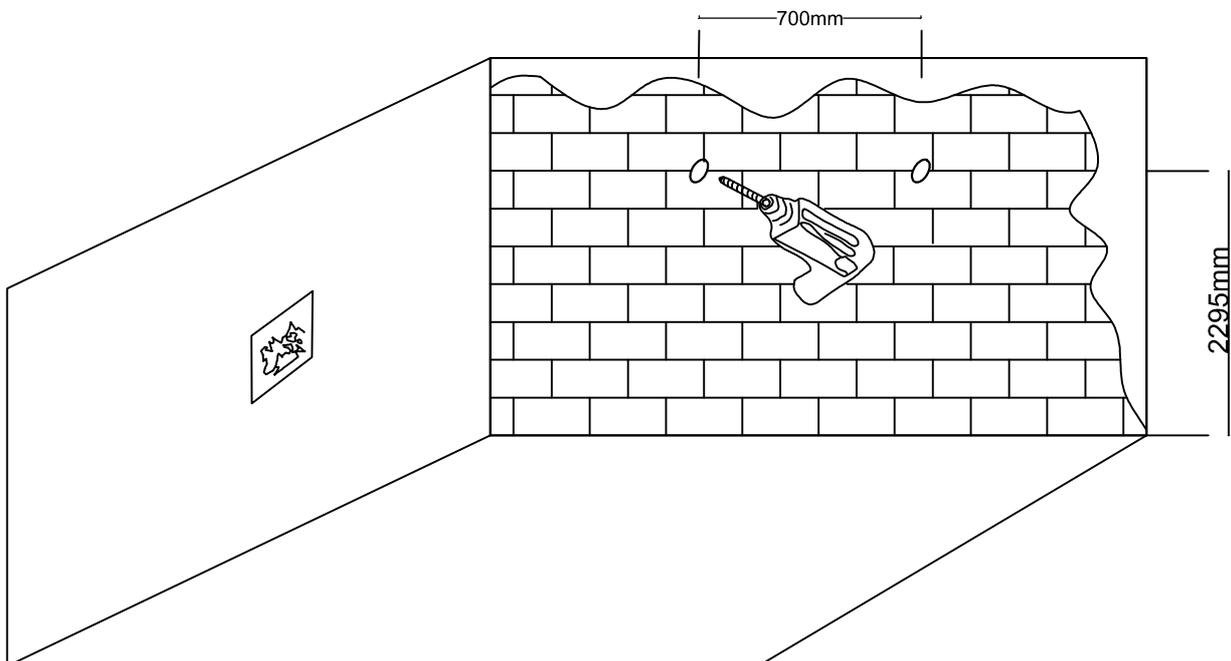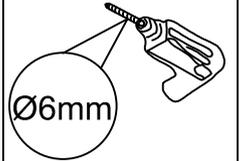

# 42

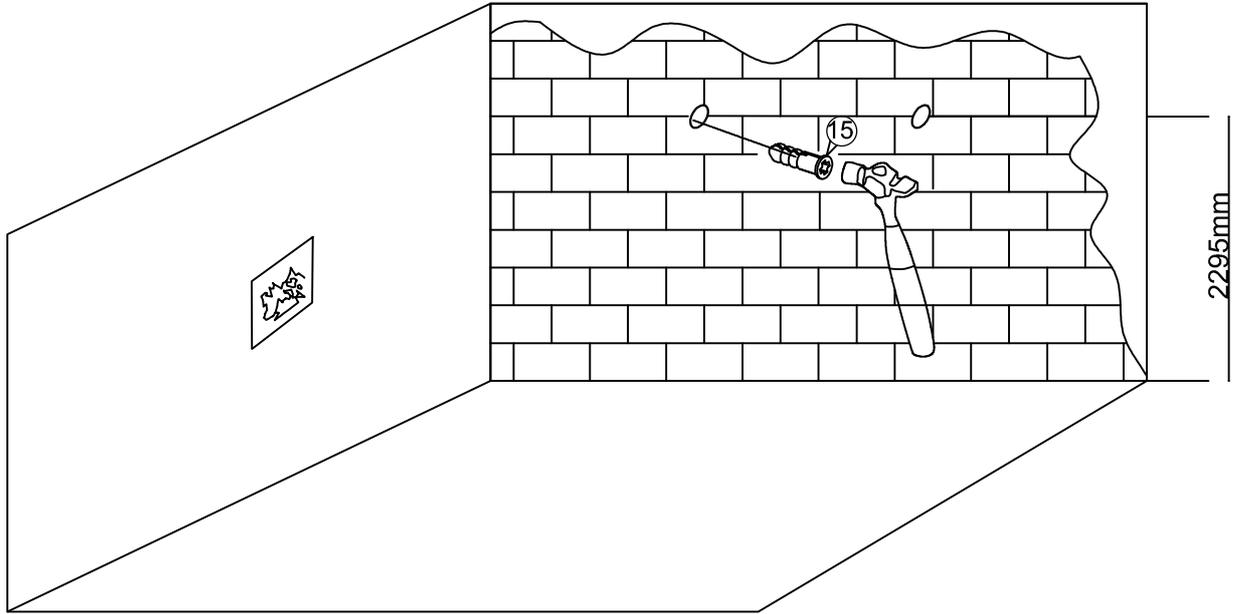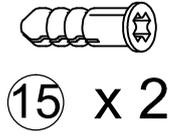


# 43

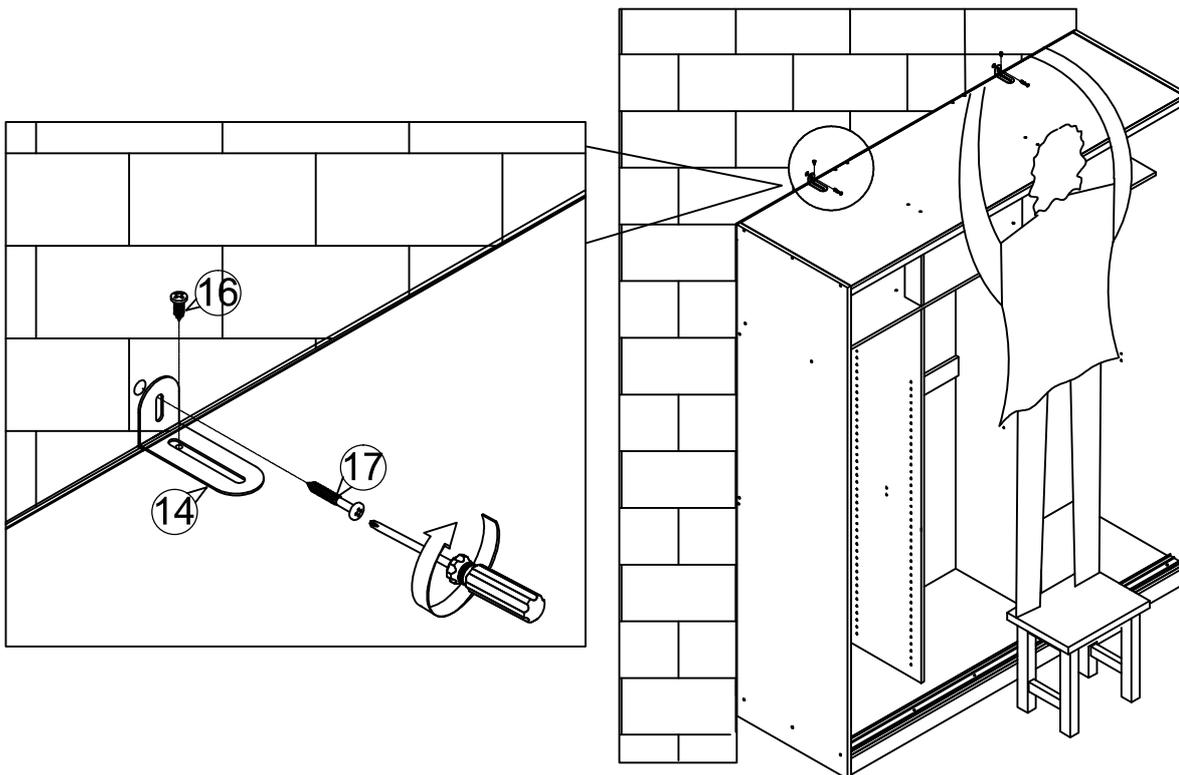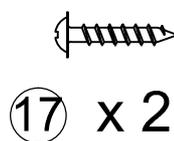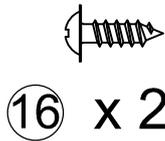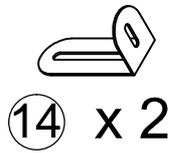


# 44

 **10** x 1

 **11** x 2

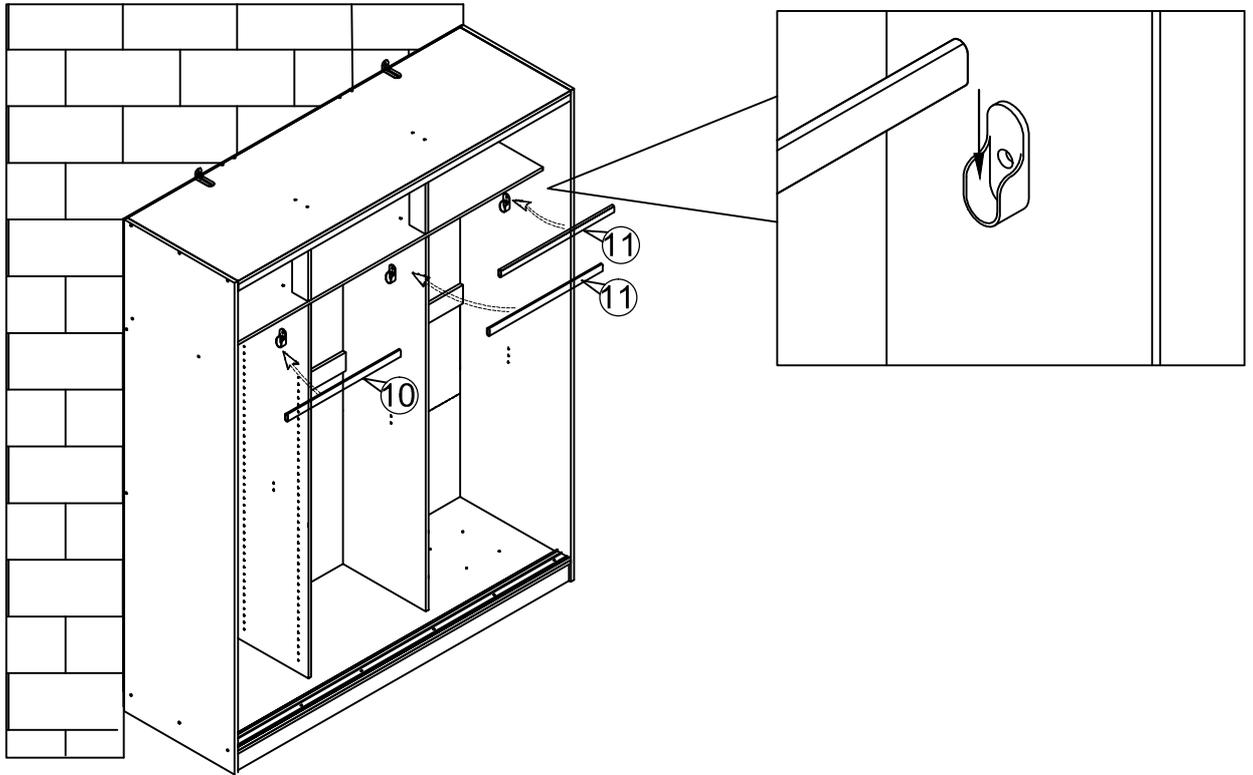




ASSEMBLY IS COMPLETE

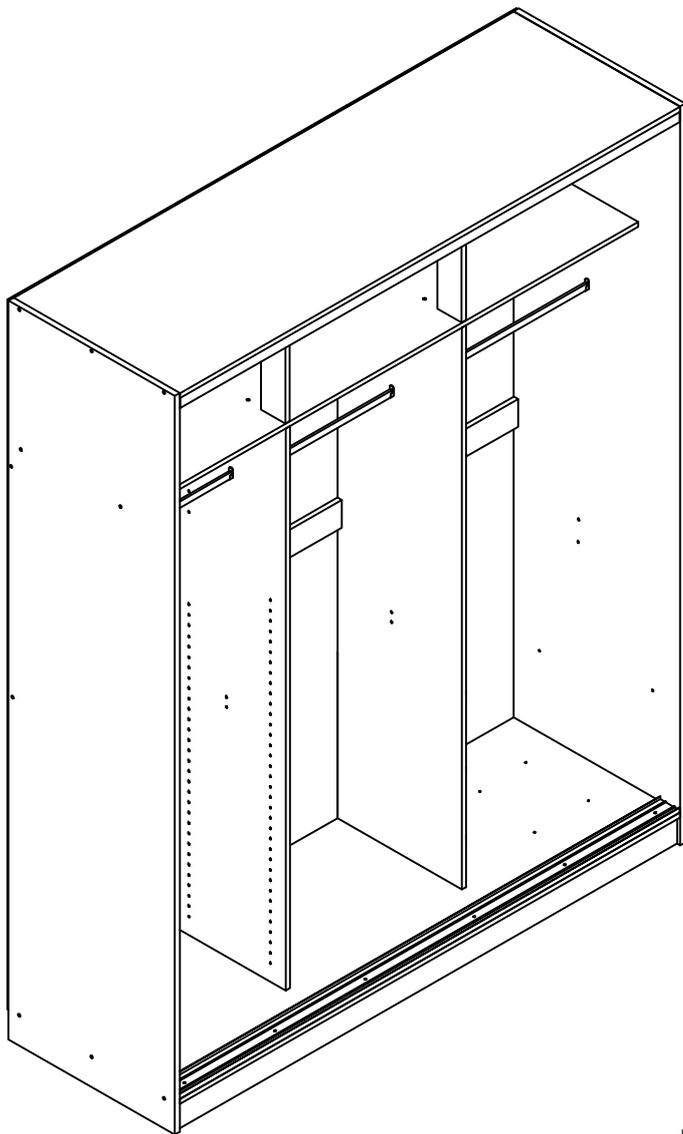



**Please note – Some floors could possibly not be level or flat so it is best to ensure the wardrobe carcass frame is square and level prior to fitting of doors. This might involve the use of packing material under the base.**

## ● IF YOU HAVE ISSUES — HELPFUL HINTS


If back panel strap drop down with gap between back panel and top panel, loosen some screw beside back panel strap, then push back panel strap upward until contact with top panel and tight screws again.

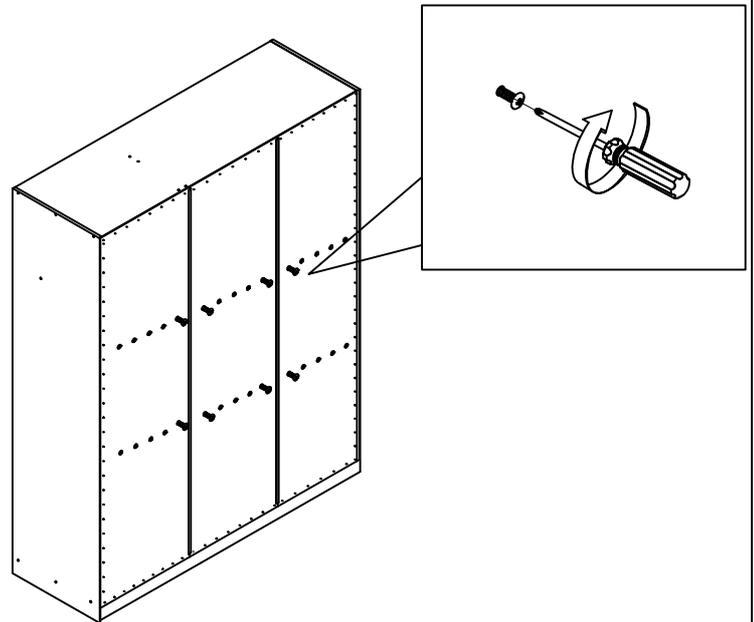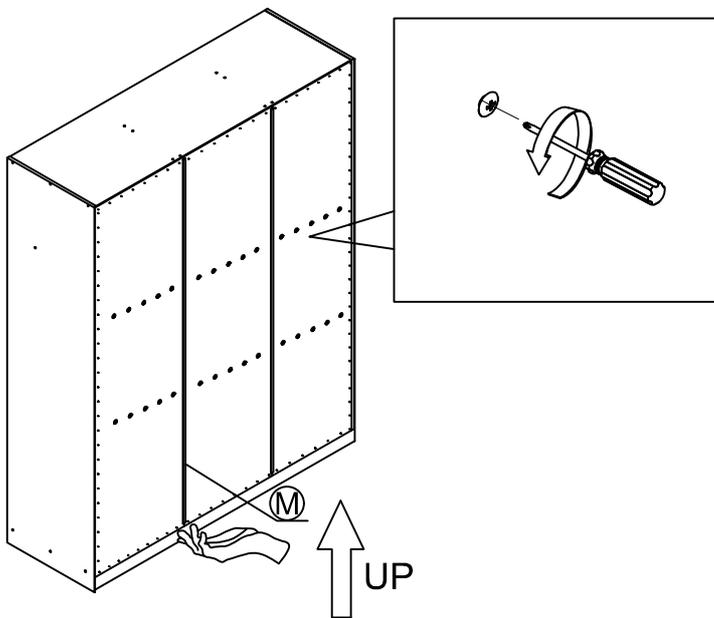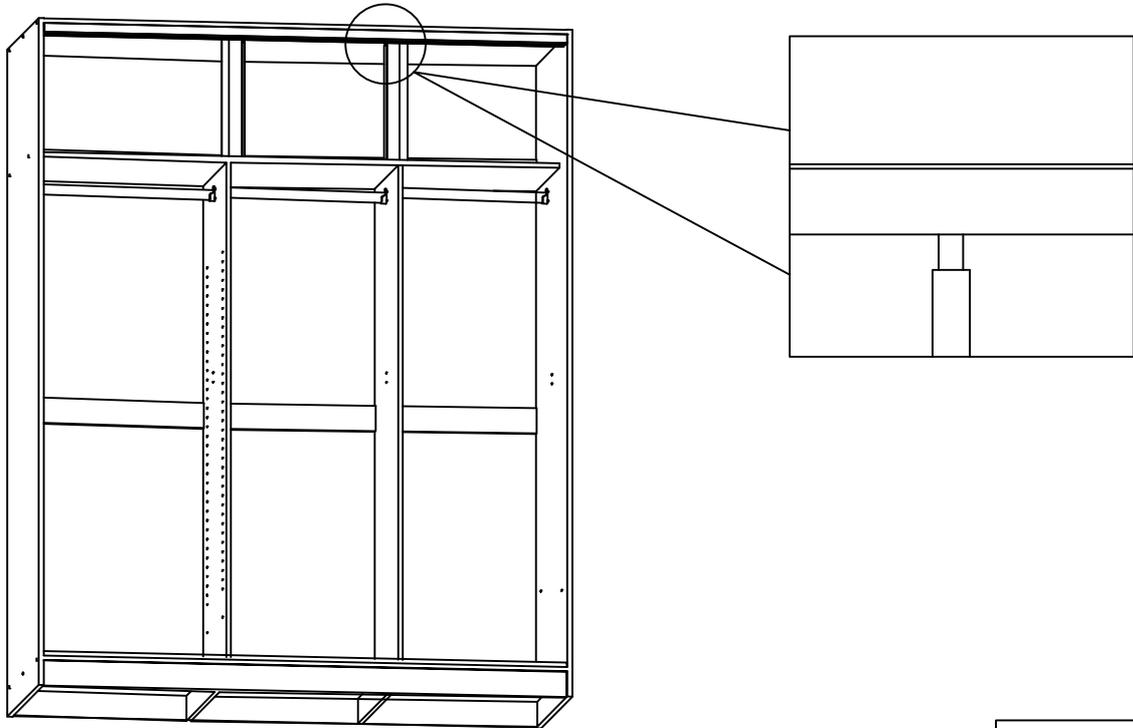


Please push the wheel into the door rail slot when the door collides with the bottom rail.

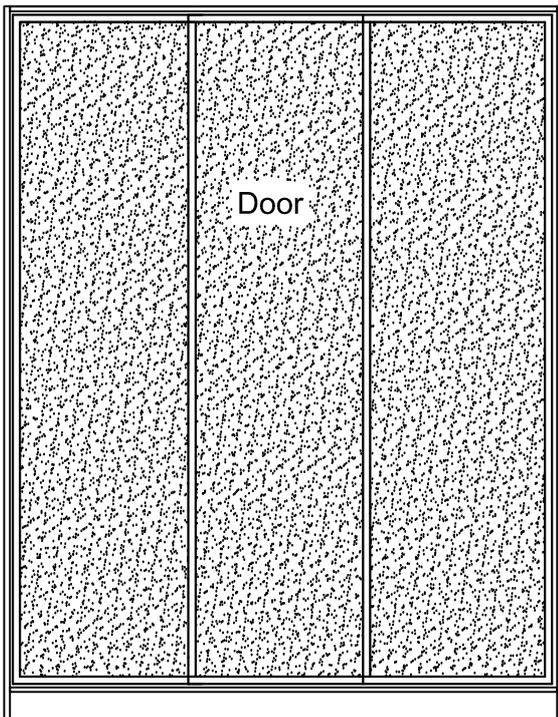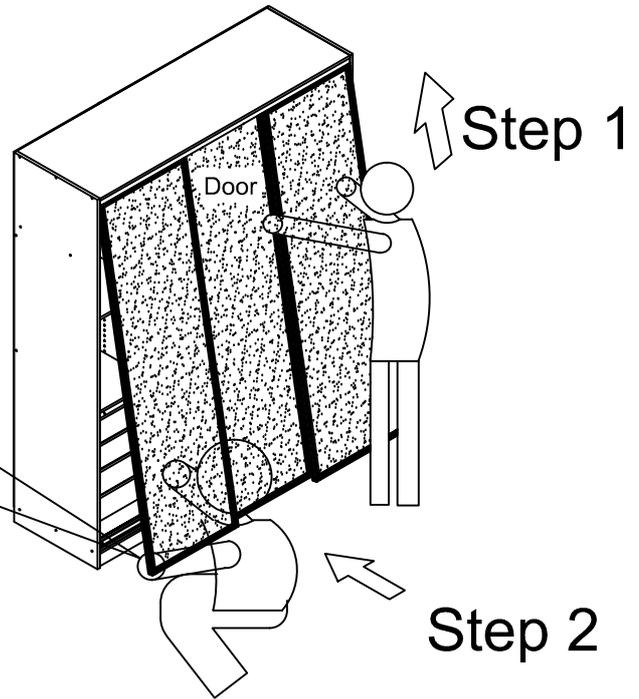



Normally the vertical edge of door should be aligned with the wardrobe side panel. Refer to below instruction if it's not.

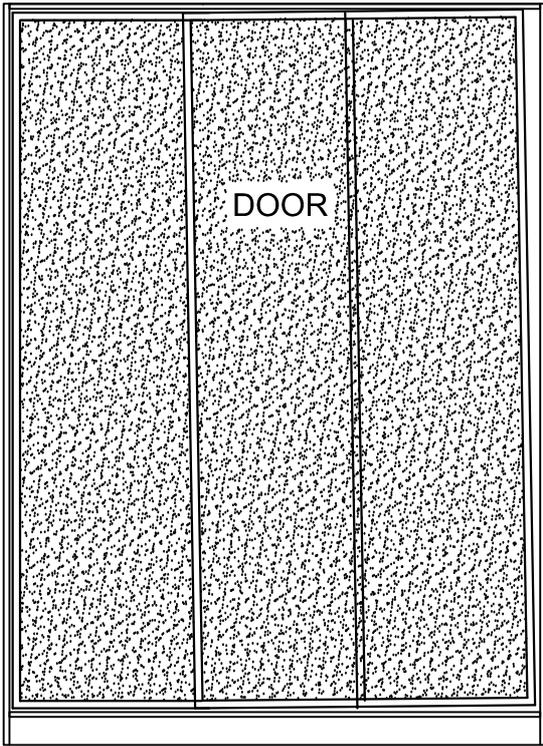


Condition

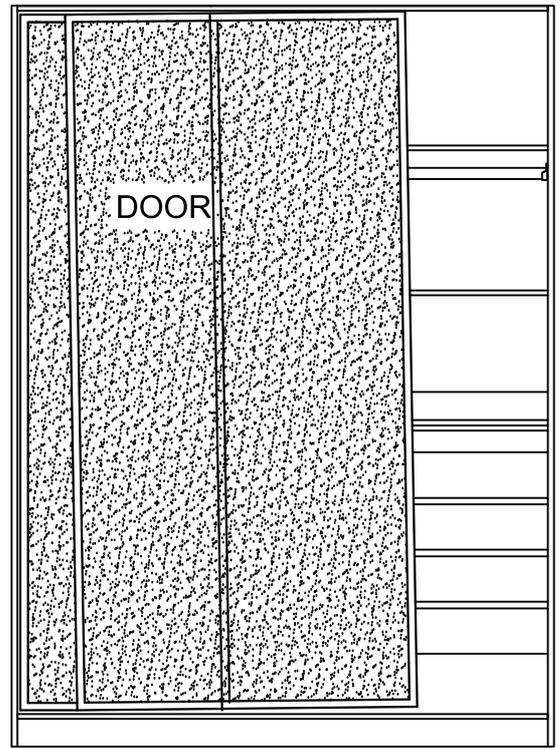


Move the tilted door to middle position.

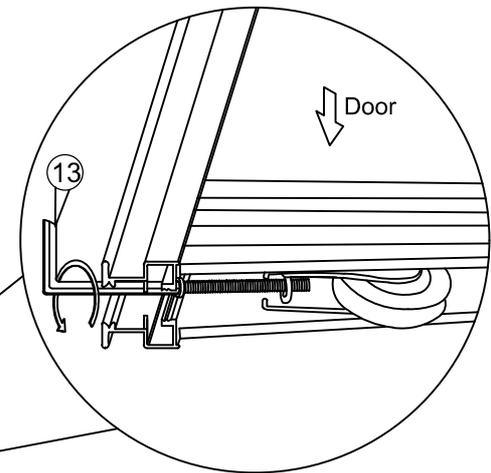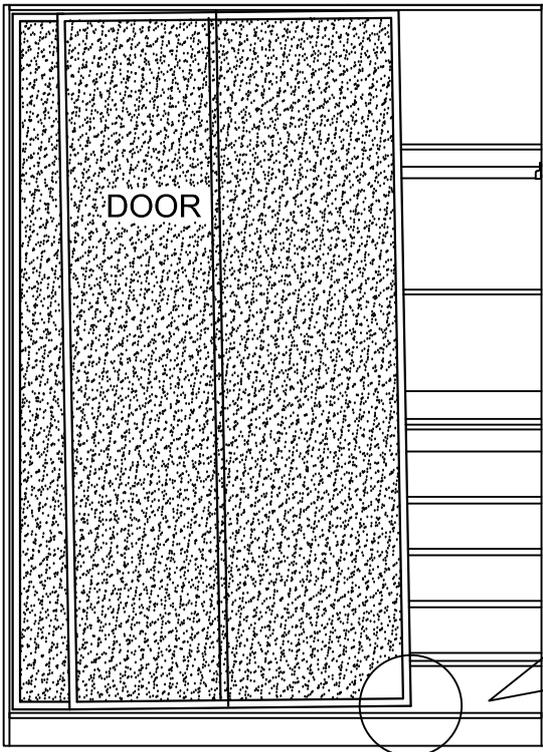



- \*Turn allen wrench anticlockwise a little and remove it.
- \*Slide the door to side end and check if it aligns with the side panel.
- \*You may repeat the procedure several times until the door is perfectly aligned.

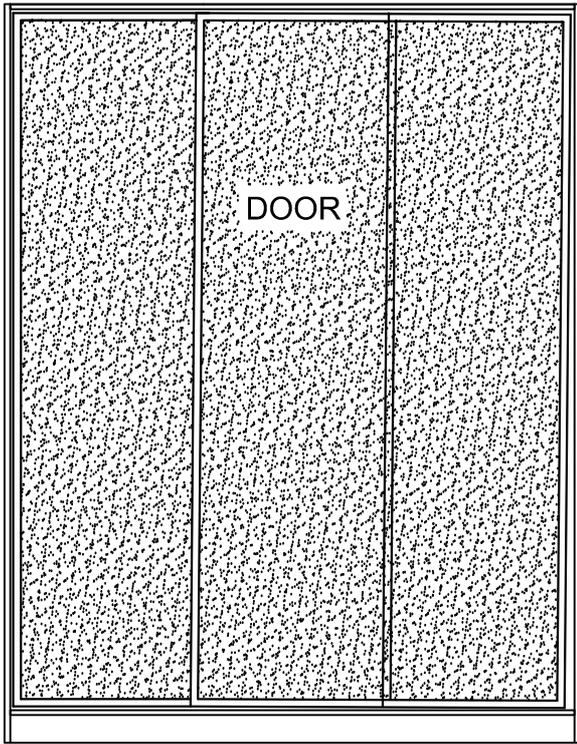


Condition

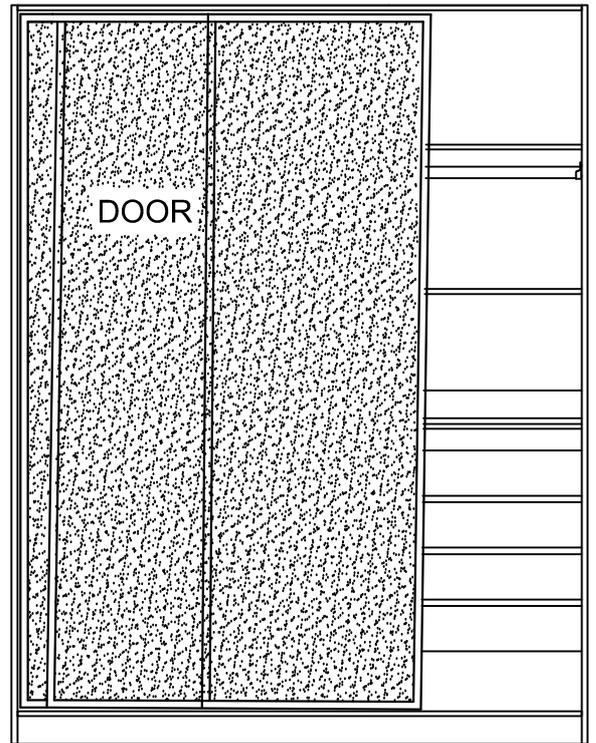






Move the tilted door to middle position.

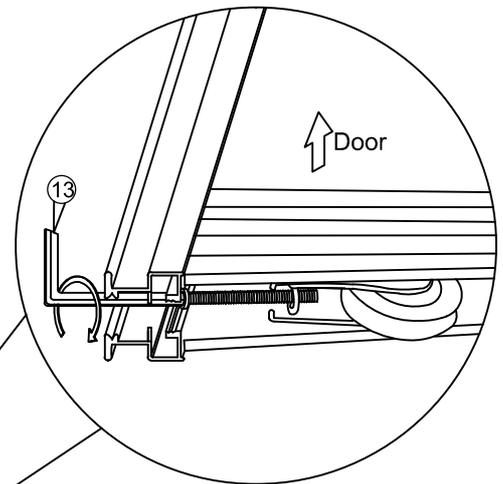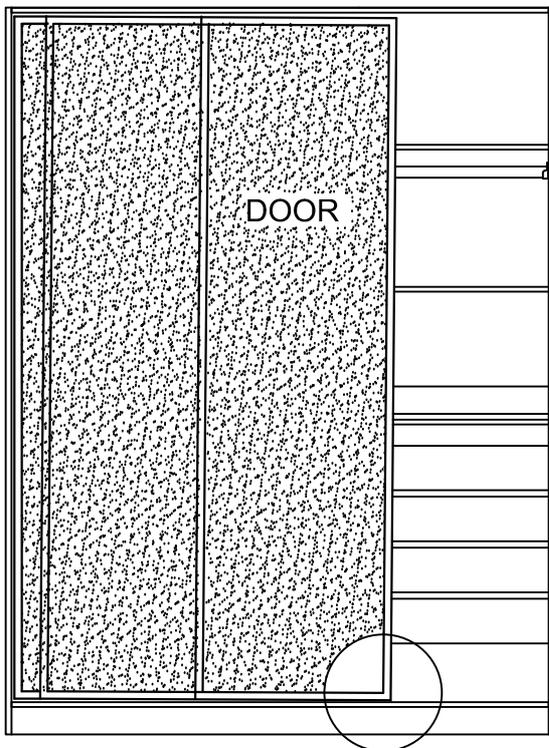

- \*Turn allen wrench clockwise a little and remove it.
- \*Slide the door to side end and check if it aligns with the side panel.
- \*You may repeat the procedure several times until the door is perfectly aligned.

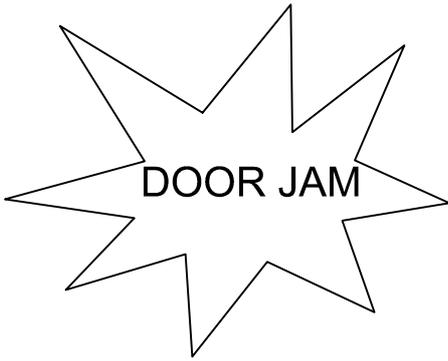

If a door jams against the rail, try re-tightening screws as follows( either on top or bottom rail).

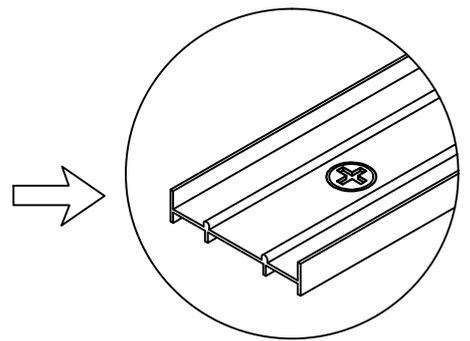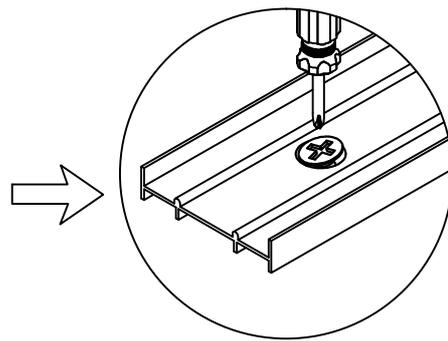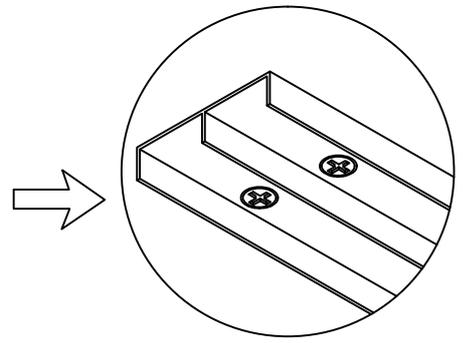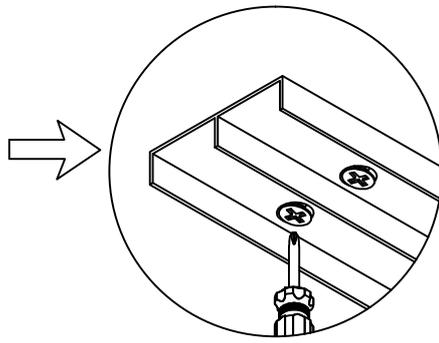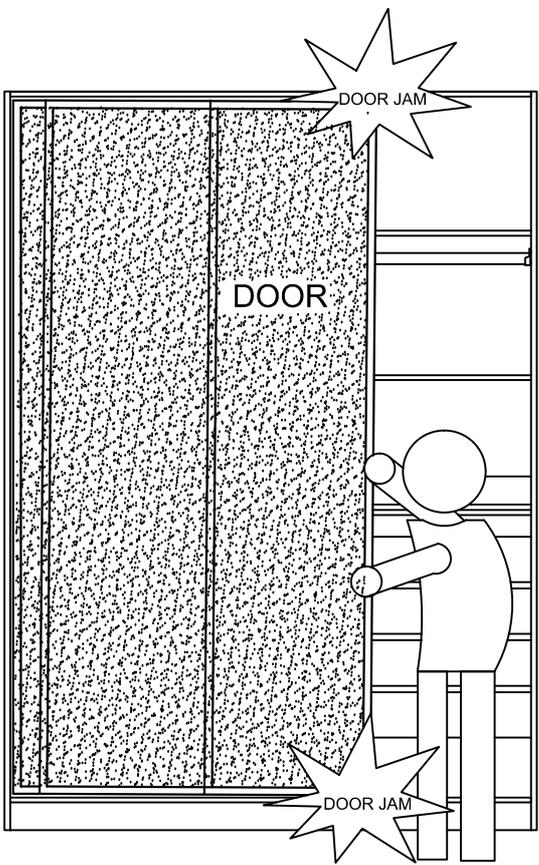



As our timber is supplied from sustainable forests there will be natural variations in surface texture and grain like knots, mineral streaks and sap runs that may affect the finish. These differences in character are not defects, but distinctions that make each piece of furniture unique

Our furniture is built to last. Following these steps for basic care should protect your investment for years to come

- Dust frequently with a clean damp lint-free cloth. This will help remove abrasive build up which can damage a finish over time
- Do not place hot objects on any furniture surface. Always use a hot plate or placemat. Laminate and lacquer finishes on table tops provide added scratch and heat resistance to our furniture, but they can still be damaged without proper care
- Avoid exposing your furniture to strong sunlight, heat outlet, open windows or dampness. Prolonged exposure to direct sunlight can fade the finish of your furniture, while extreme temperature and humidity changes can cause cracking or splitting
- Do not expose your furniture to any liquids. Never allow water to sit on your furniture. Alcohol, nail polish and perfume are also dangerous as they will dissolve the lacquer finish on contact and may require professional repairs
- Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of placemats etc. may soften and mark the finish if left in contact with the furniture for a period of time