




**ASSEMBLY INSTRUCTION  
CASSIDY QUEEN BED  
ITEM CODE 65782**

Imported by Amart Furniture Pty Ltd. Qld. Brisbane Australia.

For any assistance with assembly or for missing parts please phone

Amart Furniture, Customer Service Free call 1800 351 084

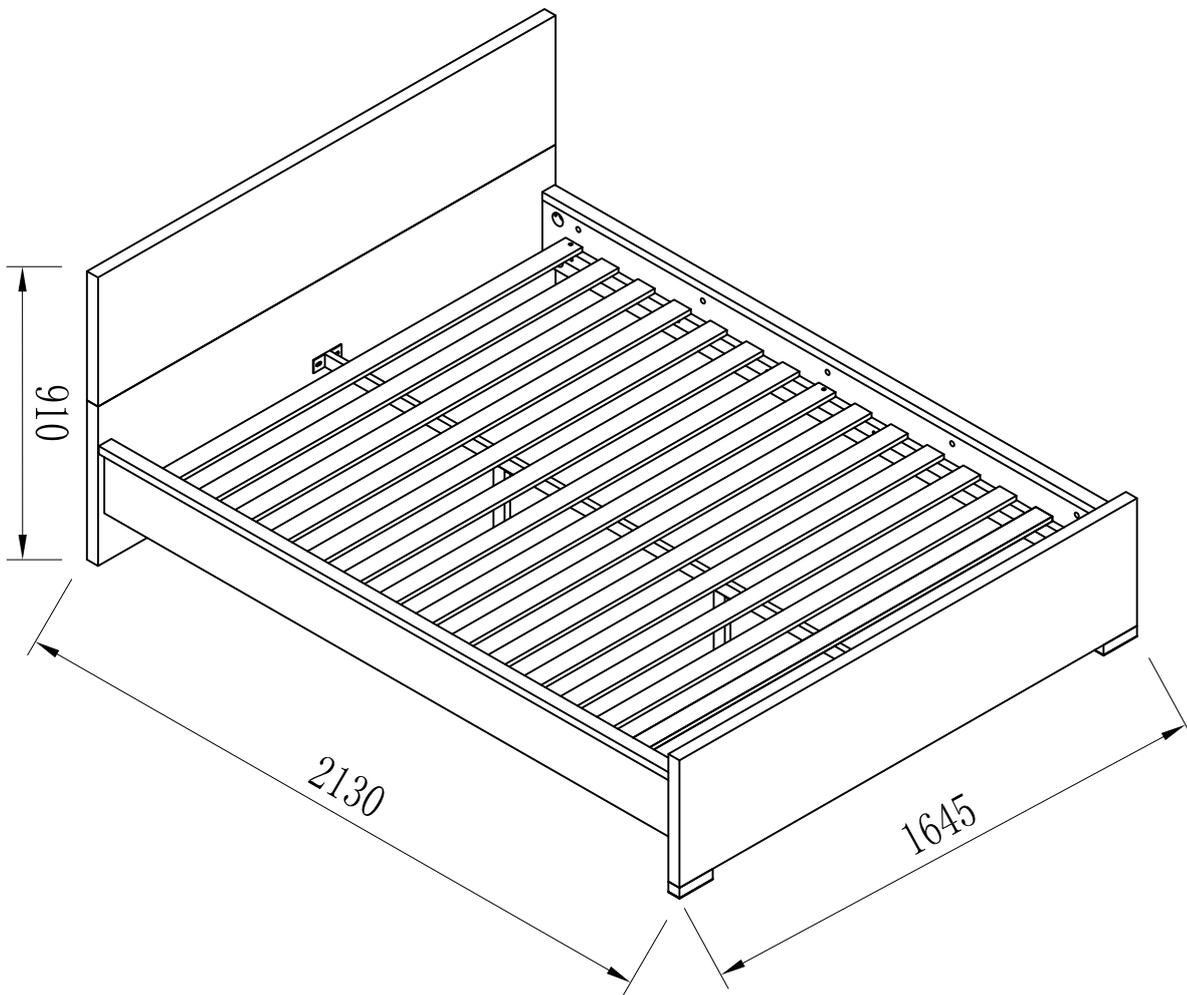



Imported by Amart Furniture Pty Ltd. Qld. Brisbane Australia.

For any assistance with assembly or for missing parts please phone Amart Furniture  
Customer Service Free call 1800 351 084

# PRE-ASSEMBLY PREPARATION

## Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

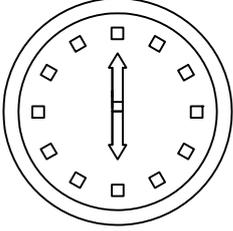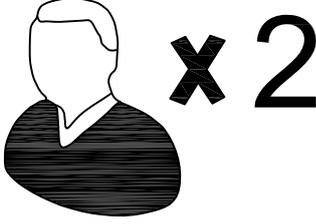 <p>ALLOW 30 MINUTES</p>	 <p>2 PEOPLE REQUIRED</p>
 <p>⊕</p> <p>ADDITIONAL TOOLS REQUIRED</p>	



# CAM Lock and Pins

## step 1

### HOW TO USE CAM LOCK FASTENERS

To assemble this product hardware called Cam Lock Fasteners are used. The below is information on how these work.

Cam Locks are fasteners used to join two boards together, usually the edge of one board(A) to the flat side of another board(B)

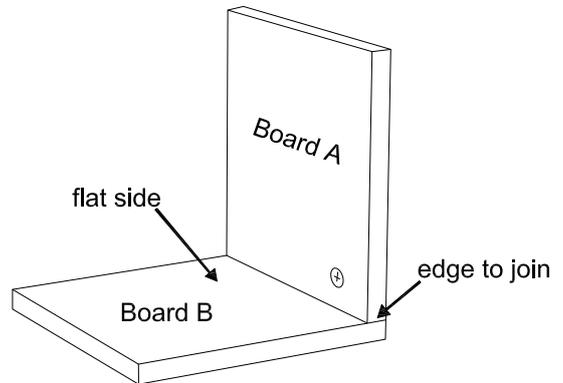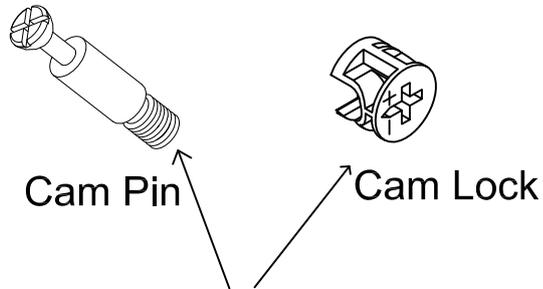


Ensure that you use the correct images that are representative of the hardware used in the product

## step 2

### To use Cam Lock Fasteners

The Cam Pin is inserted into the flat side of a board, it is important that:


- \* The cam pin is kept vertical and is not put in on an angle
- \* Cam Pin is inserted up to the collar
  - \* Too far and it wont catch the Cam Lock (Do not Over Tighten)
  - \* Not enough and the resulting product wont be stable

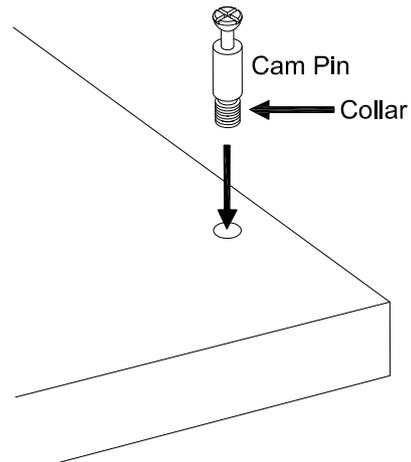

## step 3

### To use Cam Lock Fasteners

Now fit the hole in the edge of the joining board over the Cam Pin

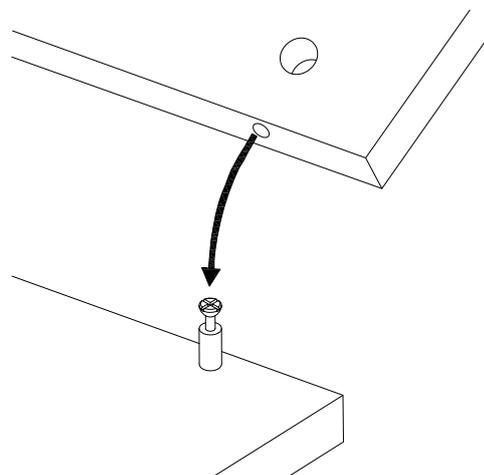


## step 4

### To use Cam Lock Fasteners

The Head of the Cam Pin will be visible in the large hole on the side of the joining board

head of the Cam Pin

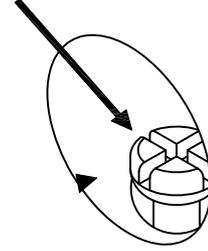

### To use Cam Lock Fasteners

Notice the Cam Lock has a "C" Shaped back An Arrow or +/- signs on the front, indicated the open section on the back of the Cam Pin



Cam Lock


## step 5

### To use Cam Lock Fasteners

In sert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin. You must ensure that the Cam Lock is pushed to the bottom of the hole to catch the top of the Cam Pin

Arrow or +/- signs

head of the Cam Pin

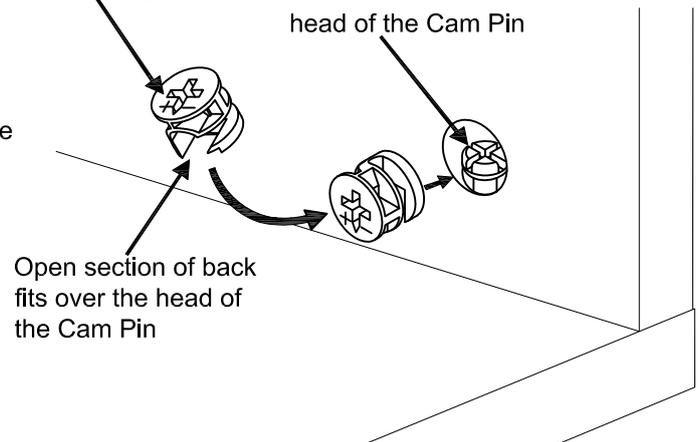


Open section of back fits over the head of the Cam Pin


## step 6

### To use Cam Lock Fasteners















Use a flat screwdriver to turn the Cam Lock clockwise one half a turn so it Locks onto the head of the Cam Pin. Turn only until it is snug-over-tightening could cause the Cam to bend or break. If it will not turn the full amount, turn the Cam Pin out (counter-clockwise) one full turn, and try the Cam Lock again.

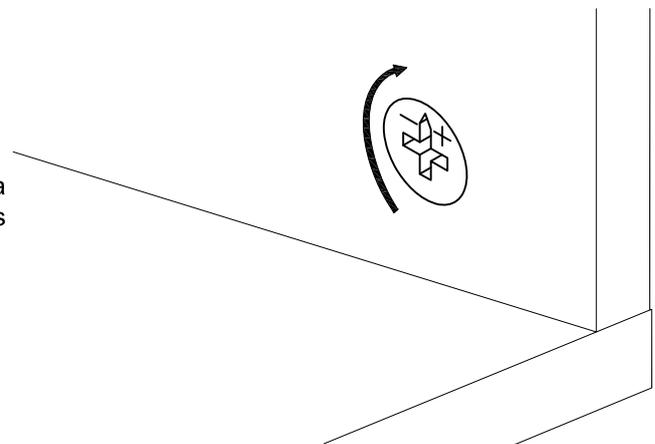

# PARTS LIST

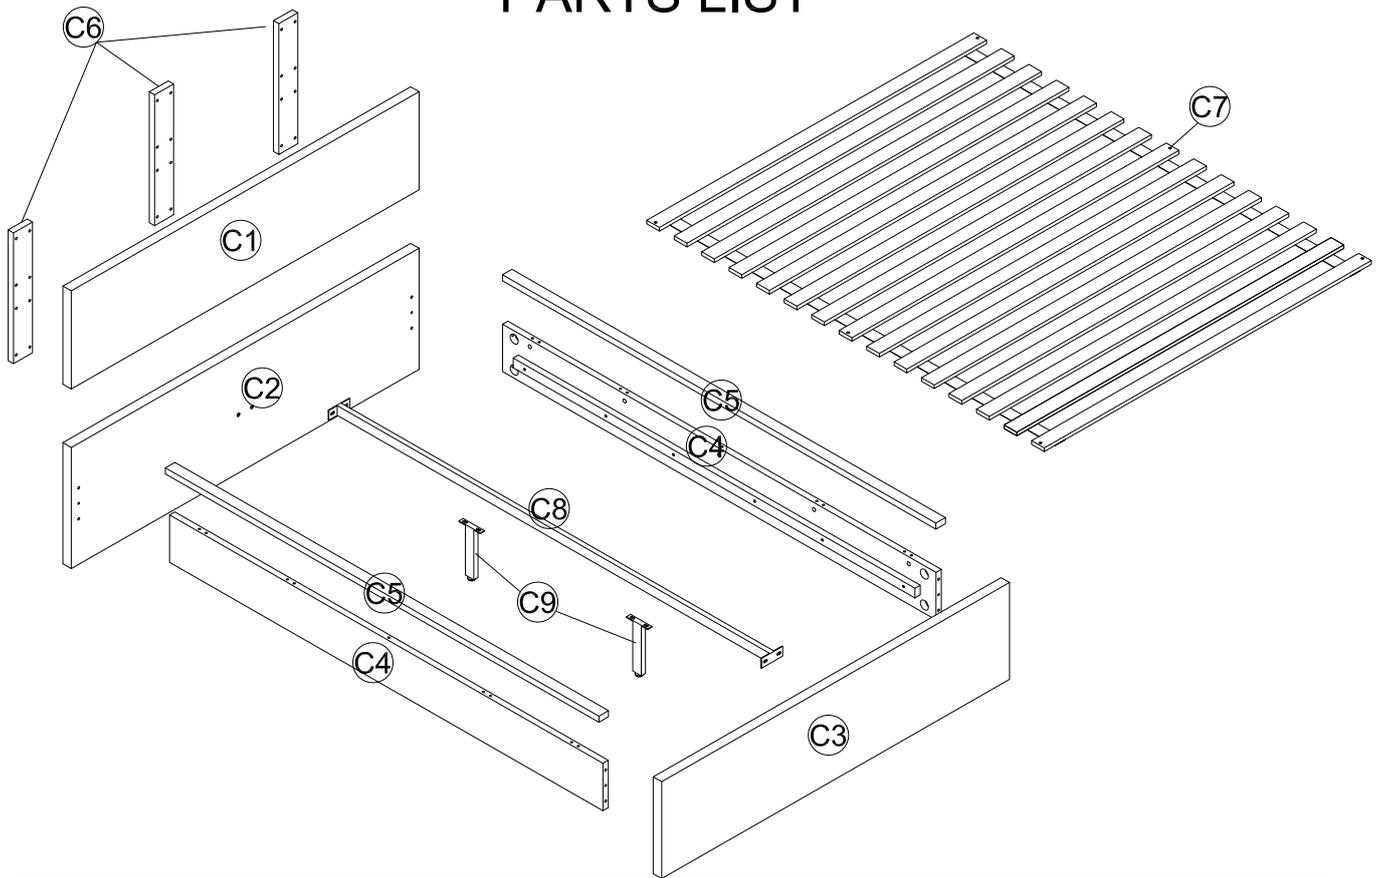


C1	Headboard Top Panel
C2	Headboard Bottom Panel
C3	Footboard
C4	Side rail
C5	Side Rail Top Panel
C6	Headboard Support Rail
C7	Slats(1847x1880x15mm)
C8	Centre rail
C9	Centre support leg

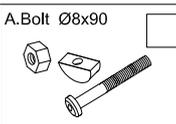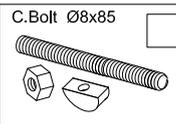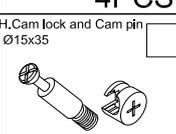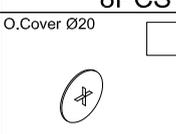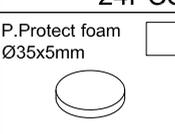
 4PCS	 12PCS	 4PCS	 8PCS	 24PCS	 6PCS	 4PCS
 8PCS	 24PCS	 5mm 1PCE	 4mm 1PCE	 1PCE	 8PCS	 2PCS
 8PCS	 3PCS	 1PC				

**65782**


Step 1. Use a Hex Key (K) to insert the Headboard Support Rail (C6) to the Headboard Top Panel (C1) and Headboard Bottom Panel (C2) with Bolt (E) and Washer (I). Insert the Bolt (C) to the Footboard (C3). Use a Phillips Head Screwdriver to assemble the Leg (N) to the Footboard (C3) with Screw (G). Insert the Cover (N) to the Leg (N).

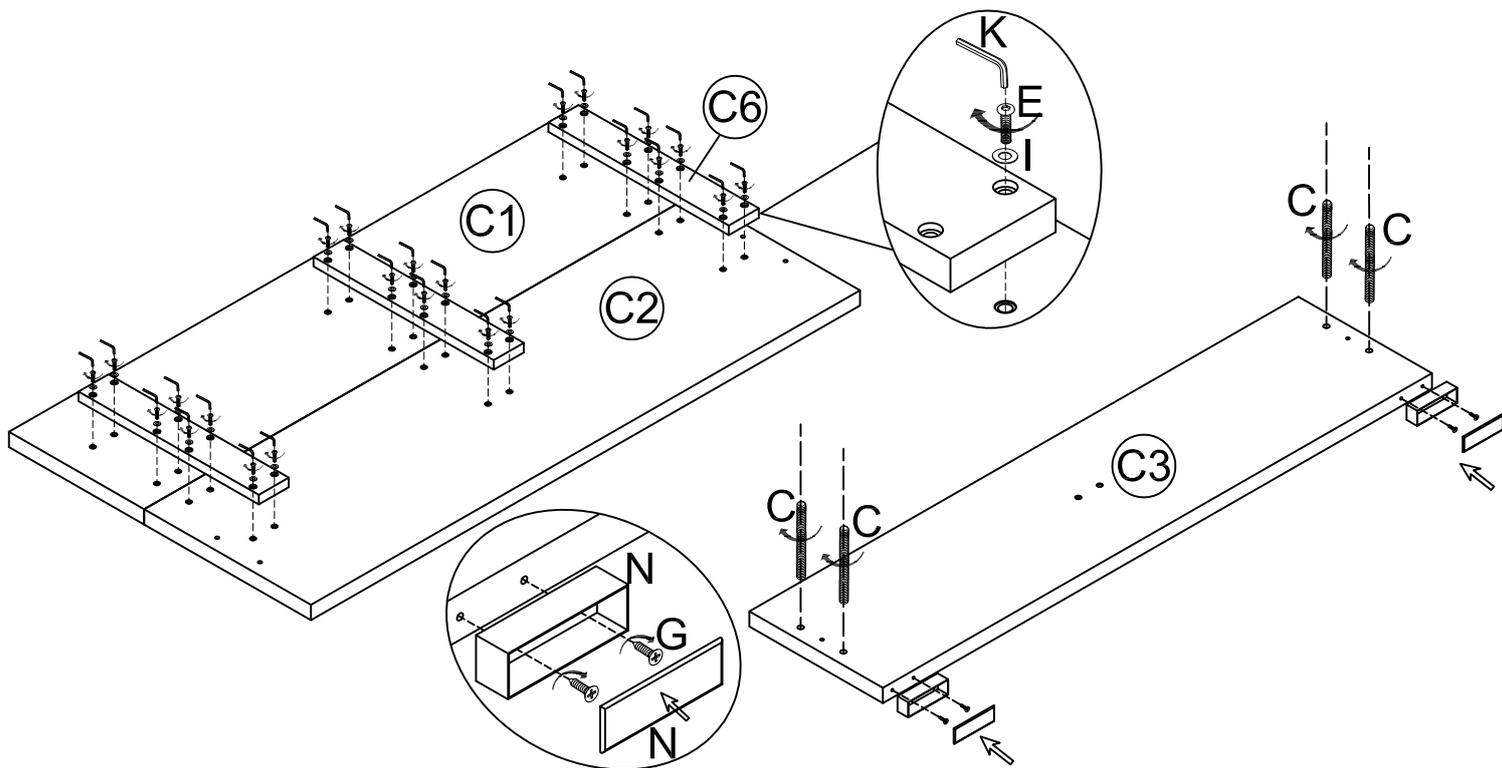


STEP 2: Insert the Dowel (B) to the Side Rail (C4). Use a Phillips Head Screwdriver to Insert the Cam Pin (A) to the Side Rail Top Panel (C5). Use a Phillips Head Screwdriver to turn the Cam Lock (A) to Cam Pin (A).

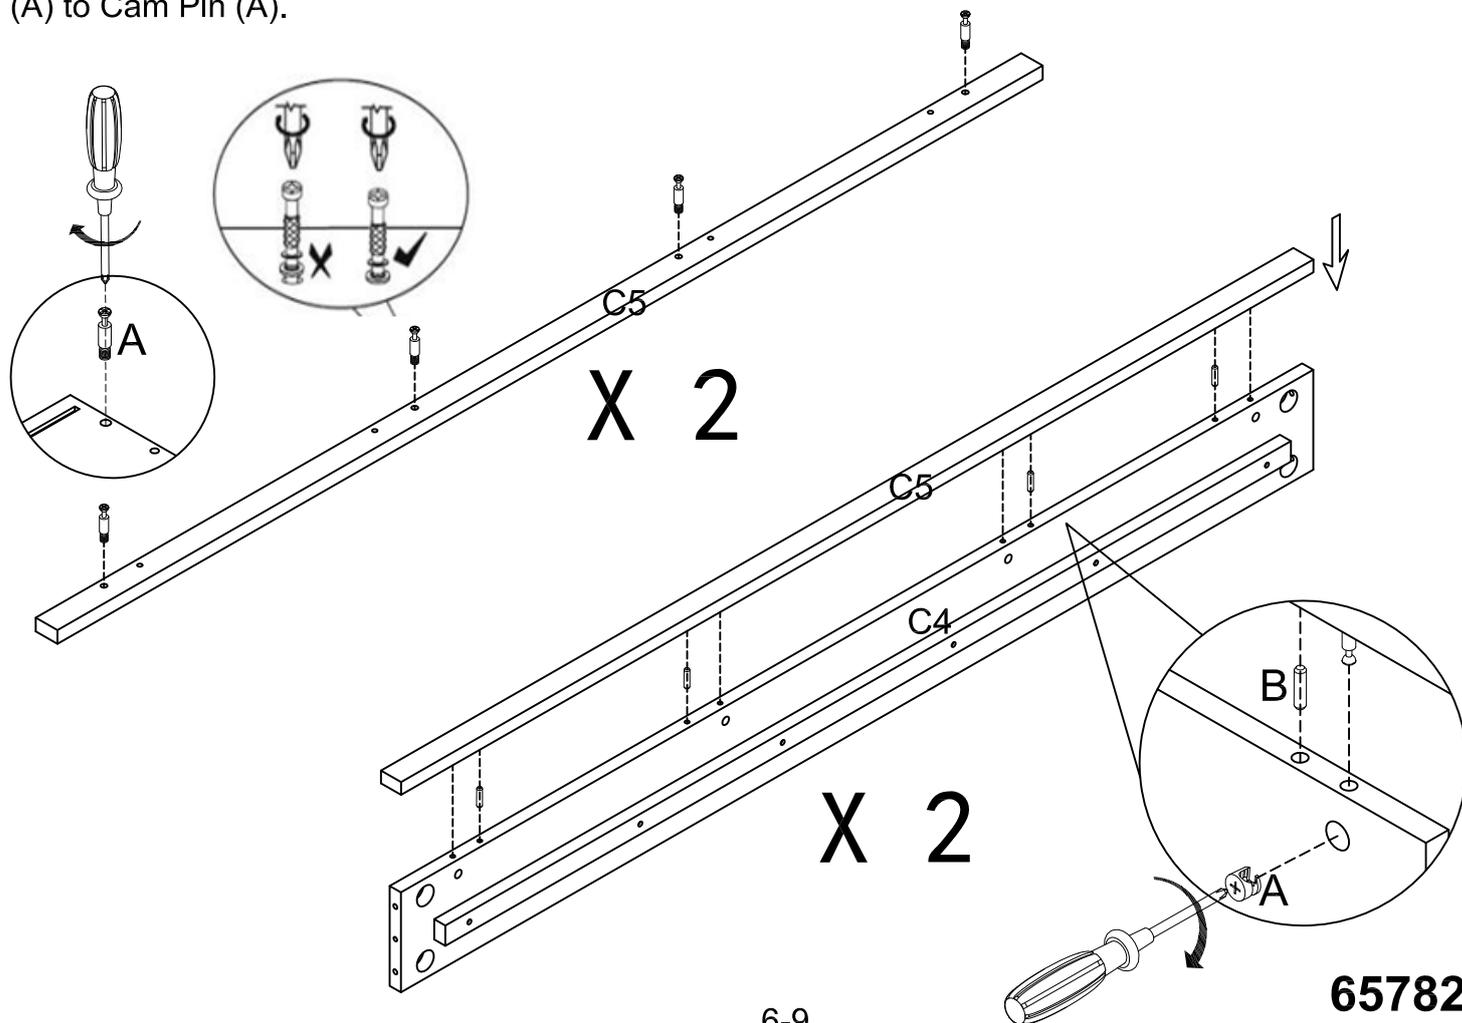


STEP 3: Insert the dowels(B) into the Top Bottom Panel (C2).Use a Hex Key (J) to assemble the Side Rail (C4) to the Headboard Bottom Panel (C2) with Bolt (A).Insert the Dowel (B) to the Footboard (C3).Use a Wrench (L) to assembl the Side Rail (C4) to the Footboard (C3) with Bolt (C). then Insert the Cover (M) to the Side Rail (C4).

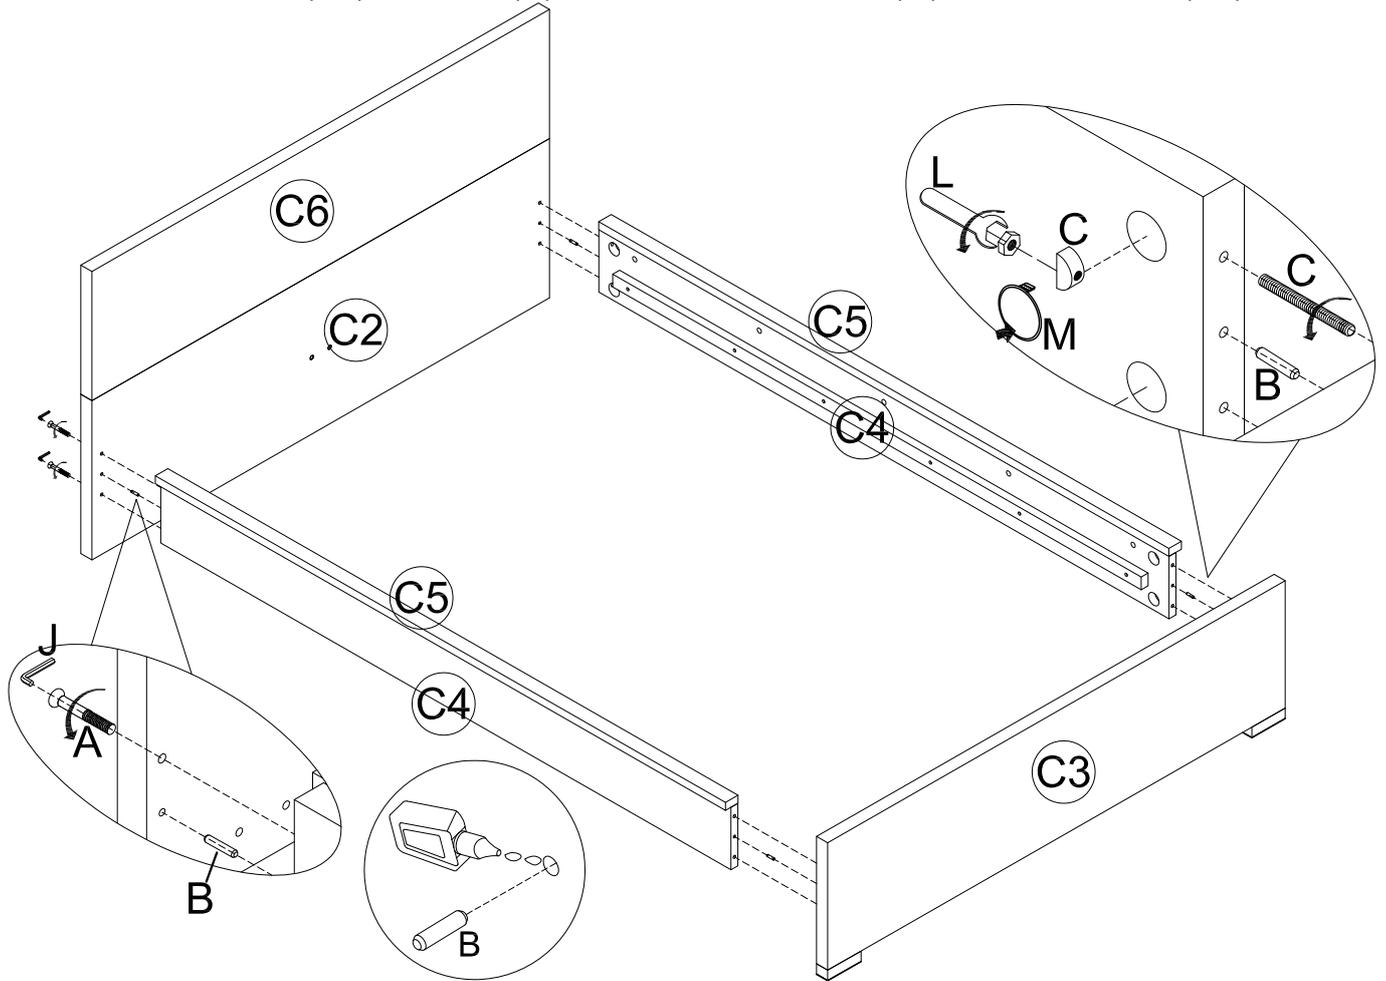


STEP 4: Use Hex Key(K) to tighten Centre Support Leg (C9) to the Centre Rail (C8)with Bolt (D)

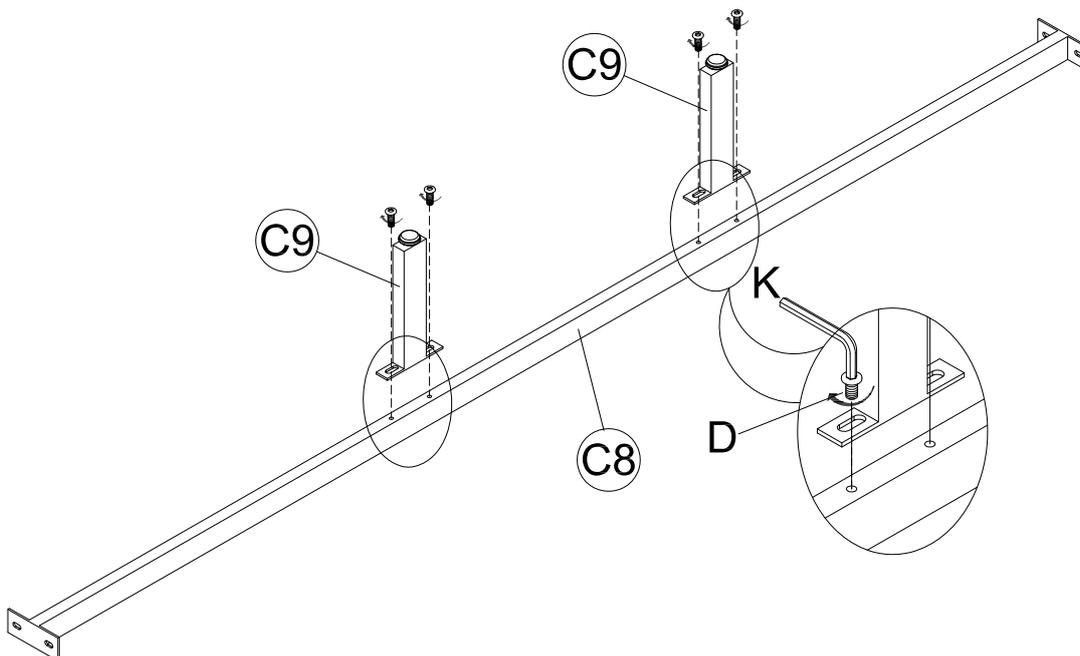


STEP 5: Use Hex Key (K) to tighten Centre Rail (C8) to the Headboard Bottom Panel (C2) and Footboard Panel (C3) with Bolt (D).

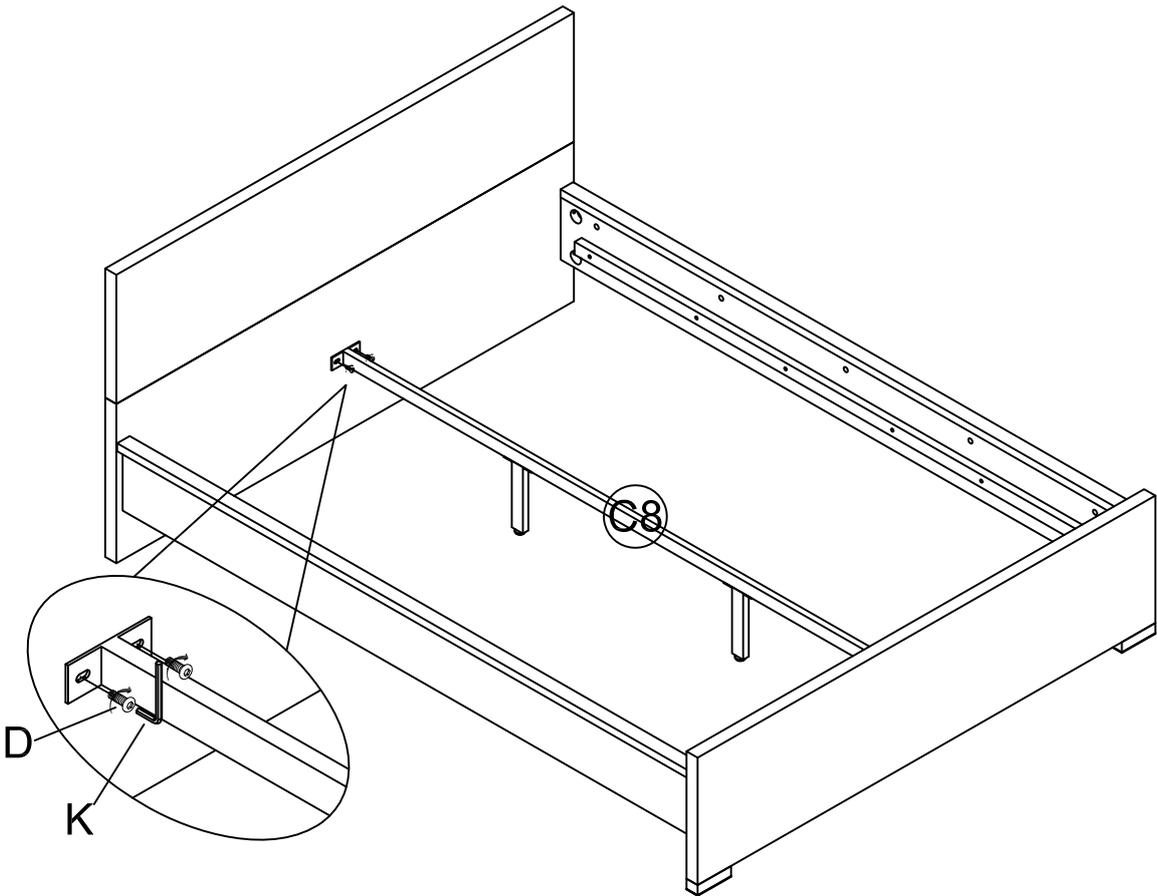

STEP 6: Use a Phillips Head Screwdriver to tighten the Slat (C7) to the Side Rail (C4) with Screw(F).

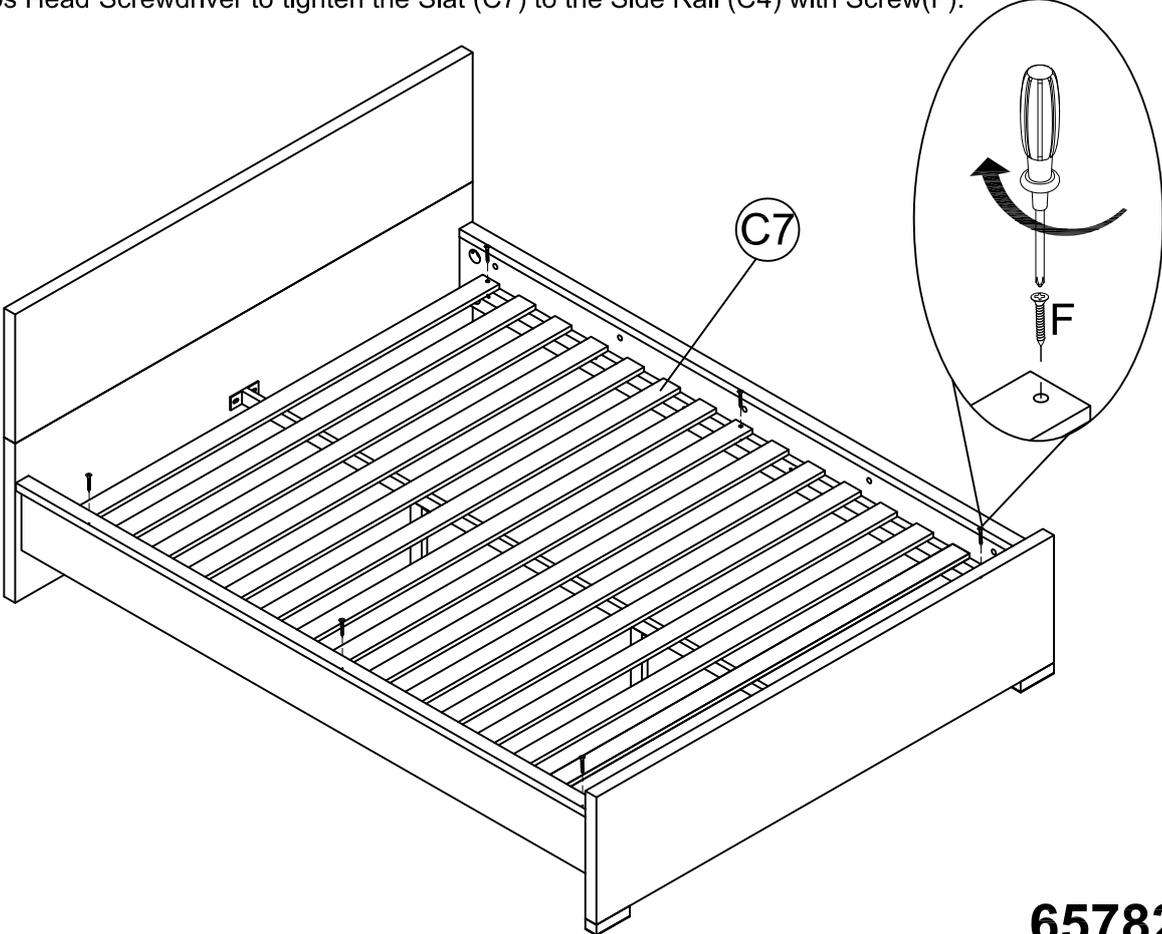

# Assembly is complete

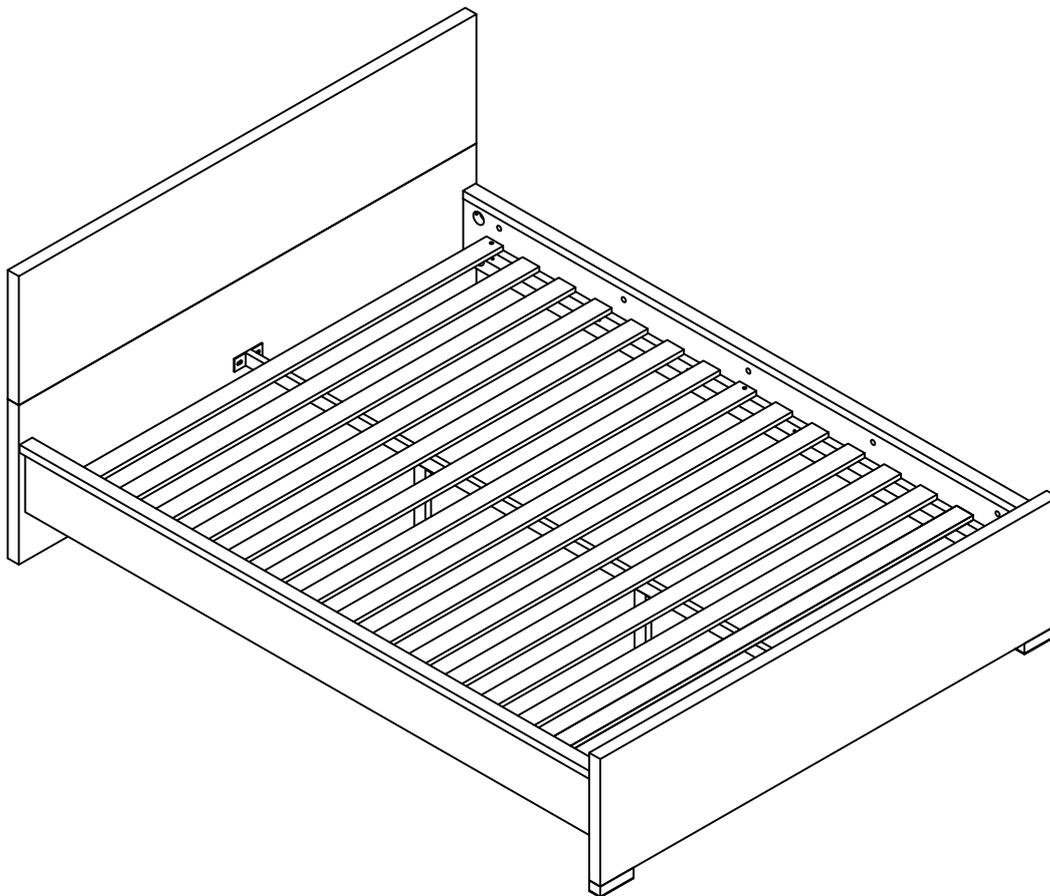

**IMPORTANTNOTE:**

Once the bed is positioned and the support legs are adjusted to touch floor , the slats can then be laid down and secured before putting on the mattress. DO NOT push or pull the bed if there is a need for re-positioning as this may result in broken support legs for the centre rail.

## **IMPORTANT: CARE GUIDE FOR YOUR HI-GLOSS FURNITURE**

*Congratulations! You have just purchased a quality product from Super Amart, Australia's largest discount furniture retail store. Please read on for important information regarding your purchase...*

Hi-gloss lacquered furniture is more sensitive to marks and scratching than some other furniture products. It is important to exercise caution and care to maximise the life and beauty of this product.

Following the below simple guidelines when using your hi-gloss product will protect your investment for years to come:

- Dust frequently with a clean damp, lint-free cloth. This will help remove abrasive build up which can damage a finish over time.
- Avoid using chemicals or solvents when cleaning the product.
- Do not place hot objects on any furniture surface. Always use a hot plate or placemat. Lacquer finishes provide added scratch and heat resistance to our furniture, but they can still be damaged without proper care.
- Avoid exposing your furniture to strong sunlight. Prolonged exposure to direct sunlight can fade the finish of your furniture.
- Do not expose your furniture to any liquids. Avoid allowing water to sit on your furniture. Alcohol, nail polish and perfume are particularly harmful as they will dissolve the lacquer finish on contact.
- Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of some placemats etc may soften and mark the finish if left in contact with the furniture for a period of time.
- Avoid placing sharp or rough objects on the surface of your furniture. These may scratch the surface of the product.
- When moving your furniture, do not drag it across the floor. This may damage the product. Instead use two people to lift carefully with caution from either end.