
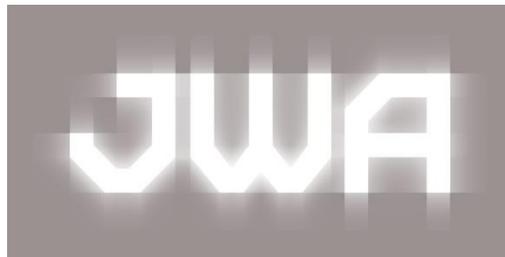


ASSEMBLY INSTRUCTION

ALCOY

DESK

ITEM CODE 68425



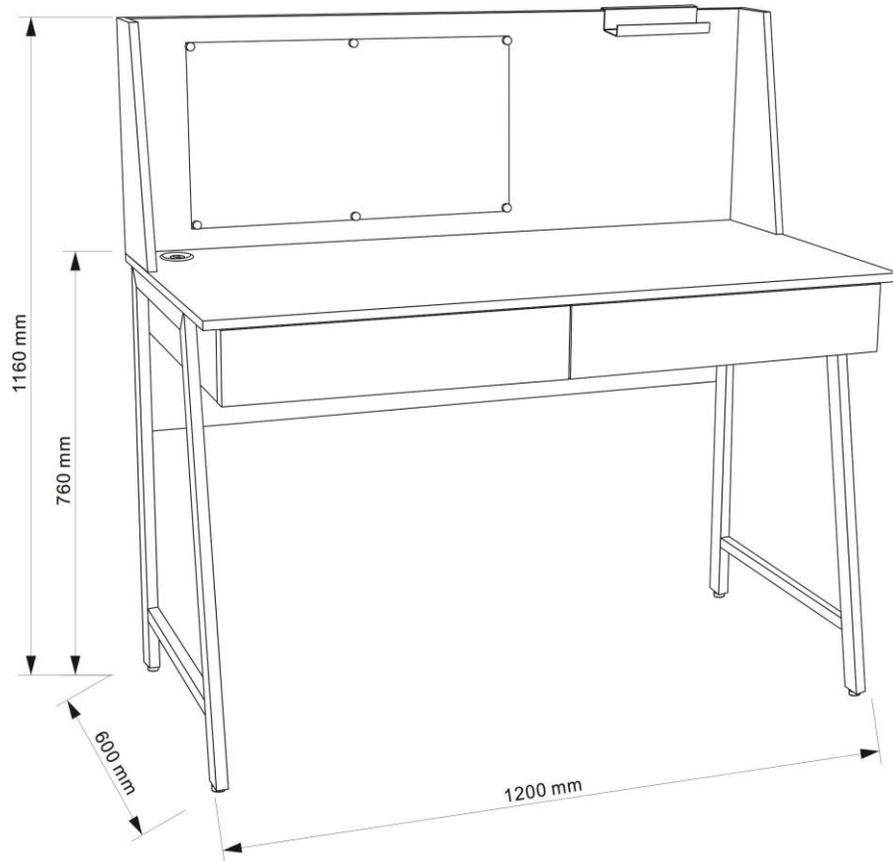


Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please refer to your receipt

PRE-ASSEMBLY PREPARATION

Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

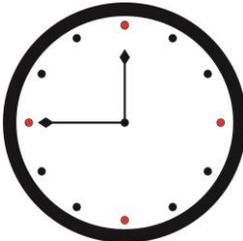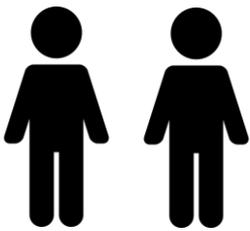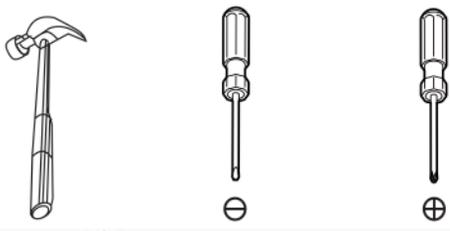		
Allow 45 min	For 2 person	Additional tools required

 **TIPPING WARNING** 



Serious or fatal injuries may occur from furniture toppling over. To help avoid this please follow the below recommendations:

- Install the provided "Tipping Kit" as per the instructions
- Never allow children to climb on or hang off of any part of this product
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product

If this product has drawers:


- Place the heaviest items in lowest drawers
- Do not open more than 1 drawer at a time as this may cause the product to become unbalanced
- Do not tamper with or remove any drawer interlocking/running system

Note: The use of the provided "Tipping Kit" may reduce but not necessarily eliminate the risk of furniture toppling over. Please use this product with caution.

This is a permanent label. Do not attempt to remove!

PARTS LIST

A  29pcs	B  M6X50mm 6pcs	C  ST5X50mm 18pcs	D  8X30mm 6pcs	E  E2 E1 4pcs
F  ST3.5X12mm 24pcs	G  G1 G2 6pcs	H  1pc	I  1pc	J  4pcs
K  ST4X25mm 2pcs	L  2pcs	M  2pcs		

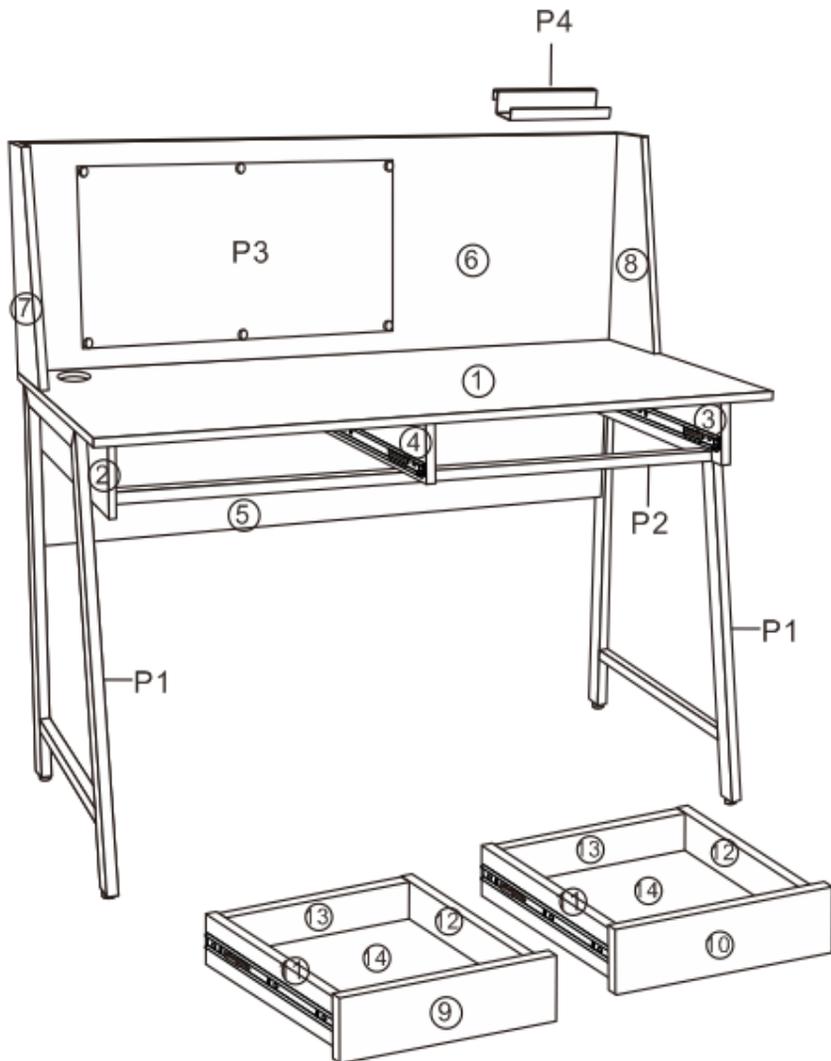




1	Desktop panel
2	Left side panel
3	Right side panel
4	Middle panel
5	Back panel

6	Back panel
7	Left side panel
8	Right side panel
9	Drawer left side panel
10	Drawer right side panel

11	Drawer left side panel
12	Drawer right side panel
13	Drawer back panel
14	Drawer bottom panel


P1	Main metal frame
P2	Connection pipe
P3	Back panel paster
P4	Paster

CAM LOCK INSTALL METHOD AS FOLLOWS

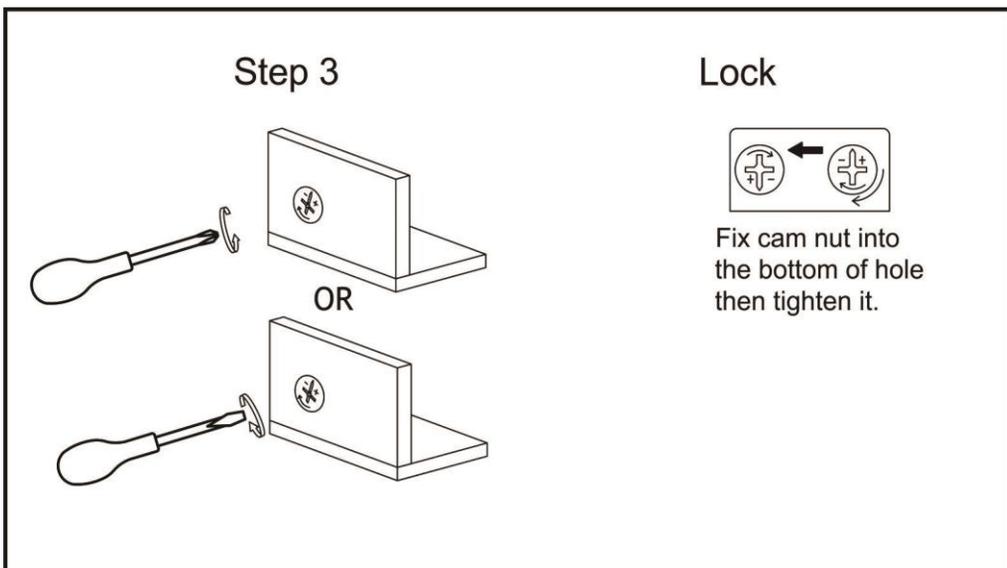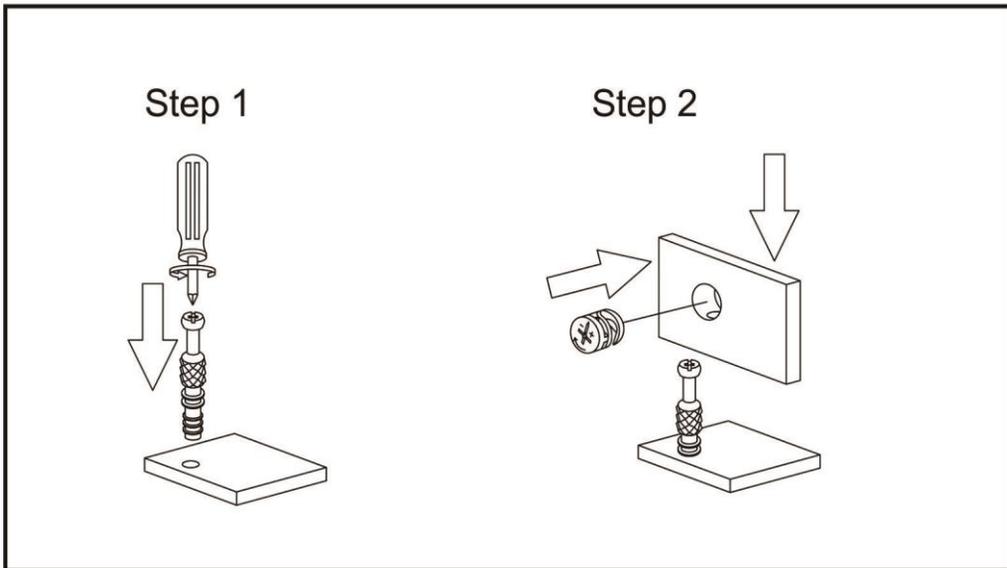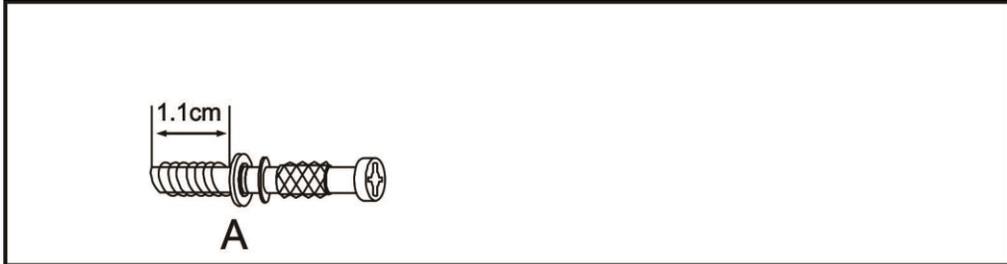


STEP 1:

Load fitting J into the bottom of metal frame P1.

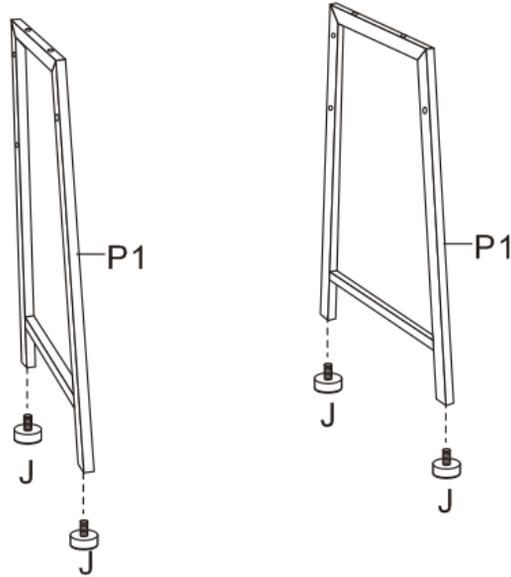

STEP 2:

Press the plastic clasp in the fitting E2 and disassemble E1 and E2.

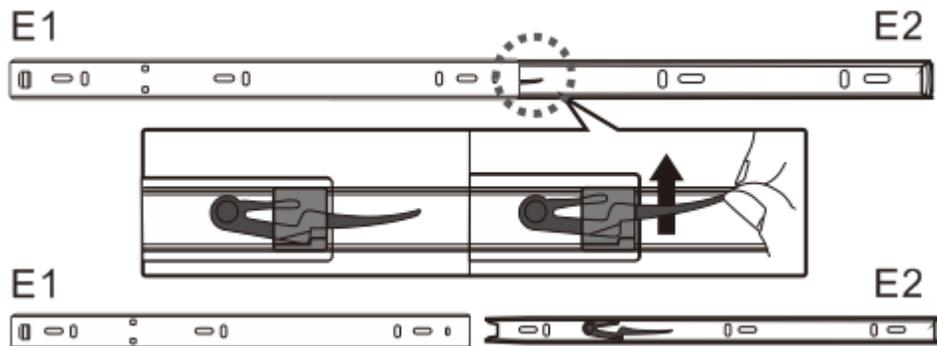


STEP 3:

Use fitting F to fix E1 on the orifice position of panel 2 and panel 3 respectively.




STEP 4:

Fix E1 on the front and back side of panel 4 with fitting F.

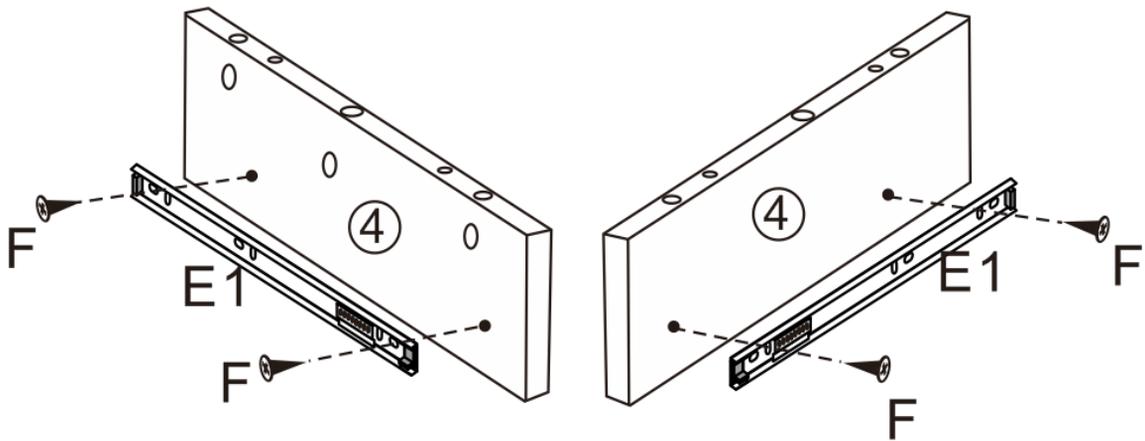


STEP 5:

Fix panel 2, 3, 4 and panel 5 on panel 1 with fittings A and D, pay attention to the direction of the panel.

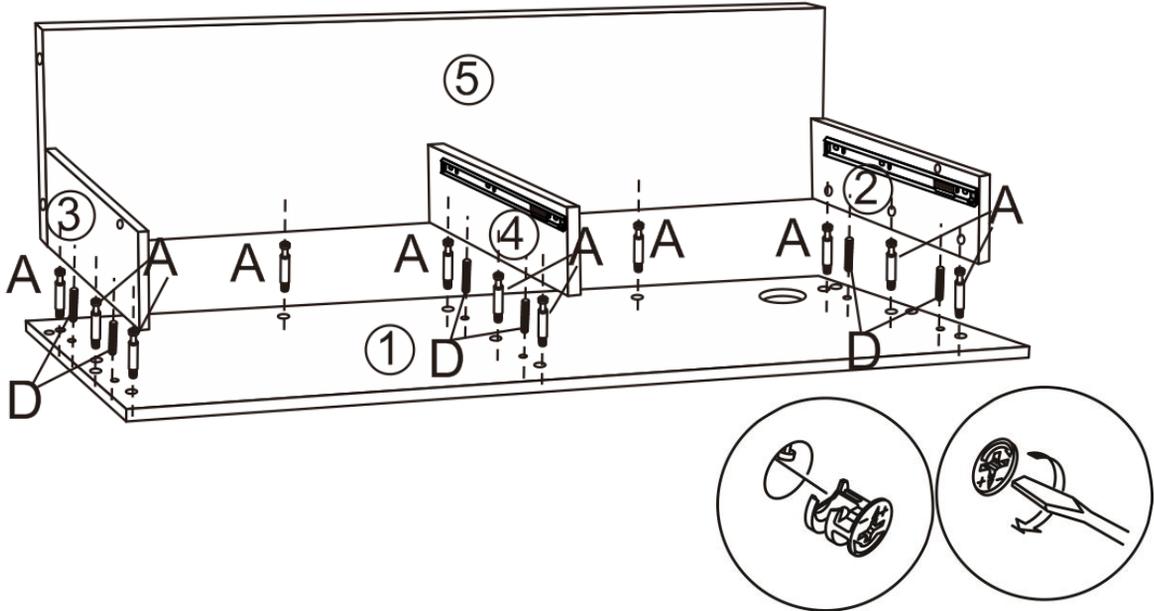


STEP 6:

Pass through the matching hole of panel 5 with fitting C, and fix panel 2, 3 and 4 on panel 5.

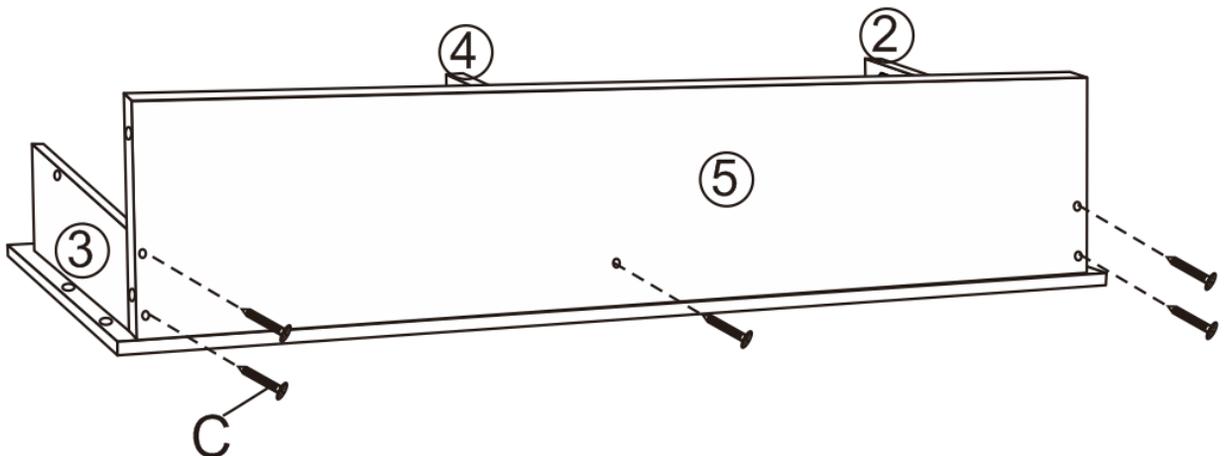


STEP 7:

Fix the metal frame P1 on panel 1 with fitting B, and fix the metal frame P1 on panel 5 with fitting C.

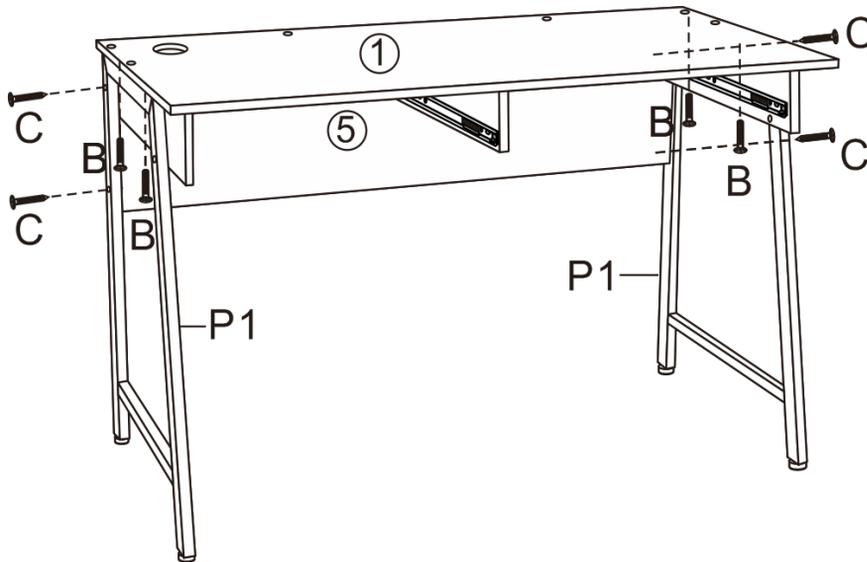


STEP 8:

Pass through the metal frame P1 with fitting B, fix the metal pipe P2 on panel 2 and panel 3, and fix the middle part on the bottom of panel 4 with fitting C.

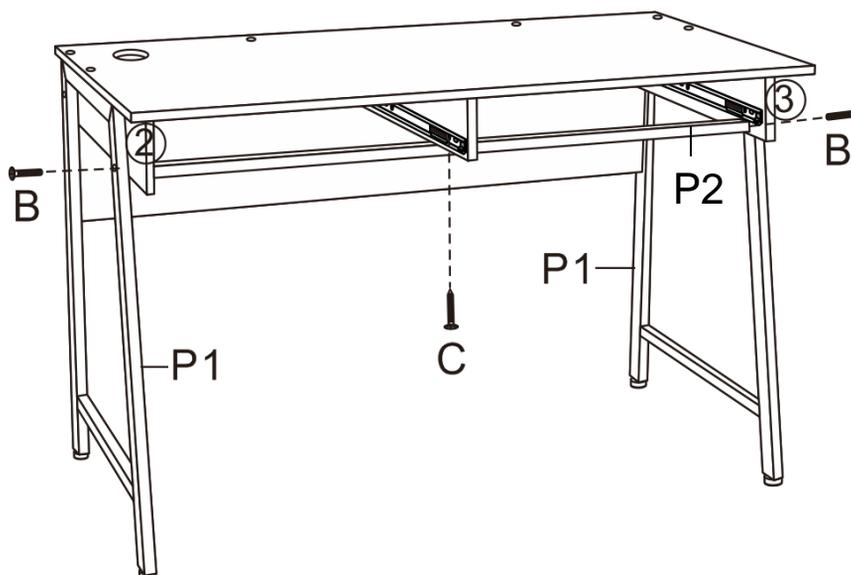


STEP 9:

Connect panel 7, 8 and 6 with fitting A.

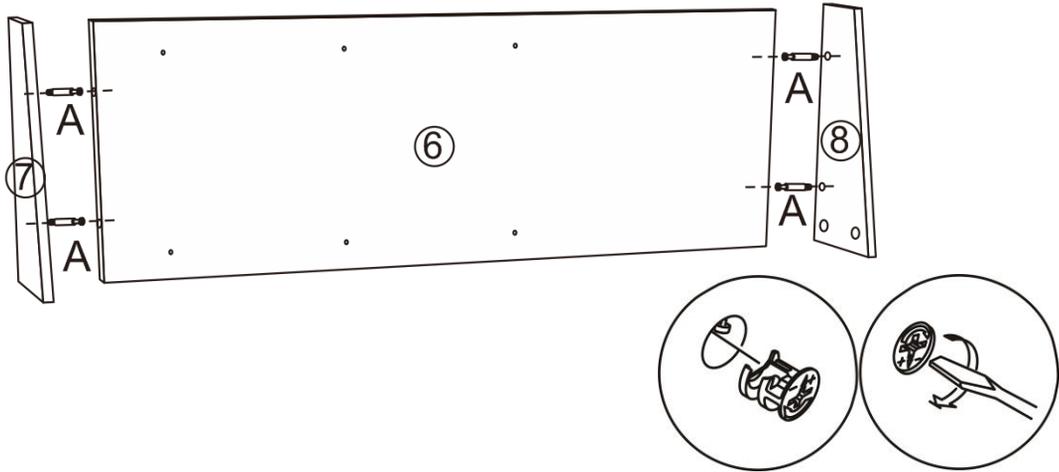


STEP 10:

Fix the assembled panel components of 6, 7, 8 on panel 1 with fitting A.

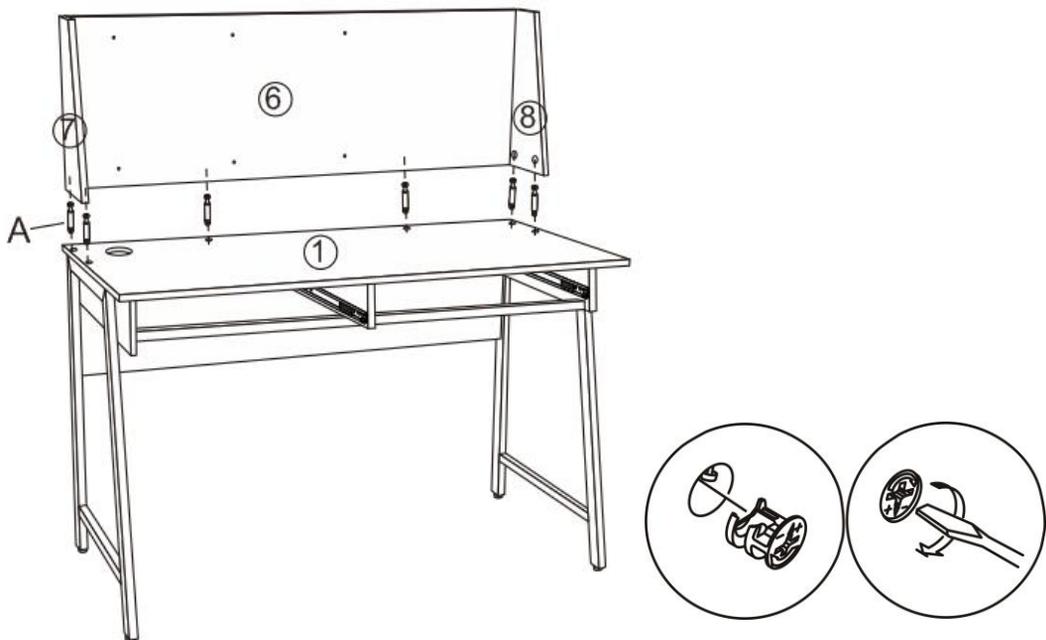


STEP 11:

Use fitting F to fix metal plates G1 and P3 of accessories on the positioning guide hole of panel 6, and finally cover with G2 decorative cover.

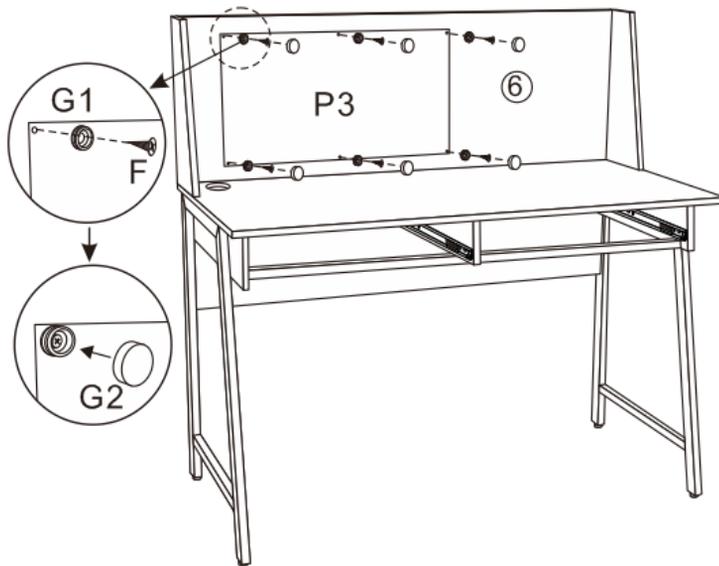


STEP 12:

- 1) Fix panel 11 and panel 12 on panel 13 with fitting C;
- 2) The wood grain of panel 14 shall be faced up, and corresponding slots of panel 11 and panel 12 shall be loaded;
- 3) Fix panels 9 and 10 to panels 11 and 12 with fitting A.

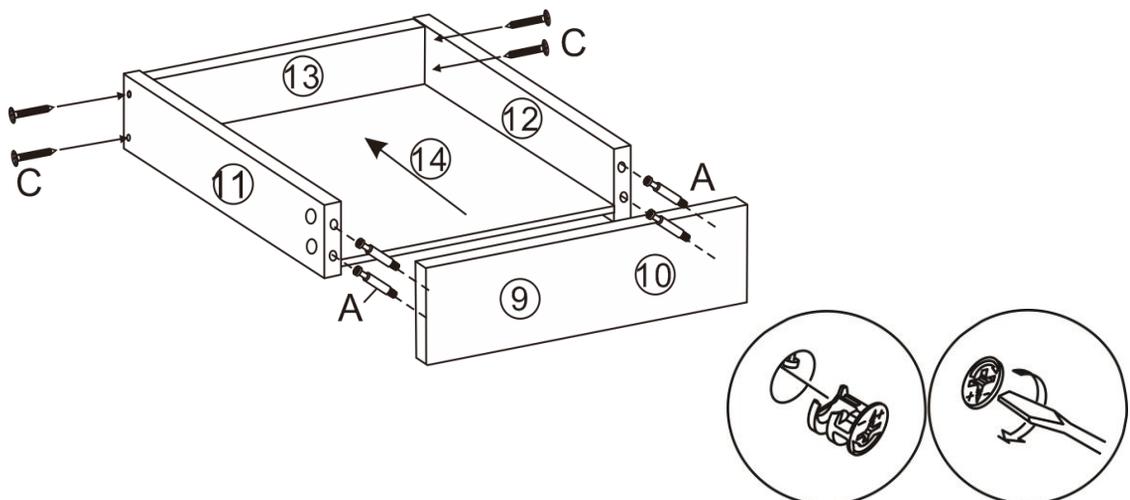


STEP 13:

Fix E2 on panel 11 and panel 12 with fitting F.

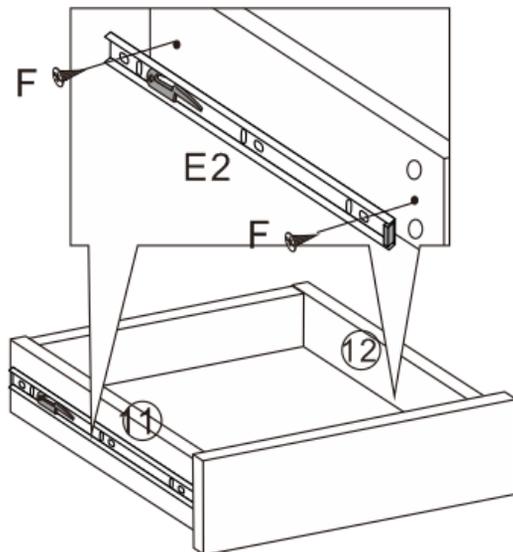


STEP 14:

Load the assembled drawer 9 assembly and drawer 10 assembly into the corresponding position of the main body.

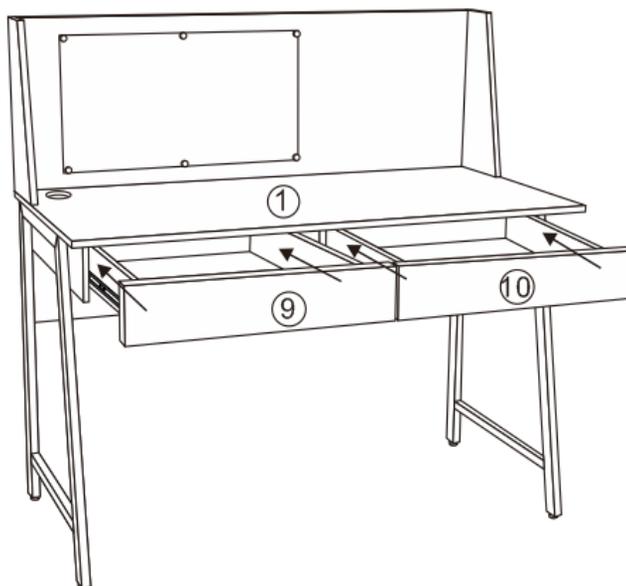


STEP 15:

Load fittings H and I into corresponding parts respectively.
Install a fall preventer.

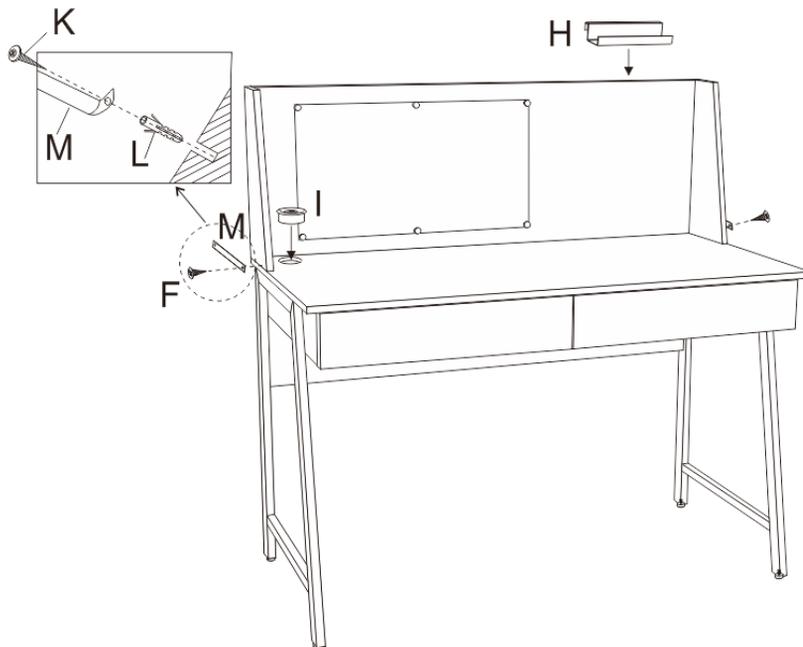


ASSEMBLY IS COMPLETE

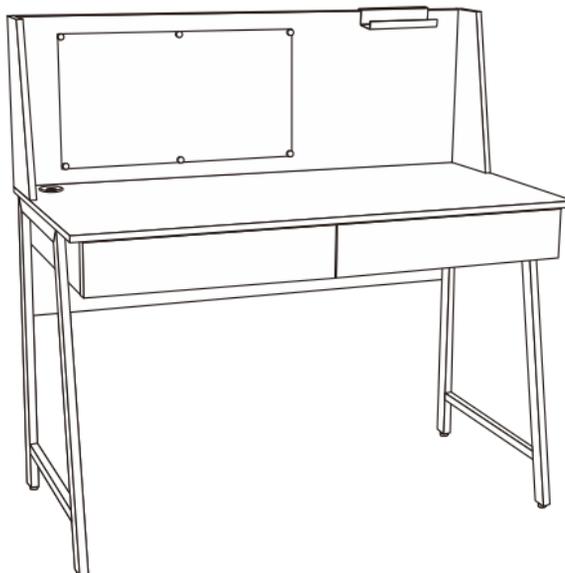

SAFETY BRACKETS INSTRUCTIONS

1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

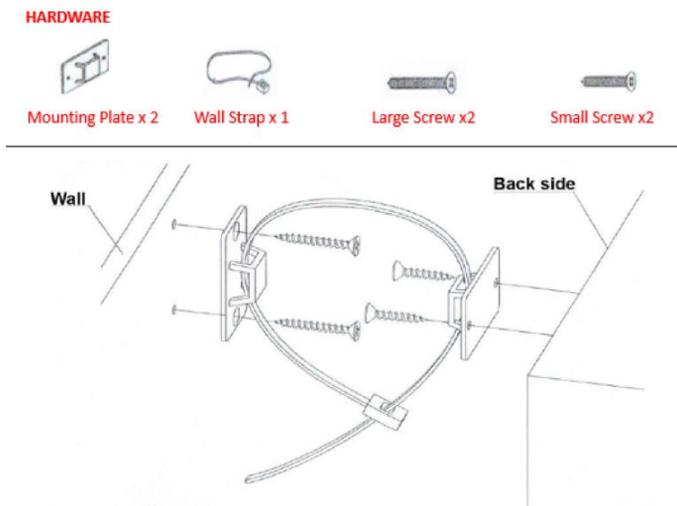

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void