


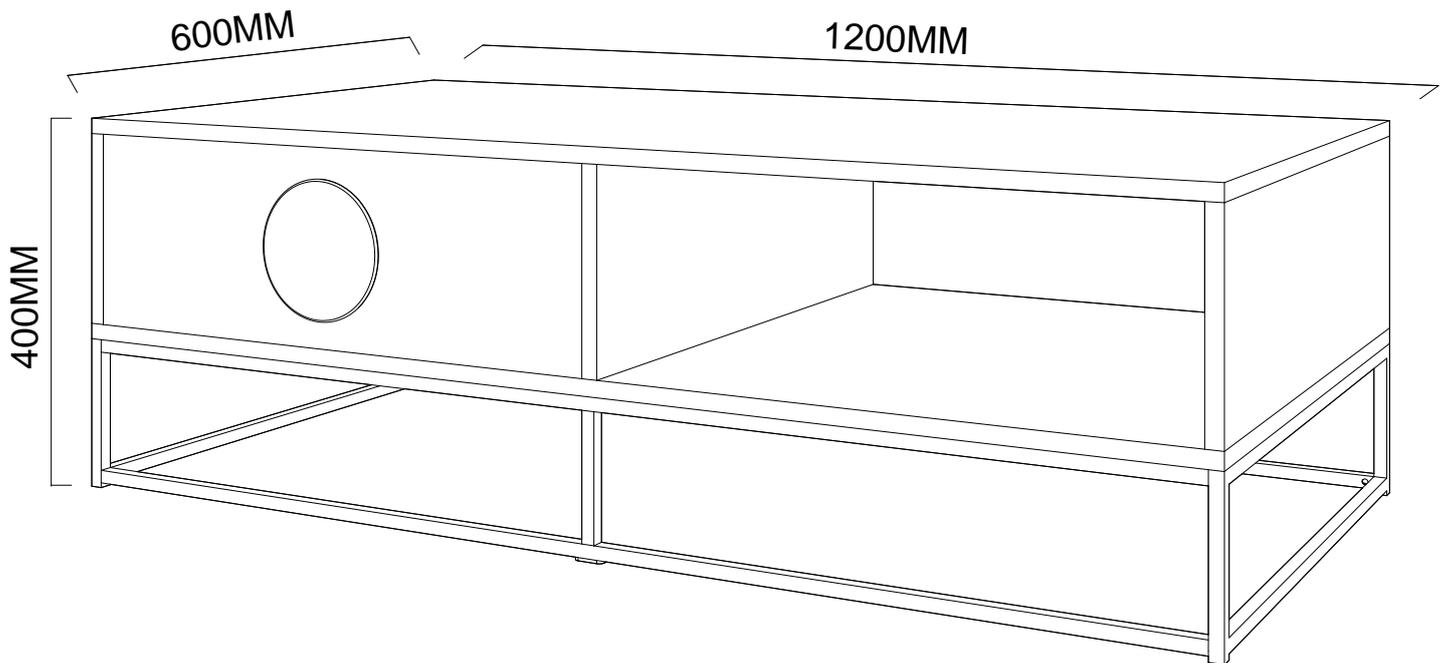


ASSEMBLY INSTRUCTION
VALKYRIE COFFEE TABLE
ITEM CODE 74932

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Free call 1800 351 084



Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Free call 1800 351 084



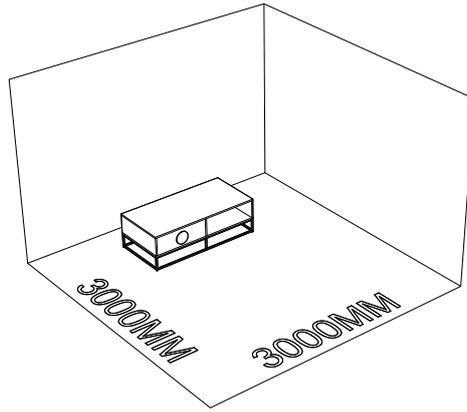

<p>ALLOW 45 MINUTES</p>	<p>PEOPLE REQUIRED</p>
<p>ADDITIONAL TOOLS REQUIRED</p>	

! **TIPPING WARNING** !

Serious or fatal injuries may occur from furniture toppling over. To help avoid this please follow the below recommendations:

- Install the provided "Tipping Kit" as per the instructions
- Never allow children to climb on or hang off of any part of this product
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product

If this product has drawers:


- Place the heaviest items in lowest drawers
- Do not open more than 1 drawer at a time as this may cause the product to become unbalanced
- Do not tamper with or remove any drawer interlocking/running system

Note: The use of the provided "Tipping Kit" may reduce but not necessarily eliminate the risk of furniture toppling over. Please use this product with caution.

This is a permanent label. Do not attempt to remove!

Assembly is to be carried out by a competent adult only.
During assembly children should be kept away from the product due to possible risk of injury.
Do not use this item if any components are missing or damaged.
Please keep these instructions for future reference.

EXPLODED EXAMPLE

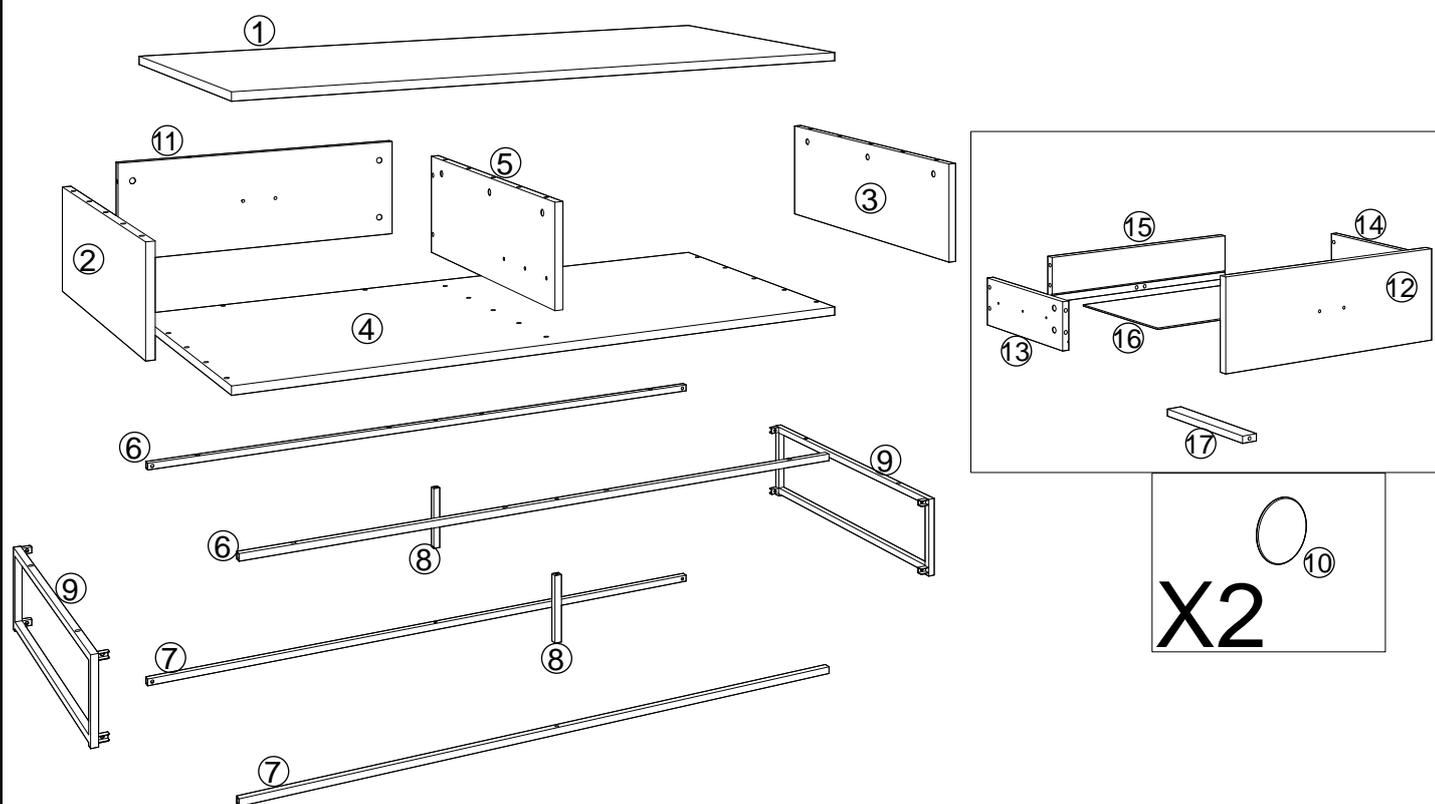




1	TOP PANEL	10	WOODEN HANDLE x 2
2	LEFT SIDE PANEL	11	DRAWER FRONT PANEL
3	RIGHT SIDE PANEL	12	DRAWER FRONT PANEL
4	BOTTOM PANEL	13	DRAWER LEFT SIDE PANEL
5	MIDDLE PANEL	14	DRAWER RIGHT SIDE PANEL
6	TOP METAL BAR x 2	15	DRAWER BACK PANEL
7	BOTTOM METAL BAR x 2	16	DRAWER BOTTOM PANEL
8	METAL SUPPORT BAR x 2	17	BOTTOM SUPPORT PANEL
9	METAL LEG x 2		

CHECKLIST




Before you start.....

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Check and ensure that you have all required contents for complete assembly.
3. Always read the assembly instructions carefully before beginning assembly.
4. The packaging and contents can be a choking hazard. Please keep out of reach of small children at all times.
5. Do not over tighten the bolts as this may damage the thread.

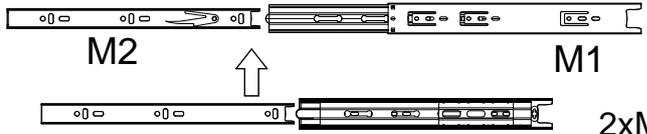


<p>A <input type="checkbox"/></p> <p>cam bolt</p>  <p>M6x35mm 18xA</p>	<p>B <input type="checkbox"/></p> <p>cam lock</p>  <p>M15x10mm 18xB</p>	<p>C <input type="checkbox"/></p> <p>dowel</p>  <p>M6x30mm 16xC</p>	<p>D <input type="checkbox"/></p> <p>screws</p>  <p>M4x40mm 9xD</p>	<p>E <input type="checkbox"/></p> <p>wall anchor</p>  <p>1xE</p>
<p>F <input type="checkbox"/></p> <p>screws</p>  <p>M4x35mm 6xF</p>	<p>G <input type="checkbox"/></p> <p>allen key</p>  <p>1xG</p>	<p>H <input type="checkbox"/></p> <p>screws</p>  <p>M4x25mm 4xH</p>	<p>I <input type="checkbox"/></p> <p>washer</p>  <p>12xI</p>	<p>J <input type="checkbox"/></p> <p>screws</p>  <p>M5x30mm 12xJ</p>
<p>K <input type="checkbox"/></p> <p>screws</p>  <p>M6x12mm 8xK</p>	<p>L <input type="checkbox"/></p> <p>screws</p>  <p>M3x12mm 12xL</p>	<p>M <input type="checkbox"/></p> <p>runner</p>  <p>M2 M1 2xM</p>		
<p>N <input type="checkbox"/></p> <p>sticker</p>  <p>2xN</p>	<p>O <input type="checkbox"/></p> <p>screws</p>  <p>M6x30mm 4xO</p>			


CAM LOCK INSTALL METHOD AS FOLLOWS

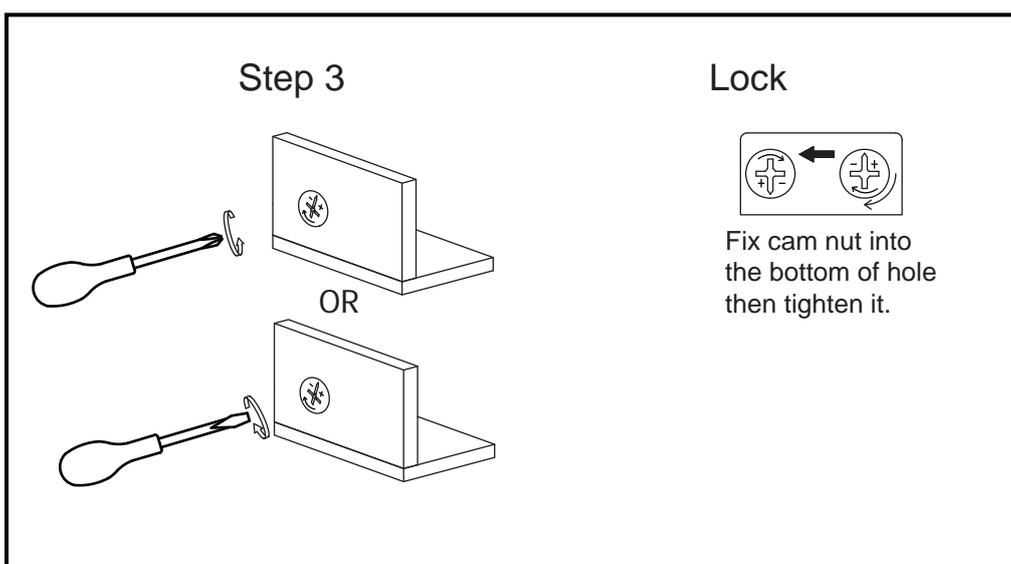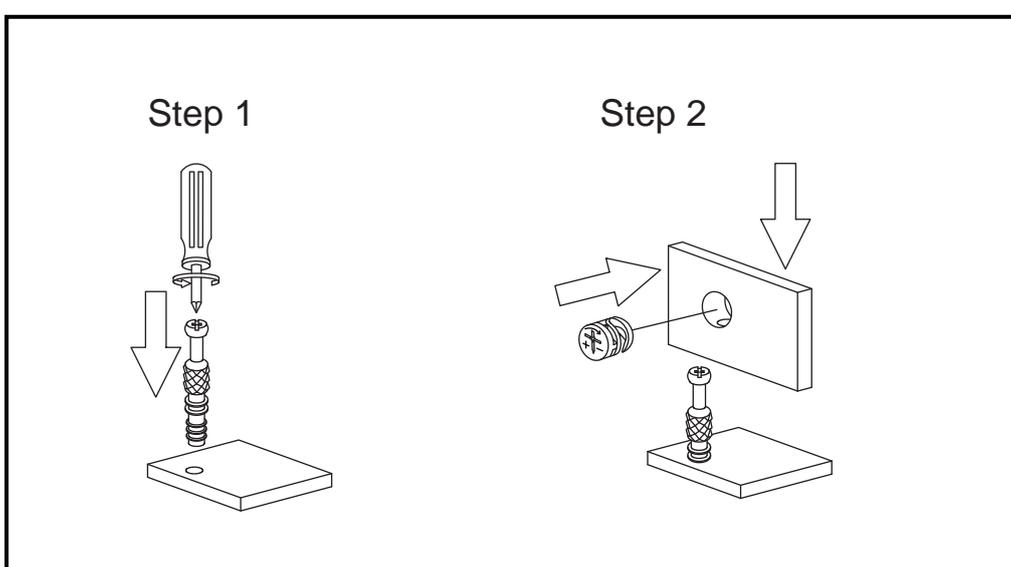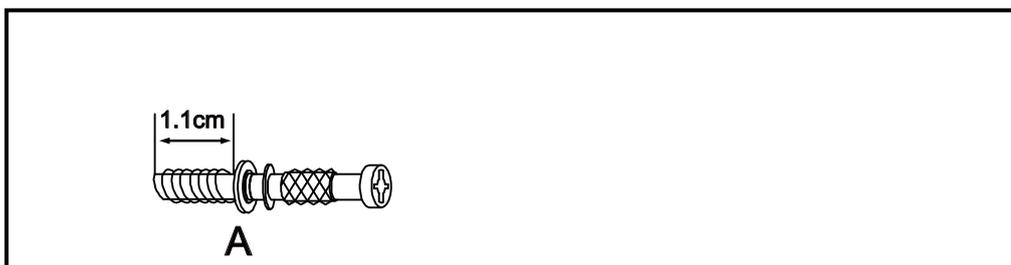


1

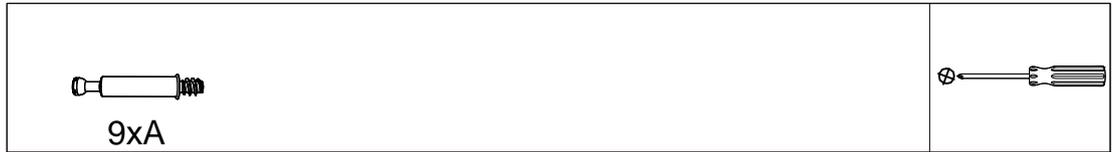


STEP 1: Fix cam bolts (A) to top panel ①.

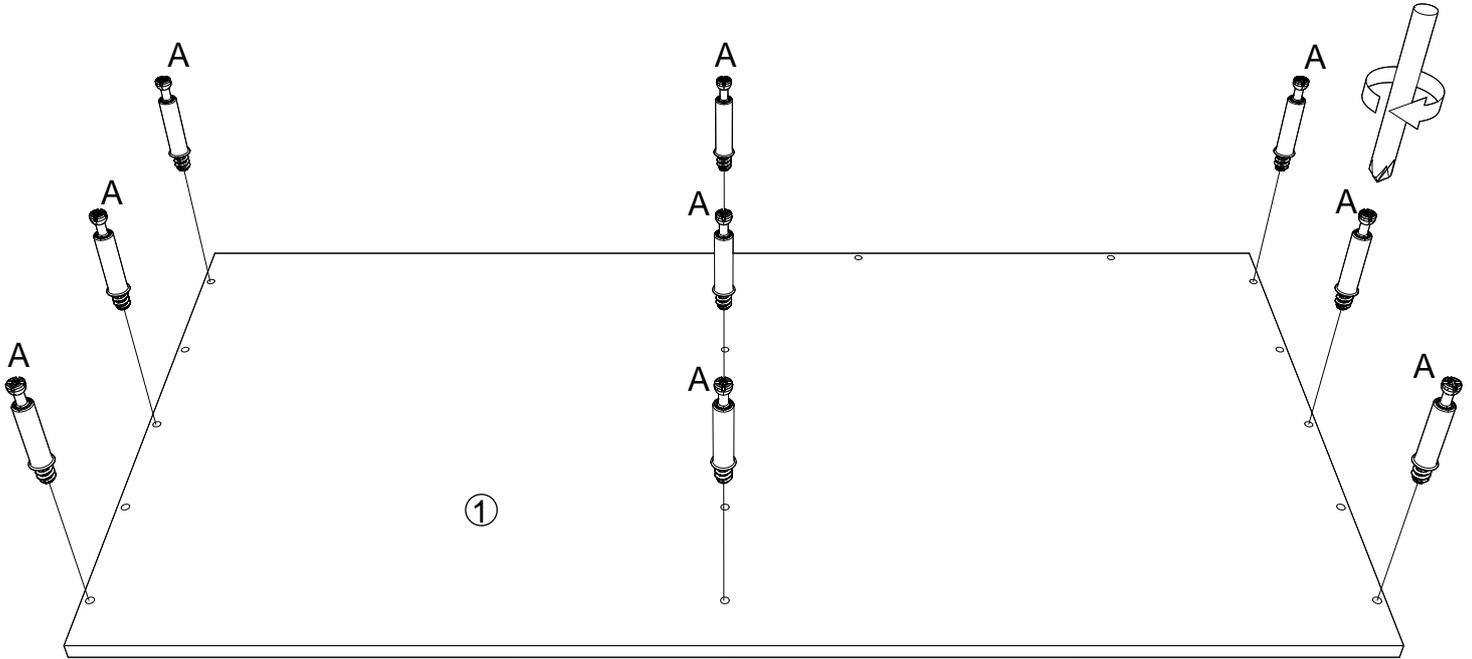

2

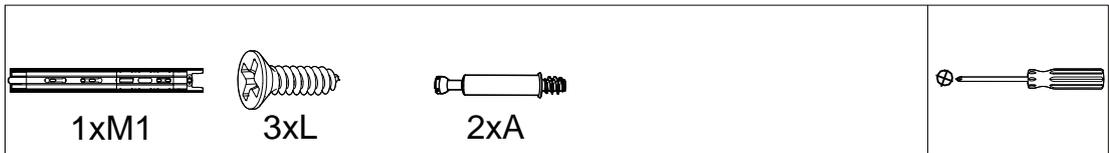


STEP 2: Fix runner(M1) to left side panel ② using screws(L). Fix cam bolts (A) to left side panel ②

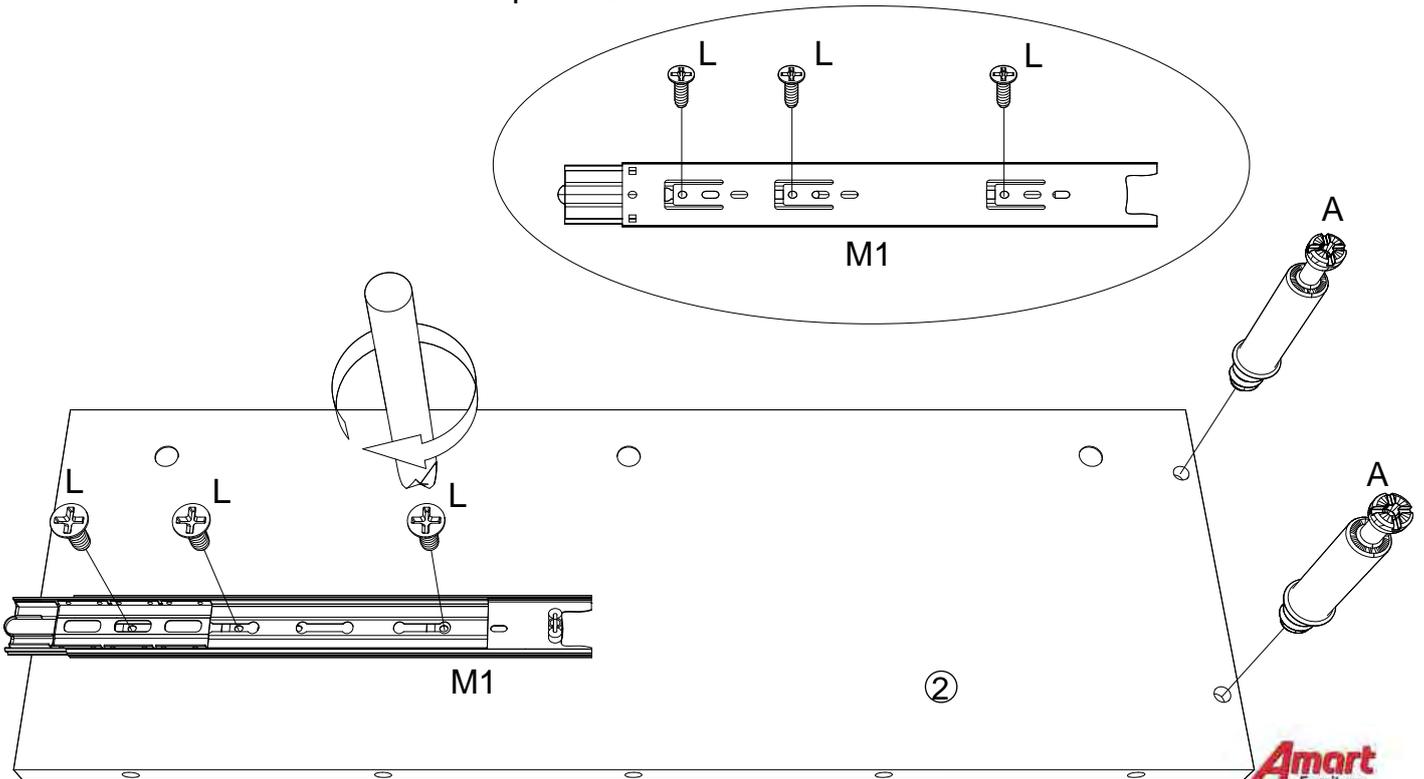


Amart
Furniture

3

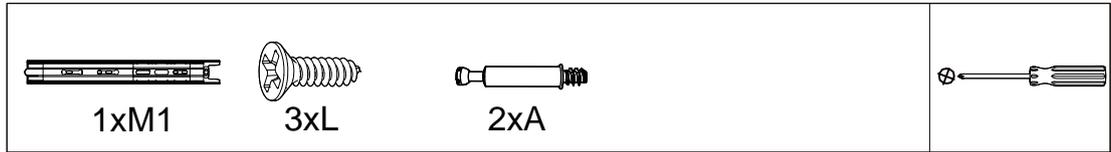


STEP 3: Fix runner(M1) to middle panel⑤ using screws(L).Fix cam bolts (A) to middle panel⑤

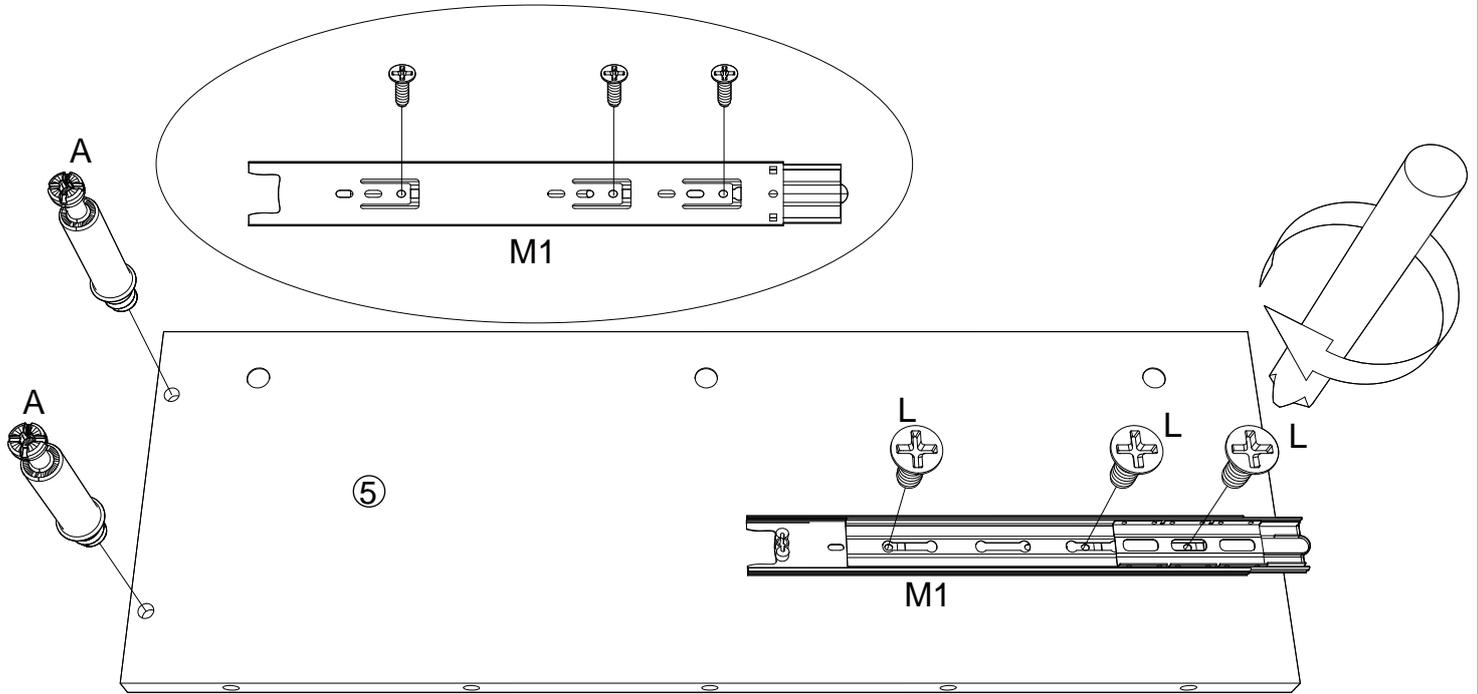


4




STEP 4: Fix wooden handle⑩ to drawer front panel ⑪ using screws(H).

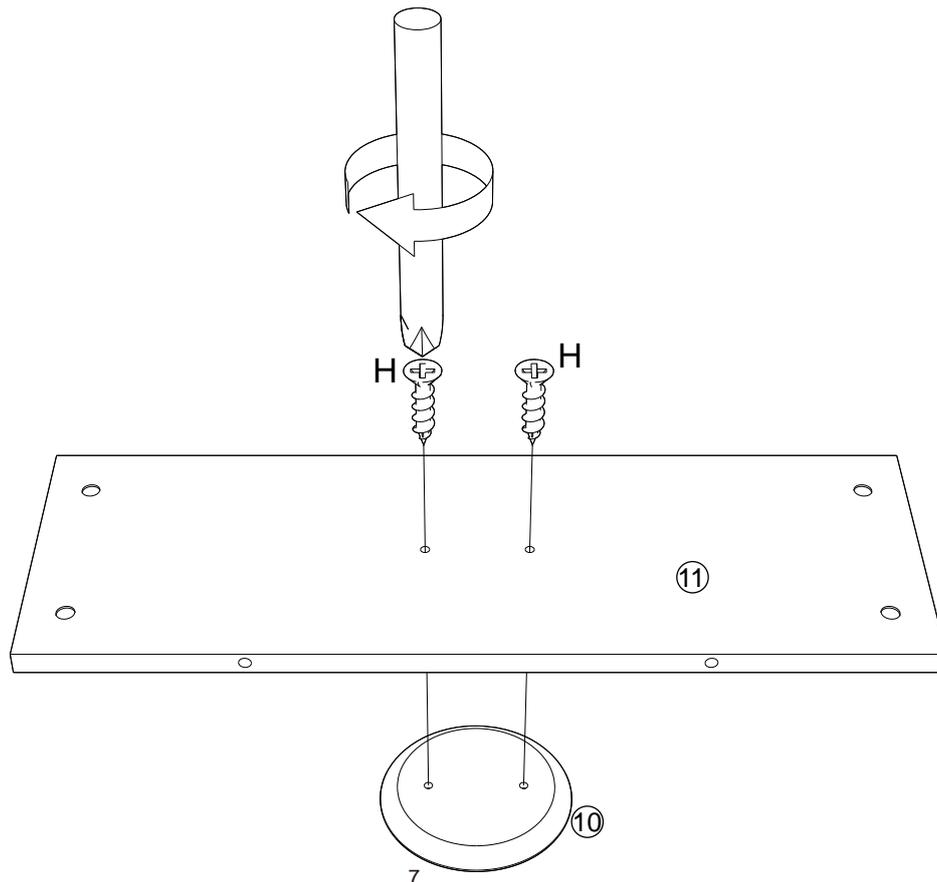

5

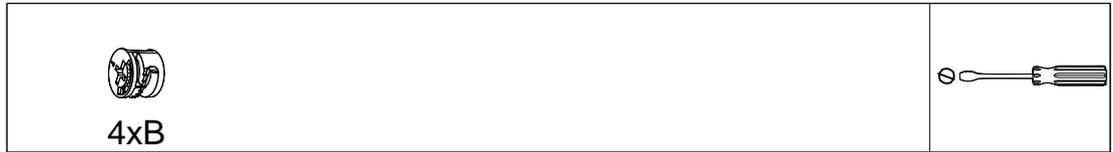


STEP 5: Attach left side panel ②, middle panel ⑤ to drawer front panel ⑪ using cam locks (B).

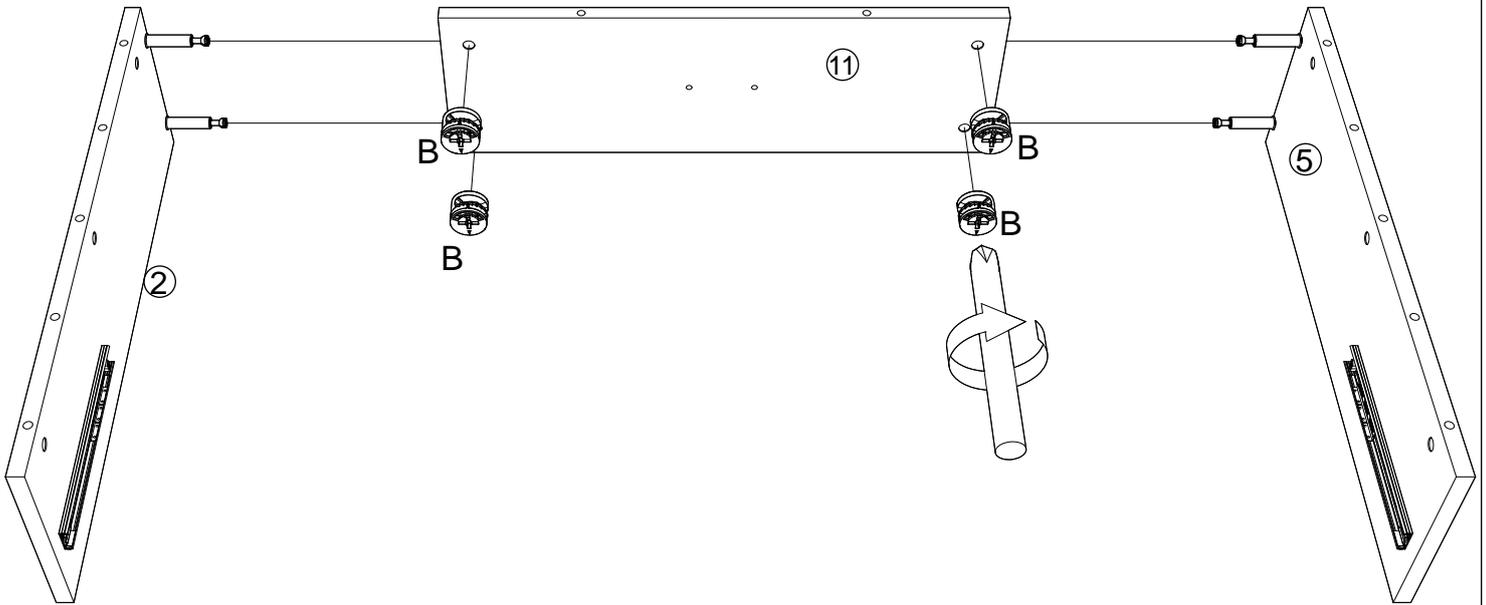

6



STEP 6: Attach the frame and right side panel ③ to top panel ① using cam locks (B) and dowels (C).

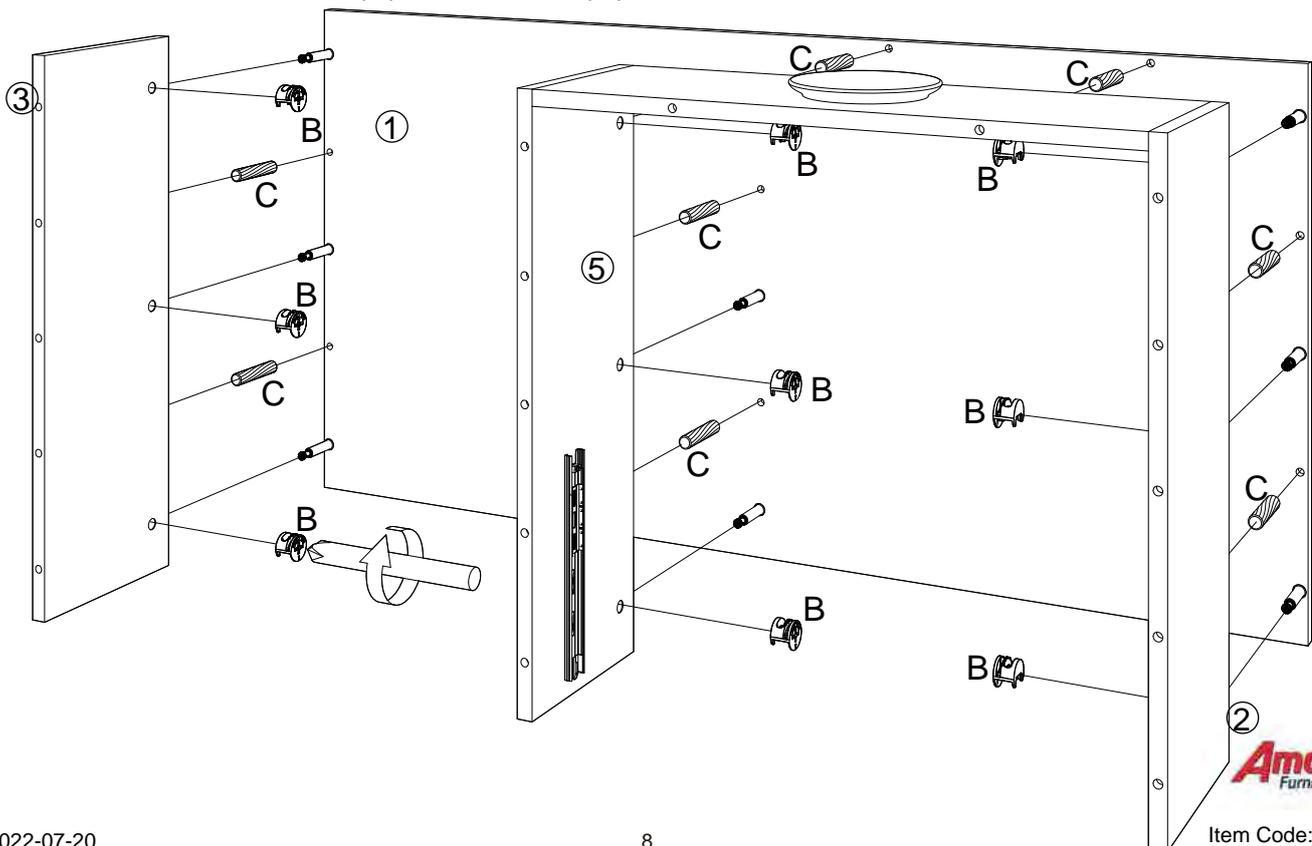


Amart
Furniture

7




STEP 7: Attach bottom panel ④ to the existing unit using dowels (C) and screws (D).

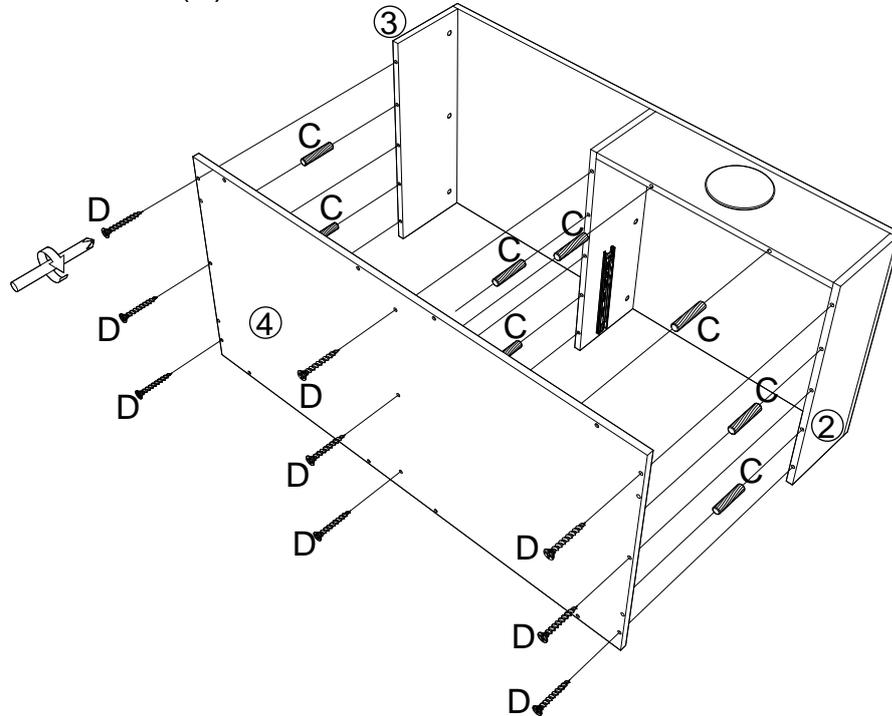

8



STEP 8: Attach top metal bar ⑥, bottom metal bar ⑦ and metal support bar ⑧ using screws (O) and allen key (G).



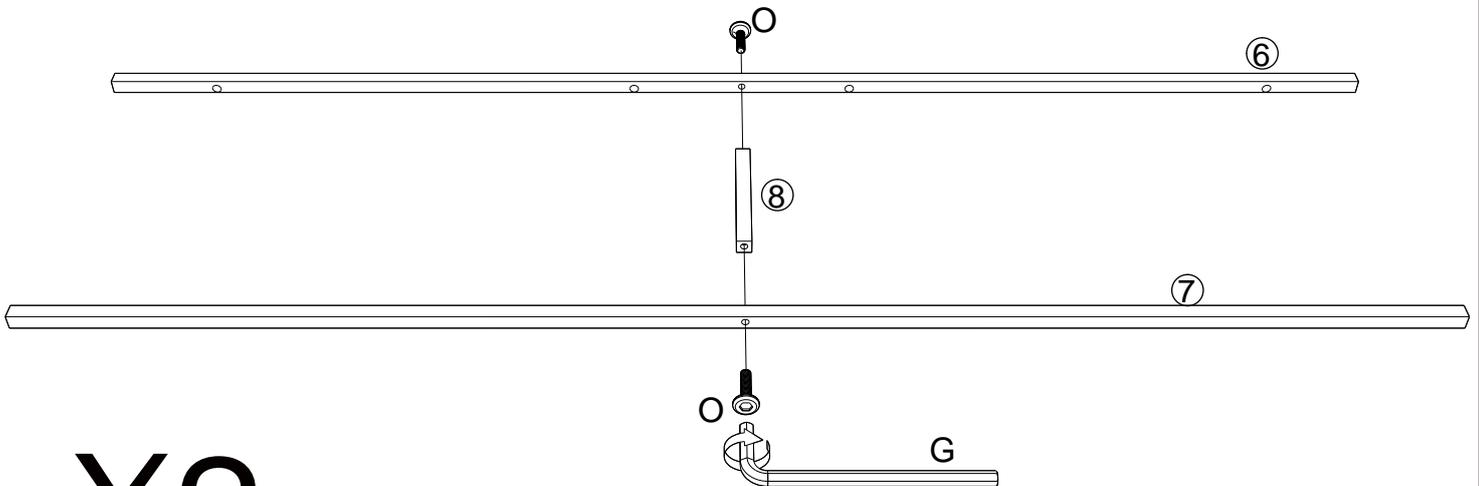


X2

9



STEP 9: Paste stickers(N) to cover the screws.

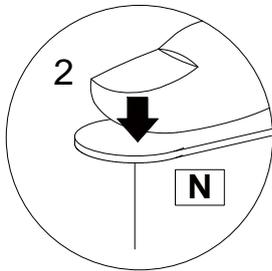
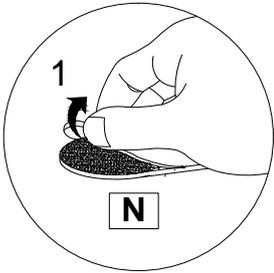
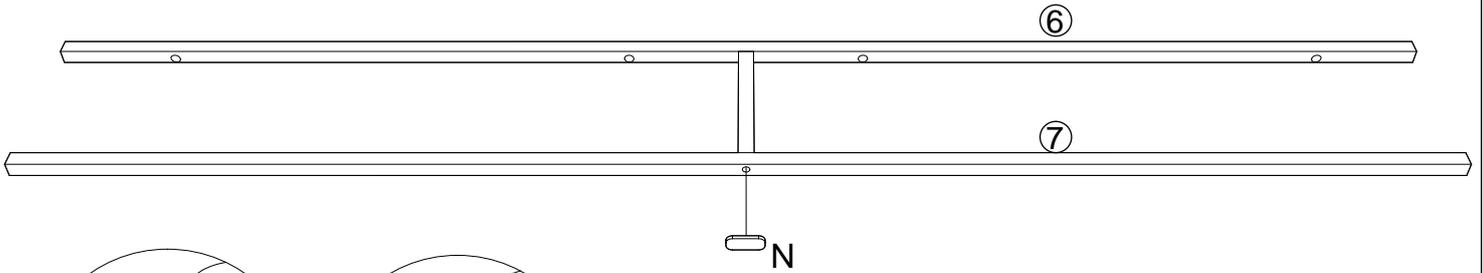


X2

10




STEP 10: Attach metal legs⁹ to the existing metal frame using screws(K) and allen key(G).

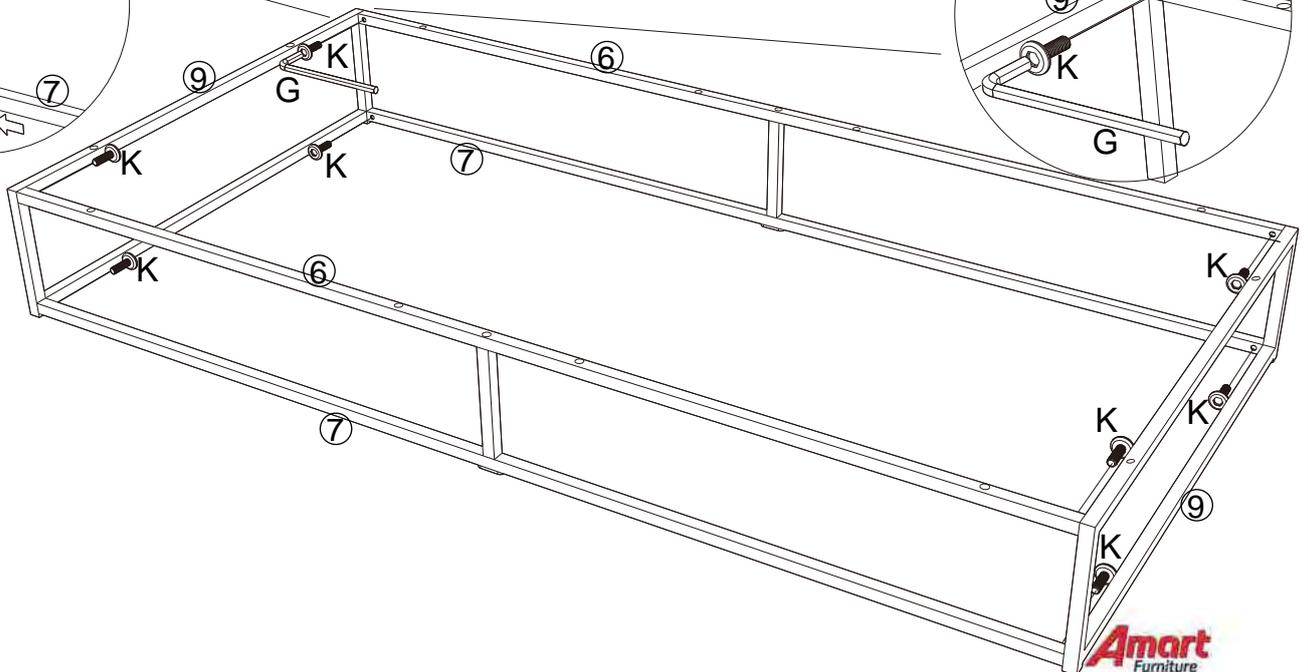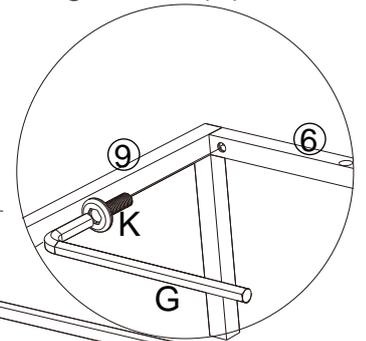
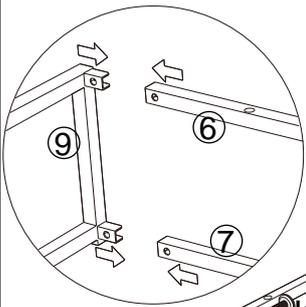


Amart
Furniture


11

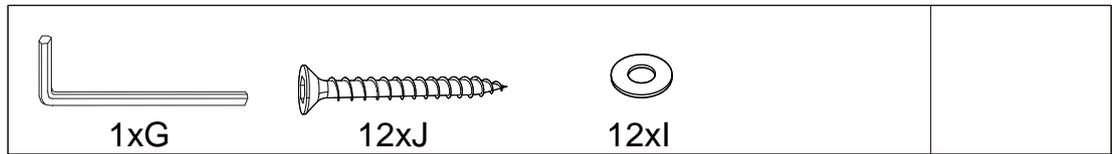


STEP 11: Attach bottom metal frame to the body using allen key(G),screws(J) and washers(I).

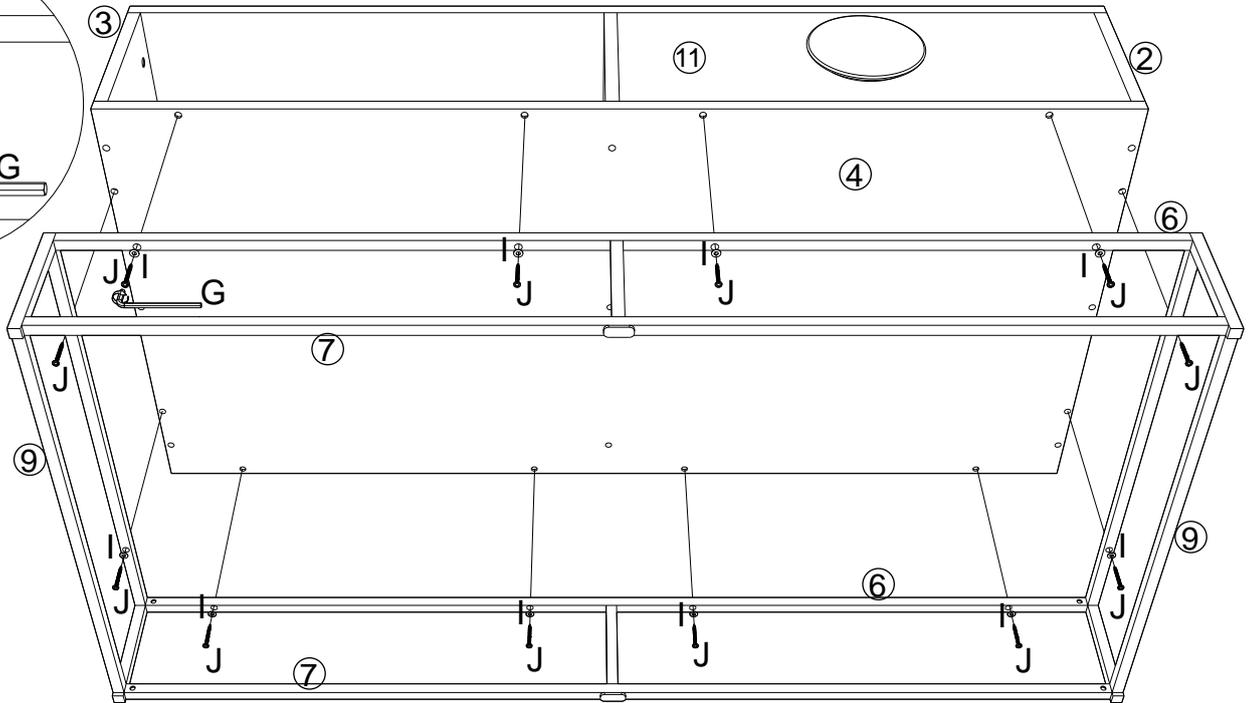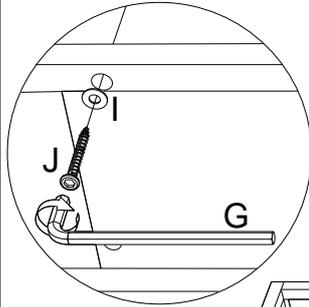

12

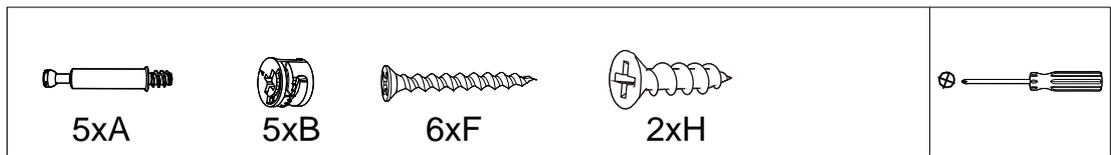


STEP 12: Assemble the drawer as shown in below diagram using cam bolts(A), cam locks(B),screws(F), and screws(H).

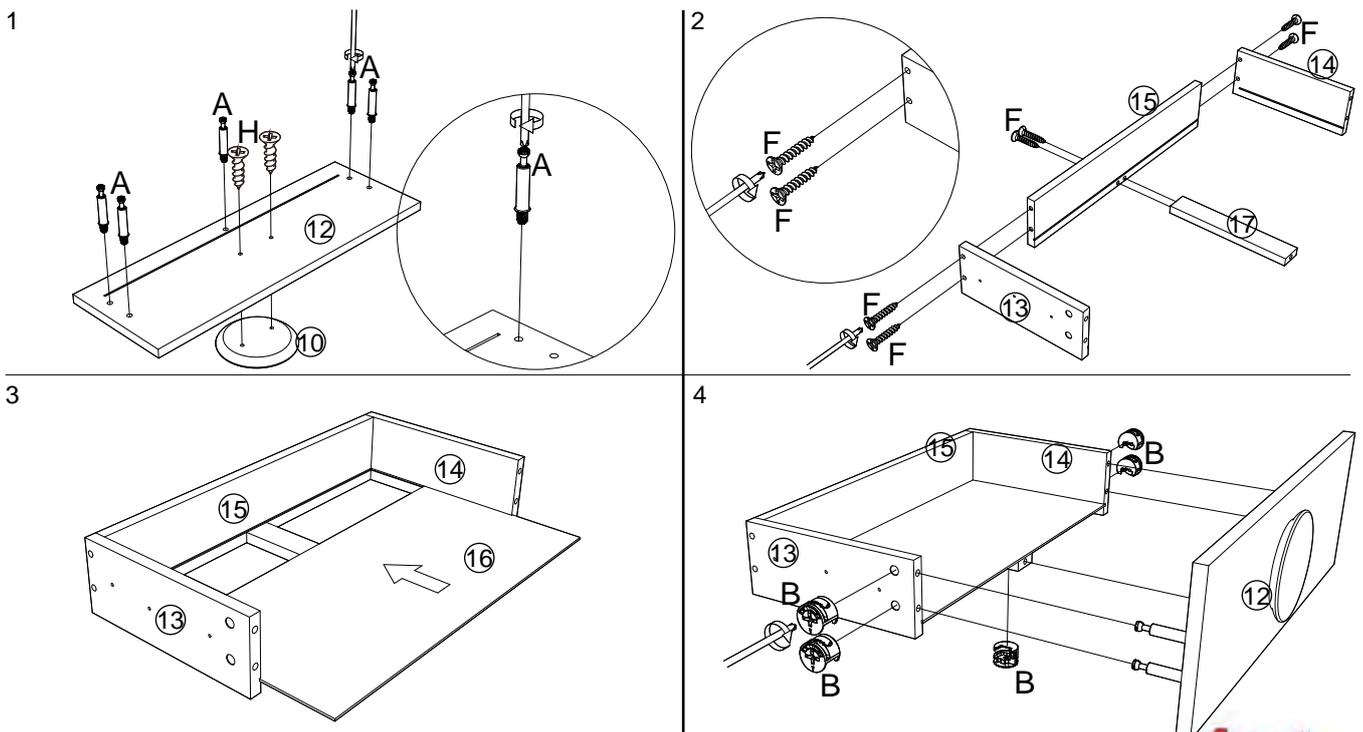


Amart
Furniture

13

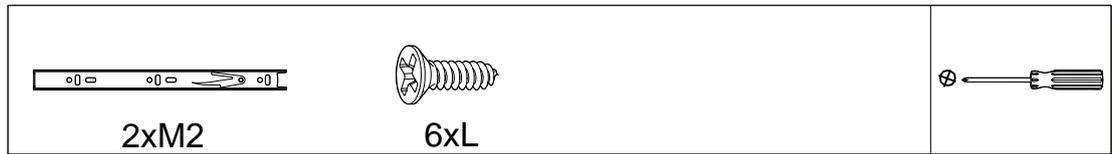



STEP 13: Fix runner(M2) to the drawer using screws(L).

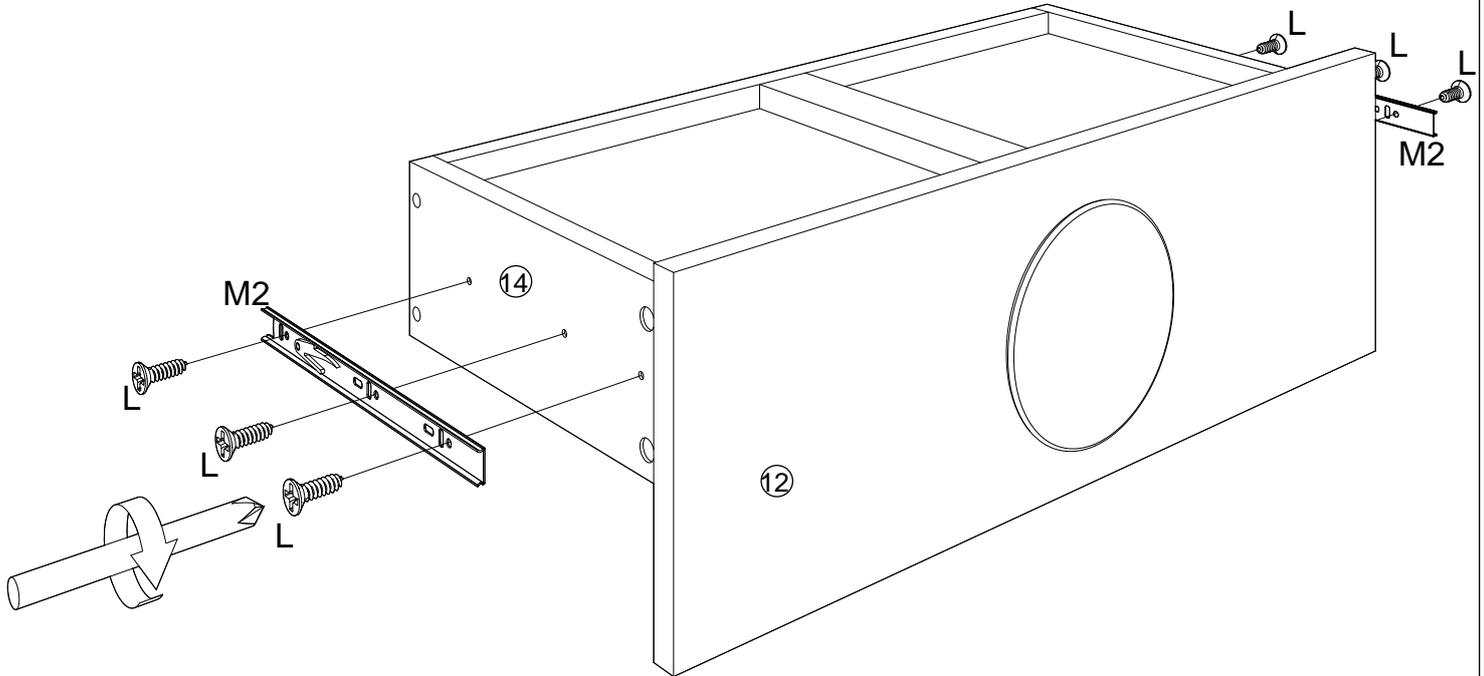

14




STEP 14: Place drawer to the existing unit.

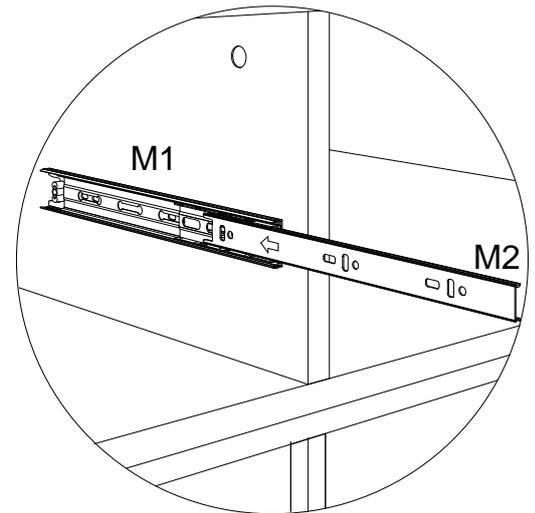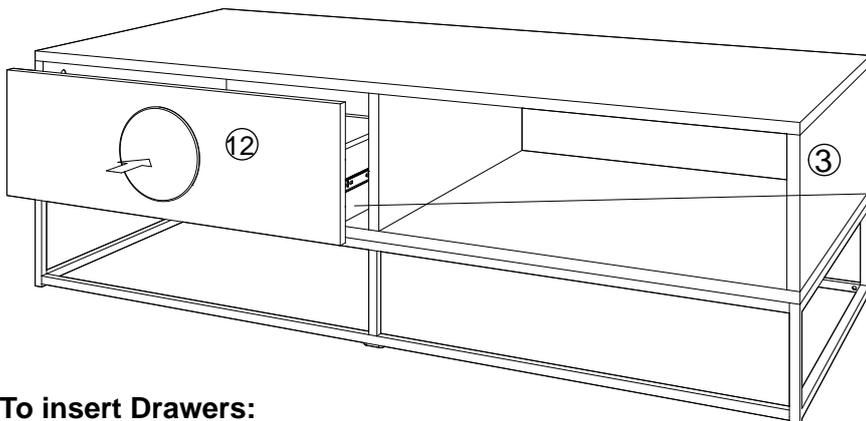

To insert Drawers:

- Bring the ball-bearing slider on Drawer Glide Track(M1) forward to the front edge of(M1).
- Align the back open-end of the Drawer Glide Runner(M2) on each side of the drawer to fit squarely into the groove on the open front-end of(M1).Be sure the drawer/M2 is not tilted or angled, and gently push in drawer squarely.
- When the drawer is pushed in about half way,the Disconnect Lever on (M2) will be engaged onto(M1) which will create a slight resistance-this is normal. Pull out the drawer a little bit and gently push in the drawer again to engage the Lever to the slide mechanism on (M1). The drawer should now slide smoothly.
- If the drawer cannot be pushed in or stuck, do not force it in. Remove the drawer and repeat the steps above.

15

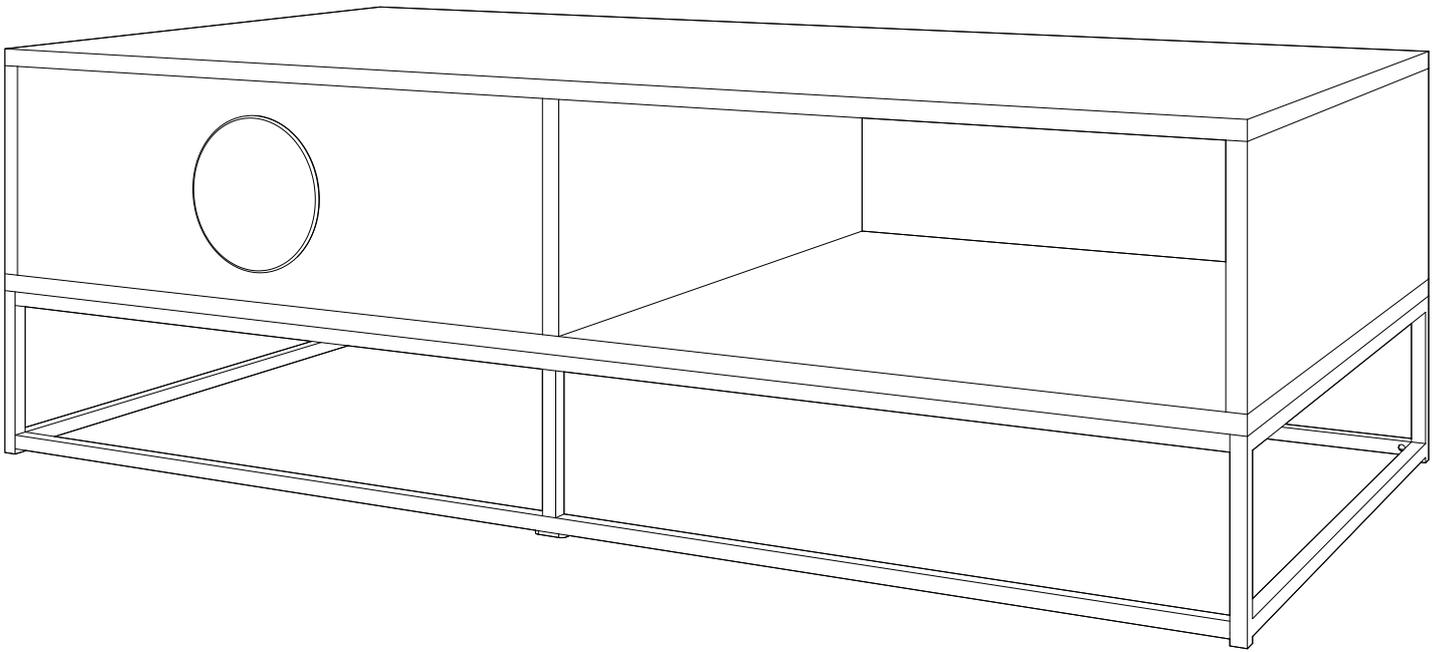

CAUTION: Always Lift Your Furniture When Moving /Relocating - Do Not Drag. Dragging Can Cause The Legs To Bend/Break.

Amart
Furniture

PRODUCT CARE:

To protect your furniture, we suggest the following:

*Avoid placing your furniture in direct sunlight.

*Do not place furniture directly under windows.

*Do not place sharp materials(knife, fork, etc) directly onto your furniture as sharp material may scrape and damage the finish.

Do not place material with high temperature directly onto the surface of your furniture.

*Protective padding is strongly recommended when using your furniture .

*Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.

*Use a clean, soft, dry, lint free absorbant cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.