
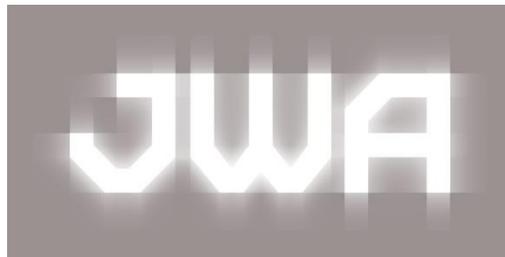


ASSEMBLY INSTRUCTION

KOS

DESK

ITEM CODE 68439



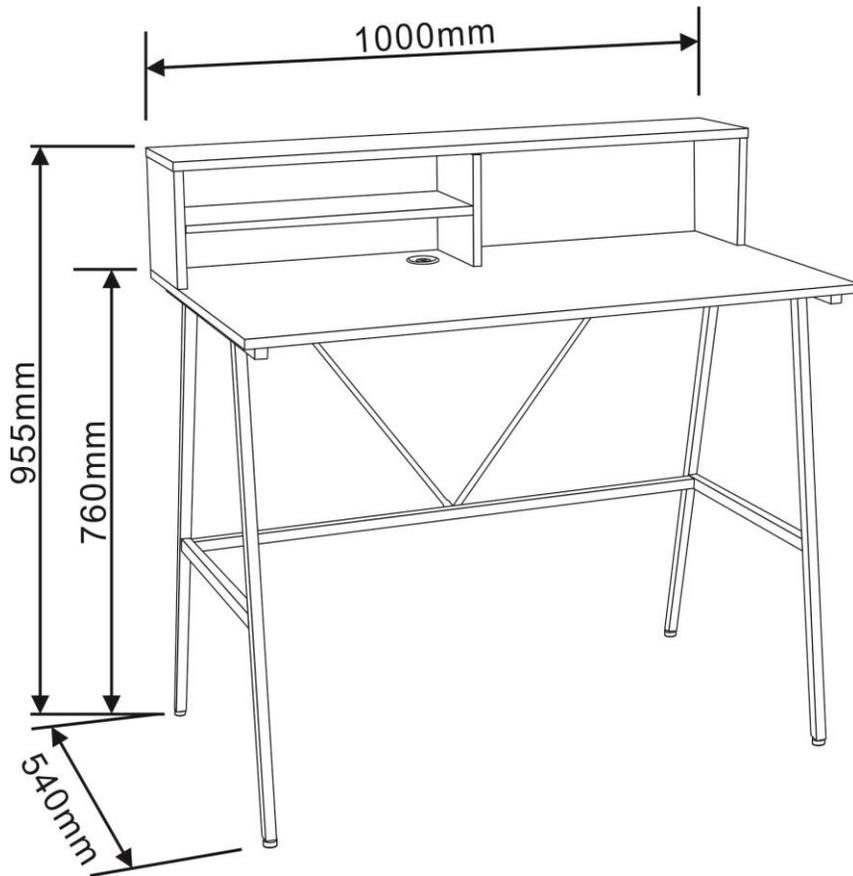


Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please refer to your receipt

PRE-ASSEMBLY PREPARATION

Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

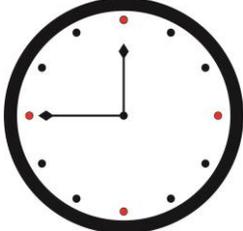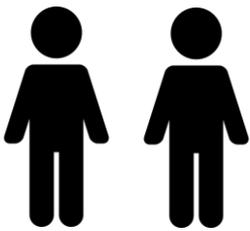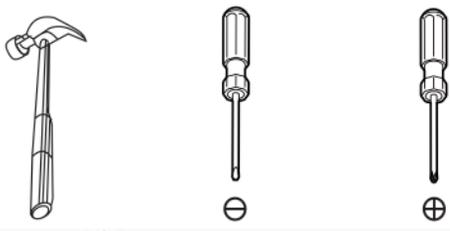		
Allow 45 min	For 2 person	Additional tools required



TIPPING WARNING





Serious or fatal injuries may occur from furniture toppling over. To help avoid this please follow the below recommendations:

- Install the provided "Tipping Kit" as per the instructions
- Never allow children to climb on or hang off of any part of this product
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product


If this product has drawers:

- Place the heaviest items in lowest drawers
- Do not open more than 1 drawer at a time as this may cause the product to become unbalanced
- Do not tamper with or remove any drawer interlocking/running system

Note: The use of the provided "Tipping Kit" may reduce but not necessarily eliminate the risk of furniture toppling over. Please use this product with caution.

This is a permanent label. Do not attempt to remove!


PARTS LIST

A  16pcs	B  M6X30 mm 14pcs	C  M6X15mm 3pcs	D  M6 3pcs
E  1pc	F  4pcs	G  1pc	H  ST3.5X14mm 4pcs
I  ST4X25mm 2pcs	J  2pcs	K  2pcs	




1	Desktop panel
2	Top panel
3	Left side panel
4	Right side panel

5	Middle panel
6	Layer panel
7	Back panel
P1	Metal frame

P2	Connection pipe
P3	Support pipe
P4	Support pipe
P5	Support pipe

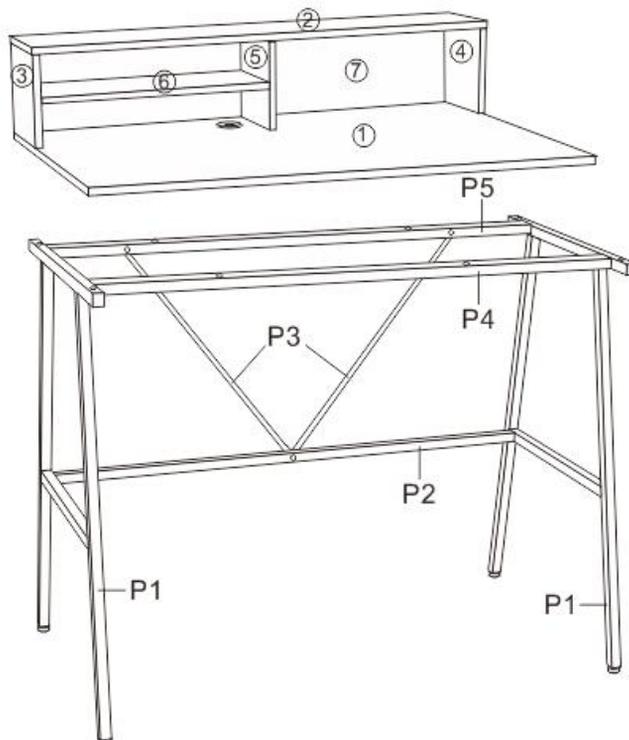


CAM LOCK INSTALL METHOD AS FOLLOWS

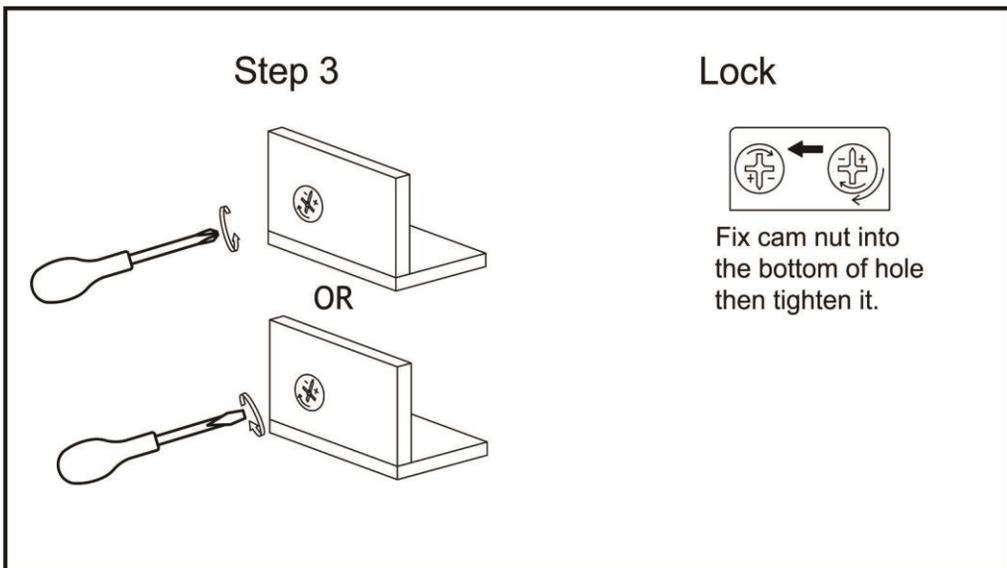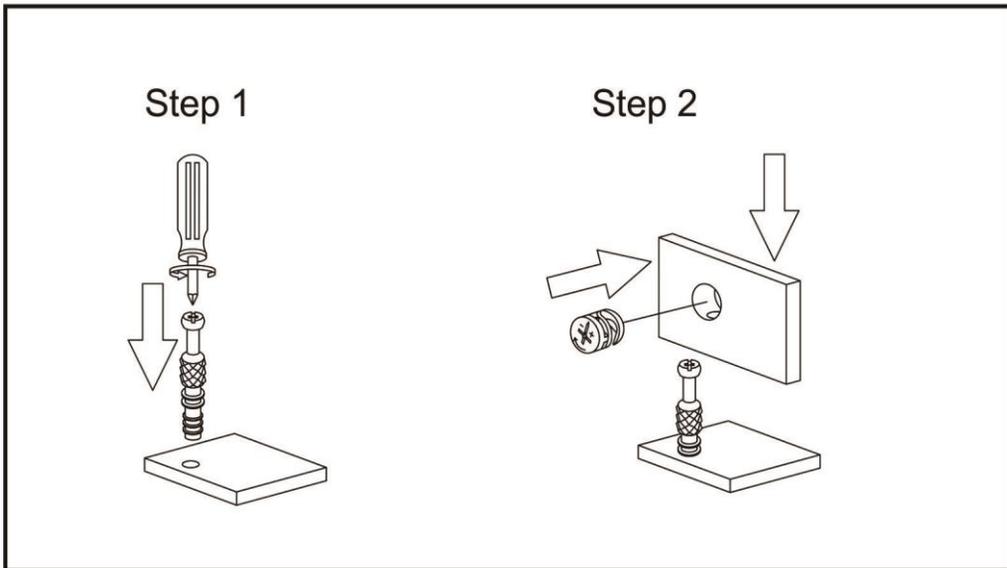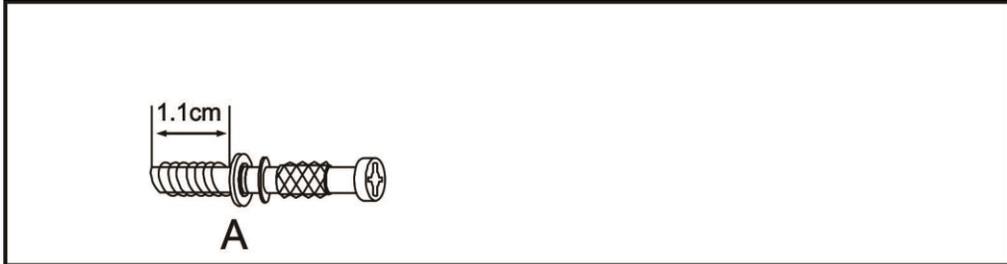


STEP 1:

Load the fitting F into the metal frame P1.

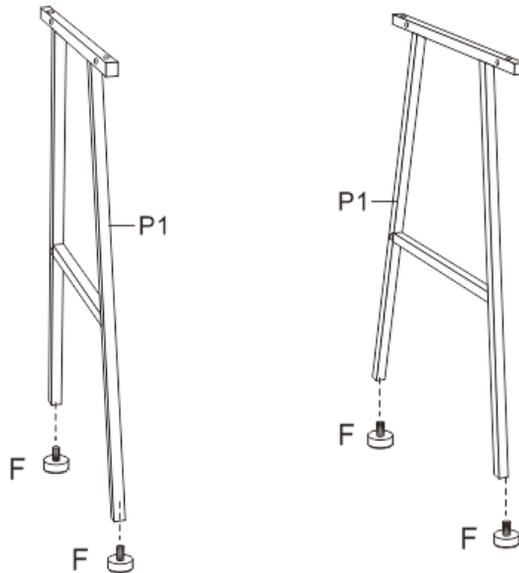


STEP 2:

Connect connection pipes P2, P4 and P5 with metal frame P1 with fitting B.

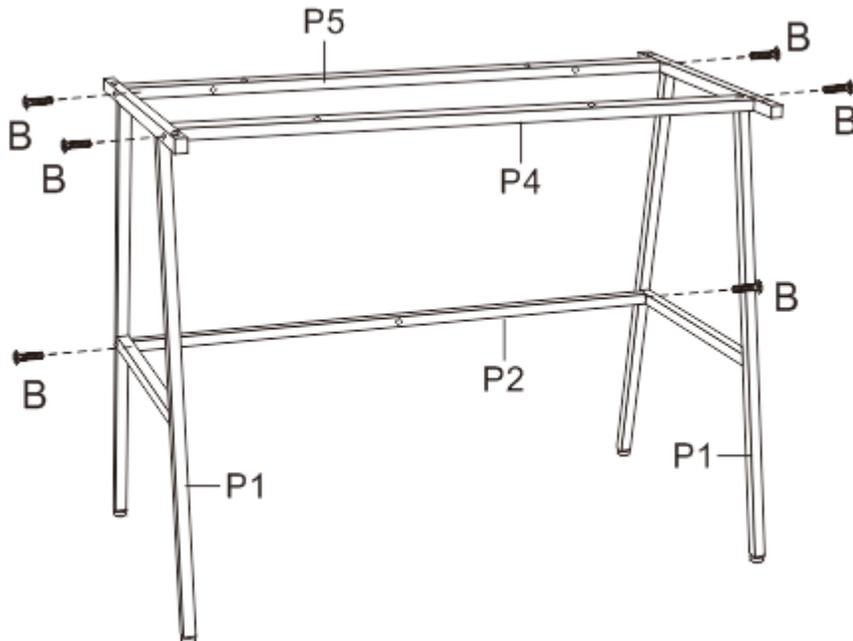


STEP 3:

Fix metal pipe P3 to metal pipe P2 and P5 with fitting C and D respectively.

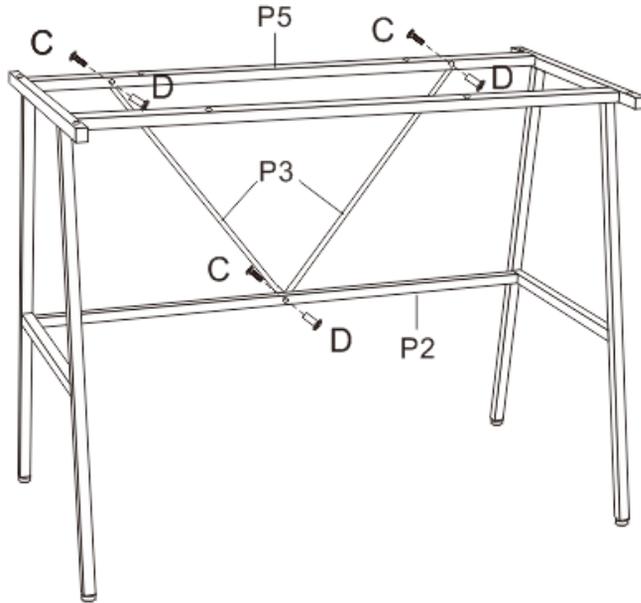


STEP4:

Fix panel 1 on the metal assembly with fitting B.

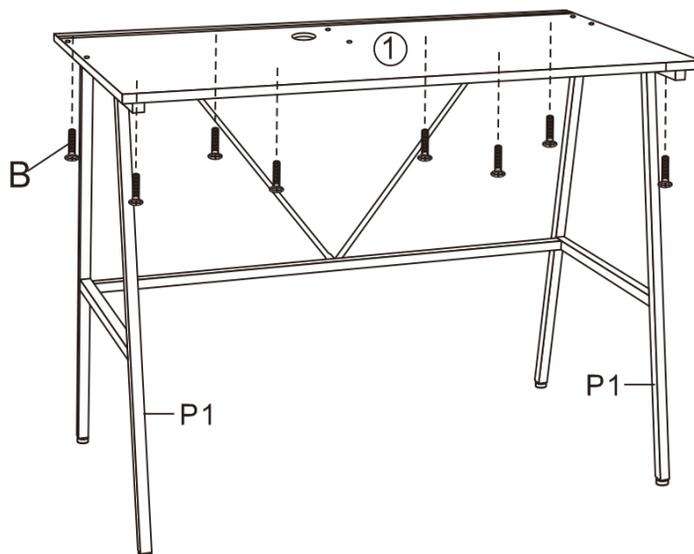


STEP 5:

Load the fitting E into the matching hole position of panel 1.

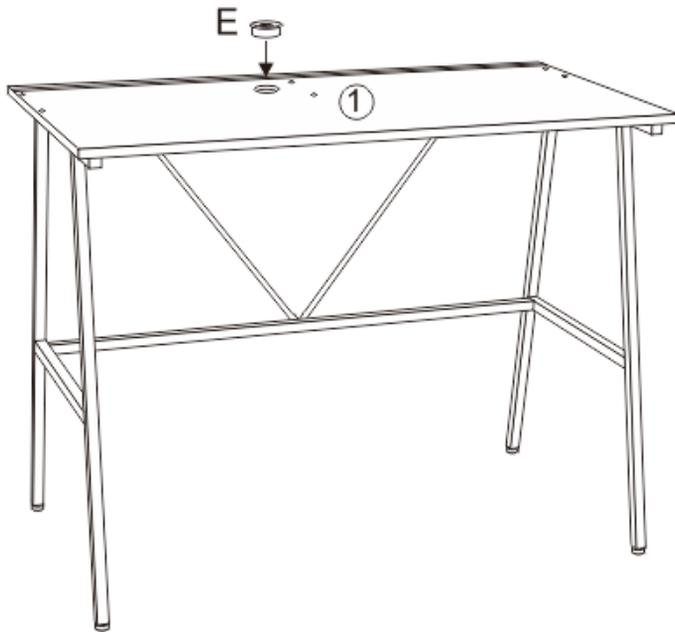



STEP 6:

Connect and fix panel 3 and panel 5 at both ends of panel 6 with fitting A.

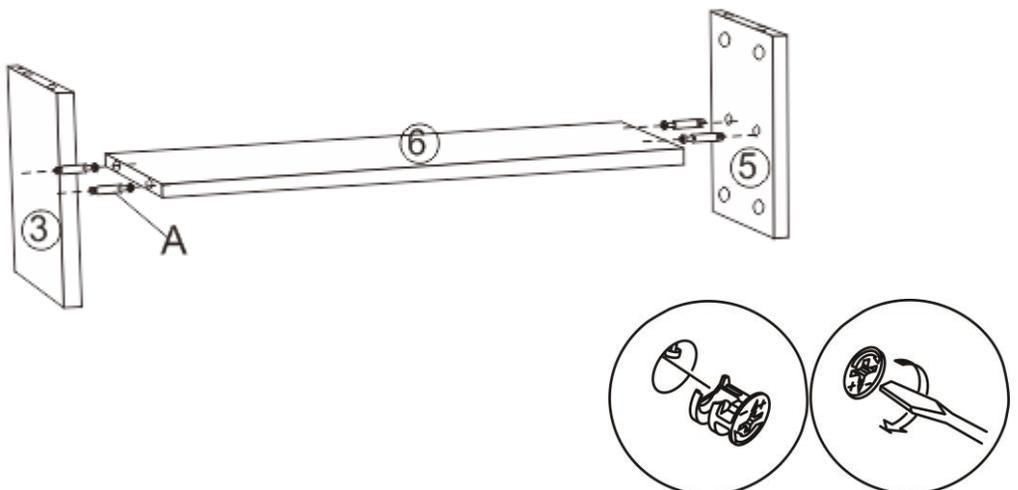


STEP 7:

Fix panel 3, 4 and 5 on panel 1 with fitting A.

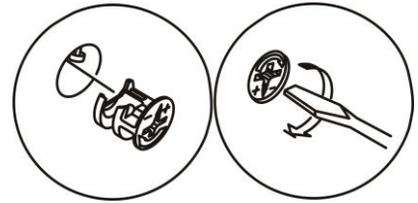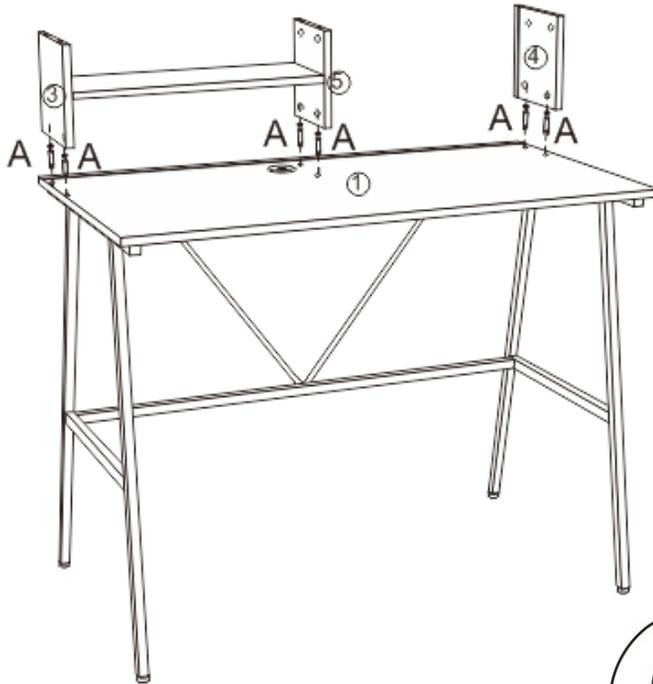



STEP 8:

Load into back panel 7.

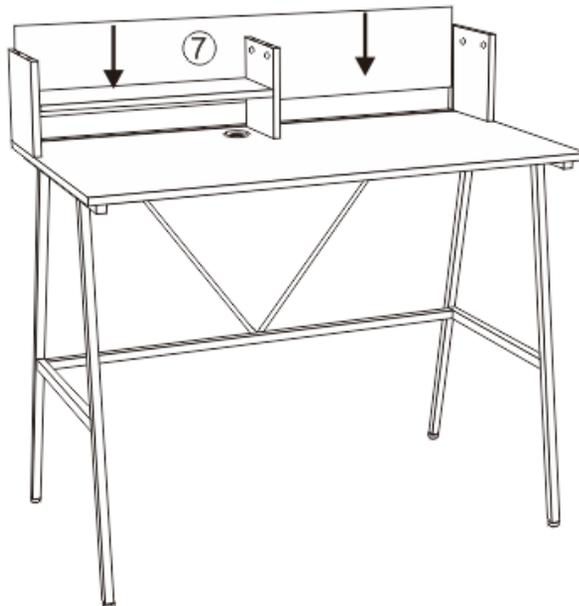


STEP 9:

Use fitting A to fix panel 2 to the matching space of panel 3, 4 and 5 respectively.

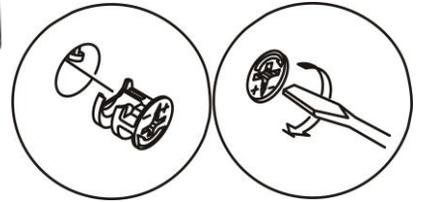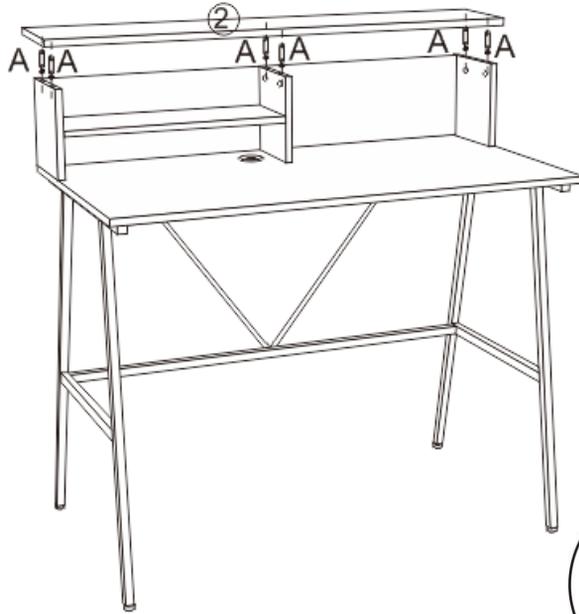

STEP 10:

Install an anti-fall device behind the bottom of the desktop.

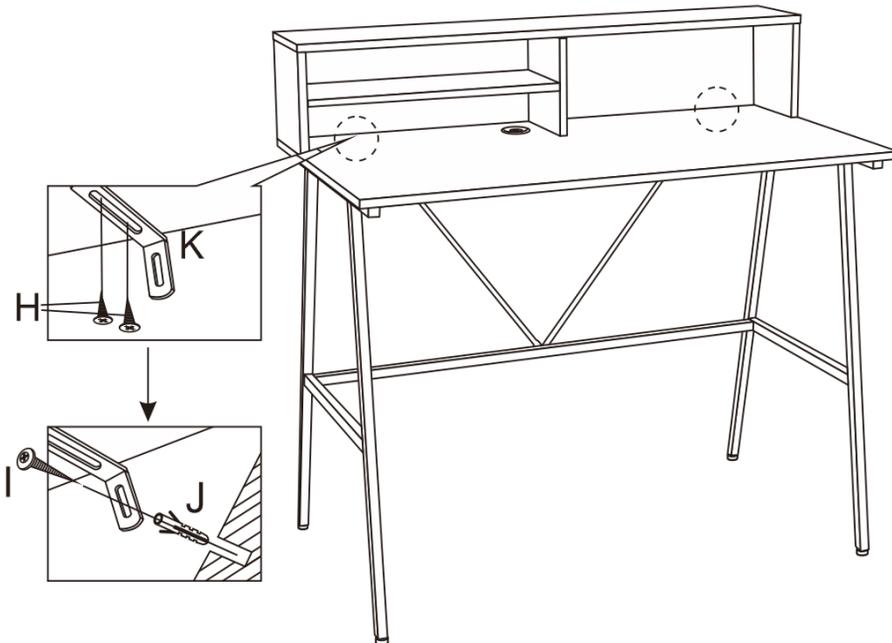


ASSEMBLY IS COMPLETE



SAFETY BRACKETS INSTRUCTIONS

1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

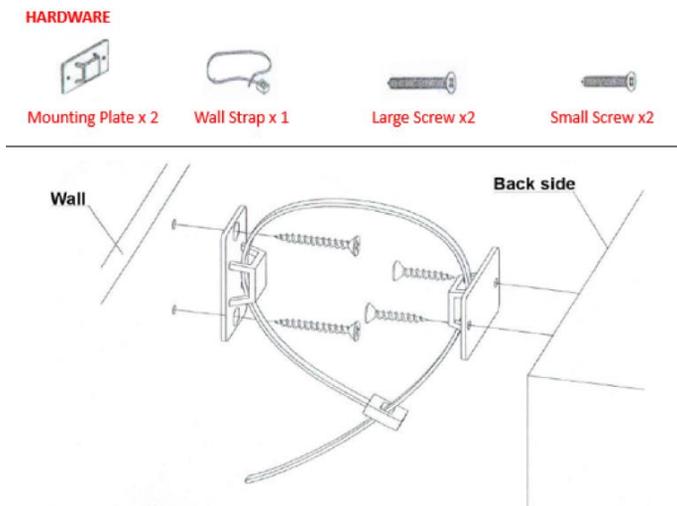

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void