




ASSEMBLY INSTRUCTION VALKYRIE TALL CHEST

ITEM CODE 76054

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.



For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Free call 1800 351 084

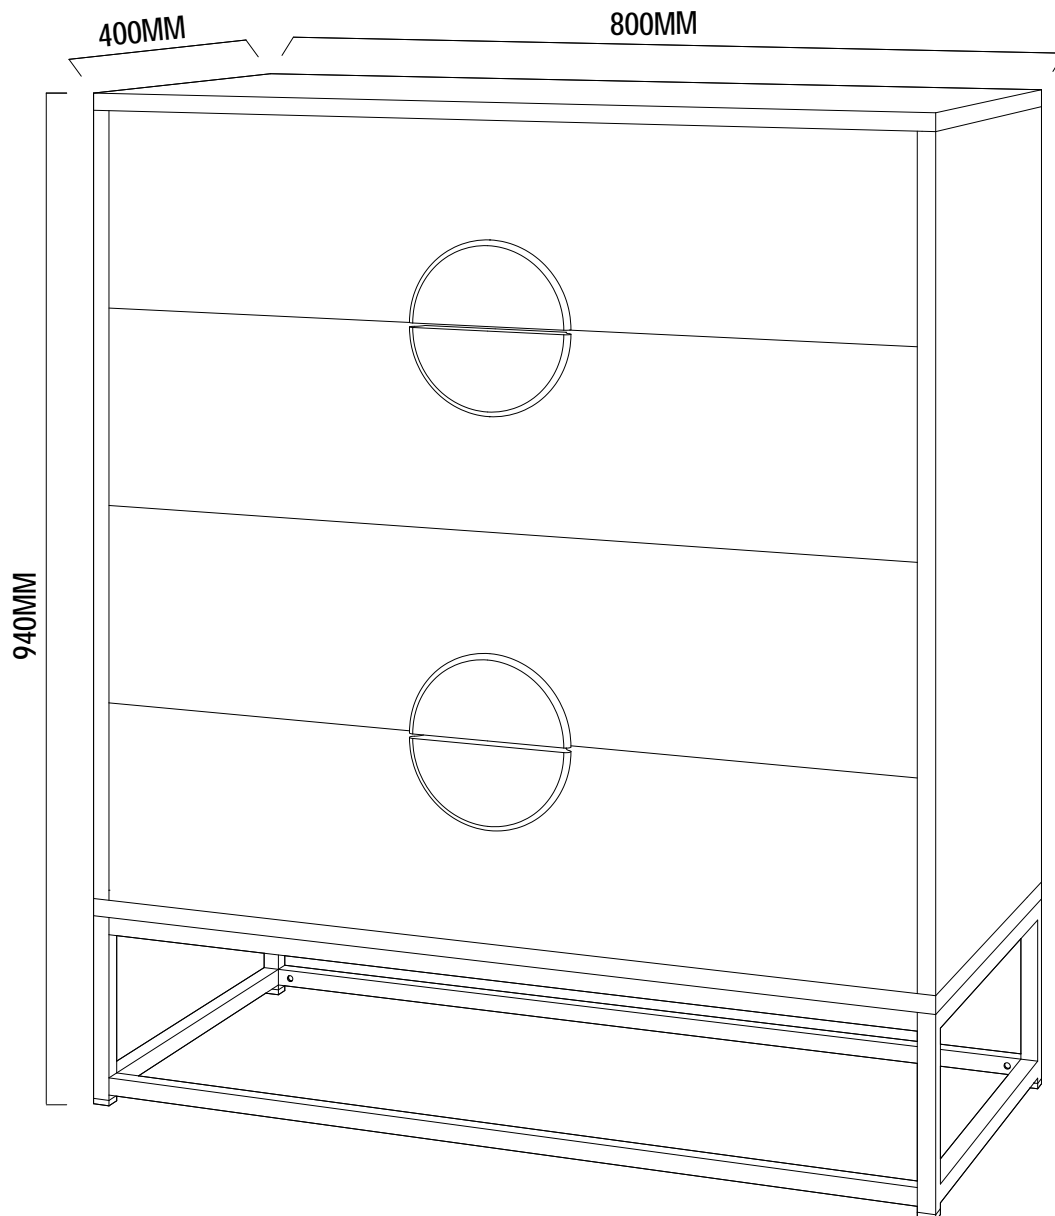

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.

For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Free call 1800 351 084



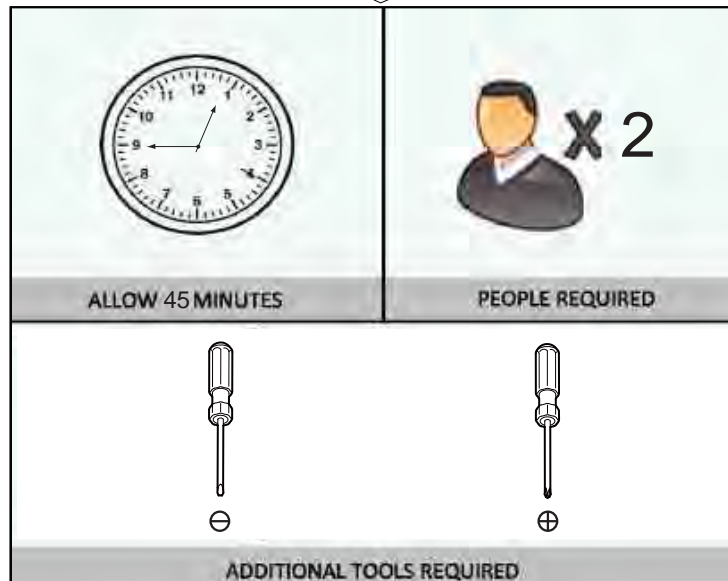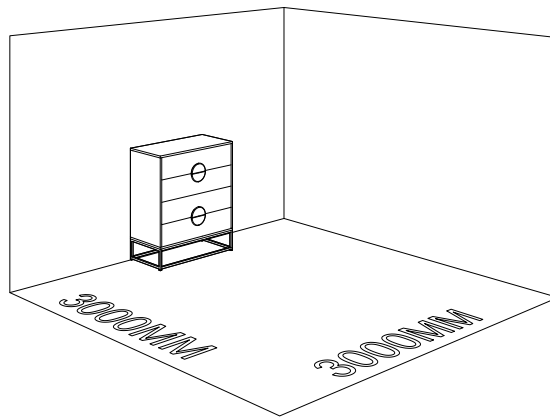

!
TIPPING WARNING
!

Serious or fatal injuries may occur from furniture toppling over. To help avoid this please follow the below recommendations:

- Install the provided "Tipping Kit" as per the instructions
- Never allow children to climb on or hang off of any part of this product
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product

If this product has drawers:

- Place the heaviest items in lowest drawers
- Do not open more than 1 drawer at a time as this may cause the product to become unbalanced
- Do not tamper with or remove any drawer interlocking/running system

Note: The use of the provided "Tipping Kit" may reduce but not necessarily eliminate the risk of furniture toppling over. Please use this product with caution.

This is a permanent label. Do not attempt to remove!


Assembly is to be carried out by a competent adult only.

During assembly children should be kept away from the product due to possible risk of injury.

Do not use this item if any components are missing or damaged.

Please keep these instructions for future reference.

EXPLODED EXAMPLE

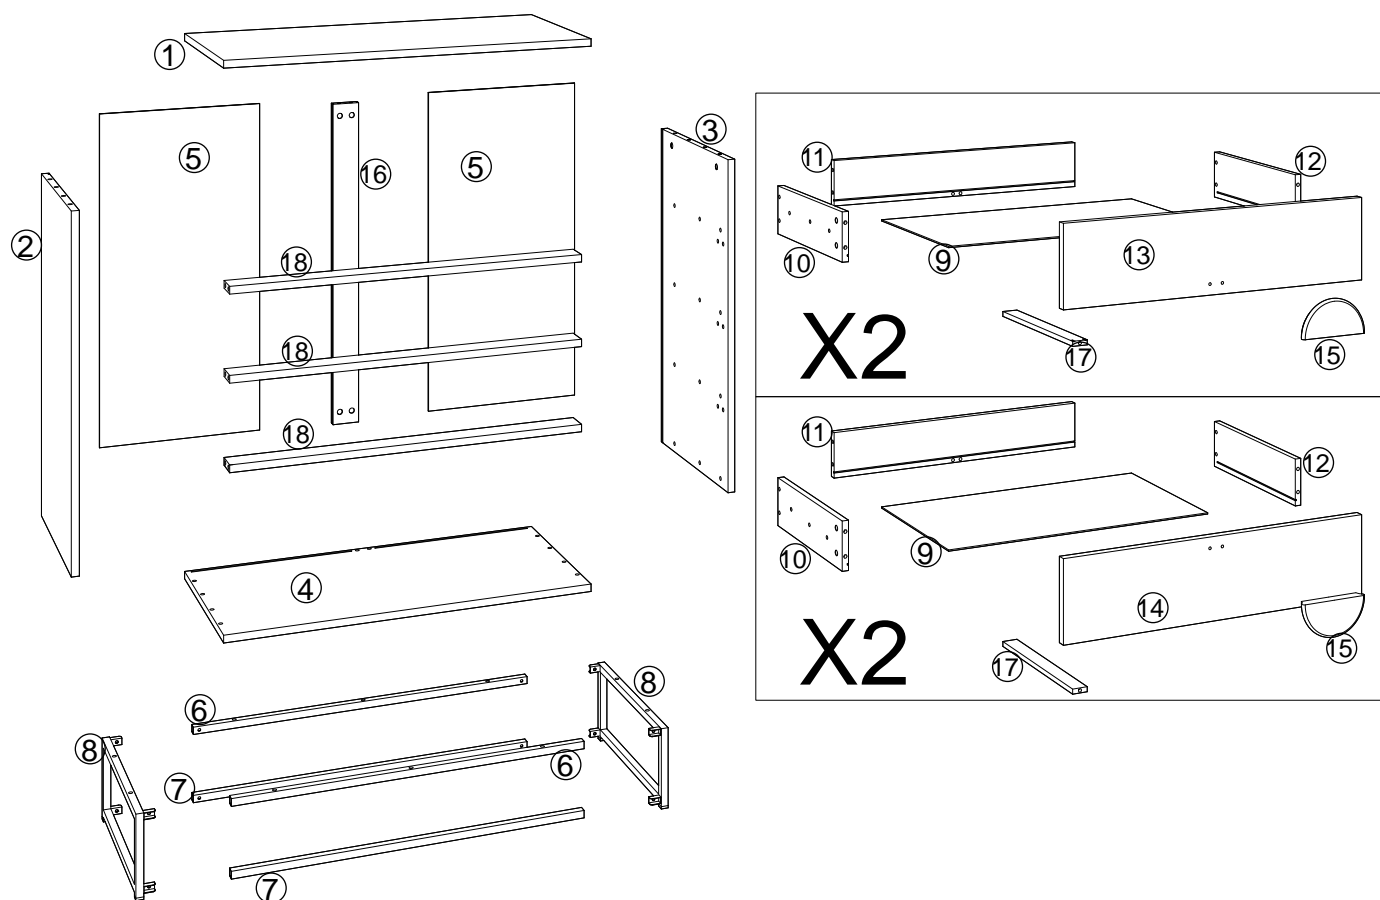
















1	TOP PANEL	11	DRAWER BACK PANEL x 4
2	LEFT SIDE PANEL	12	DRAWER RIGHT SIDE PANEL x 4
3	RIGHT SIDE PANEL	13	1st/3rd DRAWER FRONT PANEL x 2
4	BOTTOM PANEL	14	2nd/4th DRAWER FRONT PANEL x 2
5	BACK PANEL x 2	15	WOODEN HANDLE x 4
6	TOP METAL BAR x 2	16	MIDDLE SUPPORT PANEL
7	BOTTOM METAL BAR x 2	17	DRAWER SUPPORT PANEL x 4
8	METAL LEG x 2	18	CROSSING BAR x 3
9	DRAWER BOTTOM PANEL x 4		
10	DRAWER LEFT SIDE PANEL x 4		

CHECKLIST


Before you start.....

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Check and ensure that you have all required contents for complete assembly.
3. Always read the assembly instructions carefully before beginning assembly.
4. The packaging and contents can be a choking hazard. Please keep out of reach of small children at all times.
5. Do not over tighten the bolts as this may damage the thread.




A <input type="checkbox"/> cam bolt  M6x35mm 34xA	B <input type="checkbox"/> cam lock  M15x10mm 34xB	C <input type="checkbox"/> dowel  M6x30mm 14xC	D <input type="checkbox"/> screws  M4x40mm 4xD	E <input type="checkbox"/> wall anchor  2xE
F <input type="checkbox"/> screws  M4x35mm 24xF	G <input type="checkbox"/> plastic bracket  16xG	H <input type="checkbox"/> screws  M3x16mm 16xH	I <input type="checkbox"/> allen key  1xI	J <input type="checkbox"/> screws  M4x25mm 8xJ
K <input type="checkbox"/> runner  K2 K1 8xK	L <input type="checkbox"/> screws  M3x12mm 48xL	M <input type="checkbox"/> screws  M6x12mm 8xM	N <input type="checkbox"/> screws  M5x30mm 10xN	
O <input type="checkbox"/> washer  10xO				


CAM LOCK INSTALL METHOD AS FOLLOWS

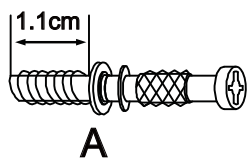


Step 1

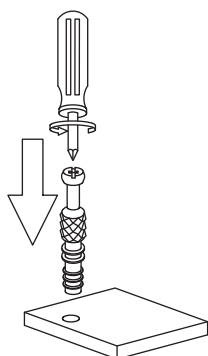


Step 2

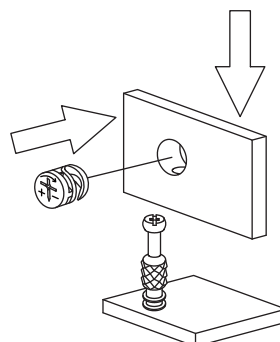

Step 3

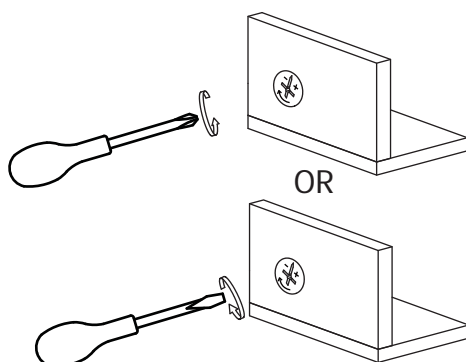


Lock




Fix cam nut into the bottom of hole then tighten it.


1

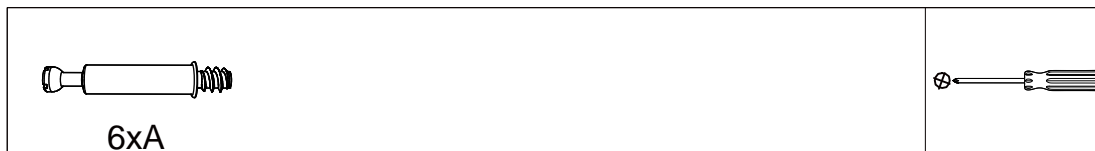




STEP 1: Fix cam bolts (A) to top panel①.

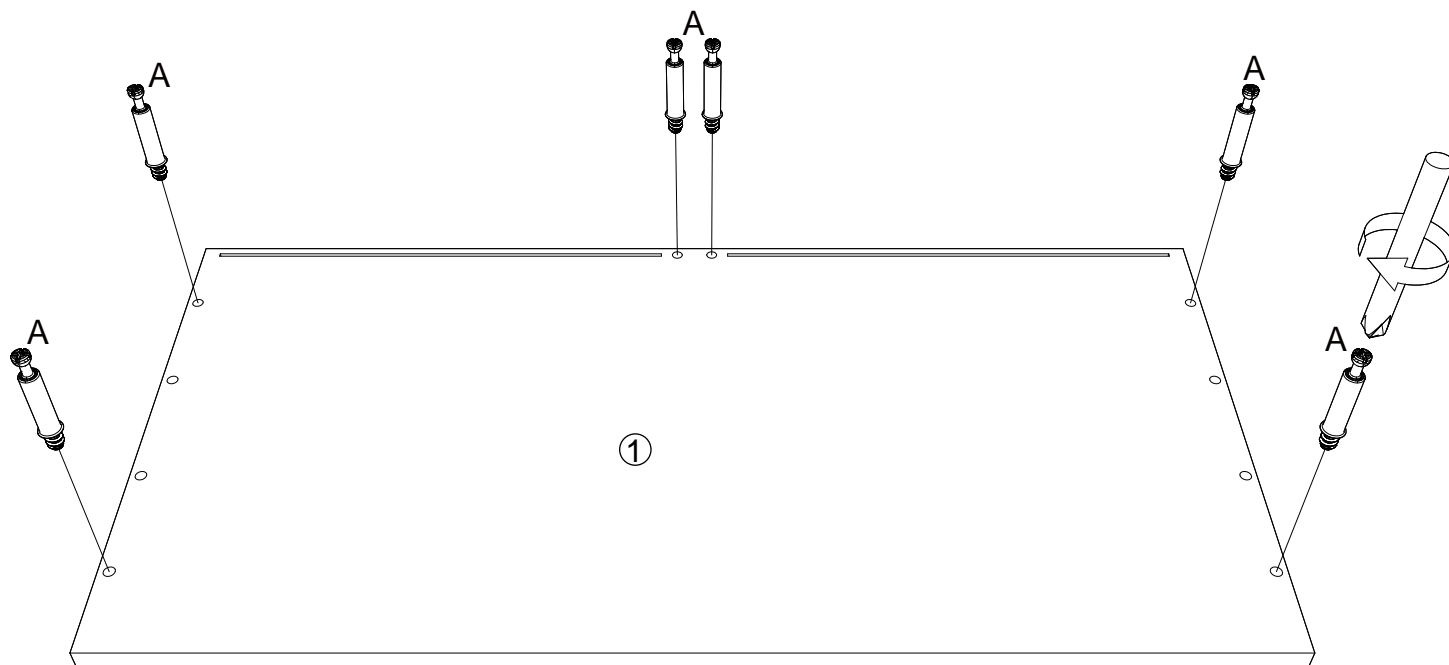


2

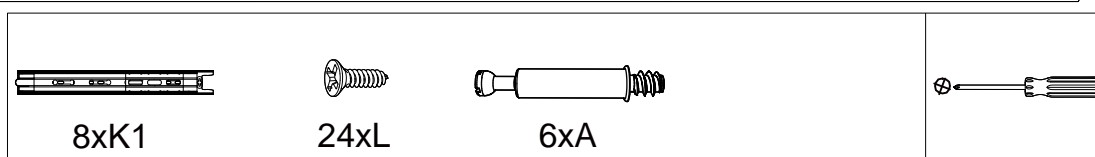


STEP 2: Fix runners(K1) to left side panel② and right side panel③ using screws(L). Fix cam bolts(A) to left side panel② and right side panel③

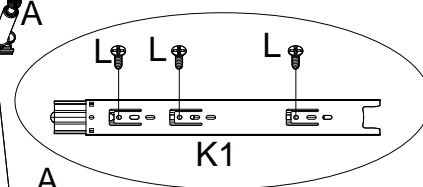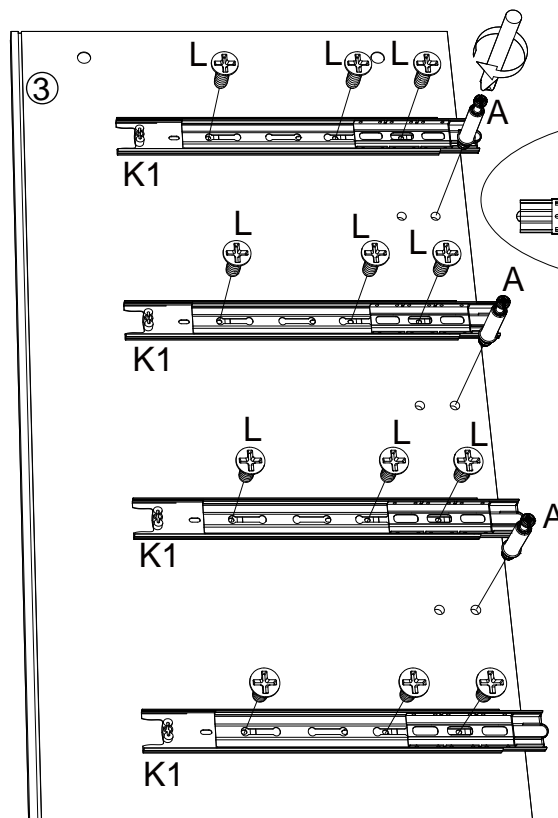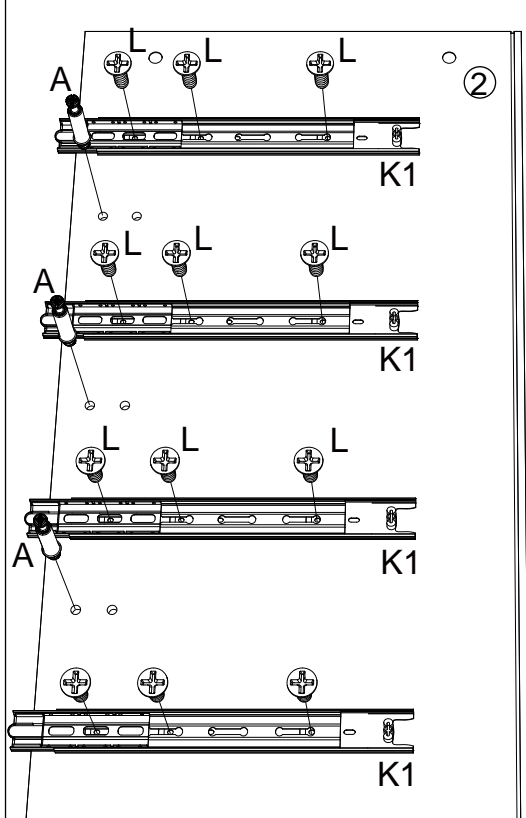

3

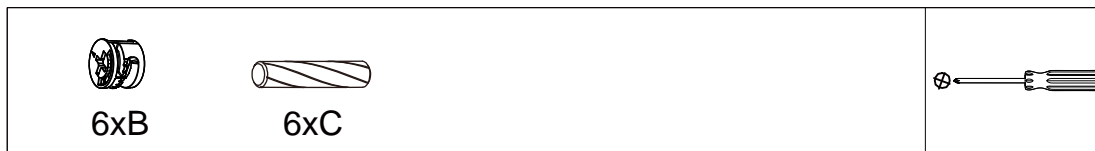


STEP 3: Attach crossing bars ⑱ to left side panel ② and right side panel ③ using cam locks (B) and dowels (C).

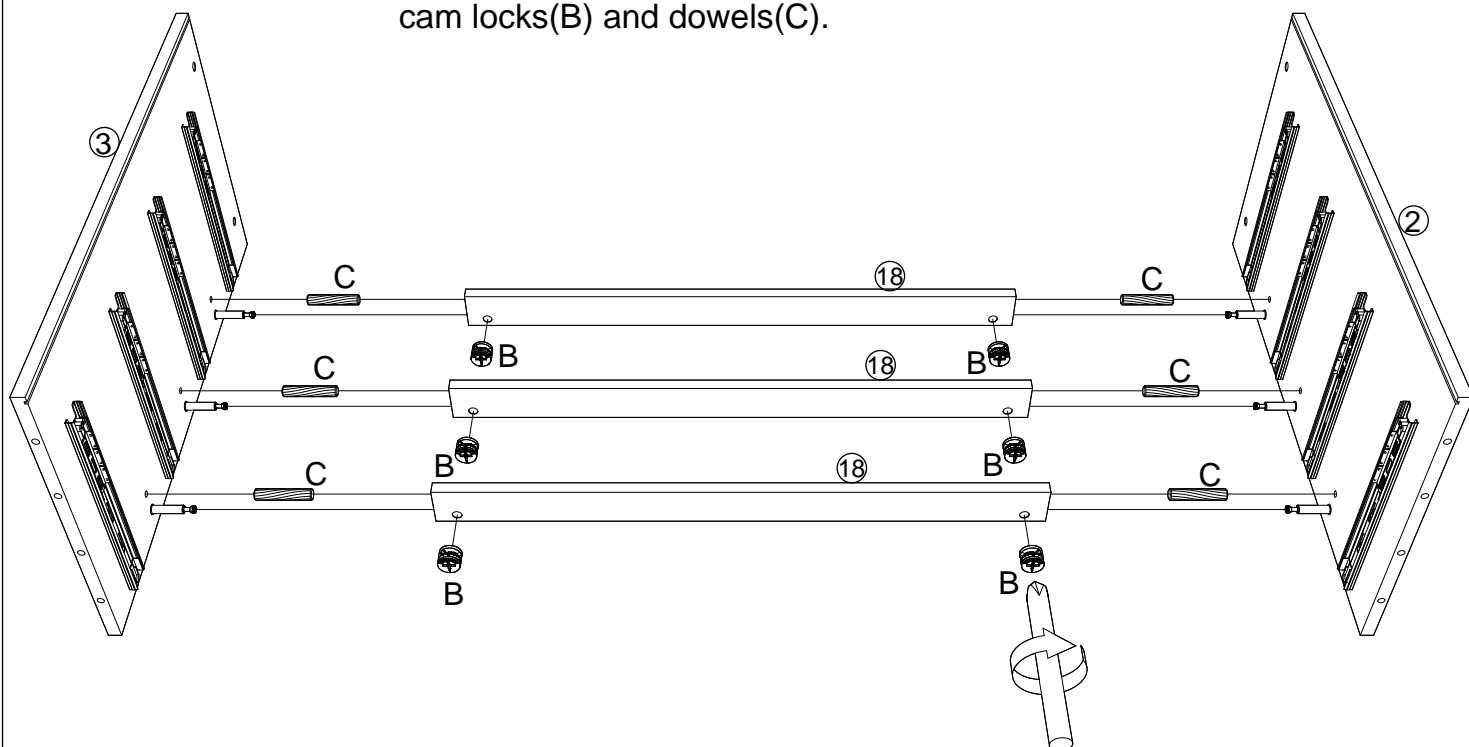

4




STEP 4: Fix cam bolts (A) to bottom panel ④.

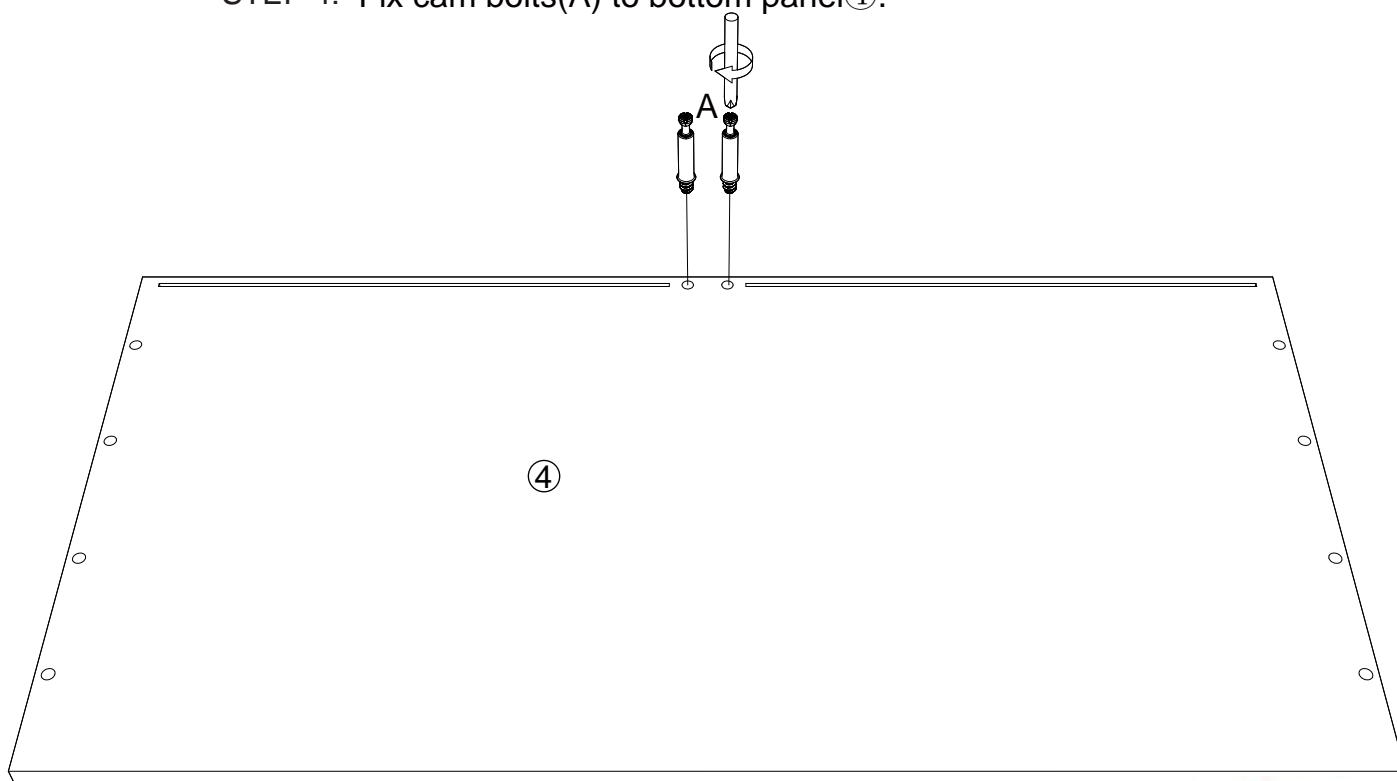


Amart
Furniture

5

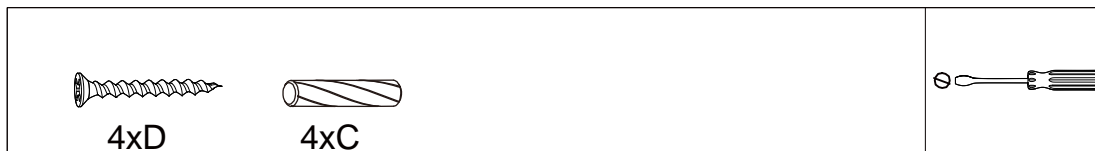


STEP 5: Attach bottom panel ④ to the existing unit using screws(D) and dowels(C).

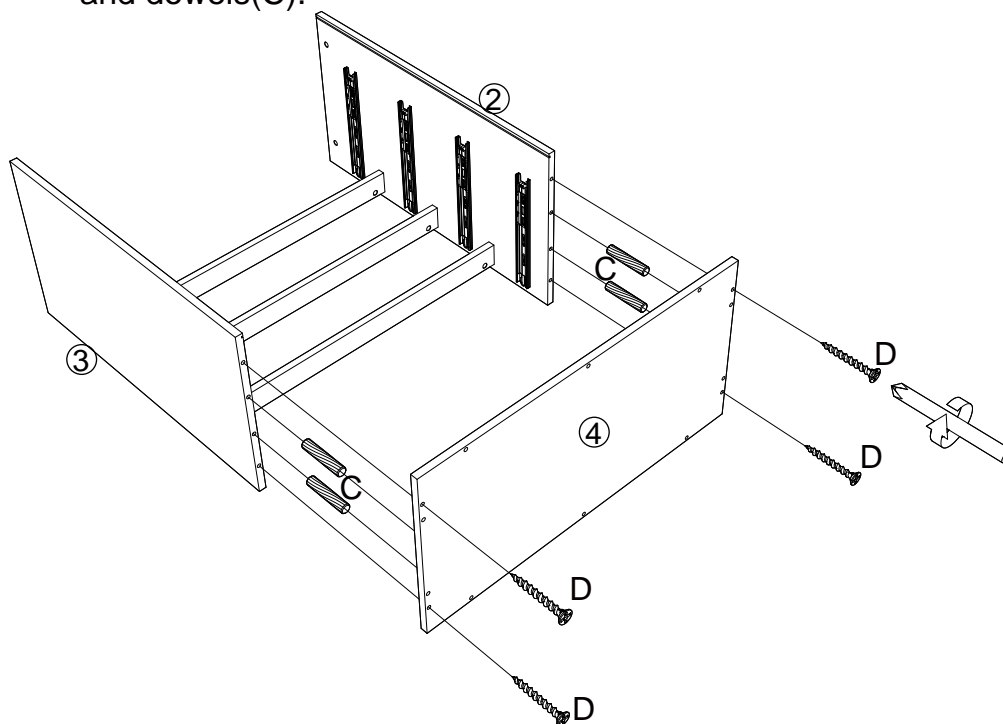

6




STEP 6: Attach middle support panel ⑩ to the existing unit using cam locks(B).

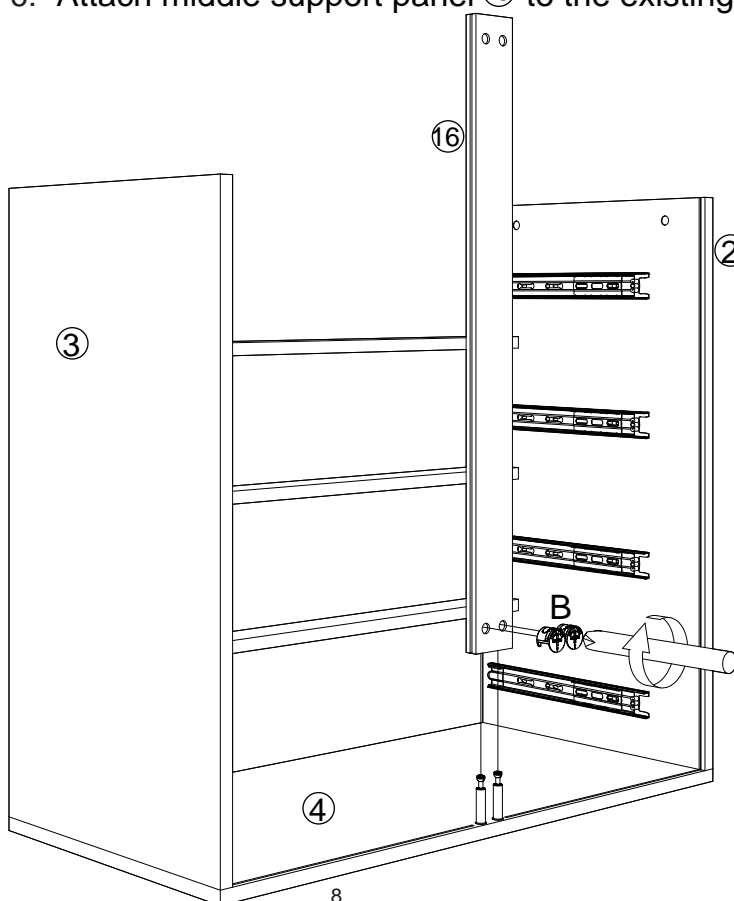

7




STEP 7: Insert back panels⑤ to the existing unit.

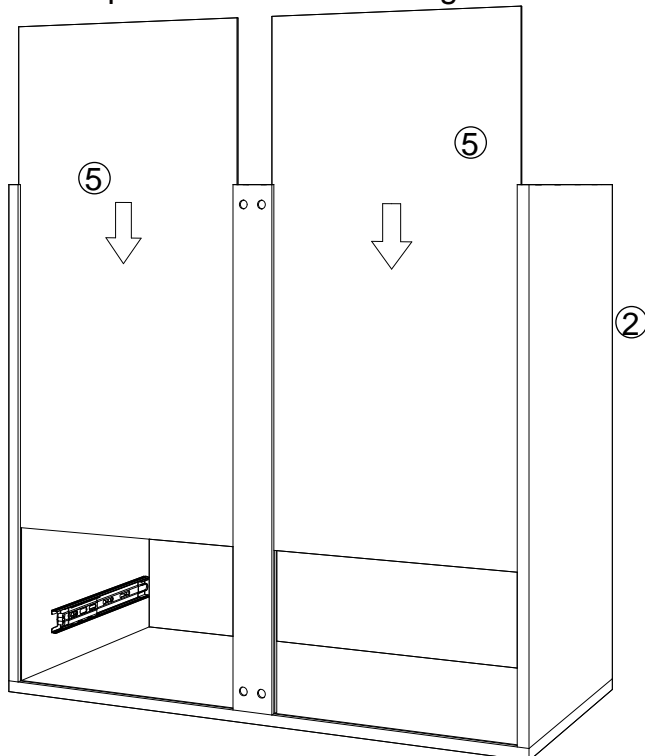


8




STEP 8: Attach top panel① to the existing unit using cam locks(B) and dowels(C).

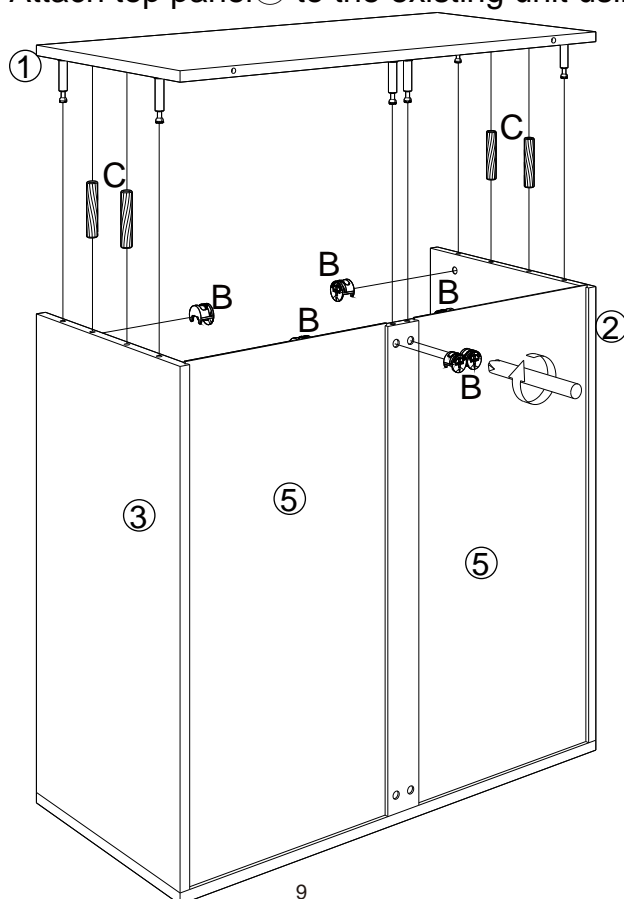


9

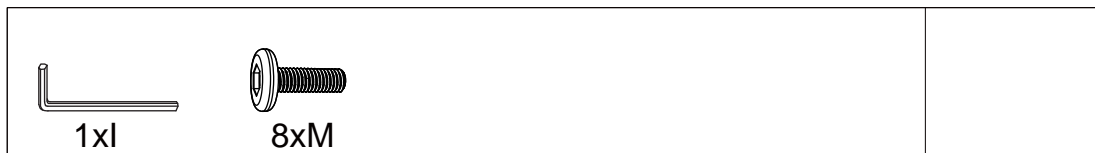


STEP 9: Assemble the metal frame as shown in below diagram using allen key(I) and screws(M).

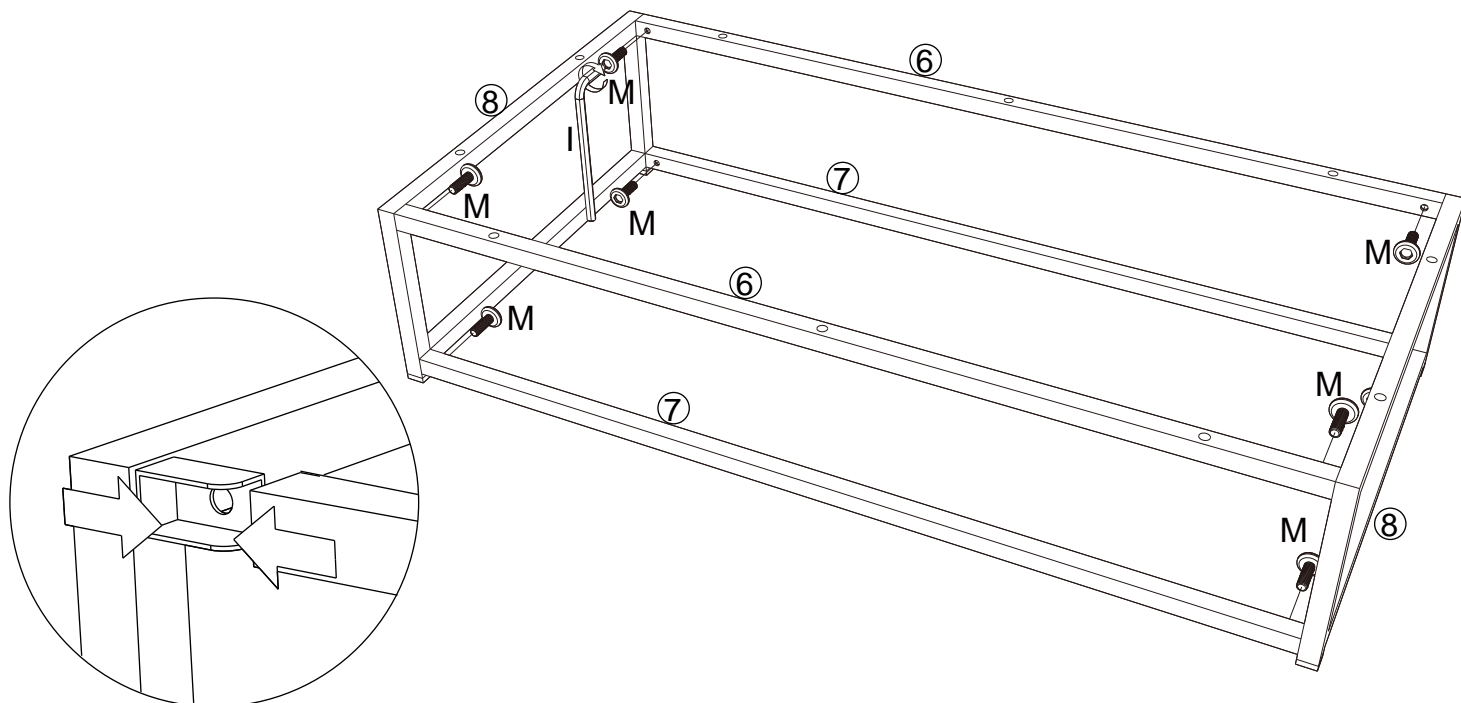


10

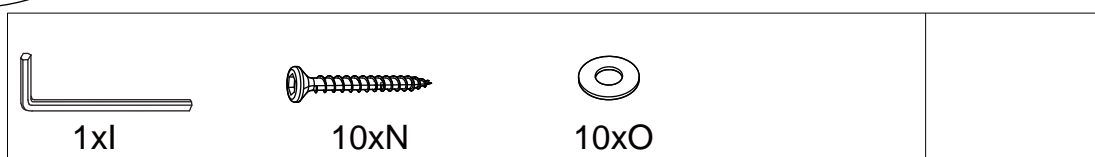


STEP 10: Attach the bottom metal frame to the body using allen key(I),screws(N) and washers(O).

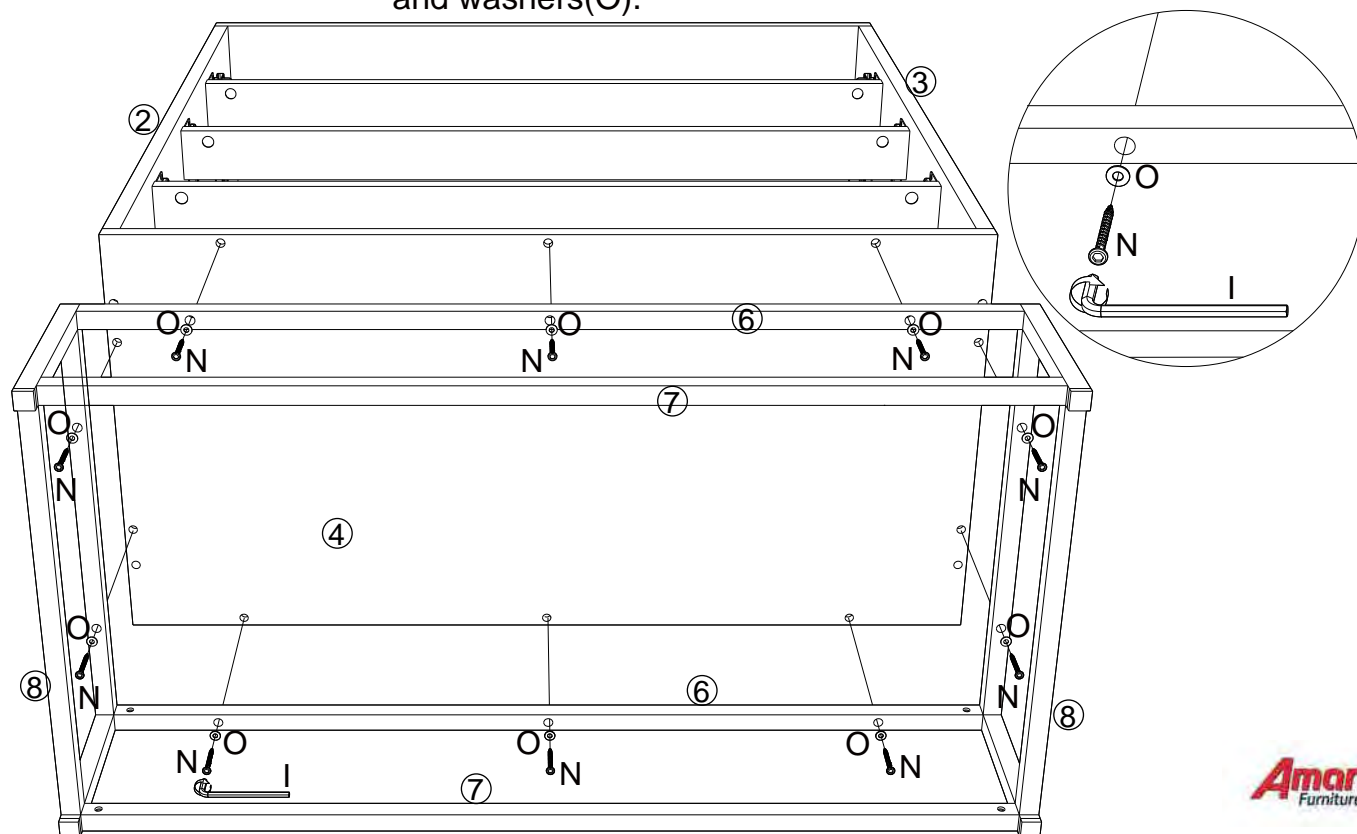


11

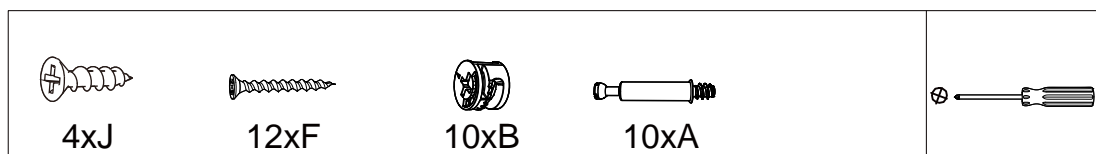


STEP 11: Assemble the first and third drawers as shown in below diagram using screws(J),screws(F),cam locks(B) and cam bolts (A) .

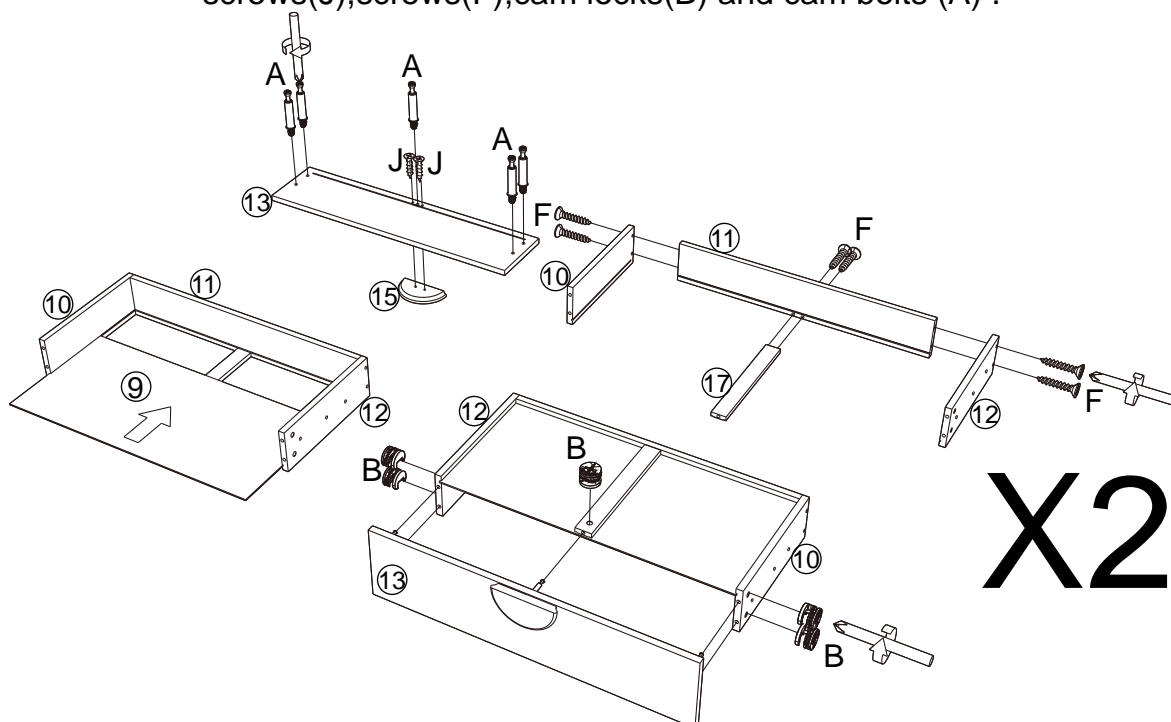

12

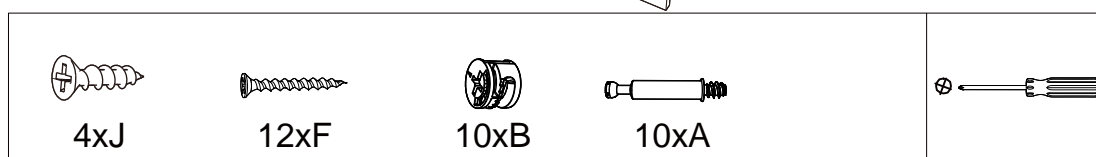


STEP 12: Assemble the second and fourth drawers as shown in below diagram using screws(J),screws(F),cam locks(B) and cam bolts (A) .

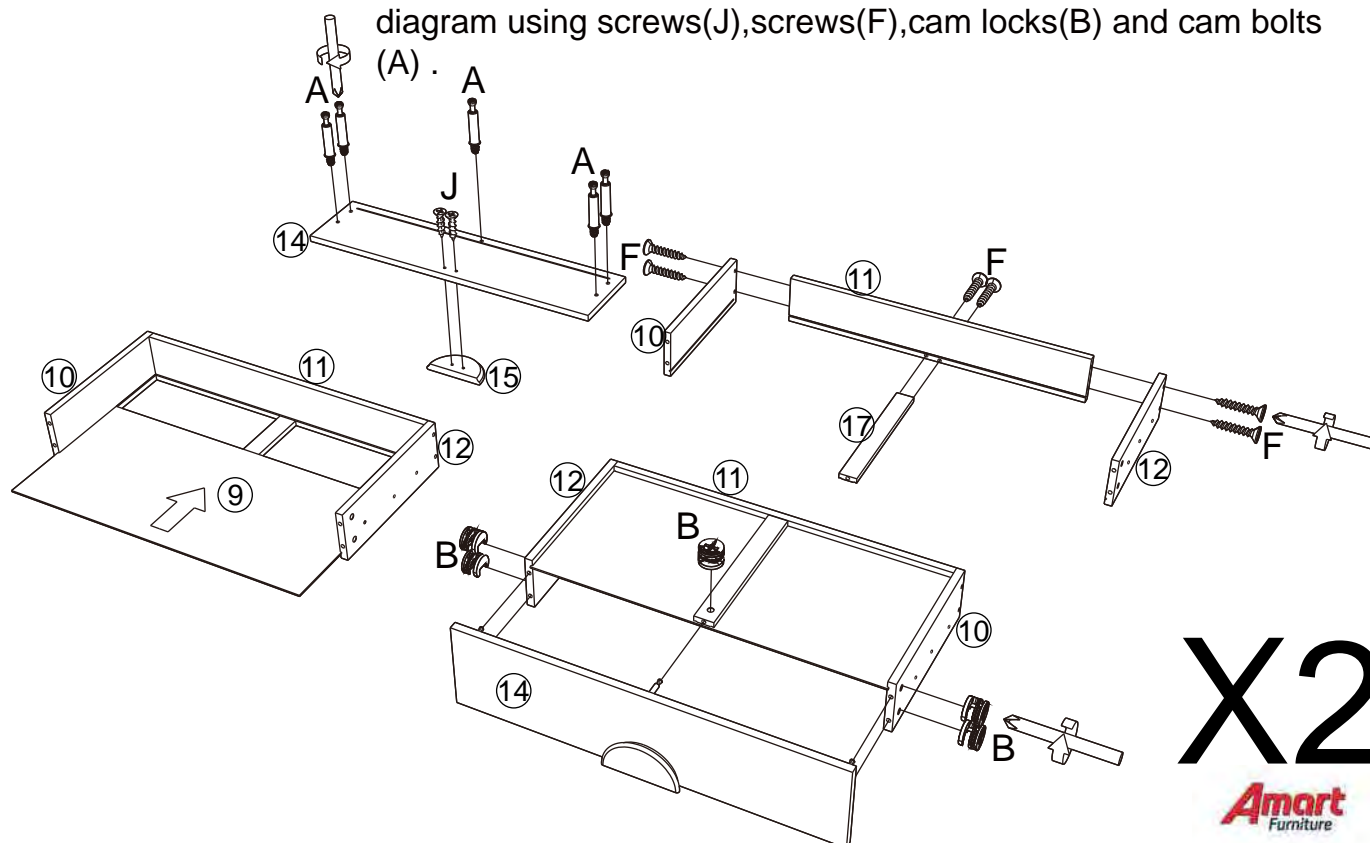


13




STEP 13: Fix runners(K2) to the first and third drawers using screws(L).

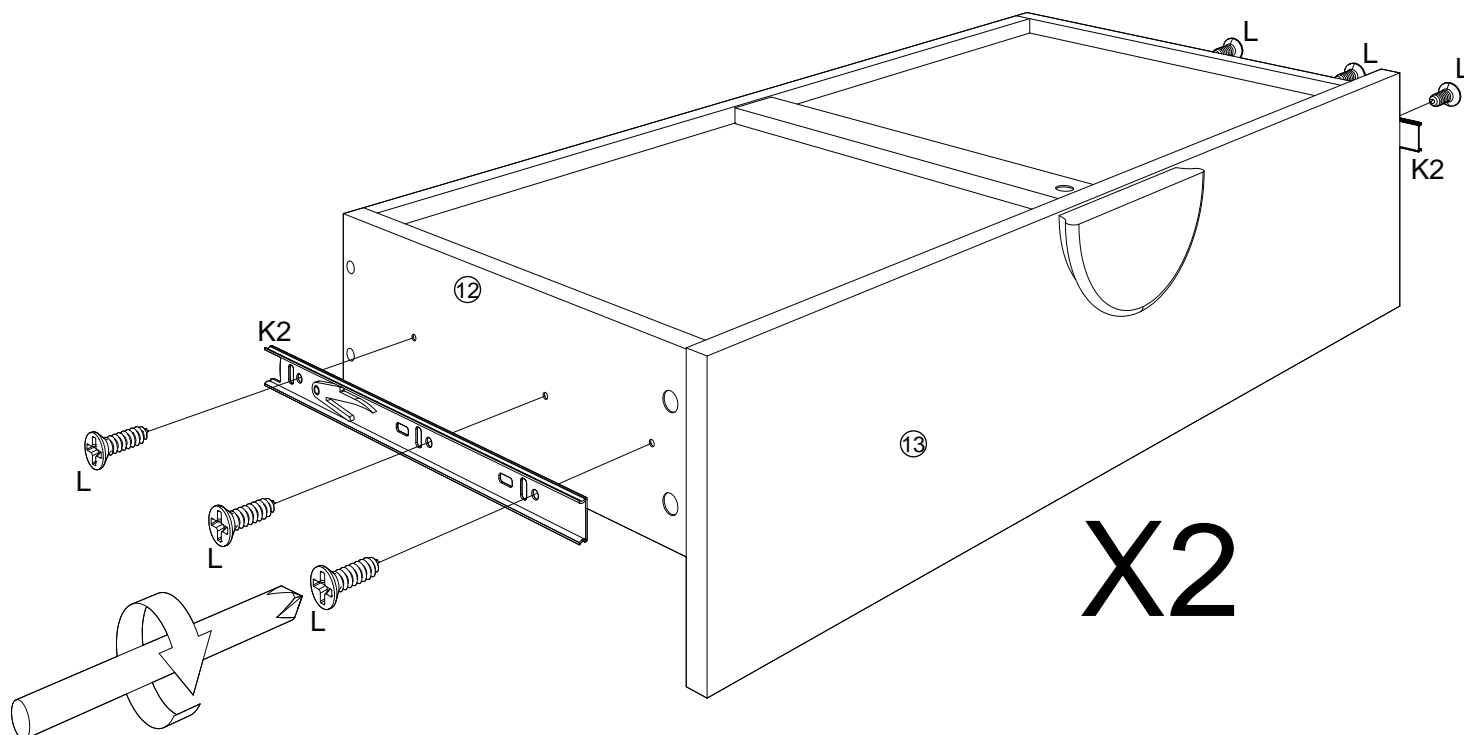

14

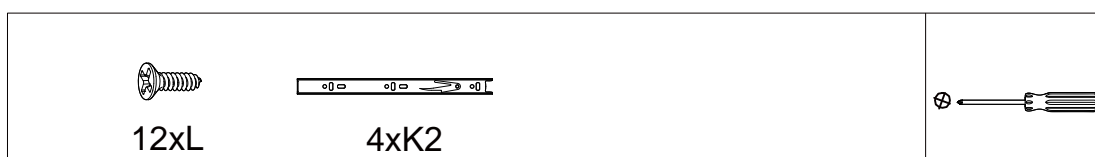


STEP 14: Fix runners(K2) to the second and fourth drawers using screws(L).

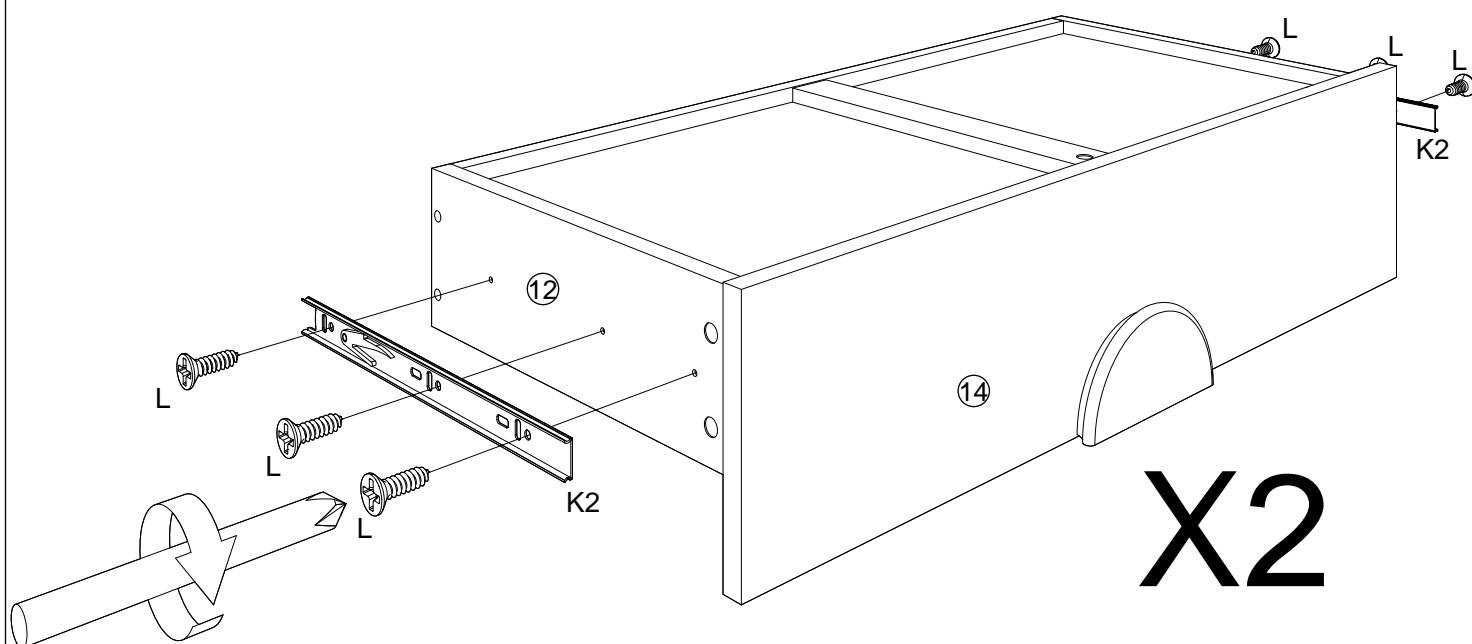

15


STEP 15: Place drawers to the existing unit.

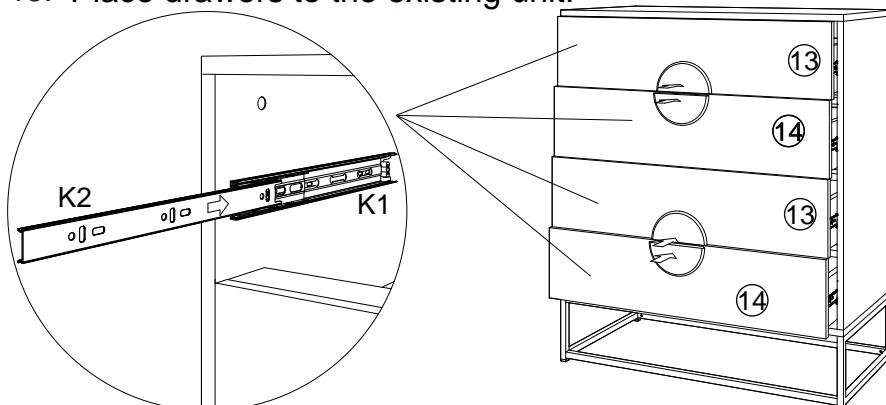

To insert Drawers:

- Bring the ball-bearing slider on Drawer Glide Track(K1) forward to the front edge of(K1).
- Align the back open-end of the Drawer Glide Runner(K2) on each side of the drawer to fit squarely into the groove on the open front-end of(K1).Be sure the drawer/K2 is not tilted or angled, and gently push in drawer squarely.
- When the drawer is pushed in about half way,the Disconnect Lever on (K2) will be engaged onto(K1) which will create a slight resistance-this is normal. Pull out the drawer a little bit and gently push in the drawer again to engage the Lever to the slide mechanism on (K1). The drawer should now slide smoothly.
- If the drawer cannot be pushed in or stuck, do not force it in. Remove the drawer and repeat the steps above.


16





16xG



16xH



STEP 16: Fix plastic brackets(G) to back panel using screws(H).

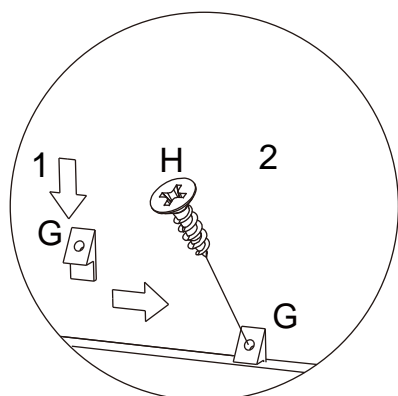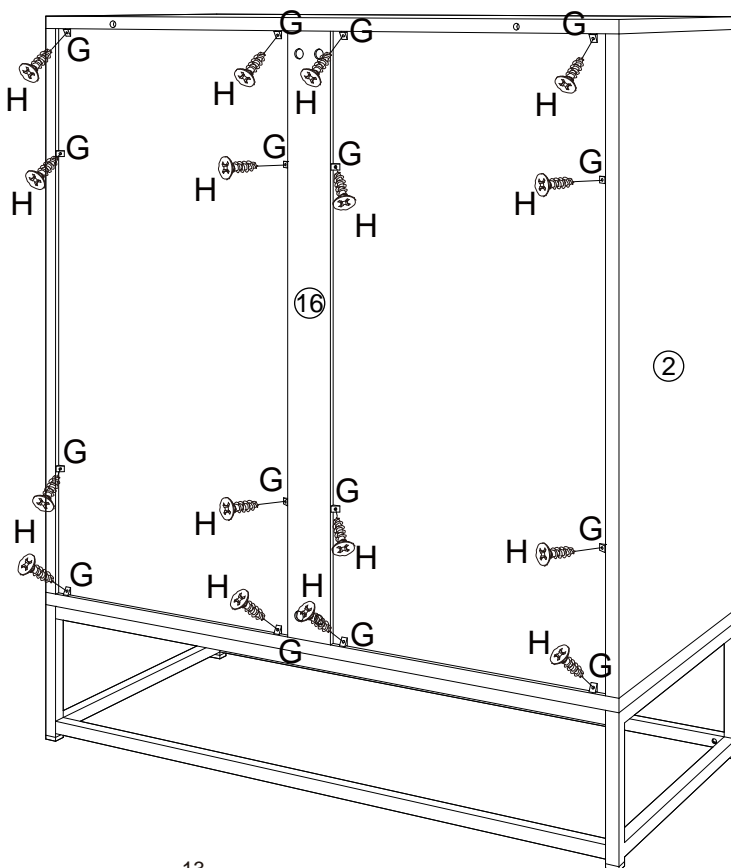




Amart
Furniture

17



STEP 17: Fix wall anchor(E) onto the wall.


WALL

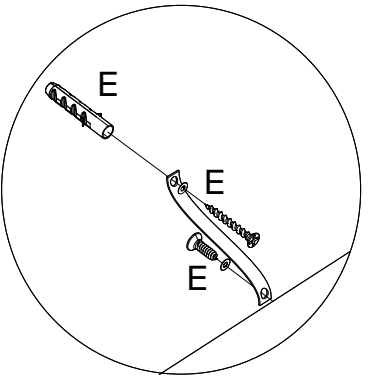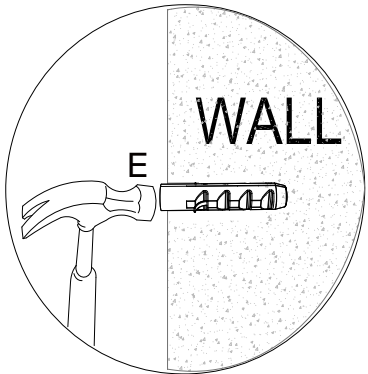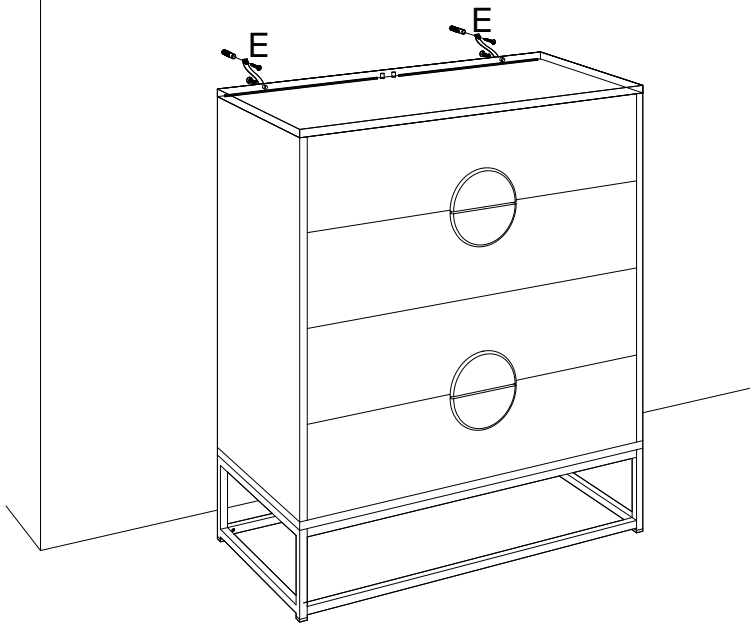

18



STEP 18:

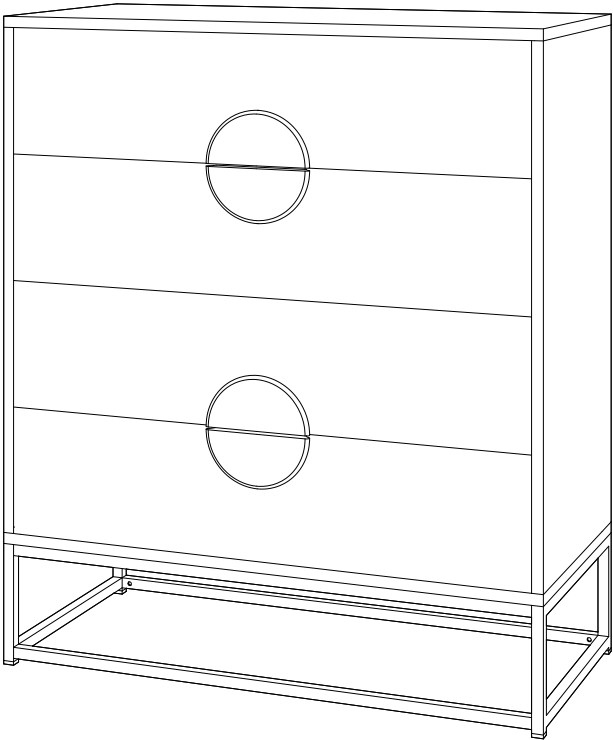

CAUTION: Always Lift Your Furniture When Moving /Relocating - Do Not Drag. Dragging Can Cause The Legs To Bend/Break.



PRODUCT CARE:

To protect your furniture, we suggest the following:

- *Avoid placing your furniture in direct sunlight.

- *Do not place furniture directly under windows.

- *Do not place sharp materials(knife, fork, etc) directly onto your furniture as sharp material may scrape and damage the finish.

Do not place material with high temperature directly onto the surface of your furniture.

- *Protective padding is strongly recommended when using your furniture .

- *Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.

- *Use a clean, soft, dry, lint free absorbant cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.