


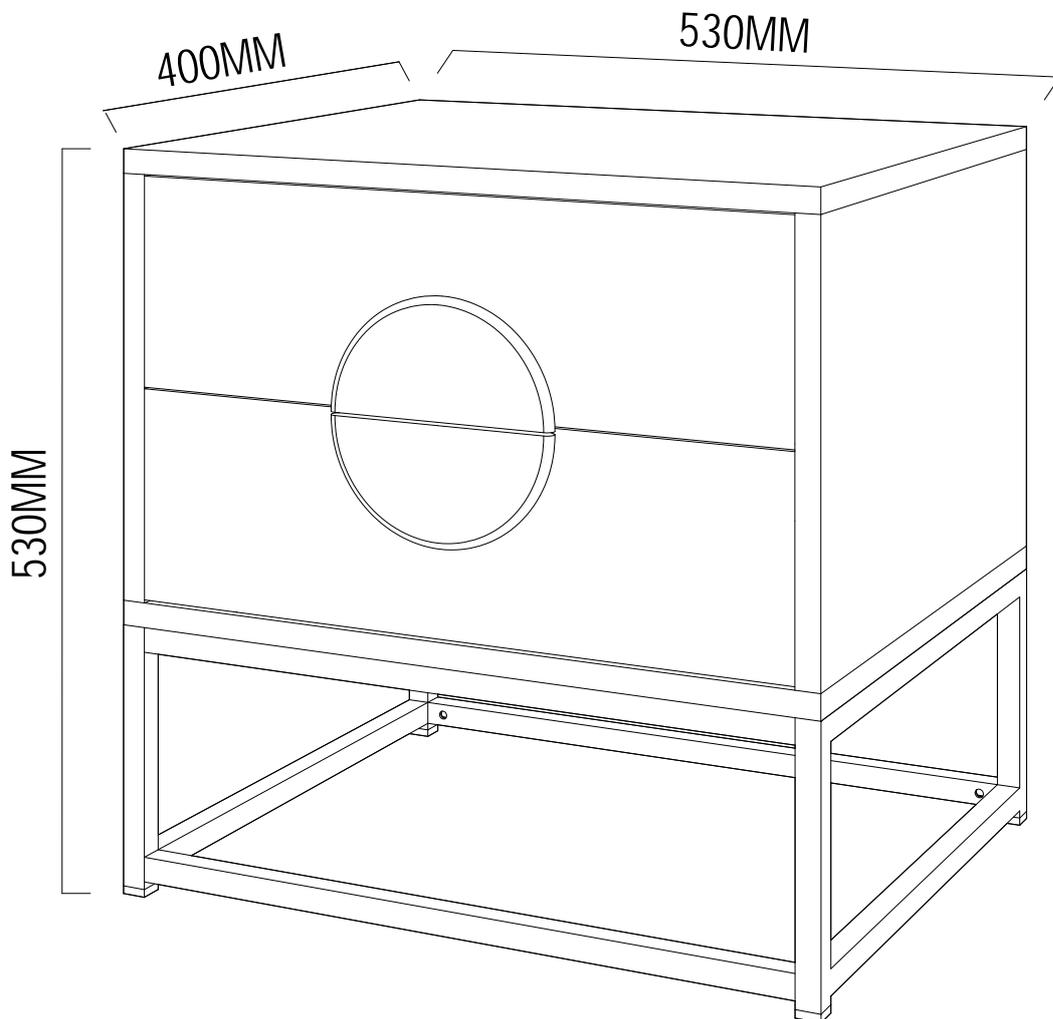


ASSEMBLY INSTRUCTION  
VALKYRIE BEDSIDE  
ITEM CODE 76053

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.  
For any assistance with assembly or for missing parts please phone  
Amart Furniture, Customer Service Free call 1800 351 084



Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.  
For any assistance with assembly or for missing parts please phone  
Amart Furniture, Customer Service Free call 1800 351 084



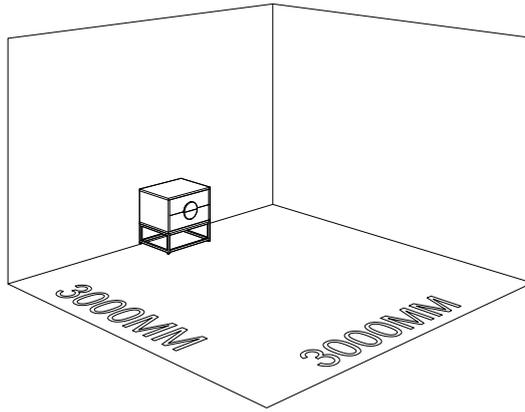

<p>ALLOW 60 MINUTES</p>	<p>PEOPLE REQUIRED</p>
<p>ADDITIONAL TOOLS REQUIRED</p>	

! **TIPPING WARNING** !

**Serious or fatal injuries may occur from furniture toppling over. To help avoid this please follow the below recommendations:**

- Install the provided "Tipping Kit" as per the instructions
- Never allow children to climb on or hang off of any part of this product
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product

If this product has drawers:


- Place the heaviest items in lowest drawers
- Do not open more than 1 drawer at a time as this may cause the product to become unbalanced
- Do not tamper with or remove any drawer interlocking/running system

**Note: The use of the provided "Tipping Kit" may reduce but not necessarily eliminate the risk of furniture toppling over. Please use this product with caution.**

*This is a permanent label. Do not attempt to remove!*

**Assembly is to be carried out by a competent adult only.**  
**During assembly children should be kept away from the product due to possible risk of injury.**  
**Do not use this item if any components are missing or damaged.**  
**Please keep these instructions for future reference.**

# EXPLODED EXAMPLE

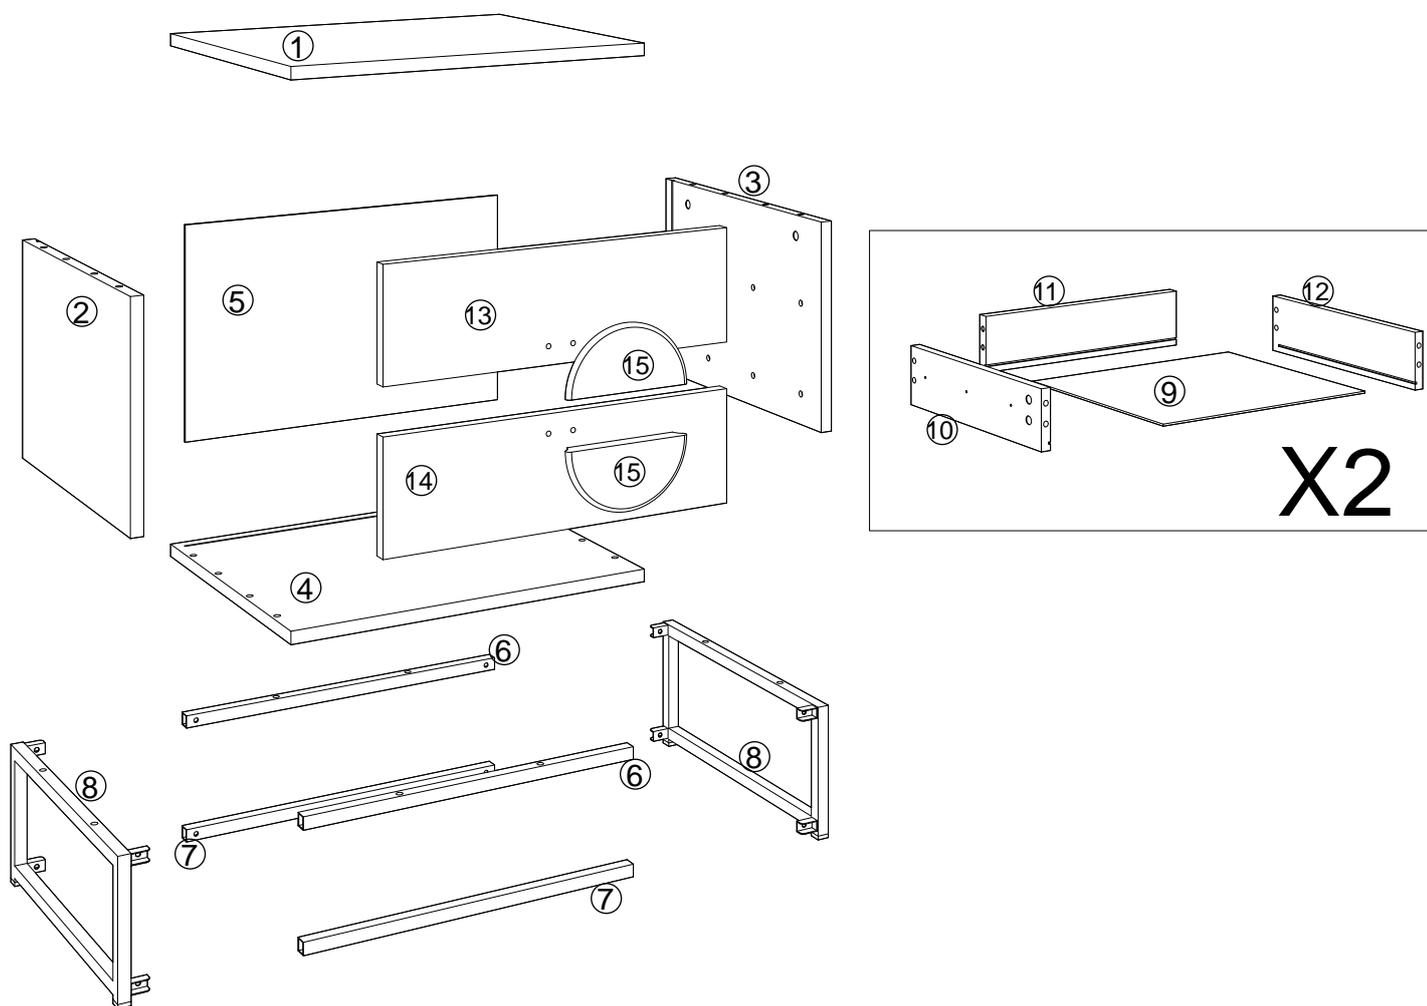






1	TOP PANEL	9	DRAWER BOTTOM PANEL x2
2	LEFT SIDE PANEL	10	DRAWER LEFT SIDE PANEL x2
3	RIGHT SIDE PANEL	11	DRAWER BACK PANEL x2
4	BOTTOM PANEL	12	DRAWER RIGHT SIDE PANEL x2
5	BACK PANEL	13	TOP DRAWER FRONT PANEL
6	TOP METAL BAR x2	14	BOTTOM DRAWER FRONT PANEL
7	BOTTOM METAL BAR x2	15	WOODEN HANDLE x2
8	METAL LEG x2		

# CHECKLIST




Before you start.....

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Check and ensure that you have all required contents for complete assembly.
3. Always read the assembly instructions carefully before beginning assembly.
4. The packaging and contents can be a choking hazard. Please keep out of reach of small children at all times.
5. Do not over tighten the bolts as this may damage the thread.




<p><b>A</b> <input type="checkbox"/></p> <p>cam bolt</p>  <p>M6x35mm 12xA</p>	<p><b>B</b> <input type="checkbox"/></p> <p>cam lock</p>  <p>M15x10mm 12xB</p>	<p><b>C</b> <input type="checkbox"/></p> <p>dowel</p>  <p>M6x30mm 8xC</p>	<p><b>D</b> <input type="checkbox"/></p> <p>screws</p>  <p>M4x40mm 4xD</p>	<p><b>E</b> <input type="checkbox"/></p> <p>wall anchor</p>  <p>1xE</p>
<p><b>F</b> <input type="checkbox"/></p> <p>screws</p>  <p>M4x35mm 8xF</p>	<p><b>G</b> <input type="checkbox"/></p> <p>plastic bracket</p>  <p>4xG</p>	<p><b>H</b> <input type="checkbox"/></p> <p>screws</p>  <p>M3x16mm 4xH</p>	<p><b>I</b> <input type="checkbox"/></p> <p>allen key</p>  <p>1xI</p>	<p><b>J</b> <input type="checkbox"/></p> <p>screws</p>  <p>M4x25mm 4xJ</p>
<p><b>K</b> <input type="checkbox"/></p> <p>runner</p>  <p>K2 ↑ K1 4xK</p>	<p><b>L</b> <input type="checkbox"/></p> <p>screws</p>  <p>M3x12mm 24xL</p>	<p><b>M</b> <input type="checkbox"/></p> <p>screws</p>  <p>M6x12mm 8xM</p>	<p><b>N</b> <input type="checkbox"/></p> <p>screws</p>  <p>M5x30mm 8xN</p>	
<p><b>O</b> <input type="checkbox"/></p> <p>washer</p>  <p>8xO</p>				


# CAM LOCK INSTALL METHOD AS FOLLOWS

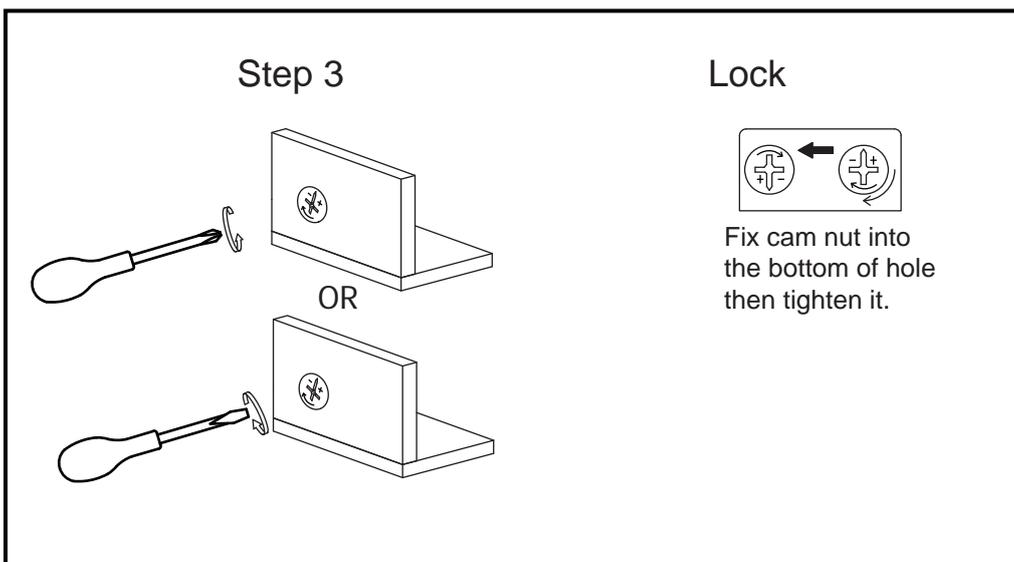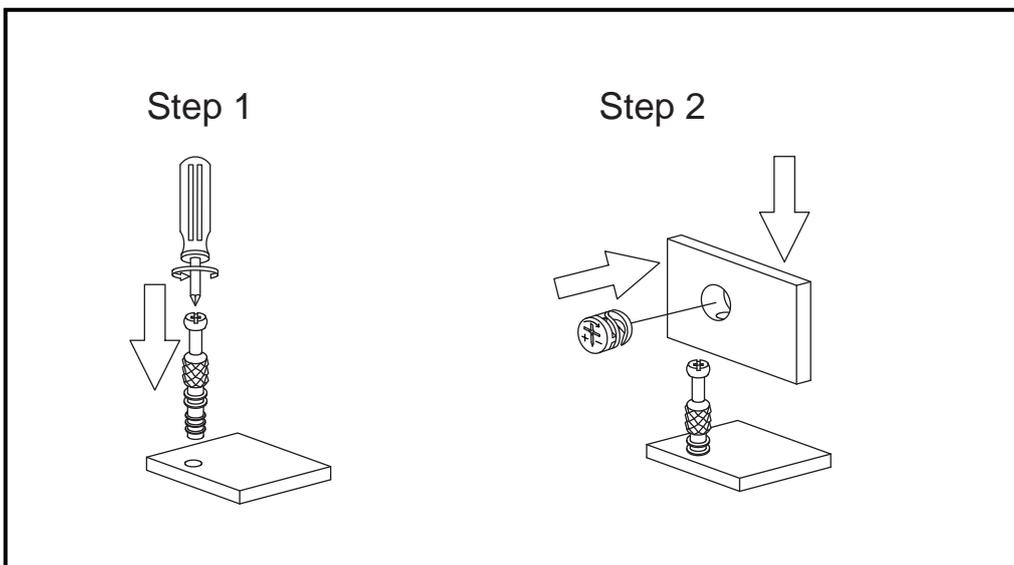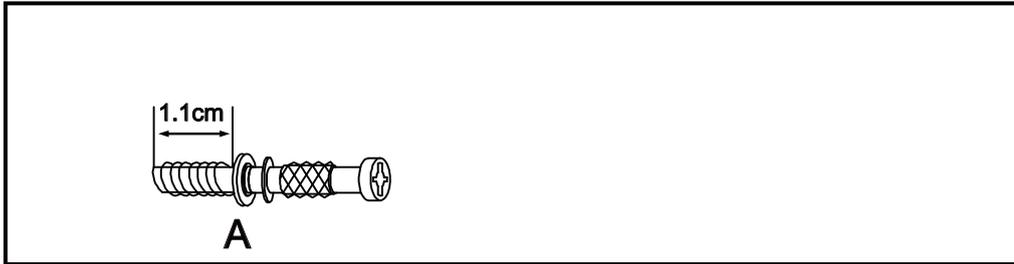

# 1

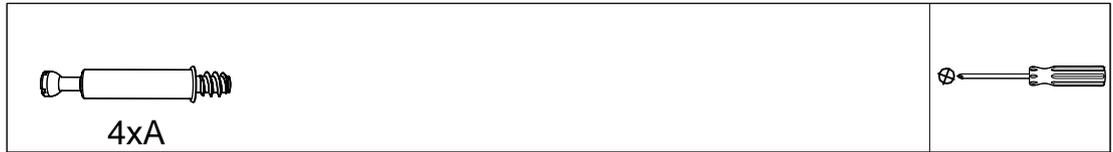




STEP 1: Fix cam bolts (A) to top panel ①.

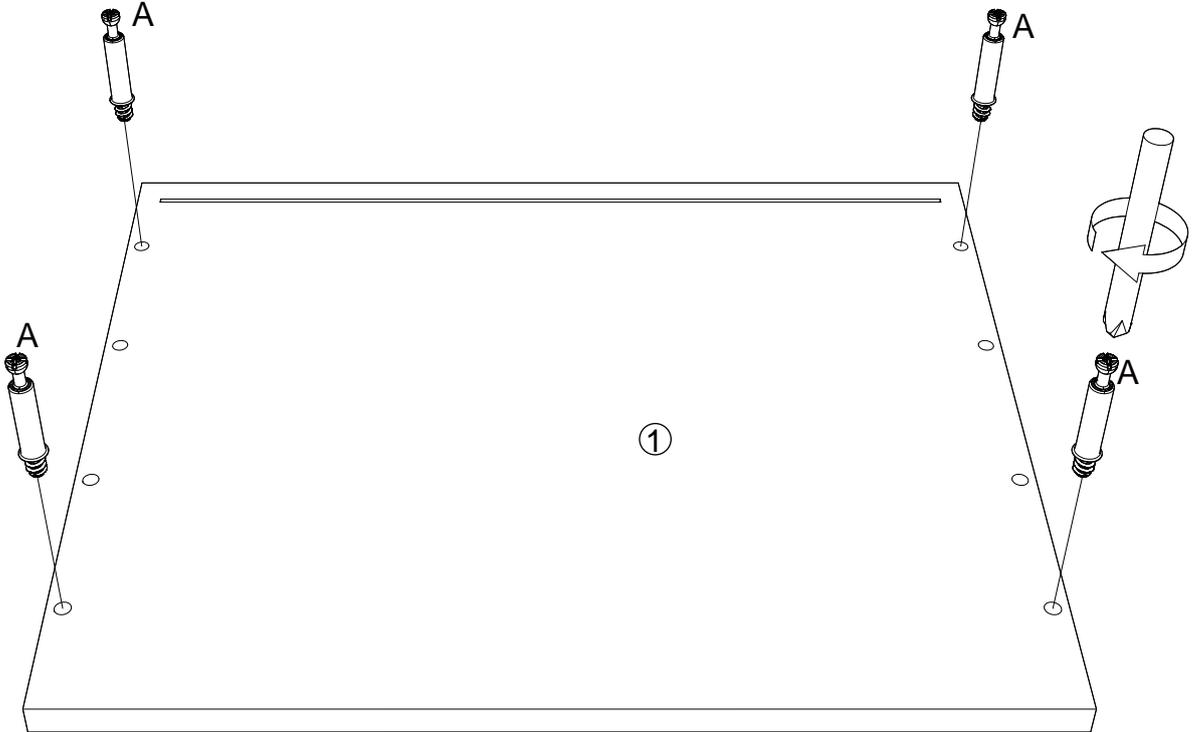

# 2




STEP 2: Fix runners (K1) to left side panel ② and right side panel ③ using screws (L).

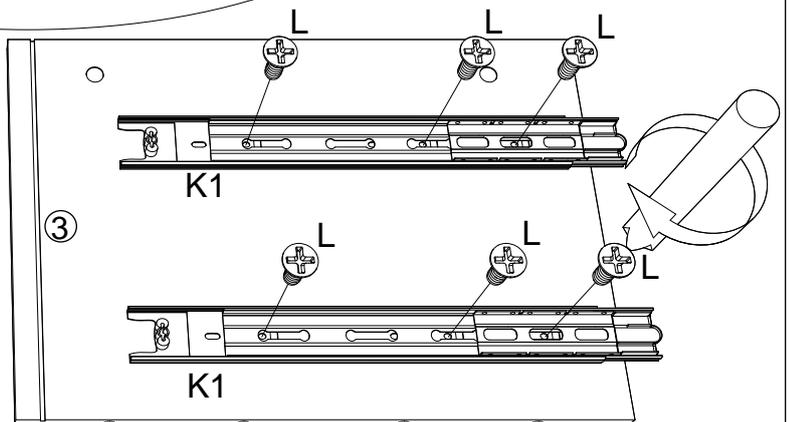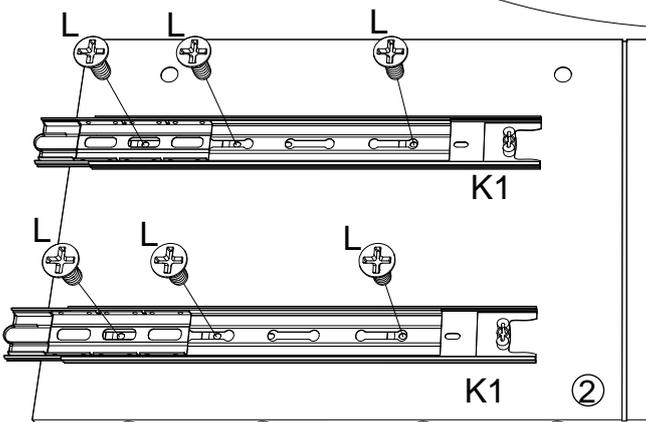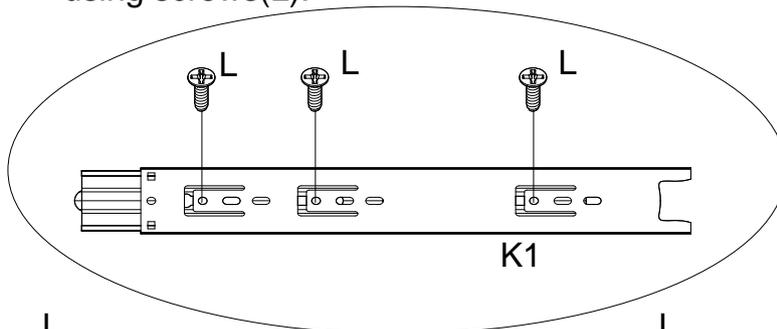


# 3




STEP 3: Attach left side panel② and right side panel③ to bottom panel④ using dowels(C) and screws(D).

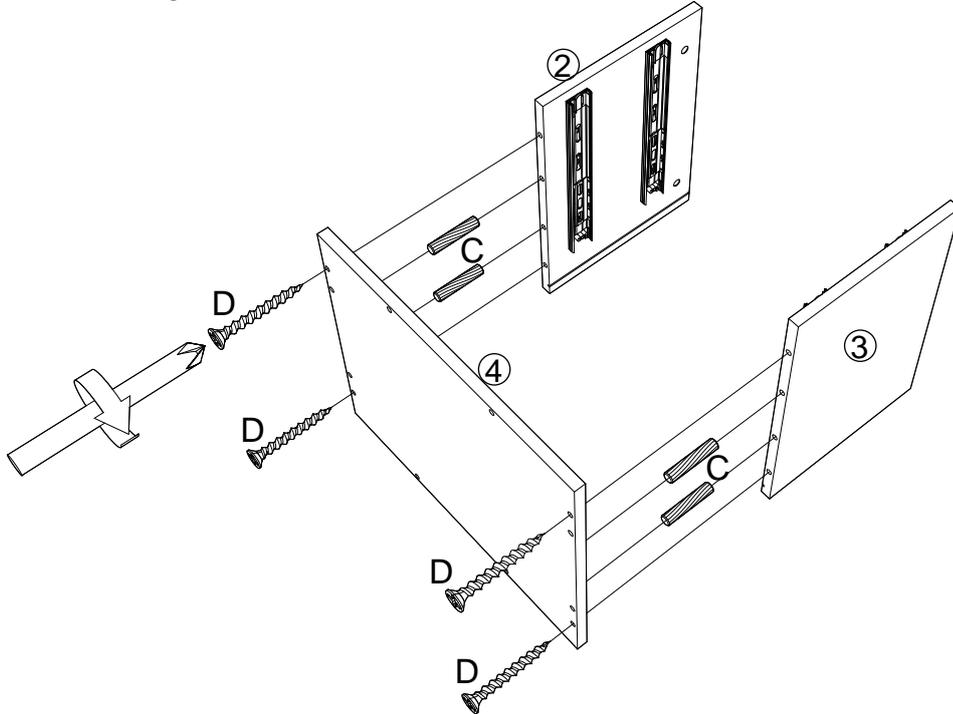


# 4

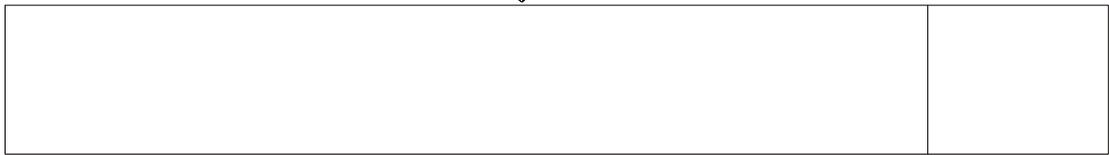


STEP 4: Insert back panel⑤ to the existing unit.

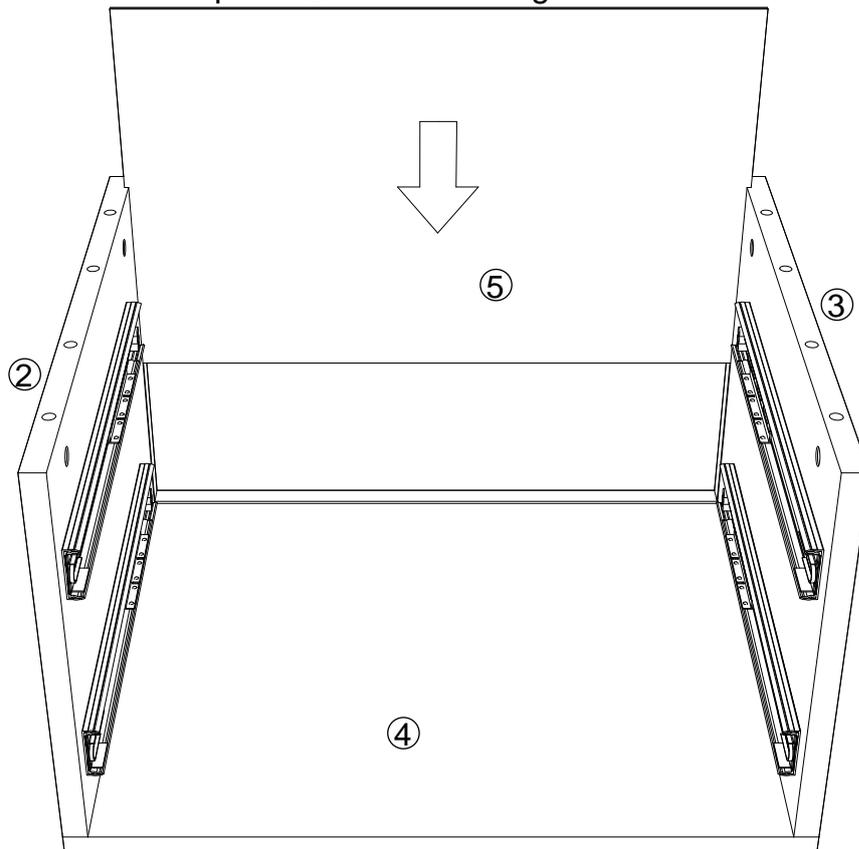


# 5

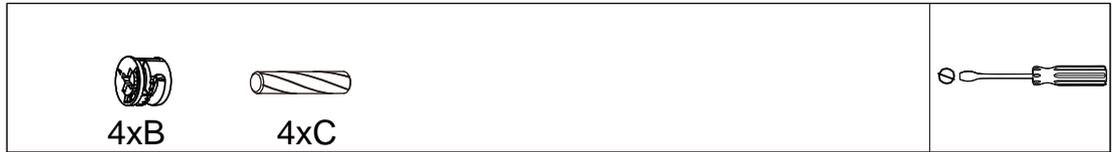


STEP 5: Attach top panel ① to the existing unit using dowels (C) and cam locks (B).

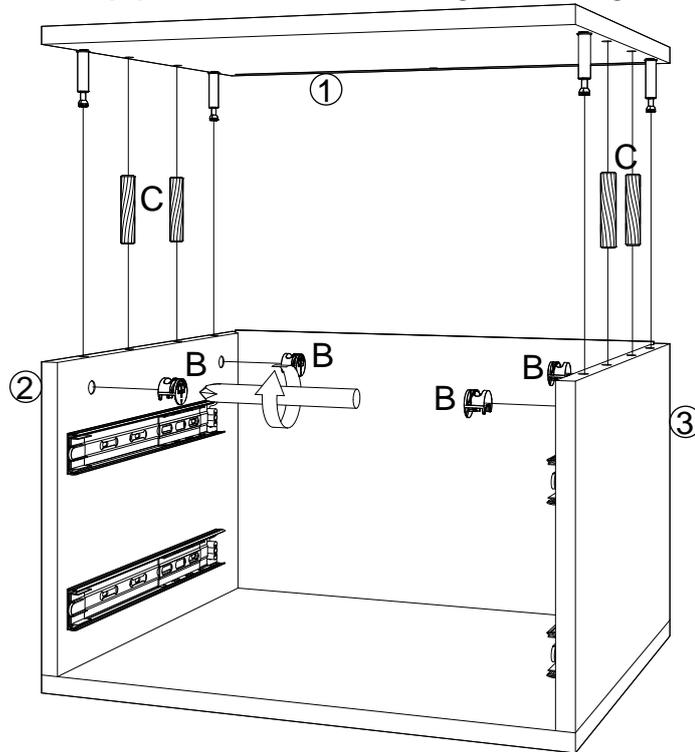


# 6

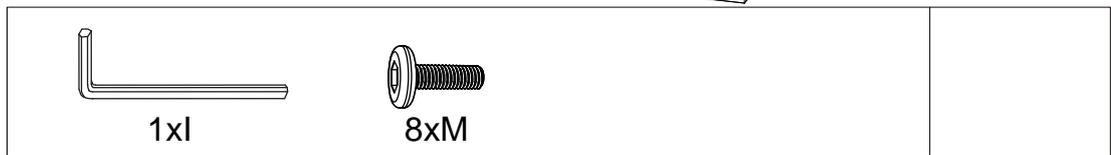


STEP 6: Attach top metal bars ⑥, bottom metal bars ⑦ to metal legs ⑧ using allen key (l) and screws (M).

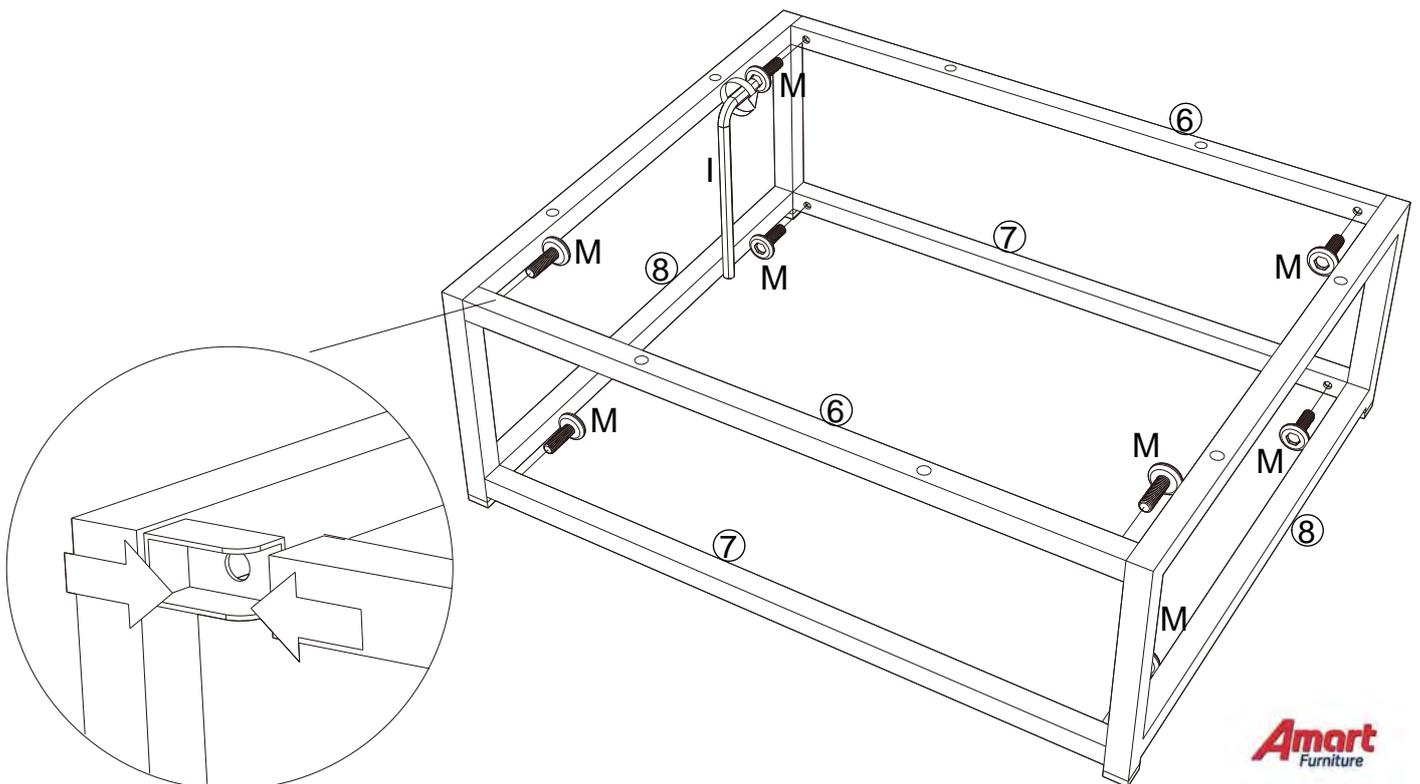


# 7

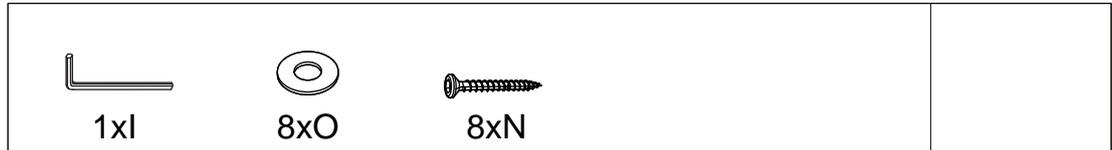


STEP 7: Attach bottom metal frame to the existing unit using allen key(I) , screws(N) and washers(O).

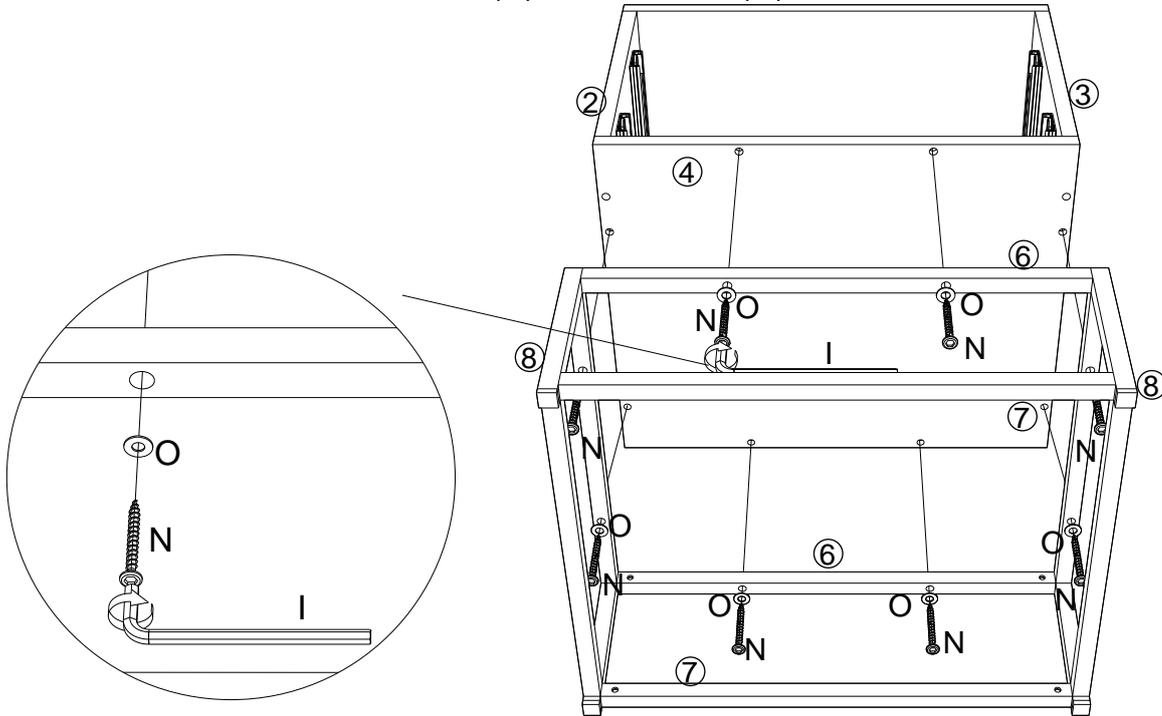


# 8

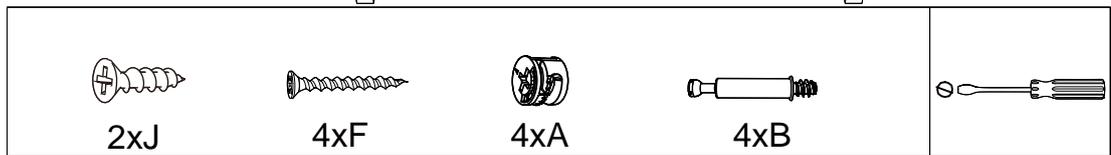


STEP 8: Assemble the top drawer as shown in below diagram using screws(J), screws(F), cam locks(A) and cam bolts(B).

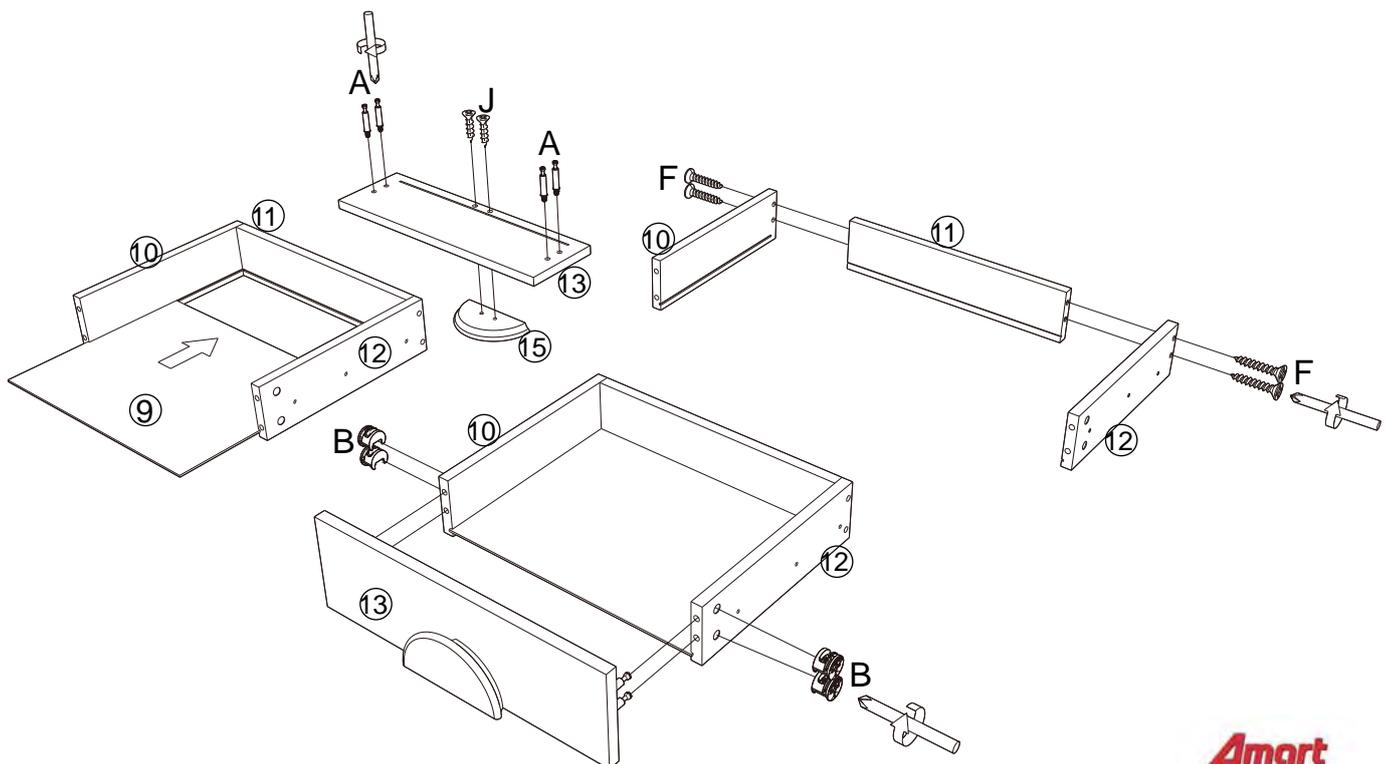

# 9

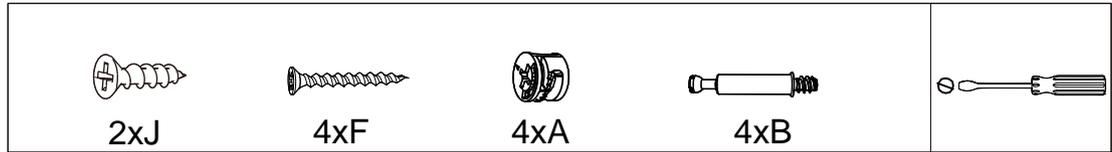


STEP 9: Assemble the bottom drawer as shown in below diagram using screws(J),screws(F), cam locks(A) and cam bolts(B).

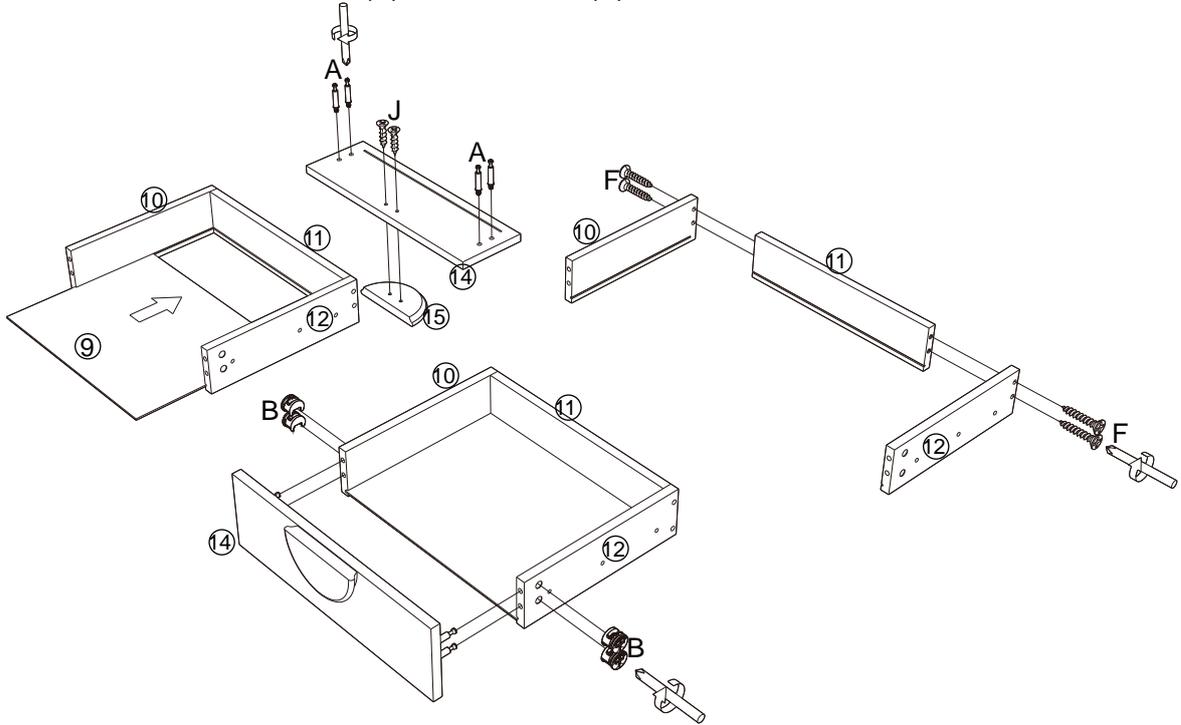

# 10




STEP 10: Fix runners(K2) to the top drawer using screws(L).

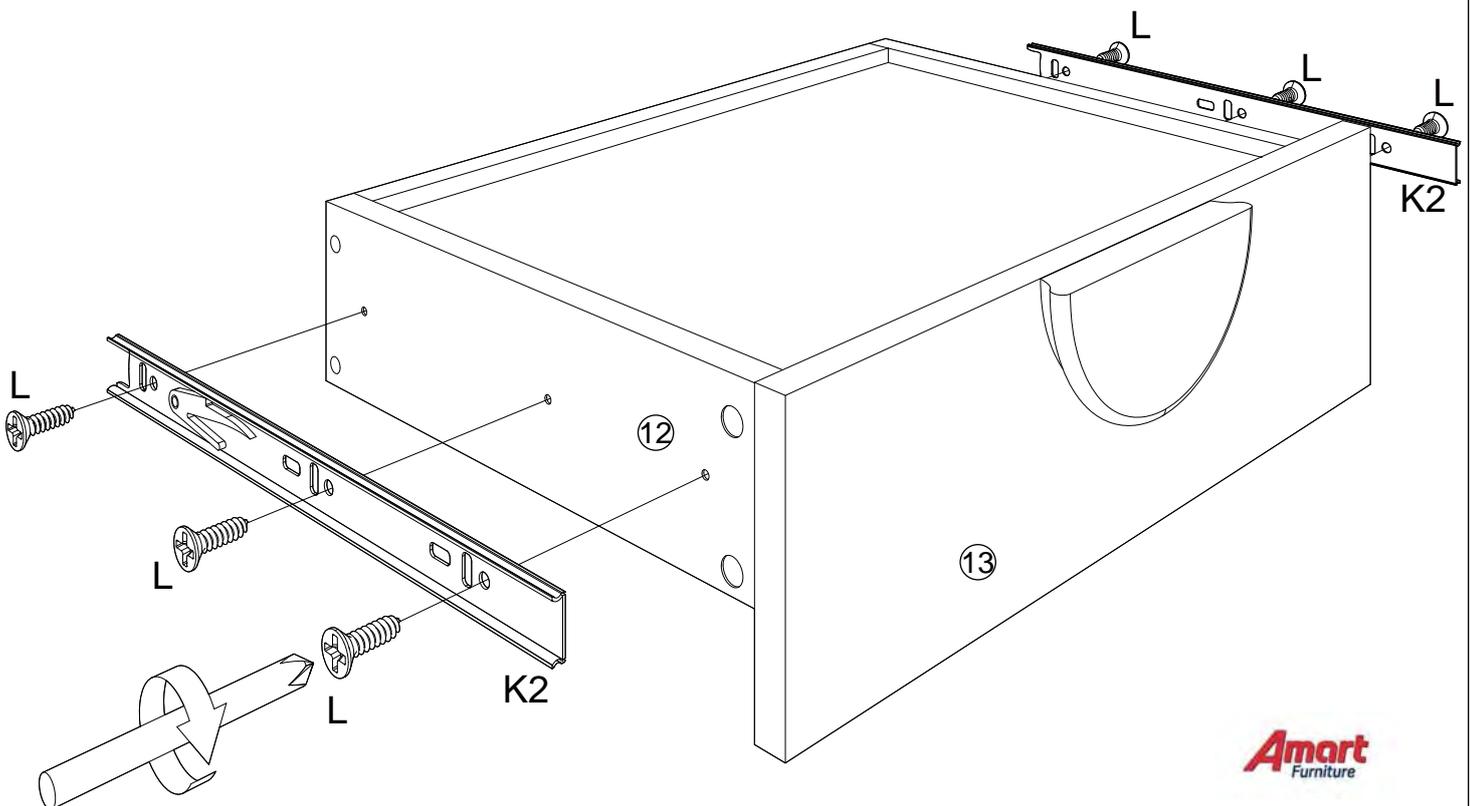

# 11




STEP 11: Fix runners(K2) to the bottom drawer using screws(L).

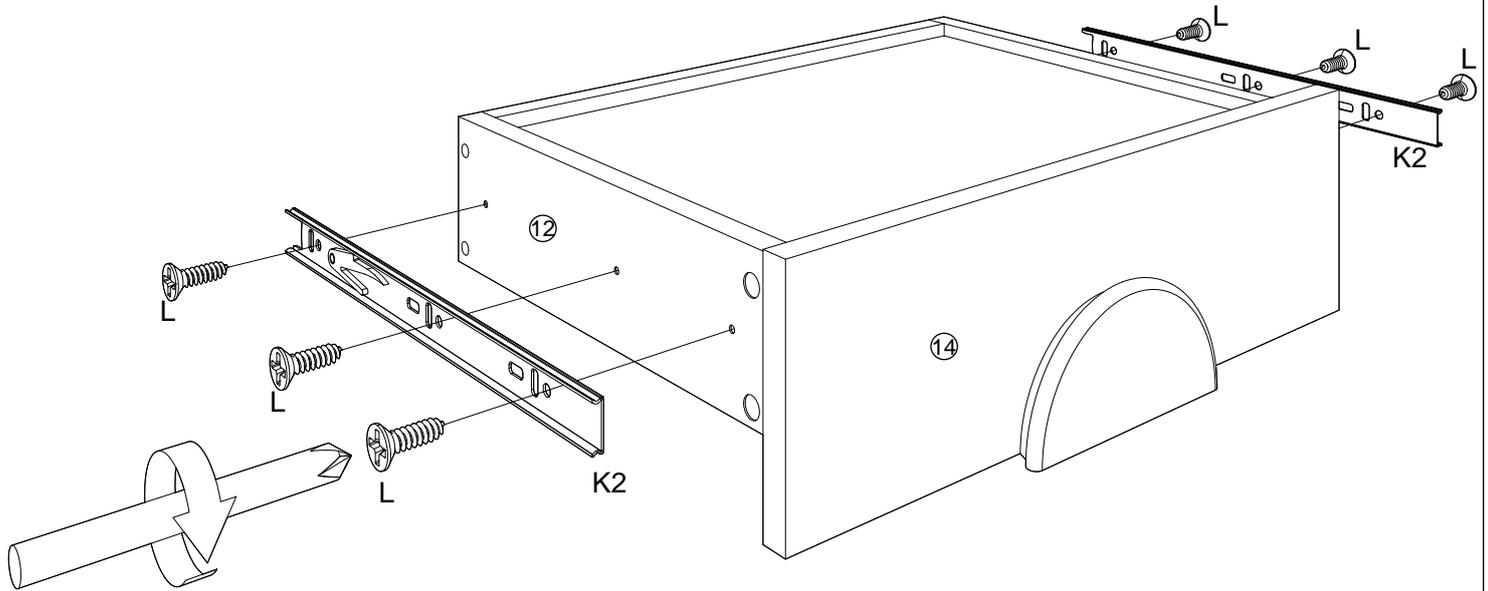

# 12




STEP 12: Place top drawer and bottom drawer to the existing unit.

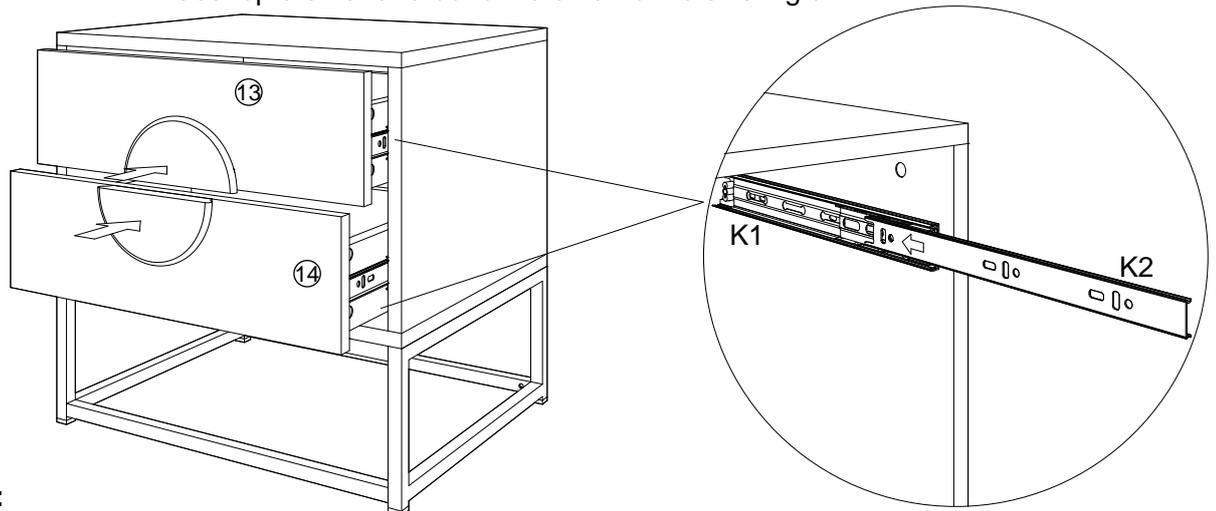


### To insert Drawers:

- Bring the ball-bearing slider on Drawer Glide Track(K1) forward to the front edge of(K1).
- Align the back open-end of the Drawer Glide Runner(K2) on each side of the drawer to fit squarely into the groove on the open front-end of(K1).Be sure the drawer/K2 is not tilted or angled, and gently push in drawer squarely.
- When the drawer is pushed in about half way,the Disconnect Lever on (K2) will be engaged onto(K1) which will create a slight resistance-this is normal. Pull out the drawer a little bit and gently push in the drawer again to engage the Lever to the slide mechanism on (K1). The drawer should now slide smoothly.
- If the drawer cannot be pushed in or stuck, do not force it in. Remove the drawer and repeat the steps above.

# 13

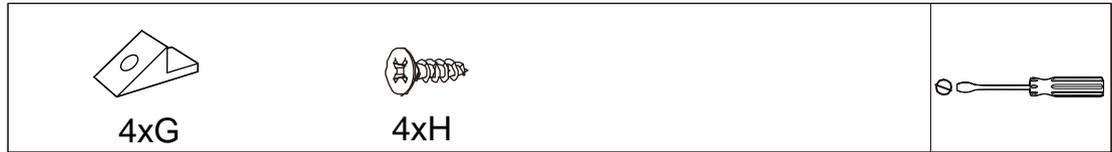

STEP 13: Fix plastic bracket(G) to the existing unit using screws(H).



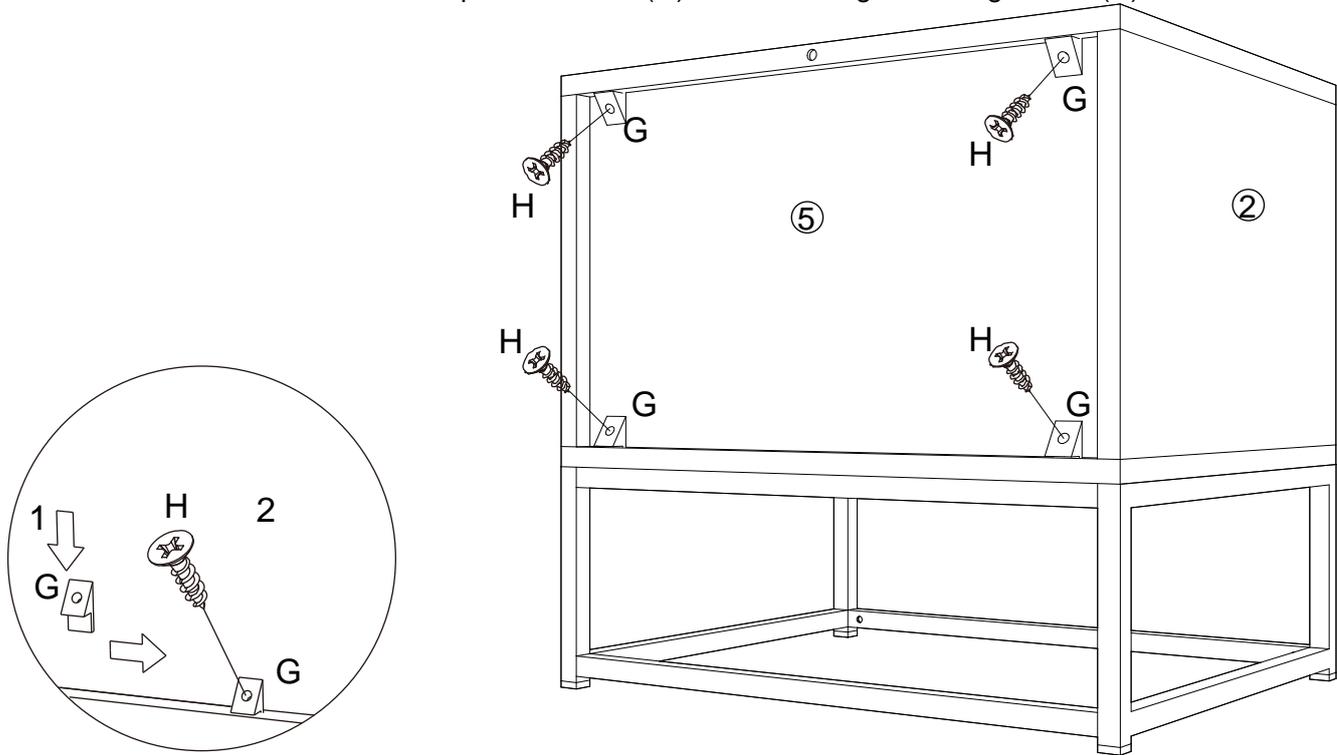


# 14



STEP 14: Fix wall anchor(E) onto the wall.

## WALL

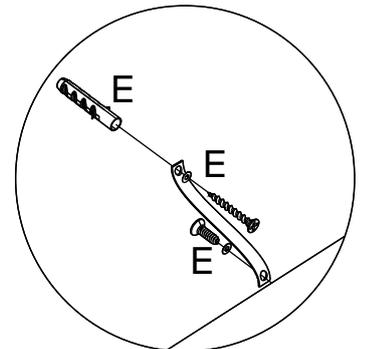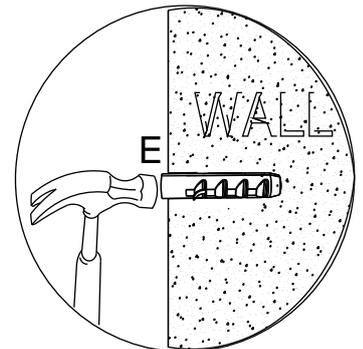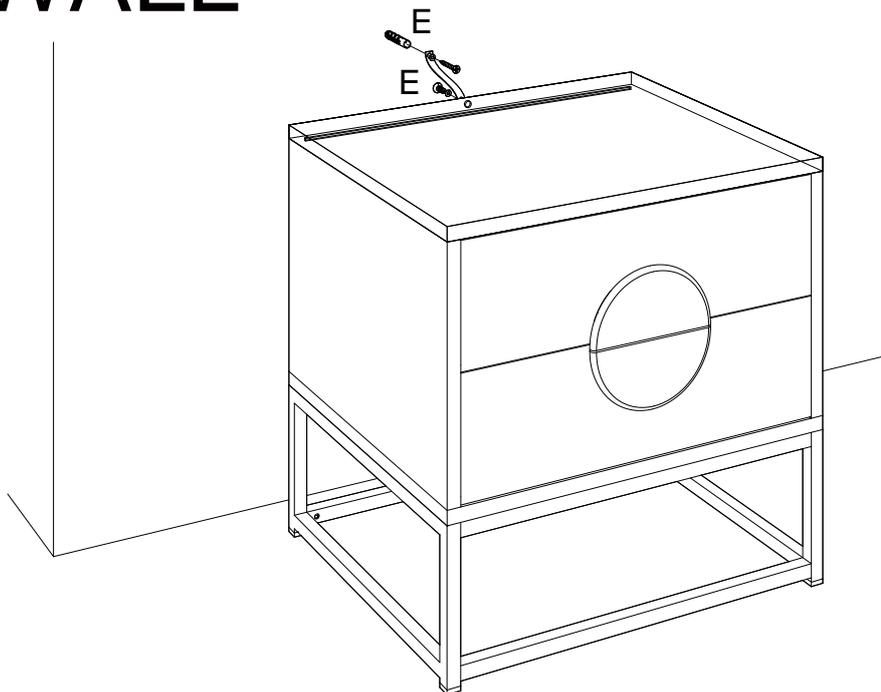

**CAUTION:** Always Lift Your Furniture When Moving /Relocating - Do Not Drag. Dragging Can Cause The Legs To Bend/Break.

**Amart**  
Furniture

## **PRODUCT CARE:**

To protect your furniture, we suggest the following:

\*Avoid placing your furniture in direct sunlight.

\*Do not place furniture directly under windows.

\*Do not place sharp materials(knife, fork, etc) directly onto your furniture as sharp material may scrape and damage the finish.

Do not place material with high temperature directly onto the surface of your furniture.

\*Protective padding is strongly recommended when using your furniture .

\*Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.

\*Use a clean, soft, dry, lint free absorbant cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.