


**ASSEMBLY INSTRUCTION**  
**SARATOGA**  
**ENTERTAINMENT UNIT**  
ITEM CODE 83474

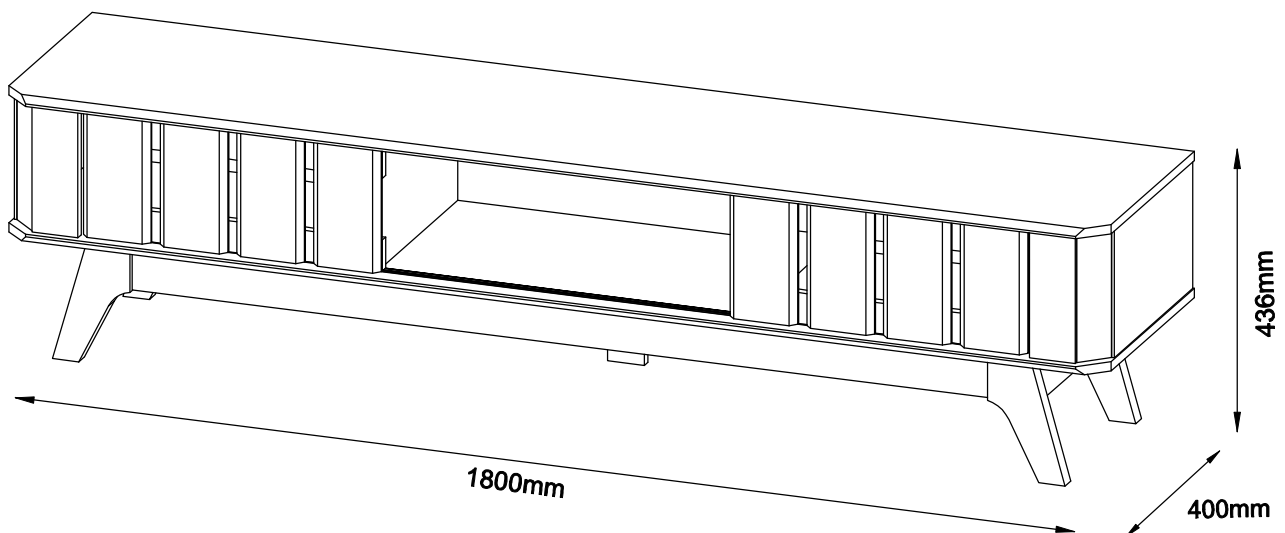







Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia  
For any assistance with assembly or for missing parts please refer to your receipt

## PRE-ASSEMBLY PREPARATION





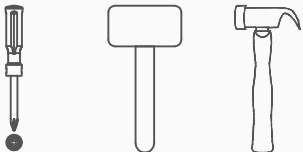



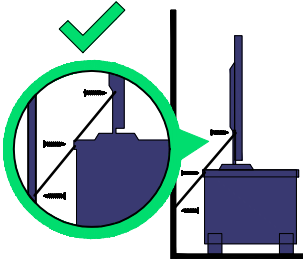



### Before you start:

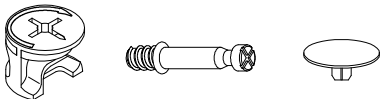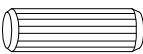1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.
7. Assembly is to be carried out by a competent adult(s) ONLY.
8. During assembly, children should be kept away from the product due to possible risk to injury.
9. Do not use this item if any components are missing or damaged.
10. Please keep the instructions for future reference.

	
<b>ALLOW 60 MINUTES</b>	<b>PEOPLE REQUIRED</b>
 	
<b>ADDITIONAL TOOL REQUIRED</b>	


 <b>WARNING</b>		
		<p><b>Children have died from furniture tipover.</b></p> <ul style="list-style-type: none"> <li>• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.</li> <li>• ALWAYS secure your television with an anchor device or mount the television on a wall.</li> </ul> <p><b>This is a permanent label. Do not remove!</b></p>

# PARTS LIST
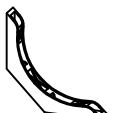
<b>A X 12 SETS</b>  <b>A1 A2 A3</b> <b>MINIFIX</b>	<b>B X 28</b>  <b>WOOD DOWEL</b> <b>M8 X 30</b>	<b>C X 8</b>  <b>M6 X 50MM</b> <b>CSK CAP</b> <b>WOOD SCREW</b>	<b>D X 1</b>  <b>ALLEN KEY M4</b>	<b>E X 16</b>  <b>M3 X 12MM</b> <b>C.B SCREW</b>
<b>F X 24</b>  <b>M3.5 X 16MM</b> <b>C.B SCREW</b>	<b>G X 2</b>  <b>M4 X 30MM</b> <b>C.B SCREW</b>	<b>H X 14</b>  <b>M4 X 65MM</b> <b>C.B SCREW</b>	<b>I X 5</b>  <b>5/8 PVC</b> <b>NAIL LEG</b>	<b>J X 6 SETS</b>  <b>J1 J2</b> <b>STUB 192 WITH SCREW</b>
<b>K X 4</b>  <b>SUPPORT PANEL</b>	<b>L X 4 SETS</b>  <b>L1 ( L/R ) L2 ( L/R )</b> <b>U 480 ROLLER</b>			


1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	CENTER PANEL	2 PCS
6	FRONT BAR	2 PCS
7	FRONT SUPPORT	2 PCS

8	BACK PANEL	1 PC
9	APRON LONG FRONT	1 PC
10	APRON LONG BACK	1 PC
11	APRON SHORT	2 PCS
12	CENTER LEG	1 PC
13	SLIDING DOOR	2 PCS

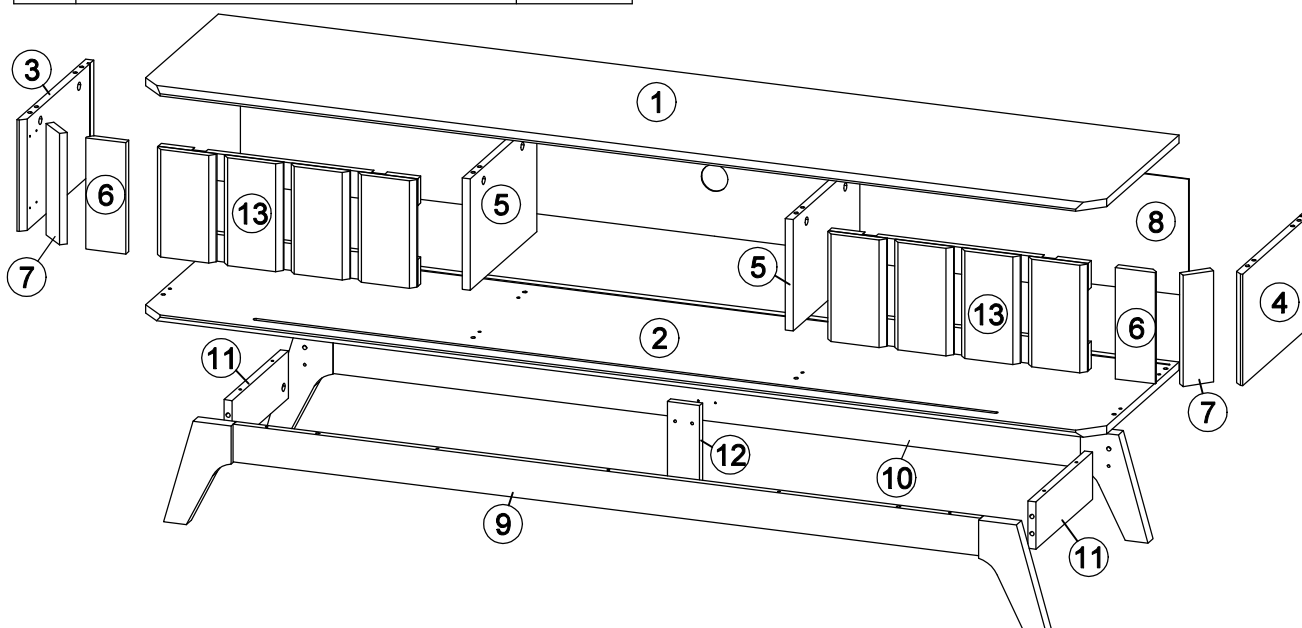


### STEP 1:

- Insert hardware A1 onto panel (3), (4) and (5).  
(Repeat 8 times.)
- Insert hardware A2 onto panel (1).  
(Repeat 8 times.)
- Insert hardware B onto panel (3), (4) and (5).  
(Repeat 16 times.)

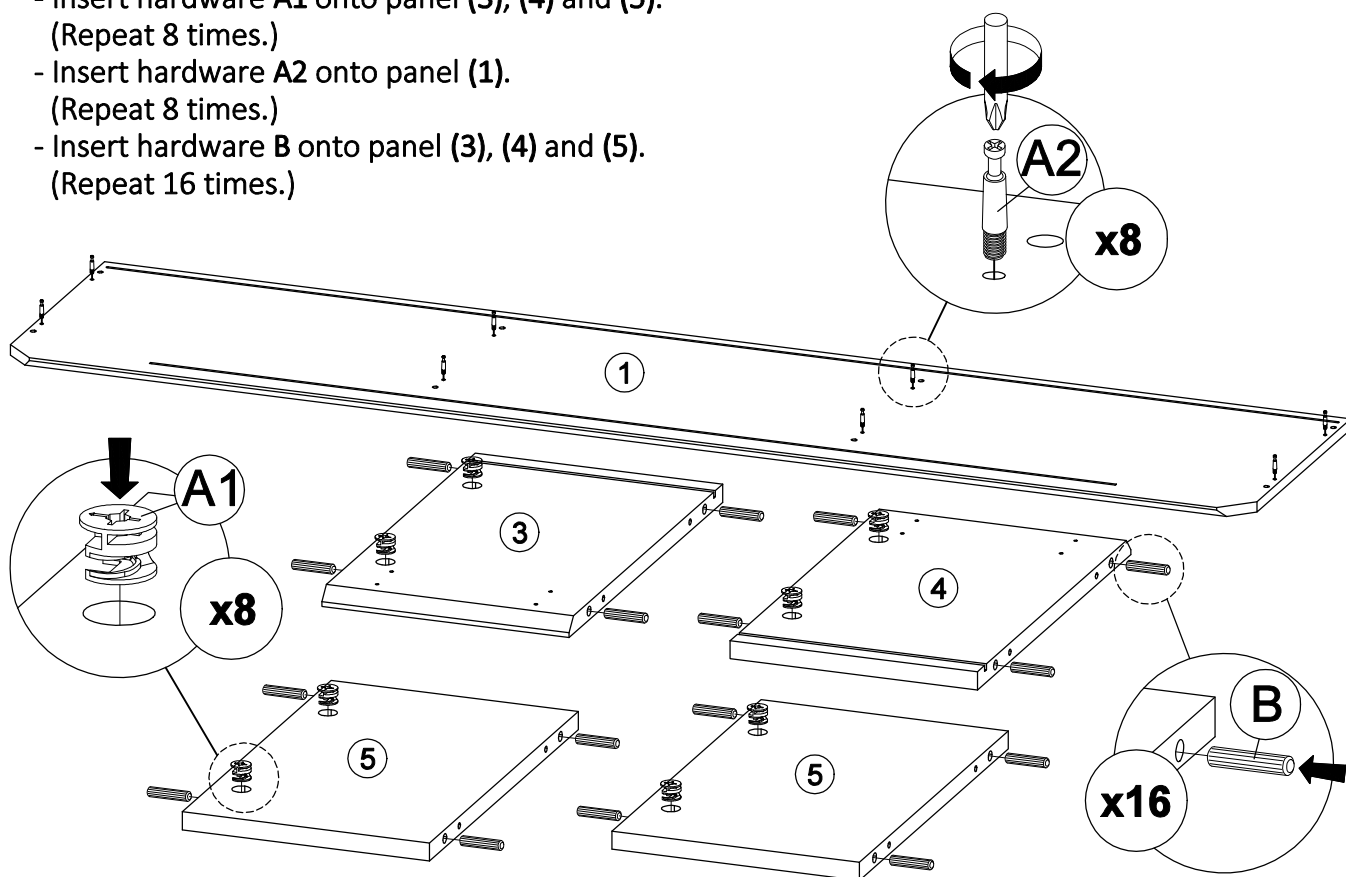


### STEP 2:

- Insert hardware A1 onto panel (11).  
(Repeat 4 times.)
- Insert hardware A2 onto panel (9) and (10).  
(Repeat 4 times.)
- Insert hardware B onto panel (9), (10) and (11).  
(Repeat 12 times.)

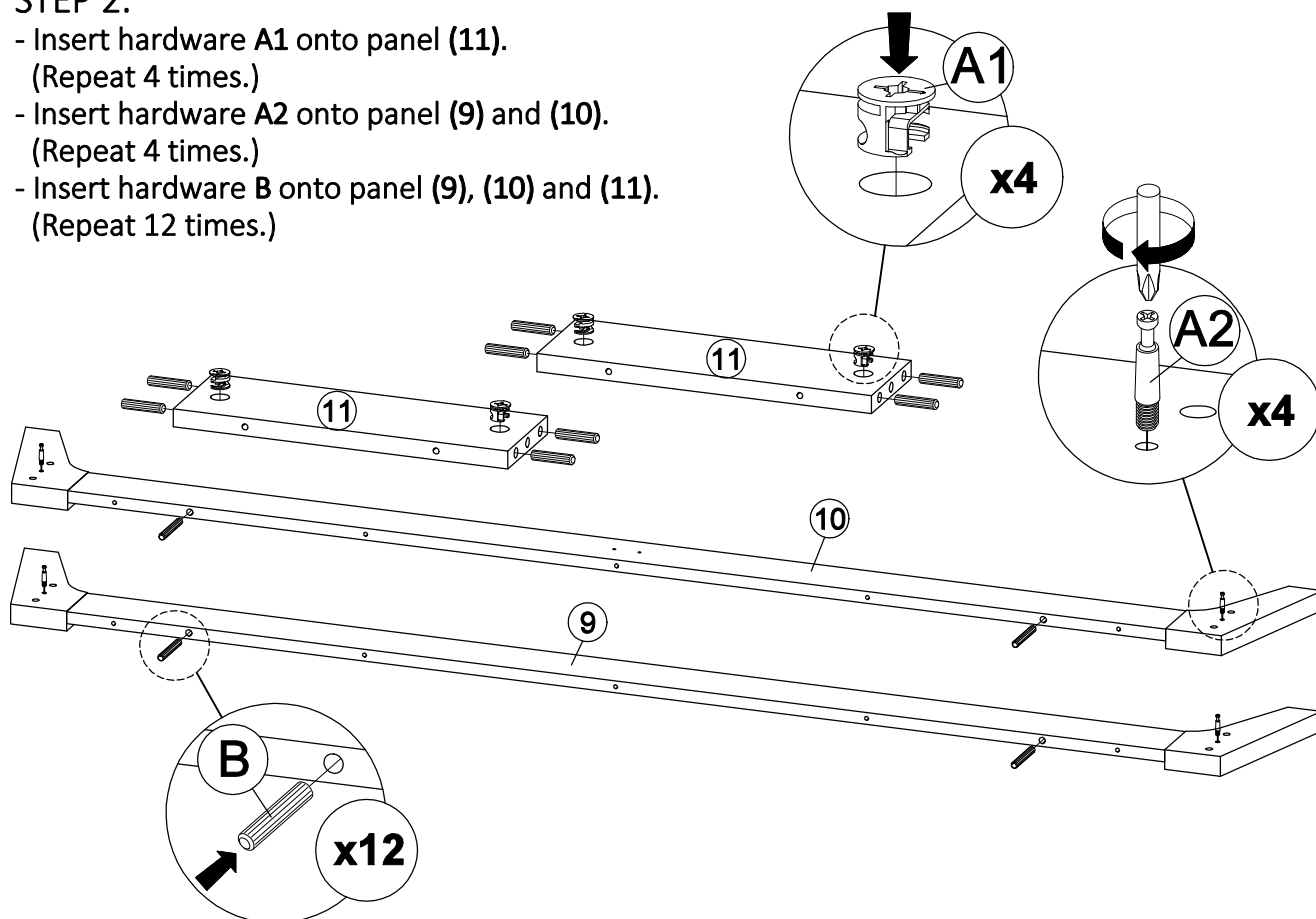


### STEP 3:

- Fix hardware K into panel (3), (4), (6) and (7) with hardware F. (Repeat 6 times for each hardware.)

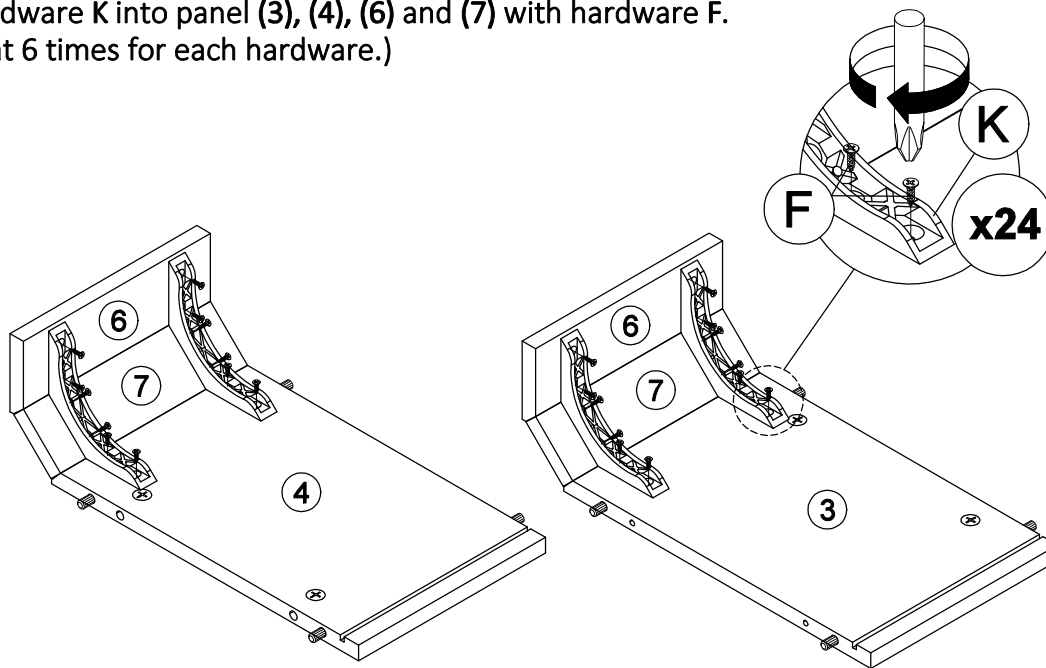


### STEP 4:

- Attach panel (1) to panel (3), (4) and (5).
- Insert all hardware A2 into A1.
- Rotate all A1 until tight.
- Apply A3 onto all A1.
- (Repeat 8 times.)

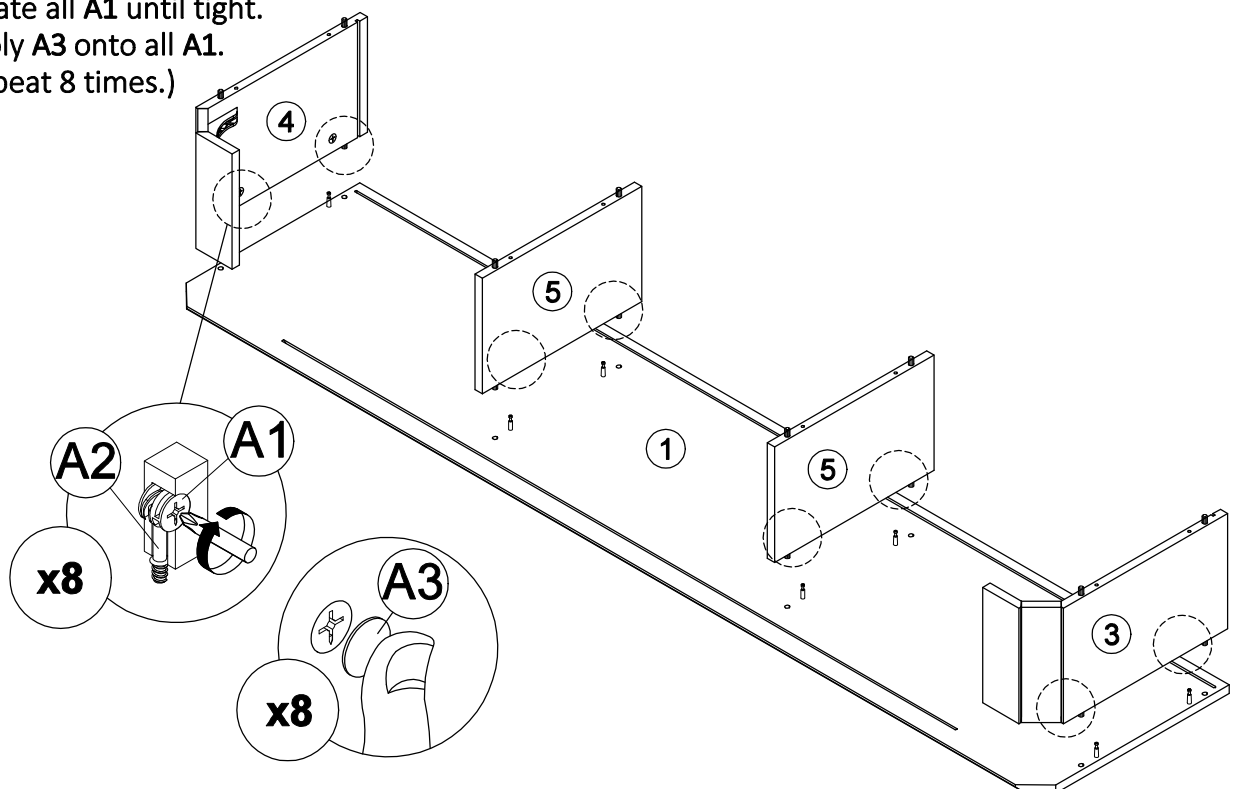


### STEP 5:

- Insert the panel (8) along the slot.  
(Repeat 1 times.)

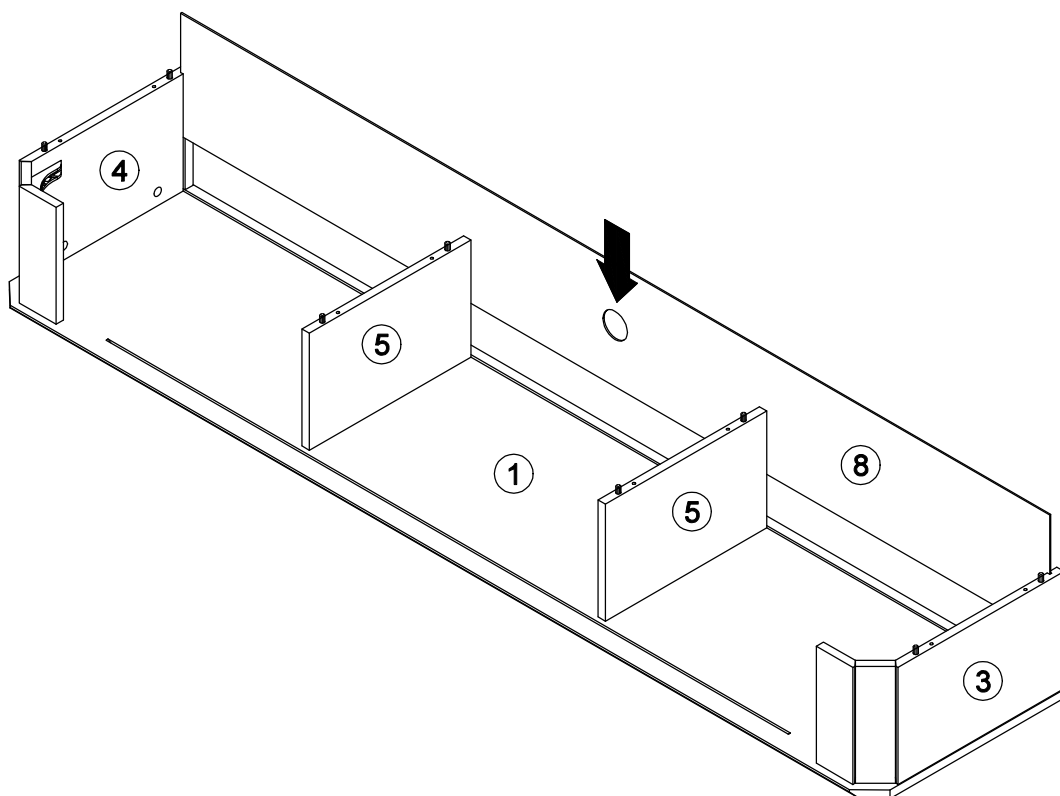


### STEP 6:

- Connect panel (2) to panel (3), (4) and (5) by using hardware C and D.  
(Repeat 8 times.)

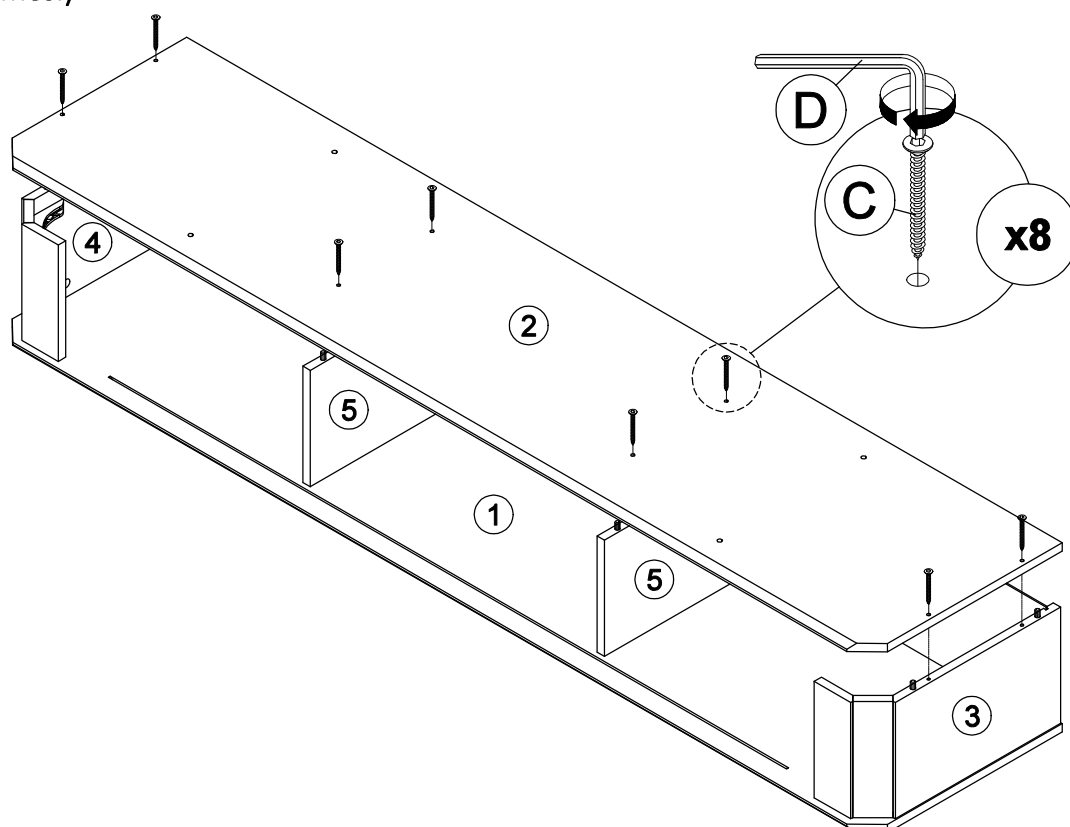


### STEP 7:

- Attach panel (9) and (10) to panel (11).
- Insert all hardware A2 into A1.
- Rotate all A1 until tight.
- Apply A3 onto all A1.
- (Repeat 4 times.)

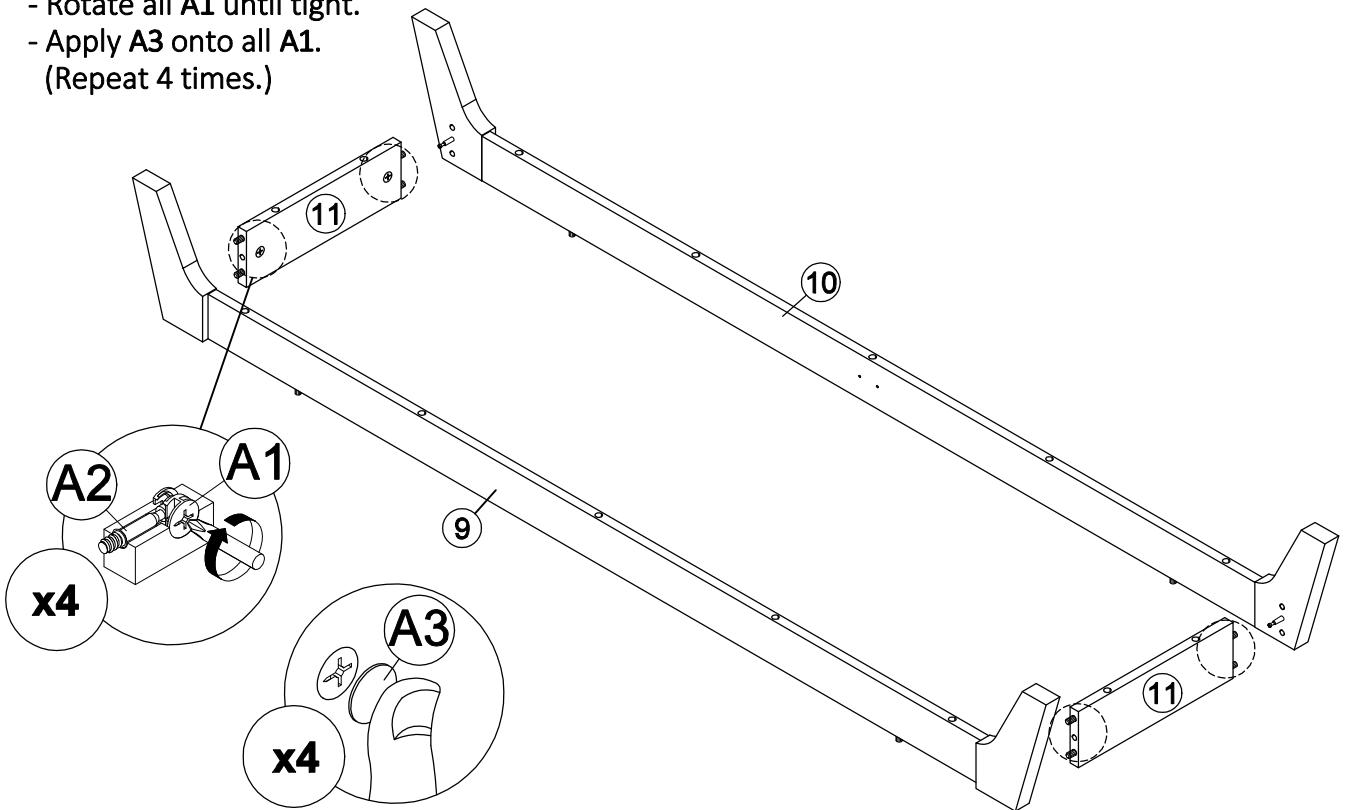


### STEP 8:

- Connect panel (9), (10) and (11) to panel (2) by using hardware H.
- (Repeat 14 times.)

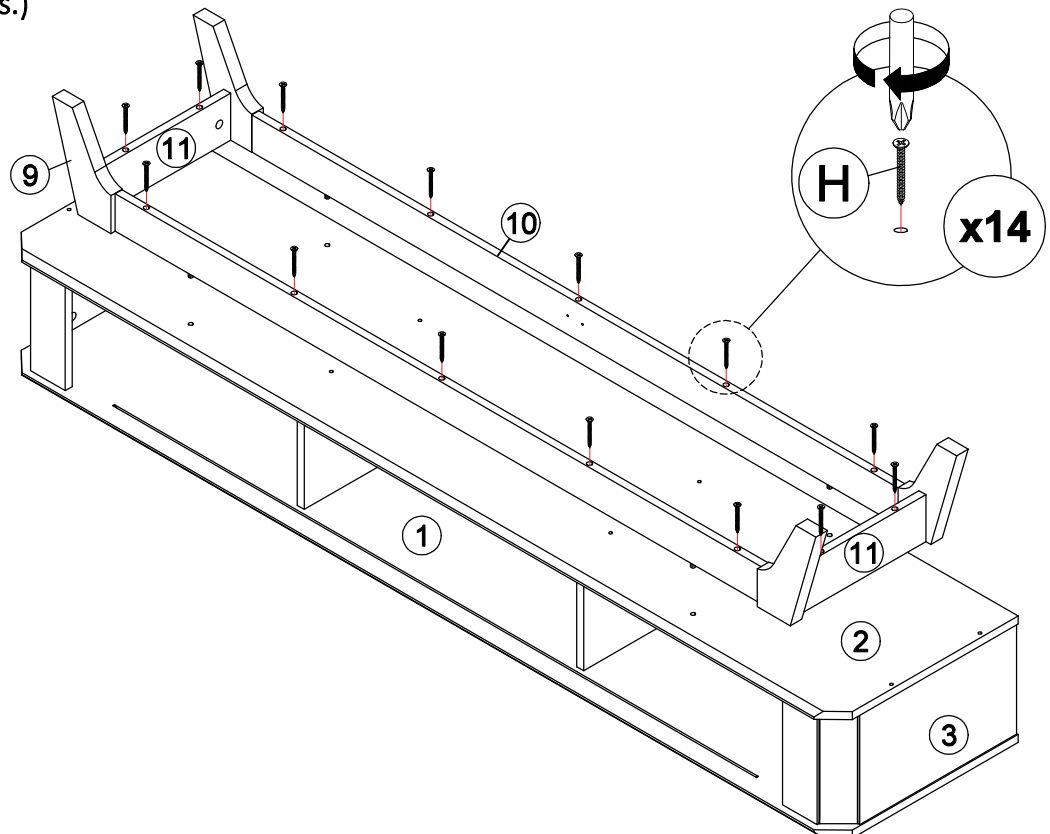


### STEP 9:

- Connect panel (12) to panel (10) by using hardware G.  
(Repeat 2 times.)

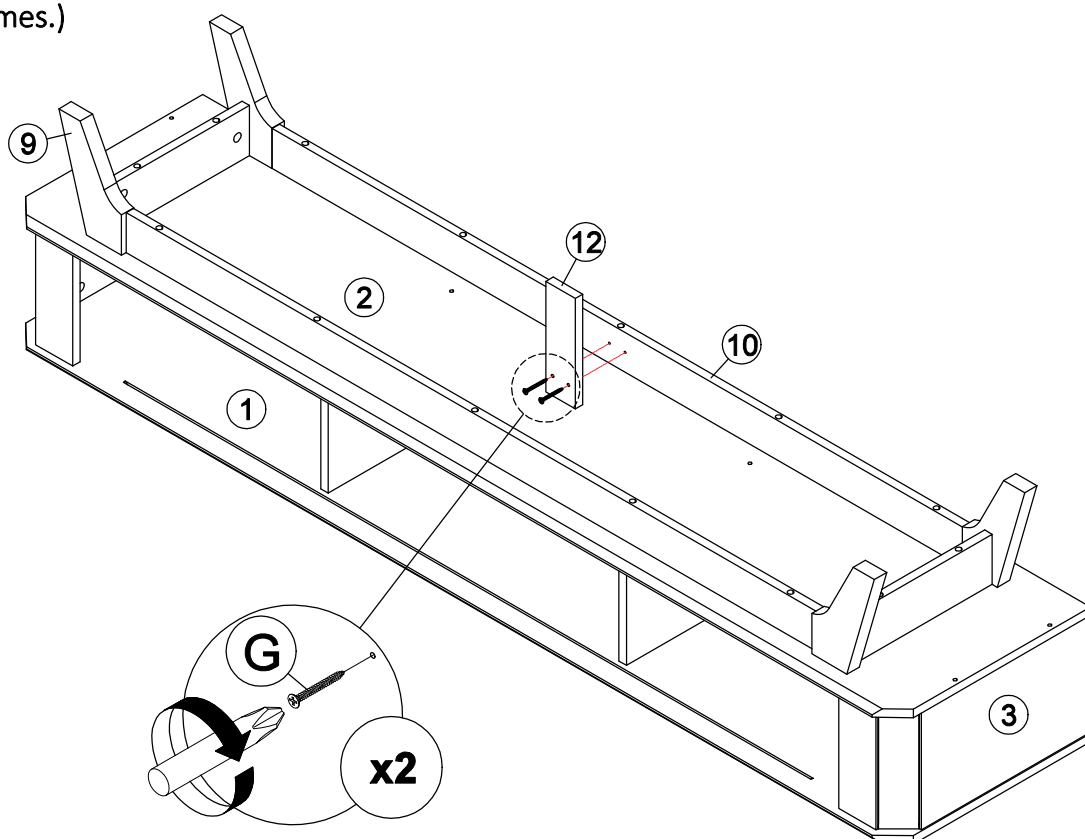

### STEP 10:


- Hit hardware I into bottom of panel (9), (10) and (12).  
(Repeat 5 times.)

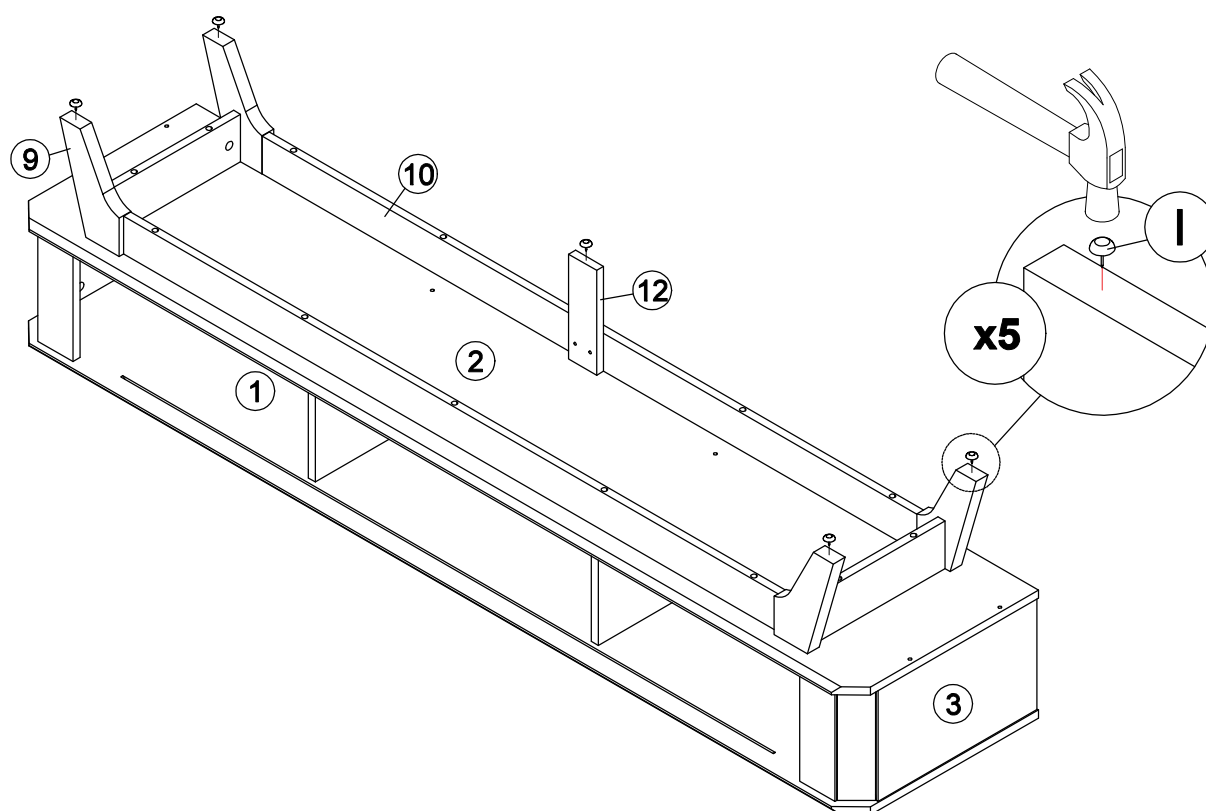




### STEP 11:

- Insert hardware J1 into slot at panel (1), (2), (3) and (4).
- Assemble hardware J1 by using hardware J2.
- (Repeat 6 times.)

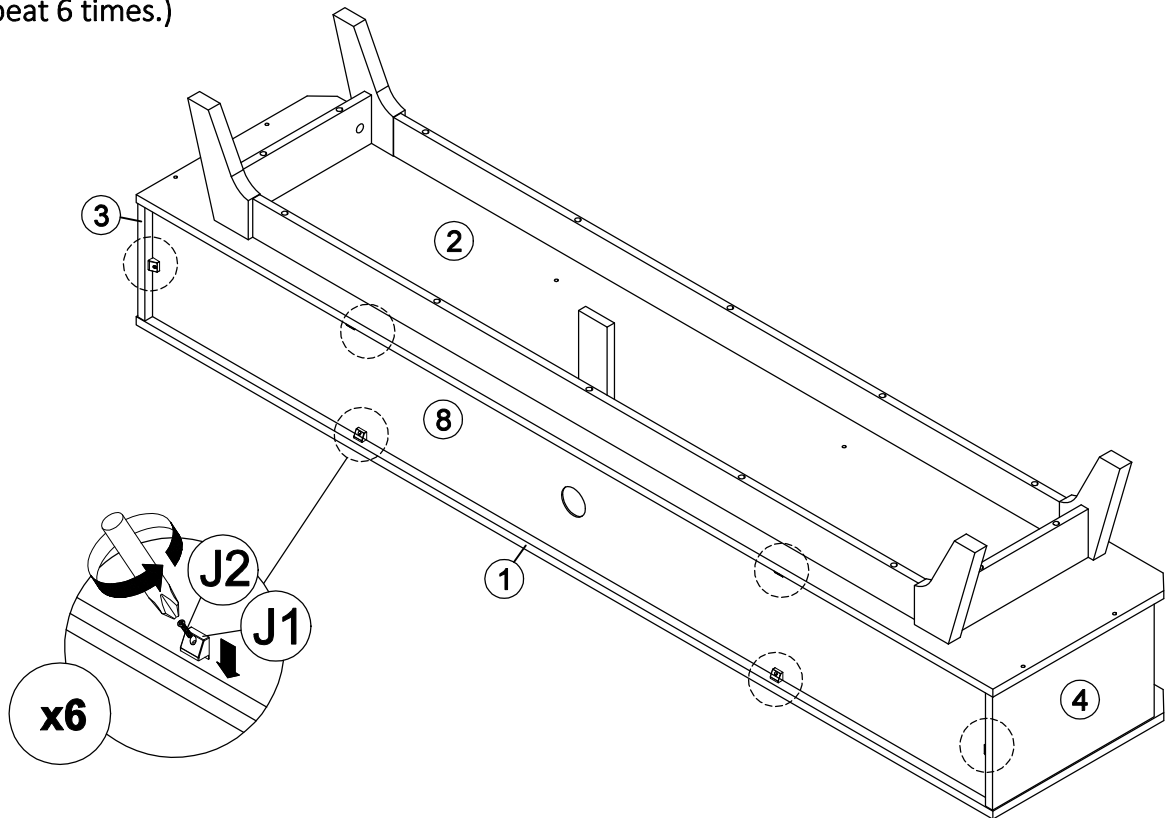


### STEP 12:

- Assemble hardware L1 and L2 to panel (13) with hardware E.
- (Repeat 2 times for each hardware.)

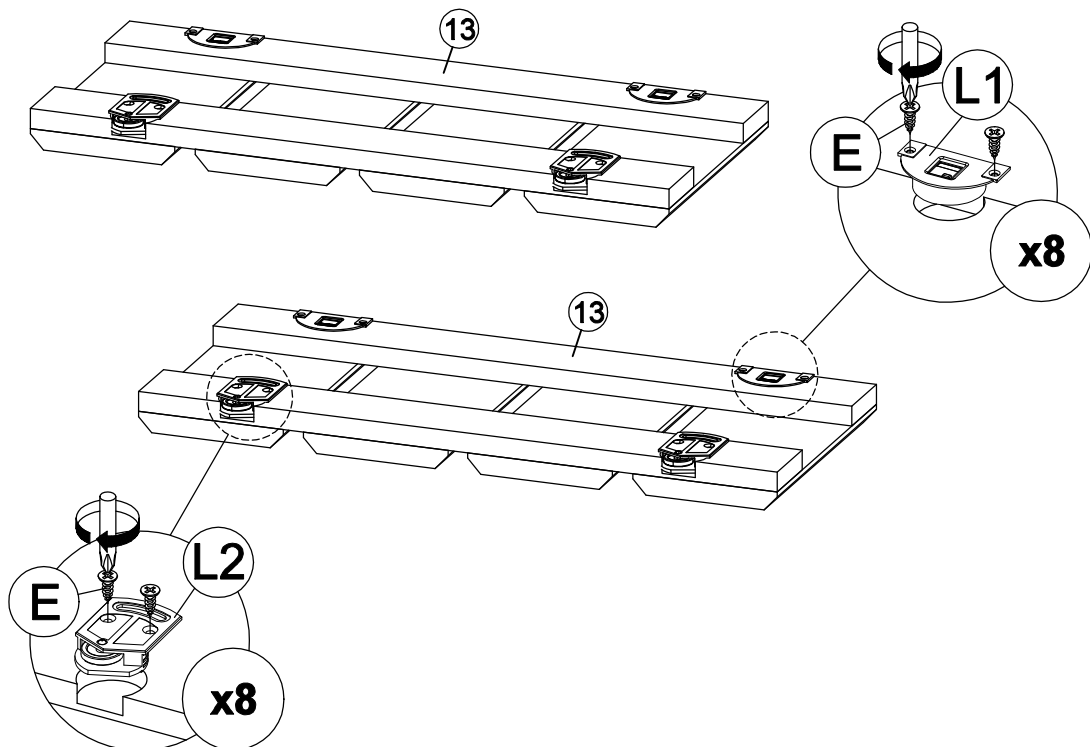


### STEP 13:

- Put the panel (13) in place.  
(Repeat 2 times.)

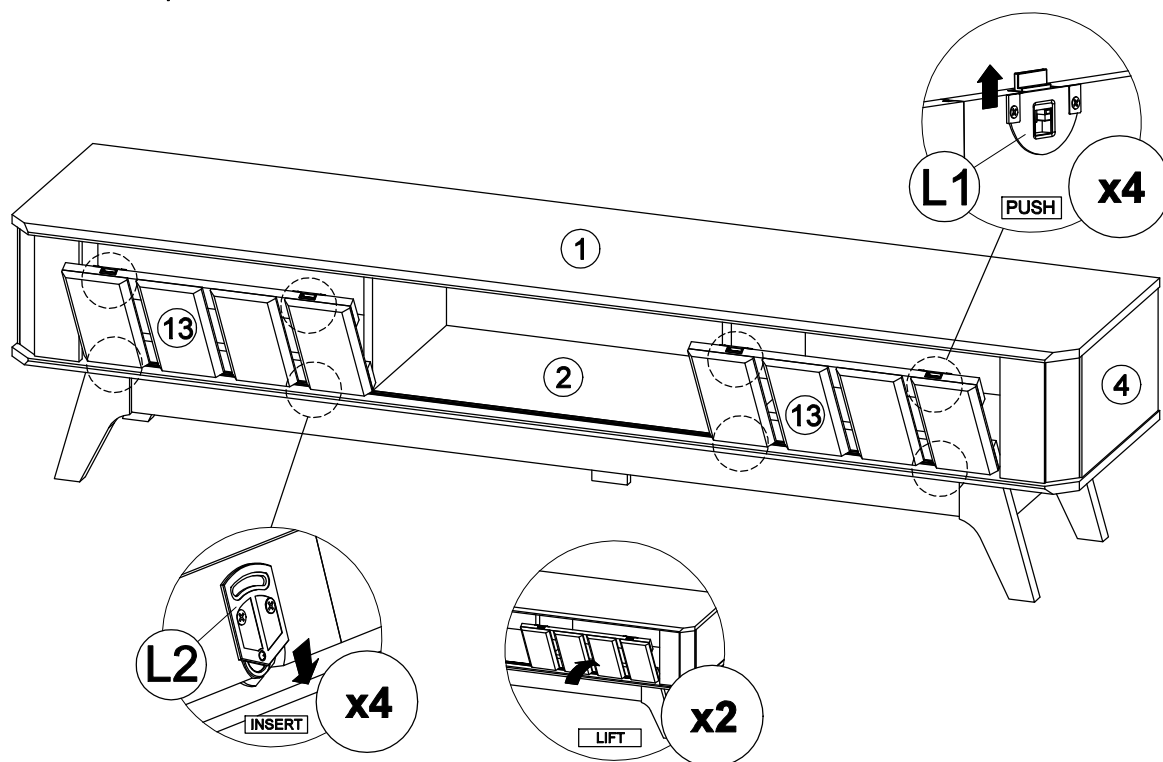

ASSEMBLY IS COMPLETE

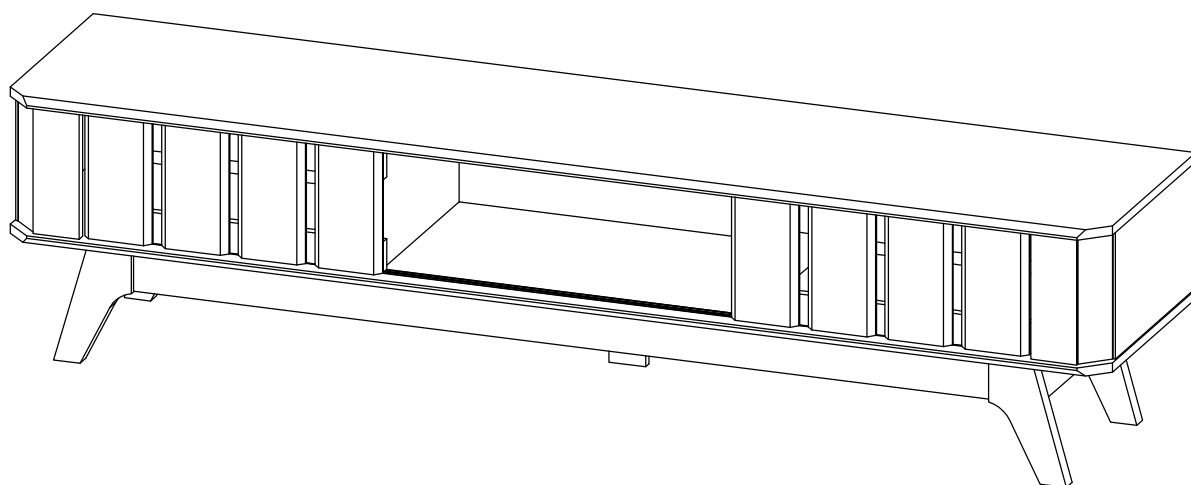

## SAFETY BRACKETS INSTRUCTIONS

1. Attach one Metal Bracket to the wall with the Wall Screw. Make sure to attach the Metal Bracket into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
2. Attach the second Metal Bracket to the back of furniture frame with the Pan Head Screws.
3. Move the furniture to its final position. Thread a Cable Tie through the both Metal Bracket and tighten until snug. Do not over tighten.
4. Make sure that the Metal Bracket are firmly attached to the wall and furniture and that the Cable Tie is snug.


### HARDWARE



Metal Bracket  
X4




Cable Tie  
X2



Wall Screw  
X2



Pan Head Screw  
X2

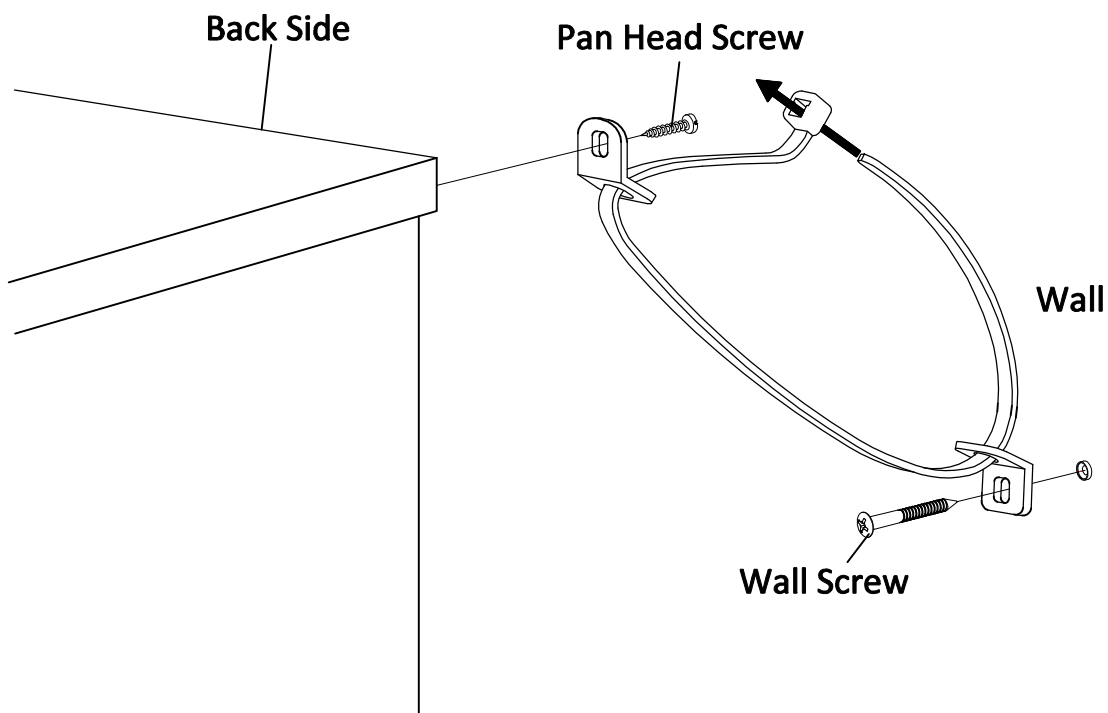

## **CARE AND MAINTENANCE**

Please use your furniture correctly and safely. Improper use can cause safety hazards, or damage to your furniture or household items.

Serious or fatal crushing injuries can occur from furniture tip-over.

To help prevent tip-over

- It is important to place the safety bracket included.
- Place heaviest items in the lowest storage space.
- Never allow children to climb or hang on drawers, doors, or shelves.
- Never open more than one drawer at a time.
- If a heavy object is placed on top or inside the furniture, consider this risk.

Use of tip-over restraints reduce, but does not eliminate, the risk of tip-over.