


# ASSEMBLY INSTRUCTION

## MOSS SIDE TABLE

Item Code 82066\82067\82068

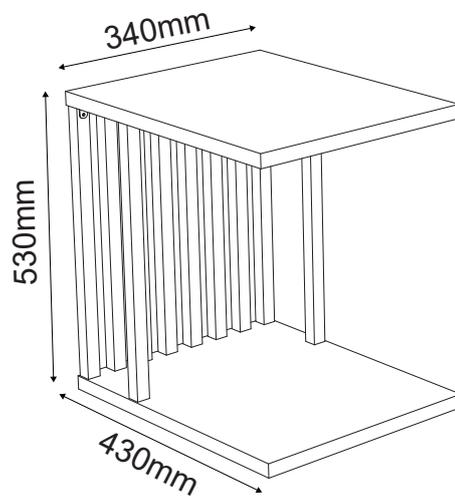


Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia.  
For any assistance with assembly or for missing parts please refer to your receipt


## PRE-ASSEMBLY PREPARATION

### Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads
7. Assembly is to be carried out by a competent adult(s) ONLY
8. During assembly, children should be kept away from the product due to possible risk to injury.
9. Do not use this item if any components are missing or damaged.
10. Please keep the instructions for future reference.


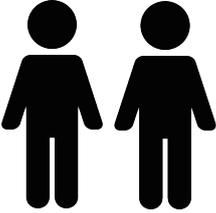
		
Allow 30 min	For 2 person	Additional tools required

## PARTS LIST

<p><b>A</b> Wooden dowel Φ8×30mm×10pcs</p> 	<p><b>B</b> Screw Φ3×14mm×20psc</p> 	<p><b>C</b> Brackets 1 x1 mm×10pcs</p> 	<p><b>D</b> Screw Φ7×50mm×10pcs</p> 
<p><b>E</b> Allen key Φ4×1pcs</p> 	<p><b>F</b> Carpet Φ25mm×4pcs</p> 	<p><b>G</b> Screw Φ4×16mm×1pcs</p> 	<p><b>H</b> Anti-tip brackets 73×15mm×1pcs</p> 
<p><b>J</b> Screw Φ3.5×30mm×1pcs</p> 	<p><b>K</b> Plastic screw Φ5.5×30mm×1pcs</p> 		


## PARTS LIST

1	Top x 1pcs	2	Bottom x 1pcs
3	Wooden slats x 10pcs		

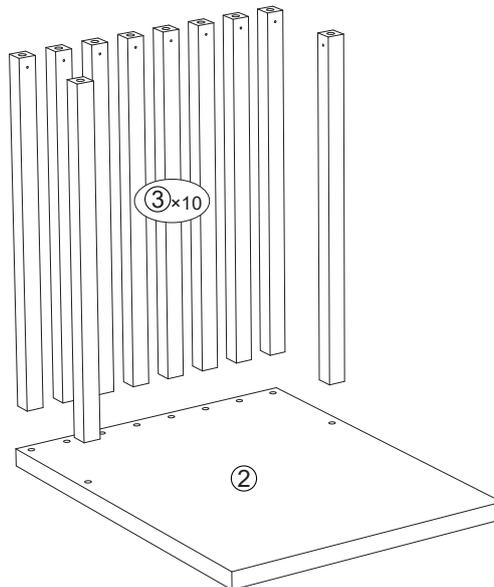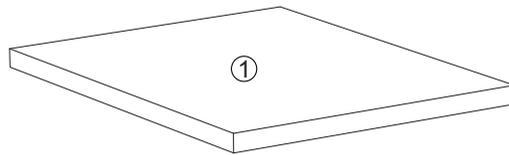


**STEP 1:**

- Prepare a protected surface with a blanket or cardboard;
- Attach 10pcs x wooden dowel(A) on top(1) .

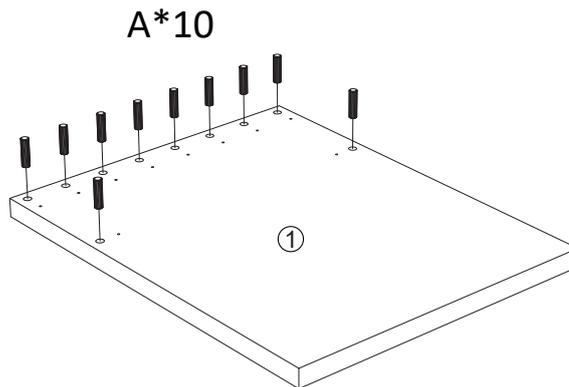


**STEP 2:**

- Assemble 8pcs x wooden slats(3) with top(1) ;
- Secure 8pcs x brackets(C) with wooden slats(3)&top(1) by 16pcs x screw(B) .

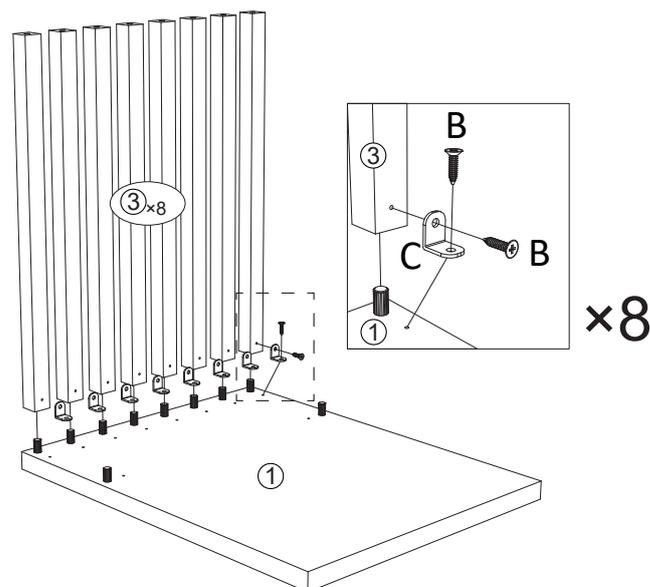


**STEP 3:**

- Assemble 2pcs x wooden slats(3) with top(1) ;
- Secure 2pcs x brackets(C) with wooden slats(3)&top(1) by 4pcs x screw(B).

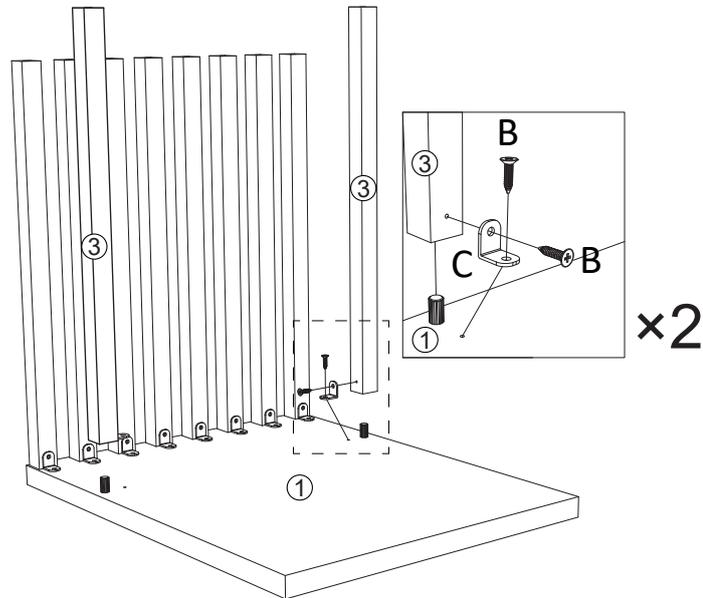


**STEP 4:**

- Secure 10pcs x screw(D) to assemble the bottom(2) with 10pcs x wooden slats(3).

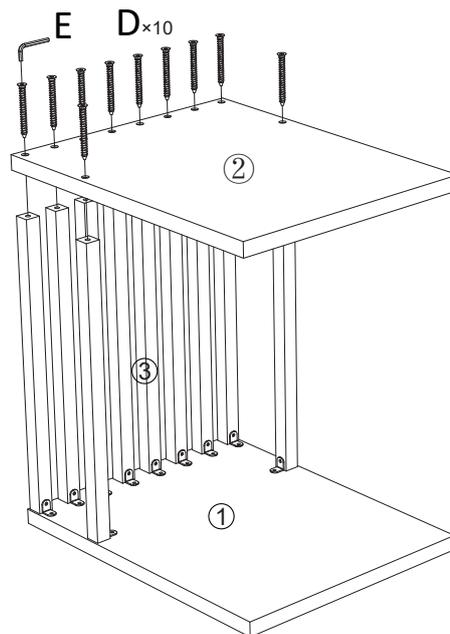

STEP 5:


- Stick 4pcs x carpet(F) on bottom(2)

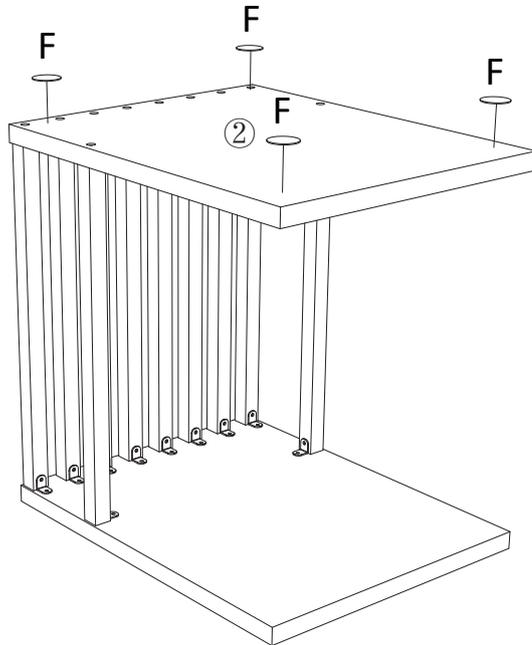

STEP 6:


- Assemble the anti-tip bracket(H) on the underneath of top(1) with 1pcs x screw(G)

**Attention:Do not fully tight the screw(G) at this step.**

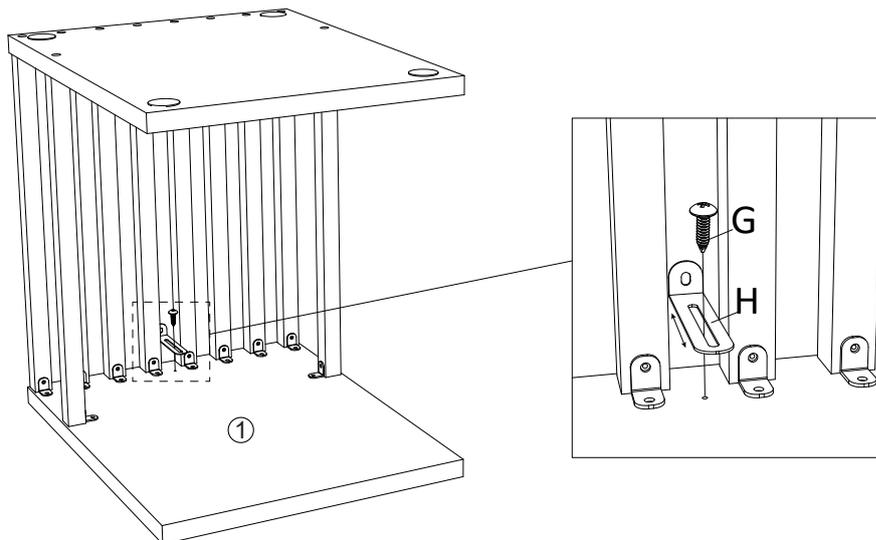


**STEP 7:**

- Attach the assembled item to wall with 1pcs x plastic screw(K)&1pcs screw(J);
- Then,tight the screw(G).

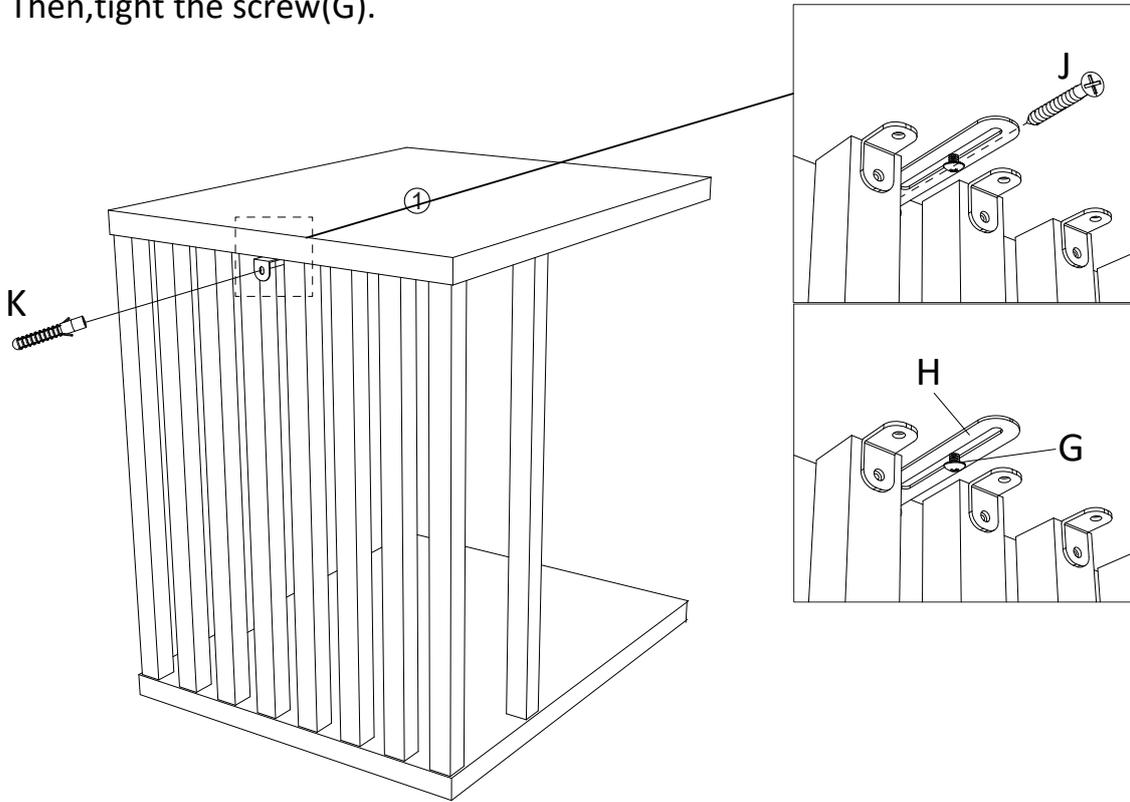

**Assembly Is Complete**

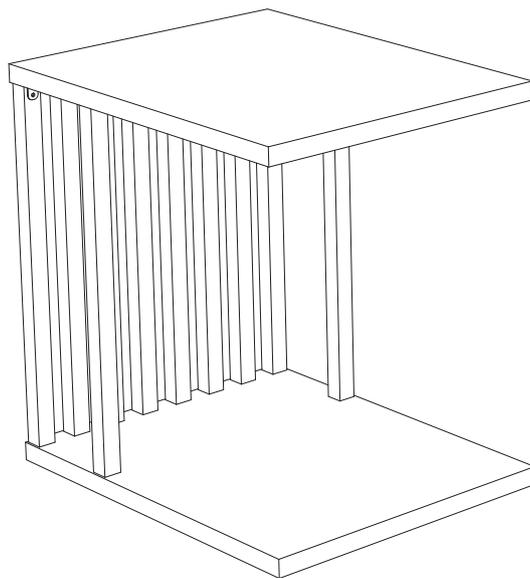

## **PRODUCT CARE:**

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.