
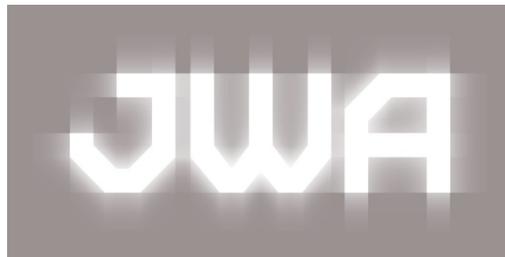


ASSEMBLY INSTRUCTION

OLDHAM

2 DRAWERS UNIT

ITEM CODE 69484



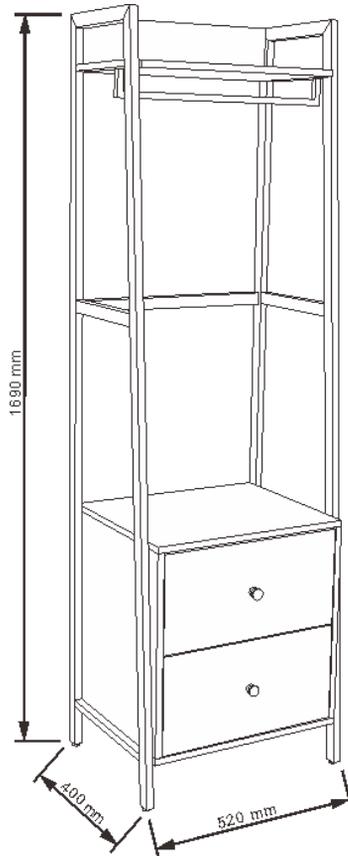


Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please refer to your receipt

PRE-ASSEMBLY PREPARATION

Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

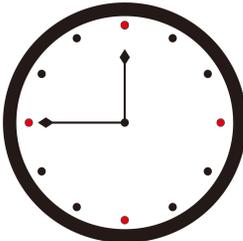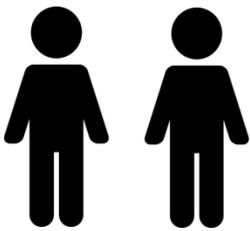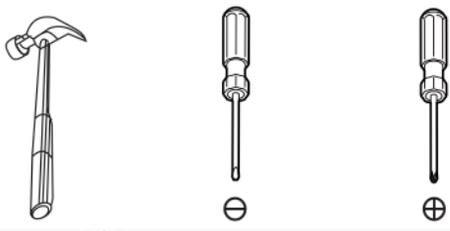		
Allow 45 min	For 2 person	Additional tools required



TIPPING WARNING





Serious or fatal injuries may occur from furniture toppling over. To help avoid this please follow the below recommendations:

- Install the provided "Tipping Kit" as per the instructions
- Never allow children to climb on or hang off of any part of this product
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product



If this product has drawers:


- Place the heaviest items in lowest drawers
- Do not open more than 1 drawer at a time as this may cause the product to become unbalanced
- Do not tamper with or remove any drawer interlocking/running system

Note: The use of the provided "Tipping Kit" may reduce but not necessarily eliminate the risk of furniture toppling over. Please use this product with caution.

This is a permanent label. Do not attempt to remove!


PARTS LIST

A  16pcs	B  M6X25mm 2pcs	C  M6X30mm 2pcs	D  ST5X50mm 24pcs	E  E2 E1 4pcs	F  M3.5X12mm 16pcs
G  M3.5X14mm 4pcs	H  ST3.5X18mm 6pcs	I  ST4X25mm 2pcs	J  M4X18mm 2pcs	K  8pcs	L  6pcs
M  2pcs	N  2pcs	O  2pcs	P  4pcs		

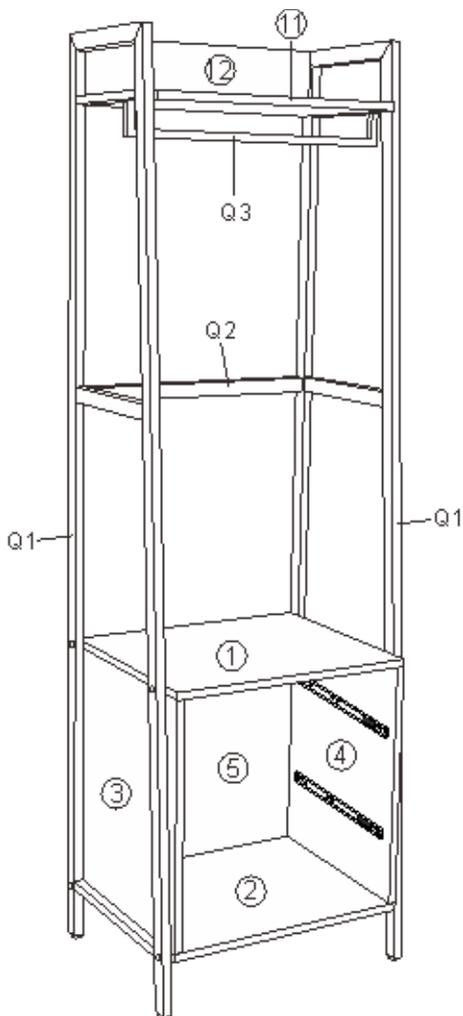




1	Top panel
2	Bottom panel
3	Left side panel
4	Right side panel
5	Back panel-bottom

6	Drawer front panel
7	Drawer left side panel
8	Drawer right side panel
9	Drawer back panel
10	Drawer bottom panel

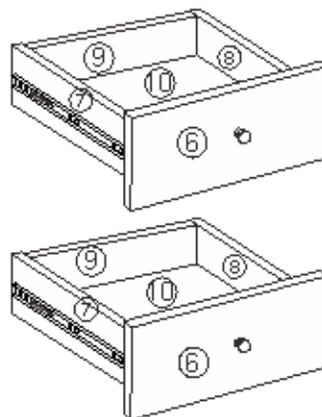


11	Top panel
12	Back panel-top
Q1	Metal frame
Q2	Connection pipe
Q3	Coat hanger

CAM LOCK INSTALL METHOD AS FOLLOWS

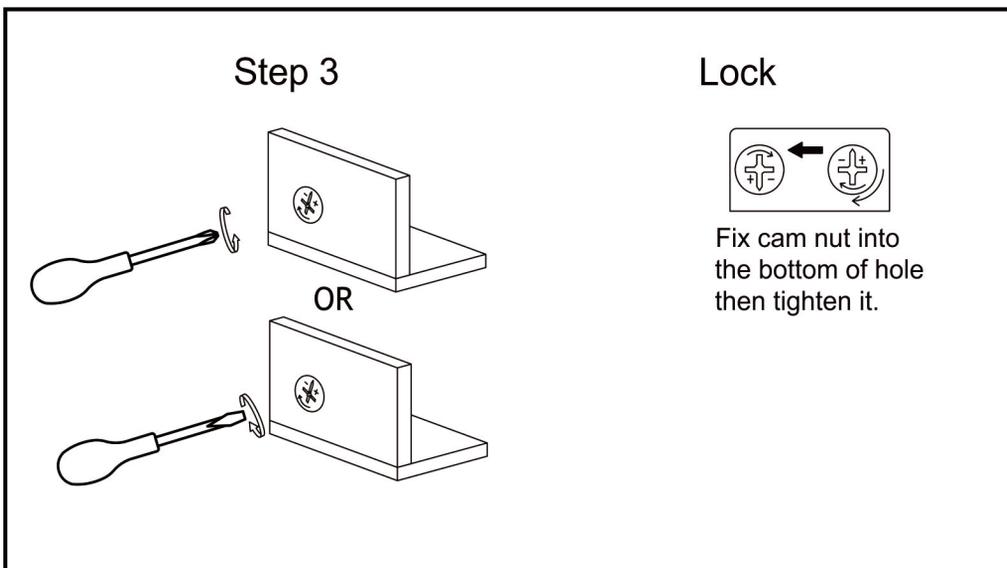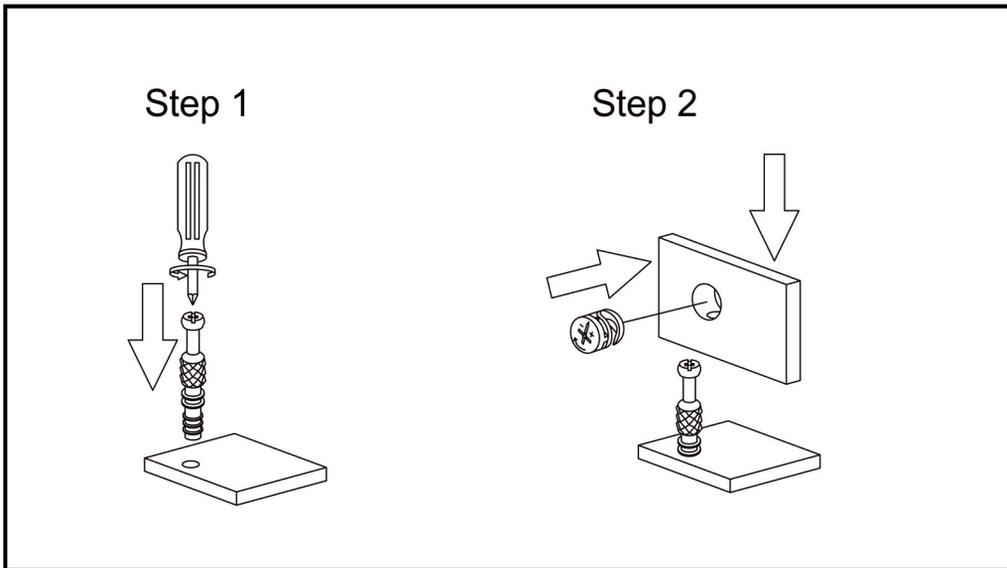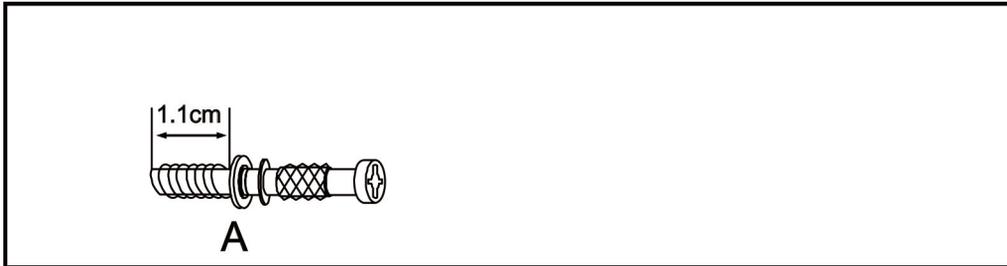


STEP 1:

Load fitting P into the bottom of metal frame Q1.

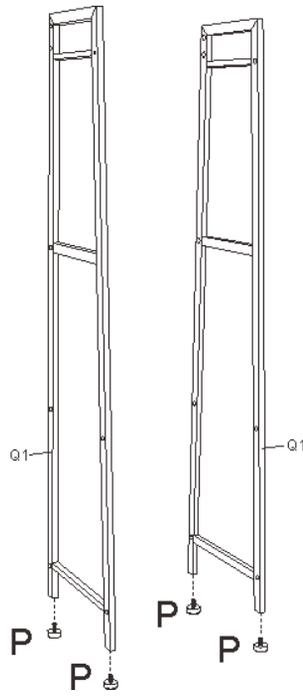


STEP 2:

Press the plastic clasp in the fitting E2 and disassemble E1 and E2.

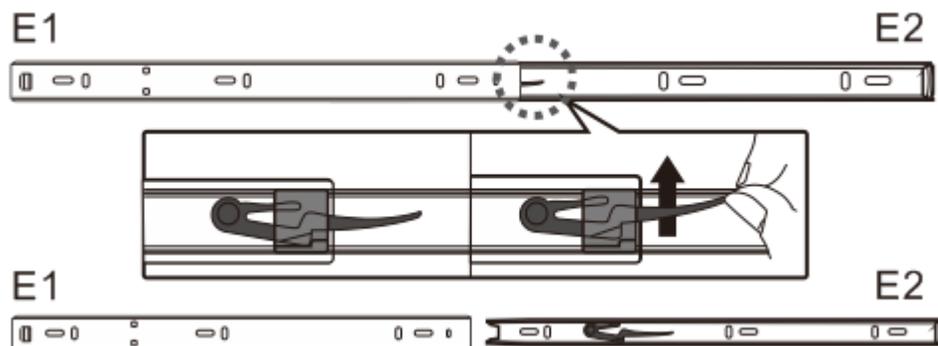


STEP 3:

Use fitting F to fix E1 on the orifice position of panel 3 and panel 4 respectively.

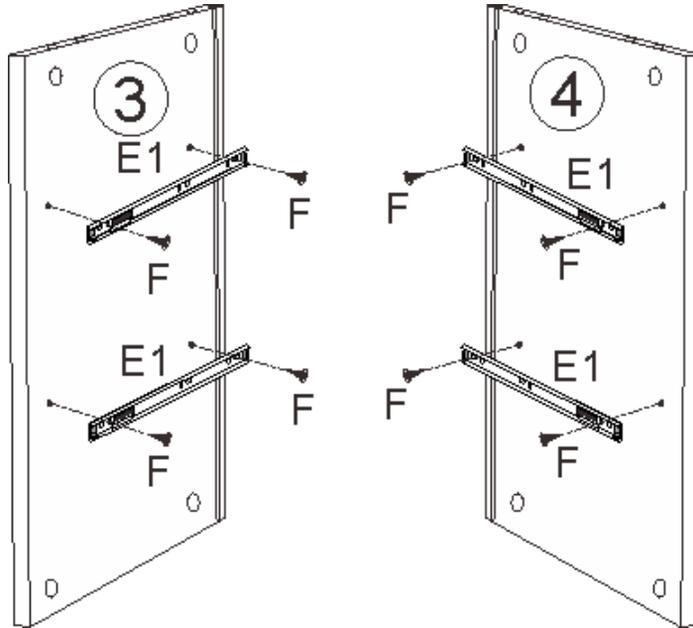


STEP 4:

Install Panel 12 on the Panel 11 with fitting D.

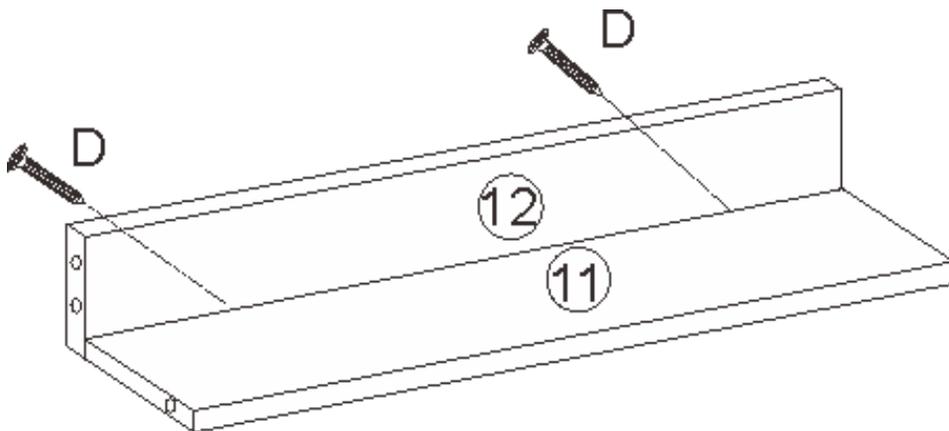


aTEP 5:

Install Connection pipe Q2 to the Metal frame Q1 with fitting C, and assemble the component of step 4 to the metal frame Q1; Then install Q3 with the metal frame Q1 with fitting B.

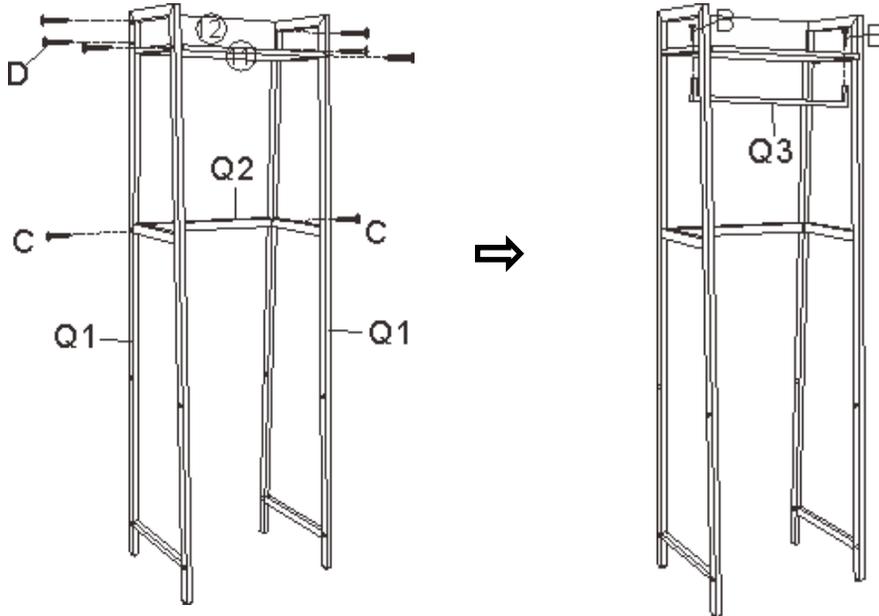


STEP 6:

Assemble Panel 2, 3 and 4 with fitting K and A, and after insert the panel 5, assemble the Panel 1 to Panel 3 and 4 with fitting and K.

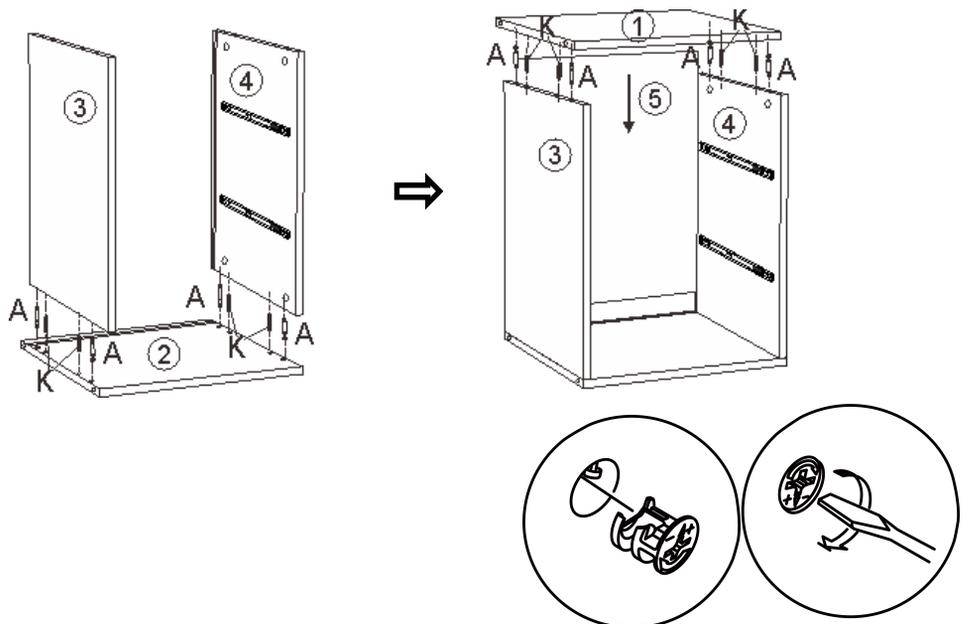


STEP 7:

Install the fitting O to the panel 6 with fitting J; And assemble Panel 7,8 and 9 with fitting D, after insert the Panel 10, assemble the panel 6 with fitting A.

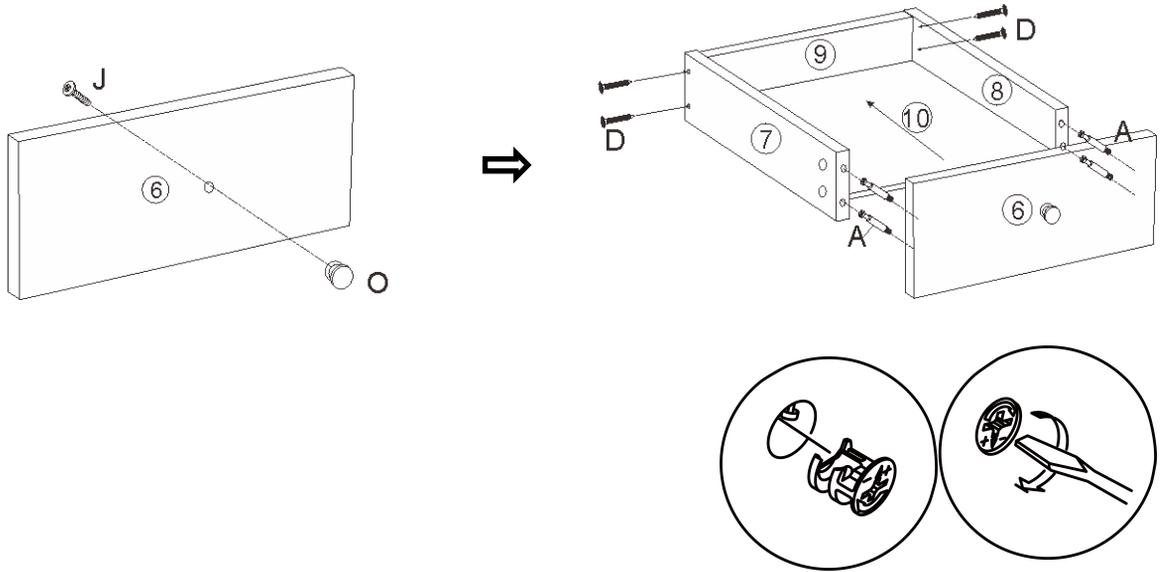


STEP 8:

Install E2 to the drawer components with fitting F, then insert the the drawers into the cabinet.

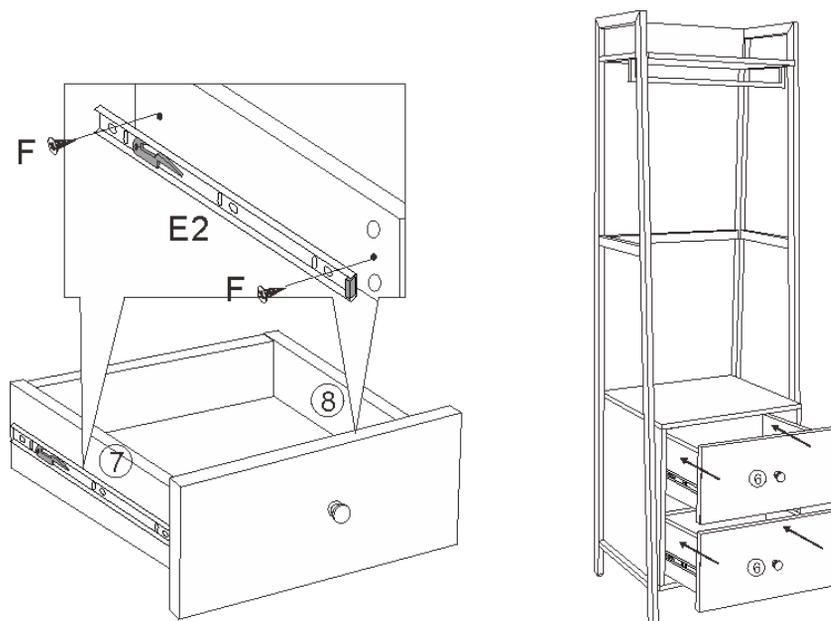


STEP 9:

Install the fitting M to the panel 11 with fitting G, and Punch holes in the wall at the appropriate position and insert the glue N, lock screw I through M to the wall.

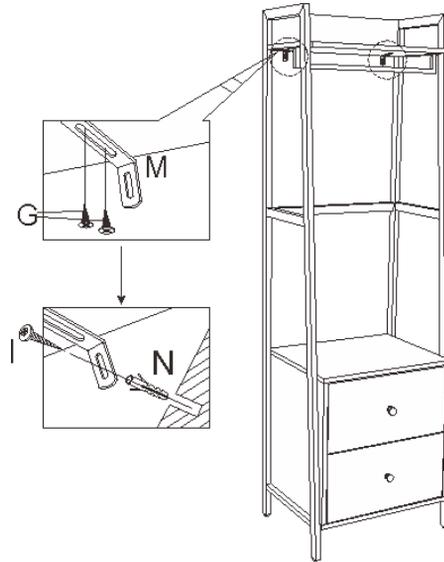


ASSEMBLY IS COMPLETE

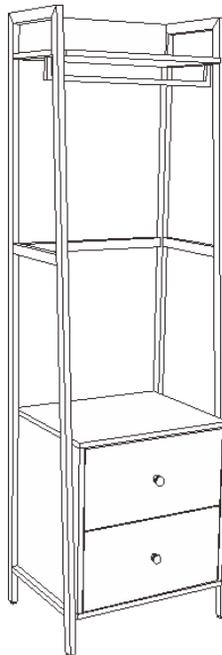

SAFETY BRACKETS INSTRUCTIONS

1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

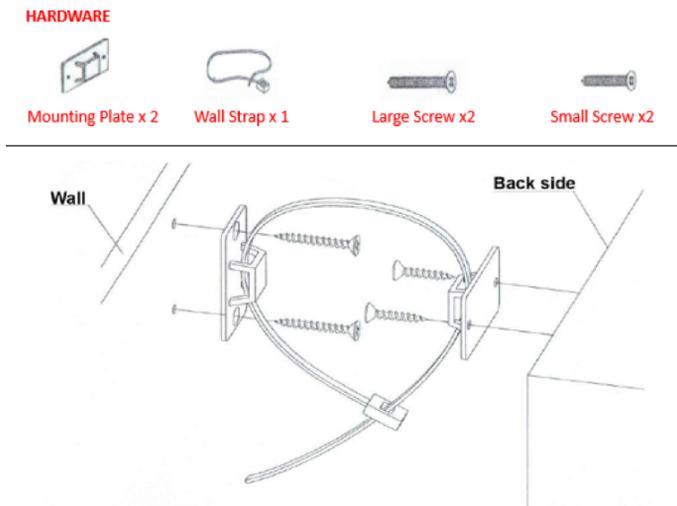

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void