
## ASSEMBLY INSTRUCTION HARDING

**3 DOOR BUFFET** 

**ITEM CODE 74709** 

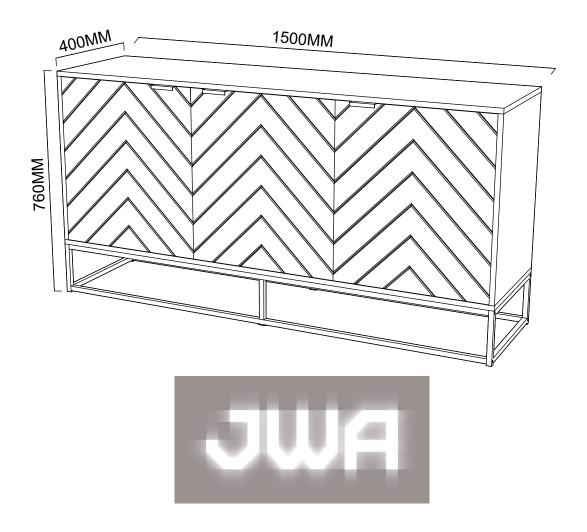


Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia. For any assistance with assembly or for missing parts please refer to your receipt

#### PRE-ASSEMBLY PREPARATION

#### **Before you start:**

- 1.Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use
- 3. Ensure that you have all required contents for complete assembly
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6.Do not over tighten the screws and bolts as this may damage the threads

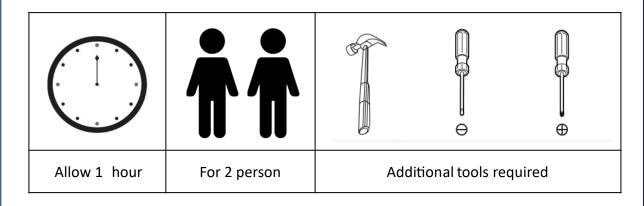




# **PARTS LIST** 9.


## **PARTS LIST**


NO.	ITEM	QTY	NO.	ITEM	QTY
Α	<b>©</b> → <b>)</b>	16PCS	K	<b>Ξ Φ</b> 3. 5*12	6PCS
В	Ф 15*10	16PCS	L	Φ3*1.5	2PCS
С	Φ 6*30	24PCS	М	<b>②</b>	12PCS
D	( <b>#)</b> ( <b>30111111111111111111111111111111111111</b>	8PCS	Z		1PC
Е		2PCS	0	<b>ξ )))))&gt;</b> Φ 2. 5*12	8PCS
F	Φ 4*14	36PCS	Р		1PC
G		4PCS	Q	<b>∄</b> ∭™ ⊕ 3*16	8PCS
Н		2PCS	R		8PCS
I		4PCS	S	<b>Φ5*30</b>	8PCS
J		3PCS	Т	0	8PCS


## **PARTS LIST**


NO.	ITEM	QTY	NO.	ITEM	QTY
1	TOP PANEL	1 PC	10	METAL LEG	2 PCE
2	LEFT SIDE PANEL	1 PC	11	METAL LEG	2 PCE
3	RIGHT SIDE PANEL	1 PC	12	METAL LEG	2 PCE
4	SHELF PANEL	2 PCE	13	METAL LEG	2 PCE
<b>(5)</b>	SHELF PANEL	1 PC	14	LEFT DOOR PANEL	1 PC
6	BOTTOM PANEL	1 PC	15	RIGHT DOOR PANEL	1 PC
7	LEFT MIDDLE PANEL	1 PC	16	RIGHT DOOR PANEL	1 PC
8	RIGHT MIDDLE PANEL	1 PC			
9	BACK PANEL	2 PCE			

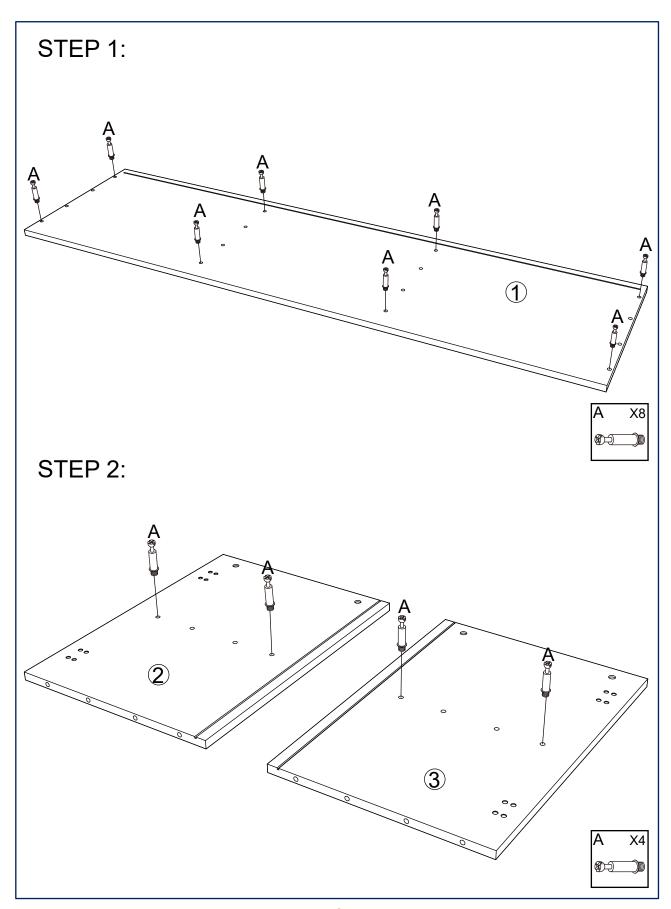


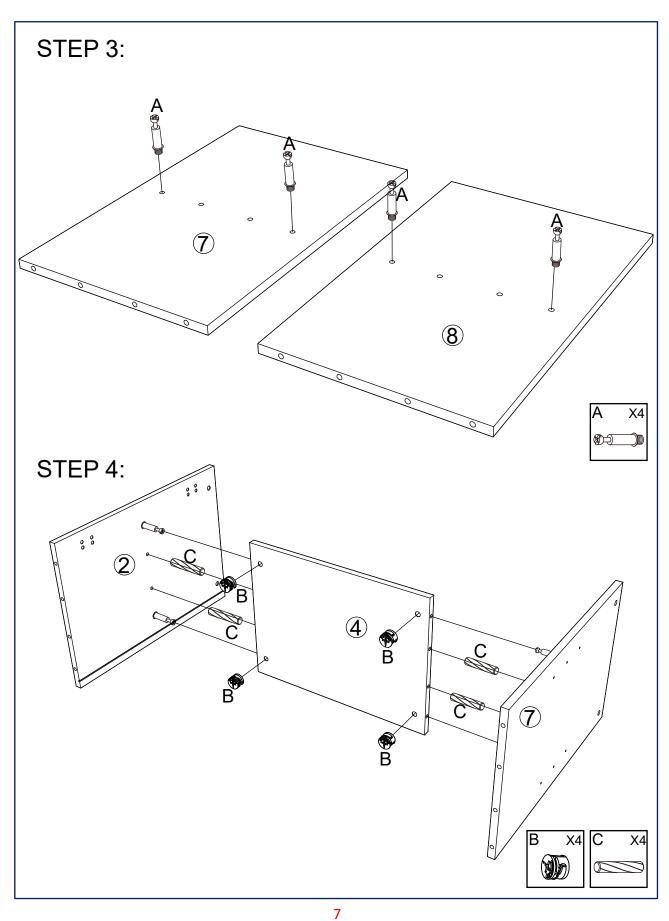


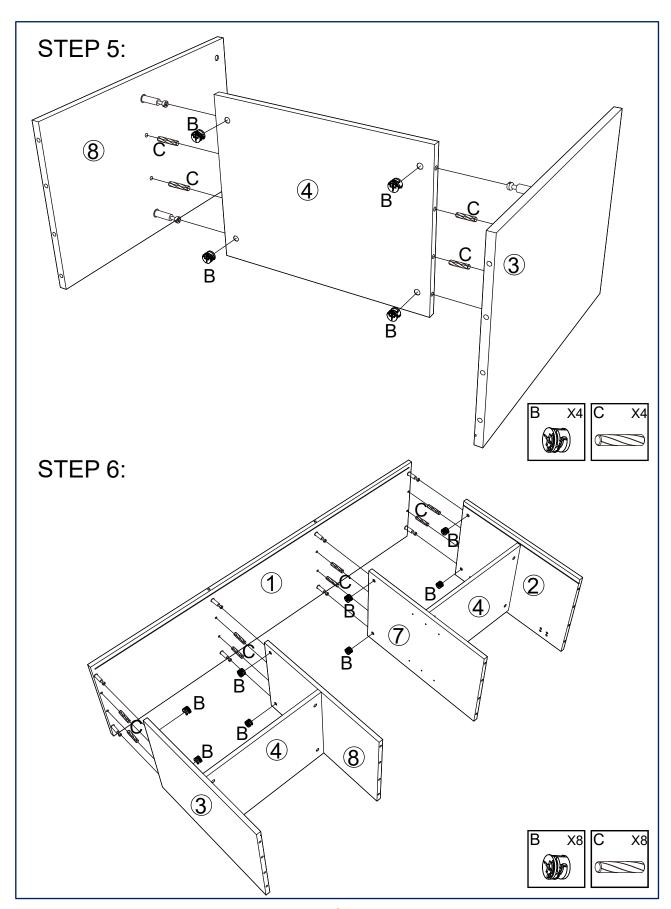


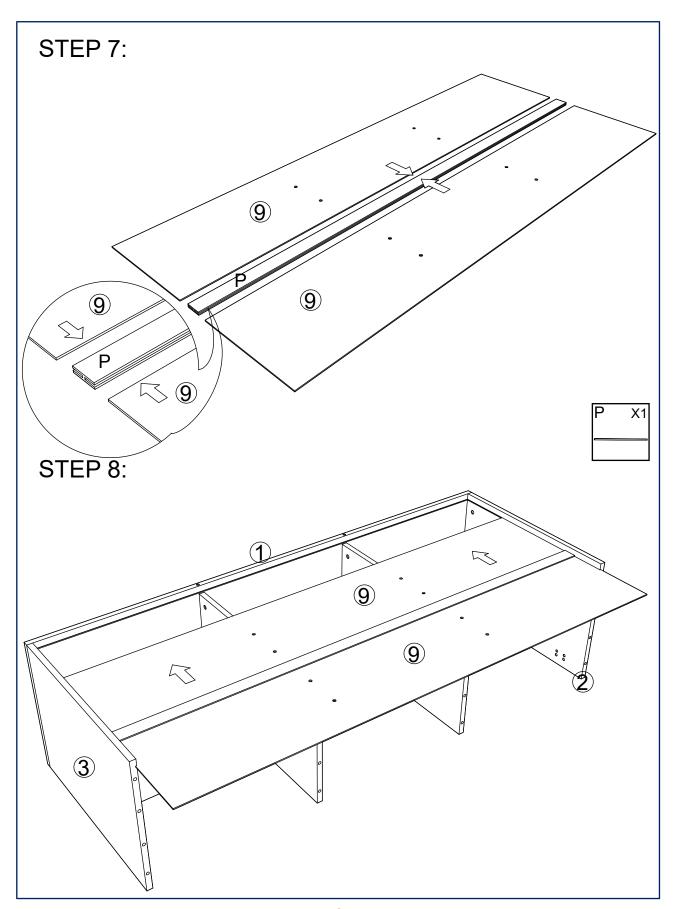


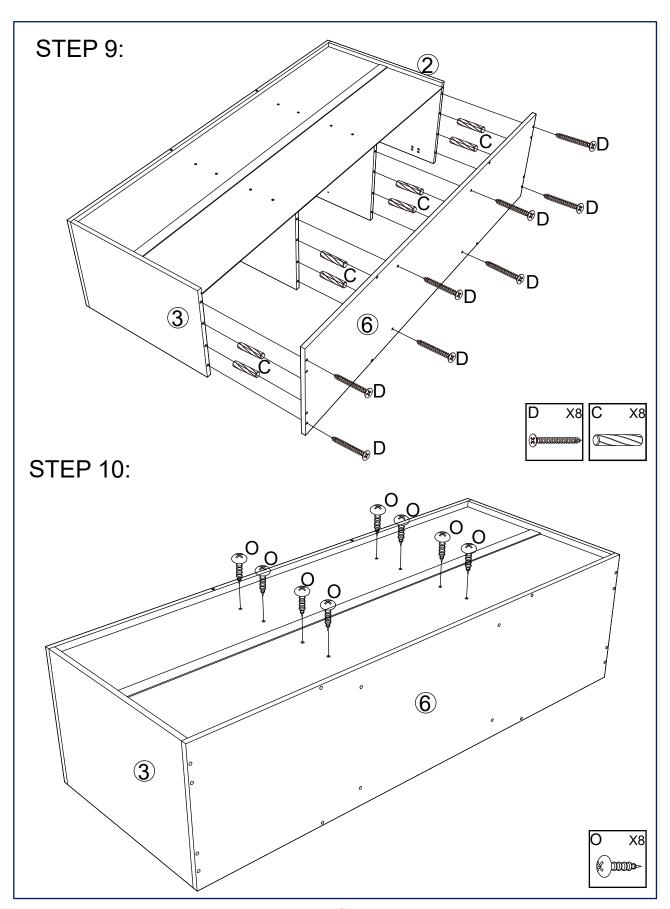

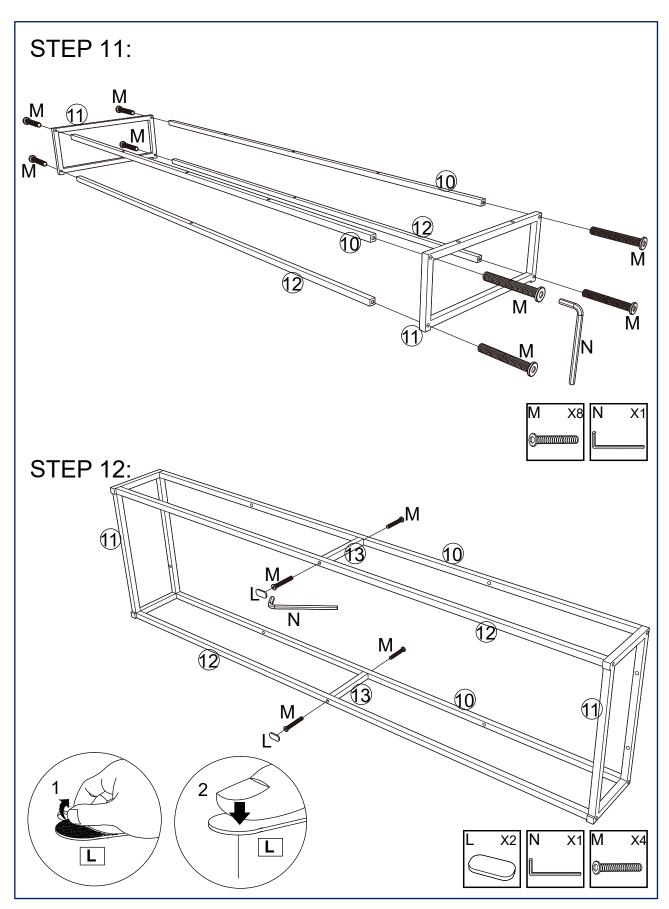


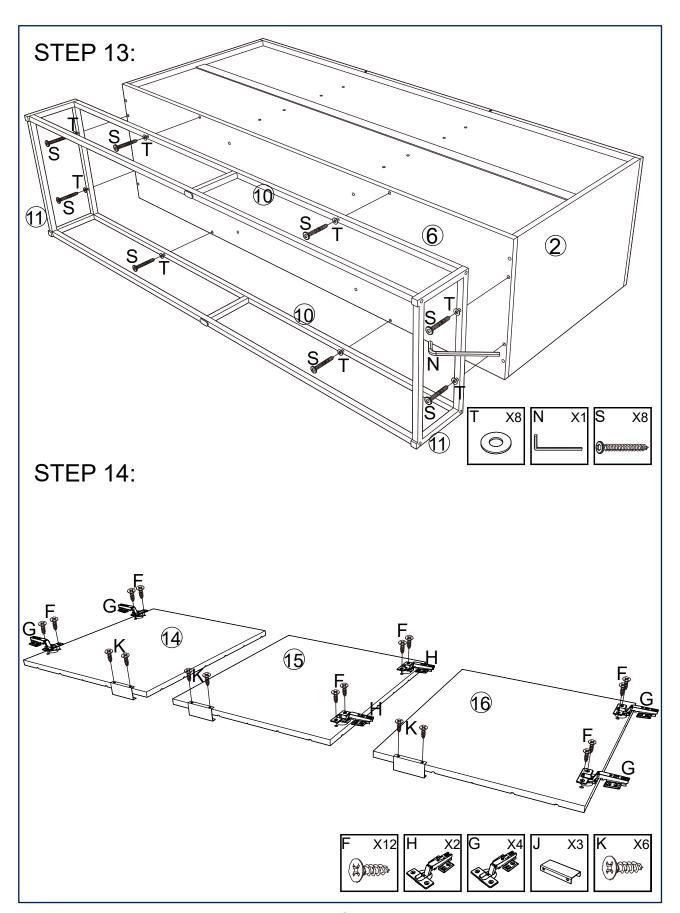

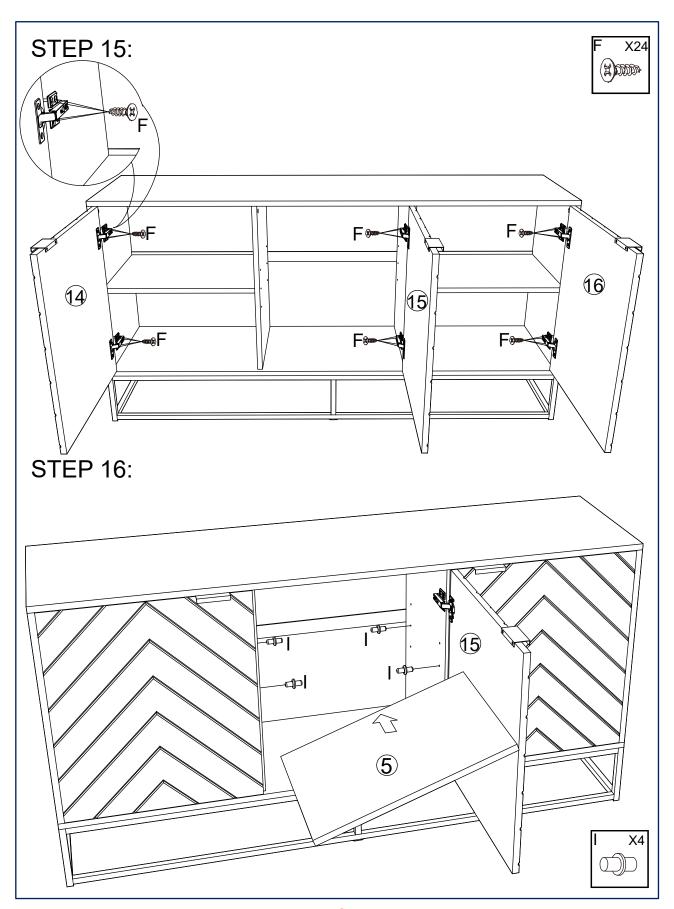

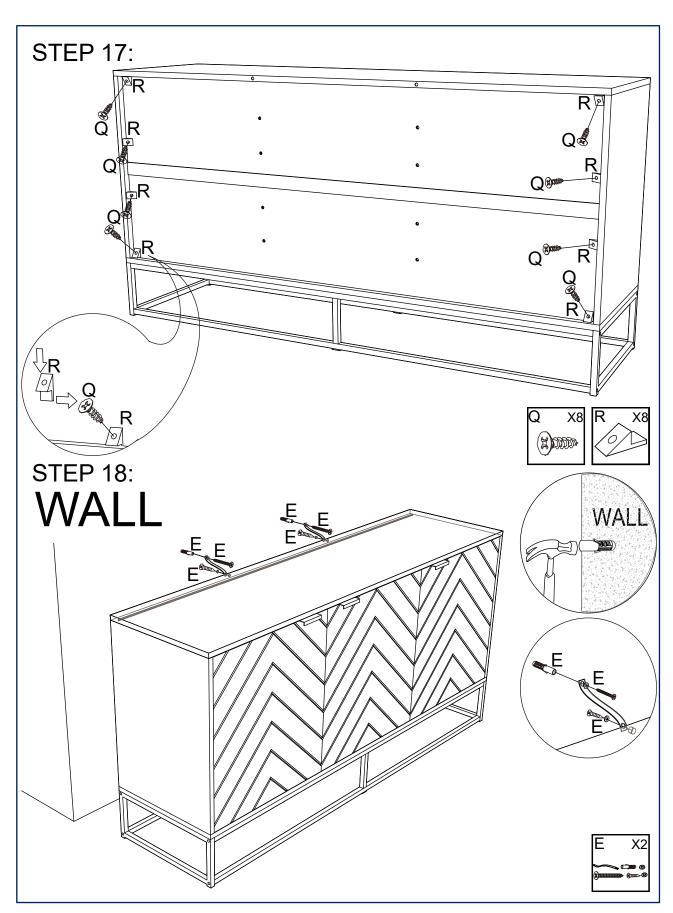


#### **ASSEMBLY IS COMPLETE**

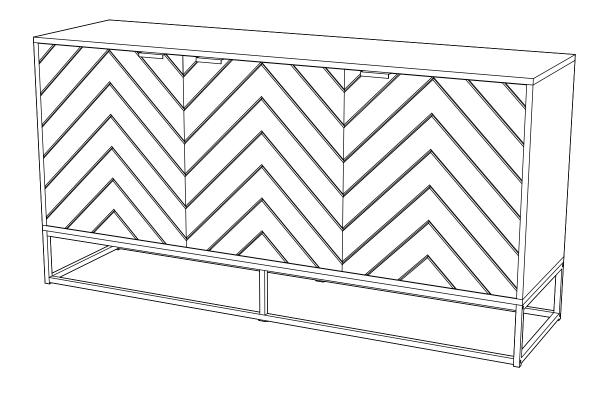

# SAFETY BRACKETS INSTRUCTIONS

- Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
- Attach the second Mounting Plate to the furniture frame with the Short Screws.
- Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
- Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

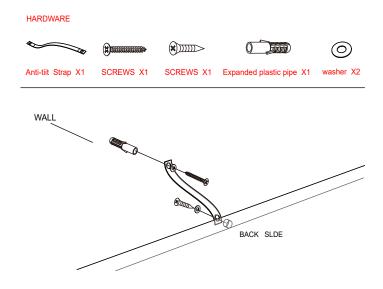

#### To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void