
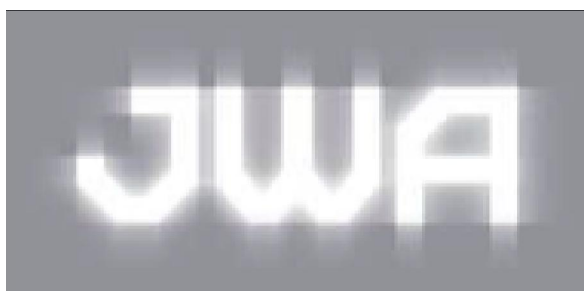


ASSEMBLY INSTRUCTION
SOSA QUEEN BED
82916

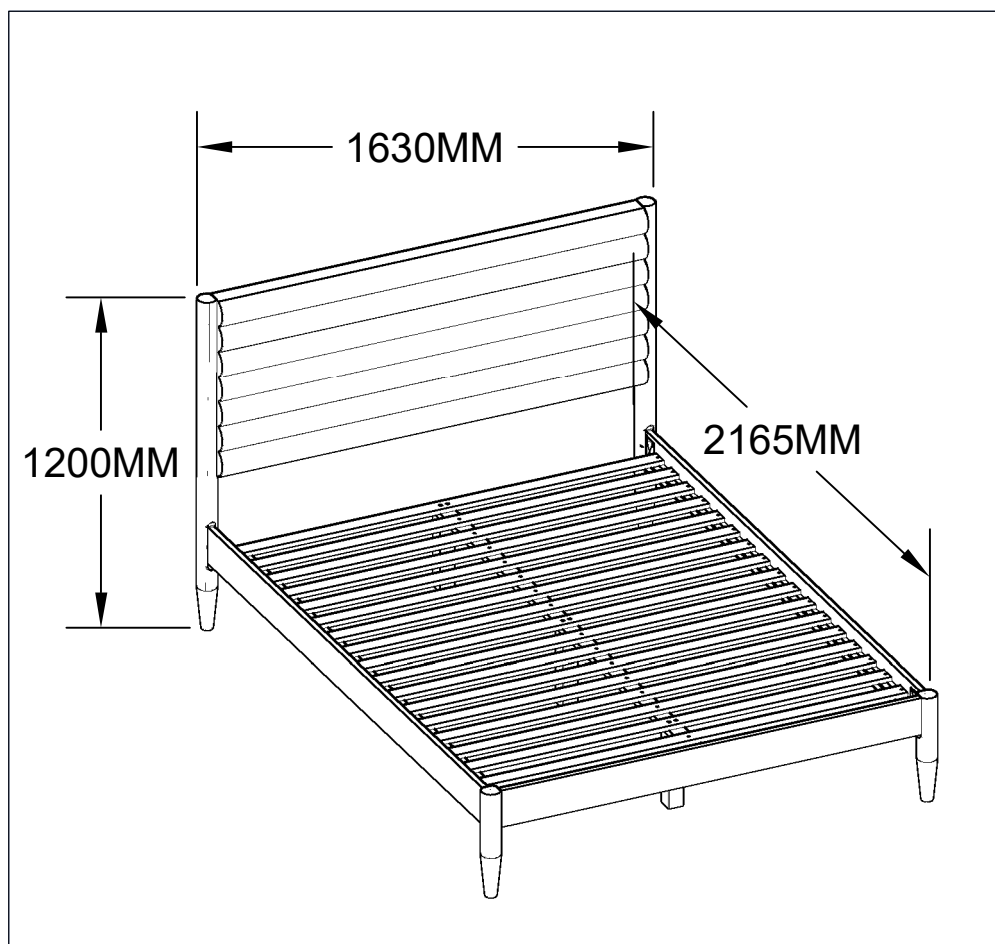


Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please refer to your receipt


PRE-ASSEMBLY PREPARATION

Before you start:





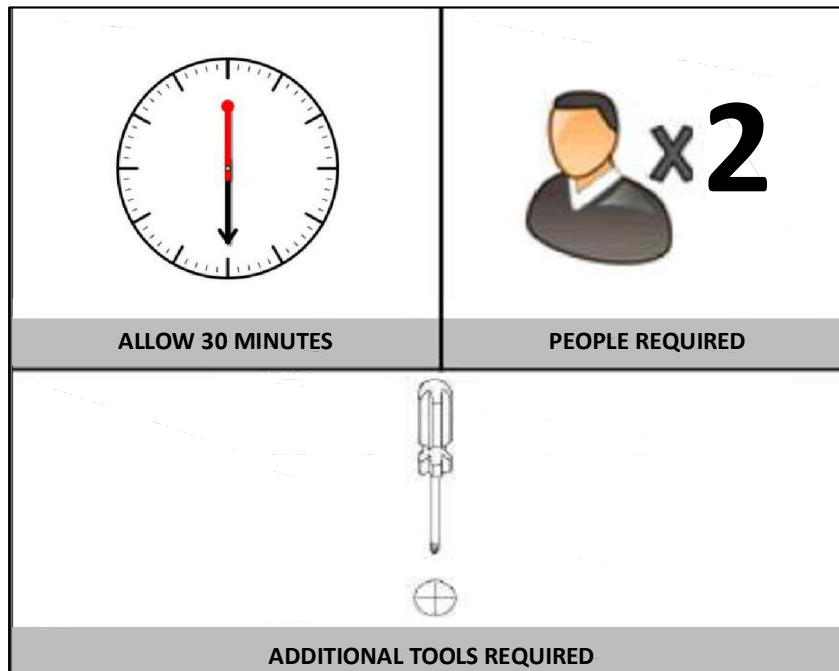





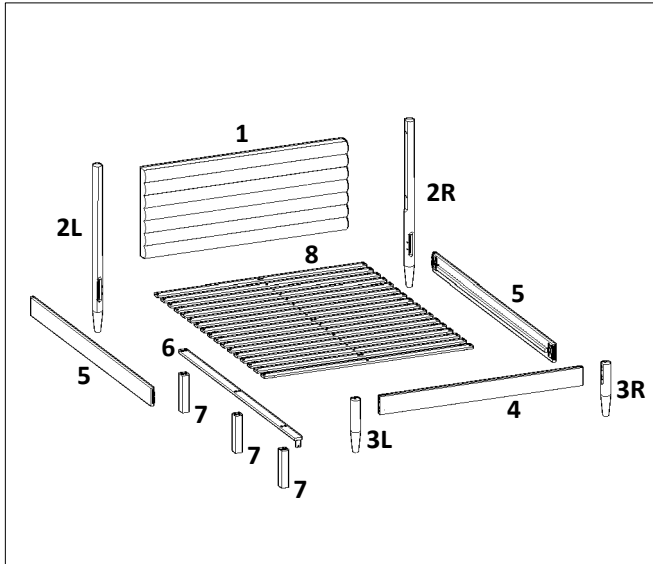

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads




PARTS LIST





1	HEADBOARD
2	HEADBOARD LEG (L+R)
3	FOOTBOARD LEG (L+R)
4	FOOTBOARD
5	SIDE RAIL
6	CENTER RAIL
7	CENTER SUPPORT LEG
8	SLATS

A Allen Key M4 (Long Ball Head)  1xA	B Allen Key M5  1xB	C JCBB M8 x 35mm  4xC
D JCBC M6 x 50mm  6xD	E JCBC M6 x 40mm  4xE	F JCBC M6 x 25mm  6xF
G M8 Spring Washer  4xG	H M8 Flat Washer  4xH	I M6 Spring Washer  4xI
J Wood Screw M3.5 x 16mm  1xJ	K Wood Screw M4 x 25mm  42xK	L Wood Dowel M8 x 30mm  4xL



STEP 1 : Attach (2) to (1) with (C),(G) and (H) Using a Allen Key M5 (B) as shown.

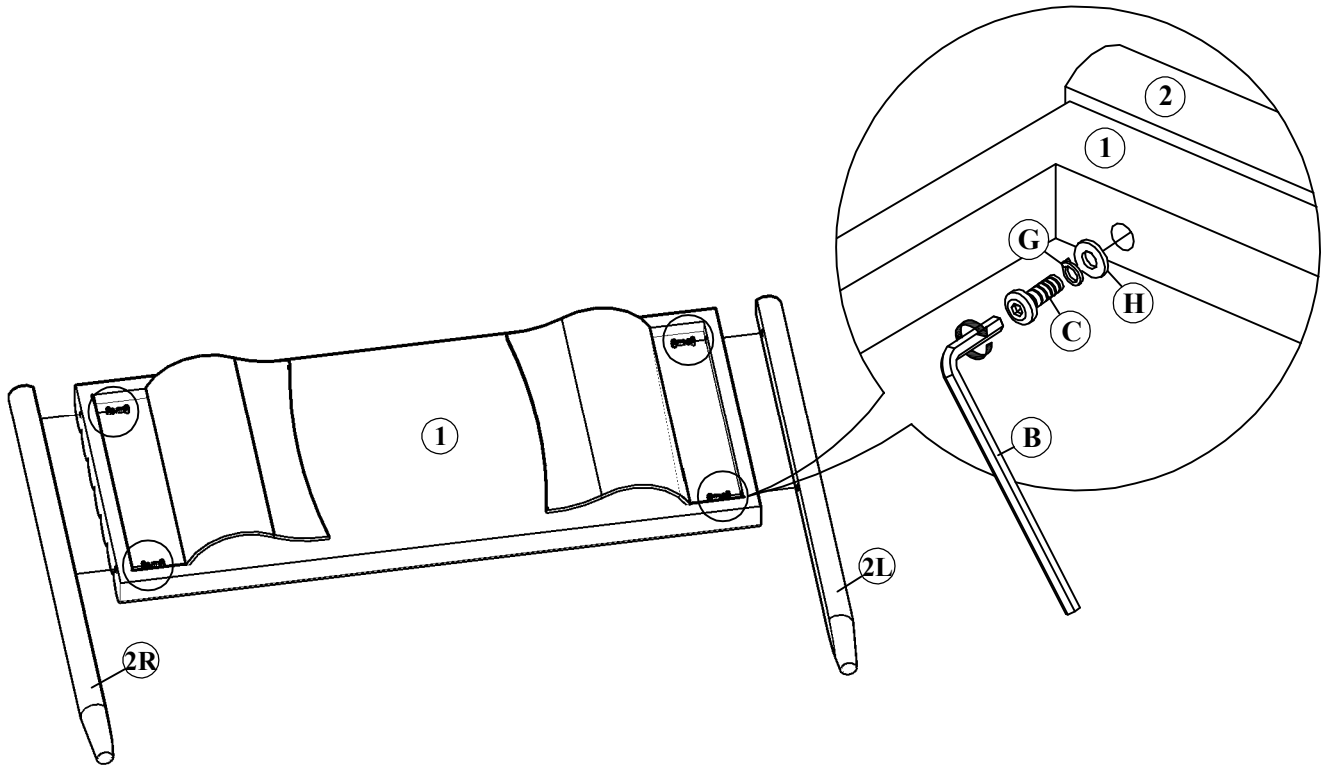


STEP 2 : Attach (3) to (4) with (L),(E) and (I) Using a Allen Key M4 (A) as shown.

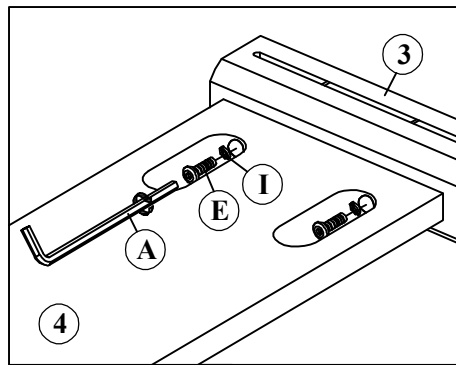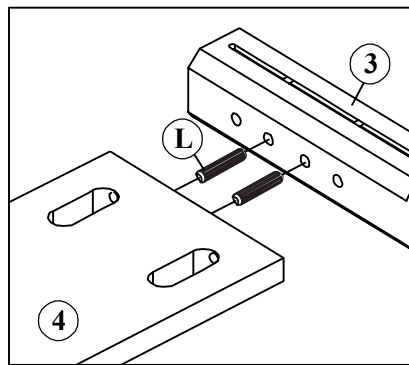


Remarks:
arrows sticker points upward

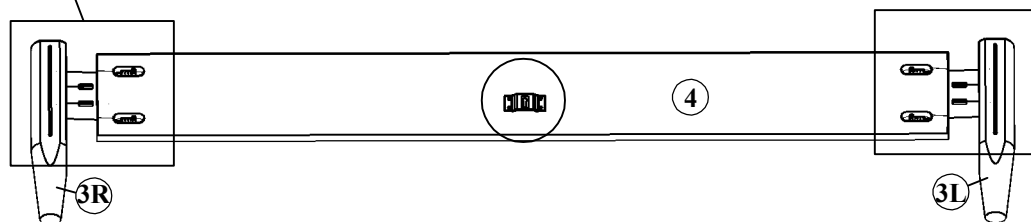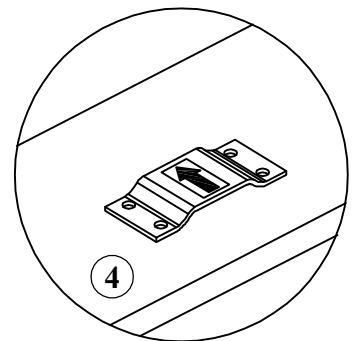


STEP 3 : Attach (5) to (2) and (3) Assembled Headboard and Footboard as shown.

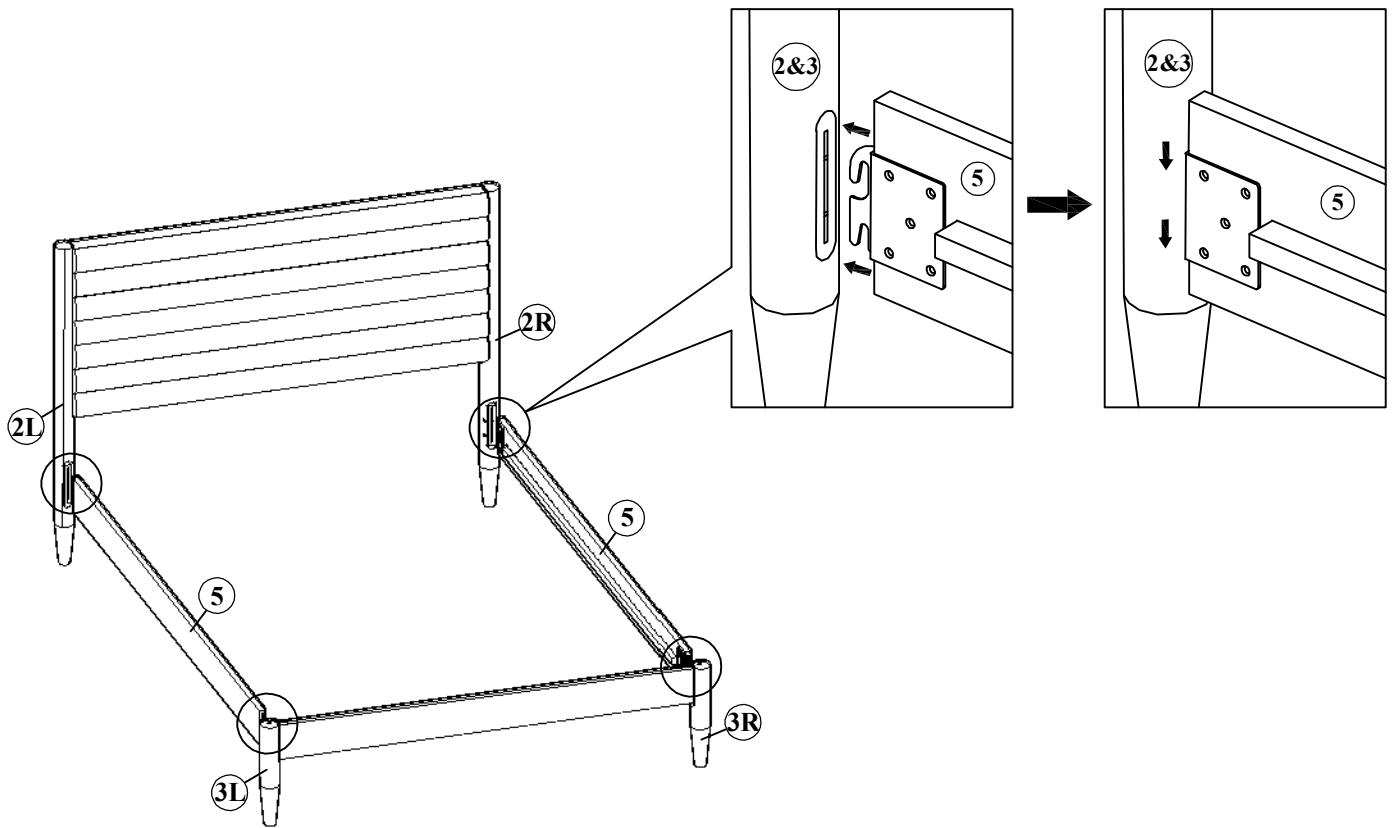


STEP 4 : Attach (8) and (7) to (6) with (D) Using a Allen Key M4 (A) as shown.

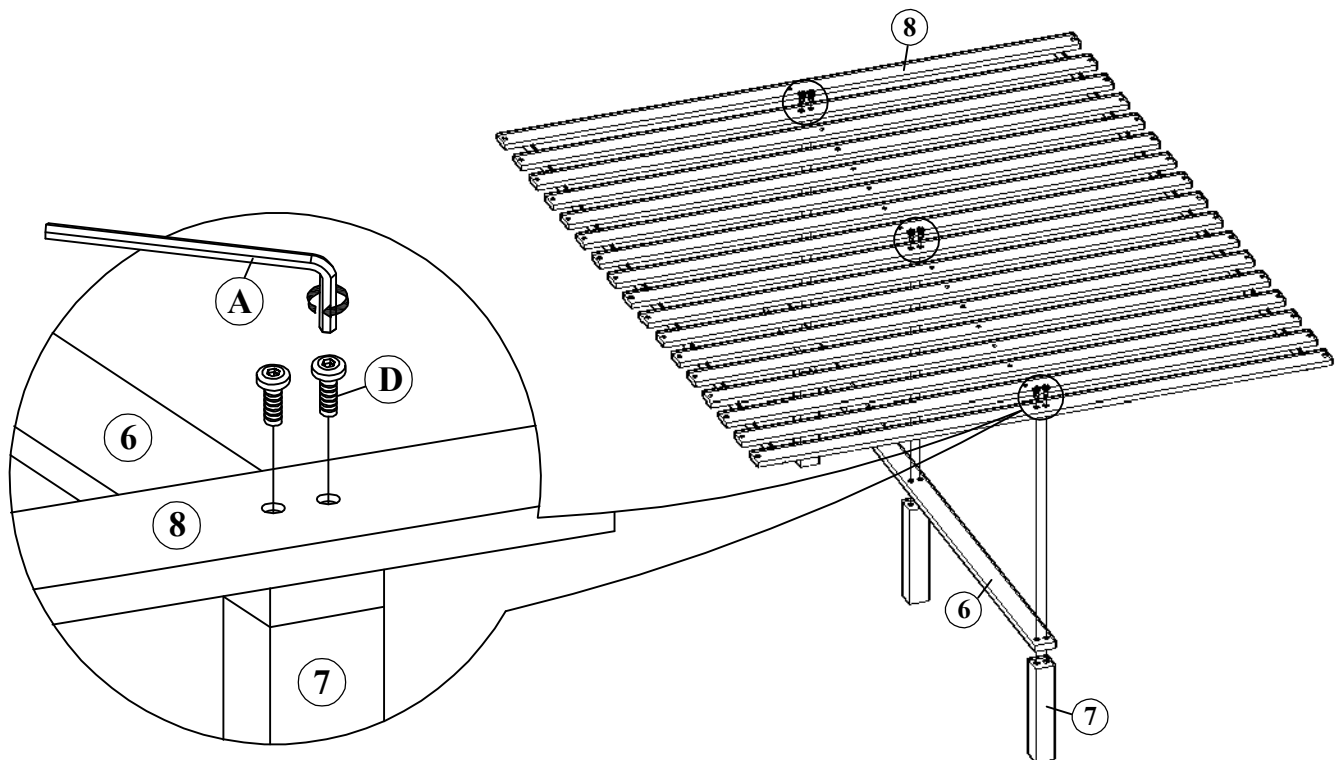


STEP 5 : Attach Assembled Center Support to Assembled Bed with (J) using a Screwdriver as shown.

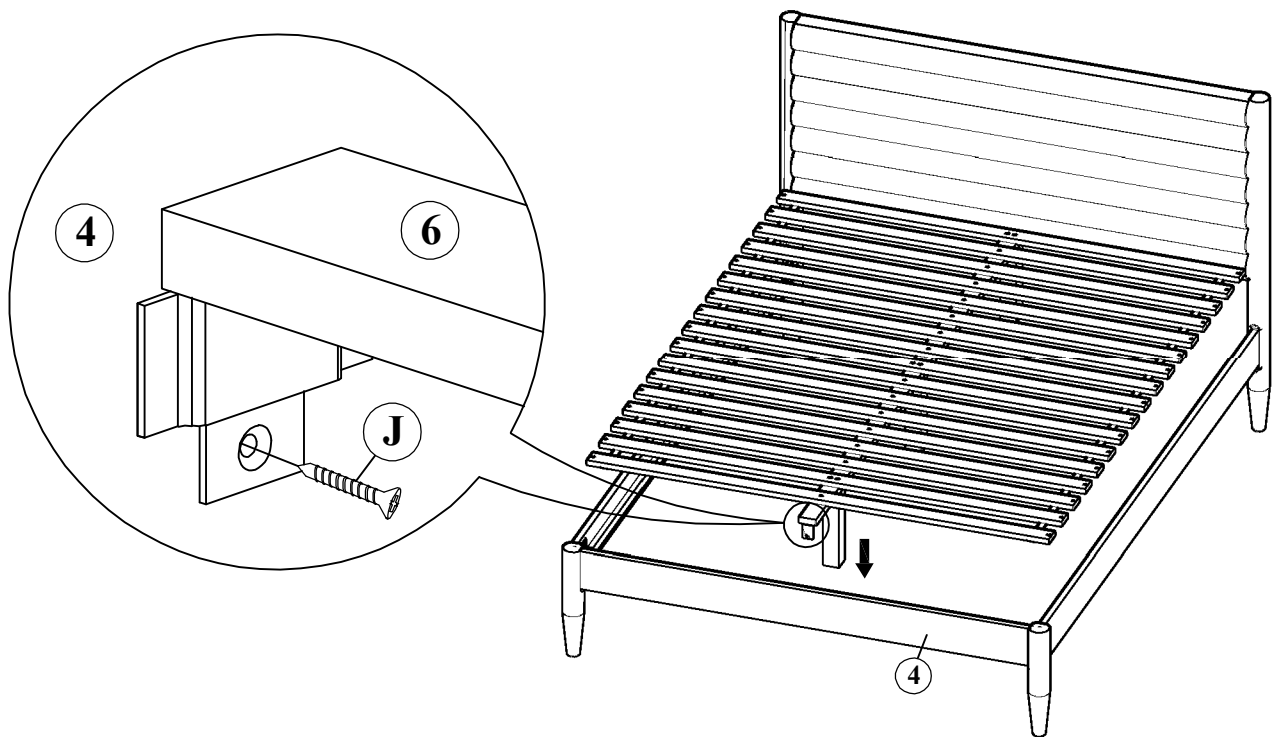


STEP 6 : Attach Assembled Bed Slats to Assembled Bed Frame with (F) Using a Allen Key M4 (A) as shown.

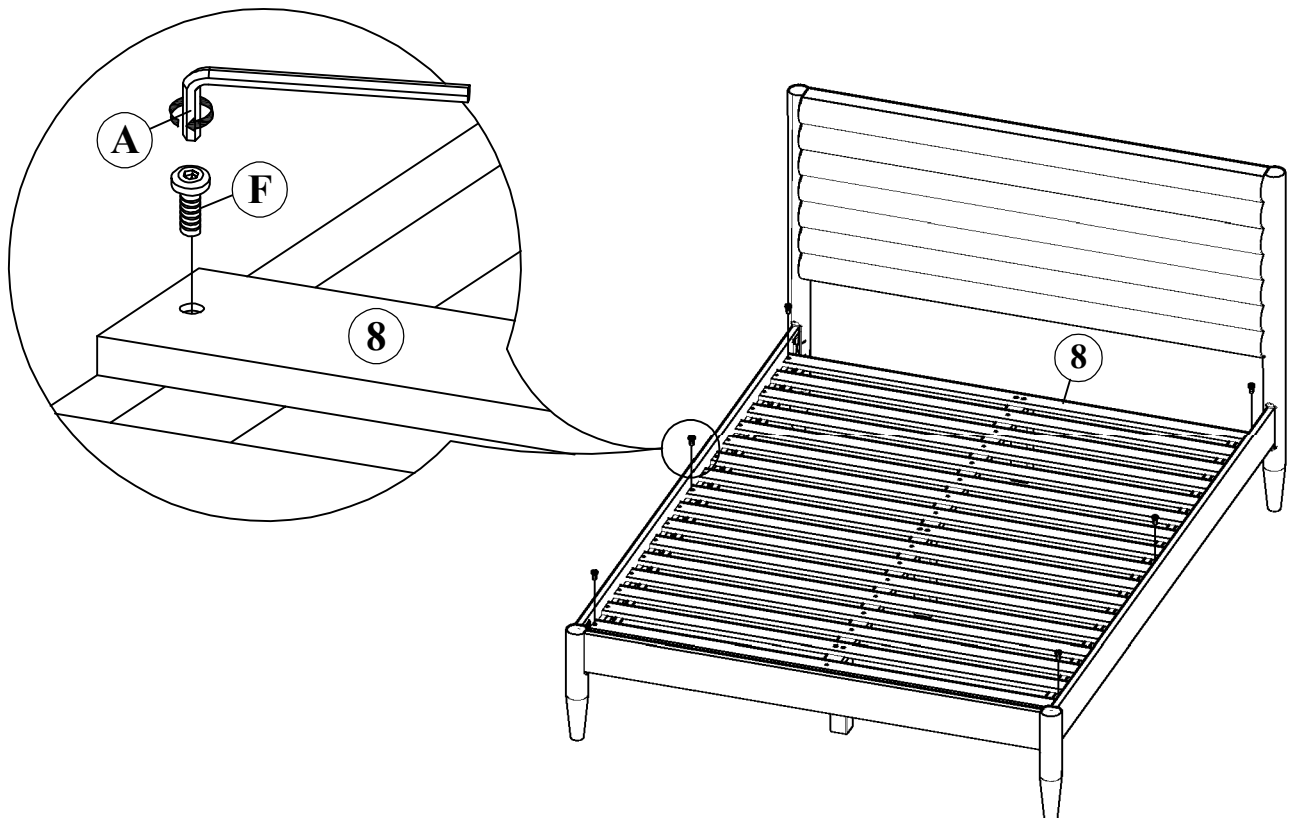

STEP 7 : Attach Assembled Bed Slats to Assembled Bed Frame with (K) using a Screwdriver as shown.

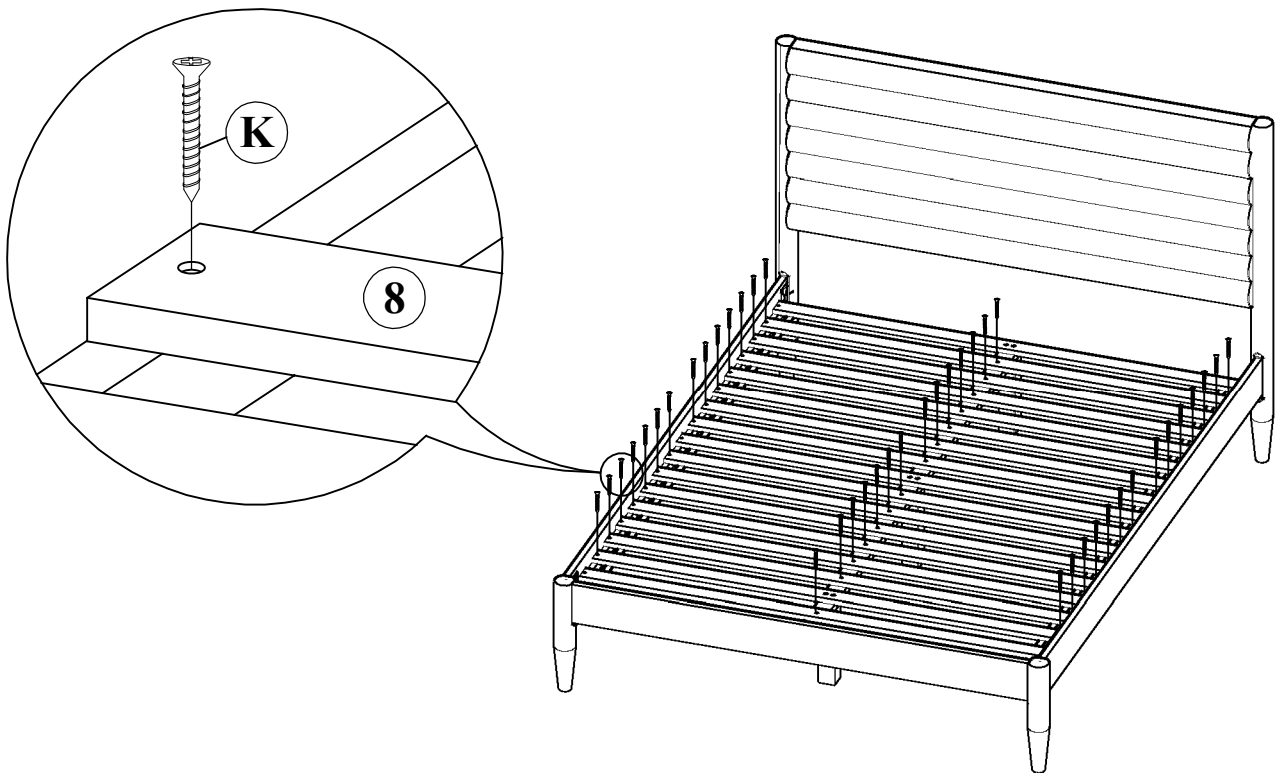

ASSEMBLY IS COMPLETE

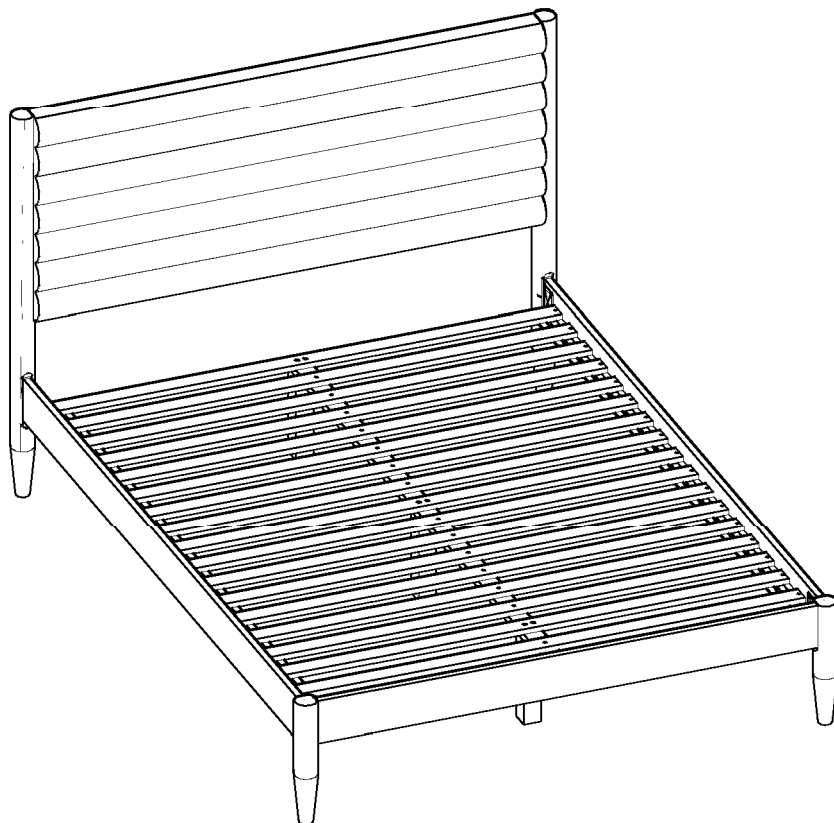

CAUTION:

**ALWAYS LIFT YOUR BED WHEN MOVING/RELOCATING - DO NOT DRAG.
DRAGGING CAN CAUSE THE CENTRE SUPPORT LEGS TO BEND/BREAK**

PRODUCT CARE:

REGULAR CARE:

- Protect from direct sunlight
- Vacuum regularly using low suction
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.

CLEANING:

- Protect from direct sunlight
- Vacuum regularly using low suction
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.

SPOT CLEANING:

- Do not rub
- Do not spot clean with any solvent
- Treat spills and stains as soon as possible
- Gently scrape off any soil or blot any liquid from the surface of the fabric before applying cleaner
- Apply proprietary cleaning agents strictly according to instructions to remove the residue of the spill
- Do not saturate the fabric or interior with water or other cleaning liquids

WARNING:

Apply only water-based soil resist (fabric protection) treatments. Do not use aerosol products

*** PILLING IS NOT A FABRIC DEFECT OR FAULT AND IS NOT COVERED BY WARRANTY**

*** PILLING IS A NORMAL OCCURRENCE CAUSED BY WEAR AND TEAR AND DOES NOT AFFECT THE DURABILITY OR FUNCTIONALITY OF THE FABRIC AND IS EASILY REMOVED**