


# ASSEMBLY INSTRUCTION

OLDHAM

WIDE UNIT

ITEM CODE 69486


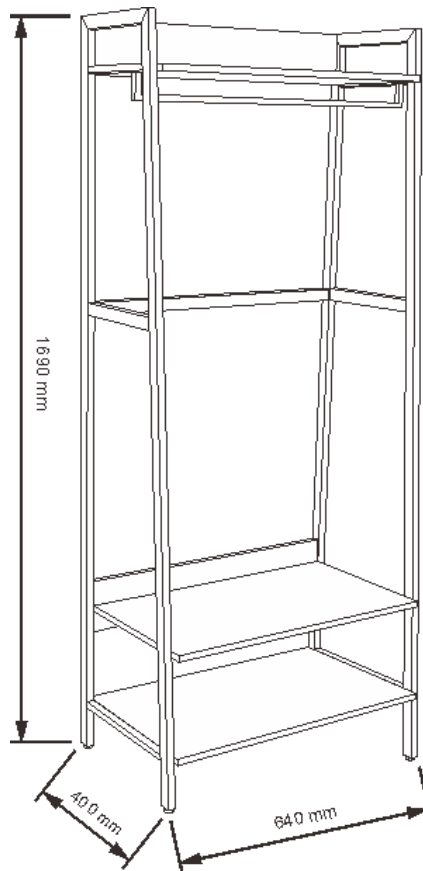



Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia.  
For any assistance with assembly or for missing parts please refer to your receipt

## PRE-ASSEMBLY PREPARATION

### Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

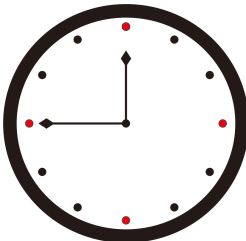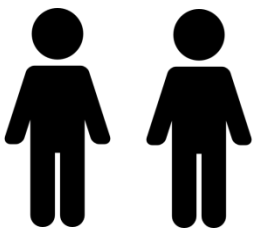		
Allow 45 min	For 2 person	Additional tools required



## TIPPING WARNING





Serious or fatal injuries may occur from furniture toppling over. To help avoid this please follow the below recommendations:

- Install the provided "Tipping Kit" as per the instructions
- Never allow children to climb on or hang off of any part of this product
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product









If this product has drawers:


- Place the heaviest items in lowest drawers
- Do not open more than 1 drawer at a time as this may cause the product to become unbalanced
- Do not tamper with or remove any drawer interlocking/running system

**Note:** The use of the provided "Tipping Kit" may reduce but not necessarily eliminate the risk of furniture toppling over. Please use this product with caution.

*This is a permanent label. Do not attempt to remove!*

## PARTS LIST

<b>A</b>  M6X25mm 2pcs	<b>B</b>  M6X30mm 2pcs	<b>C</b>  ST5X50mm 26pcs	<b>D</b>  ST4X25mm 2pcs	<b>E</b>  M3.5X14mm 4pcs
<b>F</b>  2pcs	<b>G</b>  2pcs	<b>H</b>  4pcs		

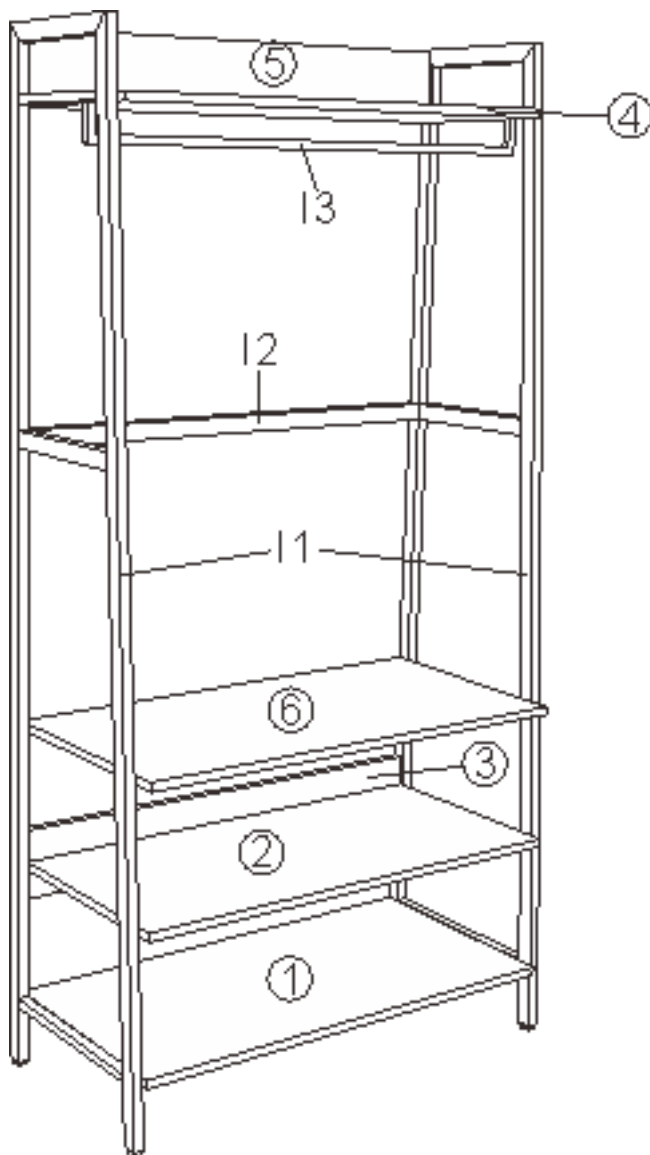


1	Bottom panel
2	Middle Layer panel
3	Back panel-bottom
4	Top panel
5	Back panel-top
6	Upper Layer panel

l1	Metal panel
l2	Conneciton pipe
l3	Coat hanger


## STEP 1:

Load fitting H into the bottom of metal frame I1.

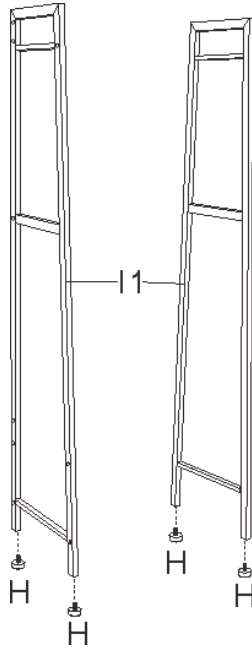


## STEP 2:

Assemble panel 2 and 3, Panel 4 and 5 respectively with fitting C.

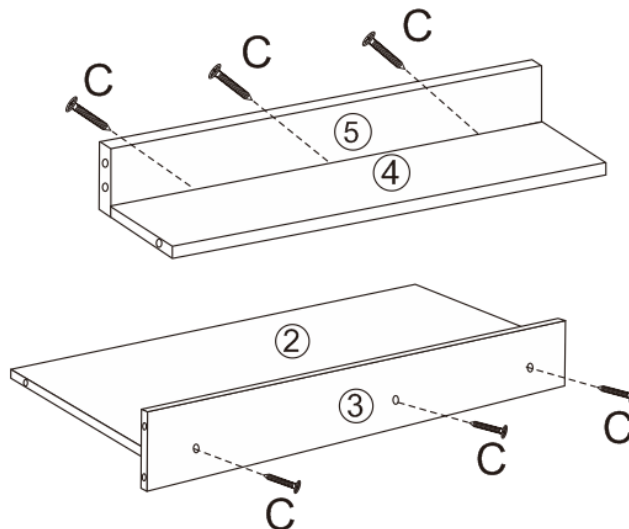


### STEP 3:

Assemble metal I1 with connection pipe I2 with fitting B, then assemble the panel 1 and 6, component 2+3 and 4+5 to the metal frame with fitting C.

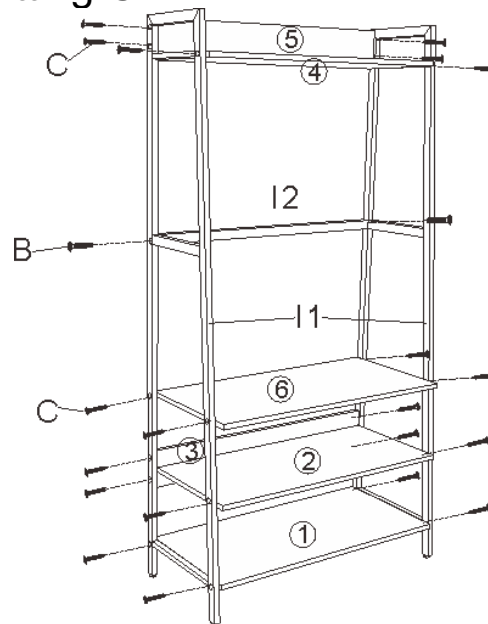


### STEP 4:

Install I3 to the metal frame with fitting A.

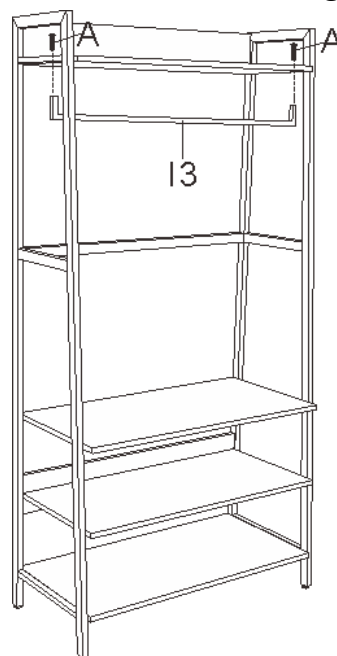


## STEP 5:

Install the fitting F to the panel 4 with fitting E, and Punch holes in the wall at the appropriate position and insert the glue G, lock screw D through F to the wall.

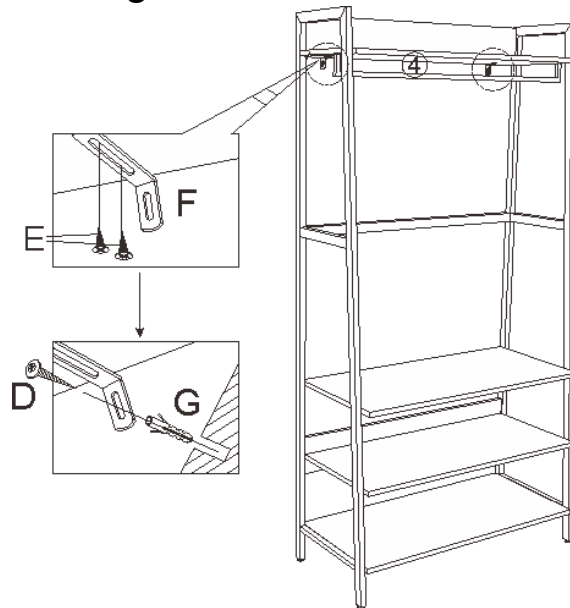

ASSEMBLY IS COMPLETE

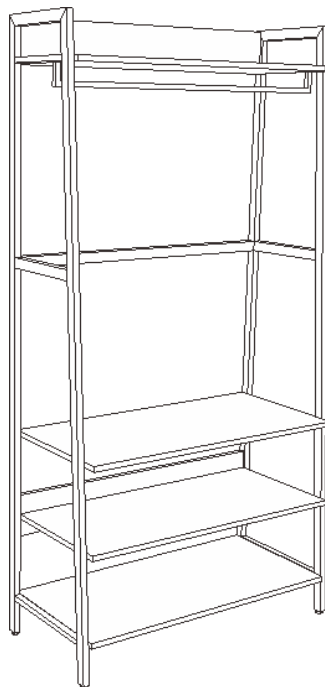

## **To protect your furniture, we suggest the following:**

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

**NOTE:** If the above care advise is not adhered to your product warranty may become void