


# ASSEMBLY INSTRUCTION

Abdiel

5 tier bookcase




ITEM CODE 70819

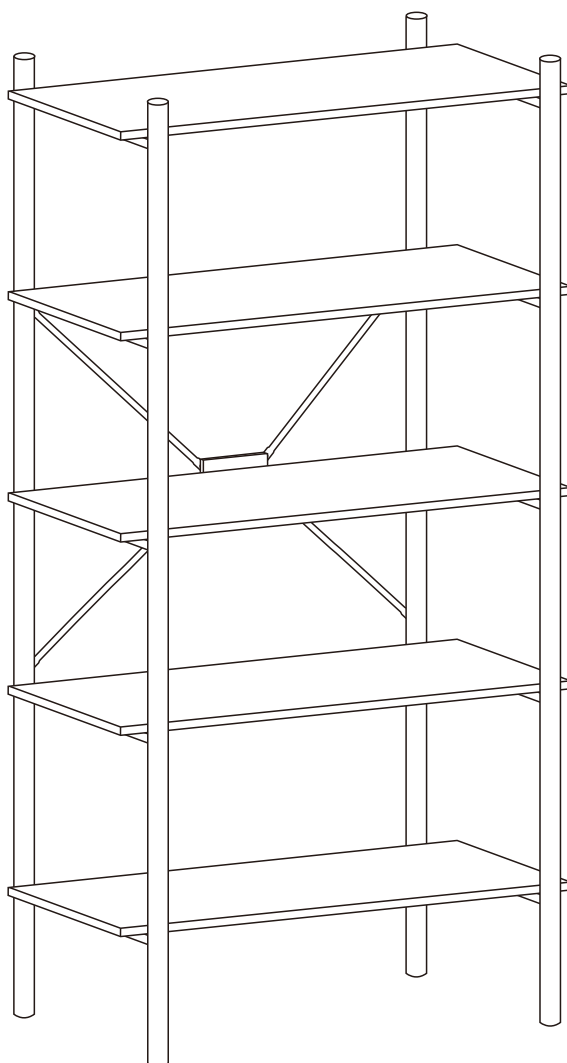

## PRE-ASSEMBLY PREPARATION

### Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

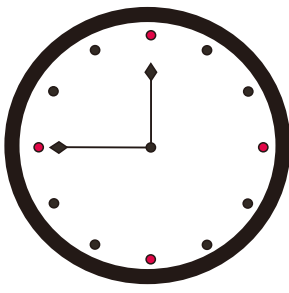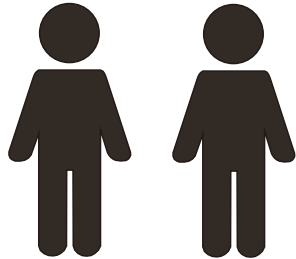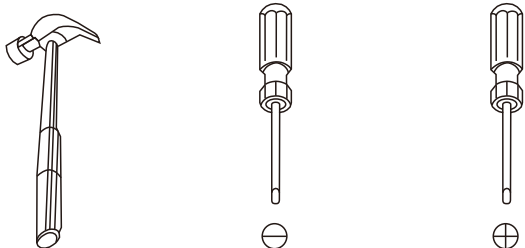		
Allow 45min	For 2 person	Additional tools required



## TIPPING WARNING





Serious or fatal injuries may occur from furniture toppling over. To help avoid this please follow the below recommendations;

- Install the provided "Tipping Kit" as per the instructions
- Never allow children to climb on or hang off of any part of this product
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product











IF this product has drawers:

- Place the heaviest items in lowest drawers
- Do not open more than 1 drawer at a time as this may cause the product to become unbalanced
- Do not tamper with or remove any drawer interlocking/running system

**Note:** The use of the provided "Tipping Kit" may reduce but not necessarily eliminate the risk of furniture toppling over. Please use this product with caution.


*This is a permanent label. Do not attempt to remove!*

# PARTS LIST

<b>A</b>  M6X25mm 20pcs	<b>B</b>  M6X12mm 8pcs	<b>C</b>  ST4X14mm 5pcs	<b>D</b>  M6mm 4pcs	<b>E</b>  Allen key 1pc
<b>F</b>  wrench 1pc	<b>G</b>  1pc	<b>H</b>  1pc	<b>I</b>  ST4X25mm 1pc	<b>J</b>  1pc


1	layer panel
2	layer panel
3	layer panel

P1	metal frame
P2	back tube

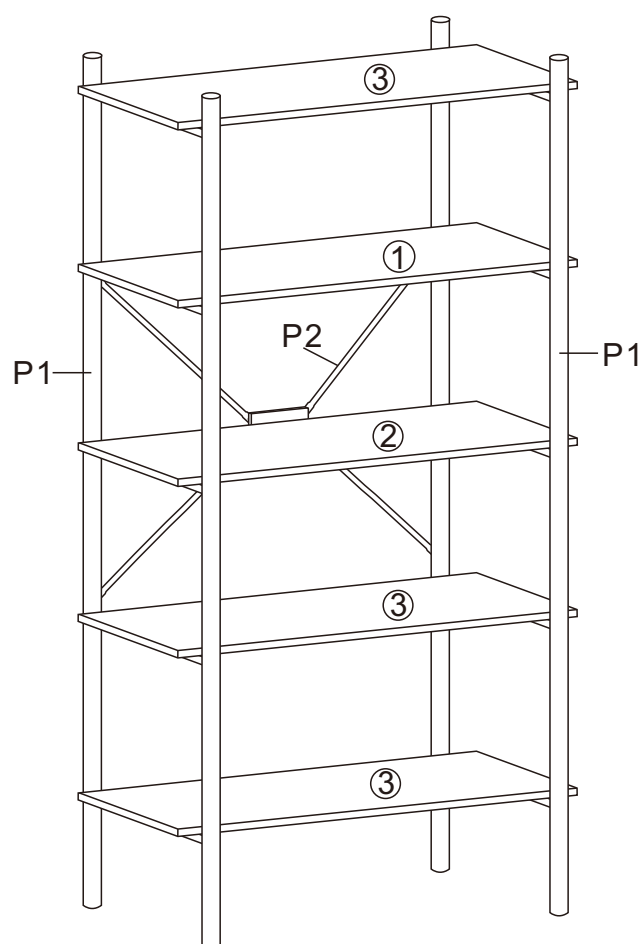

## STEP 1:


The below drawing is in rear view. Use the allen key E to attach the Panel 3, 1, and 2 to the metal frame P1 with fitting A according to the direction of the arrow.

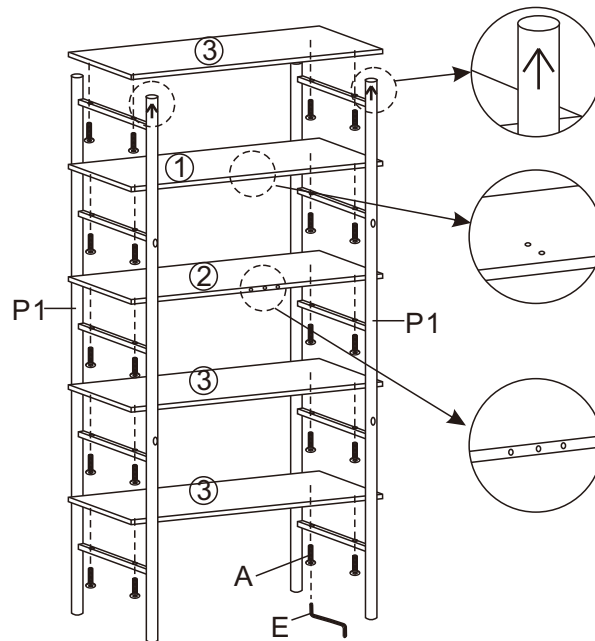

Rear View

## STEP 2:


1. Across the fitting B to the fitting G and P2, and use wrench F to fasten with fitting D.
2. Use allen key to attach the other side of P2 to P1 with fitting B.

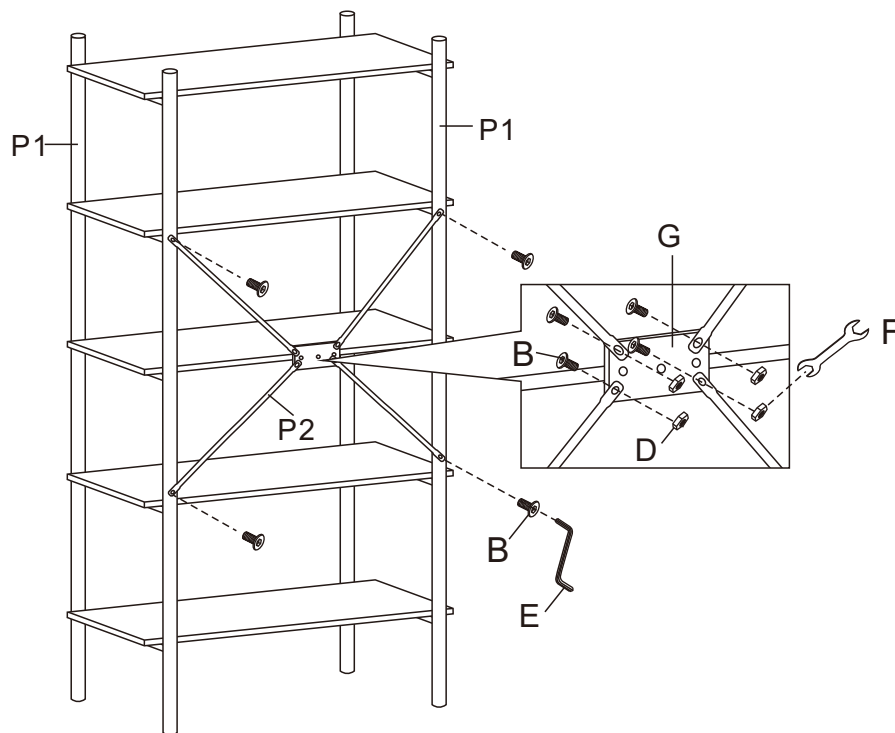


Rear View

# STEP 3:

Fix the fitting G to panel 2 with fitting C.

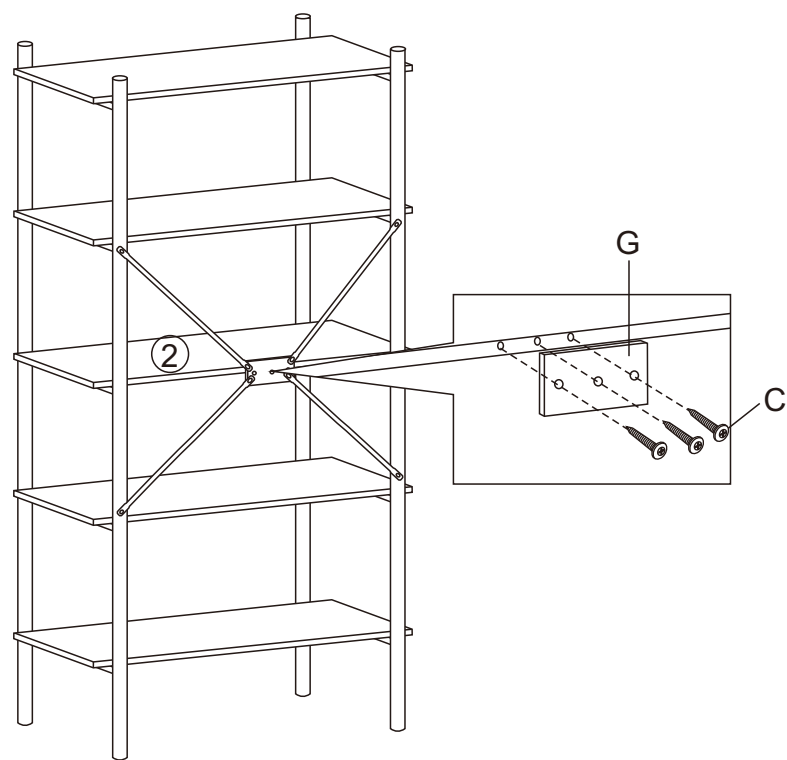


# STEP 4:

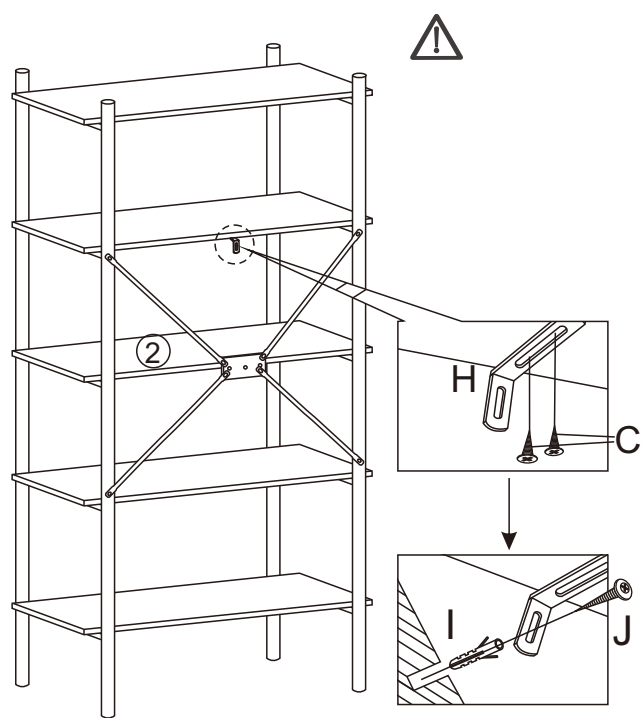

# STEP 4:

Assembly complete!

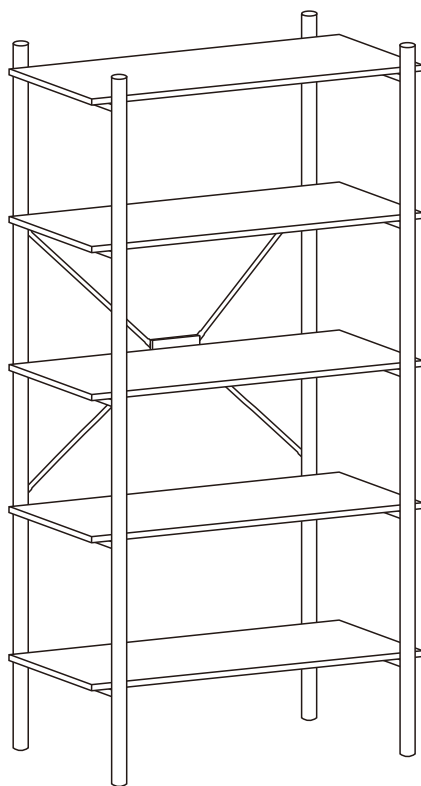

## **To protect your furniture, we suggest the following:**

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

**NOTE:** If the above care advise is not adhered to your product warranty may become void