


**ASSEMBLY INSTRUCTION
KEITA TEEPEE BED
ITEM CODE-75440**

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.

For any assistance with assembly or for missing parts please phone

Amart Furniture, Customer Service Freecall 1 800 351 084.



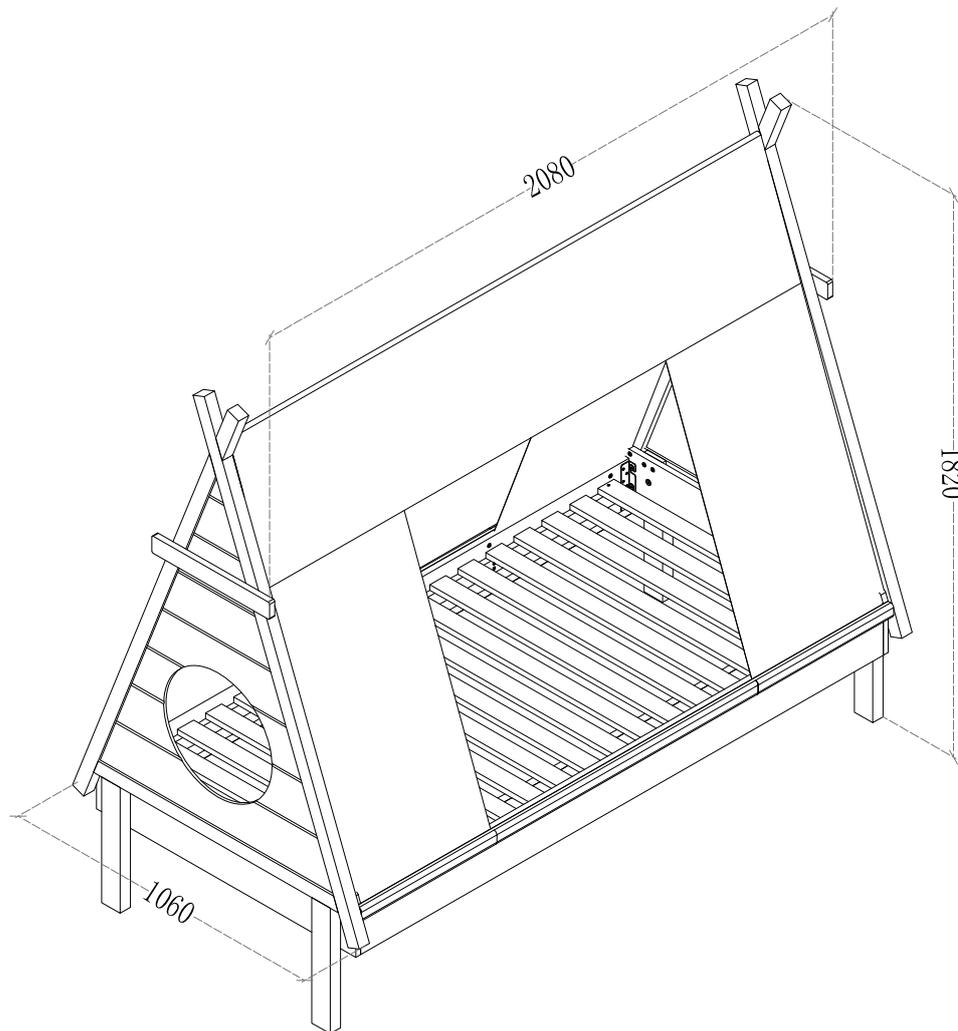


Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia. For any assistance with assembly or for missing parts please phone Amart Furniture, Customer Service Freecall 1800 351 084.


PRE-ASSEMBLY PREPARATION

Before you start:


1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads
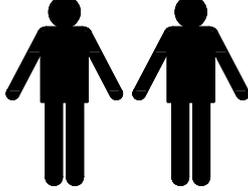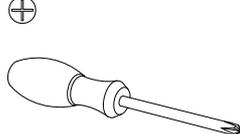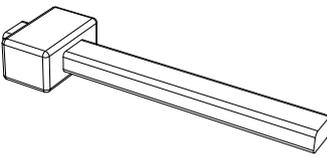
| | |
|---|--|
|  |  |
| ALLOW 45 MINUTES | 2 PEOPLE REQUIRED |
|  |  |
| ADDITIONAL TOOLS REQUIRED | |


PARTS LIST

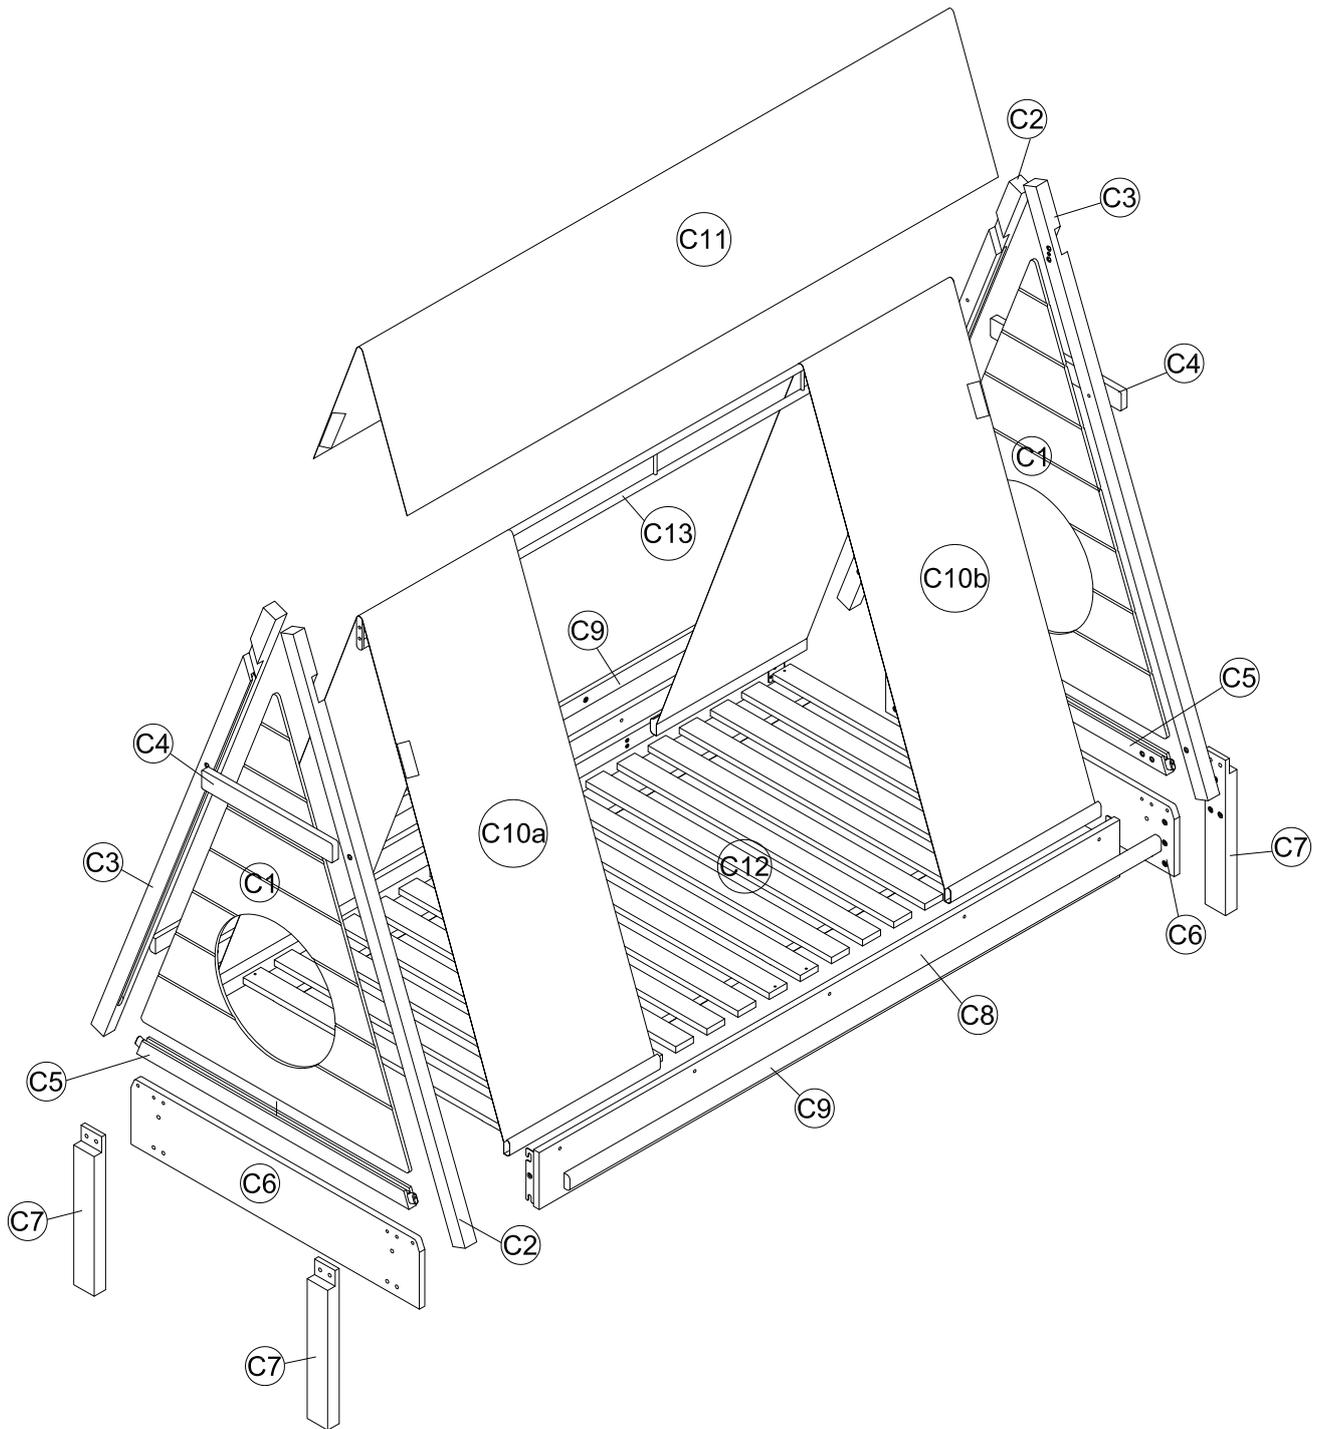

| | | | |
|----|--------------------------|-----|---------------------|
| C1 | SIDE PANEL | C8 | SIDE RAIL |
| C2 | RAFTER | C9 | FABRIC SUPPORT RAIL |
| C3 | RAFTER | C10 | FABRIC WITH HOLE |
| C4 | RAFTER SUPPORT | C11 | FABRIC WITHOUT HOLE |
| C5 | TOP FRAME BOTTOM SUPPORT | C12 | Slat |
| C6 | END FRAME PANEL | C13 | METAL RIDGE |
| C7 | BED POST | | |

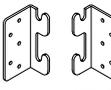
| | | | | | | | |
|---|---|--|--|--|---|---|--|
| A.Bolt M8x15 <input type="checkbox"/>  8PCS | B.Bolt M6x20 <input type="checkbox"/>  4PCS | C.Bolt M6x30 <input type="checkbox"/>  28PCS | D.Bolt M6x60 <input type="checkbox"/>  12PCS | E.Cam lock and Cam pin <input type="checkbox"/>  4PCS | F.Screw Ø4X16 <input type="checkbox"/>  20PCS | G.Screw Ø3.5X30 <input type="checkbox"/>  32PCS | |
| H.Hex key M4 <input type="checkbox"/>  1PCE | I.Hex key M5 <input type="checkbox"/>  1PCE | J.Protect foam Ø35X5mm <input type="checkbox"/>  4PCS | K.Bracket <input type="checkbox"/>  4PCS | | | | |

Step 1: Use a Hex Key(H) to tighten END FRAME PANEL(C6) to BED POST(C7) with Bolt(C).
Place the Protect foam(J) to the BED POST(C7).

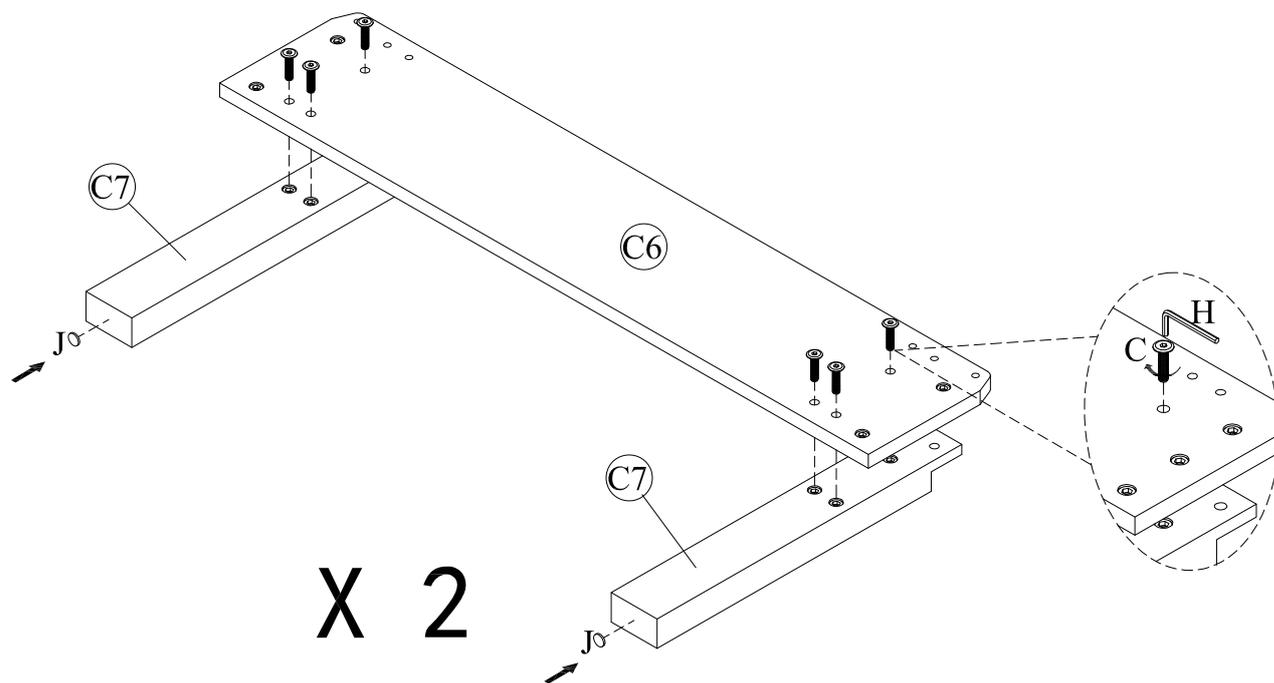


X 2


Step 2: Use a Phillips Head Screwdriver to tighten the Bracket(K) to the SIDE RAIL(C8)with Screw(F).

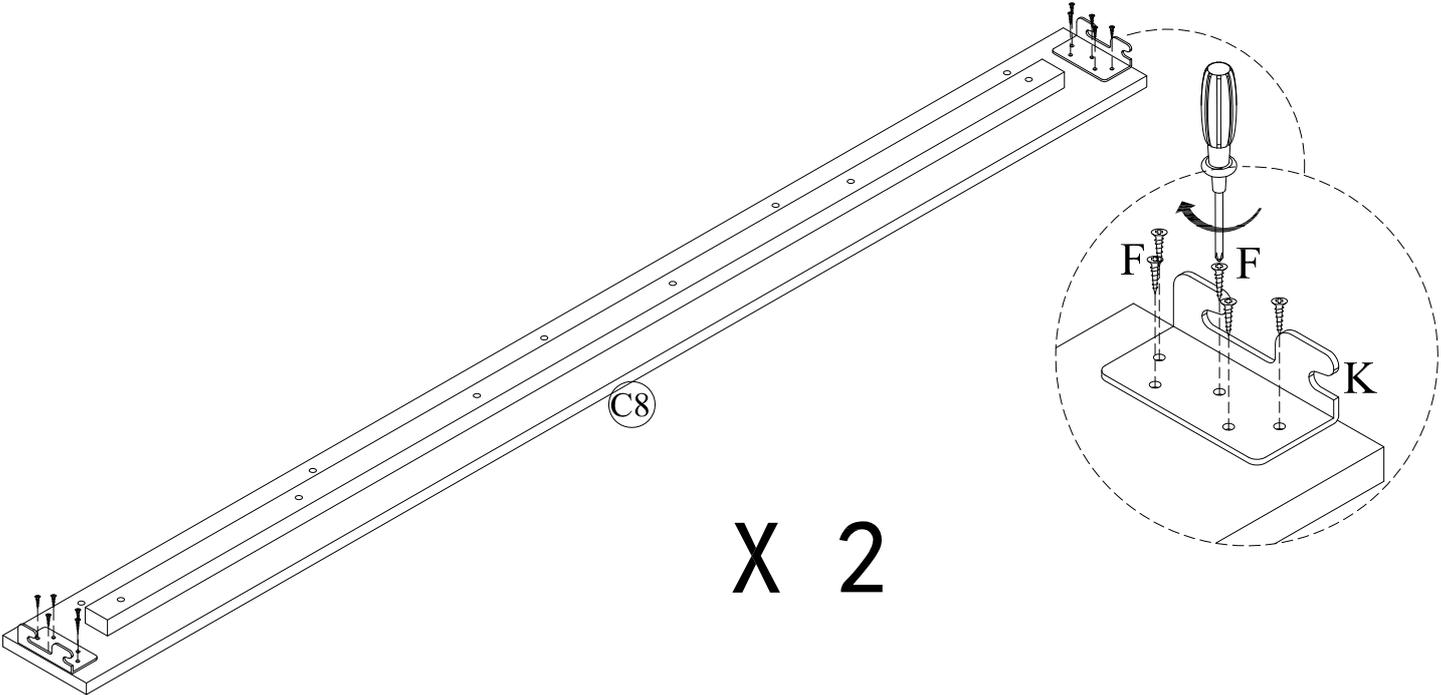


Step 3: Assemble the SIDE RAIL(C8) to the END FRAME PANEL(C6) with Bolt(A).

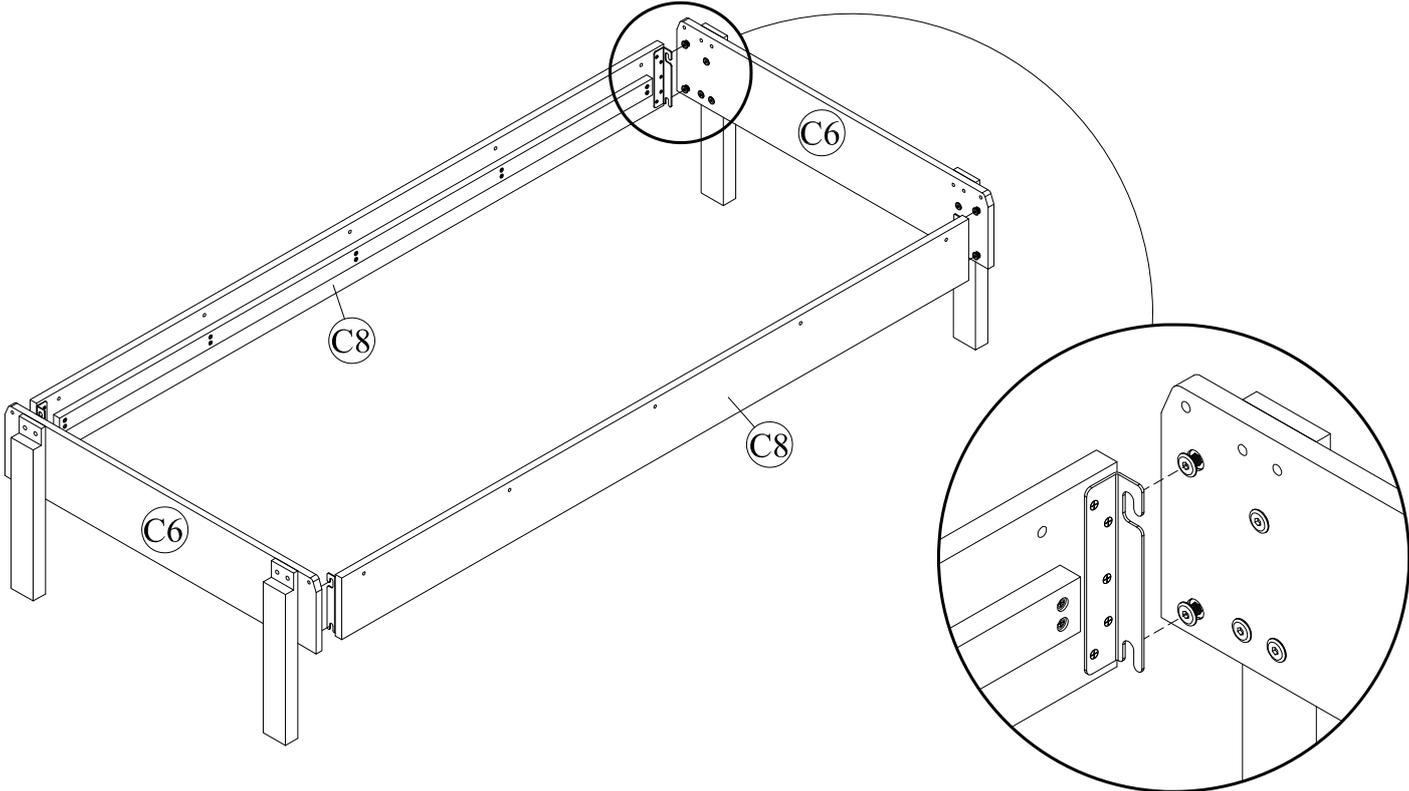


Step 4: Use a Phillips Head Screwdriver to tighten the Slats(C12) to the SIDE RAIL(C8) with Screw(G).

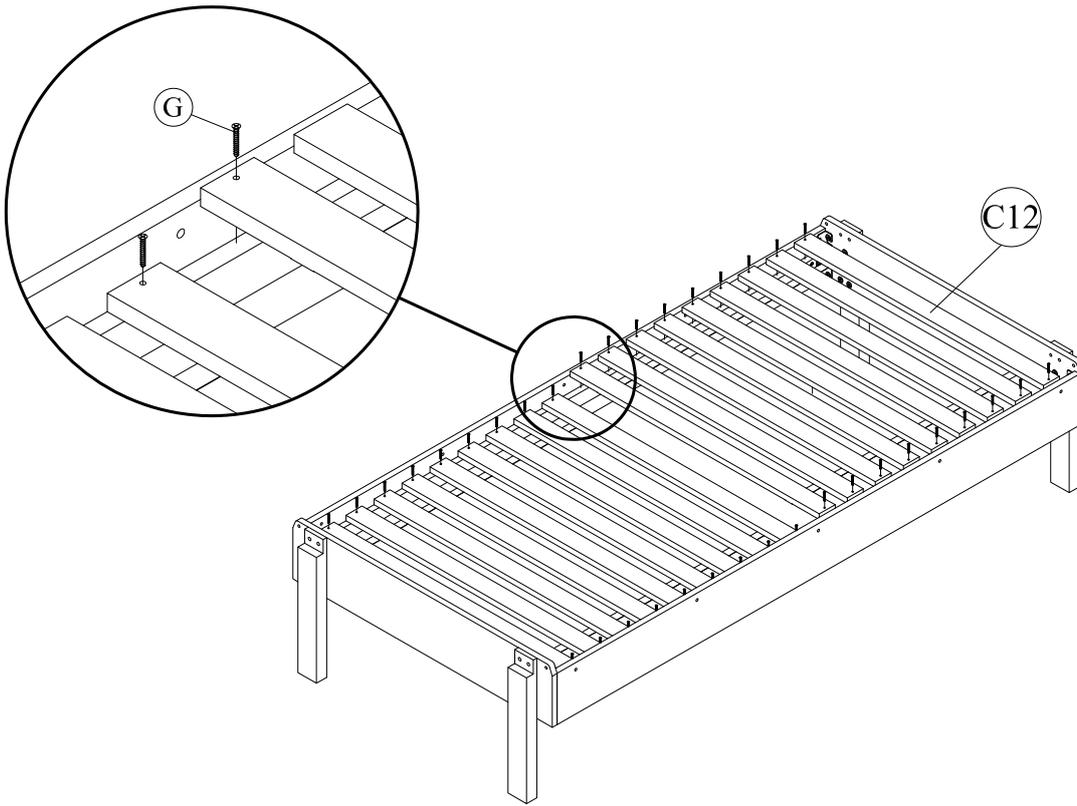


Step 5: Assemble the RAFTER(C2) to RAFTER(C3) with Bolt(C). Insert the SIDE PANEL(C1) to the RAFTER(C2,C3). Assemble the TOP FRAME BOTTOM SUPPORT(C5) to the RAFTER(C2,C3) with Bolt(E).

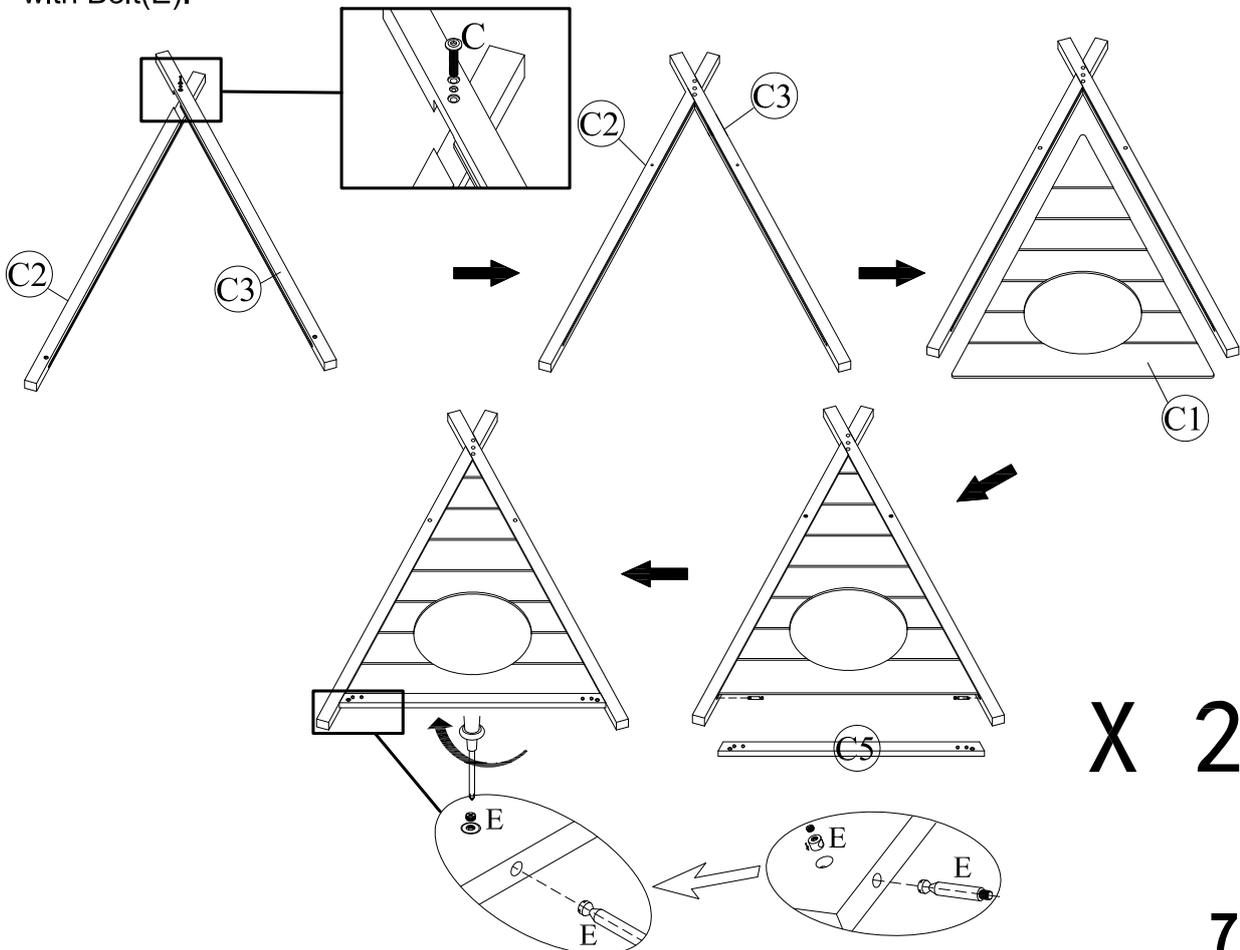


Step 6: Assemble the END FRAME PANEL(C6) to the BED POST(C7) and TOP FRAME BOTTOM SUPPORT(C5) with Bolt(D). Assemble the TOP FRAME BOTTOM SUPPORT(C5) to the RAFTER(C2,C3) with Bolt(C). Assemble the RAFTER SUPPORT(C4) to RAFTER(C2) and RAFTER(C3) with Bolt(D).

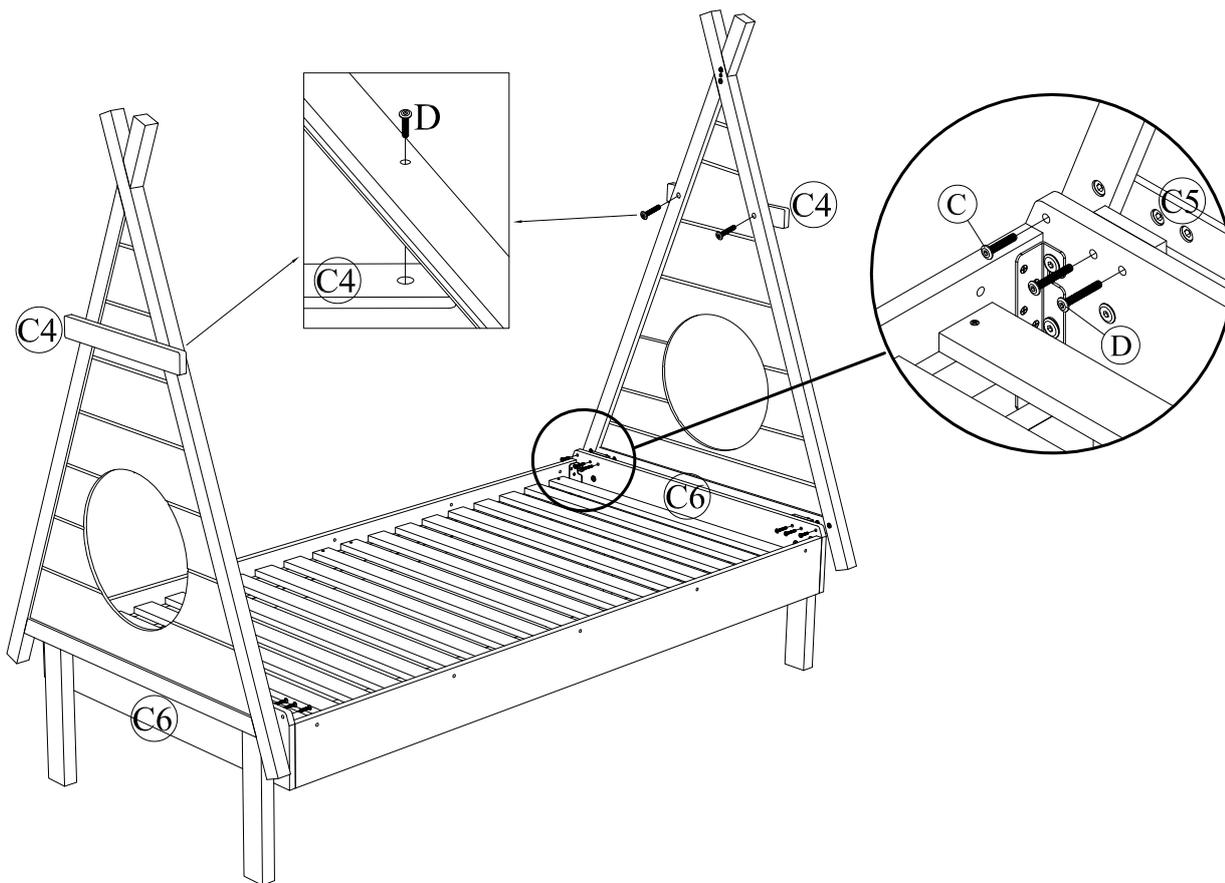


Step 7: Assemble the METAL RIDGE(C13) to the RAFTER(C2,C3) with Bolt(B).

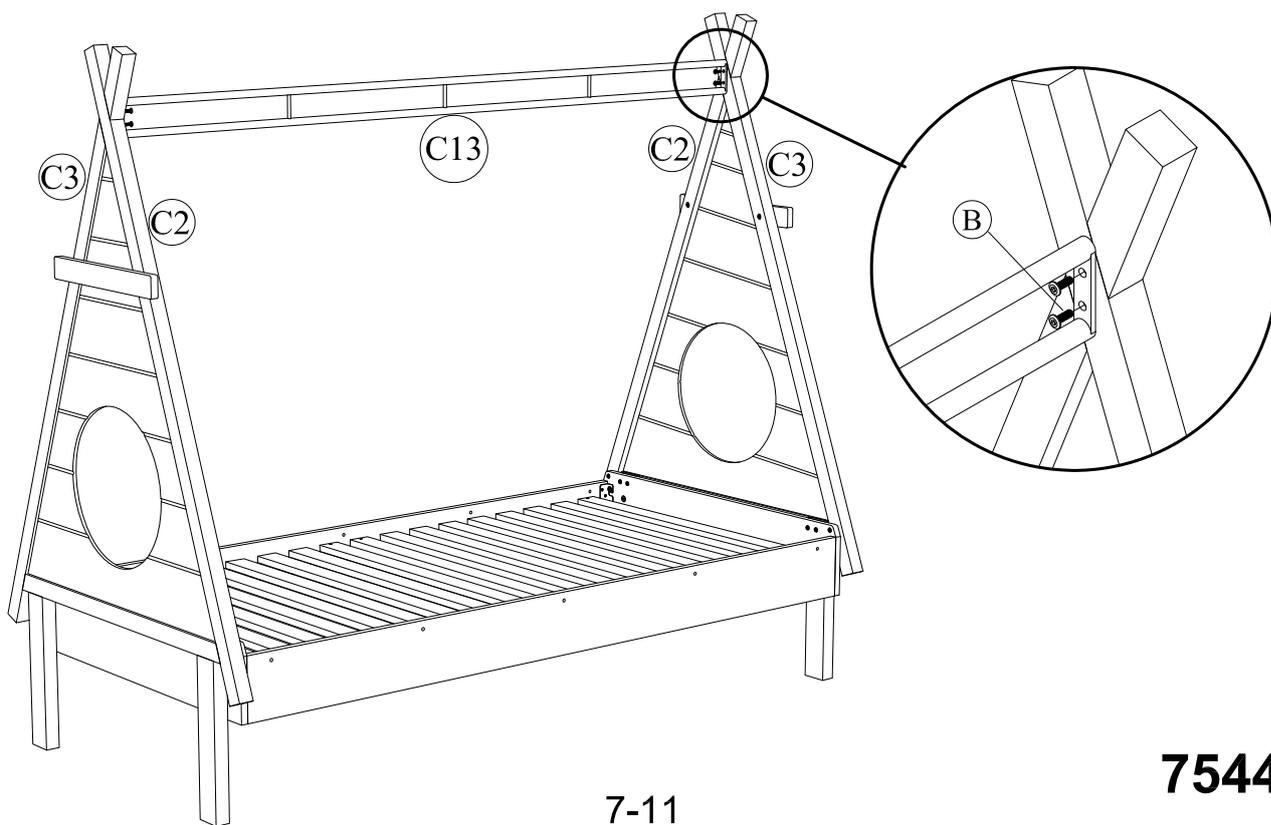


Step 8: Fix Fabric with hole and Fabric support rail(C9) as shown.

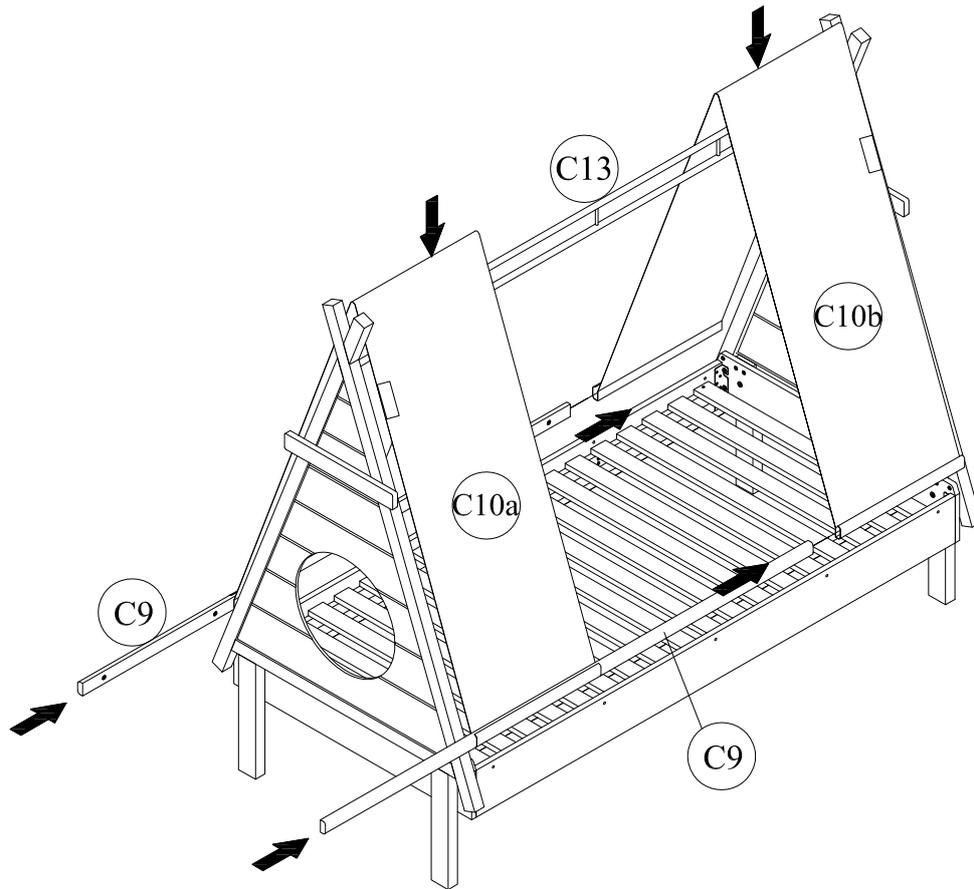

Step 9: Fix bolts (C) to the Fabric support rail(C9) and Side rail(C8) as shown.
At last fix Fabric without hole(C11) on top of Metal ridge(C13) as shown.

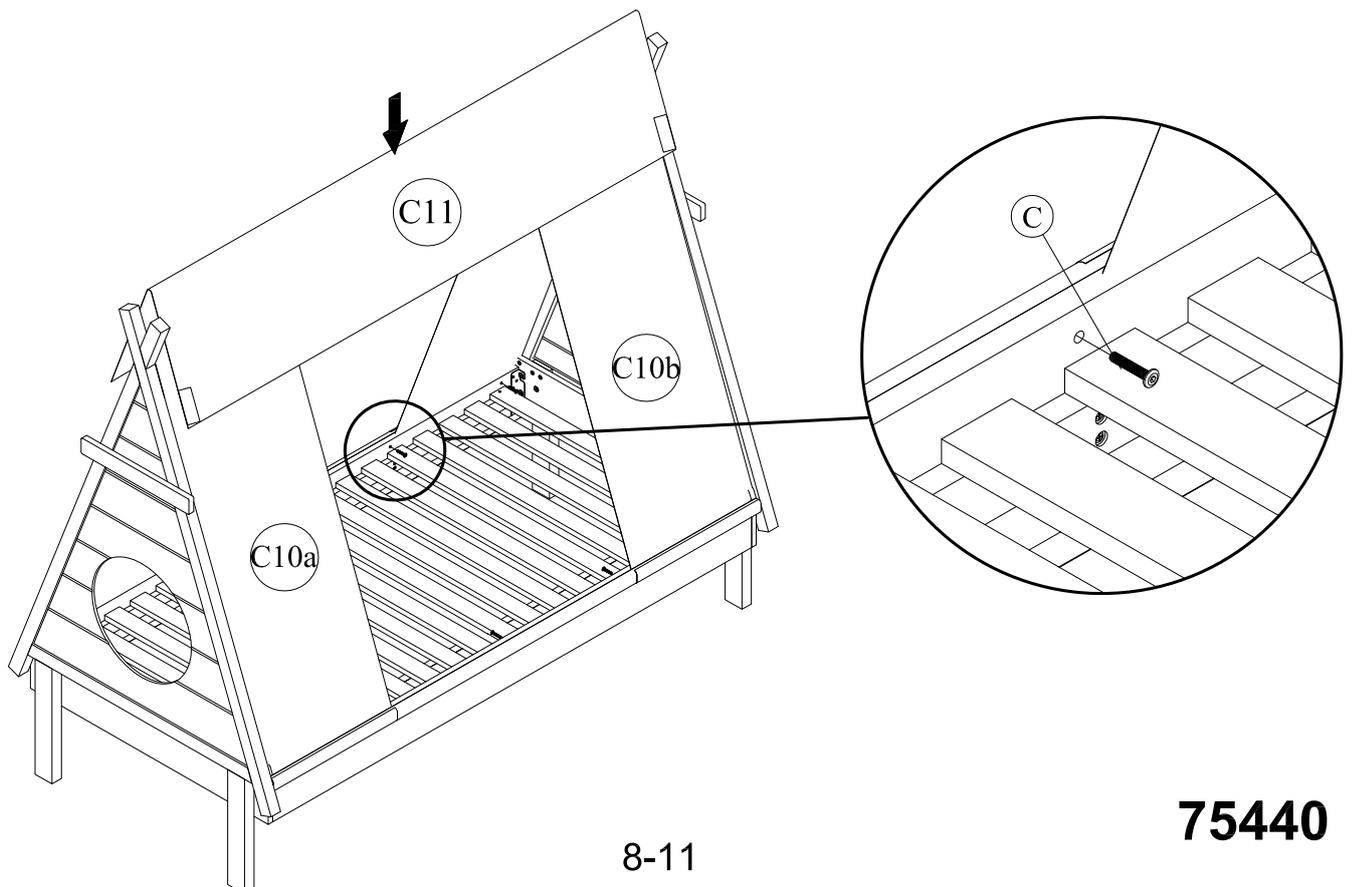

Assembly is complete

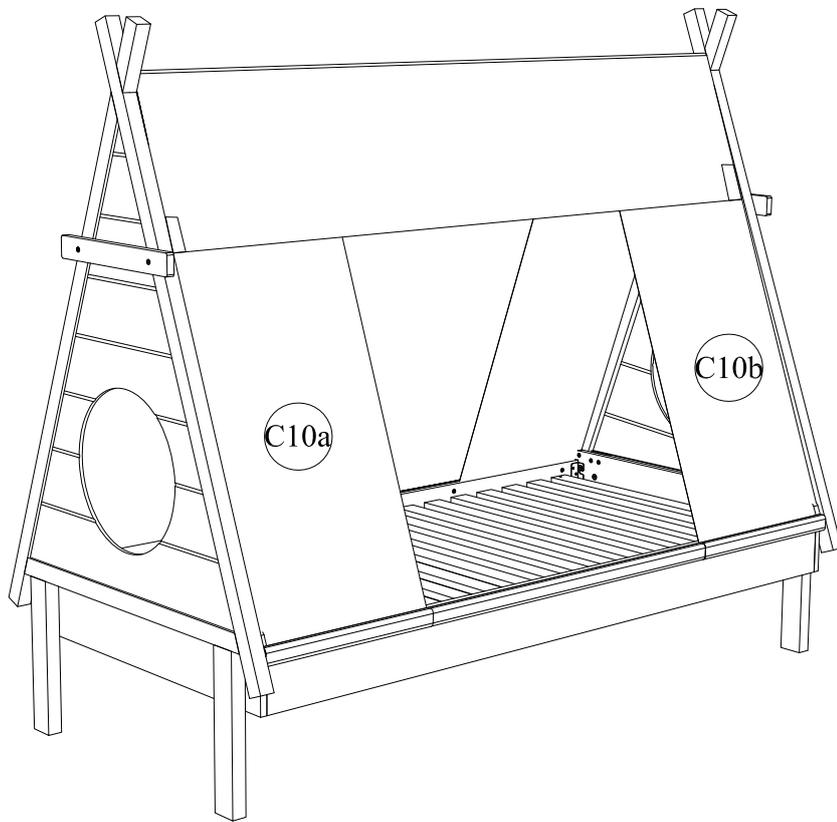

PRODUCT CARE:

To protect your furniture, we suggest the following:

- . Avoid placing your furniture in direct sunlight.
- . Do not place furniture directly under windows.
- . Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- . Do not place material with high temperature directly onto the surface of your furniture.
- . Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- . Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.
- . NOTE: If the above care advise is not adhered to your product warranty may become void

Product Care for Fabric Items

REGULAR CARE:

- . Protect from direct sunlight
- . Vacuum regularly using low suction
- . Rotate reversible cushions regularly

CLEANING:

- . Do not remove cushion covers for separate cleaning even though they may have zippers
- . Do not wash, Do not dry clean, Do not shampoo clean
- . Clean with hot water extraction machine. Professional cleaning recommended
- . Do not use dishwashing liquid or laundry detergent
- . Use only upholstery detergents
- . Do not wet filling
- . Dry in shade away from direct heat and sunlight
- . Allow to dry thoroughly before re-use

SPOT CLEANING:

- . Do not rub
- . Do not spot clean with any solvent
- . Treat spills and stains as soon as possible
- . Gently scrape off any soil or mop any liquid from the surface of the fabric
- . Apply proprietary cleaning agents strictly according to instructions to remove the residue of the spill
- . Do not saturate the fabric or interior with water or other cleaning liquids

WARNING:

Apply only water-based soil resist (fabric protection) treatments. Do not use aerosol products

- * PILLING IS NOT A FABRIC DEFECT OR FAULT AND IS NOT COVERED BY WARRANTY
- * PILLING IS A NORMAL OCCURRENCE CAUSED BY WEAR AND TEAR AND DOES NOT AFFECT THE DURABILITY OR FUNCTIONALITY OF THE FABRIC AND IS EASILY REMOVED