


# ASSEMBLY INSTRUCTION

## MARSH SOFA TABLE

Item Code 81695


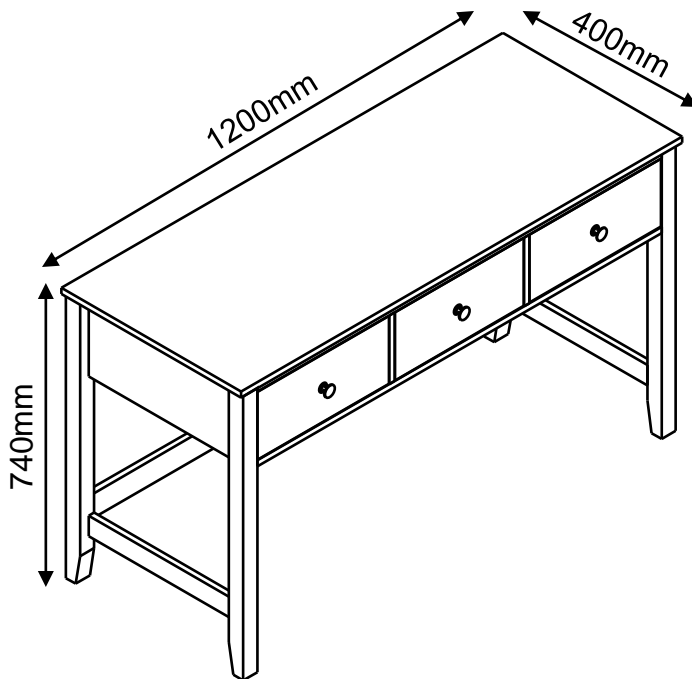



Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia.  
For any assistance with assembly or for missing parts please refer to your receipt










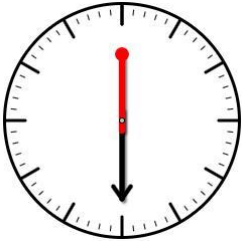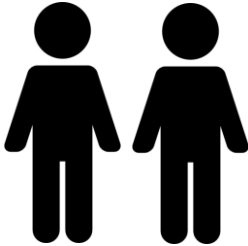





## PRE-ASSEMBLY PREPARATION

### Before you start:

- 1.Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
- 2.Take care when lifting. Product should be assembled as near as possible to the point of use
- 3.Ensure that you have all required contents for complete assembly
- 4.Always read the assembly instructions carefully before beginning assembly.
- 5.Keep all hardware parts and packaging out of reach of small children.
- 6.Do not over tighten the screws and bolts as this may damage the threads
- 7.Assembly is to be carried out by a competent adult(s) ONLY
- 8.During assembly, children should be kept away from the product due to possible risk to injury.
- 9.Do not use this item if any components are missing or damaged.
- 10.Please keep the instructions for future reference.


		
Allow 30 min	For 2 person	Additional tools required

## PARTS LIST
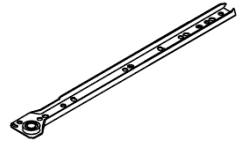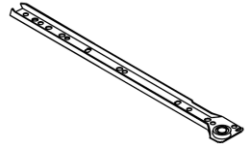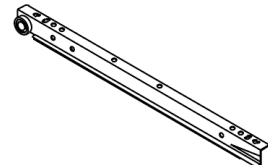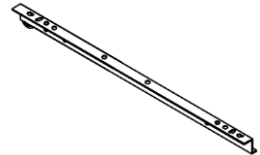
<b>A</b> Mini fix x 31pcs 	<b>B</b> Wooden Dowel $\Phi 6 \times 30 \text{mm}$ x 14pcs 	<b>C</b> Screw $M4 \times 40 \text{mm}$ x 23pcs 	<b>D</b> Screw $M3.5 \times 12 \text{mm}$ x 36pcs 
<b>E</b> Handle with screw x 3sets 	<b>F</b> Fixing bolt x 4pcs 	<b>G</b> Screw $M4 \times 20 \text{mm}$ x 1pcs 	<b>H</b> Anti-tips x 1sets 
<b>I</b> JCBC bolt $M6 \times 12 \text{mm}$ x 4pcs 	<b>J</b> H3 Allen Key x 1pcs 	<b>K</b> Bolt $M6 \times 50 \text{mm}$ x 4pcs 	<b>CL</b> x 3pcs 
<b>CR</b> x 3pcs 	<b>DR</b> x 3pcs 	<b>DL</b> x 3pcs 	


## PARTS LIST

1	Top x 1pcs	2	Left side panel x 1pcs
3	Right side panel x 1pcs	4	Top support rail x 1pcs
5	Drawer support rail x 1pcs	6	Metal rail x 1pcs
7	Back panel x 1pcs	8	Back bottom rail x 1pcs
9	Drawer front panel x 3pcs	10	Drawer left panel x 3pcs
11	Drawer right panel x 3pcs	12	Drawer back panel x 3pcs
13	Drawer bottom panel x 3pcs	14	Middle divider x 2pcs

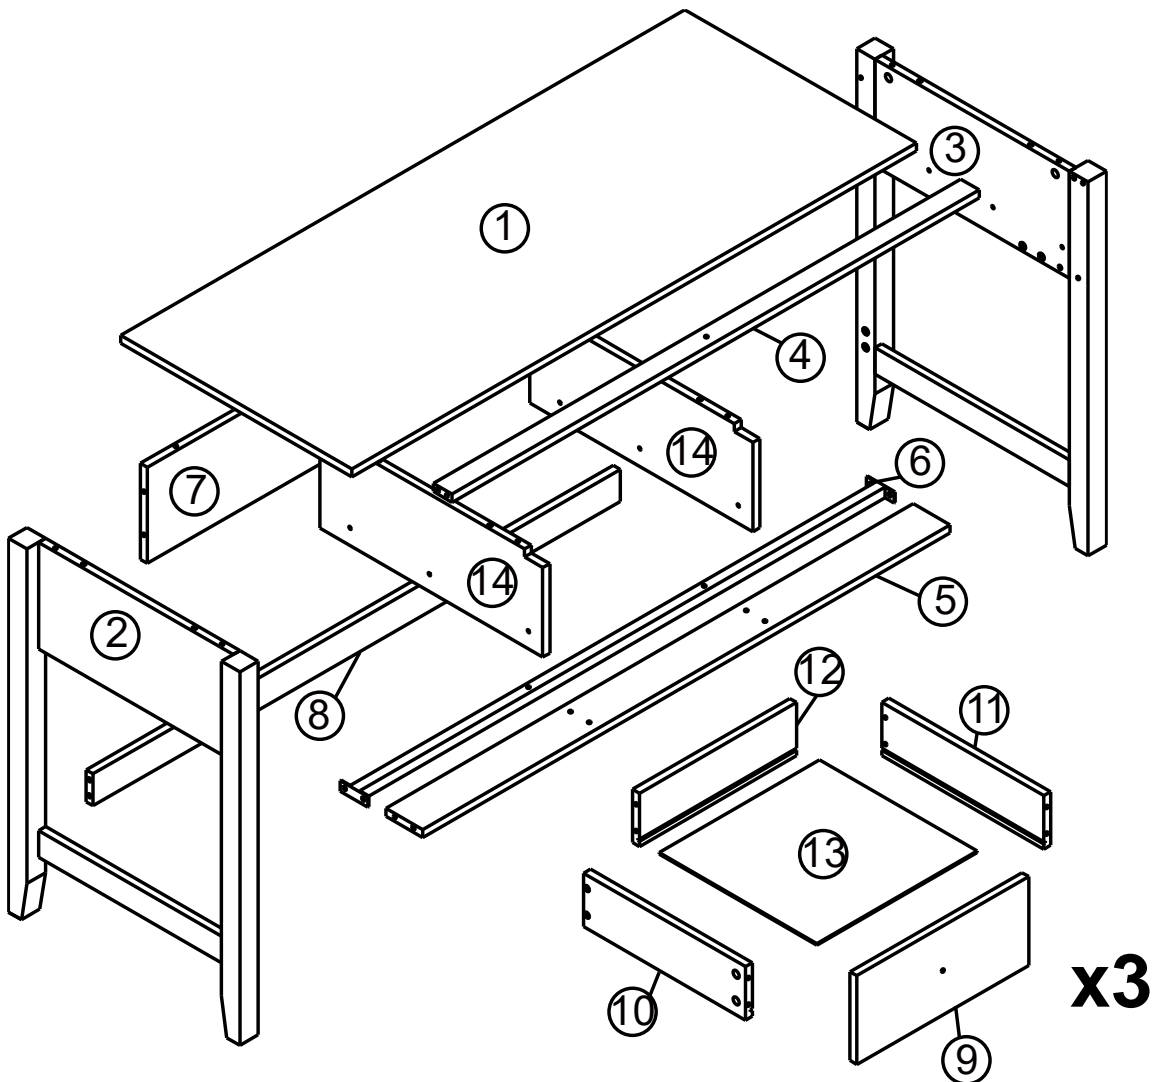


## STEP 1:

- Prepare a protected surface with a blanket or cardboard.
- Secure 2sets x left&right drawer runner(CL)&(CR) on middle divider(14) left side with 12pcs x Screw(D).
- Assemble the middle divider(14) with back panel(7) with 4pcs x screws(C).

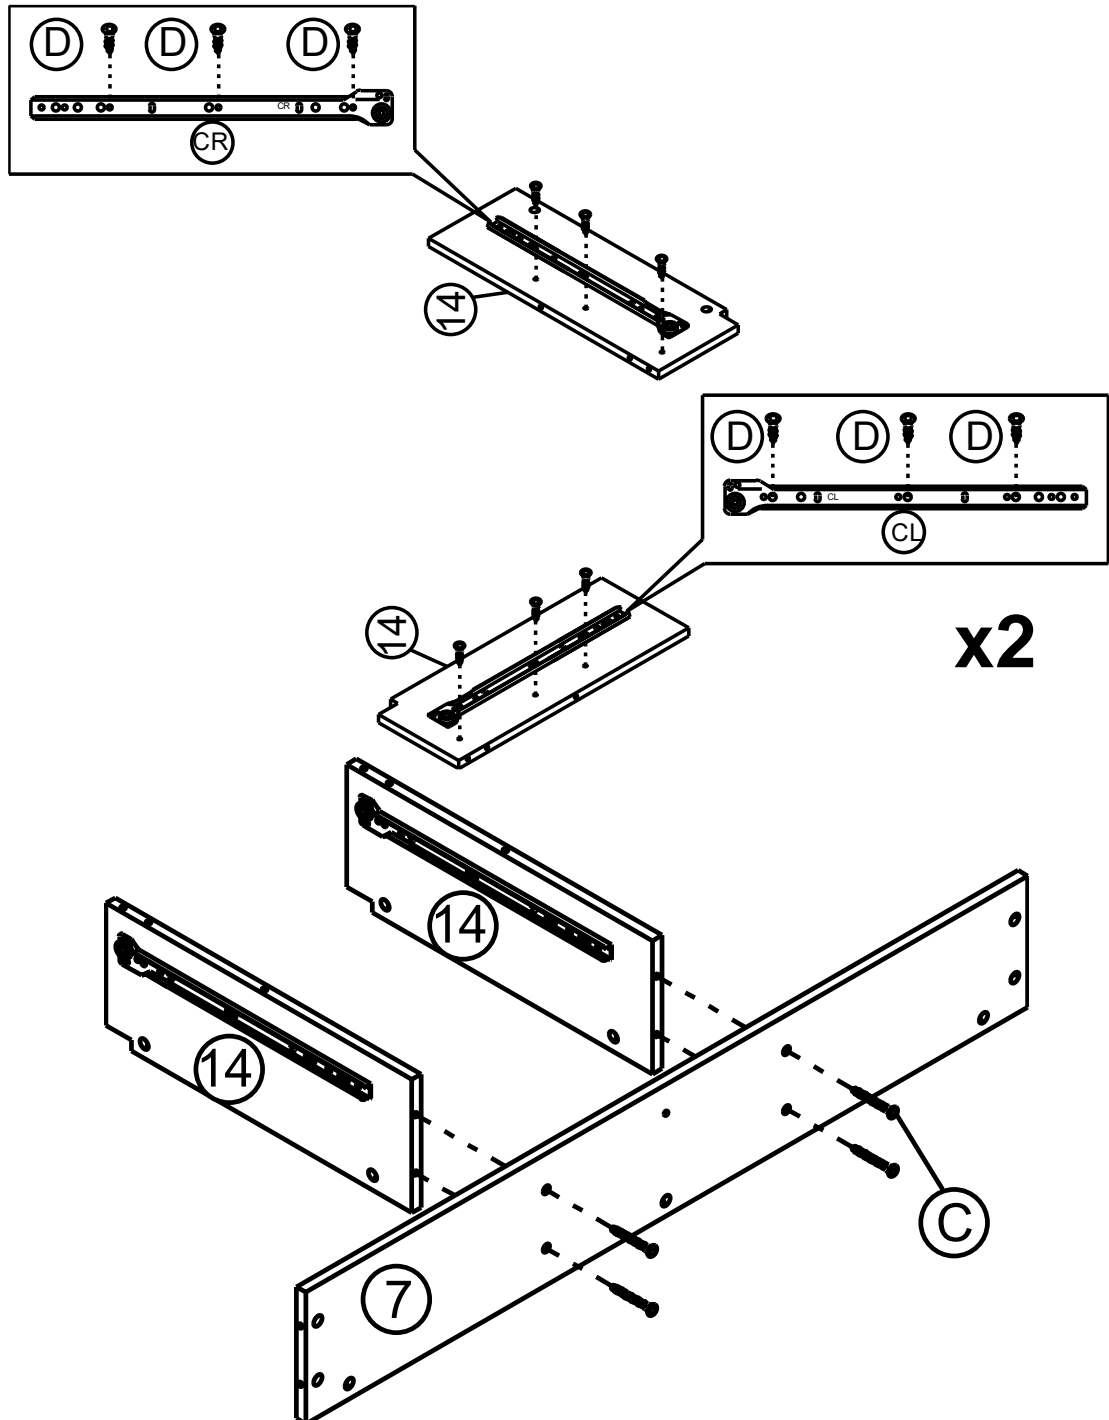



## STEP 2:

- Assemble the drawer support rail(5)&metal rail(6) on table frame with 6pcs x screw(C).

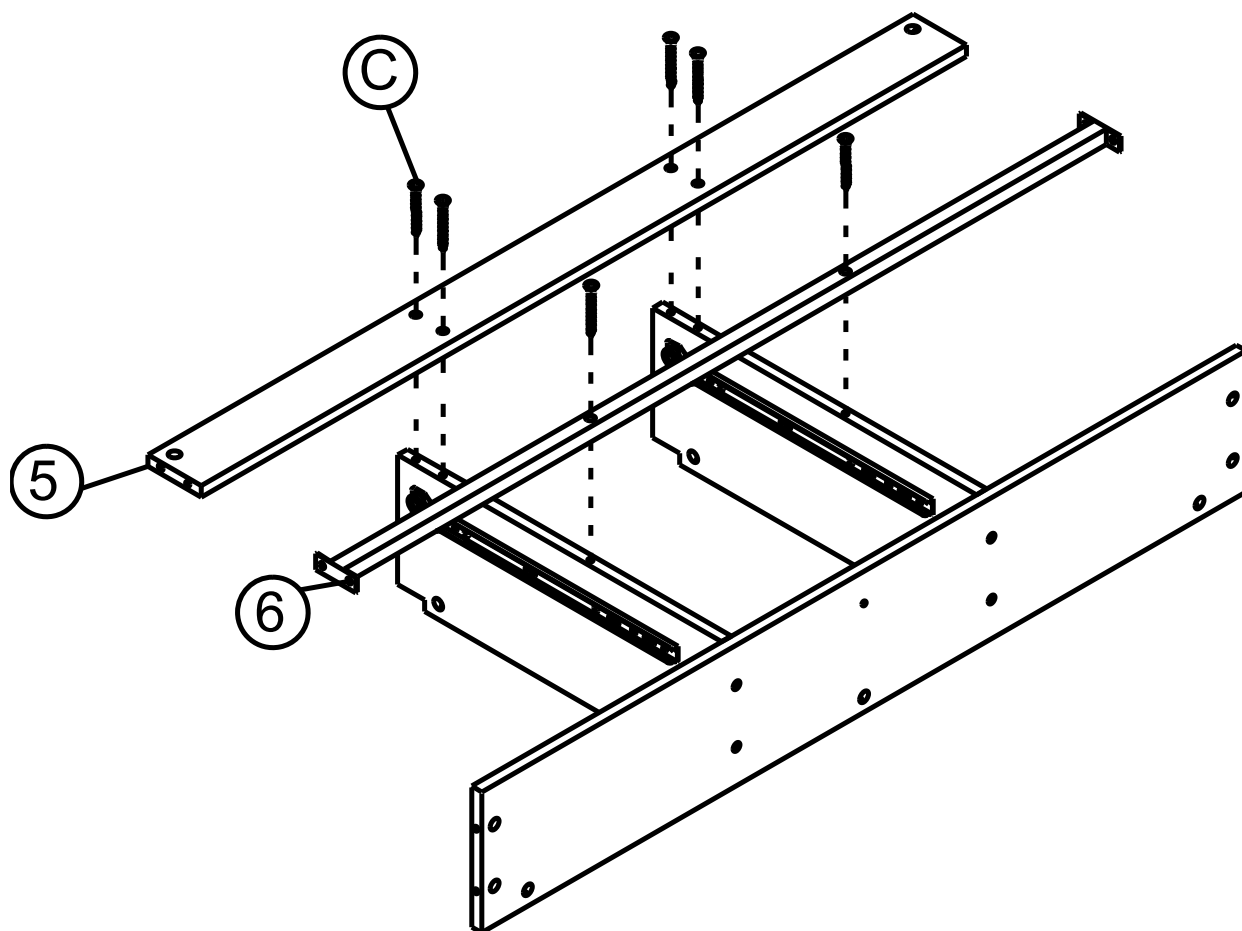


### STEP 3:

- Secure 1pcs x left drawer runner(CL) on left side panel(2) with 3pcs x Screw(D).
- Secure 4pcs x Mini fix(A) on left side panel(2).
- Secure 2pcs x fixing bolt(F) on left side panel(2).

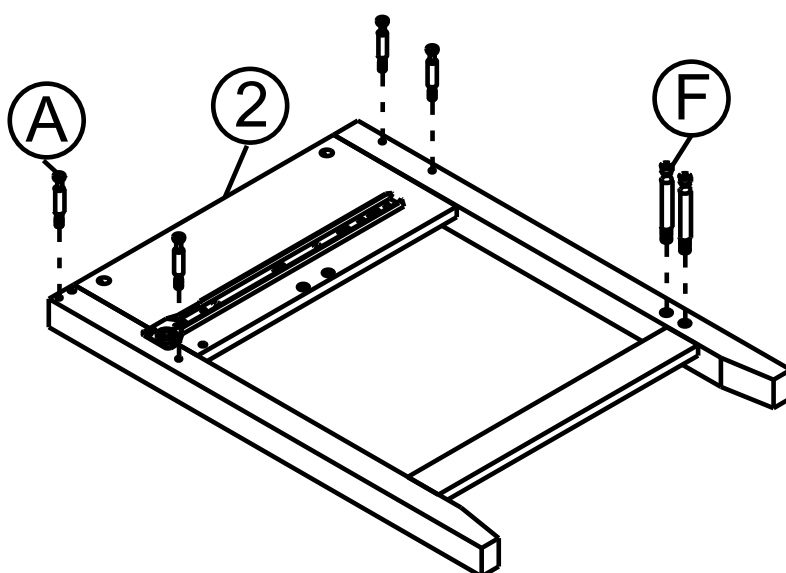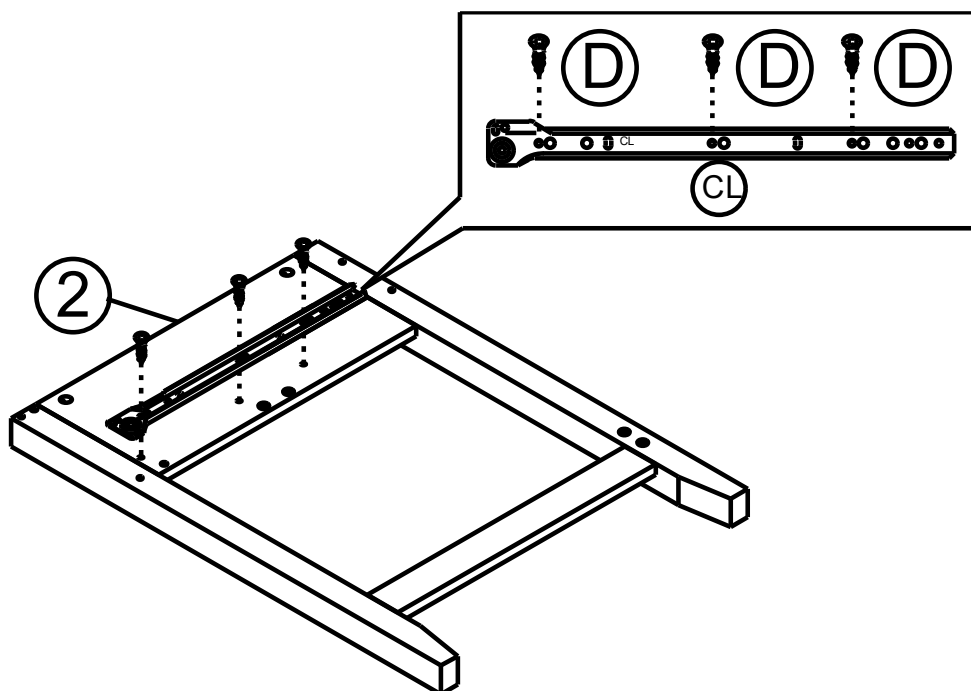

#### STEP 4:


- Assemble 1pcs x right drawer runner(CR) on right side panel(3) by 3pcs x screw(D).
- Secure 4pcs x Mini fix(A) on right side panel(3).
- Secure 2pcs x fixing bolt(F) on right side panel(3).

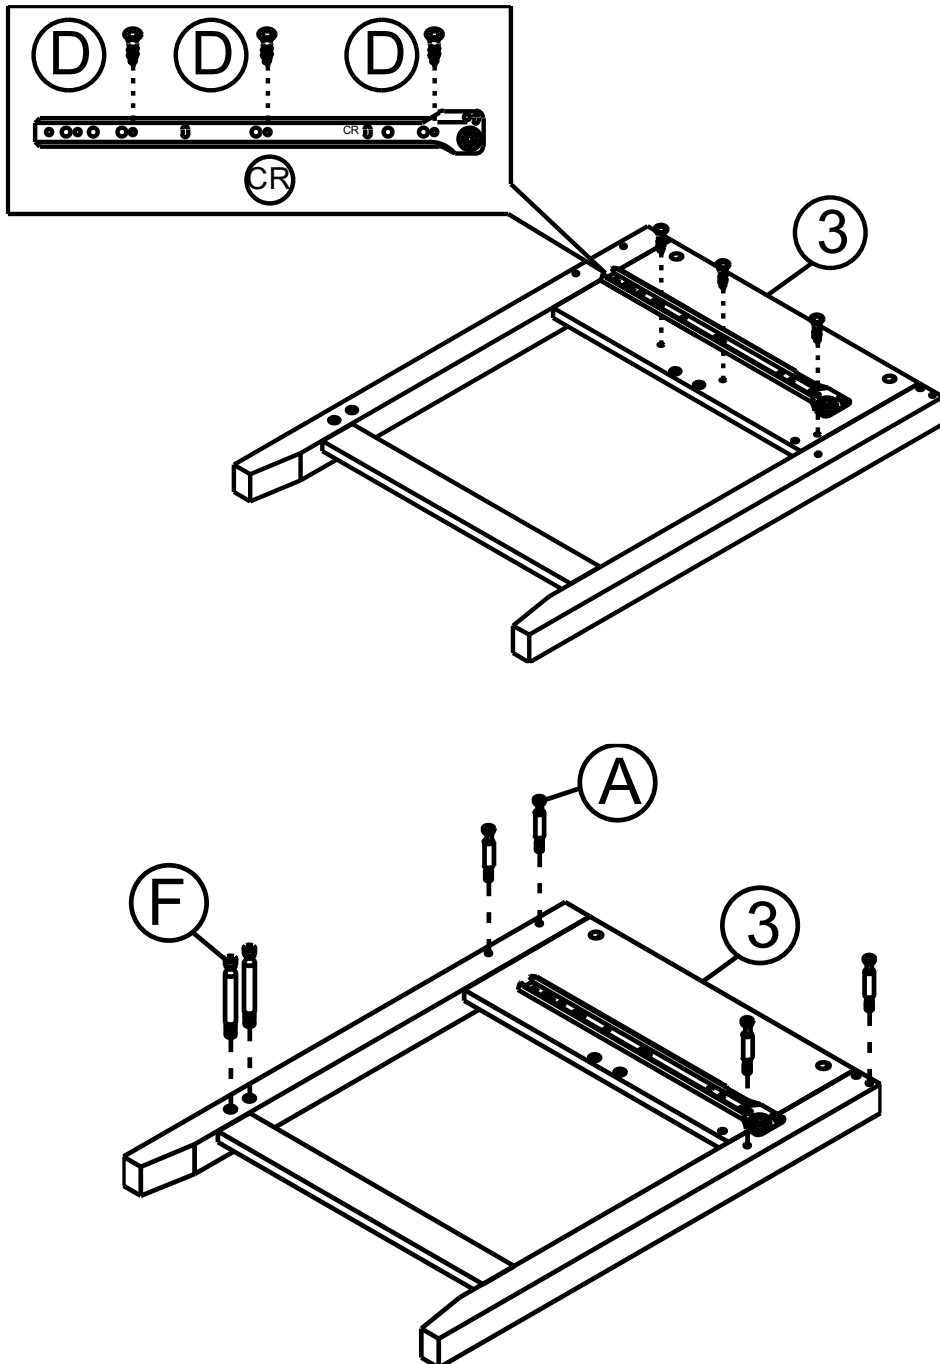




### STEP 5:

- Assemble back panel(7),top support rail(4),drawer support rail(5),left side panel(2) and back bottom rail(8) together with 2pcs x wooden dowel(B);
- Assemble the matel rail(6) with left side panel(2) by 2pcs x JCBC bolt(I);
- Lock 4pcs x mini fix cam(A) to lock top support rail(4),drawer support panel(5) and back panel(7);
- Secure bolt(K) to lock the back bottom panel(8).

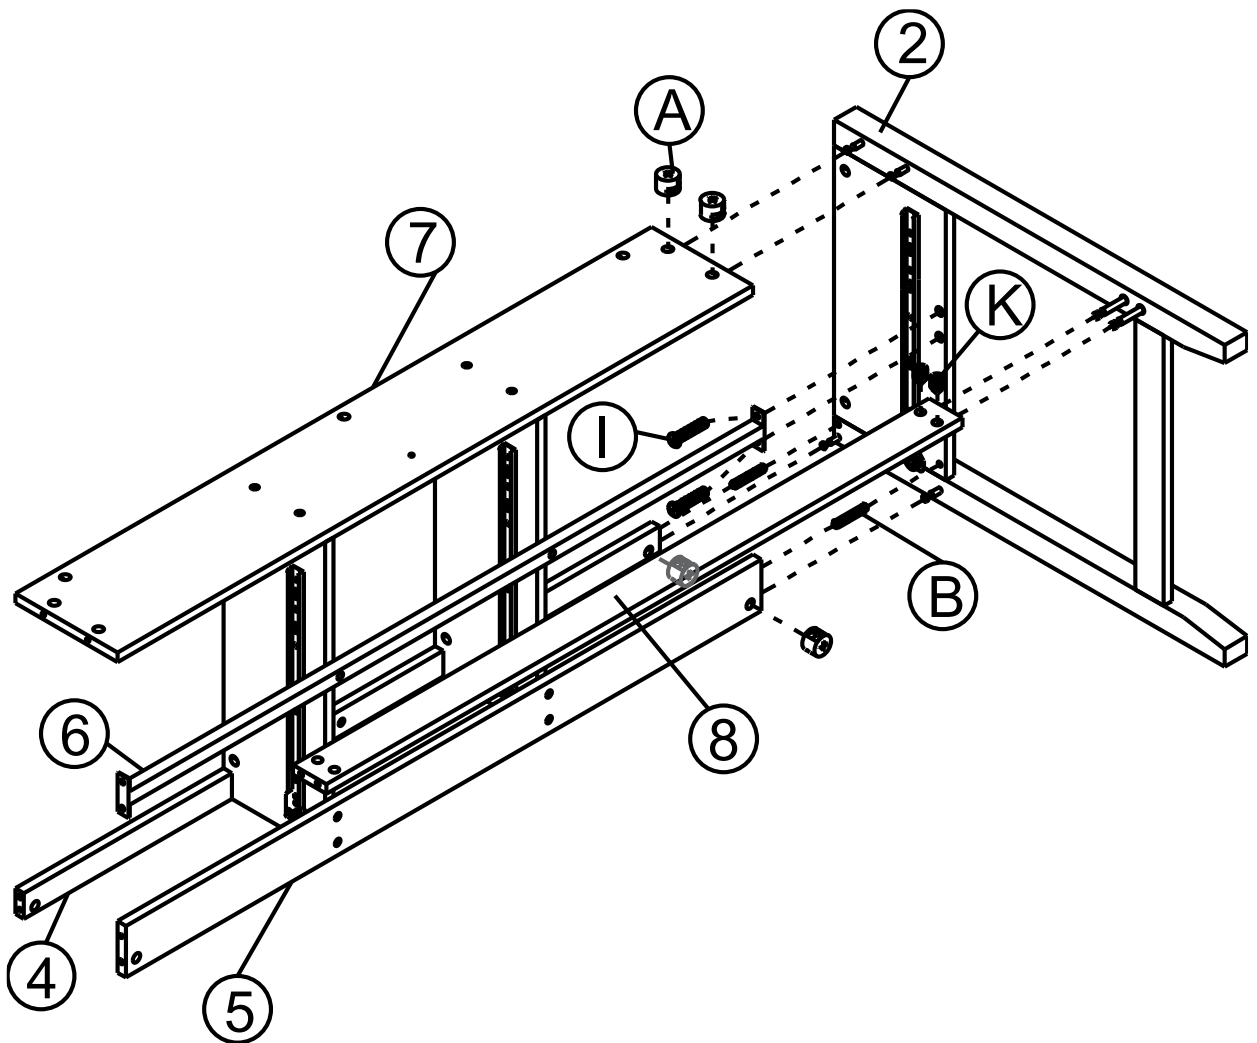


### STEP 6:

- Assemble right side panel(3) with the assembled frame by 2pcs x wooden dowel(B);
- Lock 4pcs x mini fix cam(A);
- Secure 2pcs x bolt(K) to lock the back bottom panel(8).

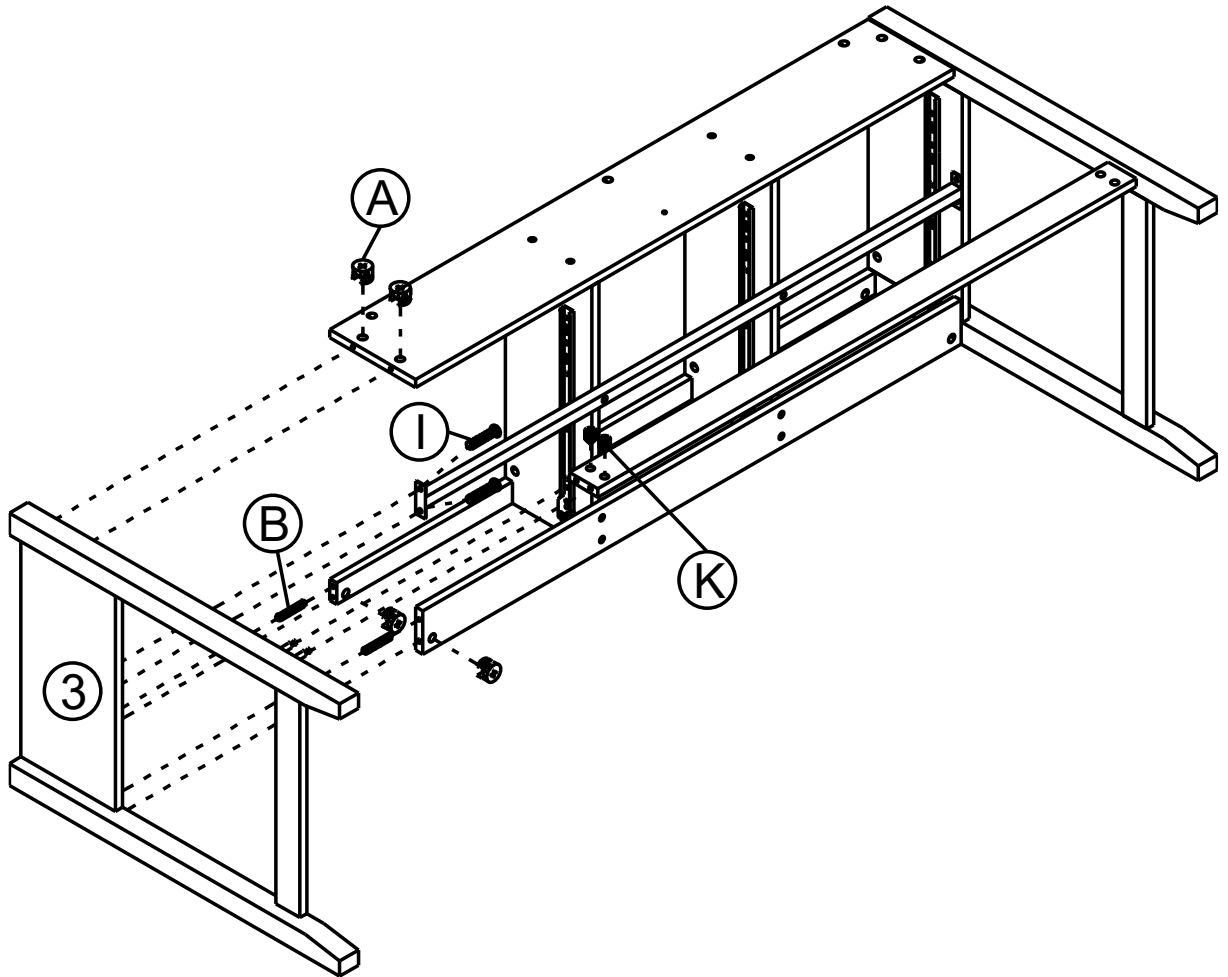


STEP 7:

- Secure 1set x anti-tips on back.

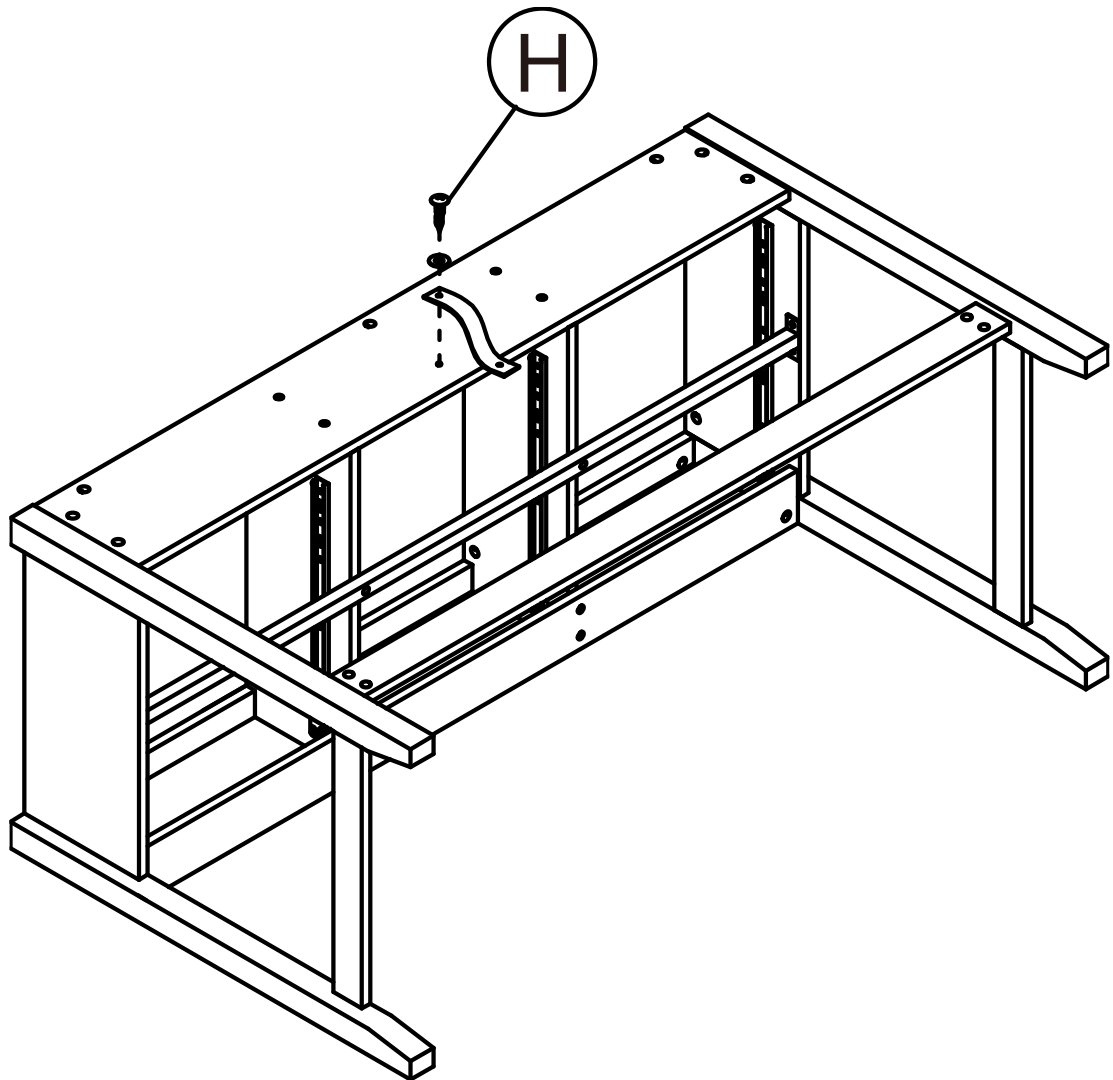


### STEP 8:

- Attach 10pcs x wooden dowel(B) on frame;
- Secure 11pcs x Mini fix(A) on top(1)

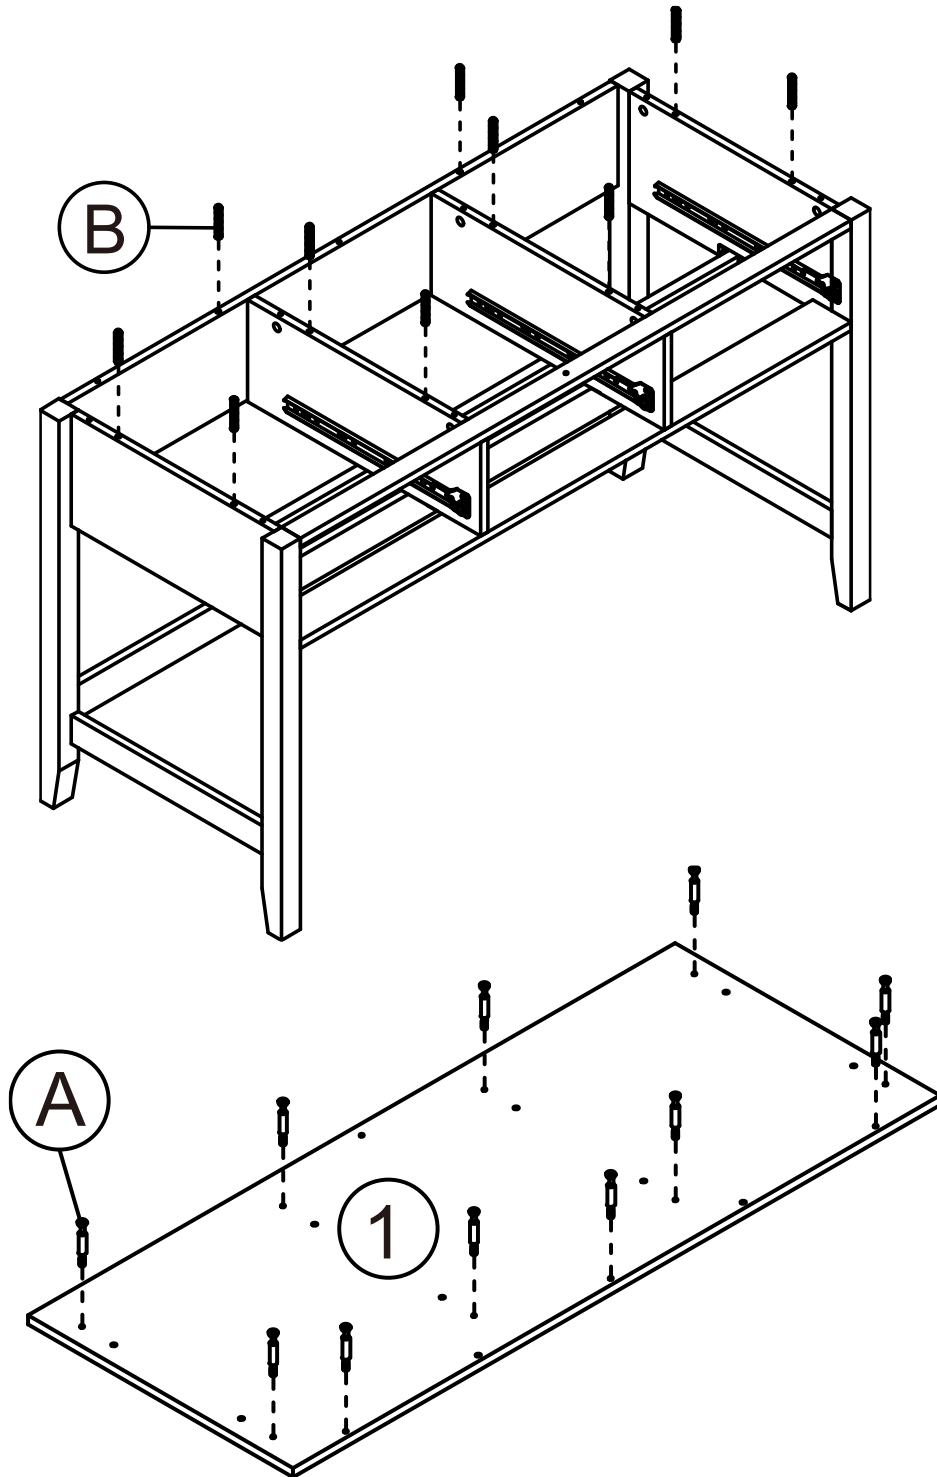



STEP 9:

- Assemble top(1) with table frame;
- Lock 11pcs x mini fix cam(A),and then , secure 1pcs x screw(G) to lock the top support rail(4)&top(1)

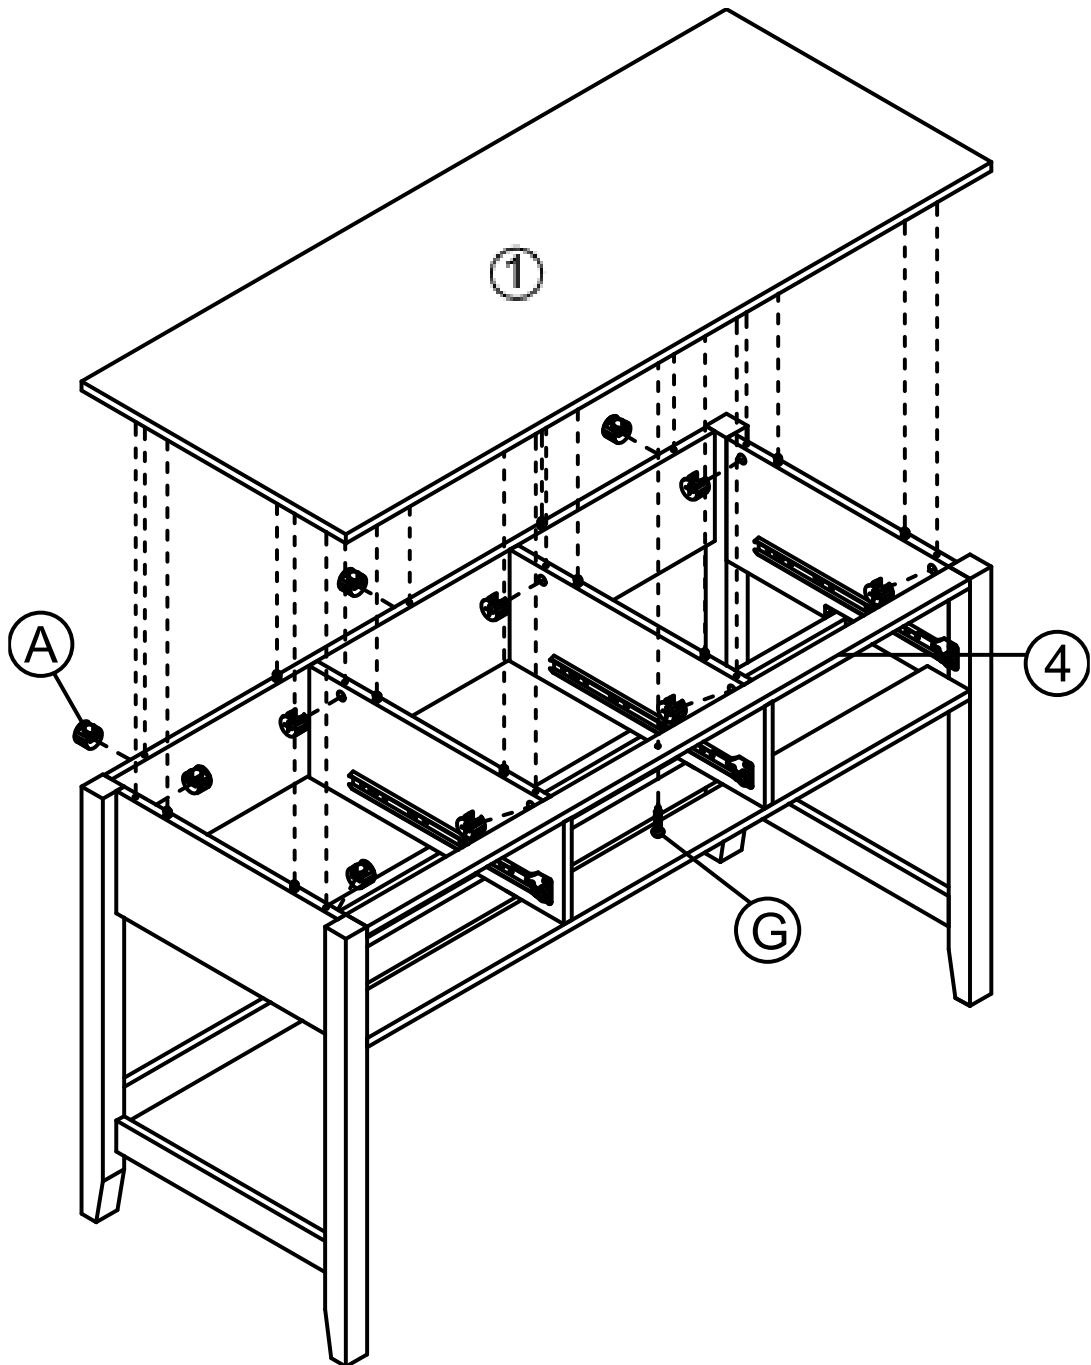



STEP 10:

- Assemble drawer left panel(10),drawer right panel(11) and drawer back panel by 4pcs x screw(C);
- Joint the drawer bottom panel(13).

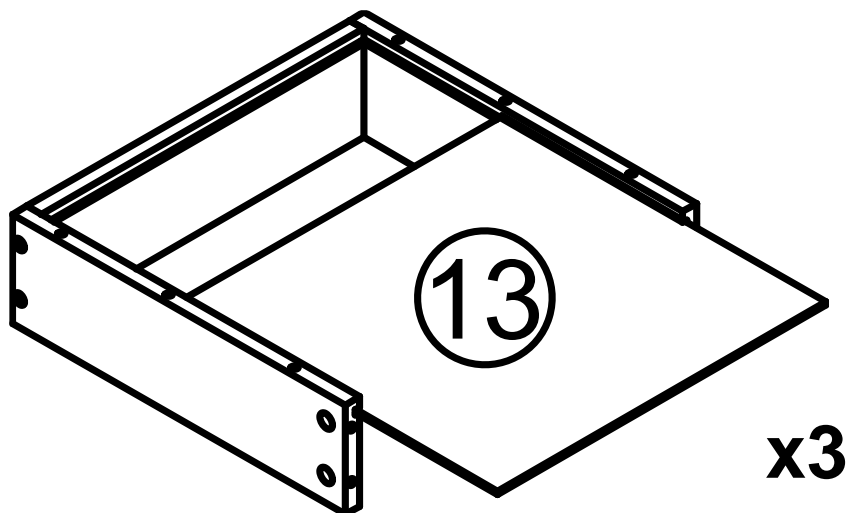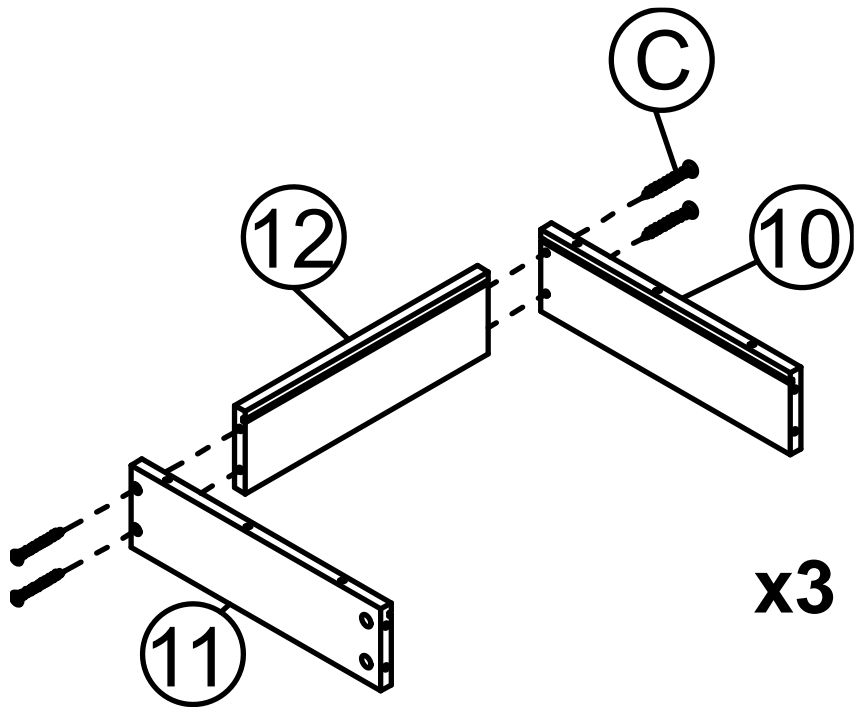


STEP 11:

- Secure 4pcs x mini fix(A) on drawer front panel(9);
- Assemble the handle(E);
- Then , lock 4pcs x mini fix cam(A) to assemble the drawer.

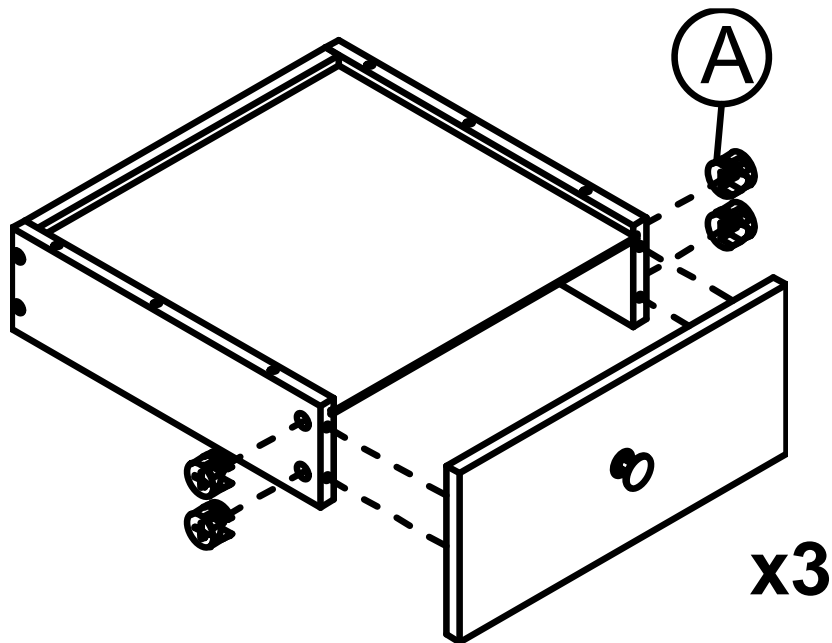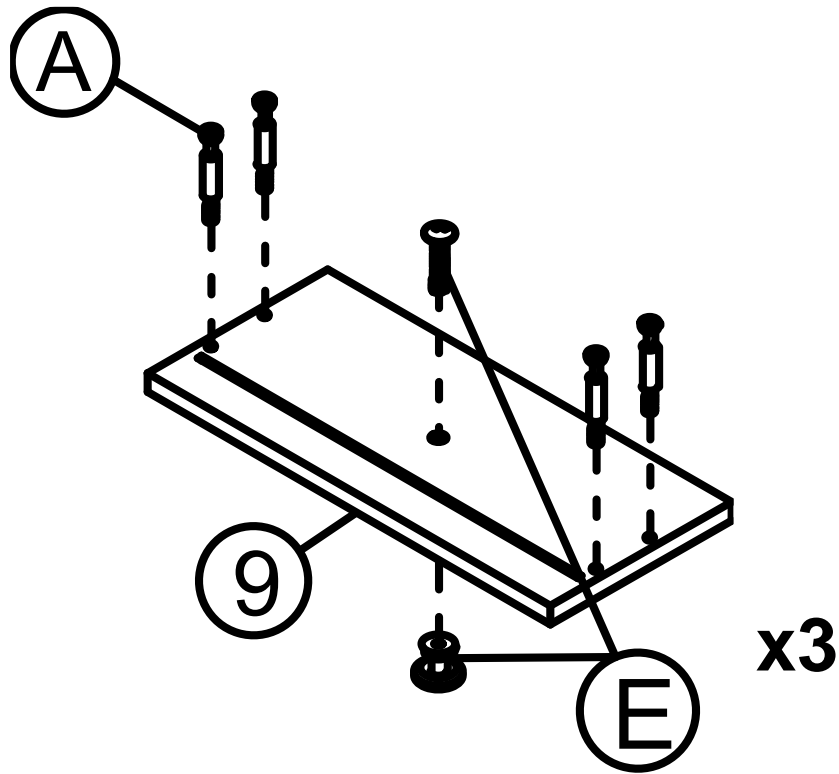

### STEP 12:


- Secure the drawer runner(CL)&(CR) with 6pcs x screw(D);
- Put the drawer in frame

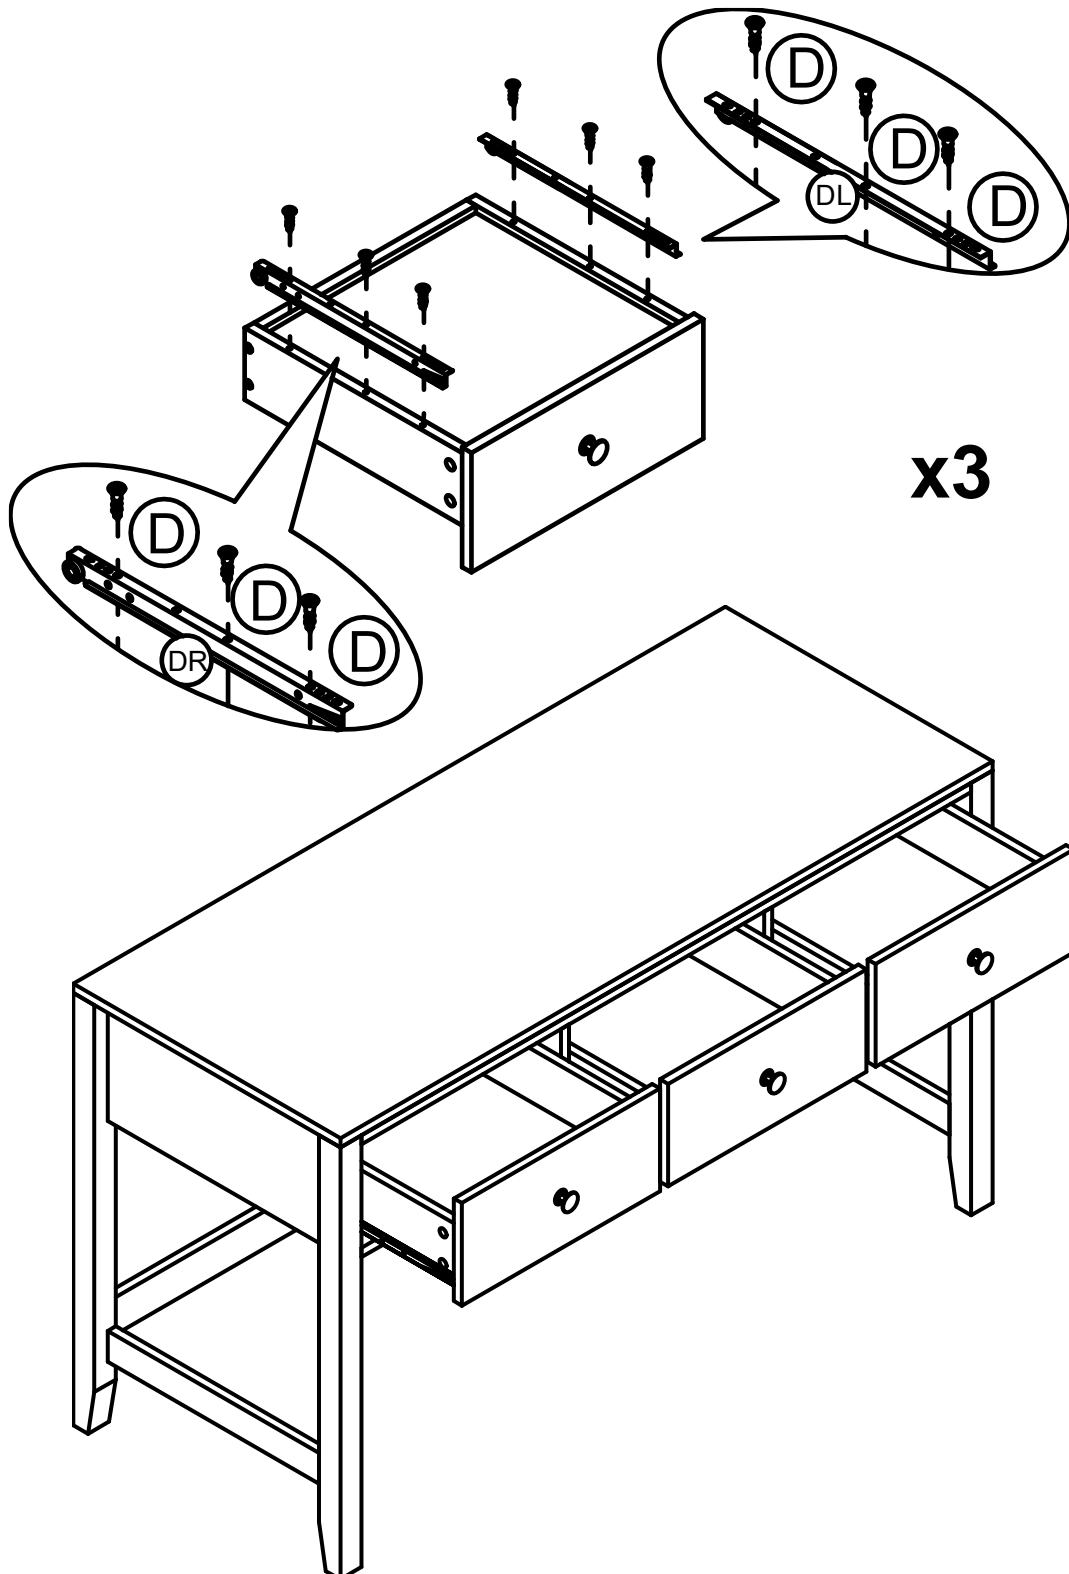




STEP 13:

- Attach the item to wall by 1pcs x screw(C) & anti-tip(H).

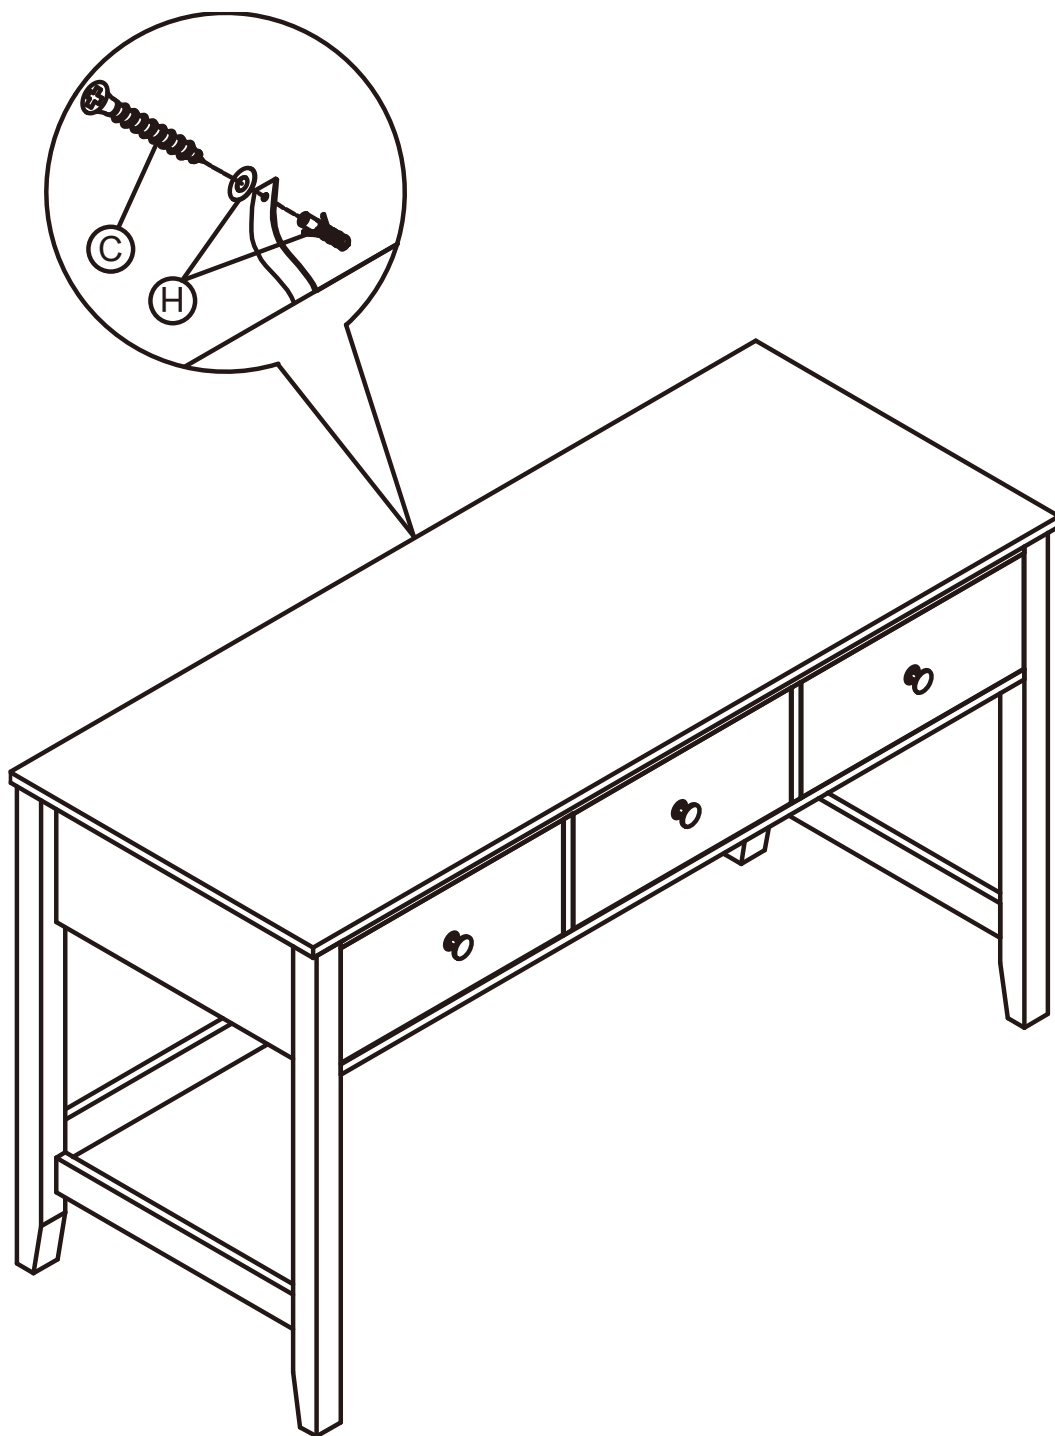

Assembly Is Complete

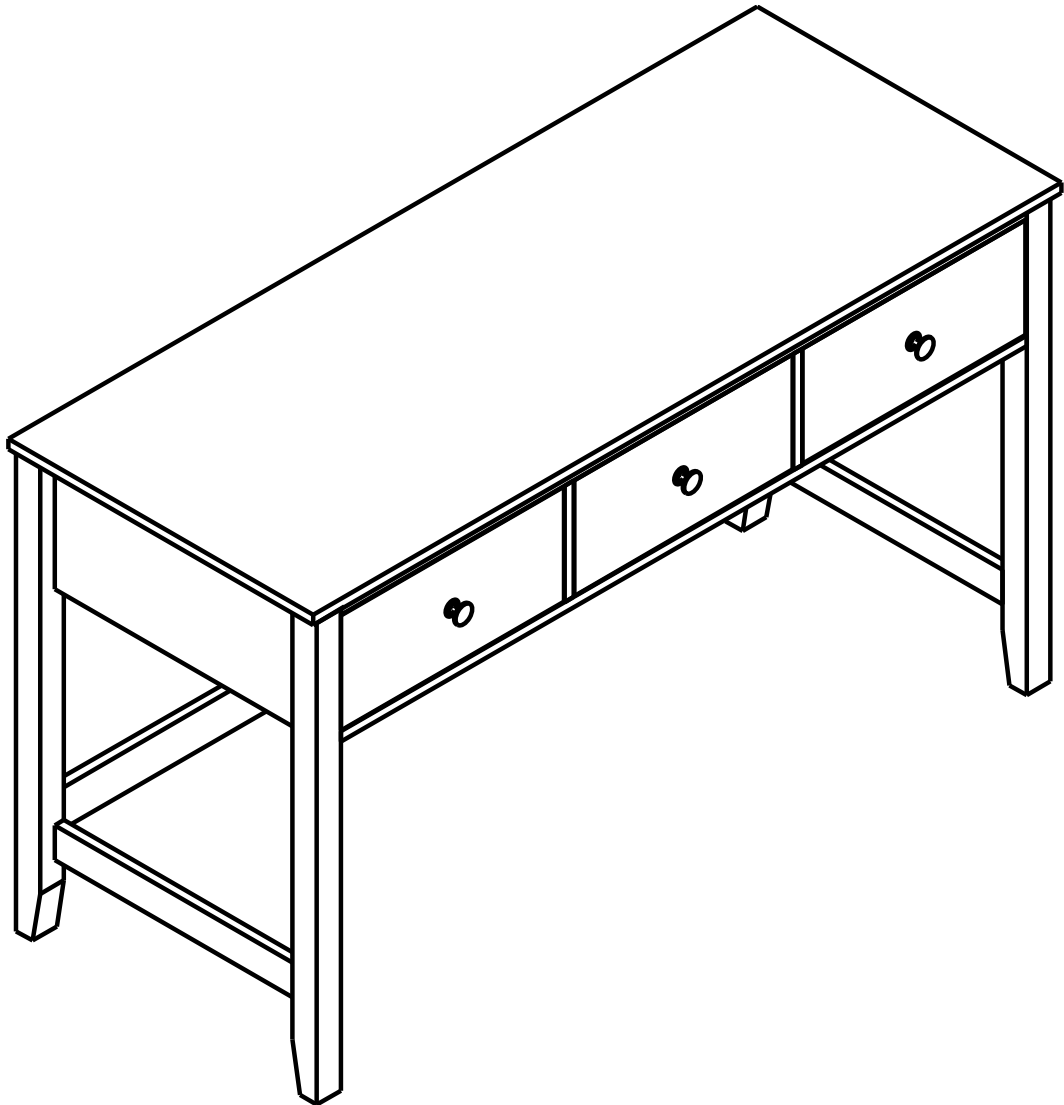

## **PRODUCT CARE:**

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.