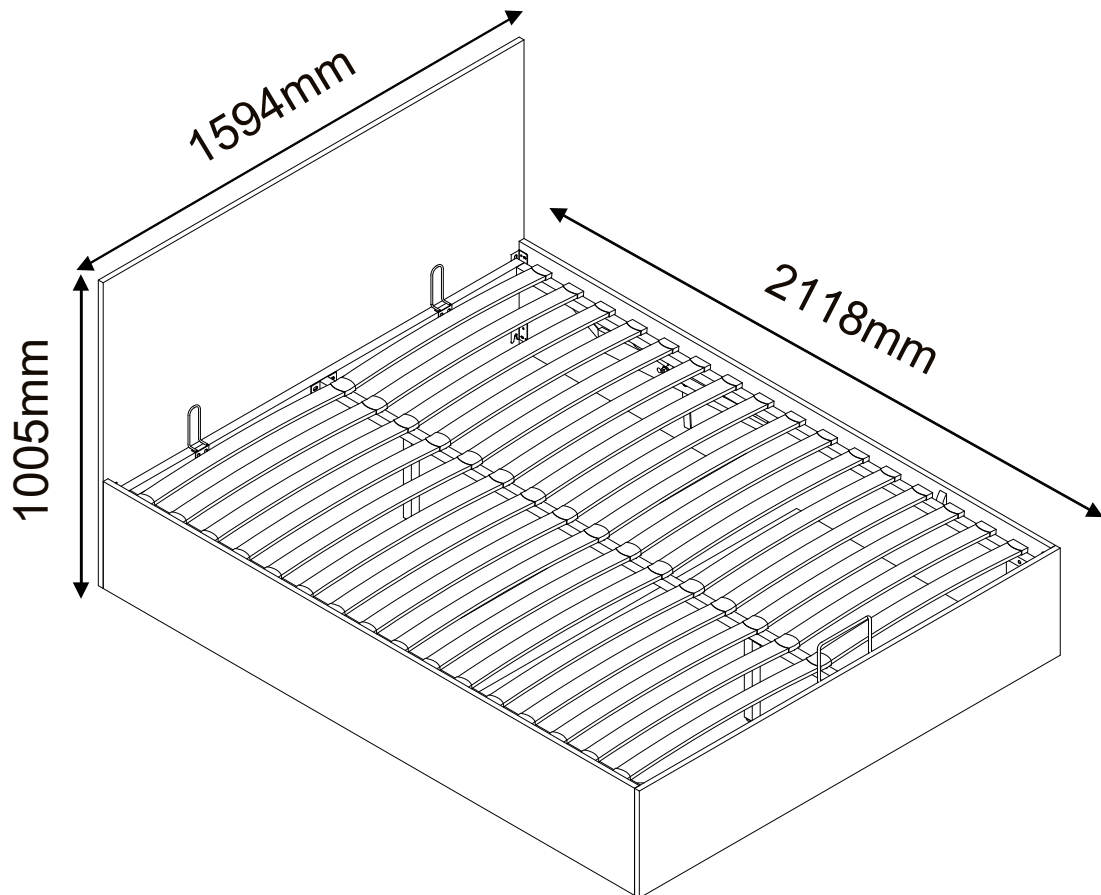


ASSEMBLY INSTRUCTION

NIVA QUEEN LIFT BED

Item Code 83329&83548


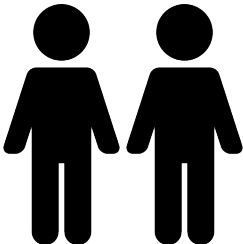



Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please refer to your receipt

PRE-ASSEMBLY PREPARATION

Before you start:






















1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly
5. Keep all hardware parts and packaging out of reach of small children
6. Do not over tighten the screws and bolts as this may damage the threads
7. Assembly is to be carried out by a competent adult(s) ONLY
8. During assembly, children should be kept away from the product due to possible risk to injury
9. Do not use this item if any components are missing or damaged
10. Please keep the instructions for future reference.

		
Allow 60 min	For 2 person	Additional tools required

**WARNING**


Do not allow children to play on this mechanised furniture or operate the mechanism. This lift bed base raises at the rear - do not place objects under it and make sure area is clear of obstructions including pets and small children. Ensure that the mattress and lift mechanism has been returned to the lowered position before lying or sitting on the mattress. Always ensure that your body is clear of the lift mechanism when lifting and lowering the mechanism

PARTS LIST

A Cam Bolt x 4pcs 	B Cam Lock x 4pcs 	C Wooden Dowel M6x30mmx4pcs 	D Screw M4x25mmx4pcs 
E JCBC Bolt M8x15mmx42pcs 	F Spring Washer x14pcs 	G Spanner #14x1pc 	H Washer x 70pcs 
I Screw M8x45mmx10pcs 	J Allen Key x 1pc 	K Single Slat Cap x32pcs 	L Double Slat Cap x16pcs 
M Metal Sheet x4pcs 	N Metal Sheet x4pcs 	O Crescent Piece x 2pcs 	P Screw M4x16mmx 40pcs 
Q Nut M8x14mm x10pcs 	R Pad M15x50mm x3pcs 	S M8x20mm x8pcs 	T Piston Nut M8x13mm x4pcs 
U Spanner #13x1pc 			



PARTS LIST

1	Left Side Rail x 1 pc	2	Right Side Rail x 1 pc
3	Centre Storage Panel x 1 pc	4	Headboard Frame x 1 pc
5	Footboard Frame x 1 pc	6	Footboard End Metal Bar x 1 pc
7	Headboard End Metal Bar x 1 pc	8	Side Metal Bar x 2 pcs
9	Footboard Base Handle x 1 pc	10	Headboard Base Handle x 2 pcs
11	Centre Metal Bar x 1 pc	12	Support Leg x 2 pcs
13	Metal Corner Block x 2 pcs	14	Right Hydraulic Base Support x 1 pc
15	Left Hydraulic Base Support c/w Pump Stopperx 1 pc	16	Slat x 32 pcs
17	Hydraulic Base Pump x 2 pcs		

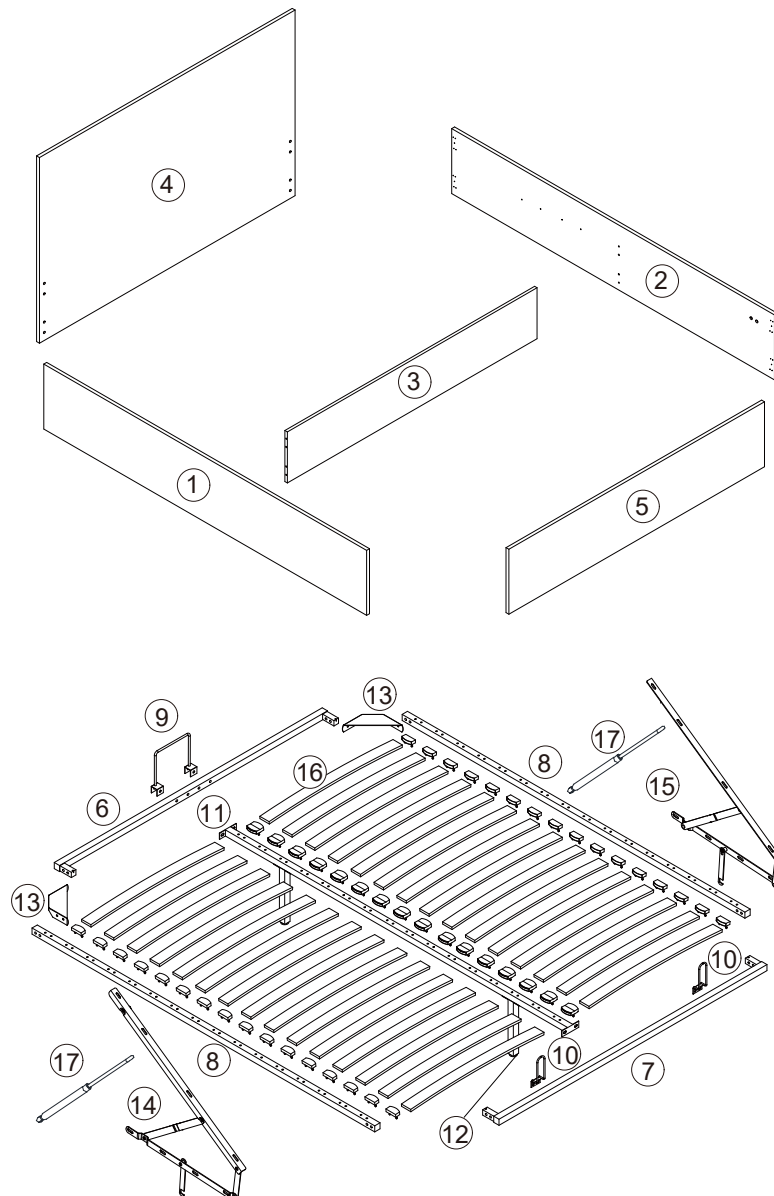


STEP 1:

- Prepare a protected surface with a blanket or cardboard.
- Firstly, fix the hydraulic pump to each hydraulic base as shown in diagram 1.1.
Then fix them using nut (Q) and spanner (G) as shown in diagram 1.2.
- Next fix the left and right hydraulic spacer together with the hydraulic base supports on to both side rails using bolts (F,H).
- Assemble the bolt (A) on to both side rails.
- Assemble the metal sheet (M,N) on to both side rails using screw (P).

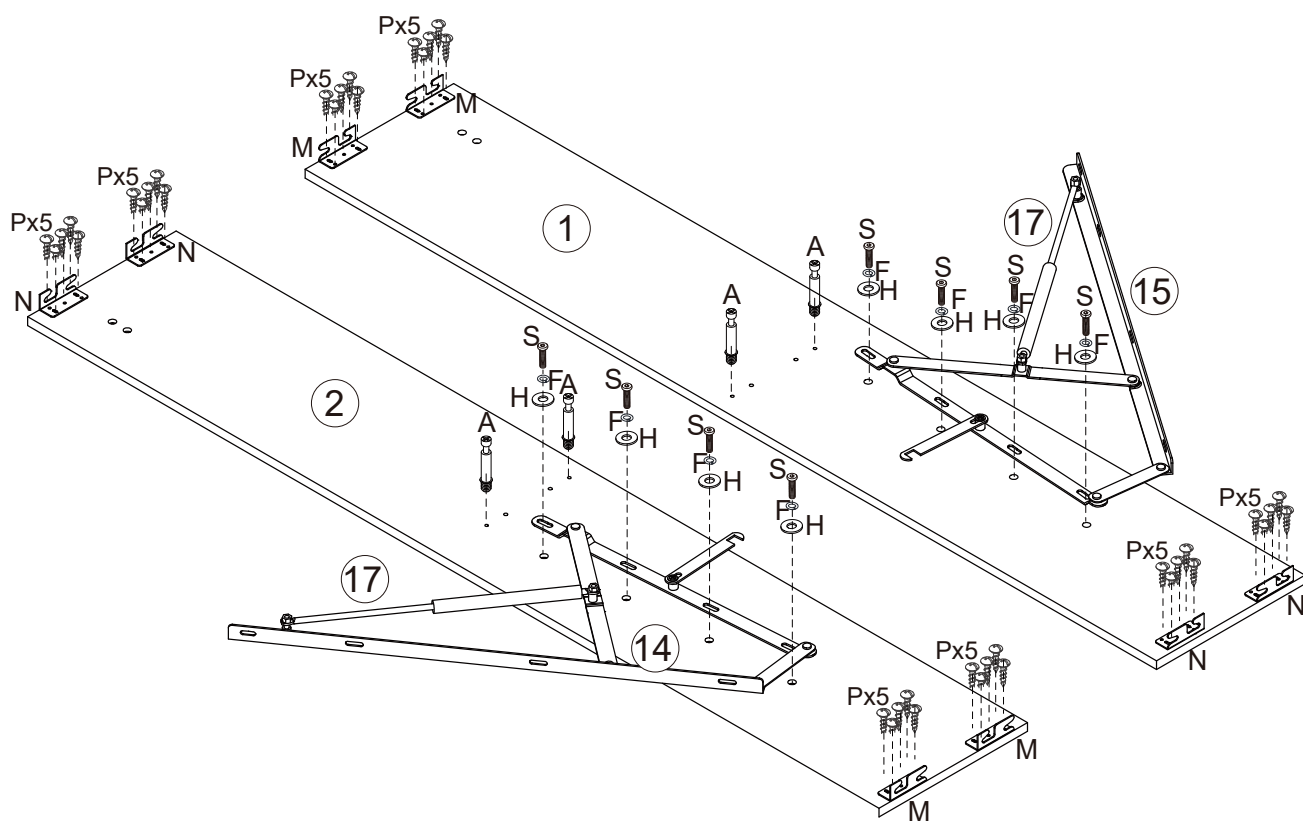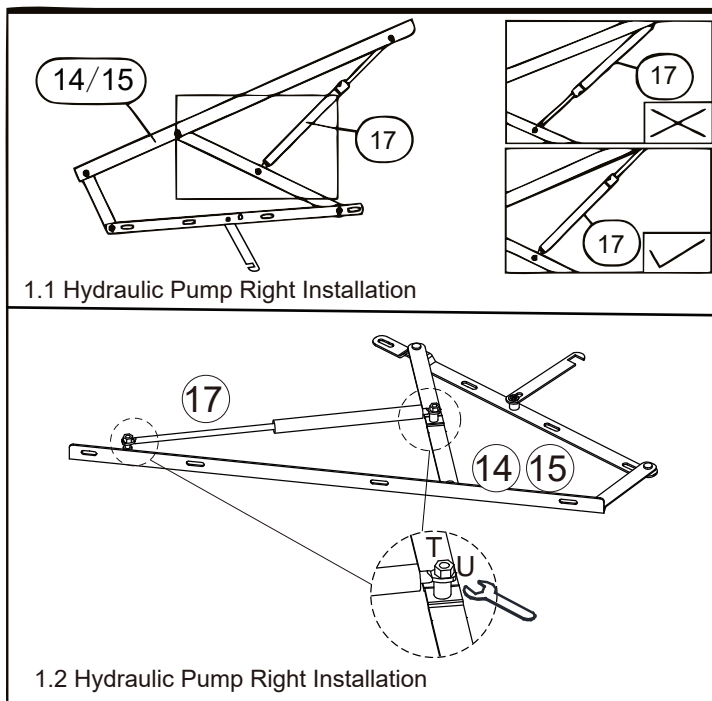


STEP 2:

- Assemble the crescent piece(O) on to both side rail using screw (D).
- Then join together the left side rail (1) and right side rail (2) with the centre storage panel (3) using hardware parts (B,C).

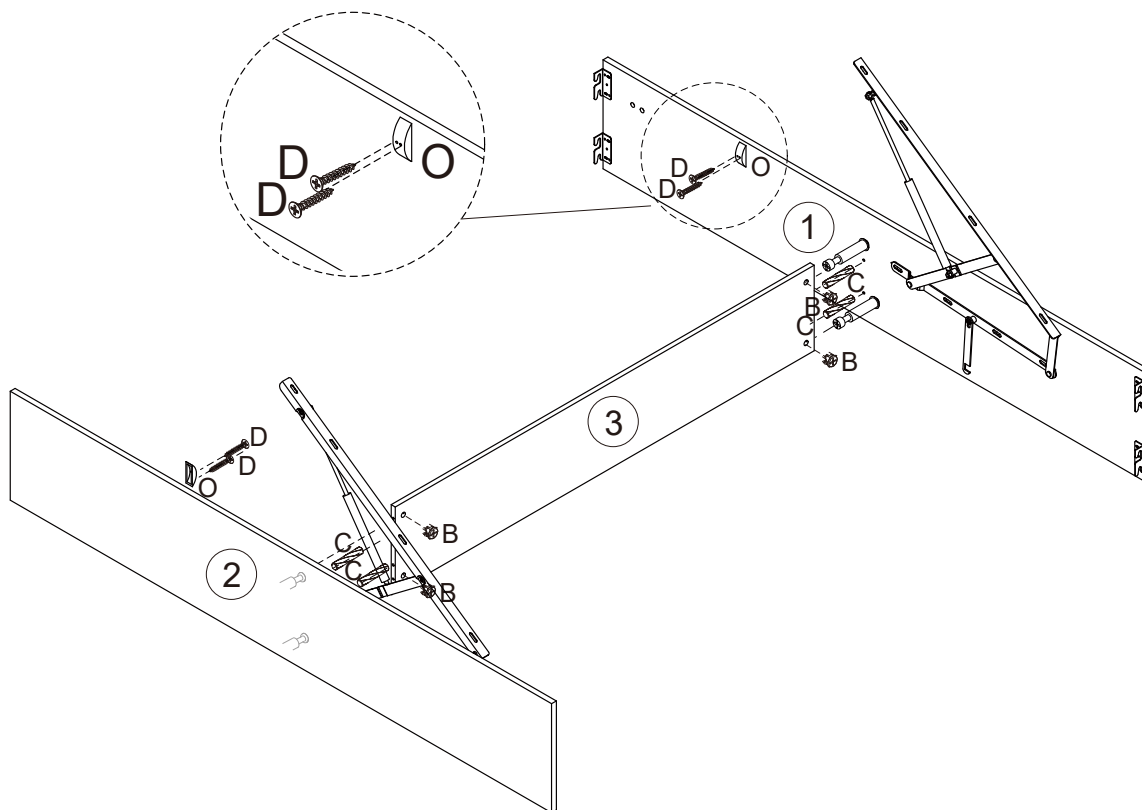


STEP 3:

- Fix the Headboard(4) and Footboard(5) with the bed frame by Hardware(E).

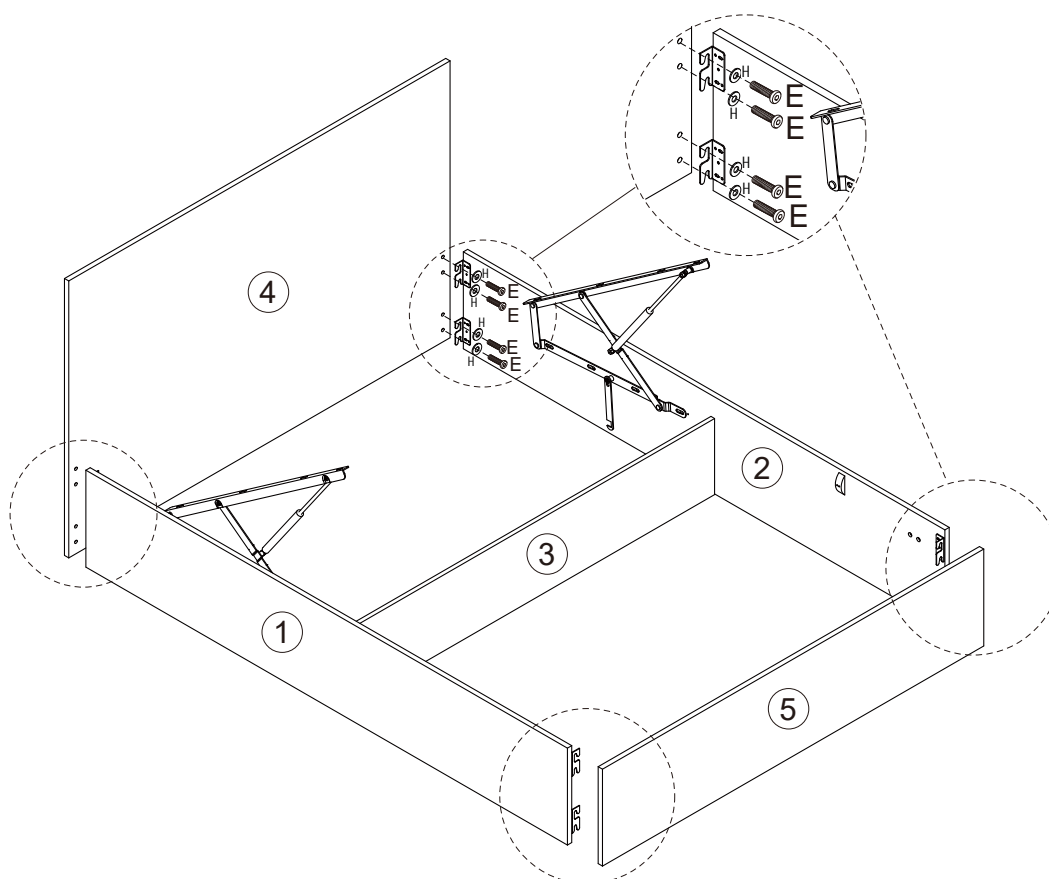


STEP 4:

- Fix the Metal Corner Block(13) by Hardware(E,H).
- Attach the pad (R) on to the centre panel (3).

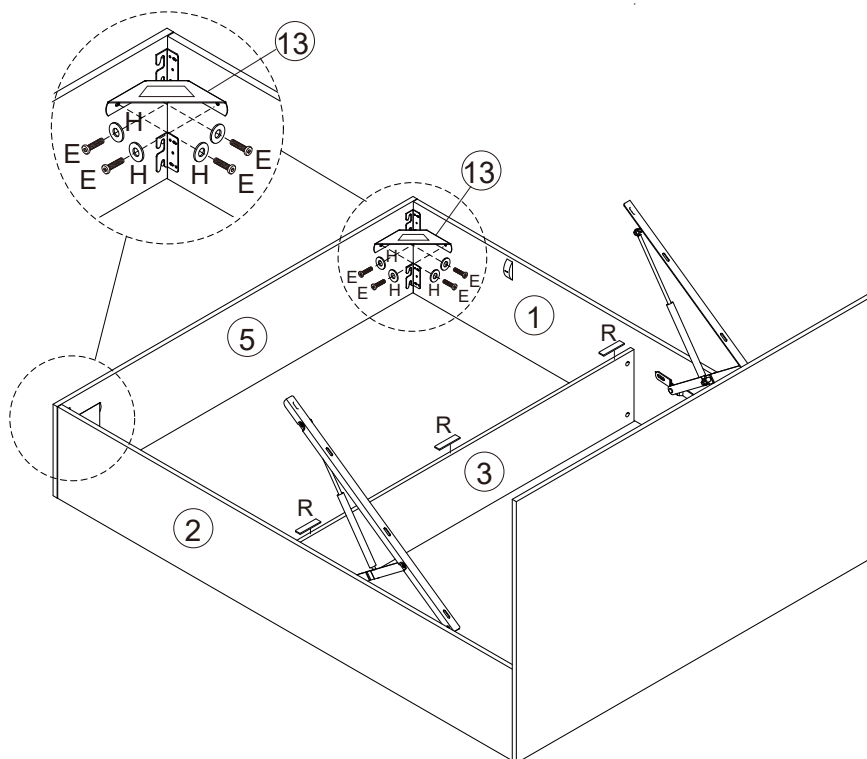


STEP 5:

- Join together all the bed base parts (6),(7),(8) using hardware parts (G,H, I,Q).
- Attach the centre rail(11) with Metal Frame by hardware (E,H).
- And then attach footboard base handle (9) on to footboard end metal bar (6) by hardware (G,H,I,Q).
- Attach the headboard base handle (10) on to headboard end metal bar (7) by hardware (E,H)

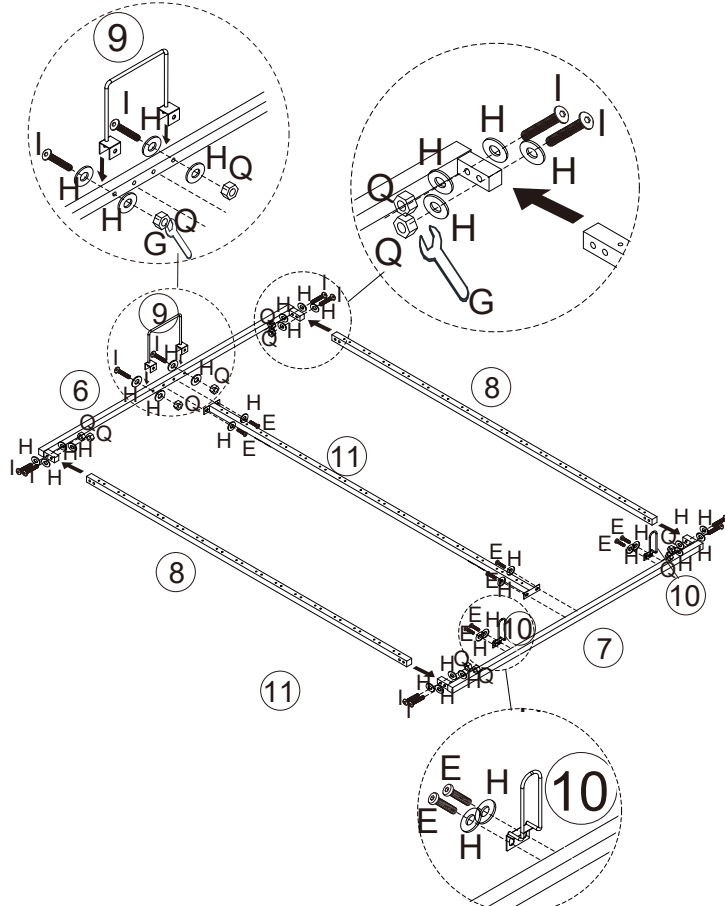

STEP 6:


- Insert the slats (16) to hardware parts K and L then press into the base making sure they are secure.

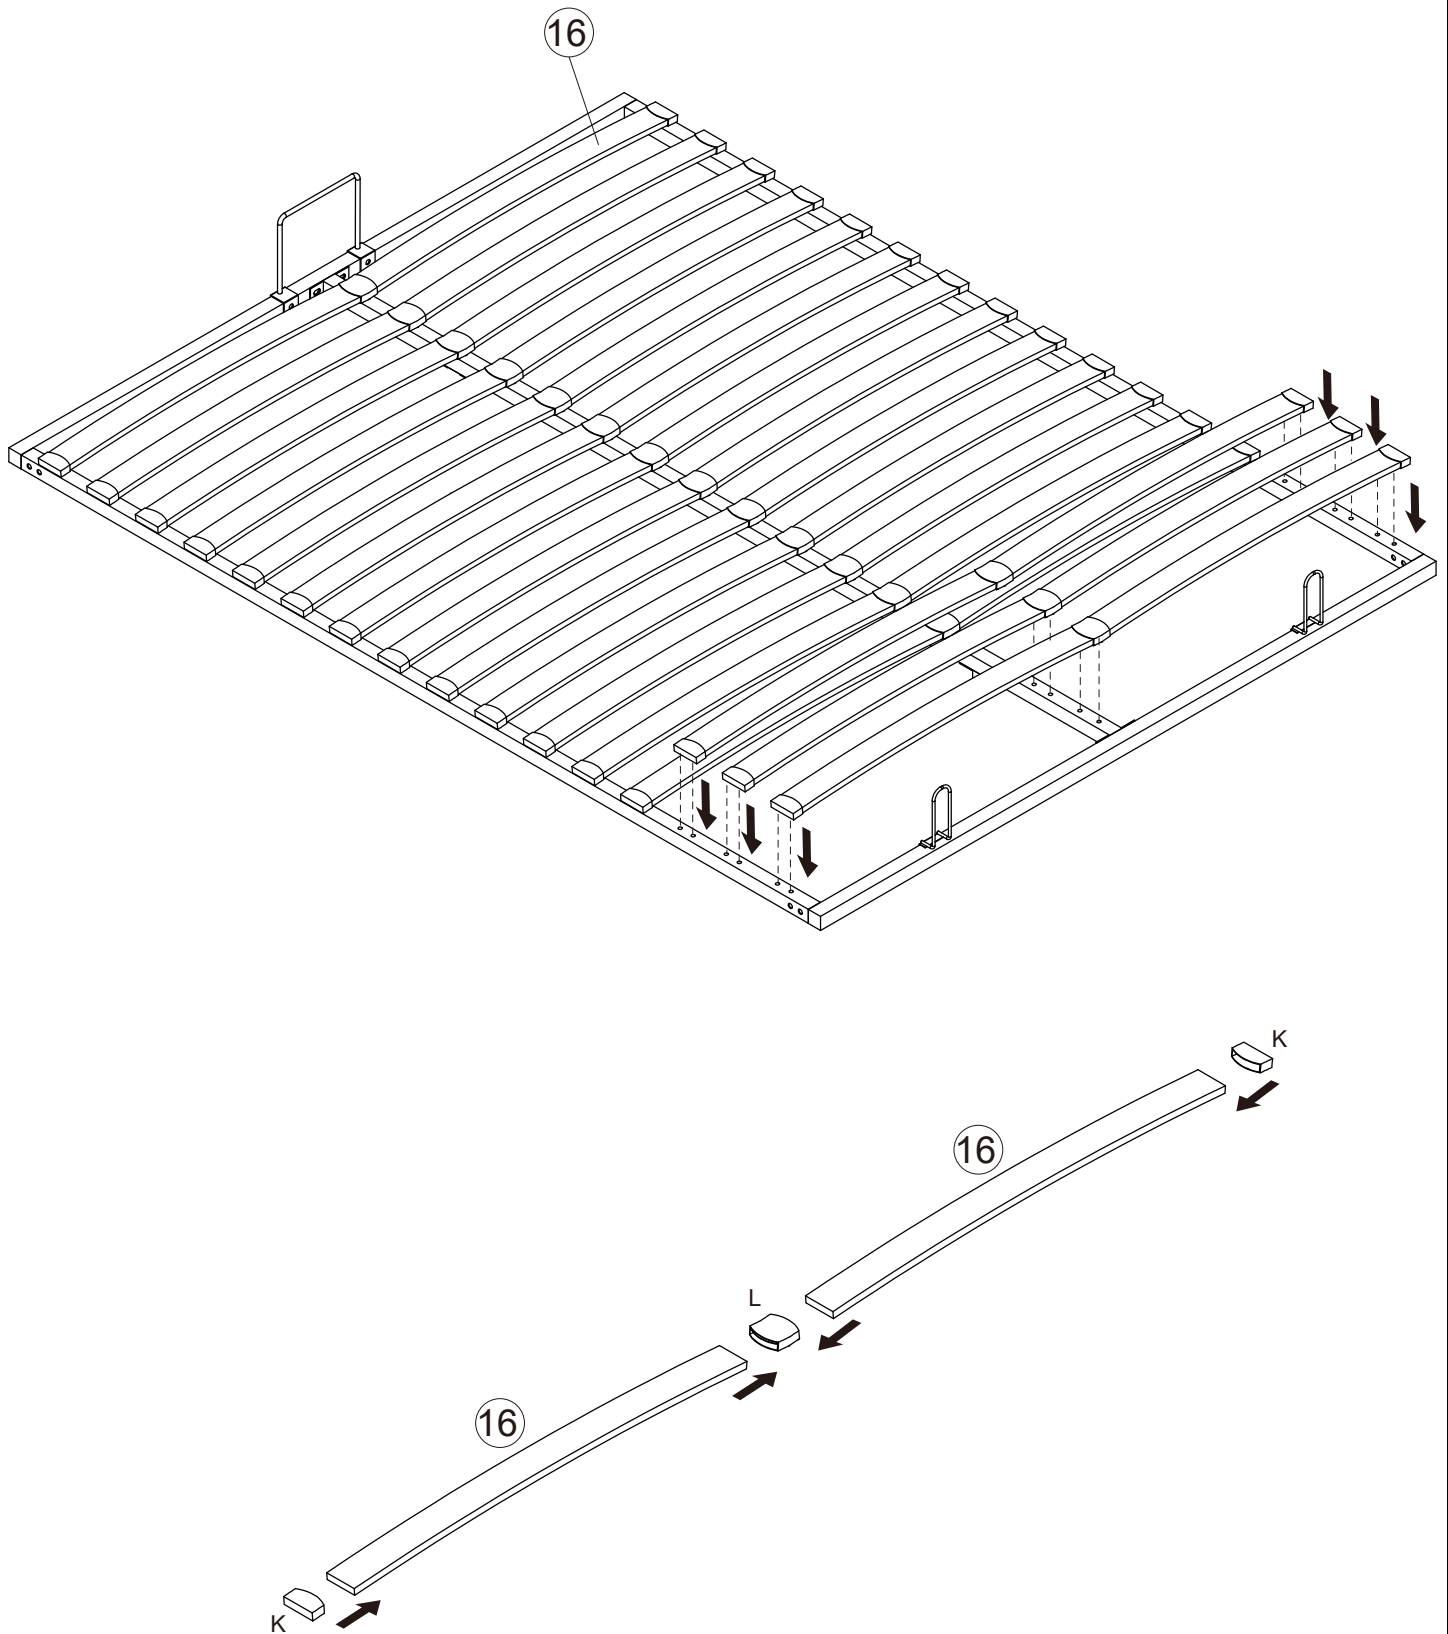

STEP 7:


- Assemble the bed base on the right & left hydraulic frame as shown with Hardware (F,H).
And fix the support leg (12) to the bed base by Hardware (E,H) as shown .

Important note: Do not tighten the bolts yet!, and this assemble must be done by two persons.

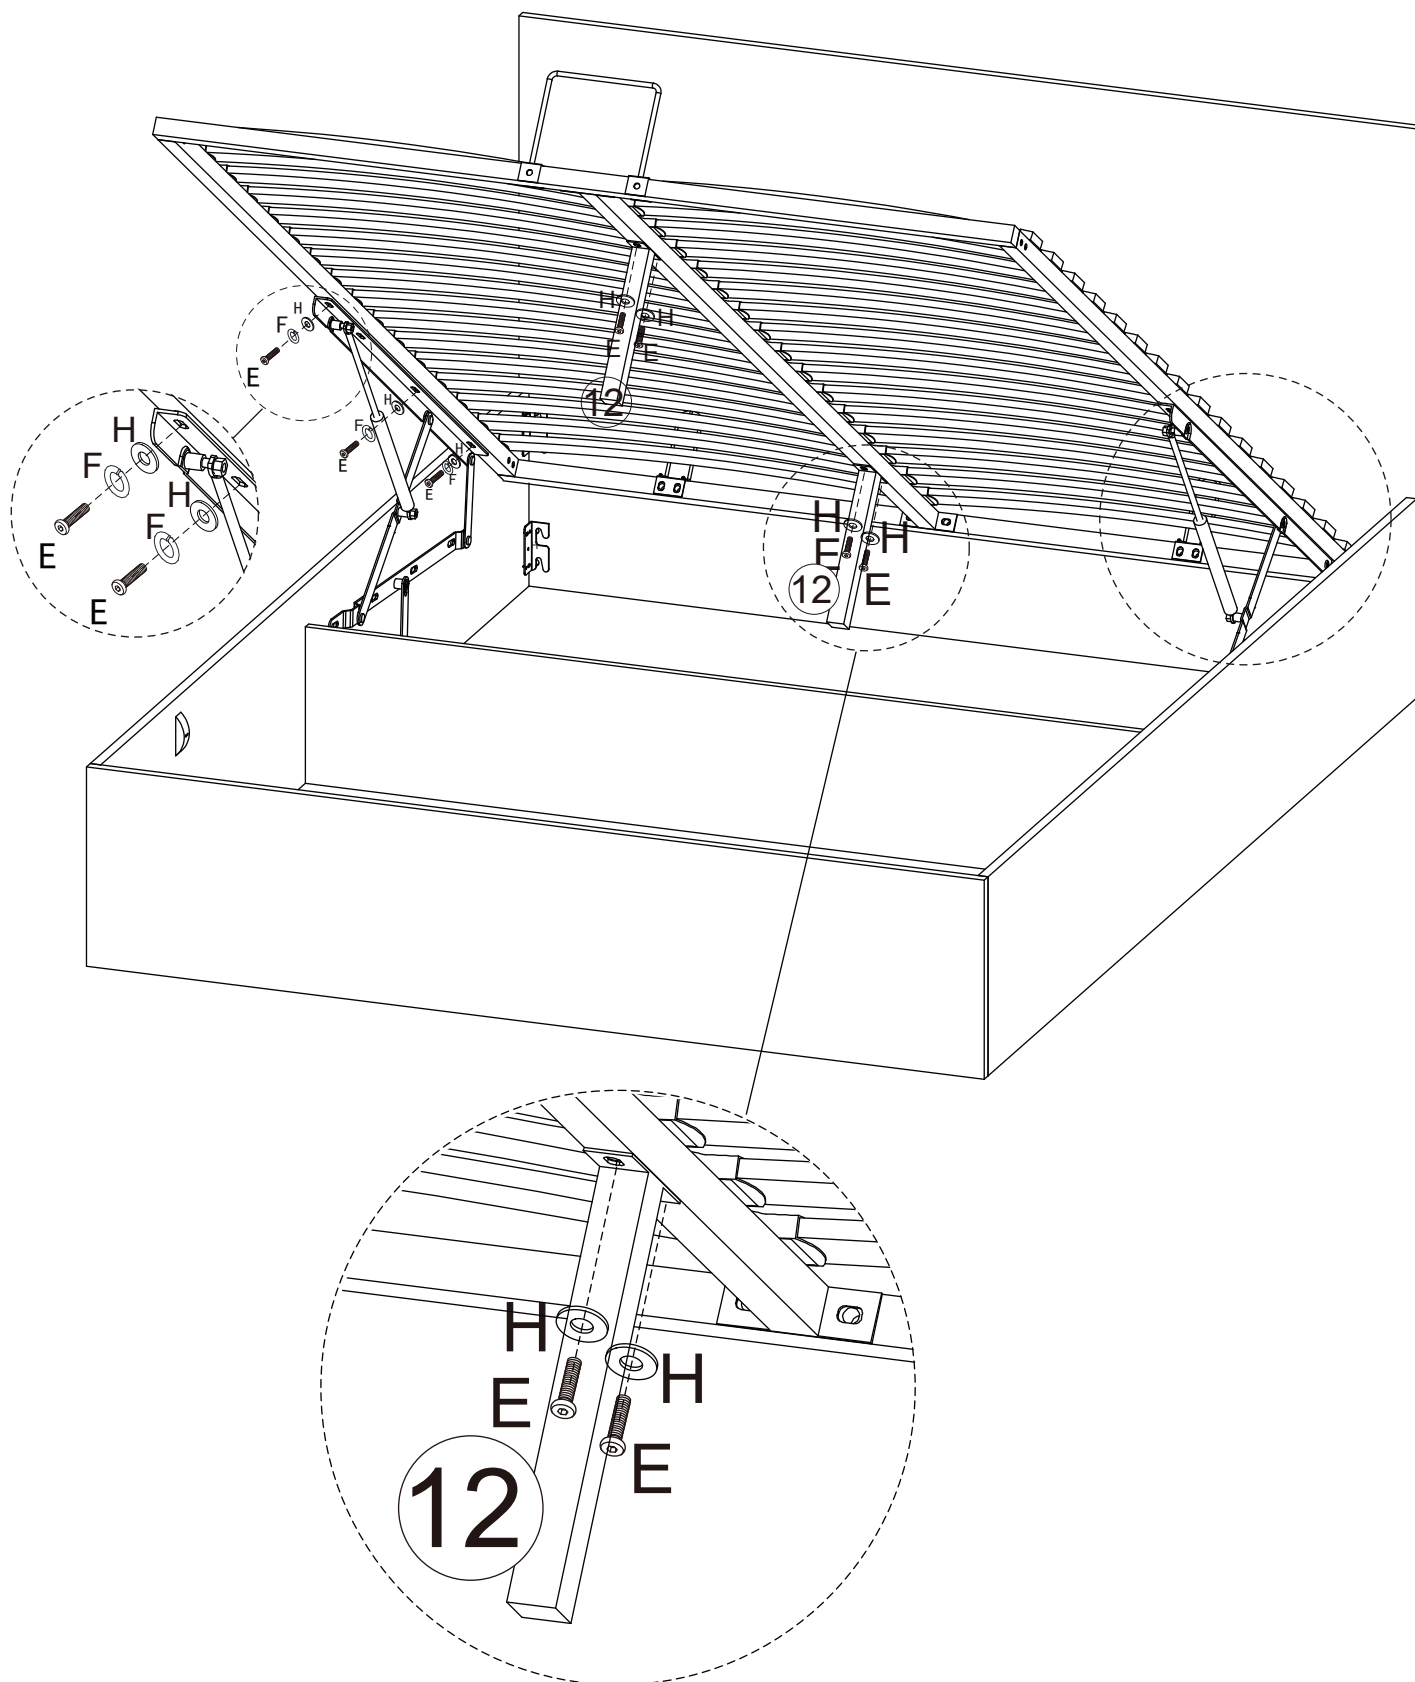


SAFETY CAUTION WARNING

Please always lock the safety lock mechanism while the bed base is in lifting position. Unlock it before you want to put the bed base back into normal position.

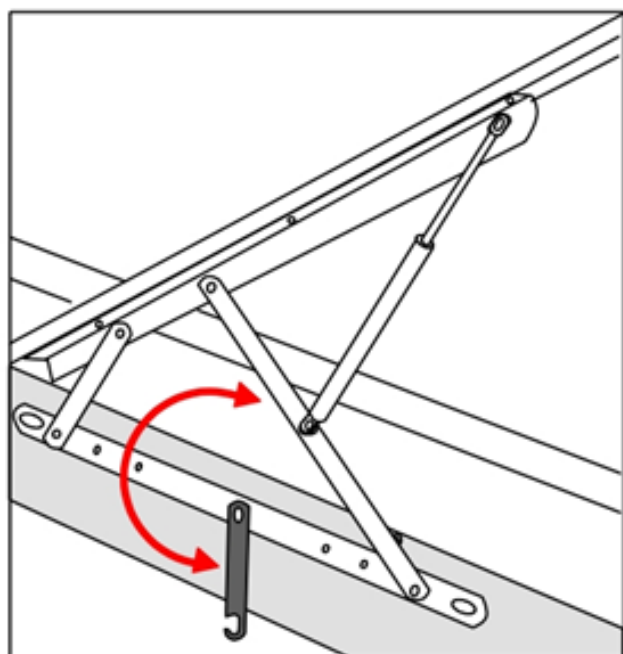


UNLOCK POSITION

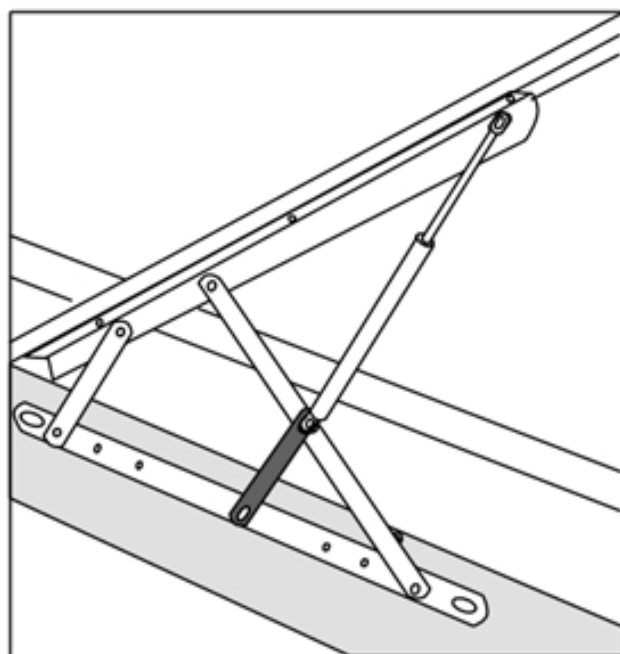

LOCK POSITION

Assembly Is Complete

WARNING
PINCH HAZARD: BEWARE OF YOUR FINGERS WHEN
LIFTING AND LOWERING THE MACHANISM

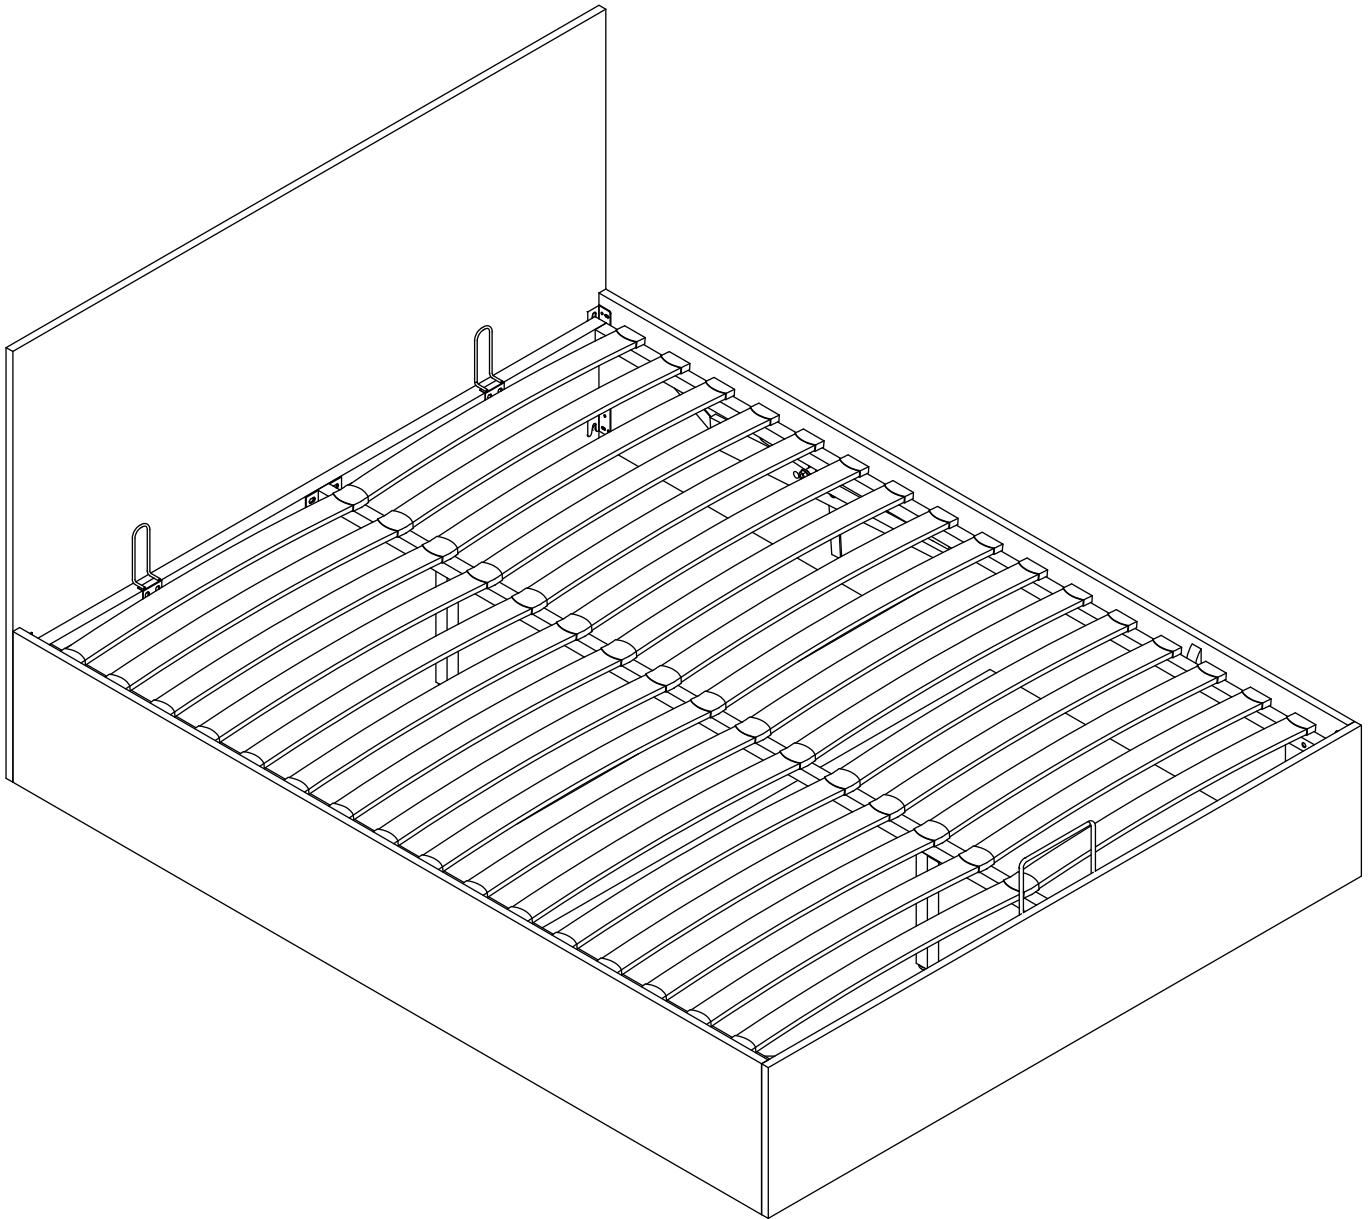

CAUTION

Always Lift Your Bed When Moving /Relocating - Do Not Drag.
Dragging Can Cause The Centre Support Legs To Bend/Break.

PRODUCT CARE:

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.