




ASSEMBLY INSTRUCTION

PARK CITY DESK BRW

ITEM CODE: 61350

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please phone
Amart Furniture Ewing Road, Customer Service Free call 1800 351 084

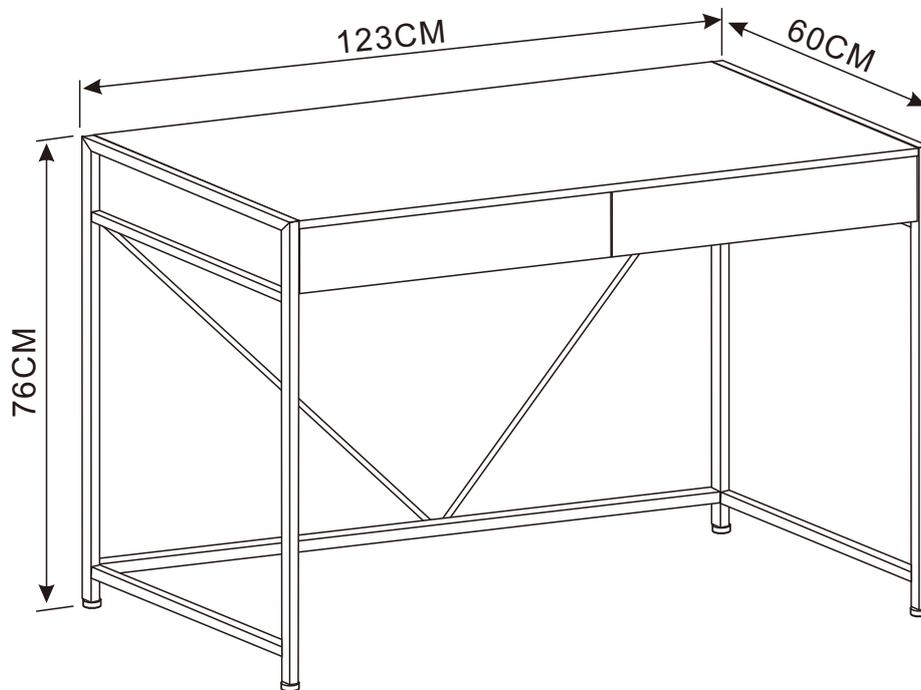


Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please
phone Amart Furniture Ewing Road, Customer Service Free call 1800 351 084


PRE-ASSEMBLY PREPARATION

BEFORE YOU START:


1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

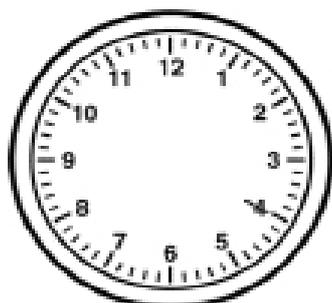

ALLOW 20 MINUTES

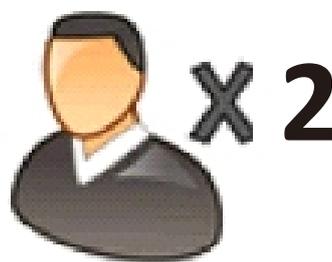

PEOPLE REQUIRED

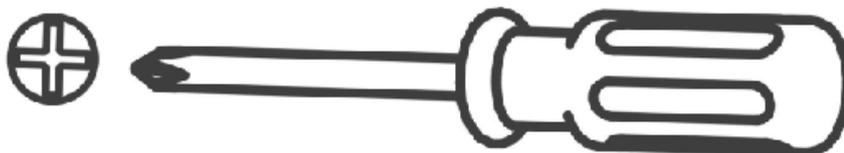

ADDITIONAL TOOLS REQUIRED



WARNING

Serious or fatal injuries may occur from furniture toppling over.
To help avoid this please follow the below recommendations:


- Install the provided "Tipping Kit" as per the instructions
- Never allow children to climb on or hang off of any part of this product
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product

If this product has drawers:






- Place the heaviest items in lowest drawers
- Do not open more than 1 drawer at a time as this may cause the product to become unbalanced
- Do not tamper with or remove any drawer interlocking/running system

Note: This use of the provided "Tipping Kit" may reduce but not necessarily eliminate the risk of furniture toppling over. Please use this product with caution.
This is a permanent label. Do not attempt to remove!


PARTS LIST

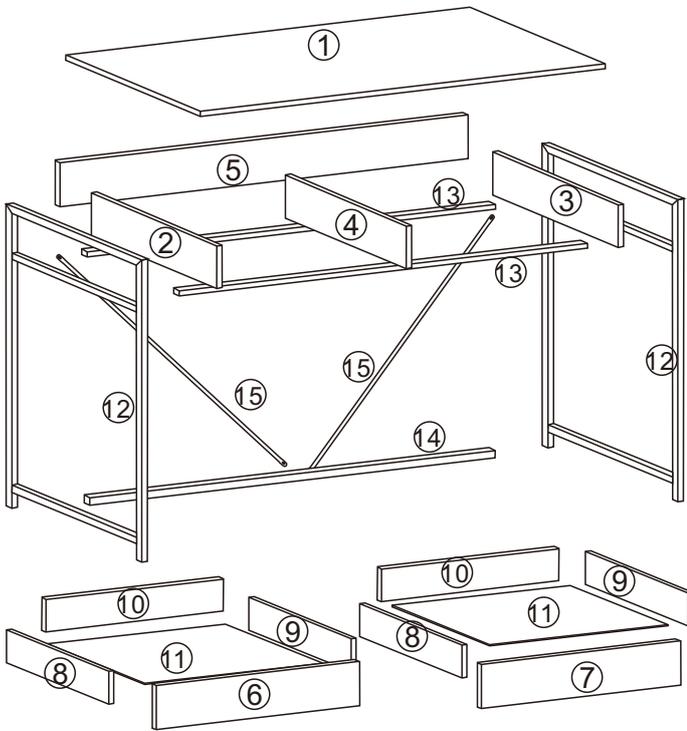

1	Top panel	9	Drawer Right Panel
2	Left Side Panel	10	Drawer Back Panel
3	Right Side Panel	11	Bottom Drawer Panel
4	Middle Panel	12	Metal Frame
5	Back Panel	13	Metal Tube
6	Left Front Drawer Panel	14	Metal Tube
7	Right Front Drawer Panel	15	Metal Tube
8	Drawer Left Panel	16	

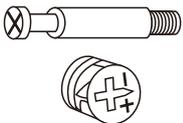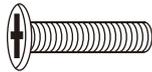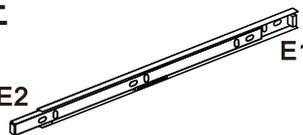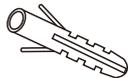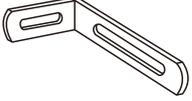
A  Bolt 19pcs	B1  Bolt M6X25mm 6pcs	B2  Bolt M6X12mm 3pcs	C  Screw ST3.5X12mm 24pcs
D1  Screw ST5X50mm 18pcs	D2  Screw ST5X60mm 4pcs	E  Drawer slideway 4pcs	F  Wood Dowel 8X30mm 6pcs
G  Fixed Feet 4pcs	H  Screw ST4X25mm 2pcs	I  Wall Nut 2pcs	J  Metal 2pcs

STEP 1

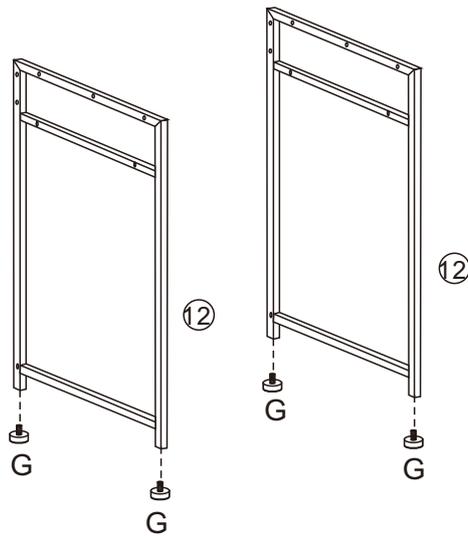


Assemble fixed feet (G) to metal frame (12).

STEP 2

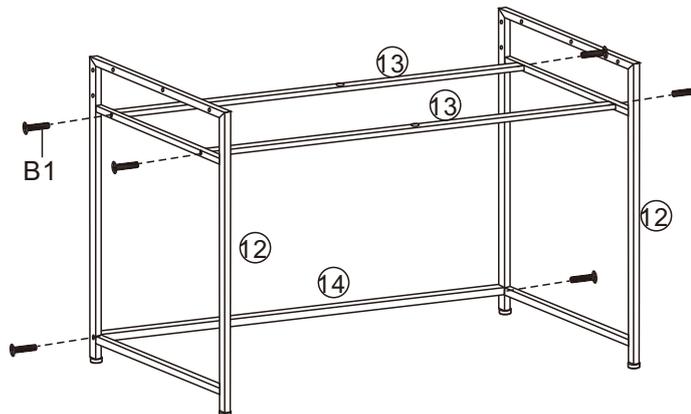


Assemble metal tube (13)&(14) to metal frame (12) using bolt (B1).

STEP 3

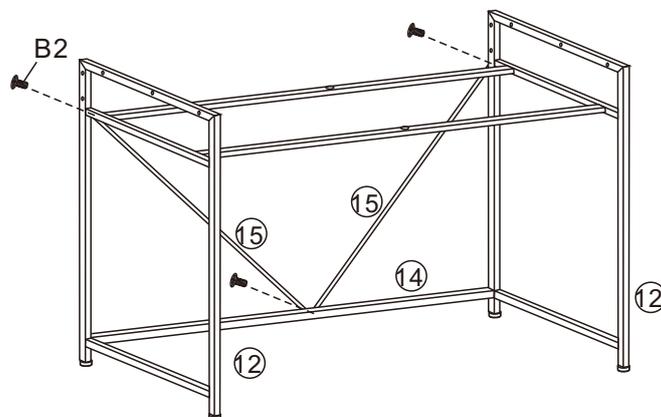


Assemble metal tube (15) to metal frame (12) and metal tube (14) using bolt (B1).

STEP 4

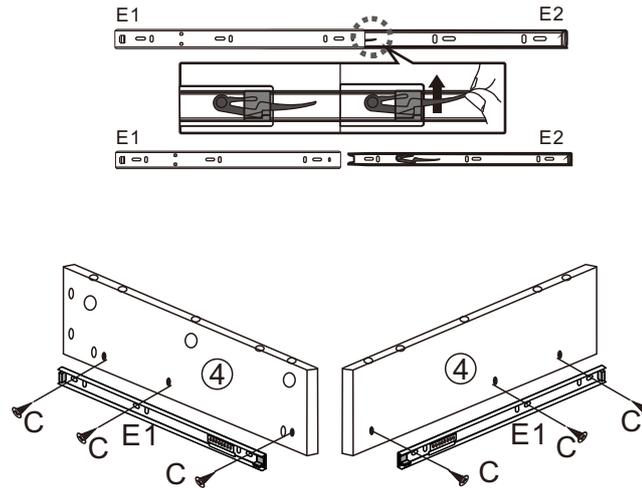


Assemble Drawer slidaway (E1) to middle panel (4) using screw (C).

STEP 5

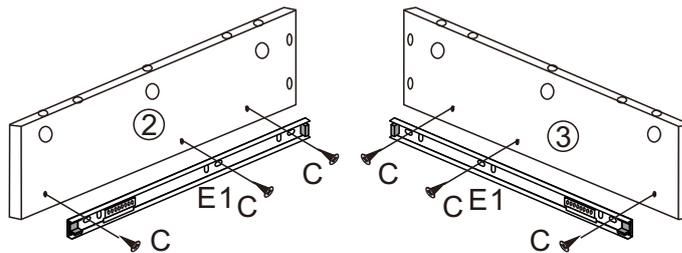


Assemble Drawer slidaway (E1) to left side panel (2) and right side panel (3) using screw (C).

STEP 6

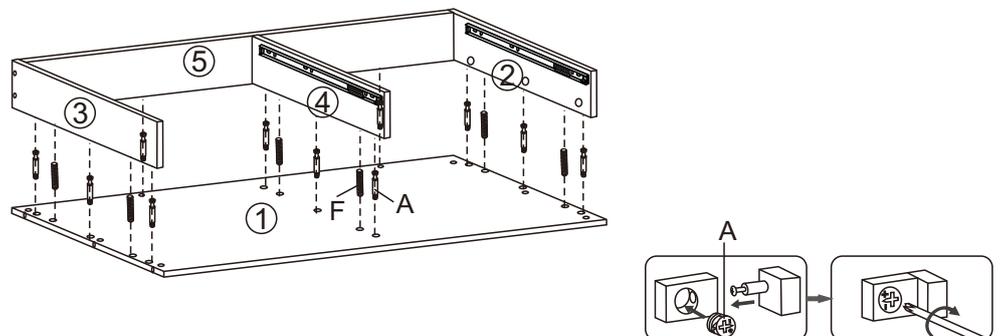


Assemble top panel (1) to back panel (5), left side panel (2), right side panel (3) and middle panel (4) using bolt (A) and wood dowel (F).

STEP 7

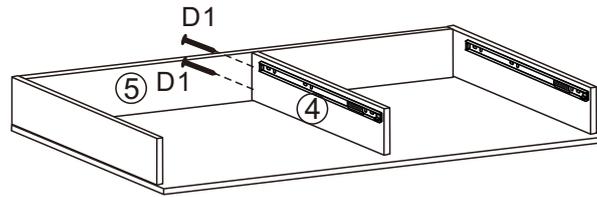


Assemble middle panel (4) to back panel (5) using screw (D1) .

STEP 8

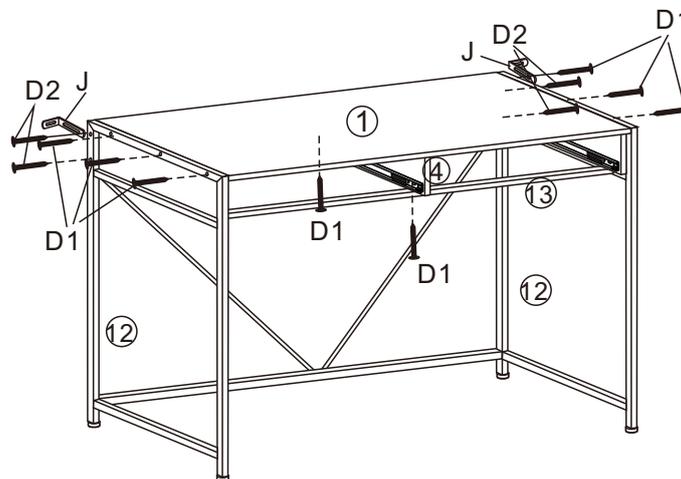


Connect metal fram (12) and top panel (1) and metal (J) using screw (D1) and screw (D2) .Connect middle panel (4) and metal tube (13) using screw (D1) .

STEP 9

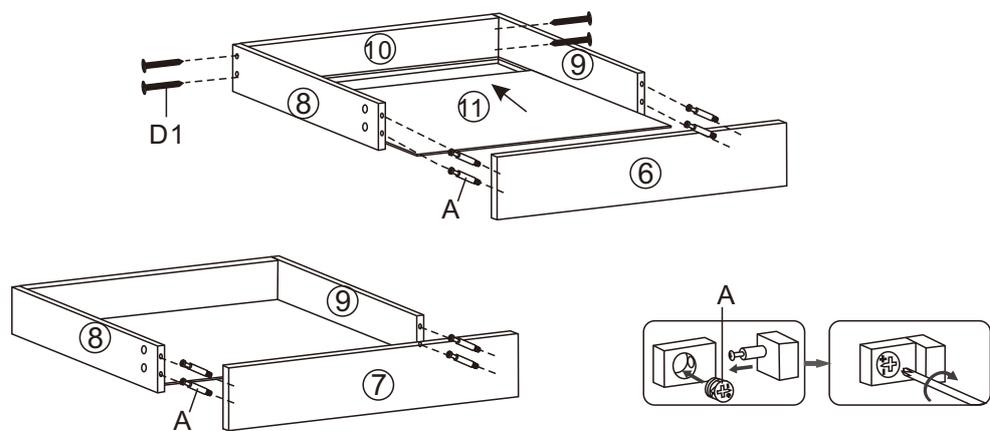


Assemble drawer back panel (10) to drawer left panel (8) and drawer right panel (9) using screw (D1) , then insert drawer bottom panel (11) . Assemble left front drawer panel (6) and right front drawer panel (7) to drawer left panel (8) and drawer right panel (9) using bolt (A) .

STEP 10

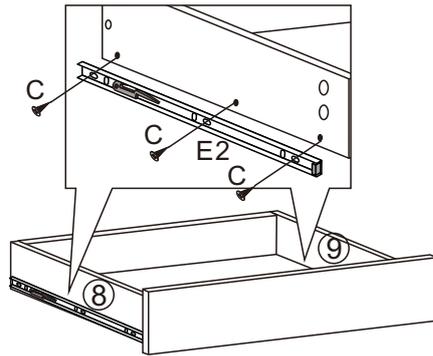


Assemble drawer slideway (E2) to drawer left panel (8) and drawer right panel using screw (C).

STEP 11

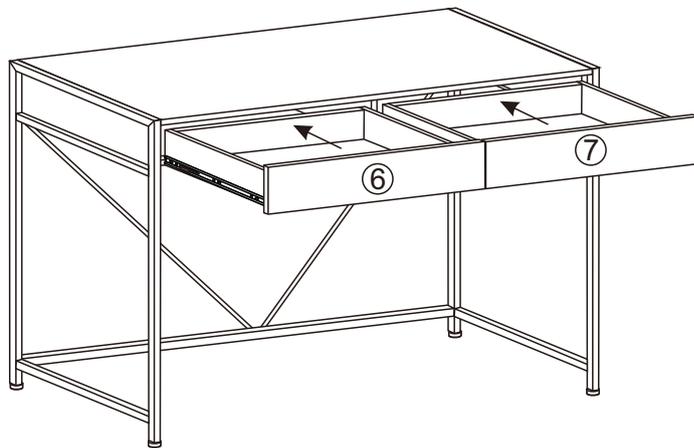


Insert drawer (6) and (7).

STEP 12

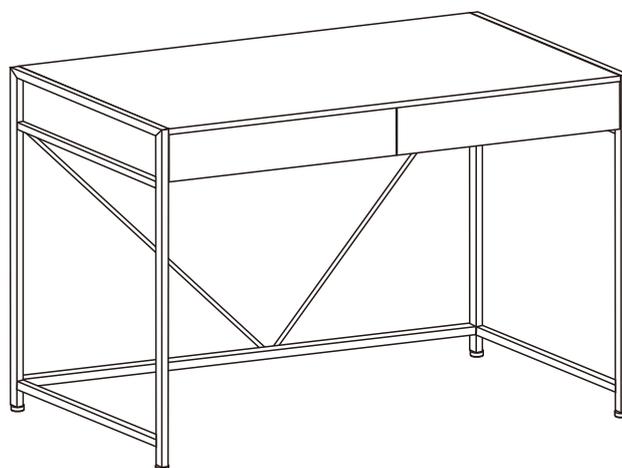

Assembly is complete.

STEP 13

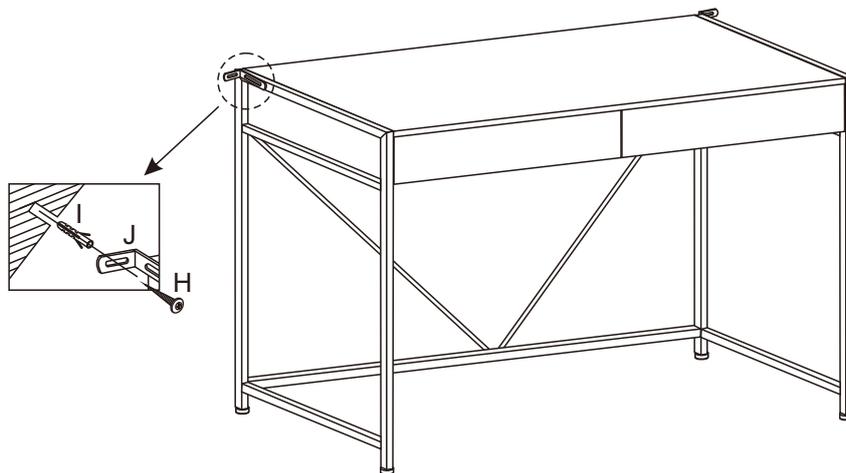


Knock in wall nut (I) on the wall, then connect metal (J) and wall nut (I) using screw (H).
Fix the desk to the wall.

SAFETY BRACKETS INSTRUCTIONS

1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

HARDWARE

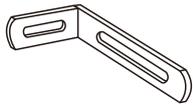


Metal x 1



Wall Nut x 1



Screw x 1

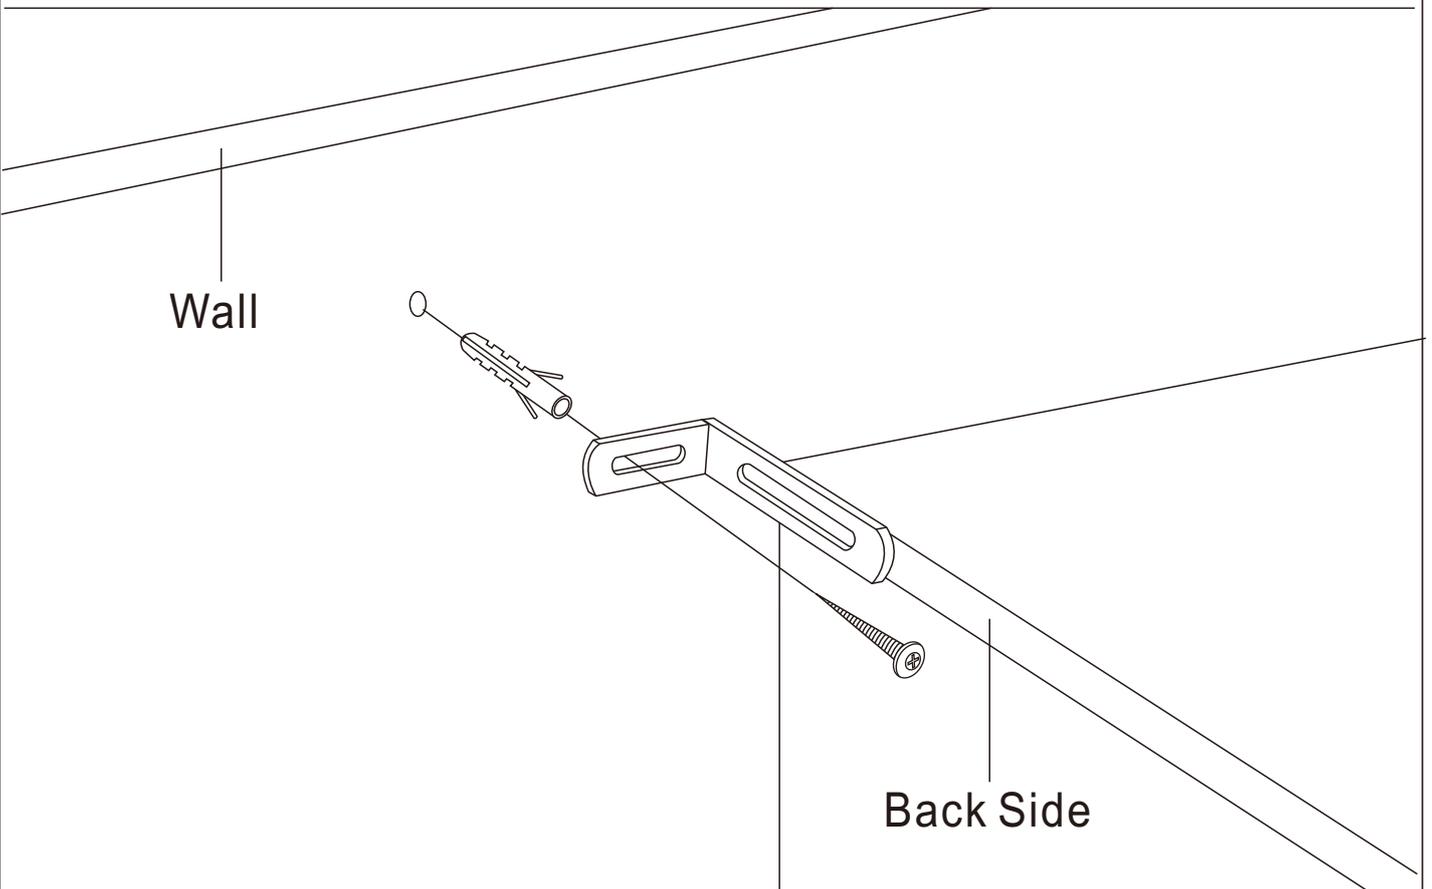

CARE AND MAINTENANCE

A multi-step finish is applied to all of our furniture, but all wood comes from nature. Because of this, there will be natural variations in surface texture and grain like knots, mineral streaks and sap runs that may affect the finish. These differences in character are not defects, but distinctions that make each piece of furniture unique.

Following these steps for basic care should protect your investment for years to come..

Dust frequently with a clean damp lint-free cloth. This will help remove abrasive build up which can damage a finish over time.

Do not place hot objects on any furniture surface. Always use a hot plate or placemat.

Laminate and lacquer finishes on tabletops provide added scratch and heat resistance to our furniture, but they can still be damaged without proper care

Avoid exposing your furniture to strong sunlight, heat outlet, open windows or dampness.

Prolonged exposure to direct sunlight can fade the finish of your furniture, while extreme temperature and humidity changes can cause cracking or splitting

Do not expose your furniture to any liquids. Never allow water to sit on your furniture. Alcohol, nail polish and perfume are also dangerous as they will dissolve the lacquer finish on contact and may require professional repairs

Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of placemats etc. may soften and mark the finish if left in contact with the furniture for a period of time.