


ASSEMBLY INSTRUCTION ZAMI STUDENT DESK ITEM CODE 65498

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia. For any assistance with assembly or for missing parts please phone Amart Furniture, Customer Service Free call 1800 791 390

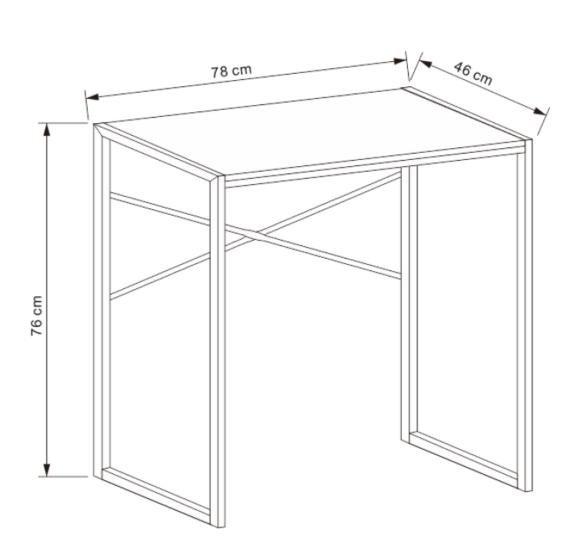


Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia. For any assistance with assembly or for missing parts please phone Amart Furniture, Customer Service Free call 1800 791 390

PRE-ASSEMBLY PREPARATION

Before you start:

- 1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use
- 3. Ensure that you have all required contents for complete assembly
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6. Do not over tighten the screws and bolts as this may damage the threads

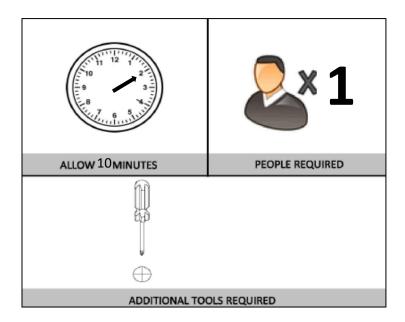





2-7 65498

SAFETY BRACKETS INSTRUCTIONS


- 1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
- 2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
- 3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
- 4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

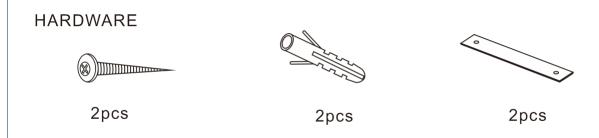

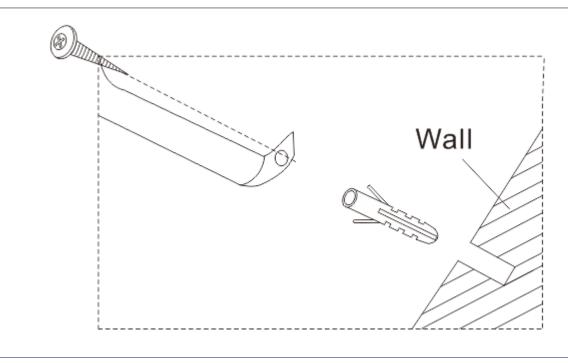

PARTS LIST


EXPLODED VIEW

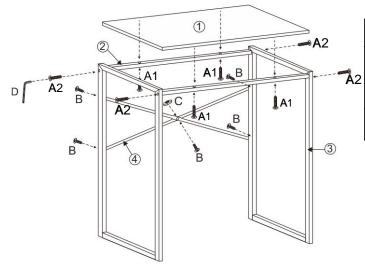


1	Top panel
2	Square Tube
3	Frame
4	Cross Bar

A1 BOLT	А2 вост	В вост
(4)		
M6x30mm 4pcs	M6x40mm 4pcs	M4x12mm 5pcs
C NUT	D Allen Key	E Screw
©		
M4mm 1pcs	1pcs	ST4x25mm 2pcs
F т _{аре}	G Wall Nut	
2pcs	2pcs	

STEP 1: Attach metal frame (3) to Square Tube (2) then attach fabric (F) to metal frame using Bolt (A2) and fasten with Allen Key (D) as instruction shown.

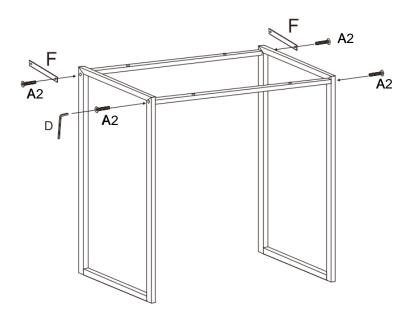


STEP 2: Attach cross Bar (4) to metal frame using bolt (B) without tightening and to lock cross bar using bolt (B) and nut (C) on joint, then fasten with Allen key D.

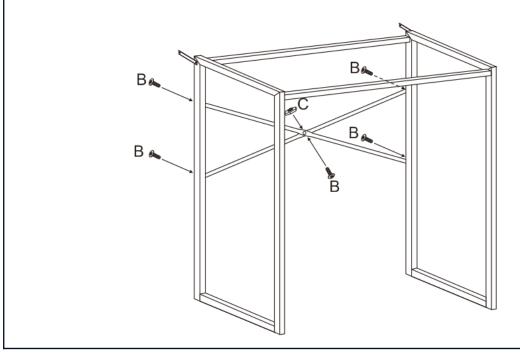


5-7 65498

STEP 3:Attach top panel to metal base using bolt (A1) as shown and fasten with Allen key (D)

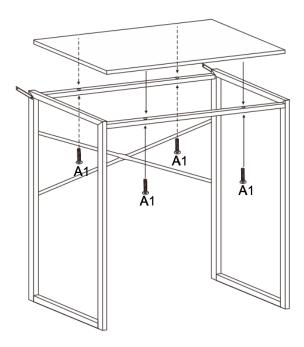

STEP 4: Knock in wall nut (G) in the wall, attach tape F to wall nut(G) using screw E.

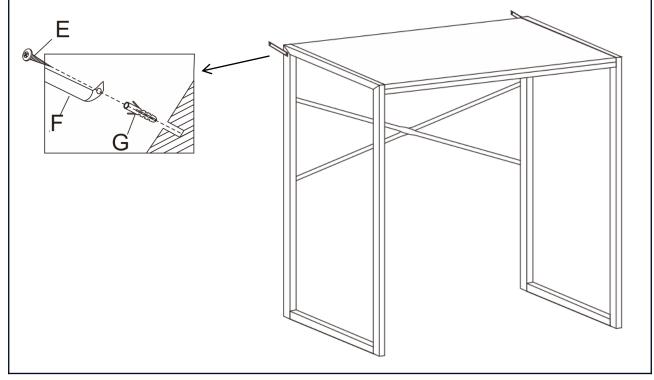

6-7

65498

GENERAL PRODUCT CARE



To protect your furniture, we suggest the following:

- *Avoid placing your furniture in direct sunlight.
- *Do not place furniture directly under windows.
- *Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- *Do not place material with high temperature directly onto the surface of your furniture.
- *Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- *Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void

7-7 65498