




## ASSEMBLY INSTRUCTION

### FILLMORE DESK GY/WT

ITEM CODE: 61351

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.  
For any assistance with assembly or for missing parts please phone  
Amart Furniture Ewing Road, Customer Service Free call 1800 791 390

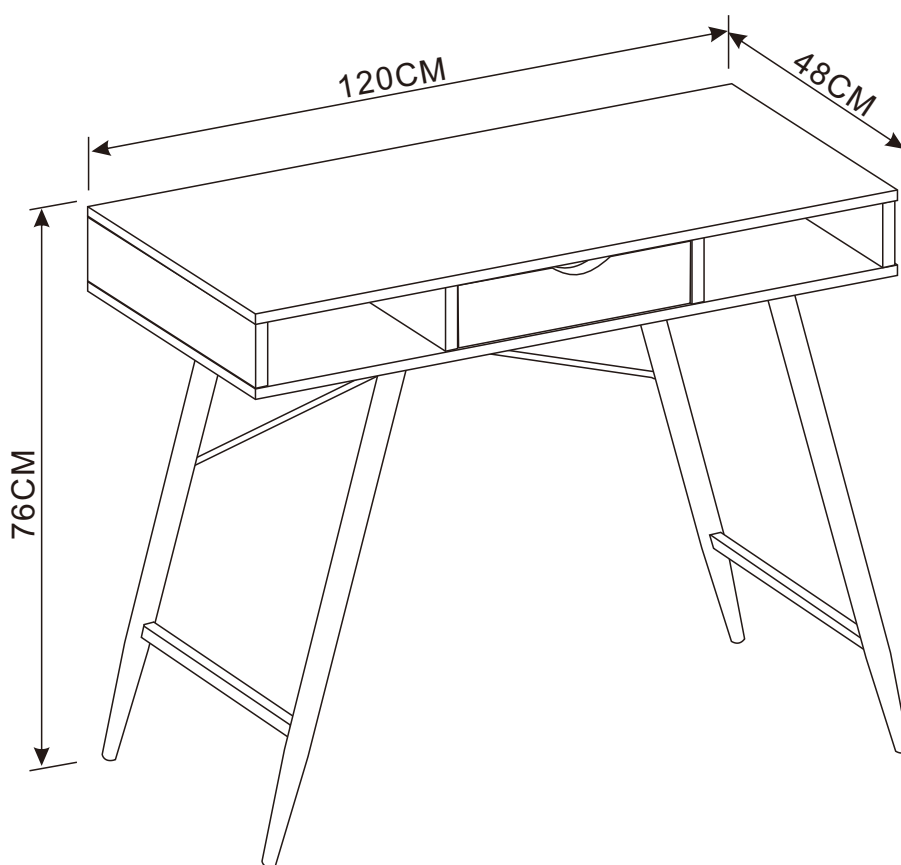


Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.  
For any assistance with assembly or for missing parts please  
phone Amart Furniture Ewing Road, Customer Service Free call 1800 791 390


# PRE-ASSEMBLY PREPARATION

## BEFORE YOU START:


1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

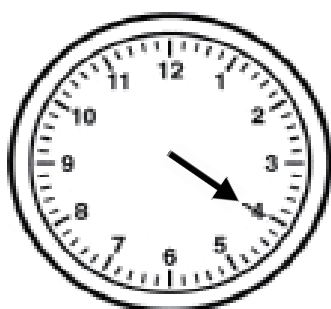

**ALLOW 20 MINUTES**

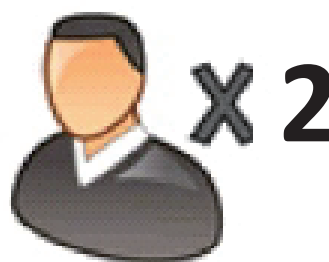


**PEOPLE REQUIRED**

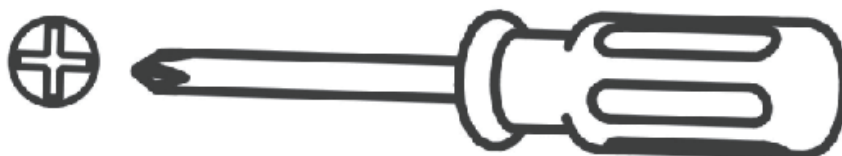

**ADDITIONAL TOOLS REQUIRED**

## **! WARNING**

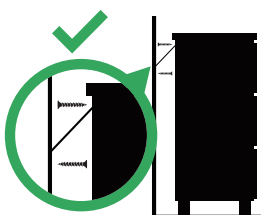

### **Children have died from furniture tipover.**

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low

**NEVER put a TV on this furniture**




**This is a permanent label.  
Do not remove!**


## SAFETY BRACKETS INSTRUCTIONS

1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

### HARDWARE



Metal x 1




Wall Nut x 1




Screw x 1

Wall

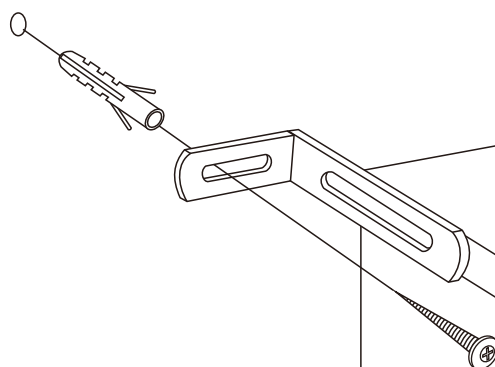













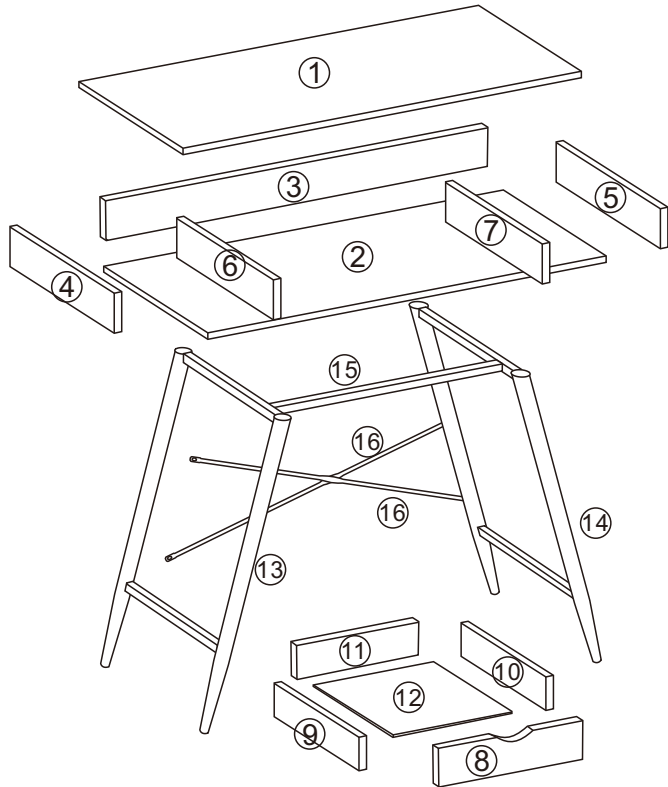


Back Side


# PARTS LIST



1	Top panel	9	Drawer Left Panel
2	Bottom Panel	10	Drawer Right Panel
3	Back Panel	11	Drawer Back Panel
4	Left Side Panel	12	Bottom Drawer Panel
5	Right Side Panel	13	Left Metal Frame
6	Left Middle Panel	14	Right Metal Frame
7	Right Middle Panel	15	Metal Tube
8	Front Drawer Panel	16	Metal Tube


<b>A</b>  Bolt  M6mm 19pcs	<b>B1</b>  Bolt M6X30mm 6pcs	<b>B2</b>  Bolt M6X25mm 4pcs	<b>C</b>  Screw ST3. 5X14mm 16pcs
<b>D</b>  Screw ST3. 5X25mm 2pcs	<b>E</b>  E1 E2 Drawer Runner 2pcs	<b>F</b>  Screw ST5X50mm 15pcs	<b>G</b>  Bolt M4X25mm 1pc
<b>H</b>  Nut M4mm 1pc	<b>I</b>  Turnbuckle M6mm 4pcs	<b>J</b>  Wood Dowel 8X30mm 16pcs	<b>K</b>  Screw ST4X25mm 2pcs
<b>L</b>  Wall Nut 2pcs	<b>M</b>  Metal 2pcs		

## STEP 1

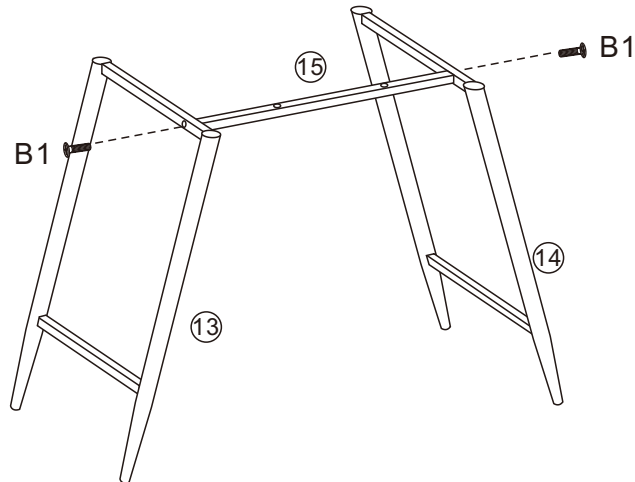


Assemble metal tube (15) to left metal frame (13) and right metal frame (14) using (B1).

## STEP 2

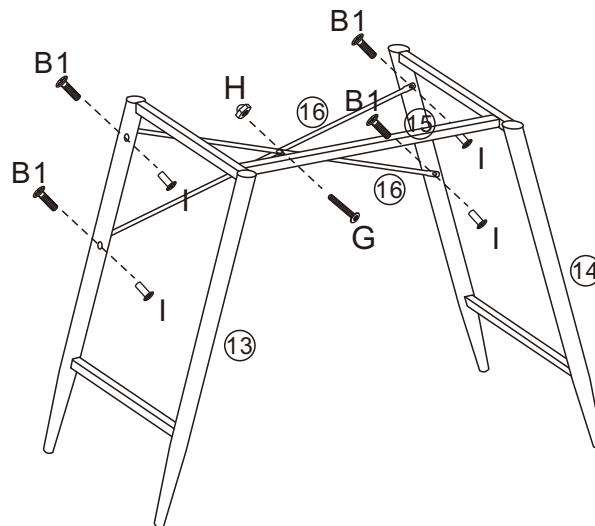


Assemble metal tube (16) to left metal frame (13) and right metal frame (14) using (B1). Then connect metal tube (15) to left metal frame (13) and right metal frame (14) using bolt (G) and nut (H).

## STEP 3

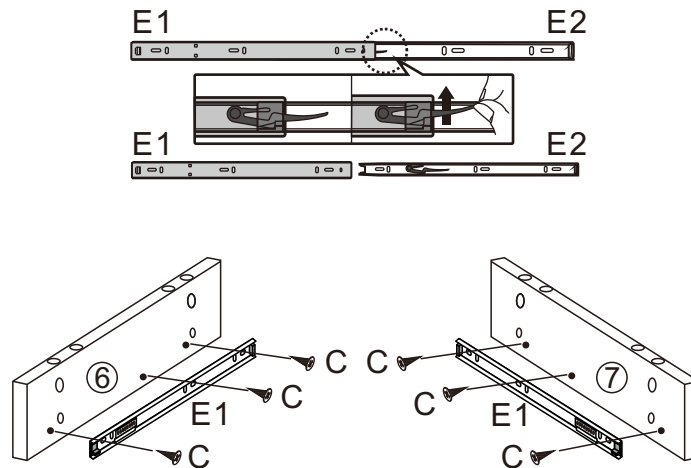


Assemble drawer runner (E1) to left middle panel (6) and right middle panel (7) using screw (C).

## STEP 4

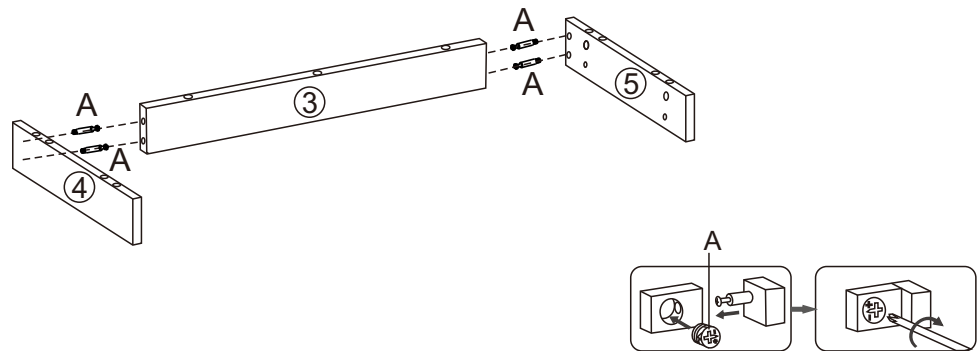


Assemble back panel (3) to left side panel (4) and right side panel (5) using bolt (A).

## STEP 5

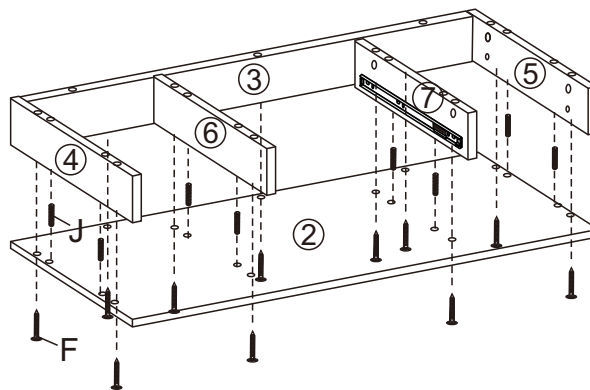


Assemble back panel (3), left side panel (4), right side panel (5), left middle panel (6), right middle panel (7) to bottom panel (2) using screw (F) and bolt (G).

## STEP 6

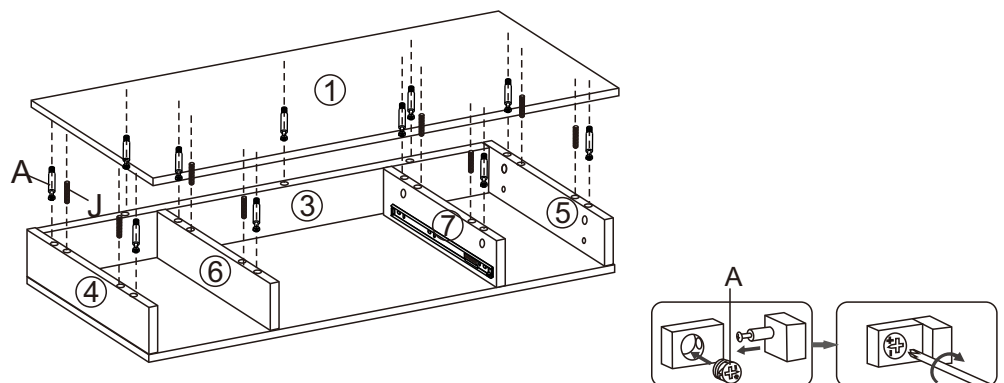


Assemble back panel (3), left side panel (4), right side panel (5), left middle panel (6), right middle panel (7) to top panel (1) using bolt (A) and screw (F).

## STEP 7

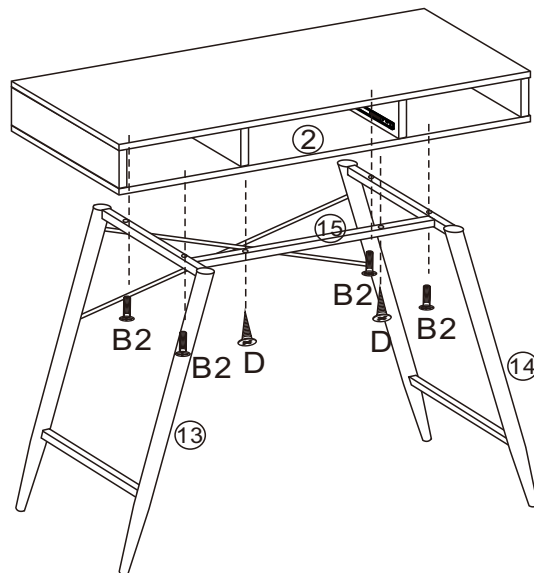


Assemble bottom panel (2) to left metal frame (13) and right metal frame (14) and metal tube (15) using bolt (B2) and screw (D).

## STEP 8

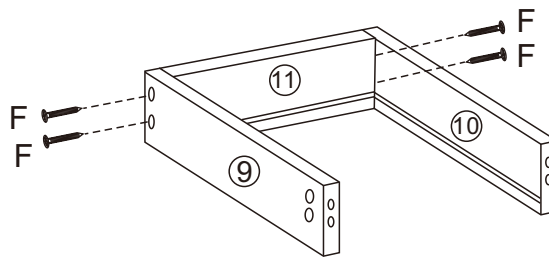


Assemble drawer back panel (11) to drawer left panel (9) and drawer right panel (10) using screw (F).

## STEP 9

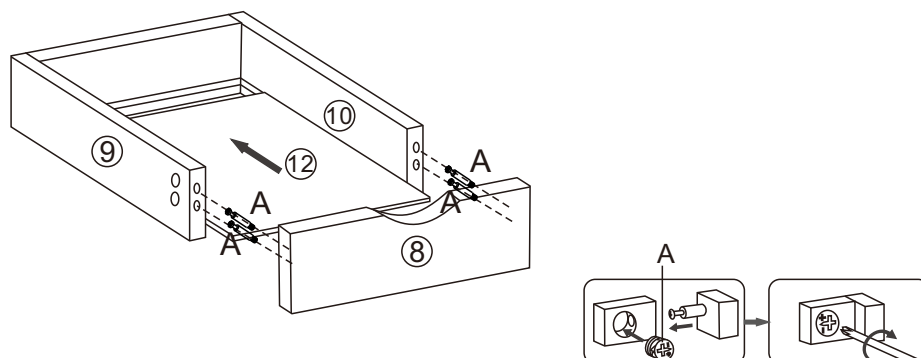


Insert bottom drawer panel (12) to drawer left panel (9) and drawer right panel (10), then assemble front drawer panel (8) to drawer left panel (9) and drawer right panel (10) using bolt (A).

## STEP 10

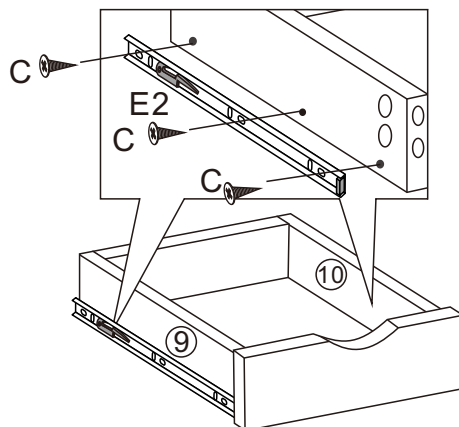


Assemble drawer runner (E2) to drawer left panel (9) and drawer right panel (10) using screw (C).

## STEP 11

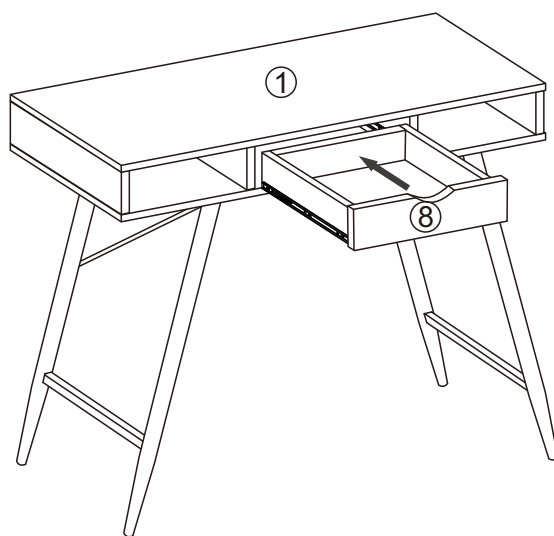

Insert drawer (8).


## STEP 12

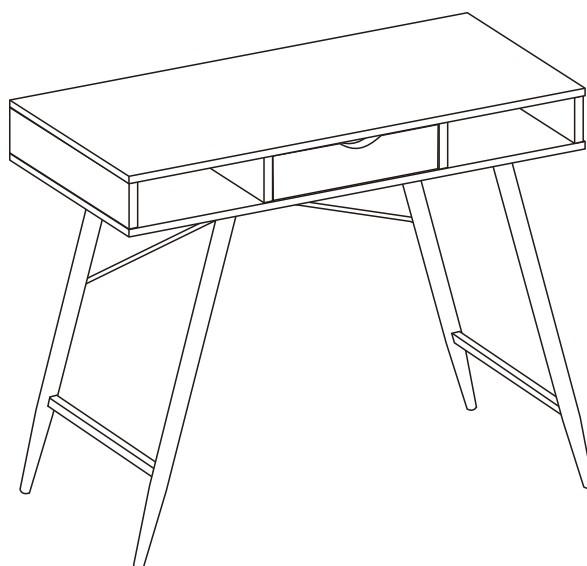

Assemble is completely.



## STEP 13

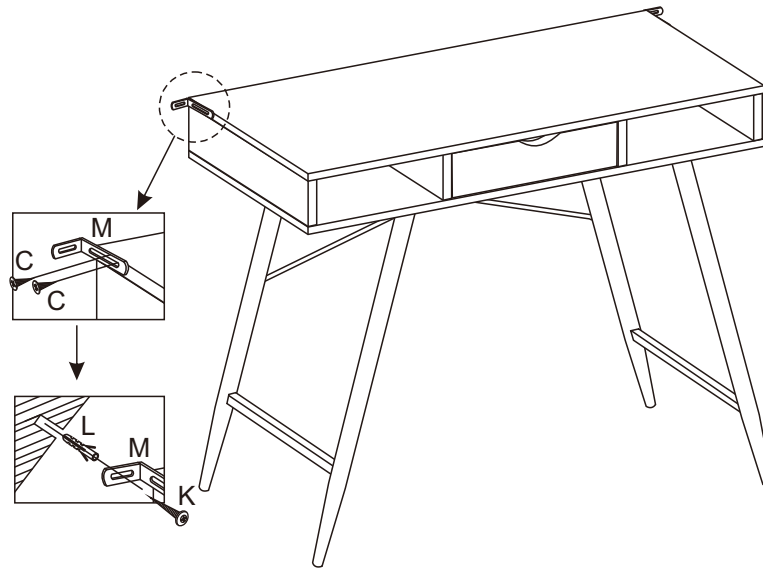

Insert wall nut (L) to the wall, assemble metal (M) to top panel (1) using screw (C), then connect metal (M) and wall nut (L) using screw (K).

## CARE AND MAINTENANCE

A multi-step finish is applied to all of our furniture, but all wood comes from nature. Because of this, there will be natural variations in surface texture and grain like knots, mineral streaks and sap runs that may affect the finish. These differences in character are not defects, but distinctions that make each piece of furniture unique.

Following these steps for basic care should protect your investment for years to come..

Dust frequently with a clean damp lint-free cloth. This will help remove abrasive build up which can damage a finish over time.

Do not place hot objects on any furniture surface. Always use a hot plate or placemat.

Laminate and lacquer finishes on tabletops provide added scratch and heat resistance to our furniture, but they can still be damaged without proper care

Avoid exposing your furniture to strong sunlight, heat outlet, open windows or dampness.

Prolonged exposure to direct sunlight can fade the finish of your furniture, while extreme temperature and humidity changes can cause cracking or splitting

Do not expose your furniture to any liquids. Never allow water to sit on your furniture. Alcohol, nail polish and perfume are also dangerous as they will dissolve the lacquer finish on contact and may require professional repairs

Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of placemats etc. may soften and mark the finish if left in contact with the furniture for a period of time.