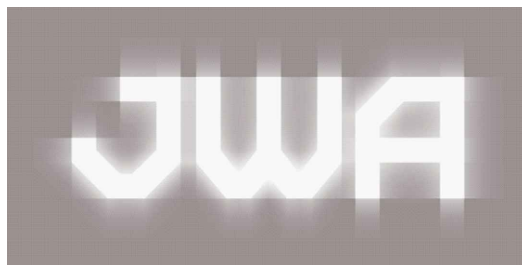
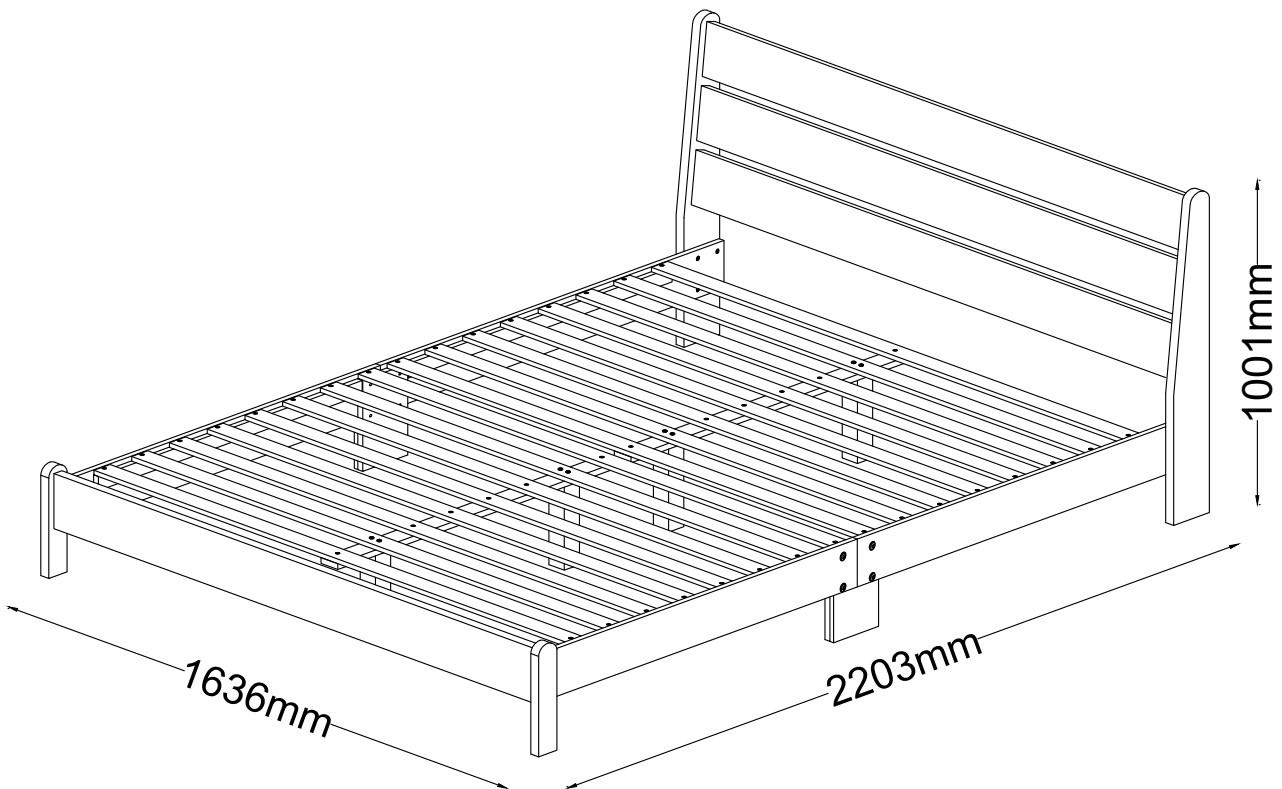


ASSEMBLY INSTRUCTION

SAXTON QUEEN BED

Item Code **82905**


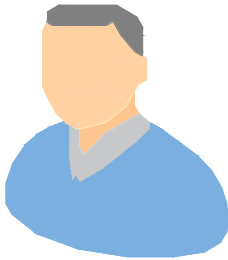
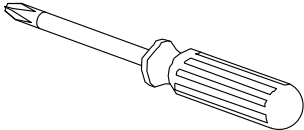


Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please refer to your receipt


PRE-ASSEMBLY PREPARATION

Before you start:

- 1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use.
- 3. Ensure that you have all required contents for complete assembly.
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6. Do not over tighten the screws and bolts as this may damage the threads.










		
Allow 1 hour	For 2 person	Additional tool required

PART LIST

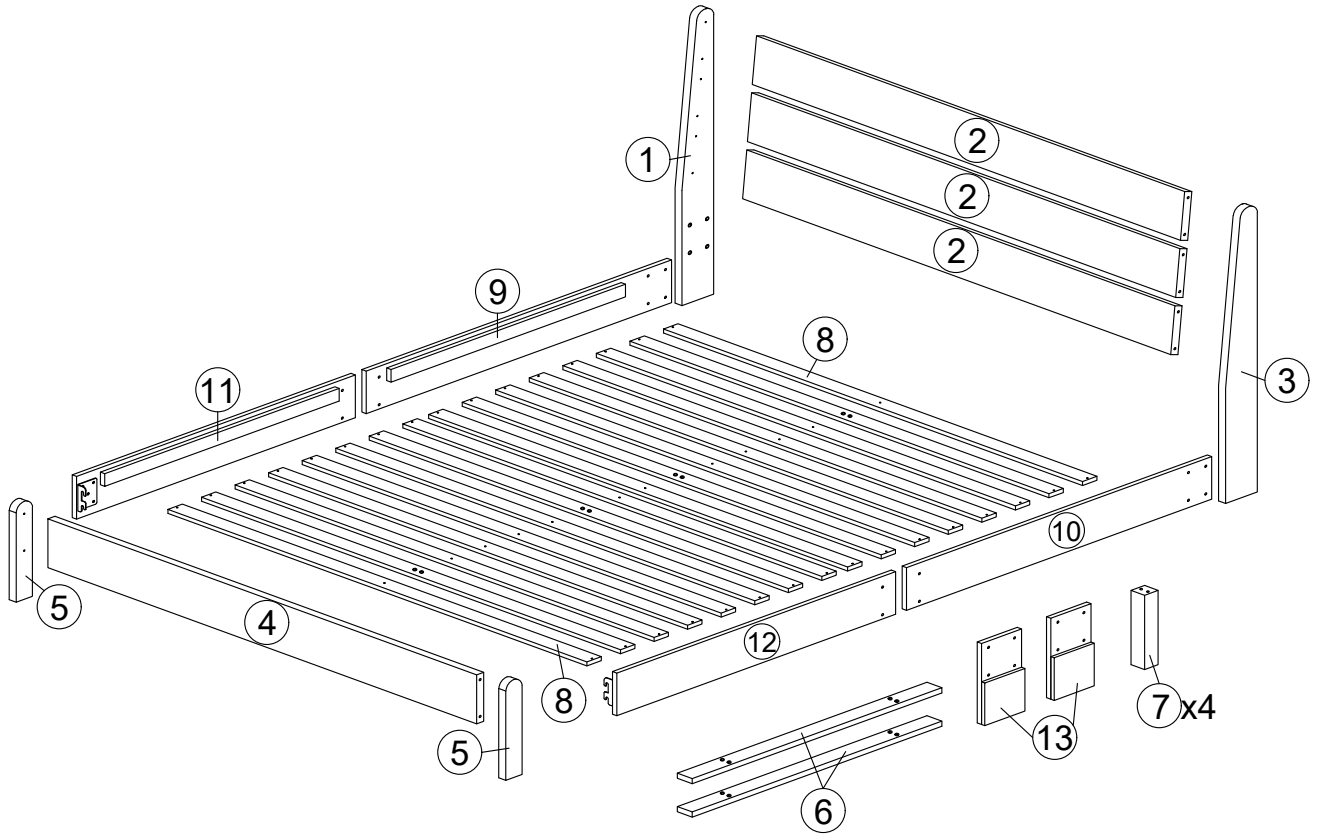


1	Bedhead Side Leg L x 1pc	8	Bed Slats x 2pcs
2	Bedhead Up Middle Panel x 3pcs	9	Bed Side Front L x 1pc
3	Bedhead Side Leg R x 1pc	10	Bed Side Front R x 1pc
4	BedEnd Middle Panel x 1pc	11	Bed Side Rear L x 1pc
5	BedEnd Side Leg L/R x 2pcs	12	Bed Side Rear R x 1pc
6	Bed Slats Center x 2pcs	13	Bed Side Legs x 2pcs
7	Bed Slats Wooden Leg x 4pcs		

PART LIST

<p>A Camlock 15mm x 16pcs</p> 	<p>B Camlock Bolts 15mm x 16pcs</p> 	<p>C M4x30mm Screw x 44pcs</p> 
<p>D M6x30mm Bolts x 8pcs</p> 	<p>E M6x40mm Bolts x 8pcs</p> 	<p>F M8x20mm Bolts x 4pcs</p> 
<p>G M8x30mm Bolts x 8pcs</p> 	<p>H M4 Allen Key x 1pc (used with M6 bolts)</p> 	<p>I M5 Allen Key x 1pc (used with M8 bolts)</p> 


Step 1:

- Prepare bedhead parts, as shown bellow.
- Thread 12x camlock bolts(B) to the side leg L(1) and side leg R(3). Fasten with the additional tool required.

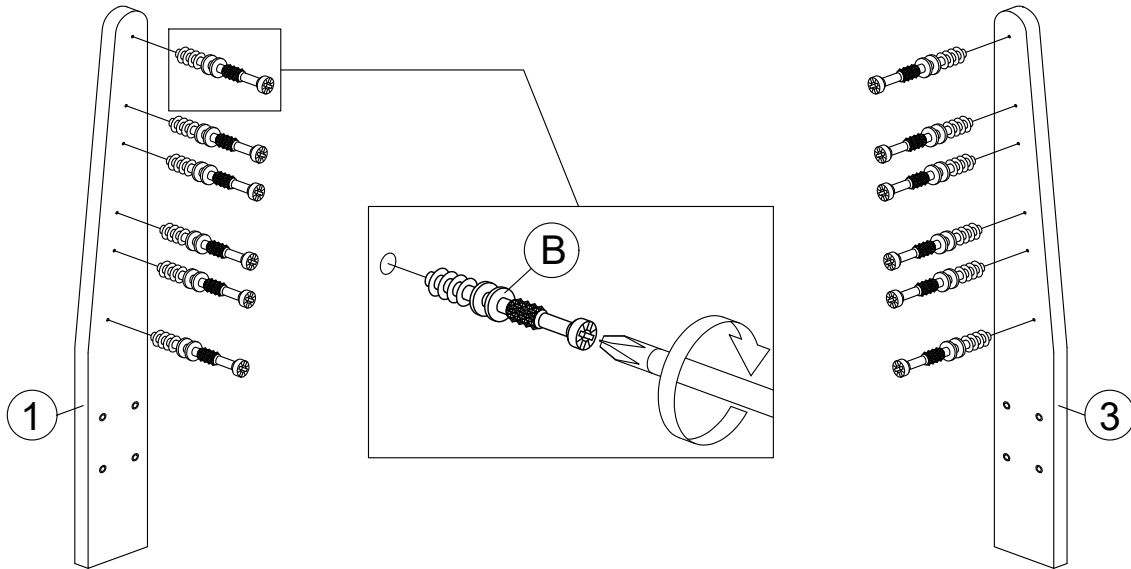


Step 2:

- Prepare bedhead parts, as shown bellow.
- Attach 12x camlocks(A) to 3x up middles(2).

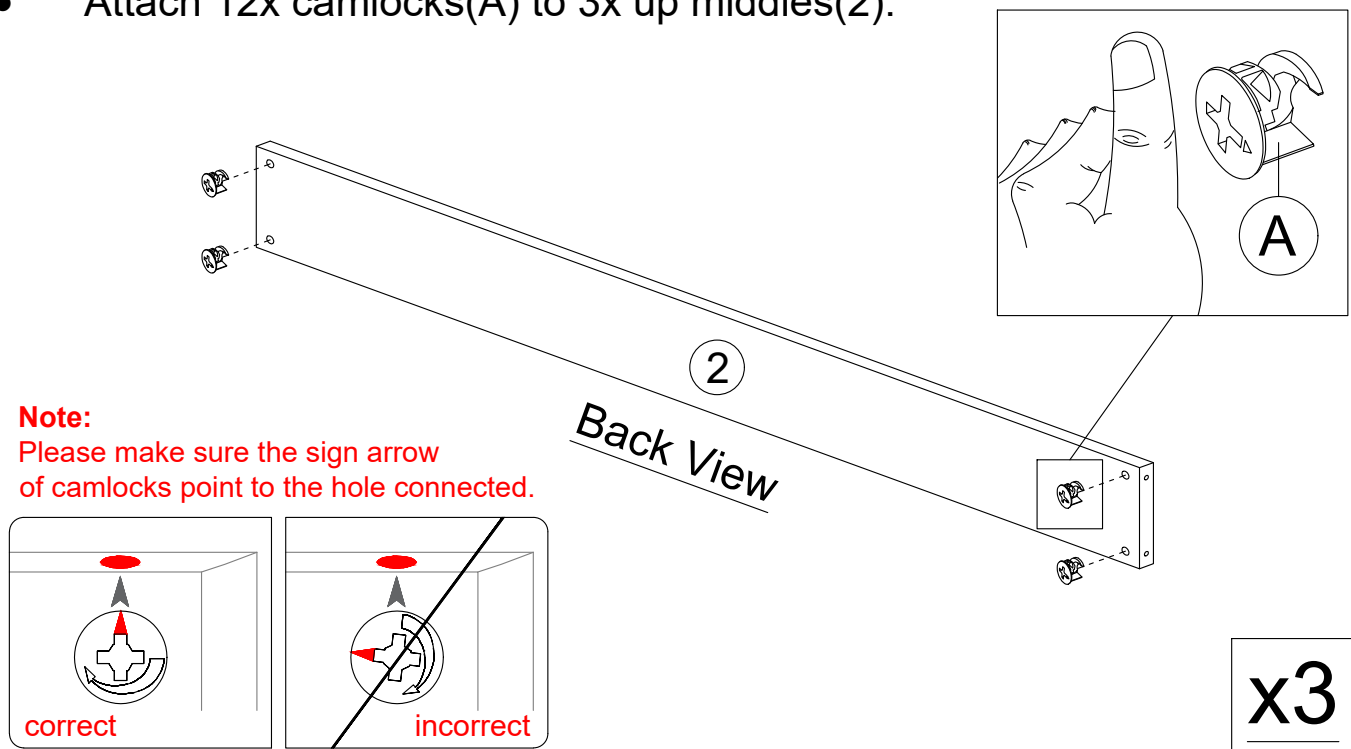


Step 3:

- Prepare bedhead parts, as shown bellow.
- Connect 3x up middles(2) to side leg L(1). Thread 2x camlocks(A) from each up middle(2). Fasten with the additional tool required.

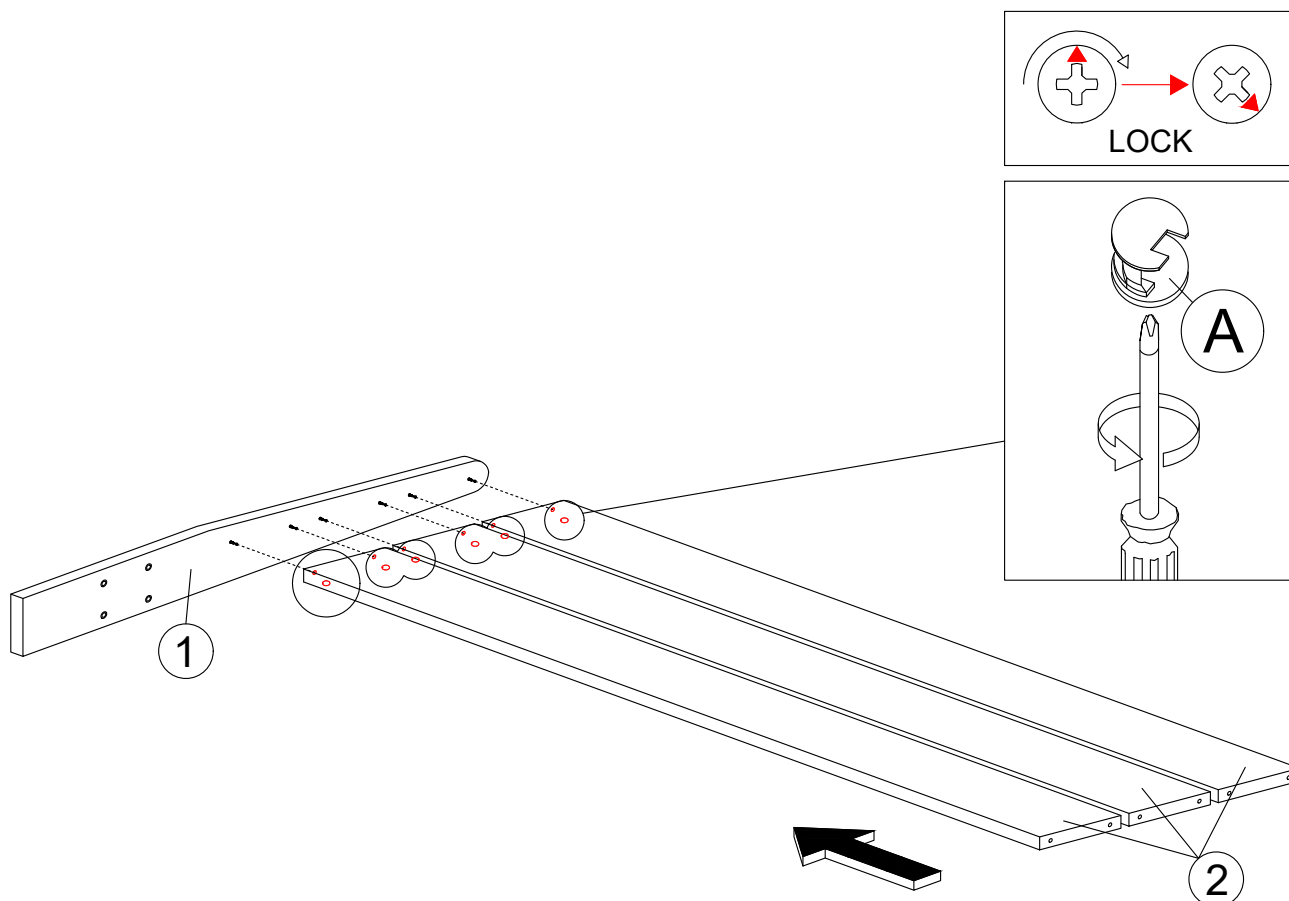


Step 4:

- Prepare bedhead parts, as shown bellow.
- Connect side leg R(3) to 3x up middles(2) . Thread 2x camlocks(A) from each panel. Fasten with the additional tool required.

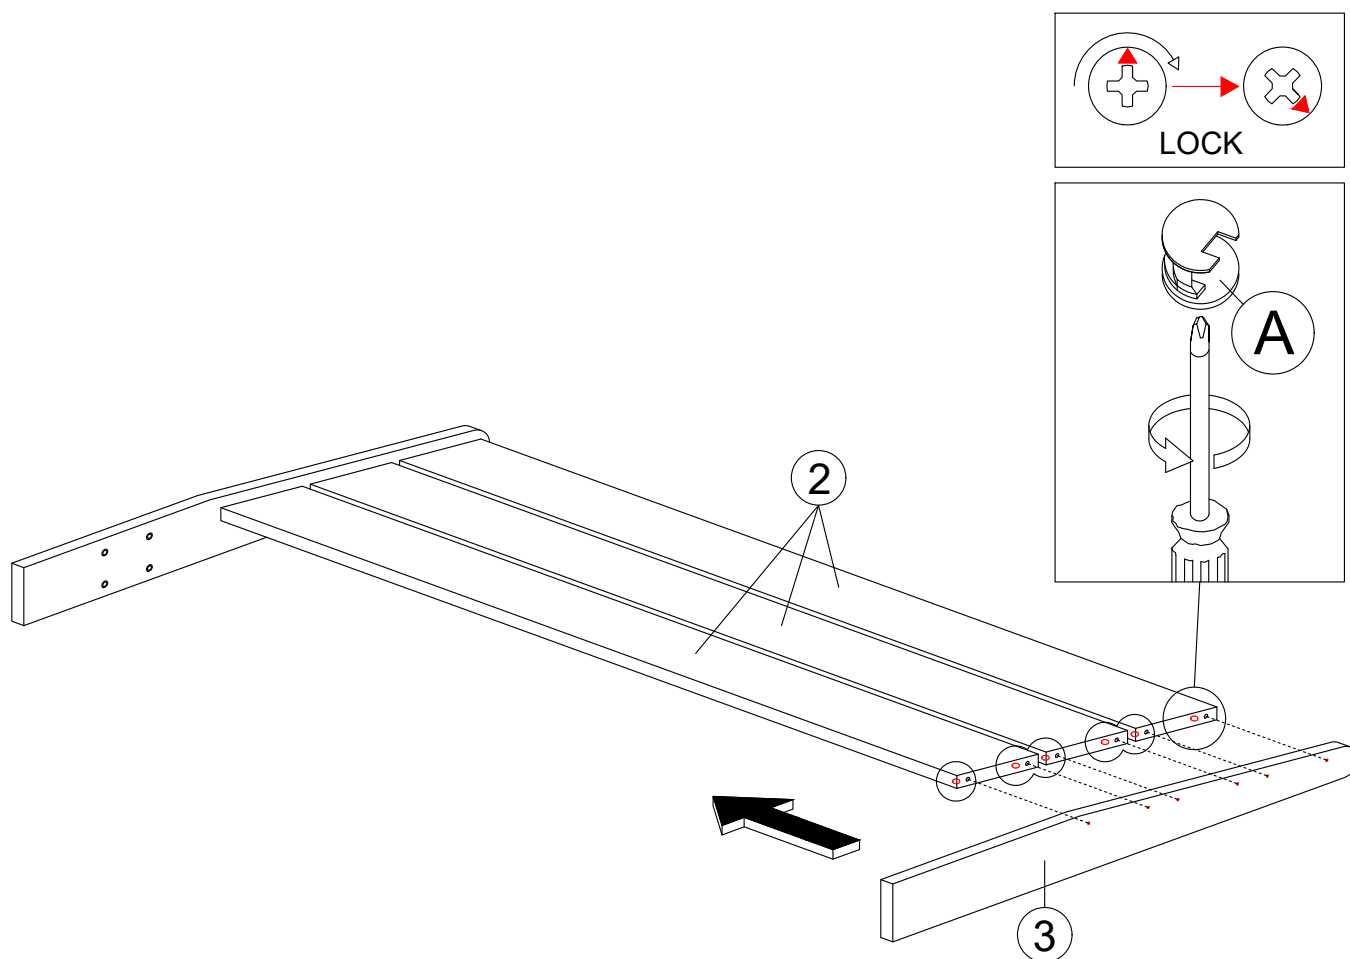


Step 5:

- Prepare bedend parts, as shown bellow.
- Thread 4x camlock bolts(B) to 2x side legs(5). Fasten with the additional tool required.

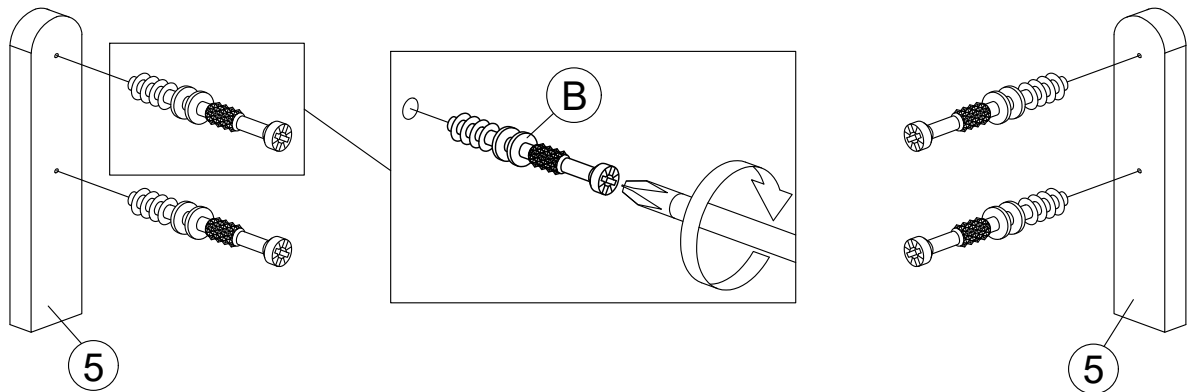


Step 6:

- Prepare bedend parts, as shown bellow.
- Attach 4x camlocks(A) to middle(4).

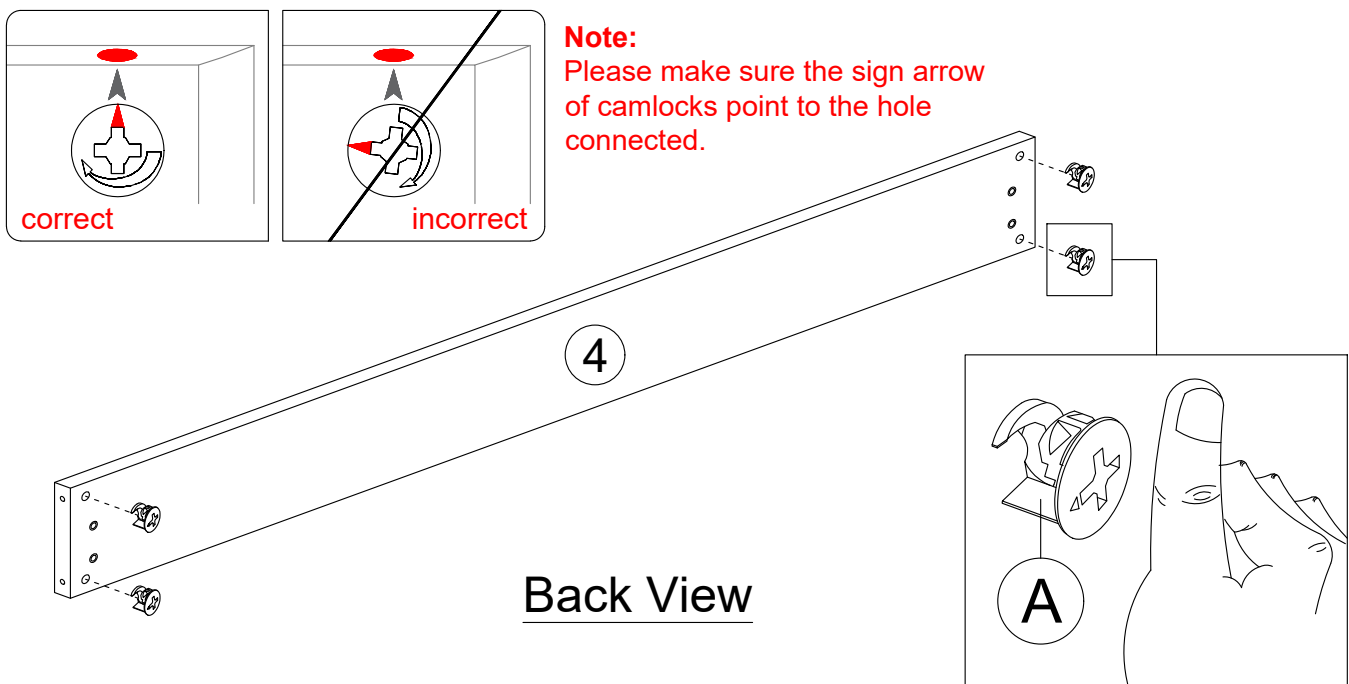

Step 7:

- Prepare bedends parts, as shown bellow.
- Connect 2x side legs(5) to middle(4). Thread 4x camlocks(A) from the middle(4). Fasten with the additional tool required.

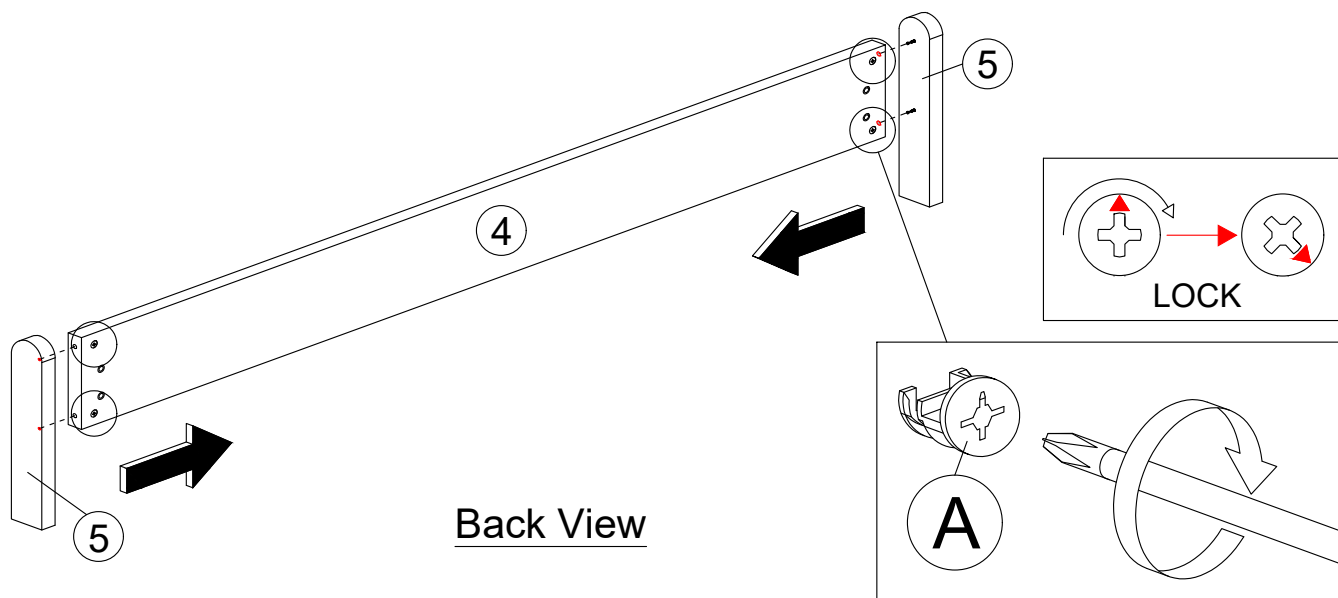


Step 8:

- Prepare bedend part, as shown bellow.
- Tighten 4x bolts(F) from the middle(4). Fasten with Alley Key(I).


Note:

Don't Tighten until end, please left
2-5mm distance for next step
assembly part

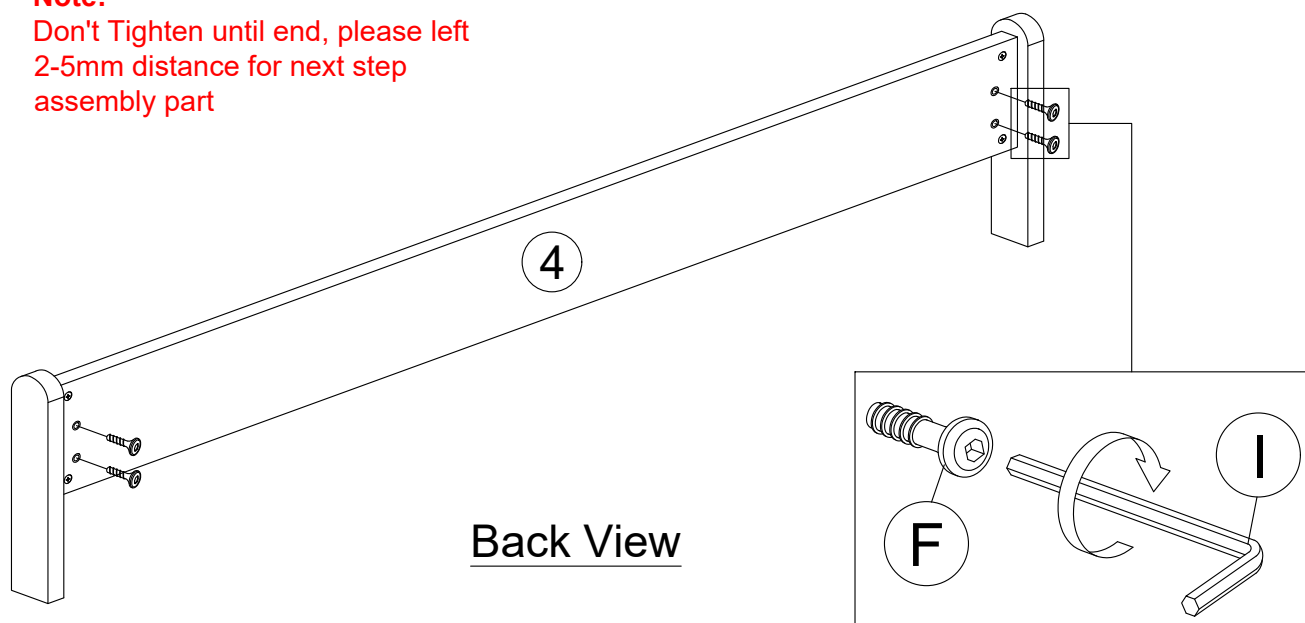


Step 9:

- Combine side leg(13) to side front L(9) and side rear L(11) by using 4x bolts(D). Fasten with Alley Key(H).
- Repeat step for the side front R(10) and side rear R(12) as shown bellow.

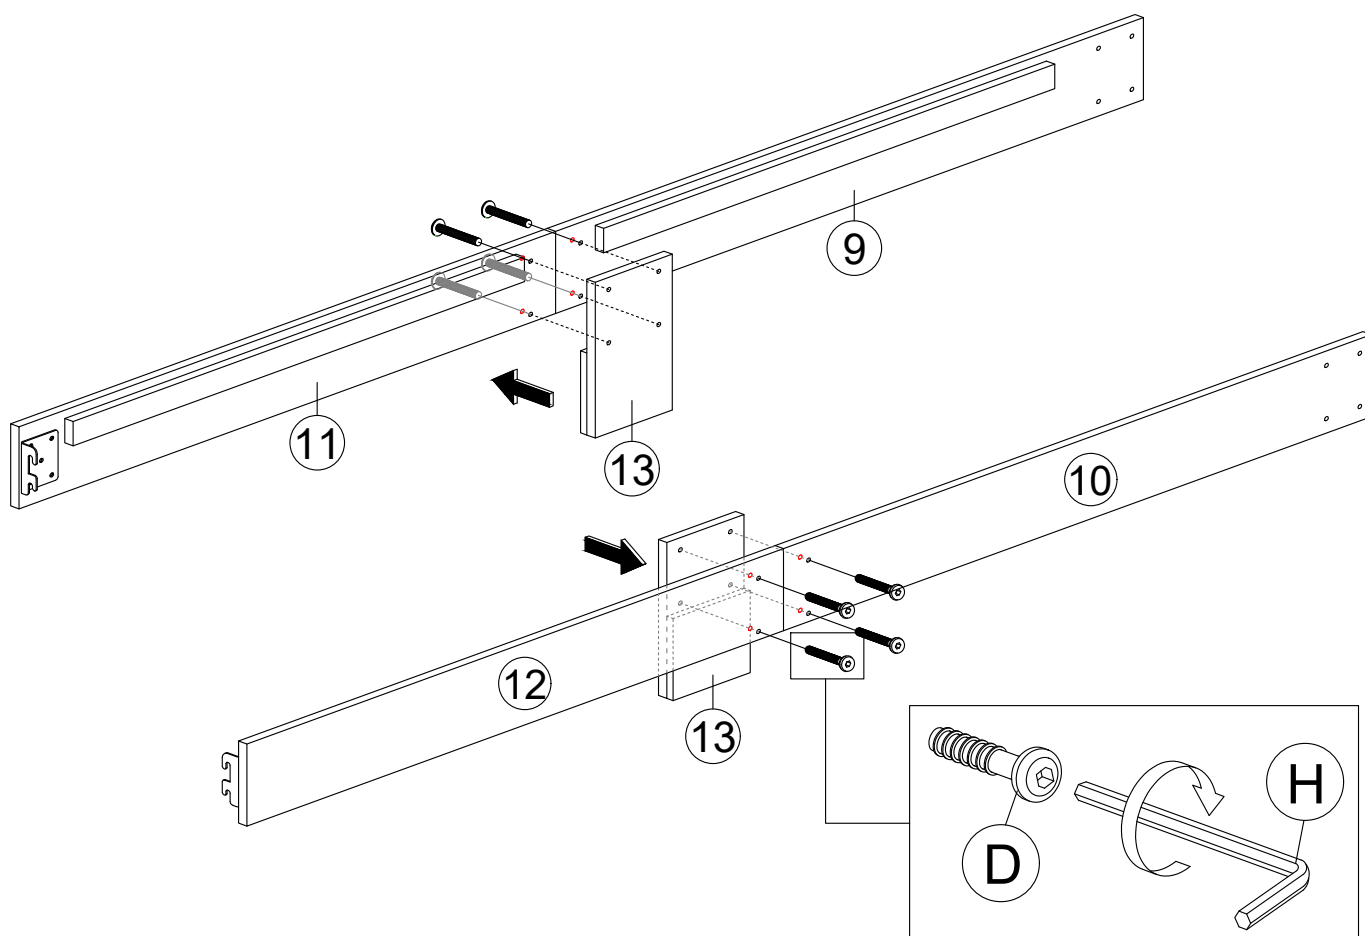



Step 10:

- Take side rear L(11) hang to the bolts(F) of bedend middle(4) that already attached. Fasten with Alley Key(I) tightly.
- Repeat the step for another side rear(12).

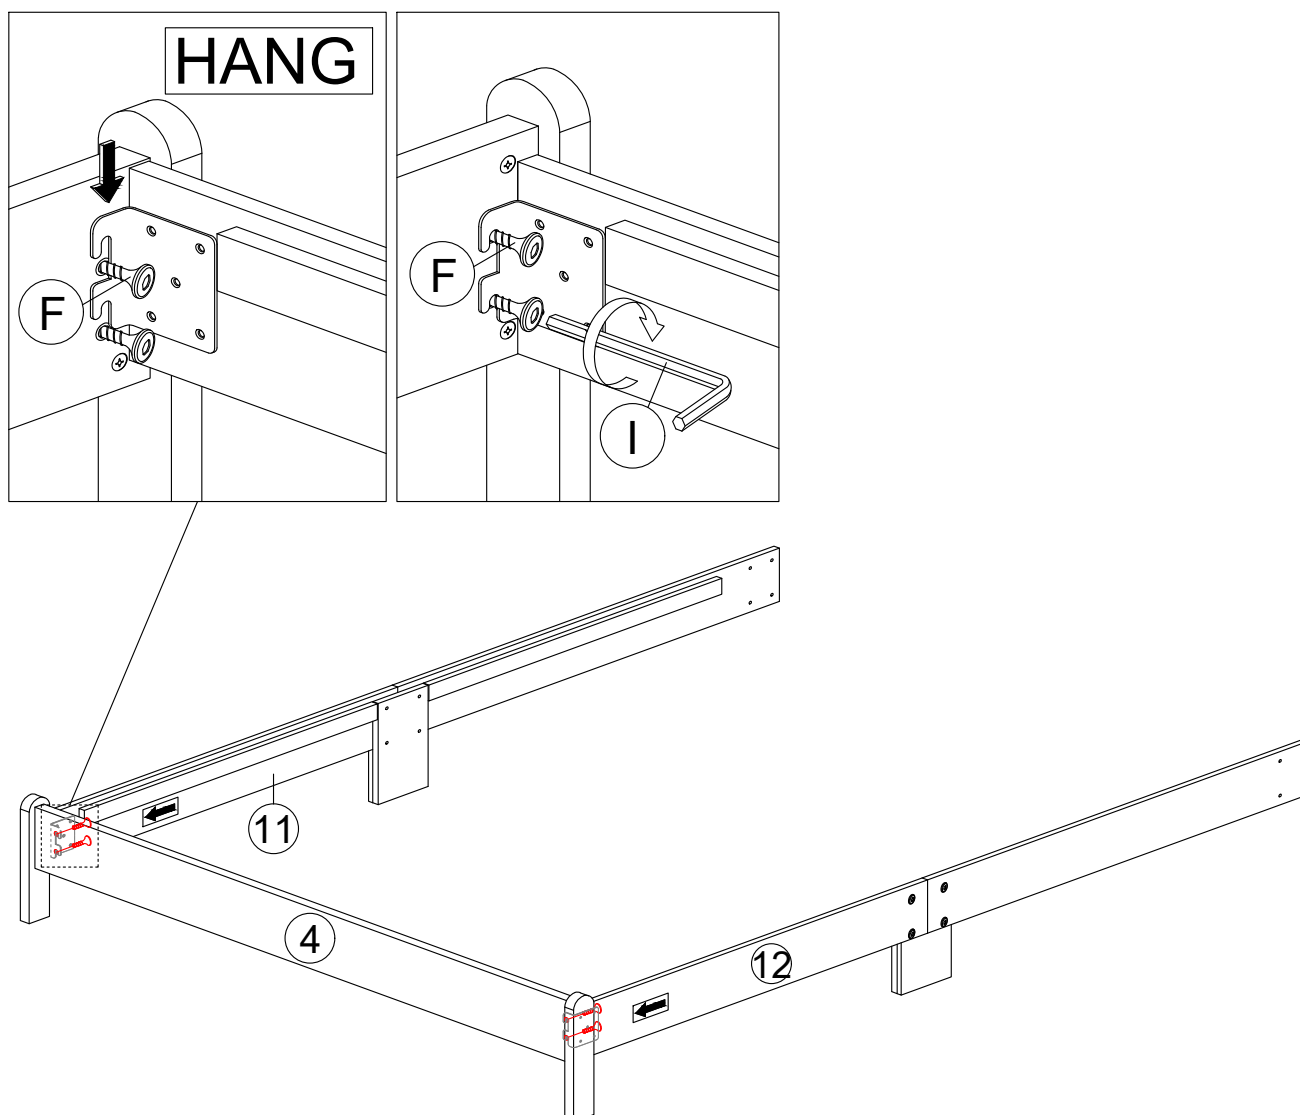


Step 11:

- Tighten 8x bolts(G) to side front L(9) and side front R(10). Fasten with Alley Key(I).

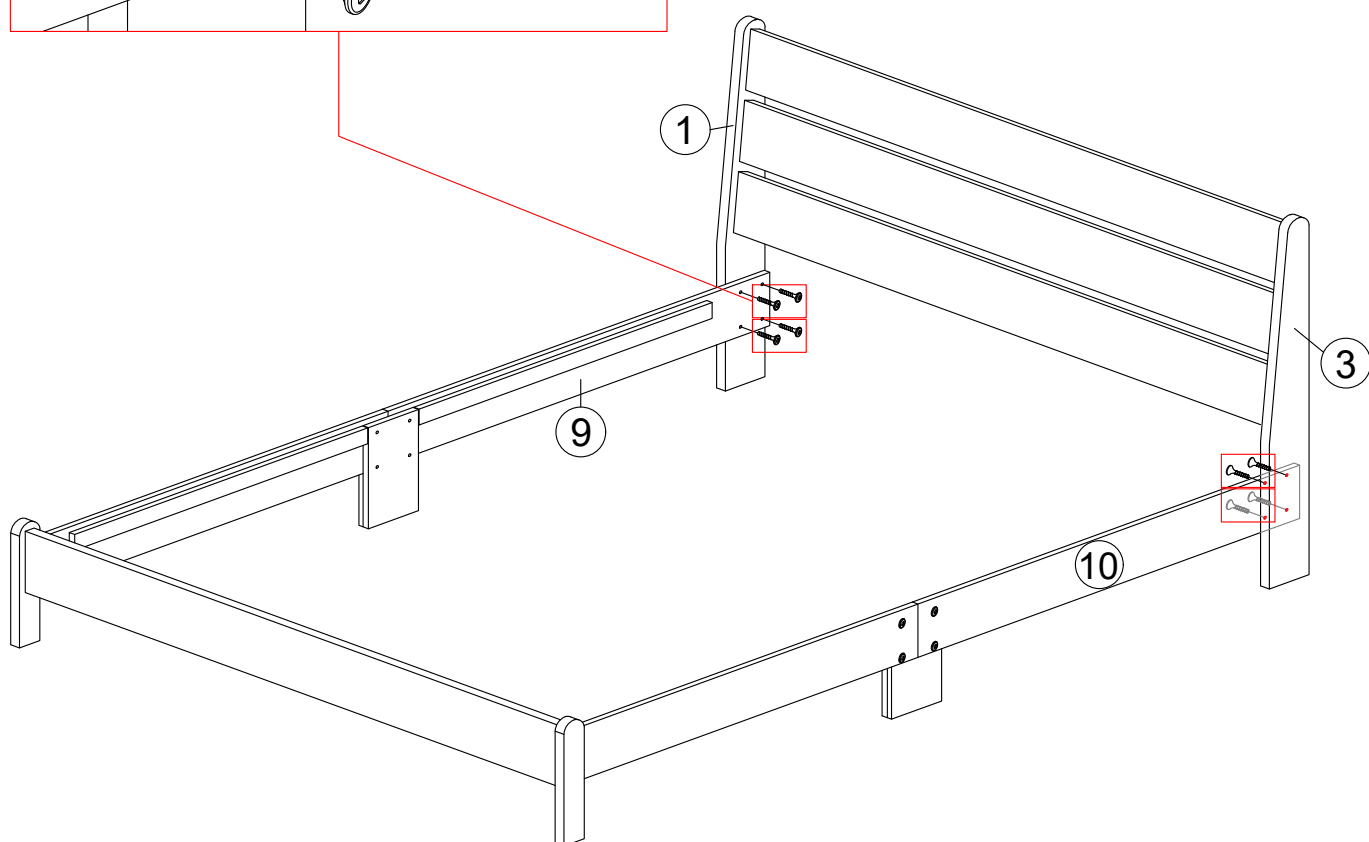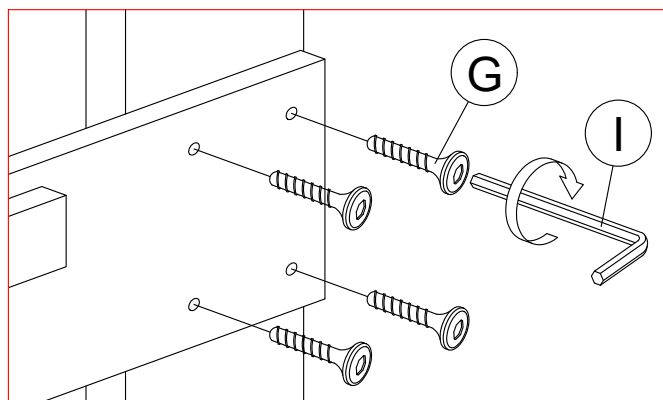

Step 12:


- Combine 2x slat legs(7), slat center(6) and bed slat(8) with 4x bolts(E). Fasten with Alley Key(H).
- Repeat step for the other slat pairs as shown bellow.

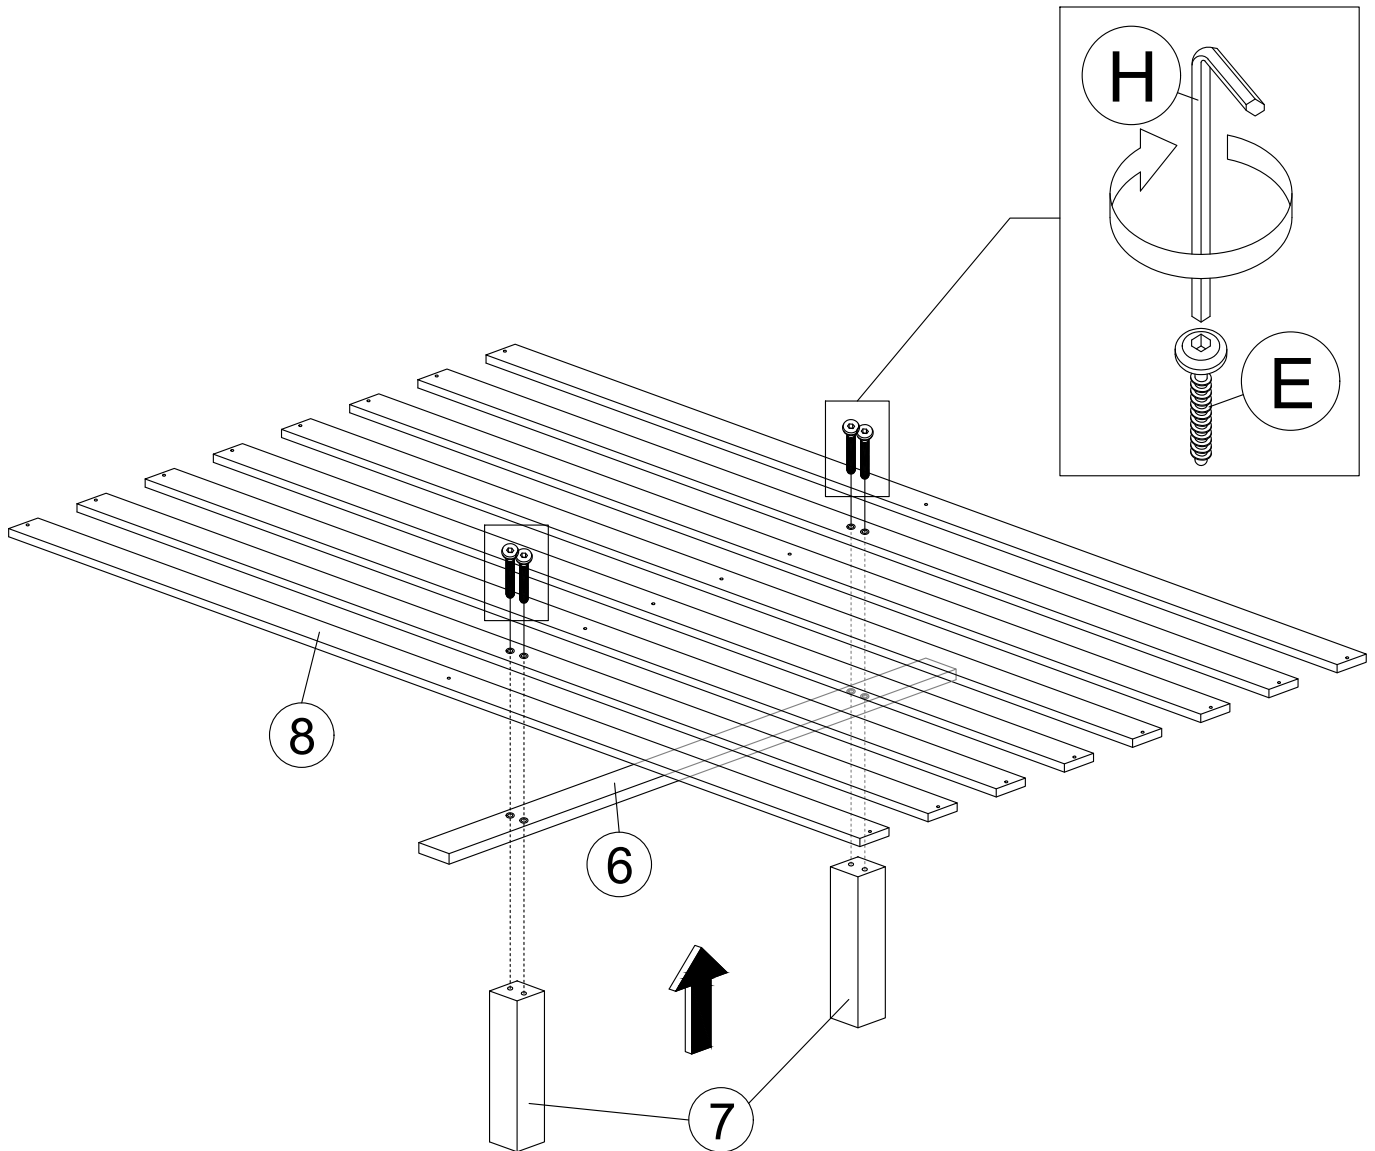


x2

Step 13:

- Attach 2x bed slats(8) to the bed as shown bellow.
- Tighten 44x screws(C) to the side and center of the slat pairs(8).
Fasten with the additional tool required.

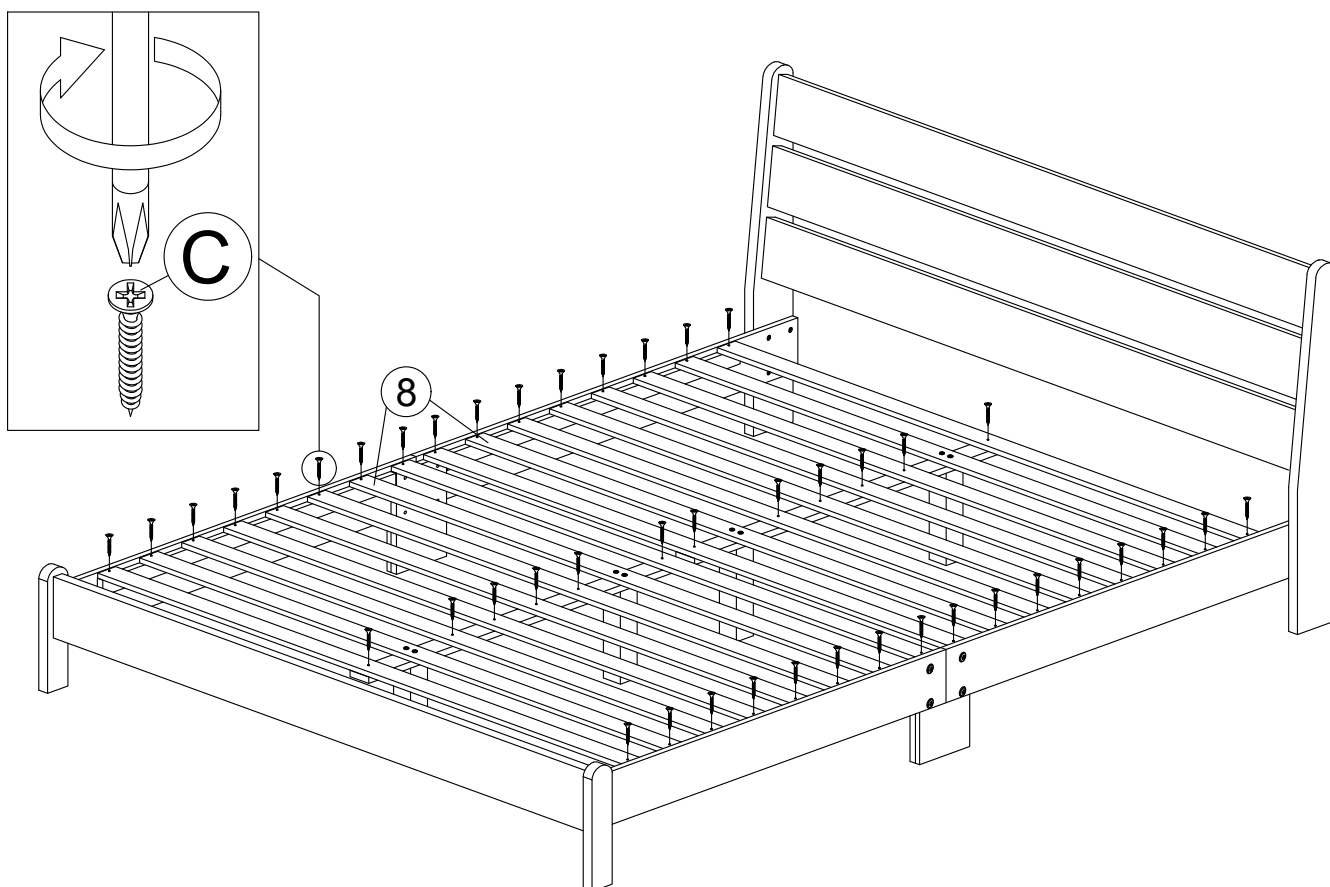

Assembly Is Completed

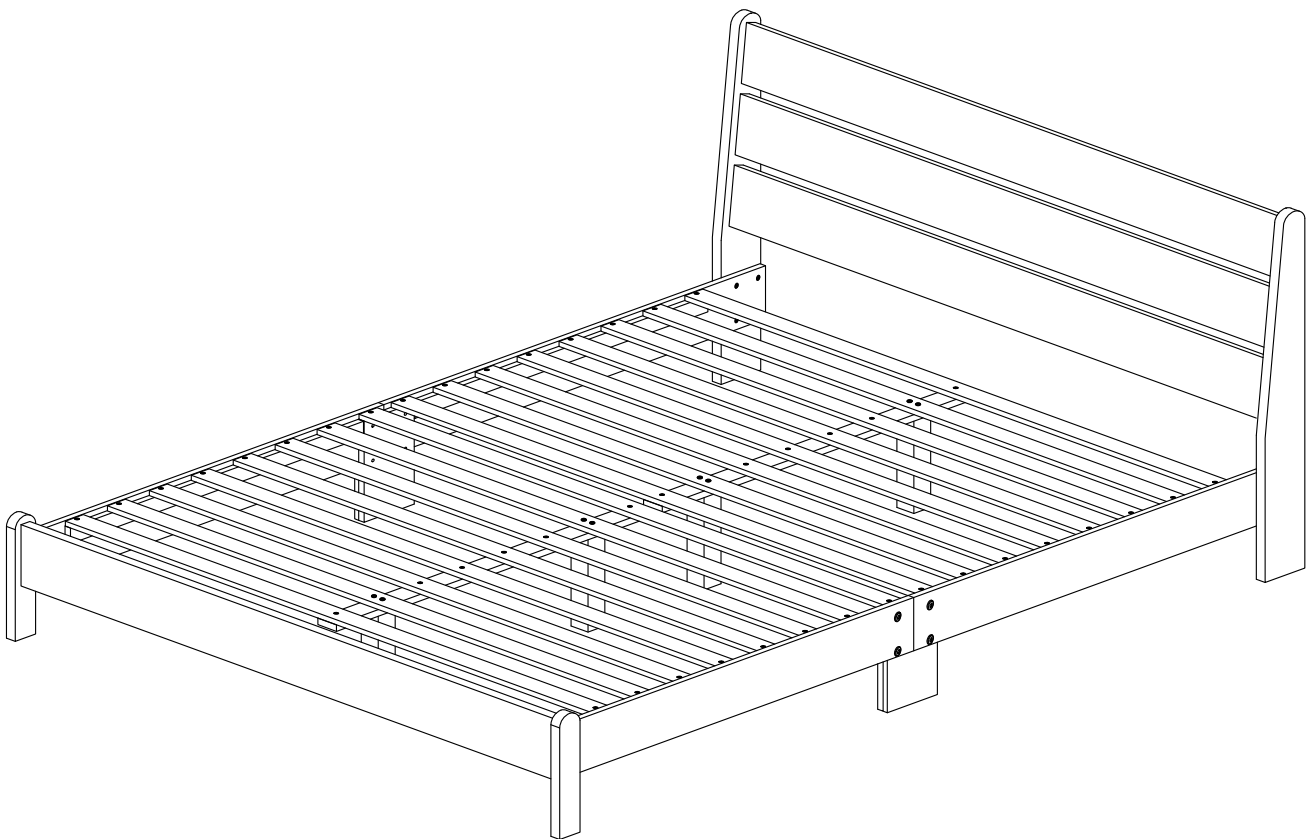

CAUTION

Always Lift Your Bed When Moving /Relocating - Do Not Drag.
Dragging Can Cause The Centre Support Legs To Bend/Break.

PRODUCT CARE:

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.