


ASSEMBLY INSTRUCTION

NICHOLSON QUEEN BED

ITEM CODE 79186

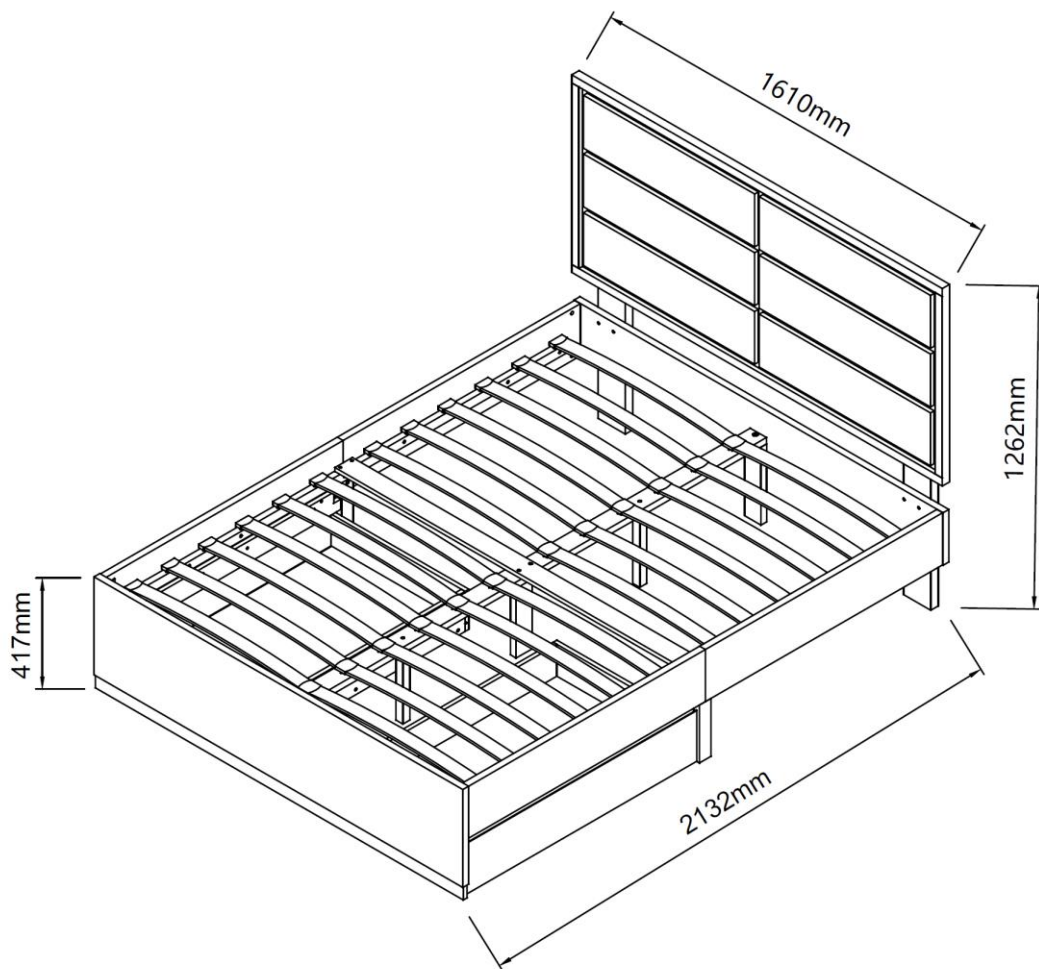





Imported by JWA Furniture Pty Ltd, Brisbane ,Qld, Australia.
For any assistance with assembly or for missing parts please refer to your receipt

PRE-ASSEMBLY PREPARATION

Before you start:


1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

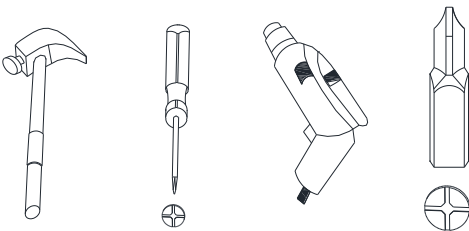	
ALLOW 90 MINUTES	2 PEOPLE REQUIRED
	
TOOLS REQUIRED	

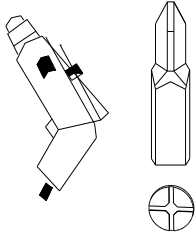


We recommend using a screwdriver to put this item together. However if you choose to use a power drill it must be used on LOW SPEED (LOW TORQUE) as too much pressure could damage the product


CAM LOCK INSTALLATION

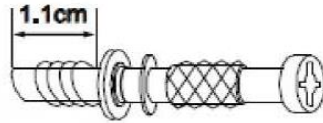


Step 1

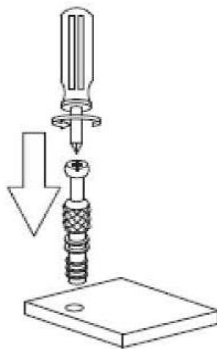


Step 2

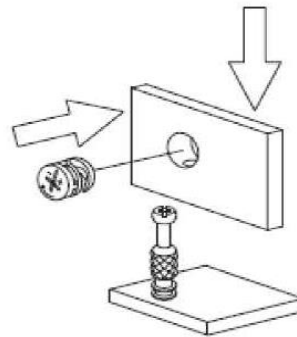

Step 3

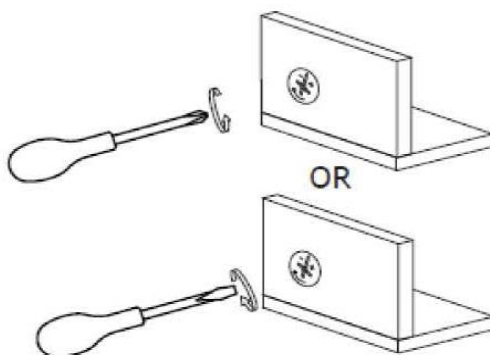


Lock









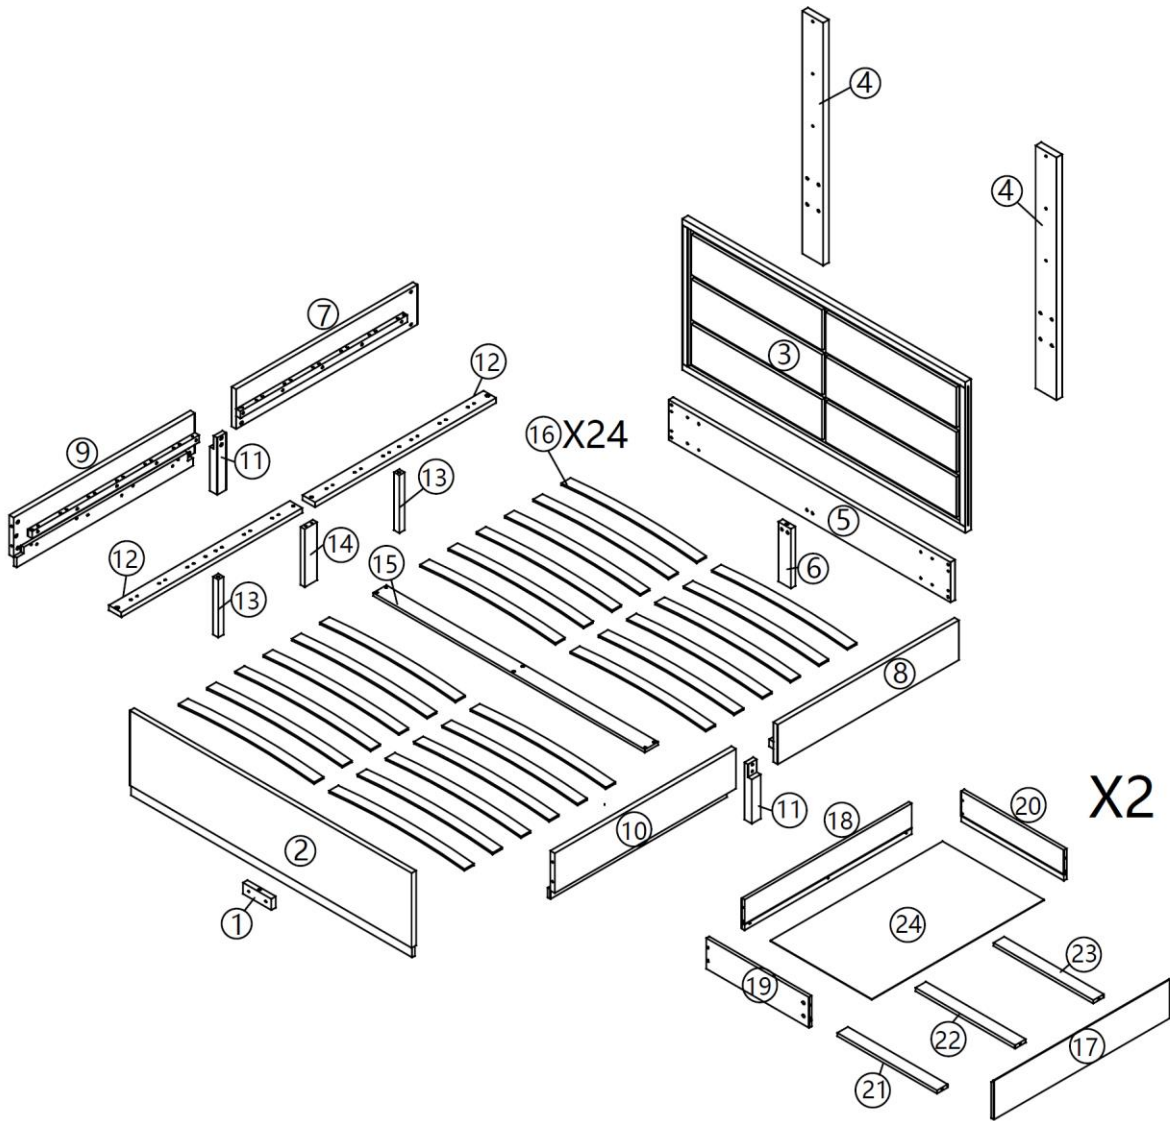







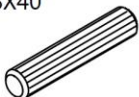
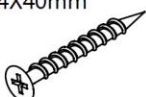



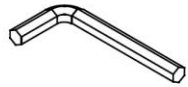

Fix cam nut into the bottom of hole then tighten it.

PARTS LIST





1	CENTRE RAIL SUPPORT BAR
2	FOOTBOARD
3	HEADBOARD
4	HEADBOARD LEG
5	HEADBOARD SUPPORT BOARD
6	HEADBOARD CENTRE SUPPORT LEG
7	SIDERAIL
8	SIDERAIL
9	SIDERAIL
10	SIDERAIL
11	SIDERAIL SUPPORT LEGS
12	CENTRE RAIL

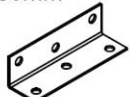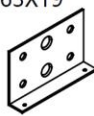13	CENTRE RAIL SUPPORT LEGS
14	CENTRE RAIL CENTRE SUPPORT LEG
15	SUPPORT BAR
16	SLATS
17	DRAWER FRONT BOARD
18	DRAWER BACK BOARD
19	DRAWER SIDE BOARD
20	DRAWER SIDE BOARD
21	DRAWER SUPPORT BAR
22	DRAWER SUPPORT BAR
23	DRAWER SUPPORT BAR
24	DRAWER BOTTOM BOARD

<p>A. $\phi 15 \times 12$</p>  <p>AX14</p>	<p>B. M6X39mm</p>  <p>BX14</p>	<p>C. $\phi 8 \times 40$</p>  <p>CX8</p>	<p>D. M4X40mm</p>  <p>DX14</p>
<p>E.</p>  <p>EX8</p>	<p>F. M3.5X14mm</p>  <p>FX16</p>	<p>G. M6X20mm</p>  <p>GX4</p>	<p>H. M6X20mm</p>  <p>HX20</p>
<p>I. M6X40mm</p>  <p>IX20</p>	<p>J.</p>  <p>JX32</p>	<p>K. M4X30mm</p>  <p>KX6</p>	<p>L. M4X20mm</p>  <p>LX4</p>
<p>M.</p>  <p>MX24</p>	<p>N.</p>  <p>NX12</p>	<p>O. L 150mm</p>  <p>OX2</p>	<p>P. L100X63X19</p>  <p>PX2</p>
<p>Q. M8X75mm</p>  <p>QX4</p>	<p>R. M8X15mm</p>  <p>RX4</p>	<p>S. M6X50mm</p>  <p>SX4</p>	<p>T. M4</p>  <p>TX1</p>
<p>U. M5</p>  <p>UX1</p>			

STEP 1:

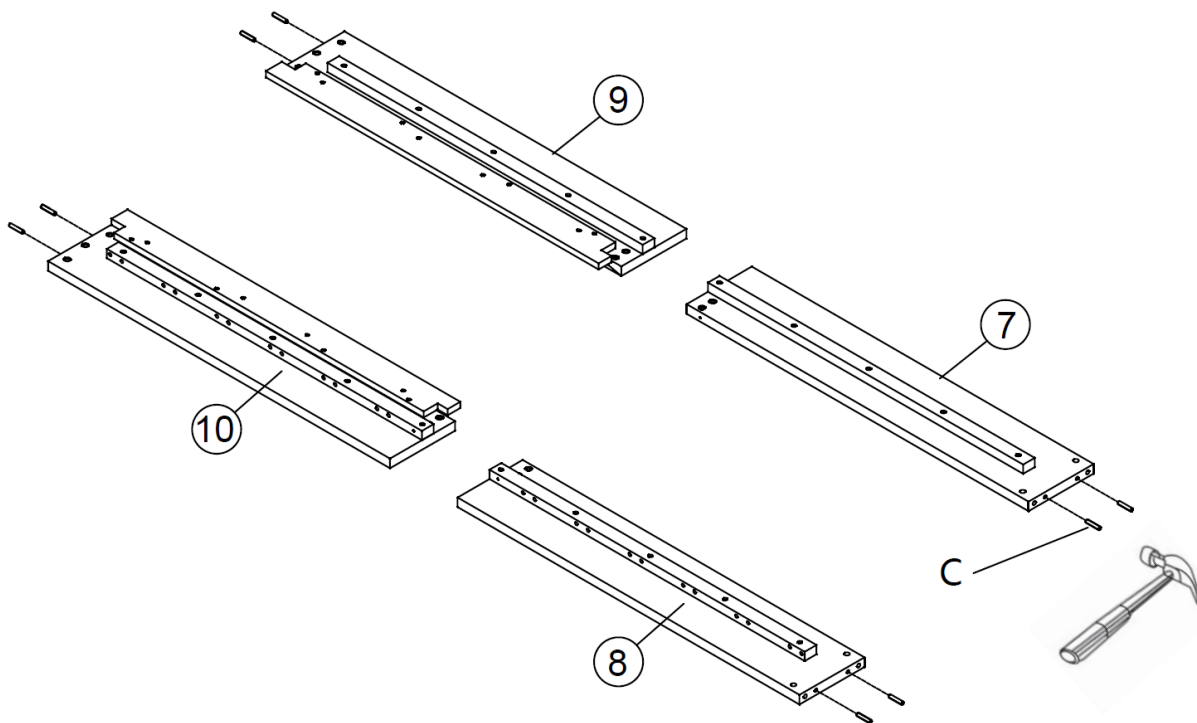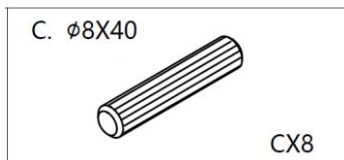

STEP 2:

H. M6X20mm




HX6

J.



JX6

O. L 150mm

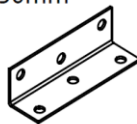


OX2

T. M4



TX1

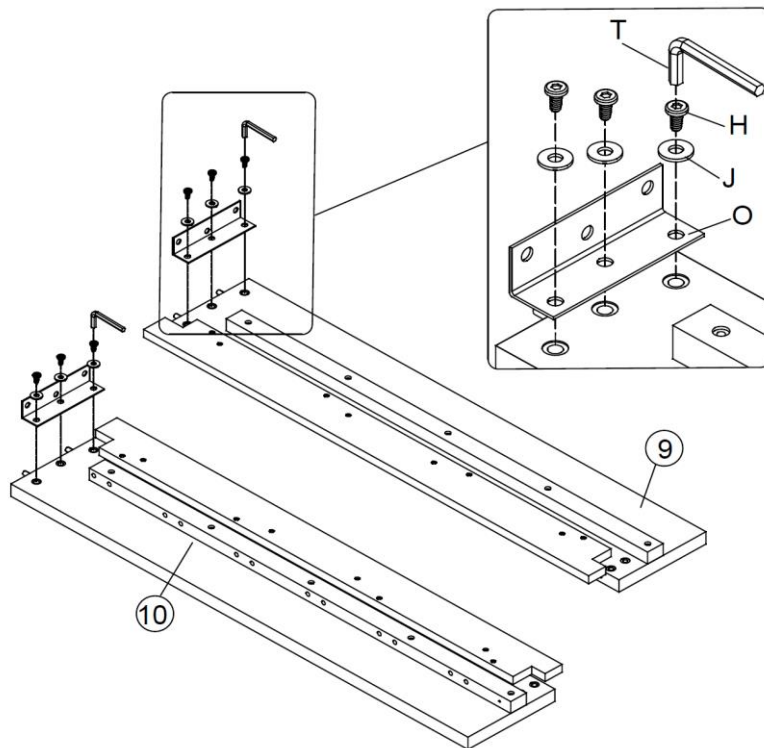


STEP 3:

G. M6X20mm




GX4

P. L100X63X19




PX2

T. M4



TX1

X2

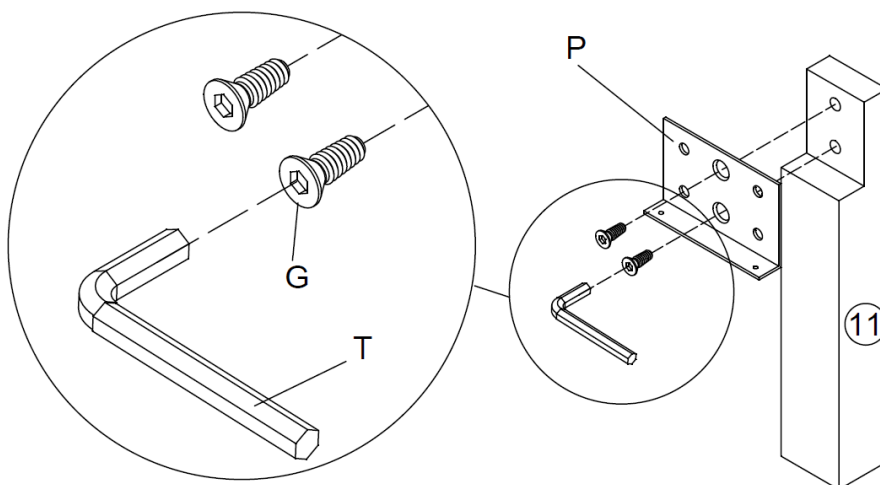


STEP 4:

H. M6X20mm




HX8

T. M4




TX1

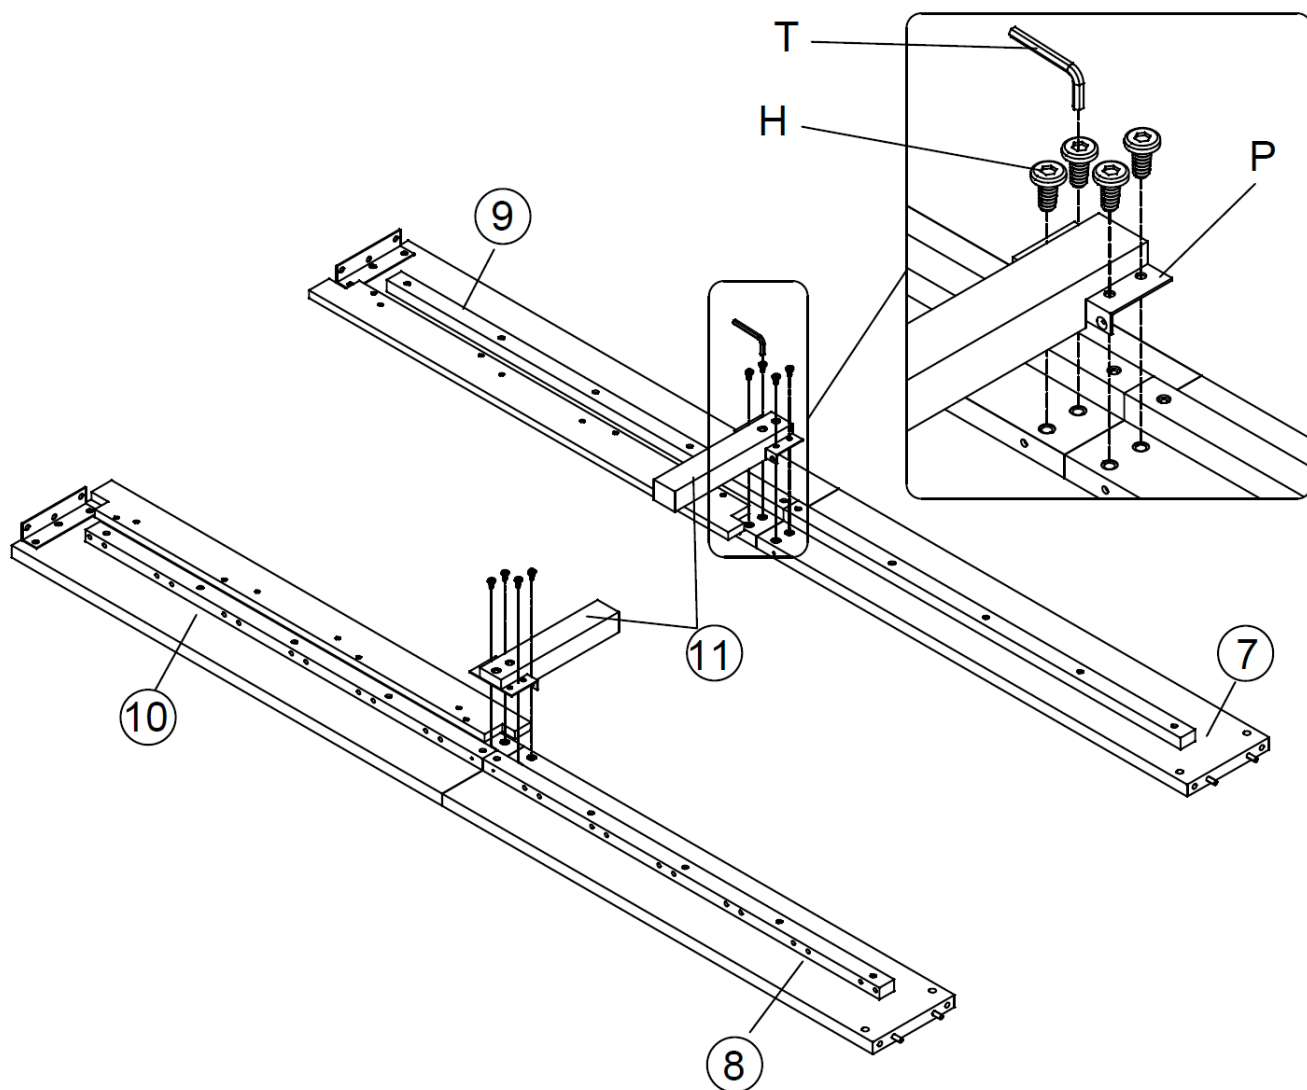


STEP 5:




L. M4X20mm

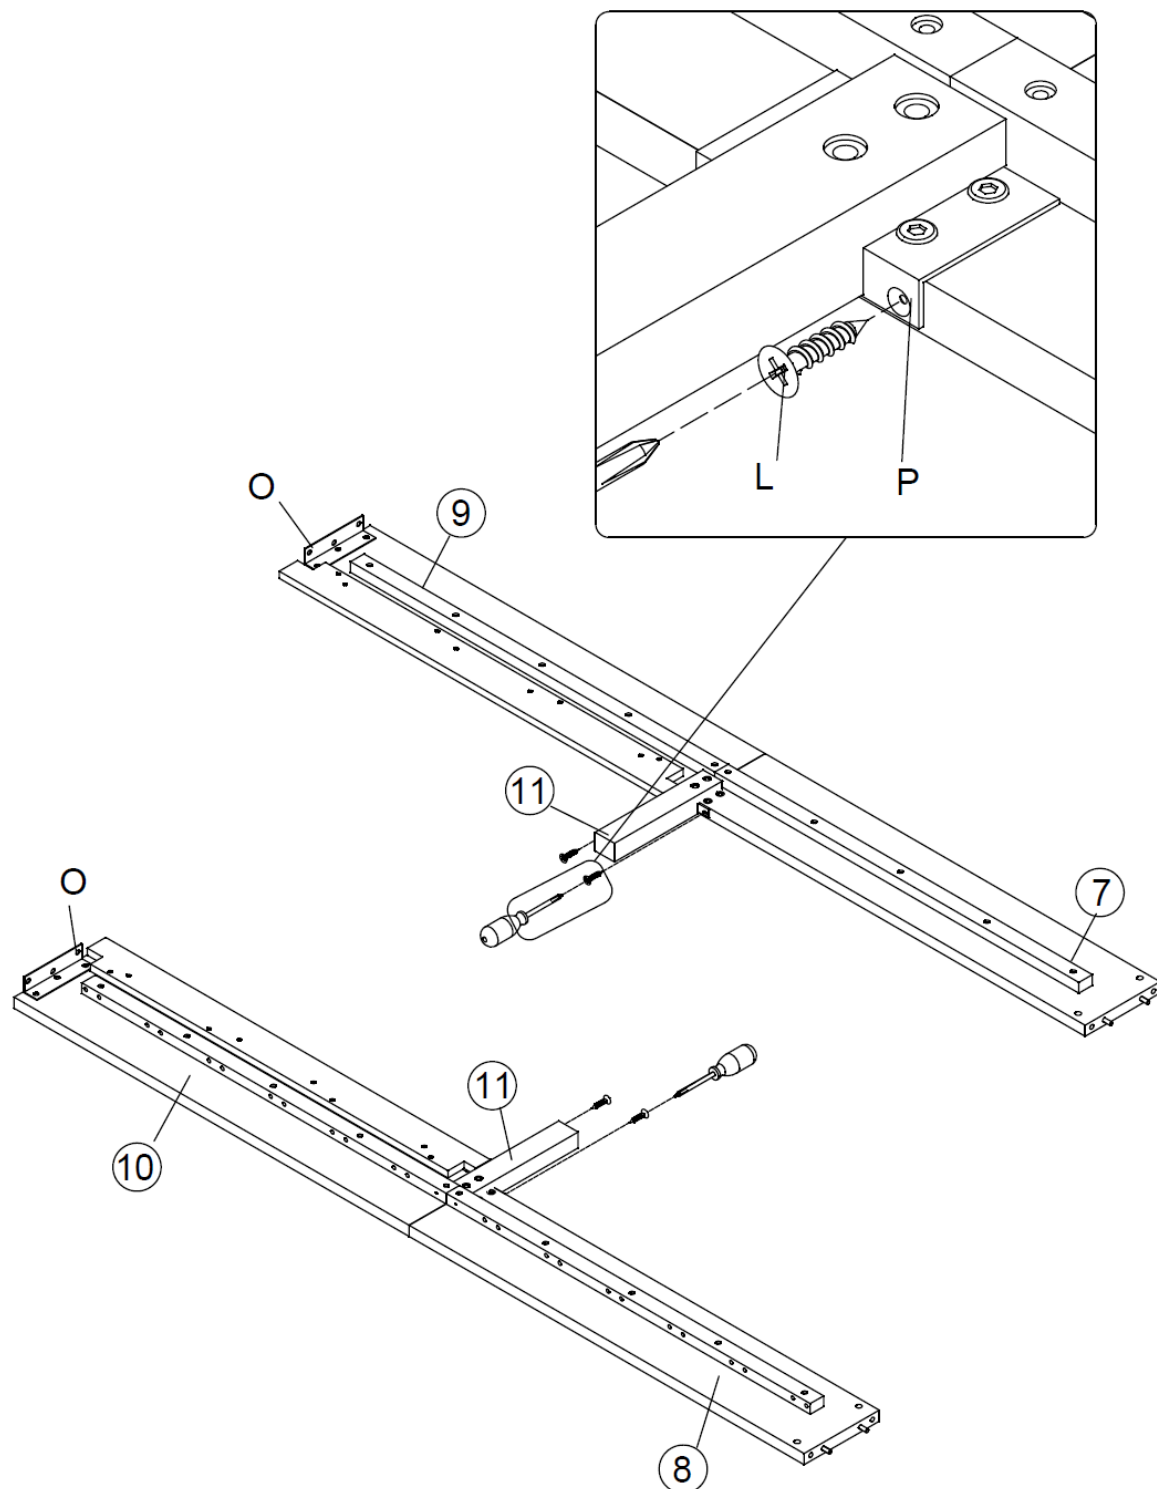


LX4



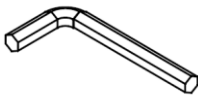


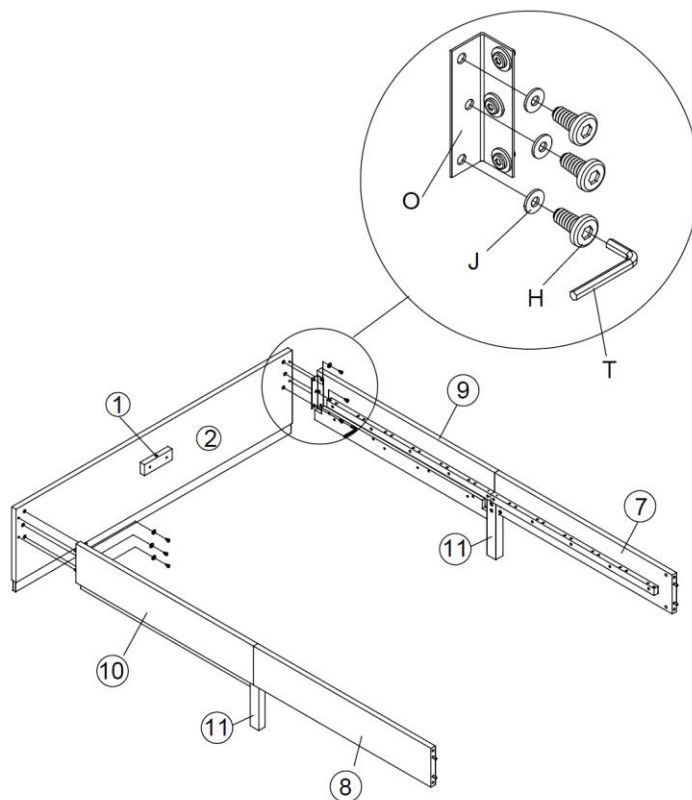
STEP 6:
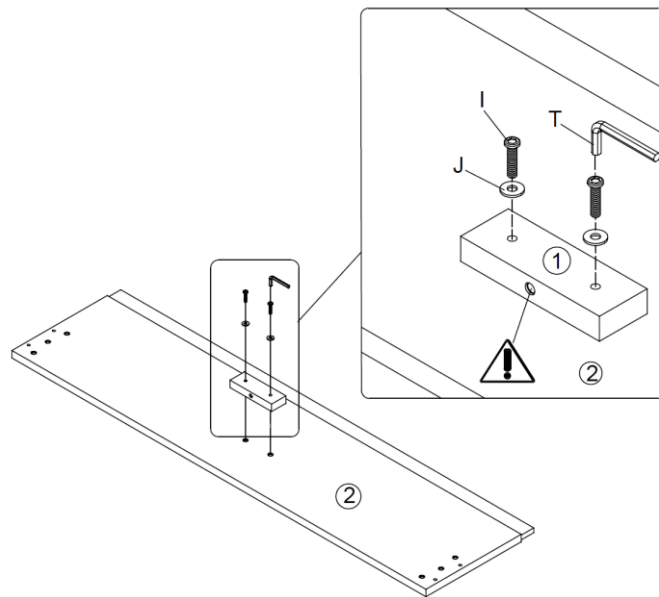
<p>I. M6X40mm</p>  <p>IX2</p>	<p>J.</p>  <p>JX2</p>	<p>T. M4</p>  <p>TX1</p>
---	---	---







STEP 7:

<p>H. M6X20mm</p>  <p>HX6</p>	<p>J.</p>  <p>JX6</p>	<p>T. M4</p>  <p>TX1</p>
--	--	--



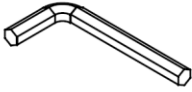


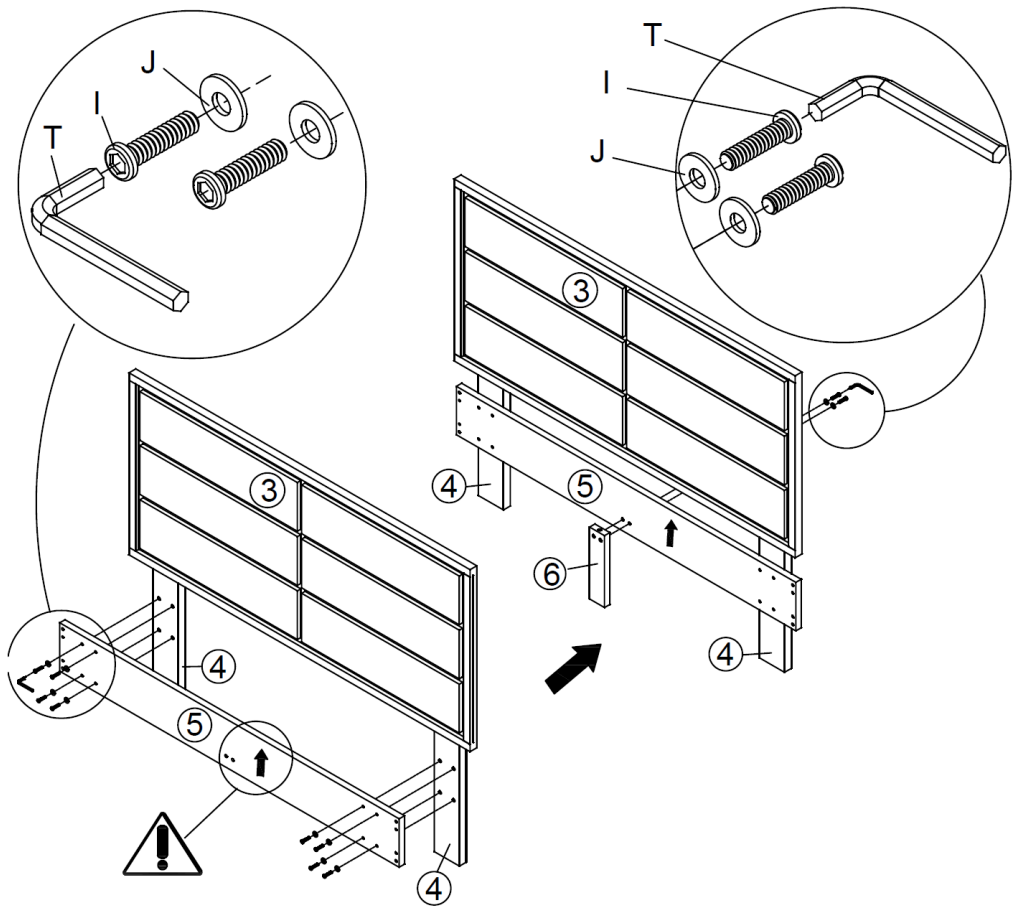
STEP 8:

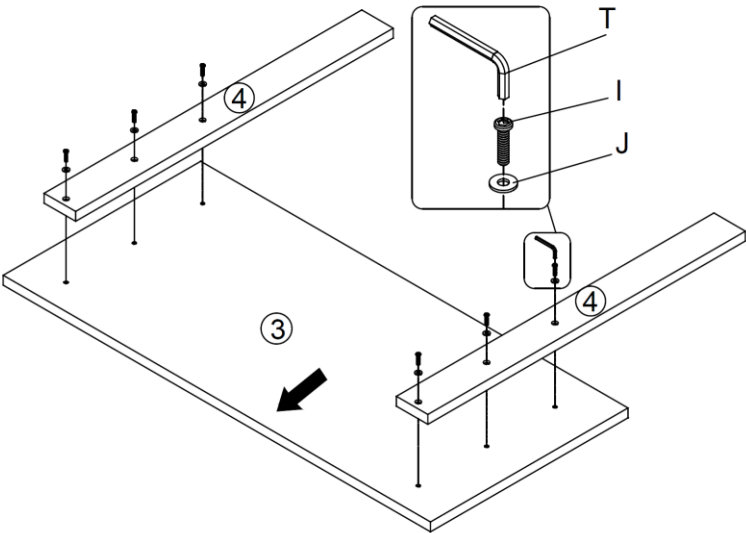I. M6X40mm  IX6	J.  JX6	T. M4  TX1
---	---	---



STEP 9:

I. M6X40mm  IX10	J.  JX10	T. M4  TX1
---	---	--



STEP 10:

Q. M8X75mm




QX4

R. M8X15mm




RX4

U. M5



UX1

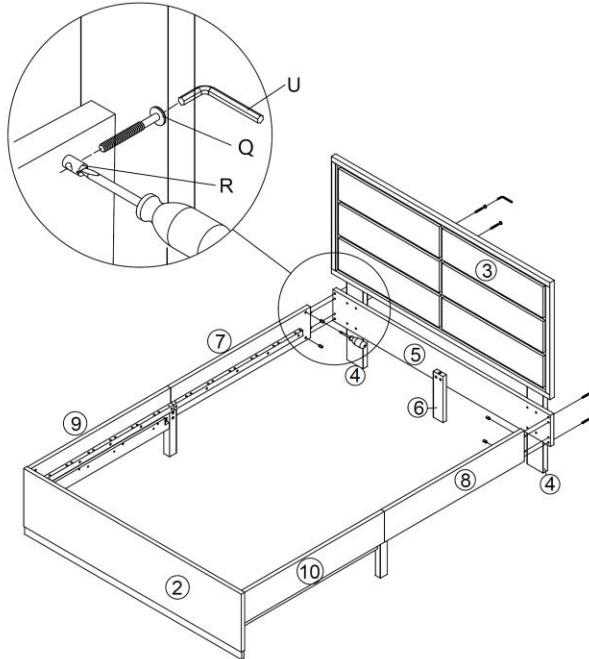

STEP 11:

I. M6X40mm



IX2

J.



JX2

S. M6X50mm




SX4


T. M4




TX1

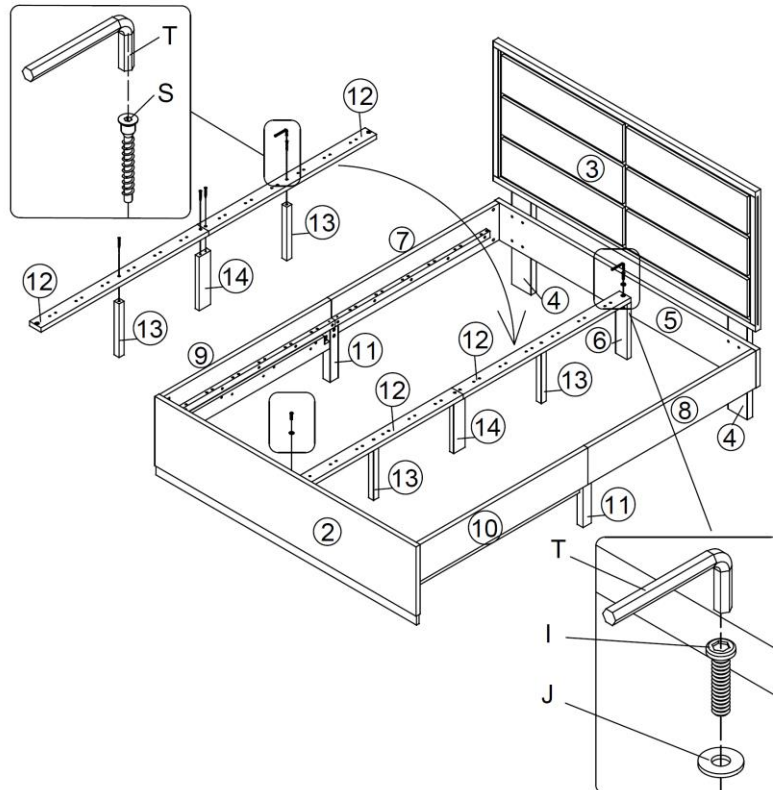

K. M4X30mm

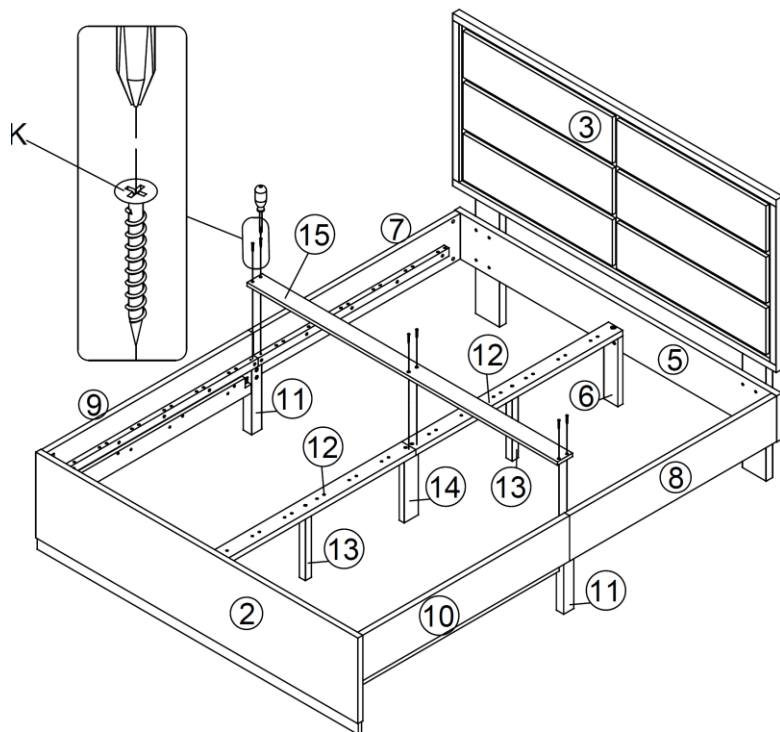

M.




MX24

N.



NX12

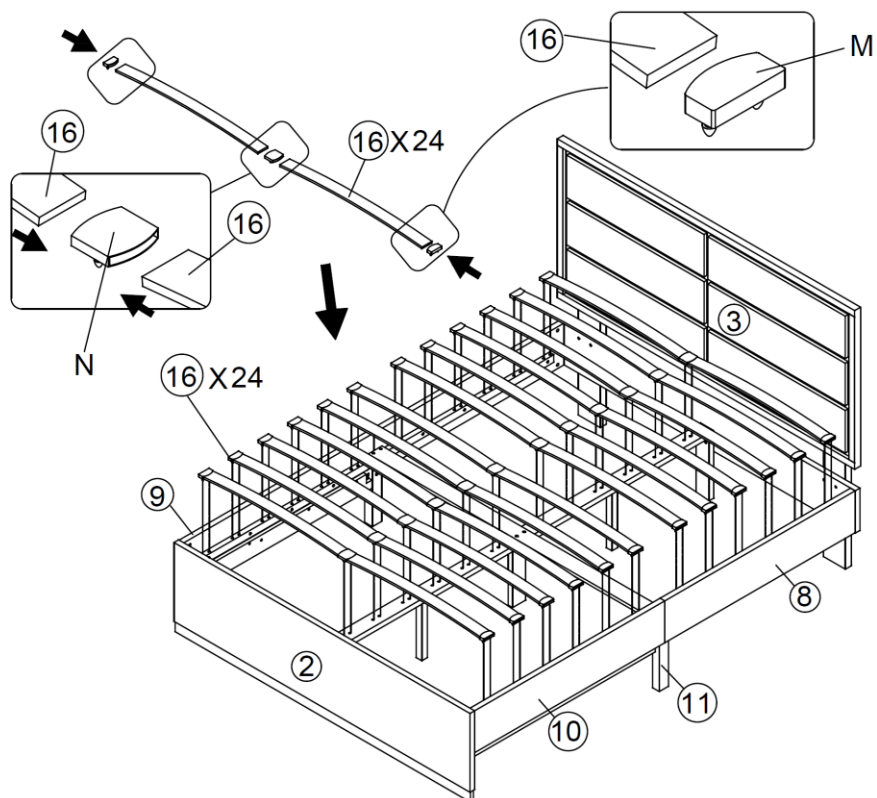

STEP 14:

E.





EX8

F. M3.5X14mm




FX16

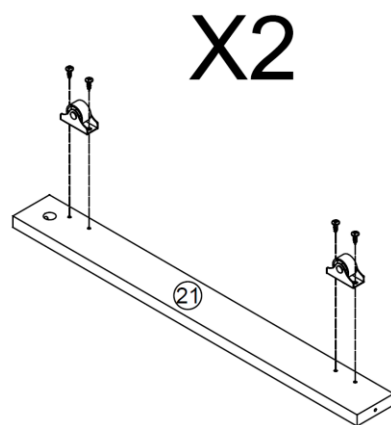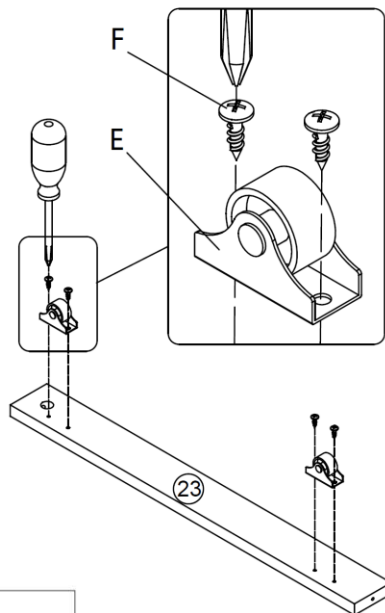


STEP 15:


D. M4X40mm



DX14

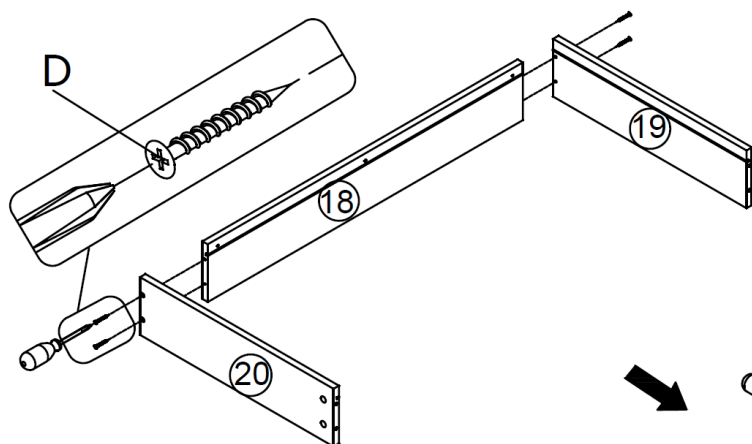

X2

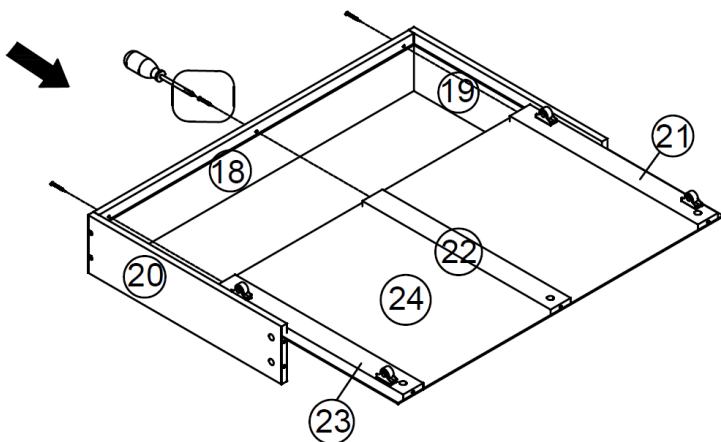


STEP 16:

A. $\phi 15 \times 12$




AX14


B. M6X39mm




BX14

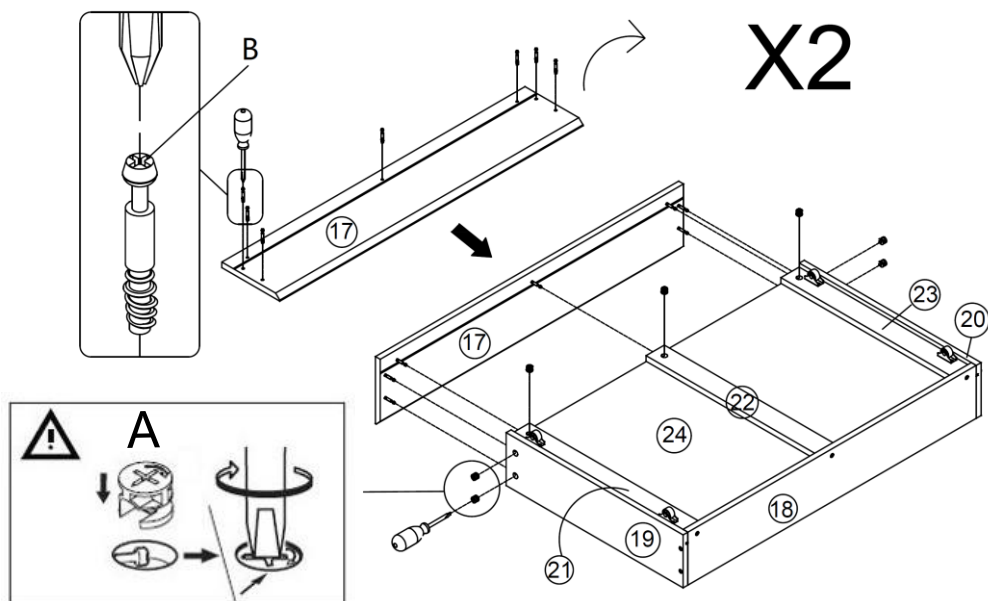

STEP 17:

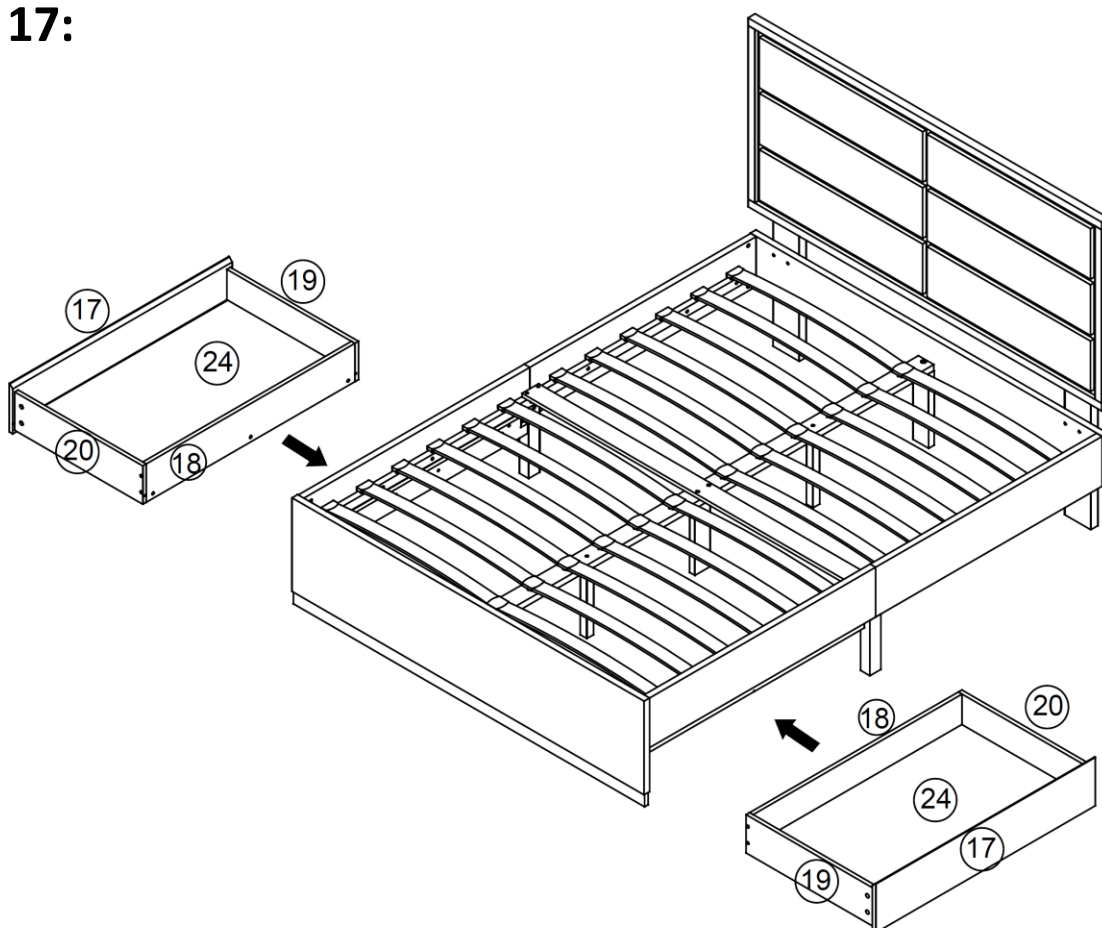

ASSEMBLY IS COMPLETE

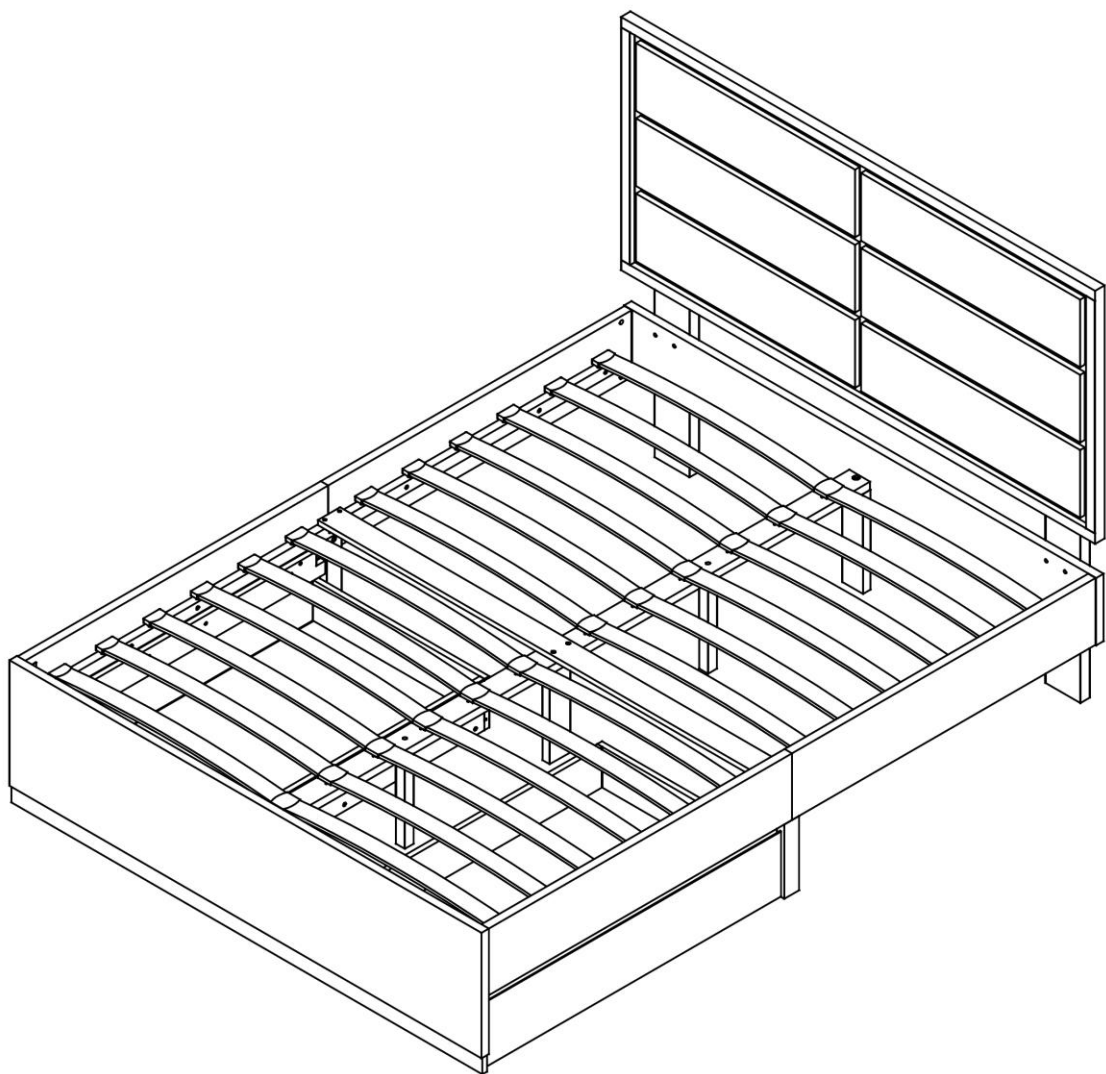

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void