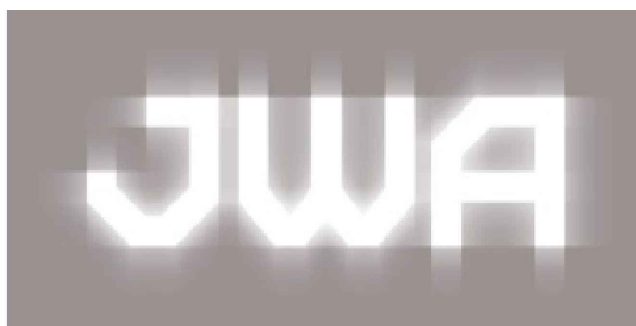
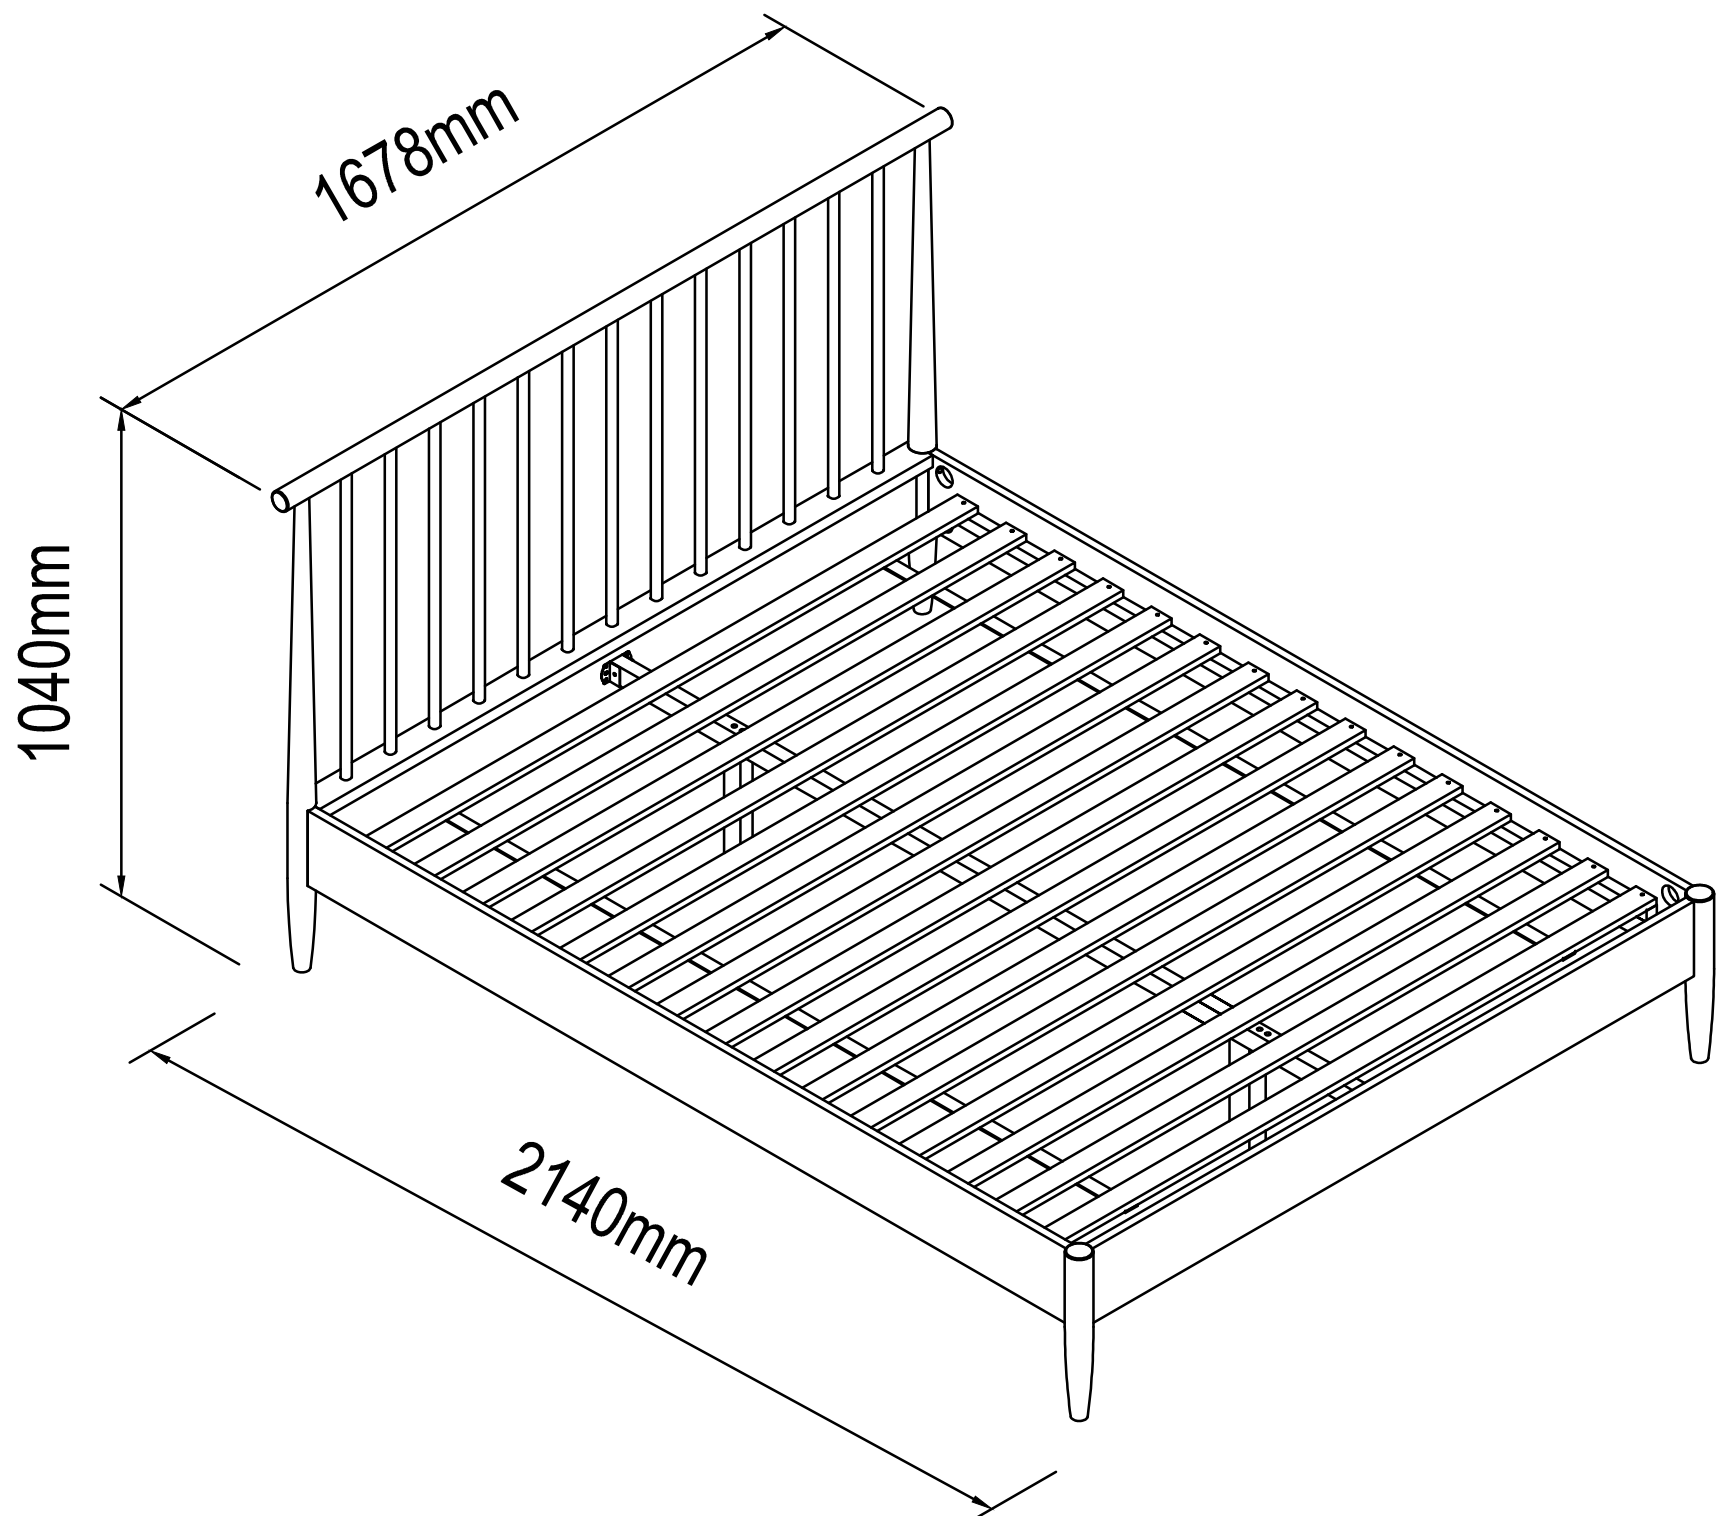


# ASSEMBLY INSTRUCTION

## SUSANNA QUEEN BED

Item Code:83656




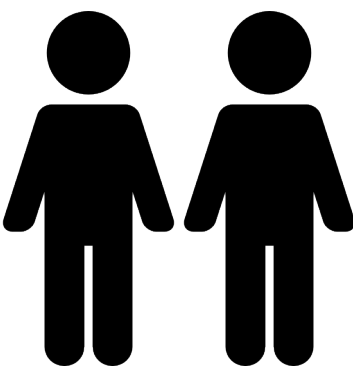

Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia.

For any assistance with assembly or for missing parts please refer to your receipt

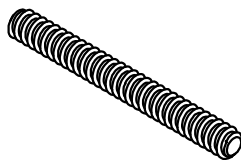

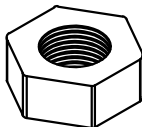
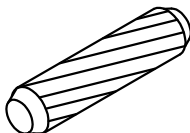
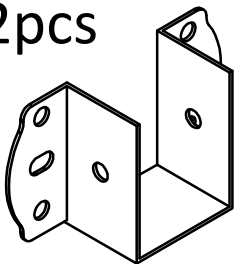

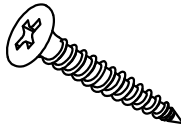
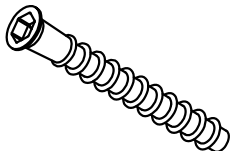

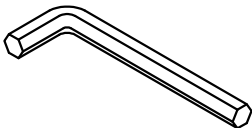
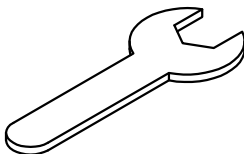

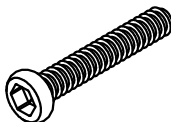
# PRE-ASSEMBLY PREPARATION

**Before you start:**

- 1. Choose a clean, level,spacious assembly area. Avoid hard surfaces that may damage the product
- 2. Take care when lifting.Product should be assembled as near as possible to the point of use
- 3. Ensure that you have all required contents for complete assembly
- 4. Always read the assembly instructions carefully before beginning assembly
- 5. Keep all hardware parts and packaging out of reach of small children
- 6. Do not over tighten the screws and bolts as this may damage the threads
- 7. Assembly is to be carried out by a competent adult(s) ONLY
- 8. During assembly, children should be kept away from the product due to possible risk to injury
- 9. Do not use this item if any components are missing or damaged
- 10. Please keep the instructions for future reference.

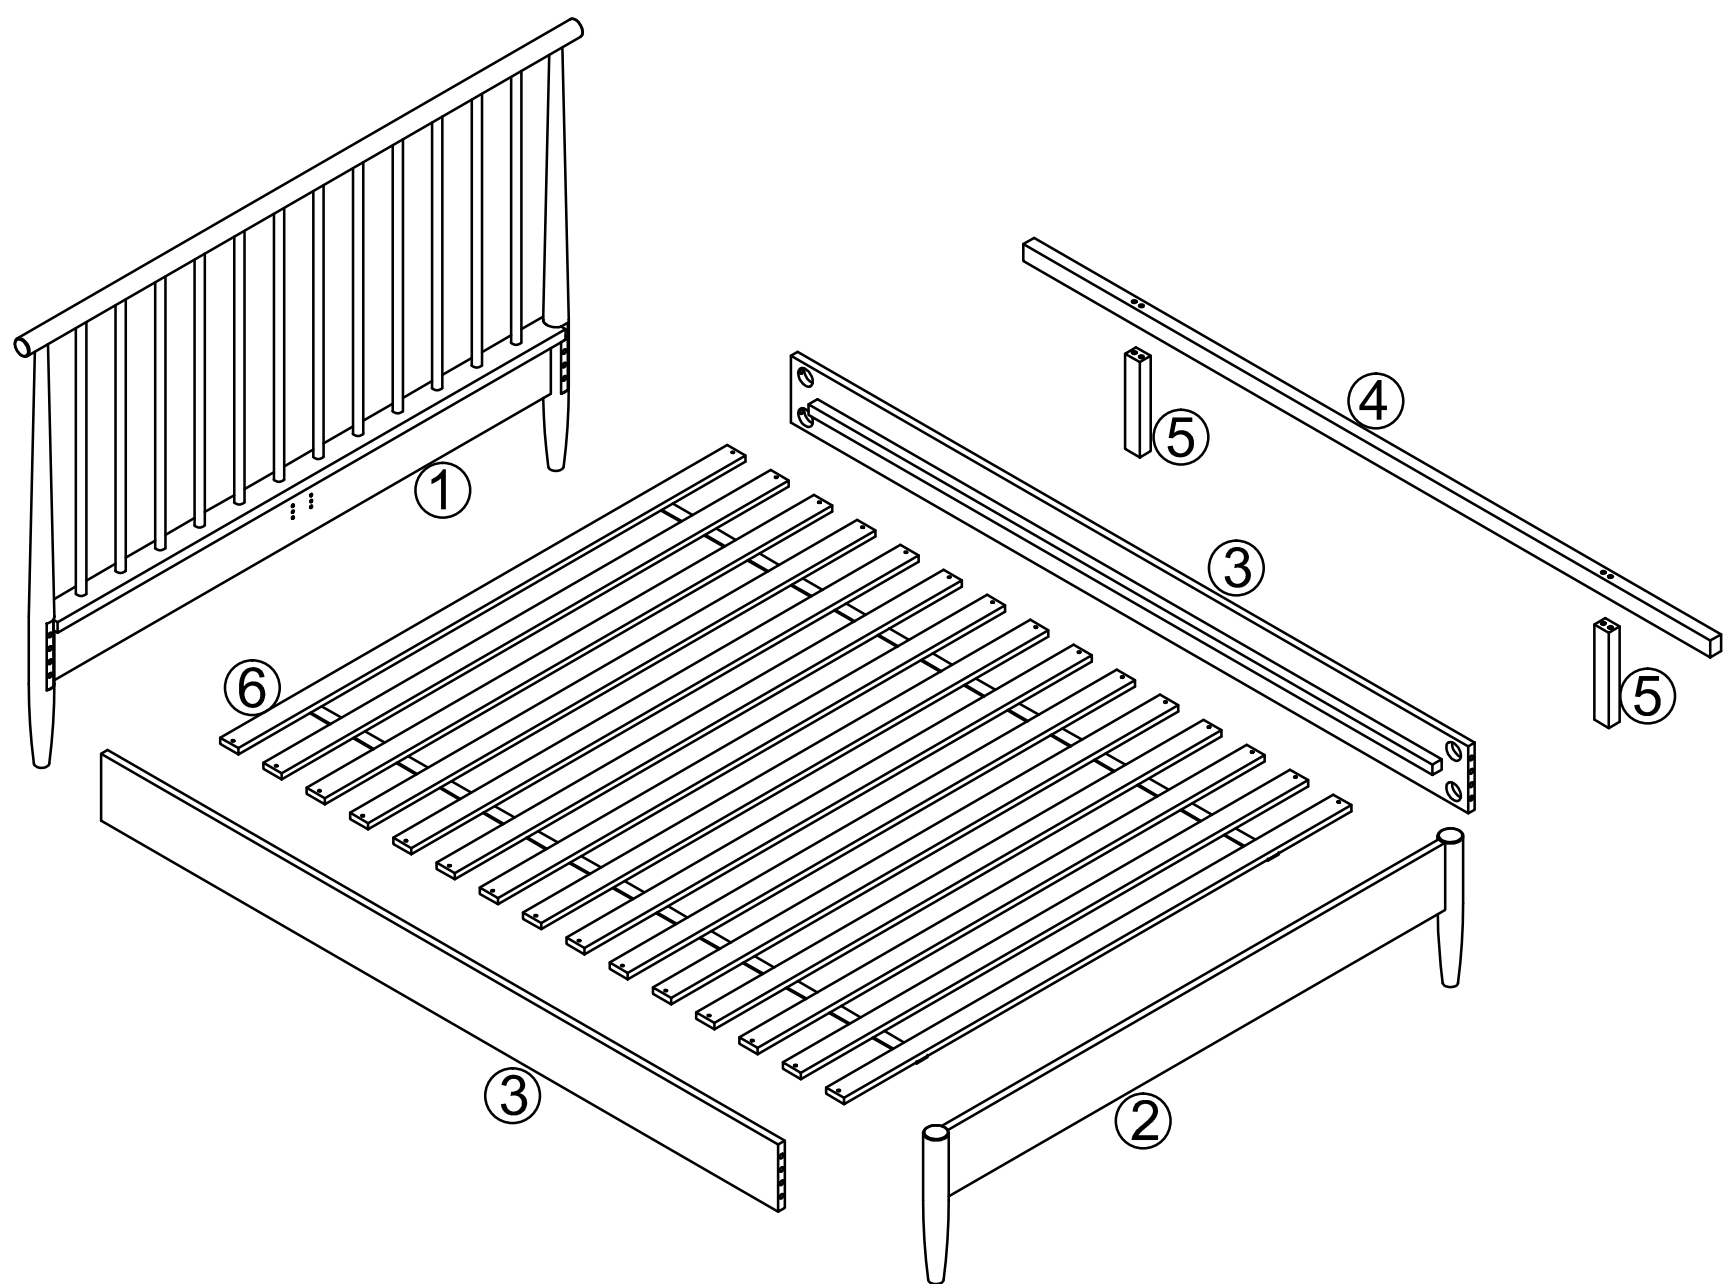
		
Allow 30 min	For 2 person	Additional tools required

PARTS LIST

<div><b>A</b> Screw M8x75mmx8pcs</div> <div></div>	<div><b>B</b> Bracket x8pcs</div> <div></div>	<div><b>C</b> Nut x8pcs</div> <div></div>	<div><b>D</b> Wooden Dowel Ø10x30x8pcs</div> <div></div>
<div><b>E</b> Metal Bracket x 2pcs</div> <div></div>	<div><b>F</b> Screw M4x15mmx16pcs</div> <div></div>	<div><b>G</b> Screw M4x20mmx22pcs</div> <div></div>	<div><b>H</b> Screw M7x60mmx4pcs</div> <div></div>
<div><b>I</b> Adjustable Leveller x 2pcs</div> <div></div>	<div><b>J</b> Allen Key x1</div> <div></div>	<div><b>K</b> Spanner x1</div> <div></div>	<div><b>L</b> Pad x4</div> <div></div>
<div><b>M</b> Screw M6x25mmx8pcs</div> <div></div>			



PARTS LIST

1	Headboard Frame x1 pc	2	Footboard Frame x1 pc
3	Side Rail x2 pcs	4	Centre Rail x1 pc
5	Support Leg x2 pcs	6	Slat x 1 set




**STEP 1:**

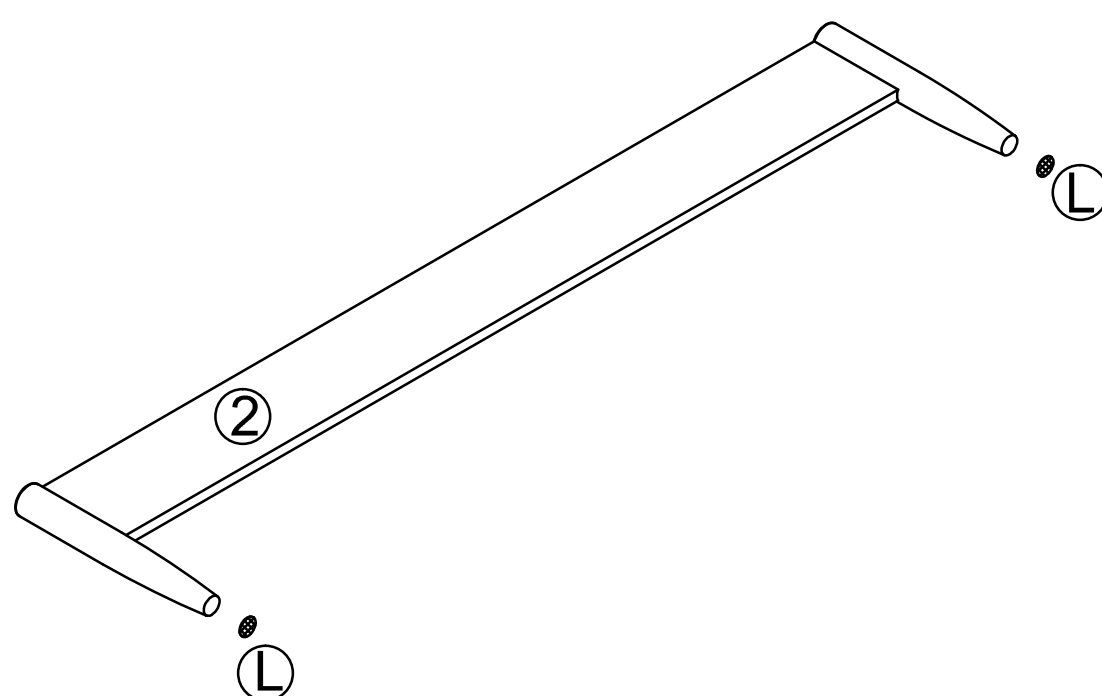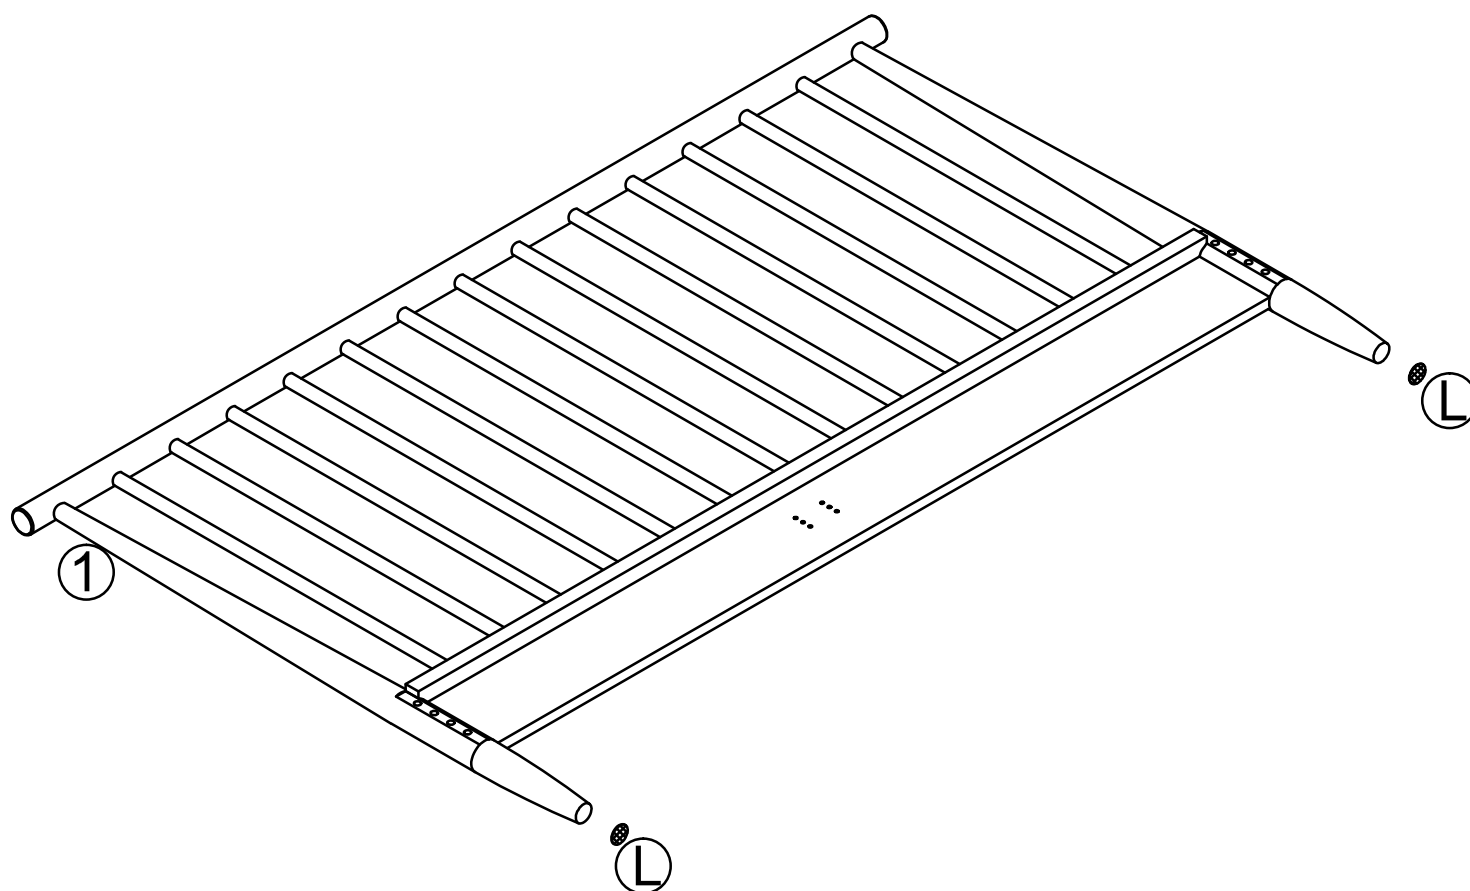- Prepare a protected surface with a blanket or cardboard.
- Attach the pad(L) on to the headboard(1) & footboard(2) legs




**STEP 2:**

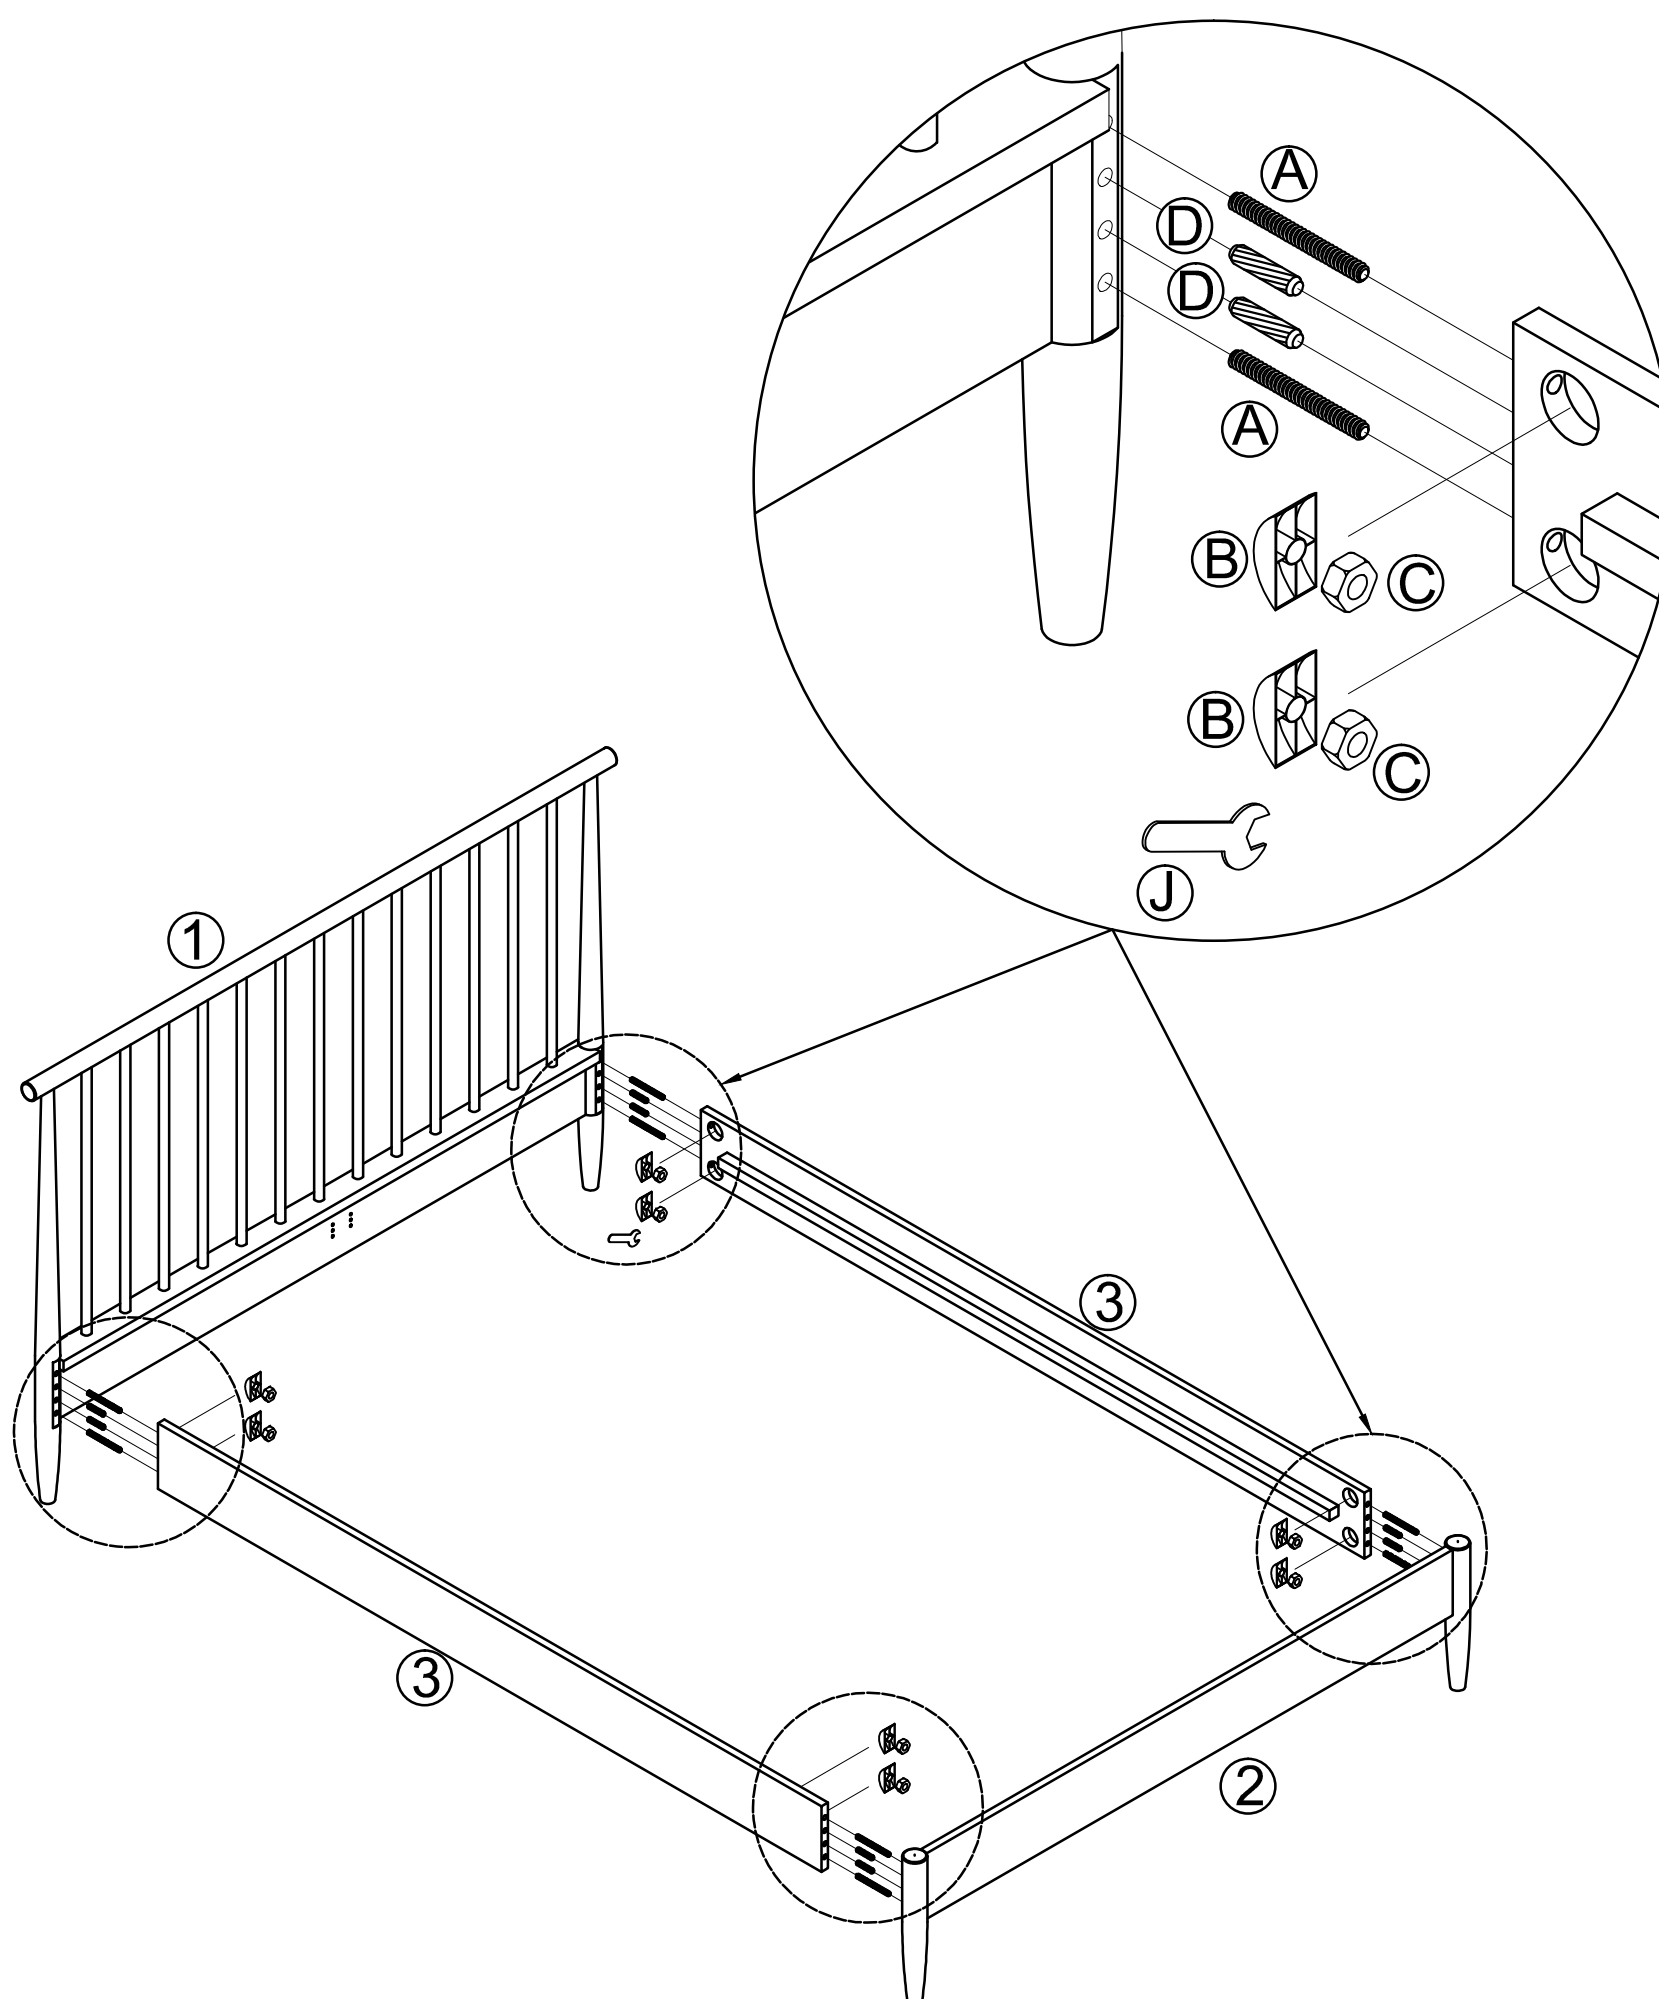- Assemble the siderails(3) with headboard(1) & footboard(2) by hardware A,B,C,D




**STEP 3:**

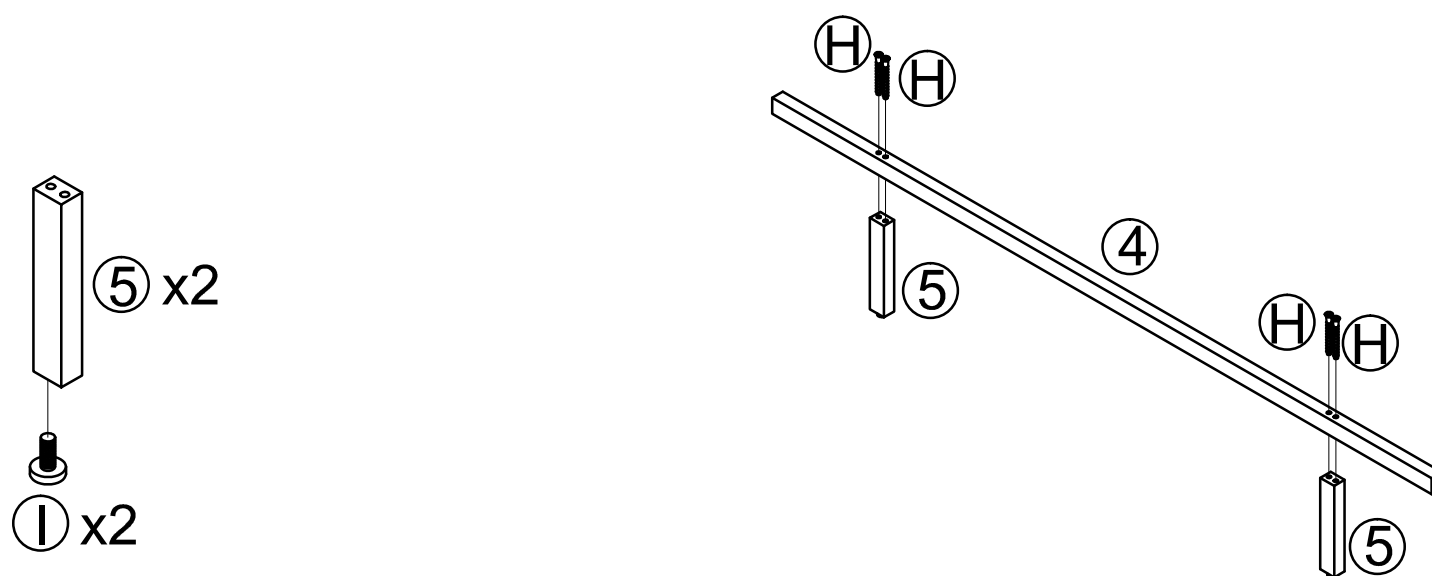- Secure the adjustable leveller(I) onto the support leg(5);
- Attach the support leg(5) onto centre rail(4) by Hardware(H).


**STEP 4:**

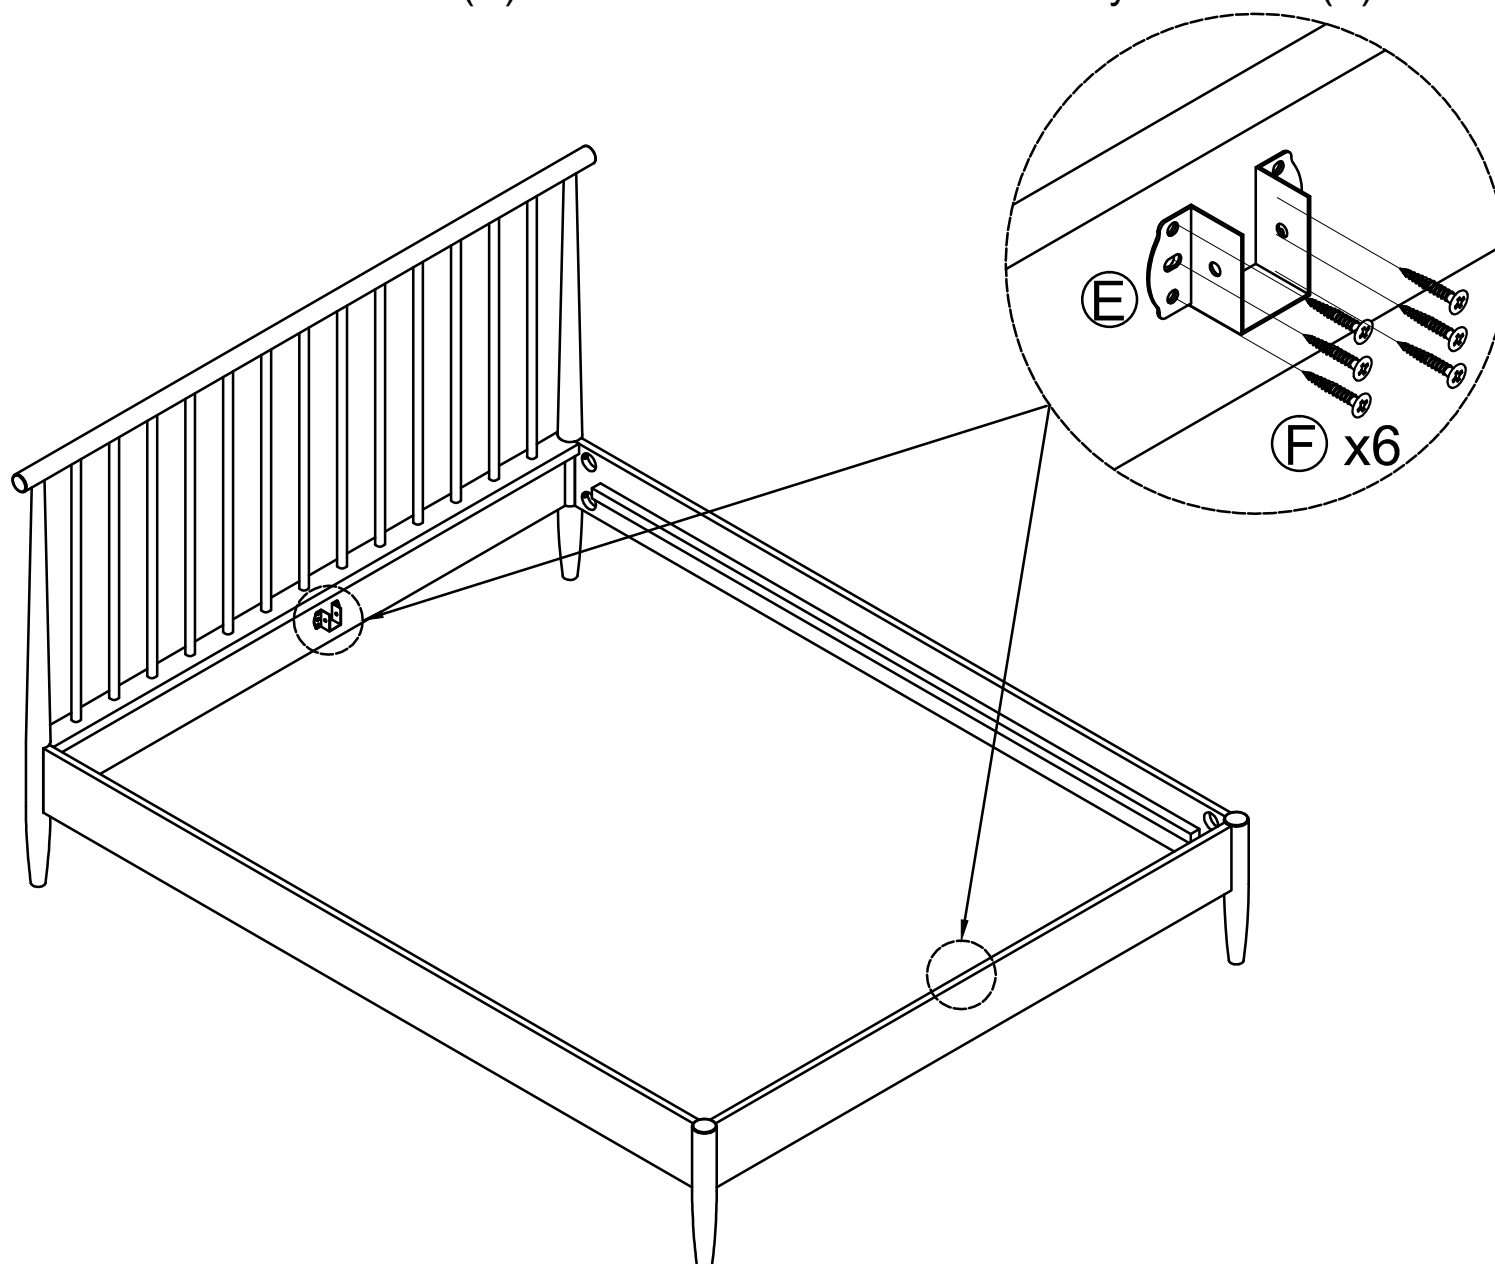- Secure the metal bracket(E) on the headboard&footboard by hardware(F)




**STEP 5:**

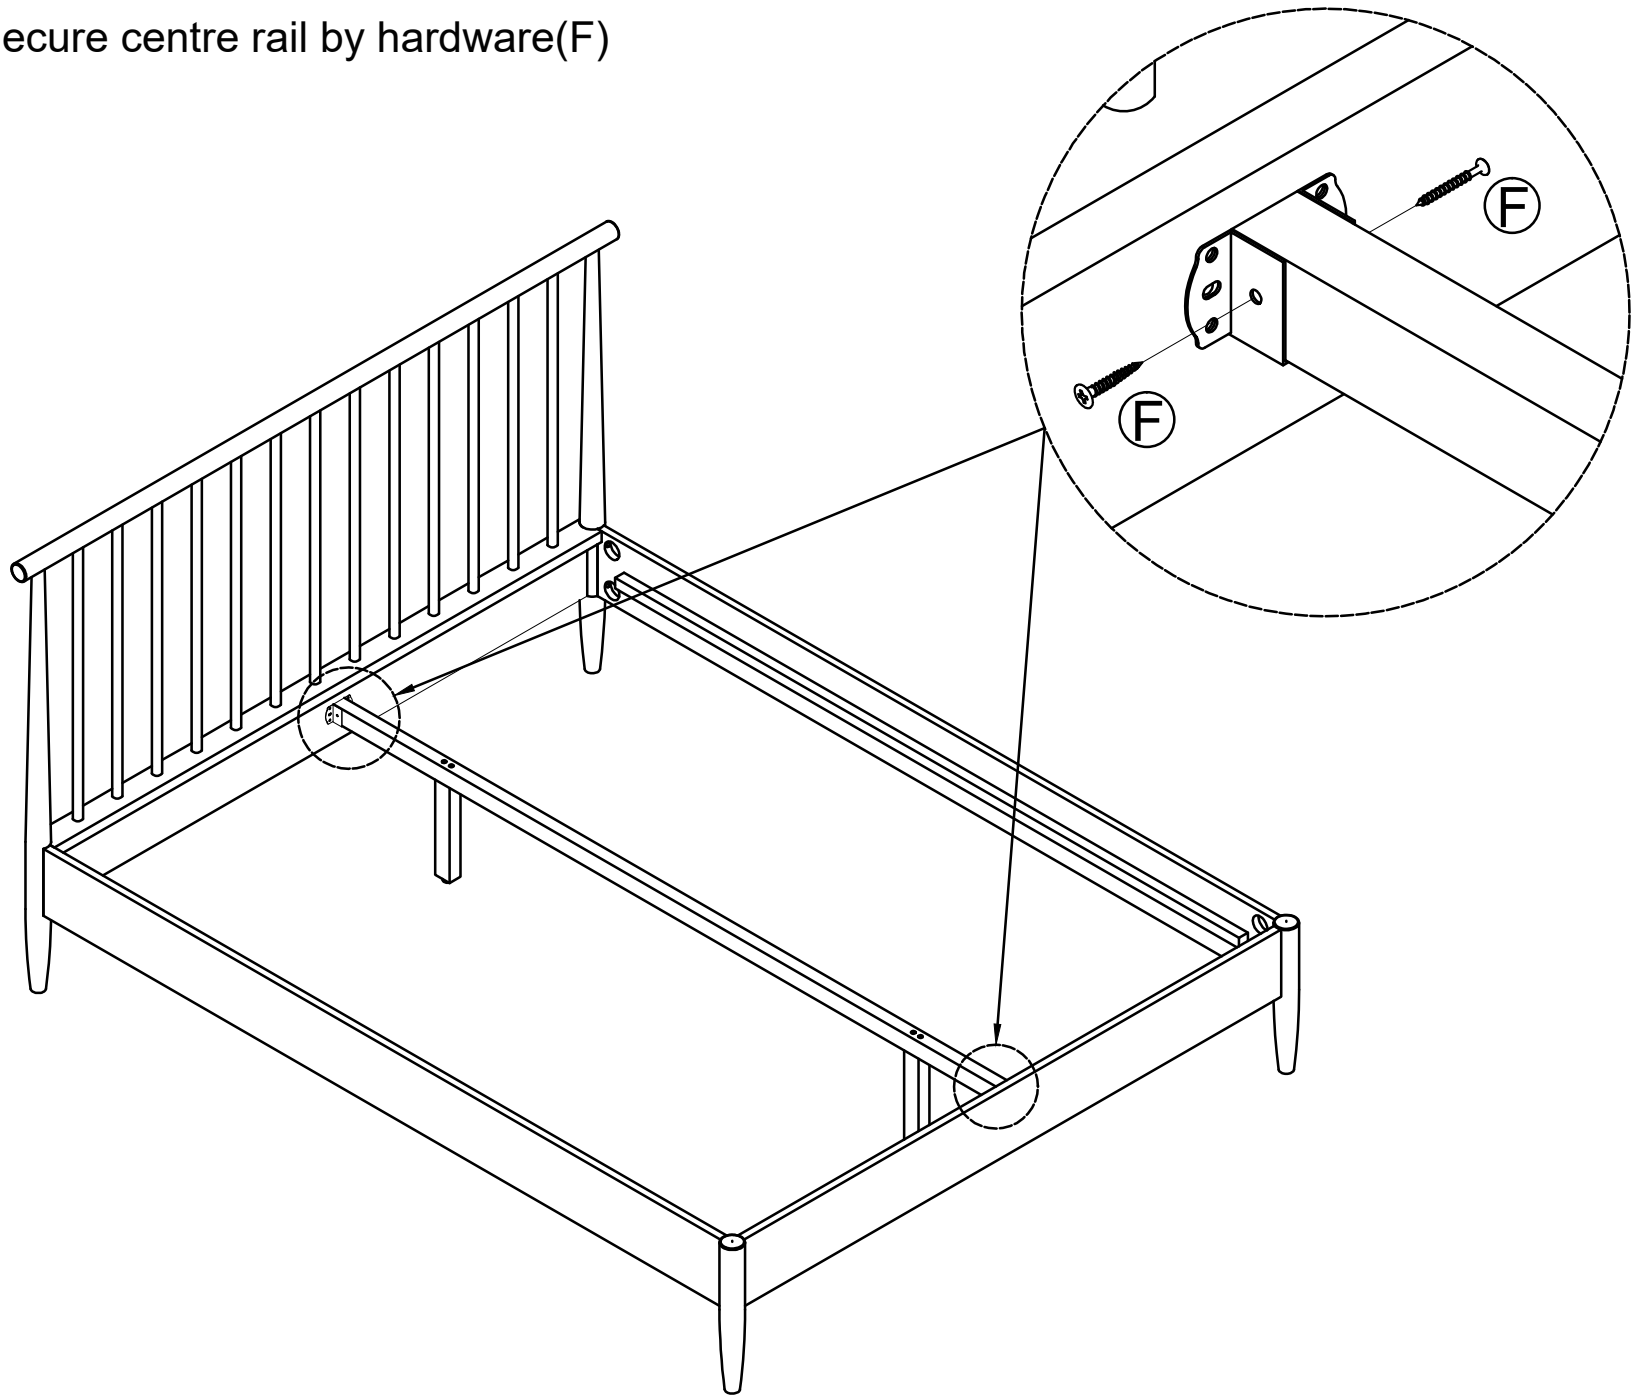- Secure centre rail by hardware(F)




**STEP 6:**

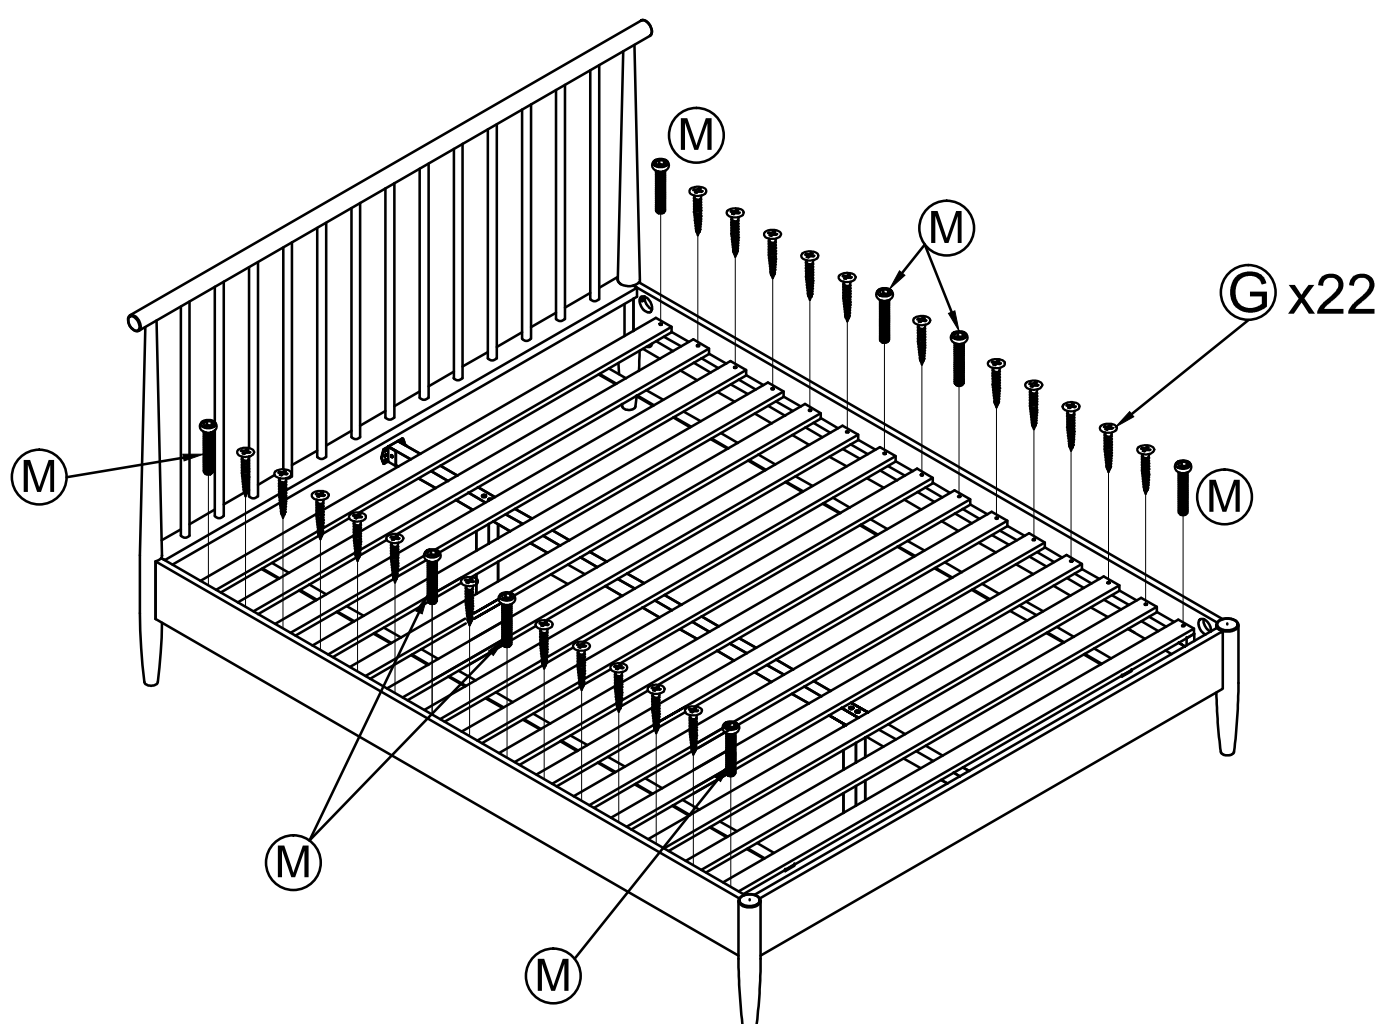- Fix the slats(6) by hardware(M)&(G)





**FINISHED**

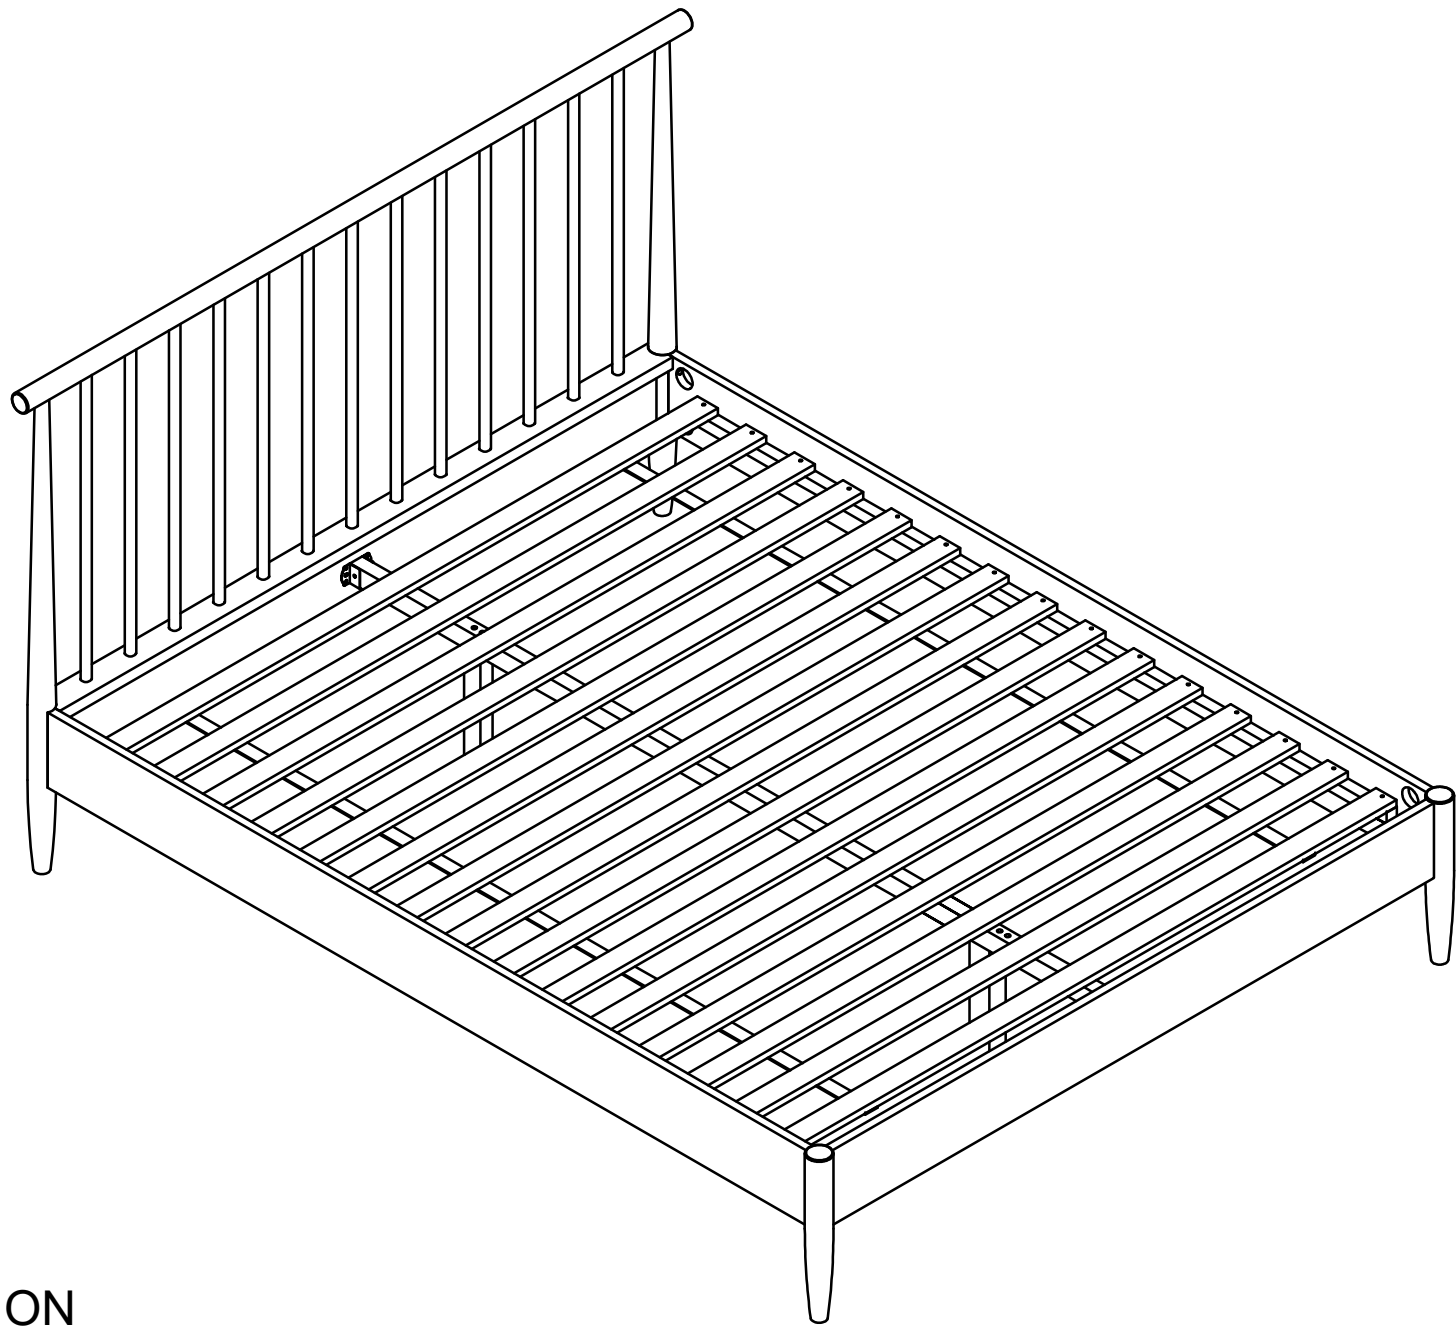

**CAUTION**

Always Lift Your Bed When Moving /Relocating - Do Not Drag.  
Dragging Can Cause The Centre Support Legs To Bend/Break.

**PRODUCT CARE:**

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.