
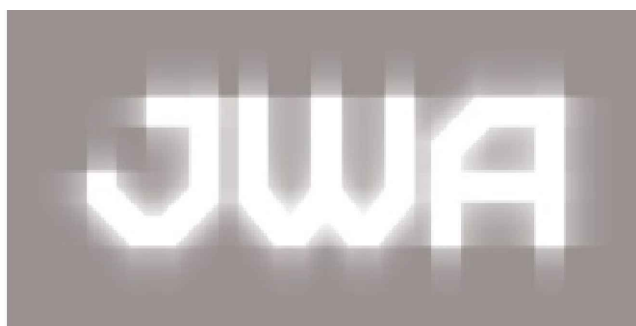


ASSEMBLY INSTRUCTION

SUSANNA KING BED

Item Code:83653

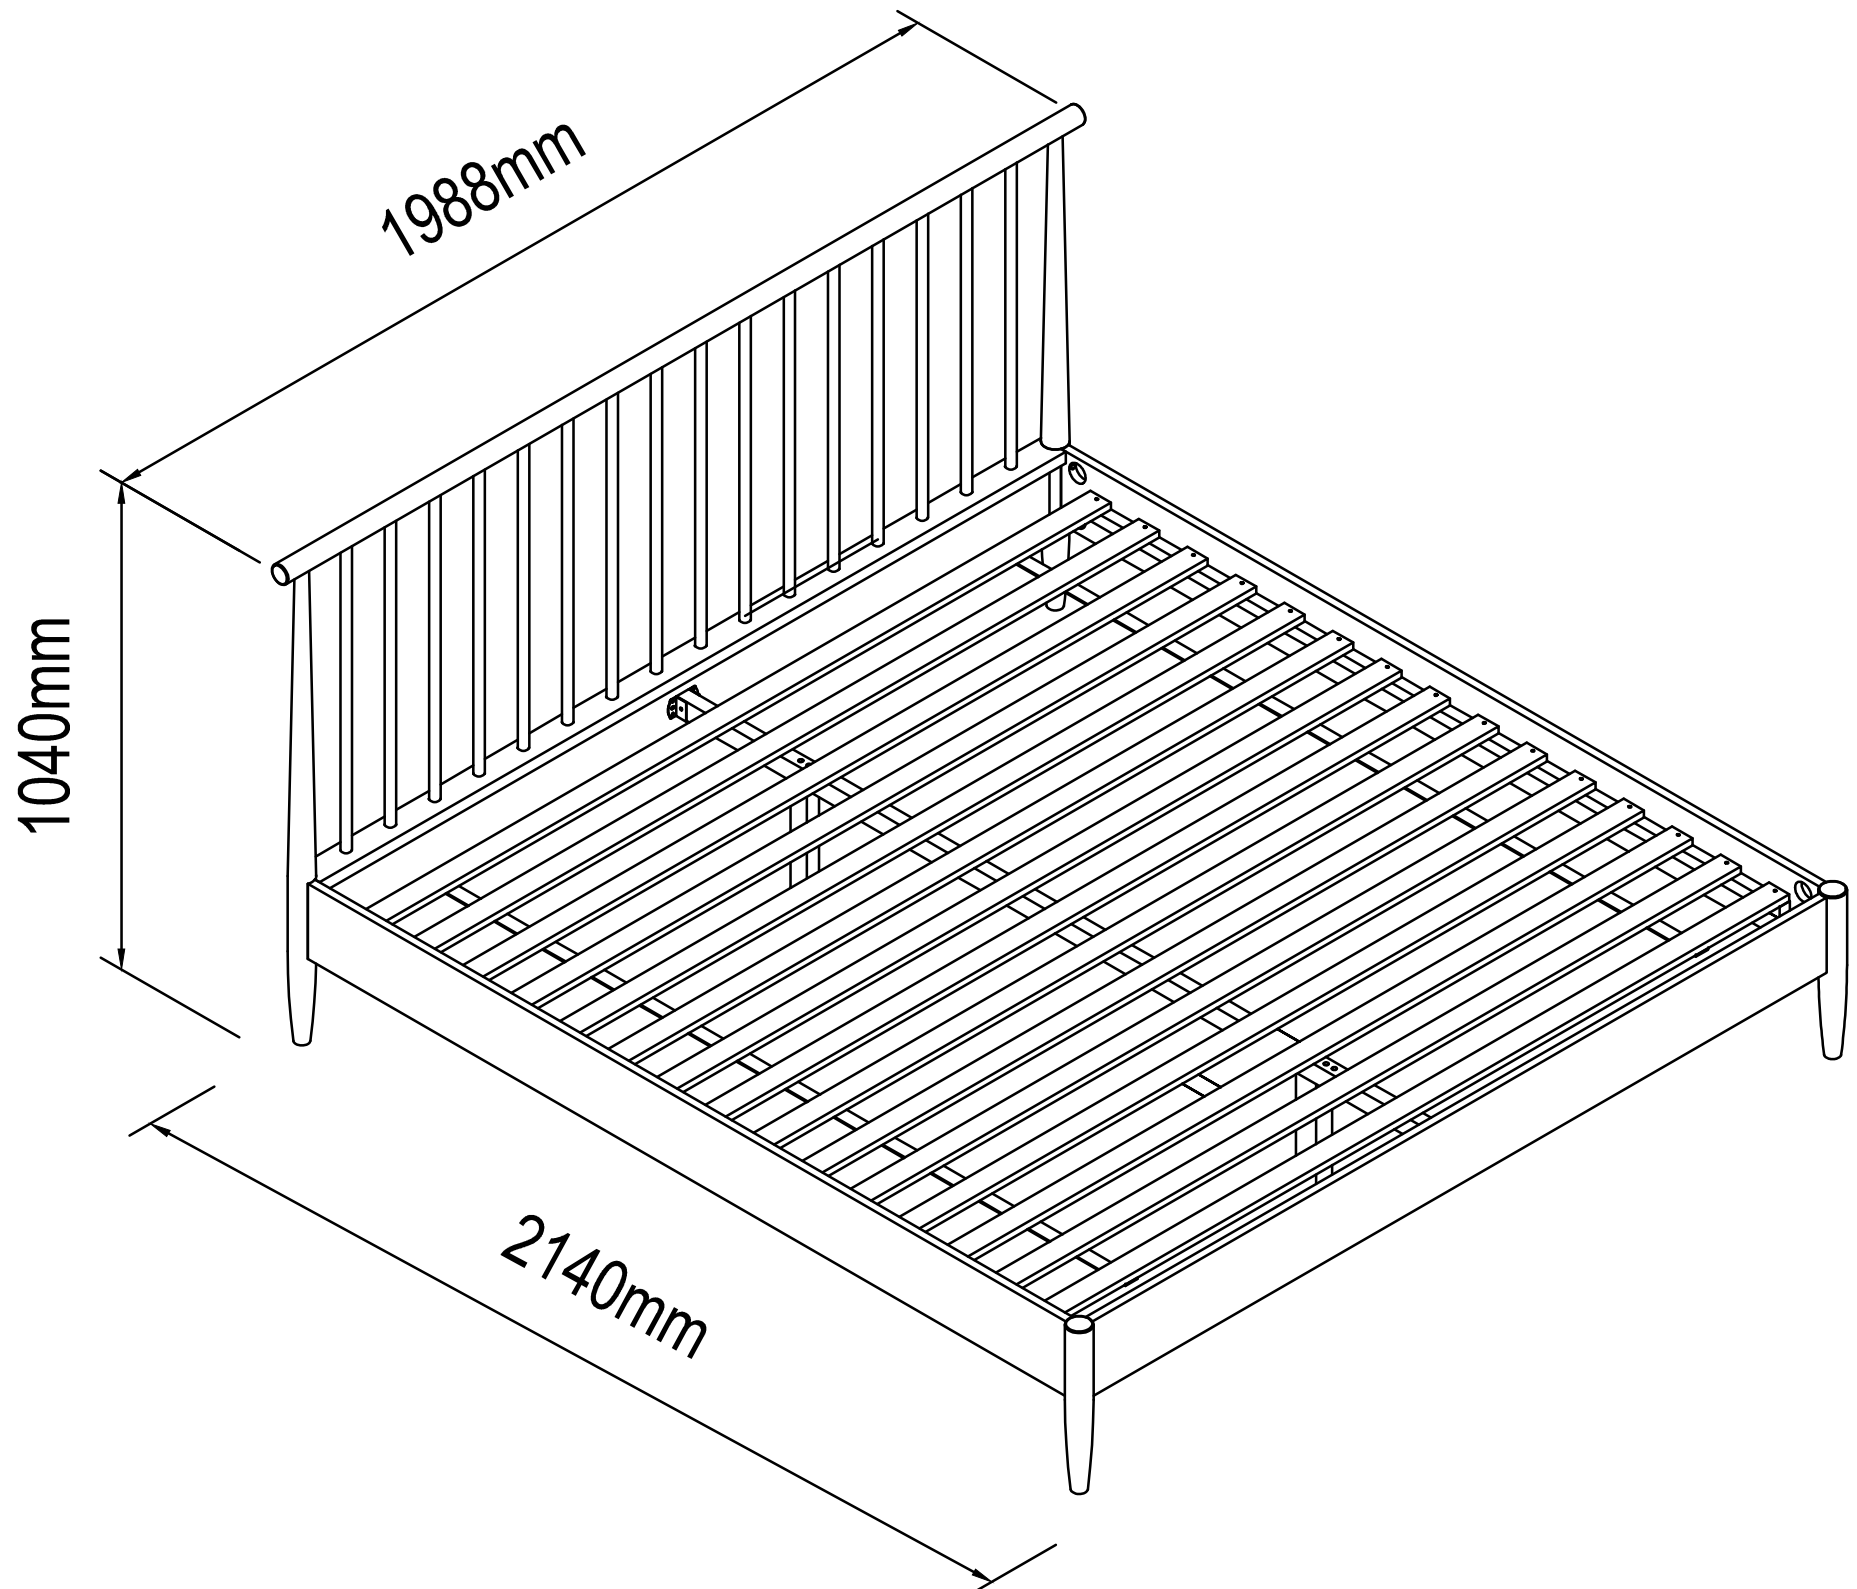


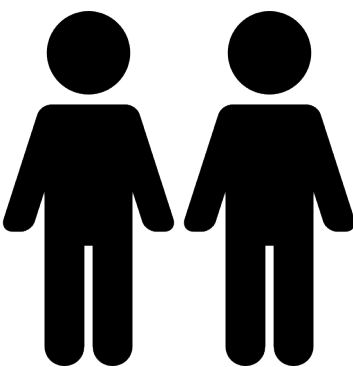

Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia.

For any assistance with assembly or for missing parts please refer to your receipt













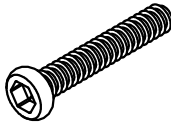
PRE-ASSEMBLY PREPARATION

Before you start:

- 1. Choose a clean, level,spacious assembly area. Avoid hard surfaces that may damage the product
- 2. Take care when lifting.Product should be assembled as near as possible to the point of use
- 3.Ensure that you have all required contents for complete assembly
- 4.Always read the assembly instructions carefully before beginning assembly
- 5.Keep all hardware parts and packaging out of reach of small children
- 6.Do not over tighten the screws and bolts as this may damage the threads
- 7.Assembly is to be carried out by a competent adult(s) ONLY
- 8.During assembly, children should be kept away from the product due to possible risk to injury
- 9.Do not use this item if any components are missing or damaged
- 10.Please keep the instructions for future reference.


		
Allow 30 min	For 2 person	Additional tools required

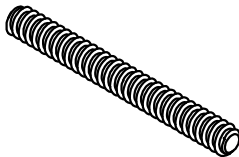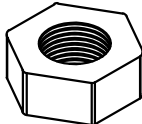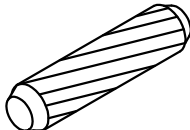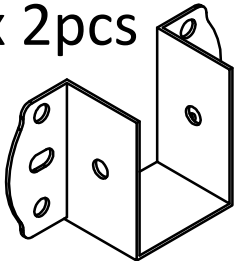PARTS LIST
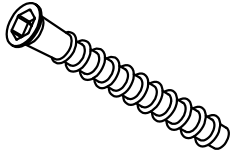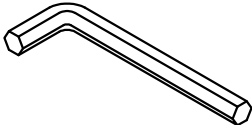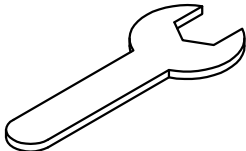
<div>A Screw M8x75mmx8pcs</div> <div></div>	<div>B Bracket x8pcs</div> <div></div>	<div>C Nut x8pcs</div> <div></div>	<div>D Wooden Dowel Ø10x30x8pcs</div> <div></div>
<div>E Metal Bracket x 2pcs</div> <div></div>	<div>F Screw M4x15mmx16pcs</div> <div></div>	<div>G Screw M4x20mmx22pcs</div> <div></div>	<div>H Screw M7x60mmx4pcs</div> <div></div>
<div>I Adjustabl e Leveller x 2pcs</div> <div></div>	<div>J Allen Key x1</div> <div></div>	<div>K Spanner x1</div> <div></div>	<div>L Pad x4</div> <div></div>
<div>M Screw M6x25mmx8pcs</div> <div></div>			



PARTS LIST

1	Headboard Frame x1 pc	2	Footboard Frame x1 pc
3	Side Rail x2 pcs	4	Centre Rail x1 pc
5	Support Leg x2 pcs	6	Slat x15 pc

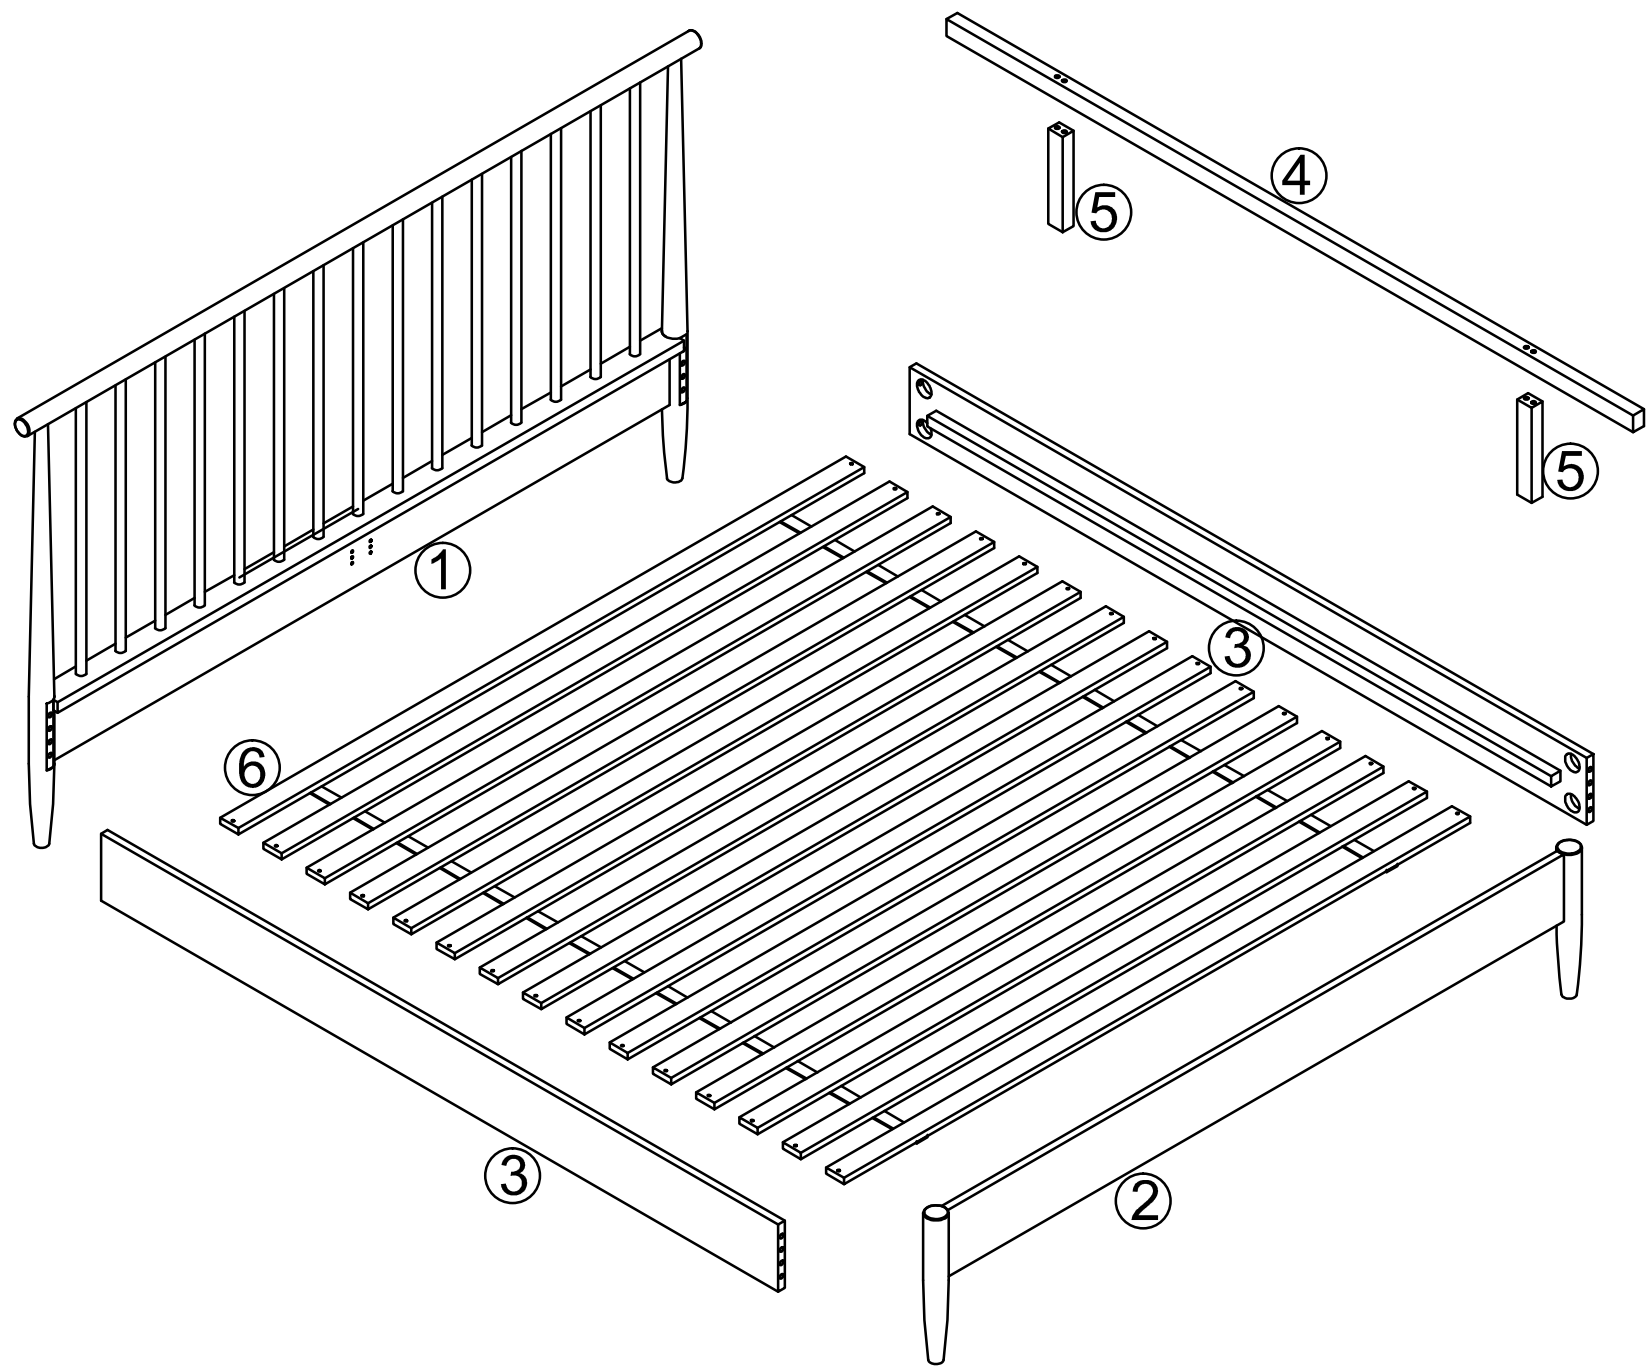


STEP 1:

- Prepare a protected surface with a blanket or cardboard.
- Attach the pad(L) on to the headboard(1) & footboard(2) legs

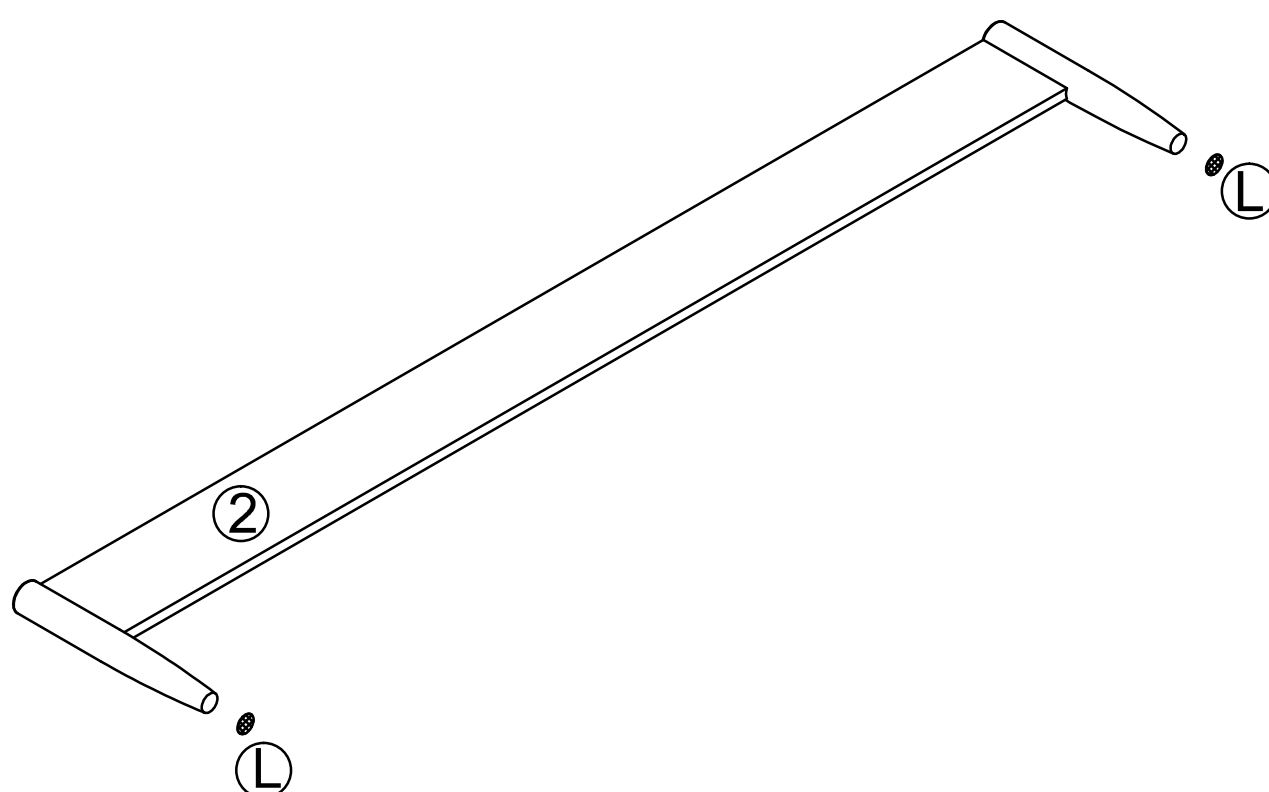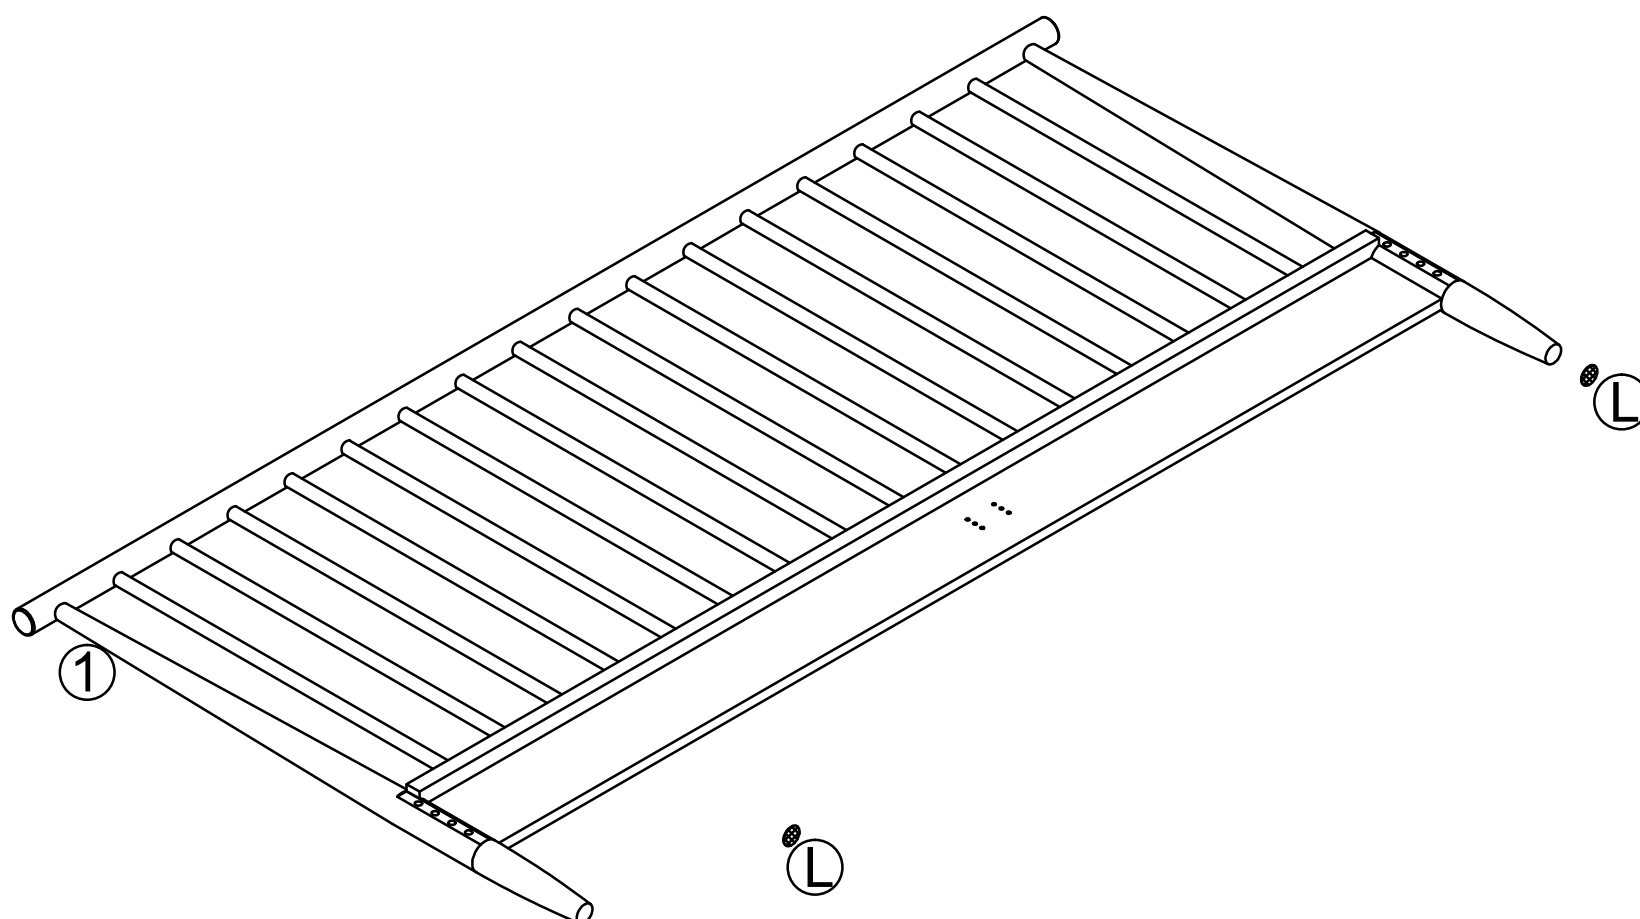


STEP 2:

- Assemble the siderails(3) with headboard(1) & footboard(2) by hardware A,B,C,D

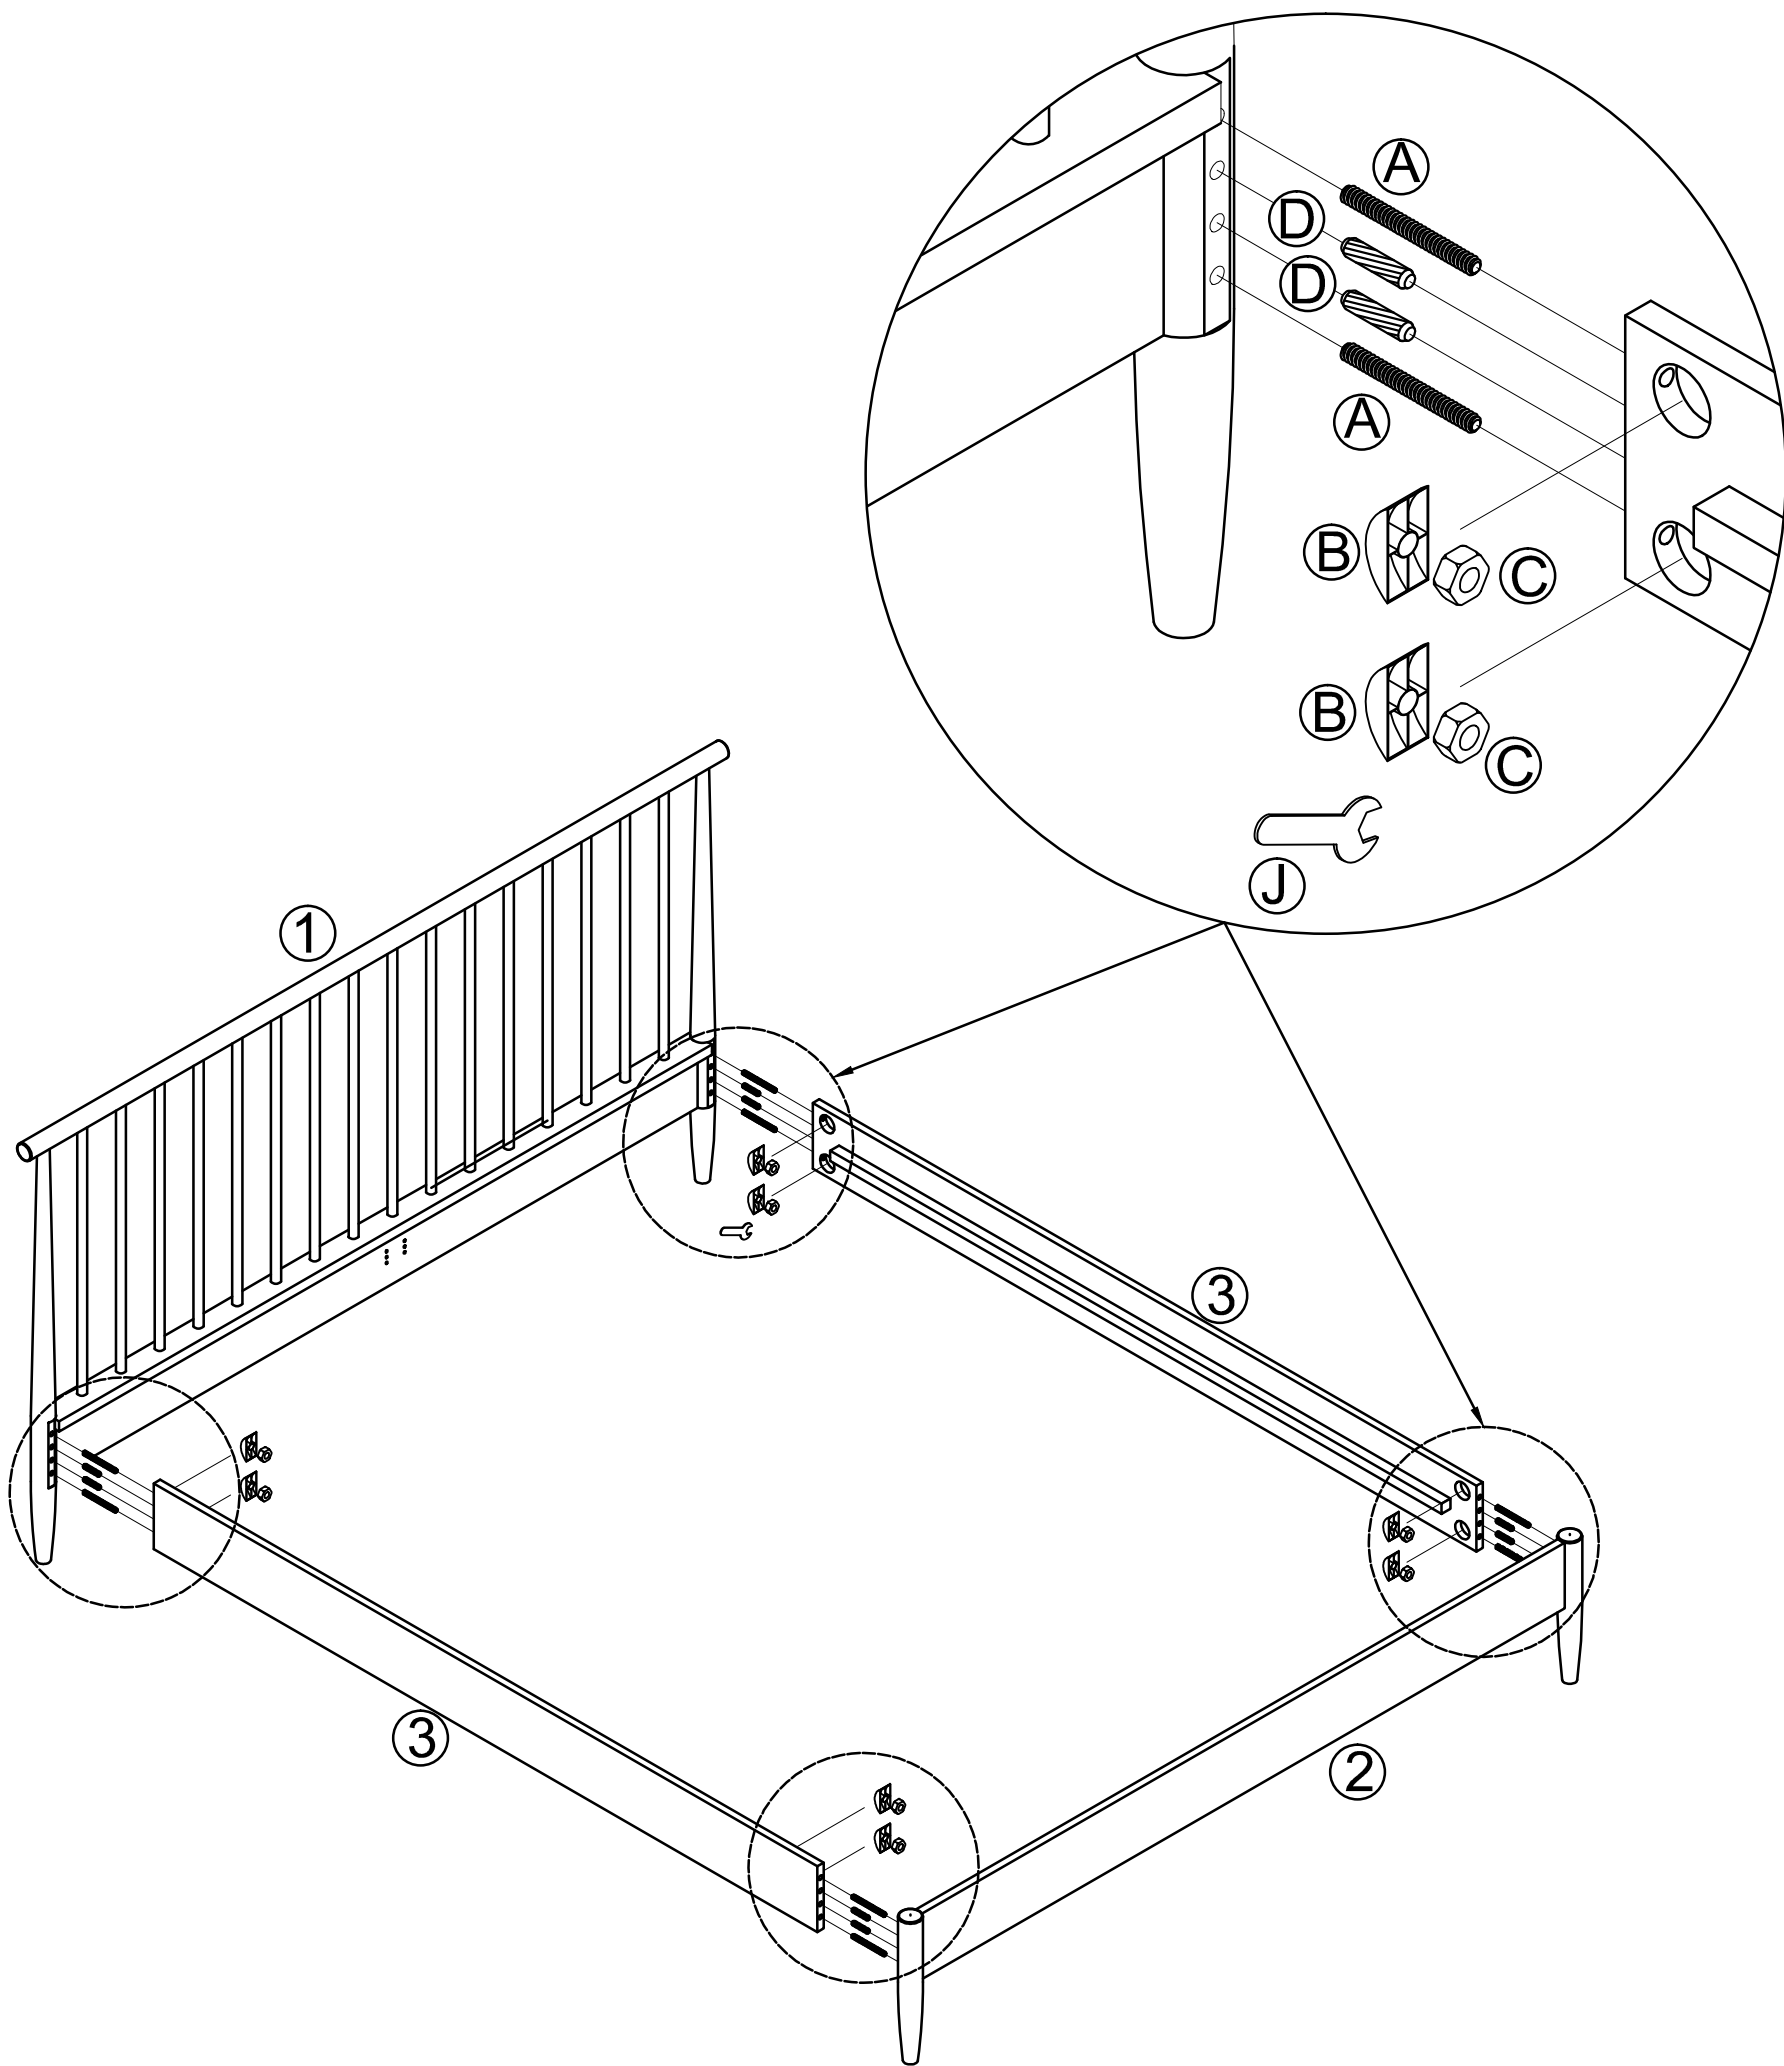


STEP 3:

- Secure the adjustable leveller(I) onto the support leg(5);
- Attach the support leg(5) onto centre rail(4) by Hardware(H).

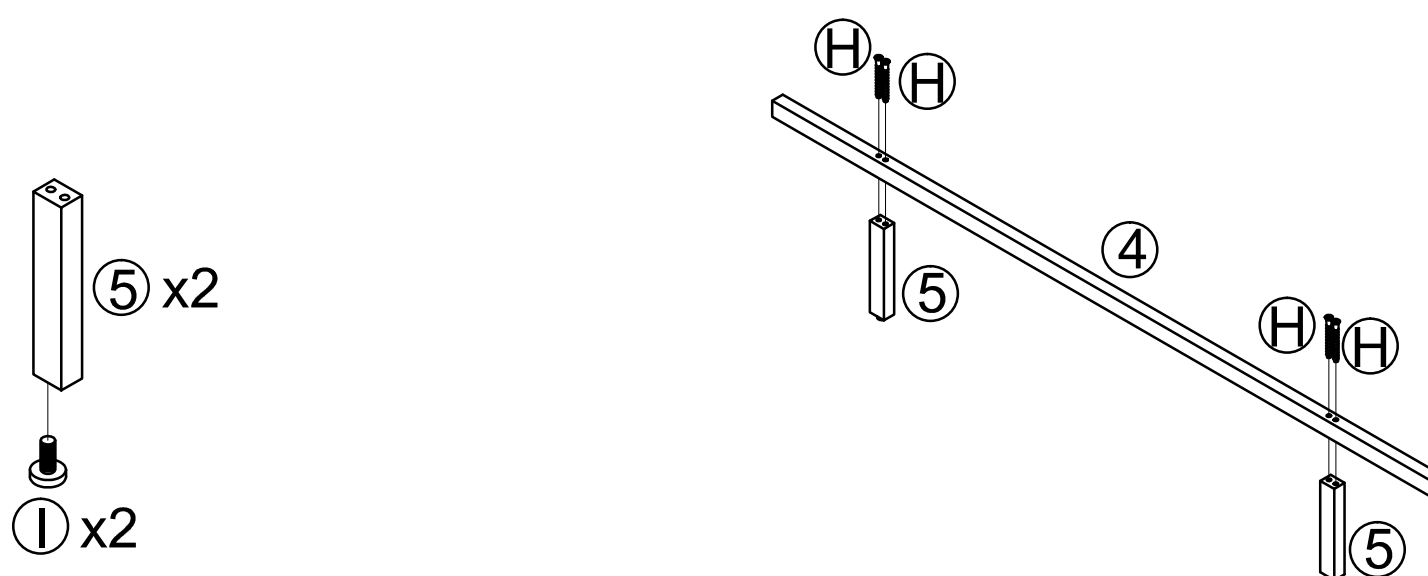
**STEP 4:**

- Secure the metal bracket(E) on the headboard&footboard by hardware(F)

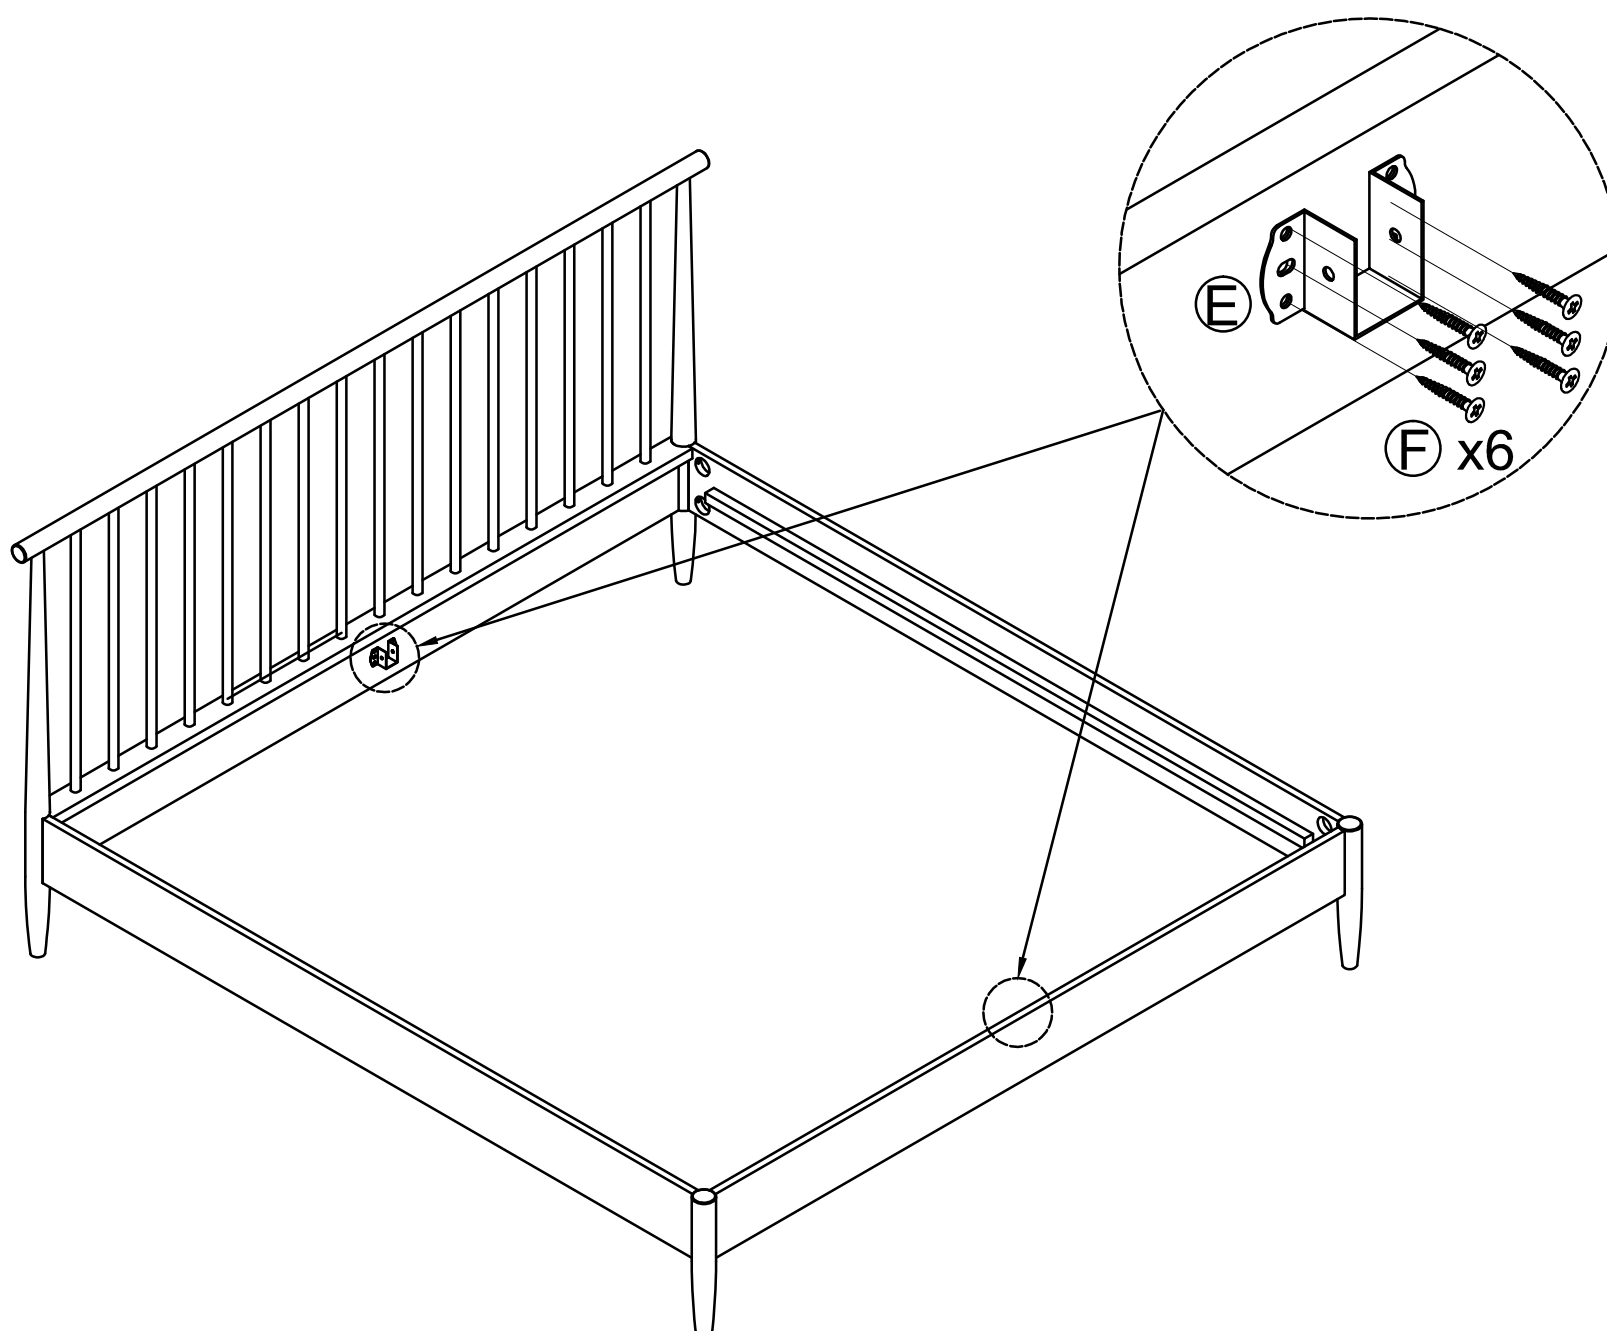


STEP 5:

- Secure centre rail by hardware(F)

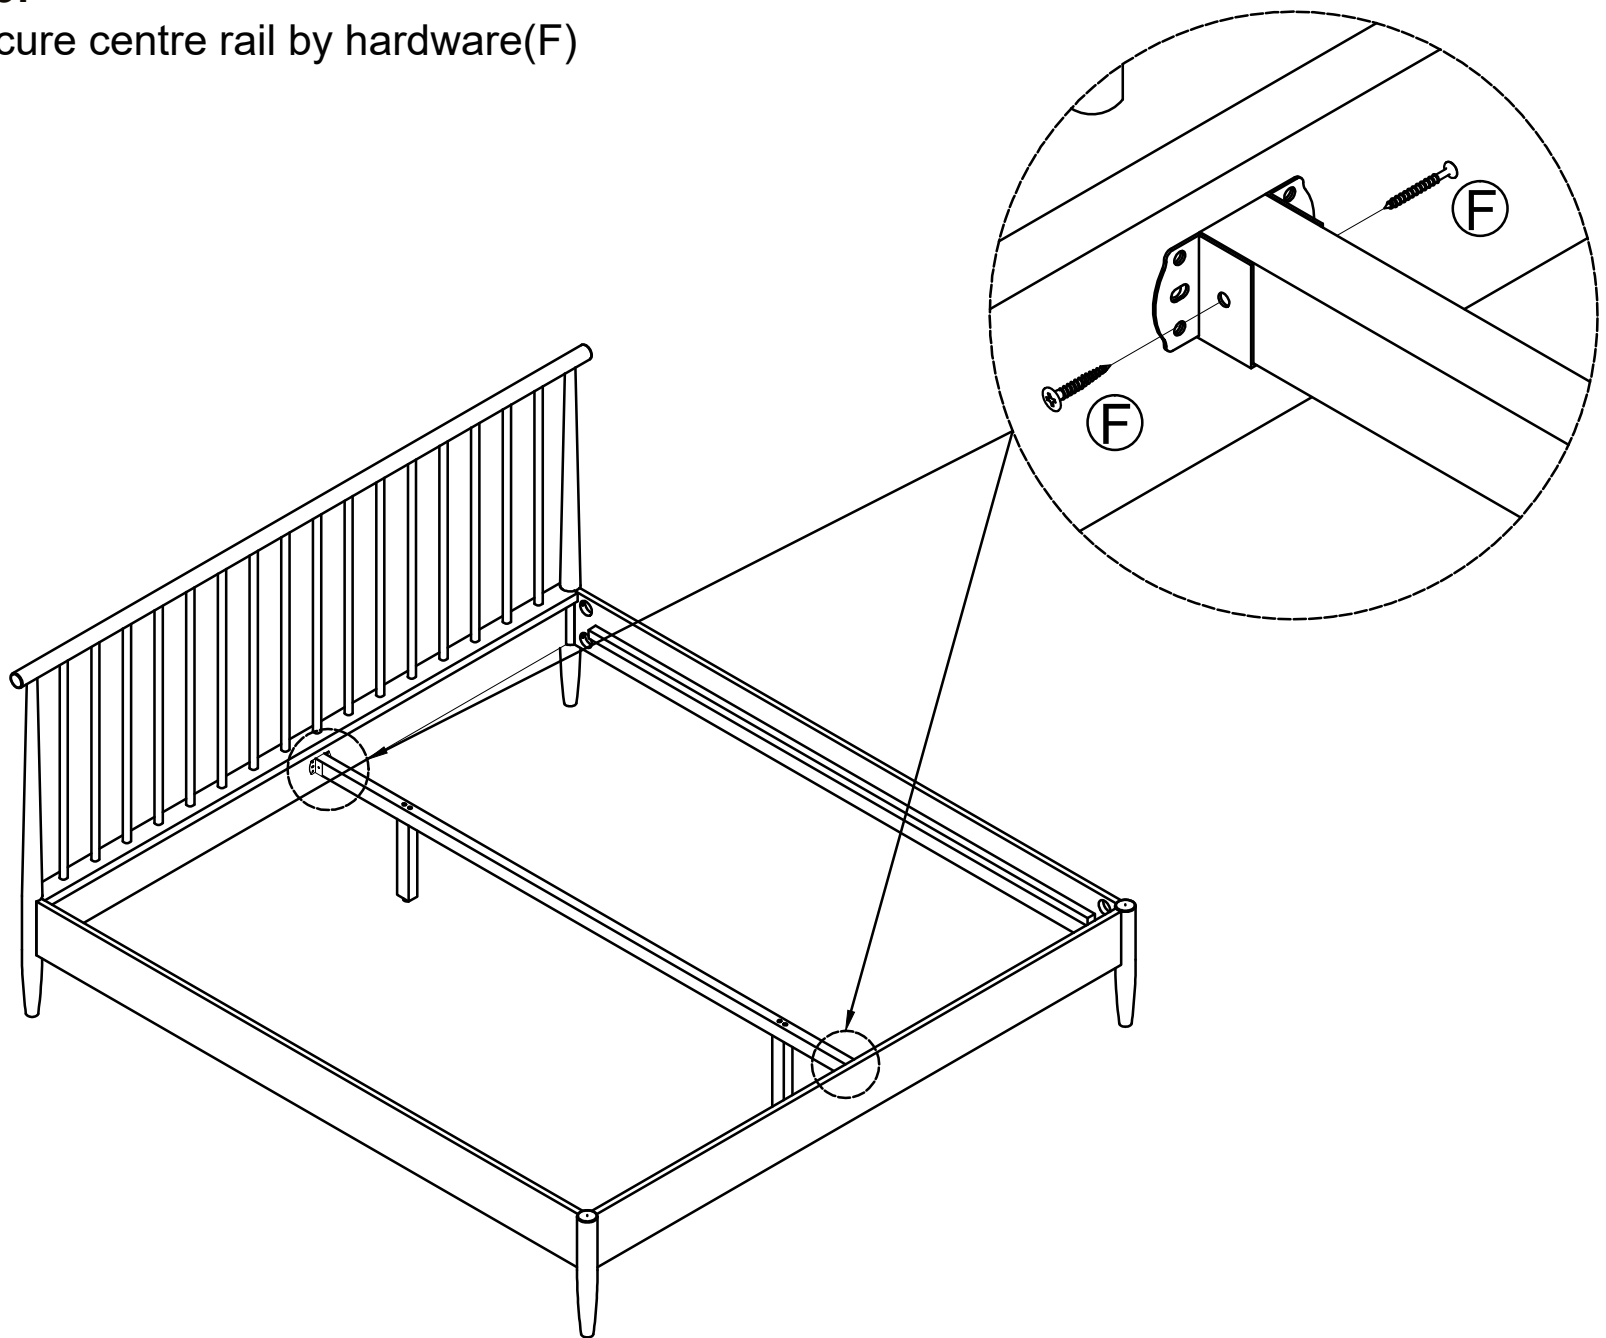


STEP 6:

- Fix the slats(6) by hardware(M)&(G)

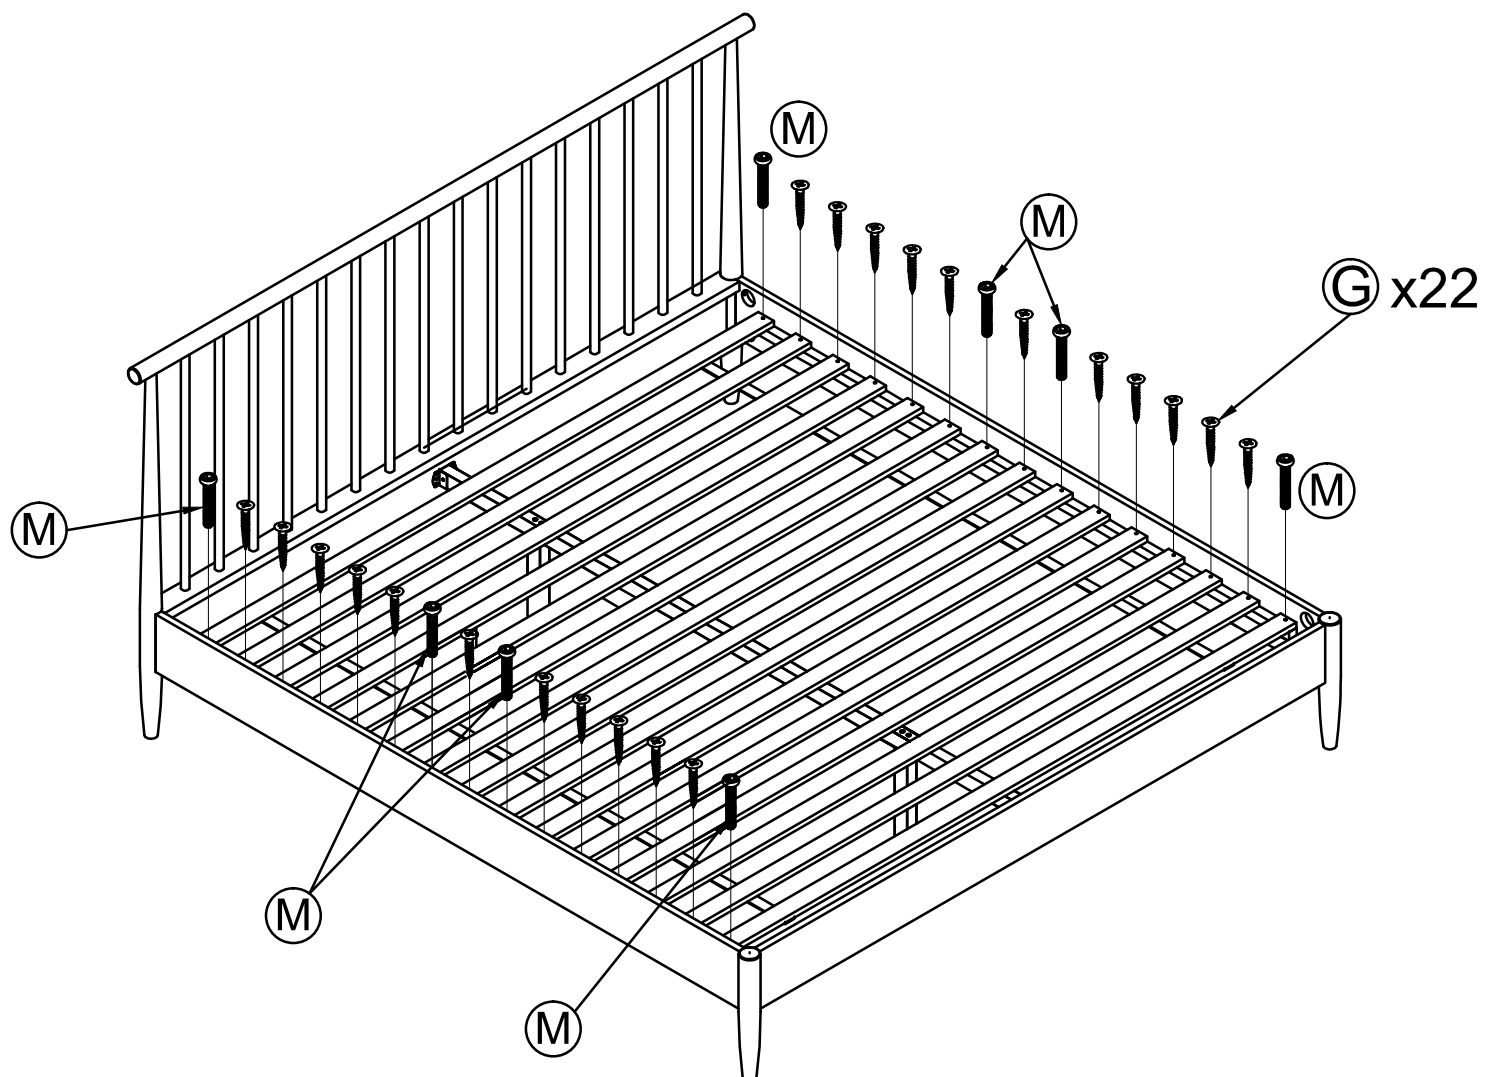

FINISHED

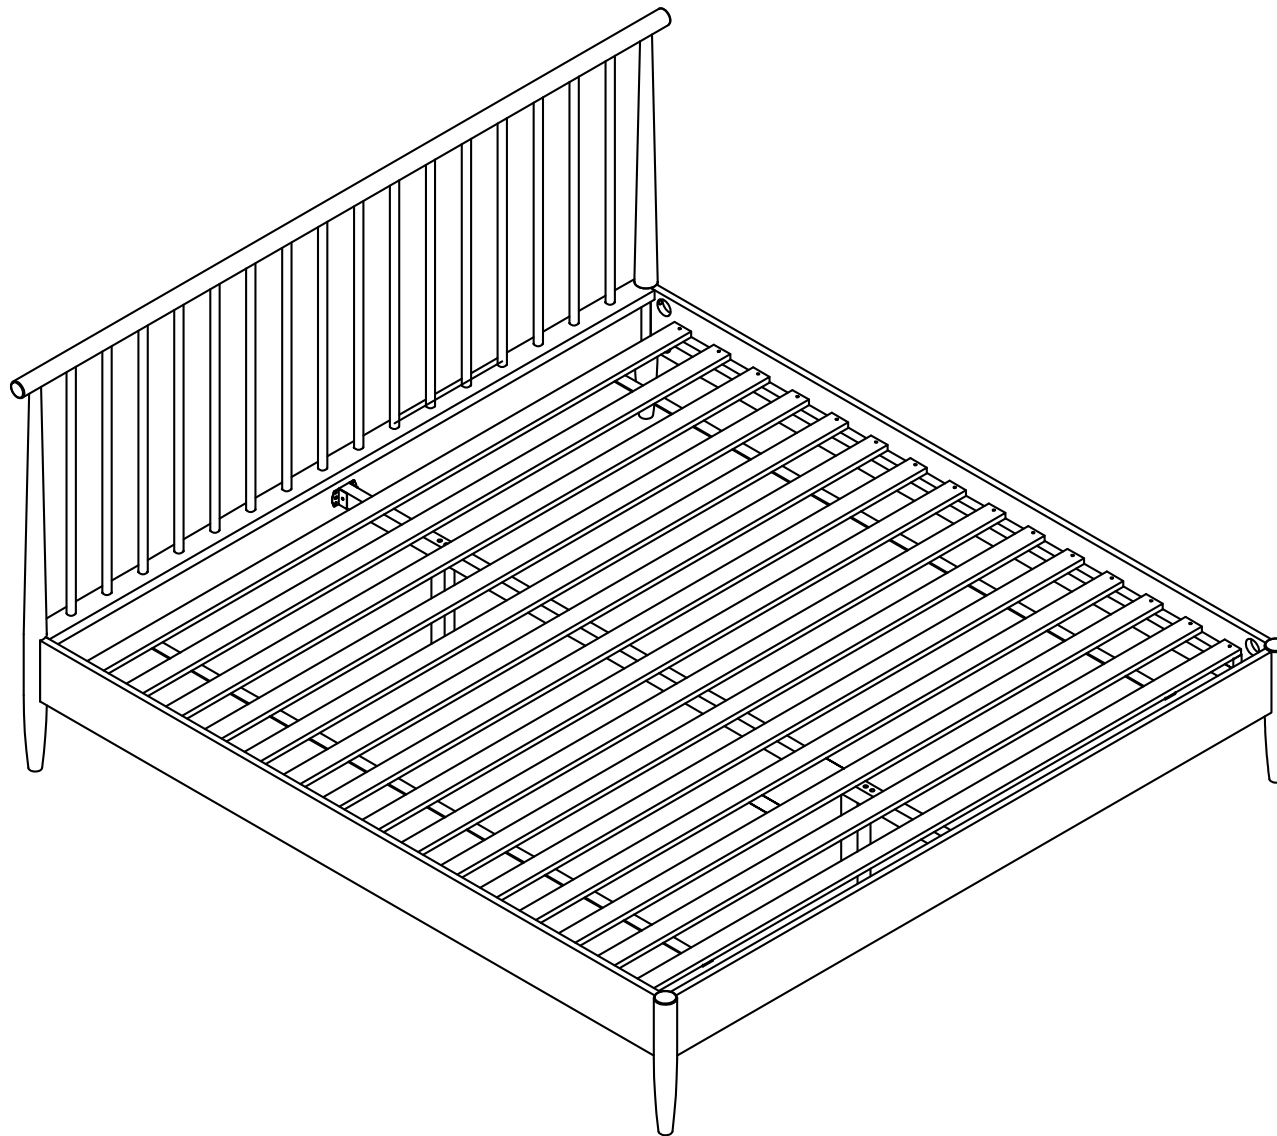

CAUTION

Always Lift Your Bed When Moving /Relocating - Do Not Drag.
Dragging Can Cause The Centre Support Legs To Bend/Break.

PRODUCT CARE:

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.