


ASSEMBLY INSTRUCTION  
SUZANNE QUEEN BED  
83522

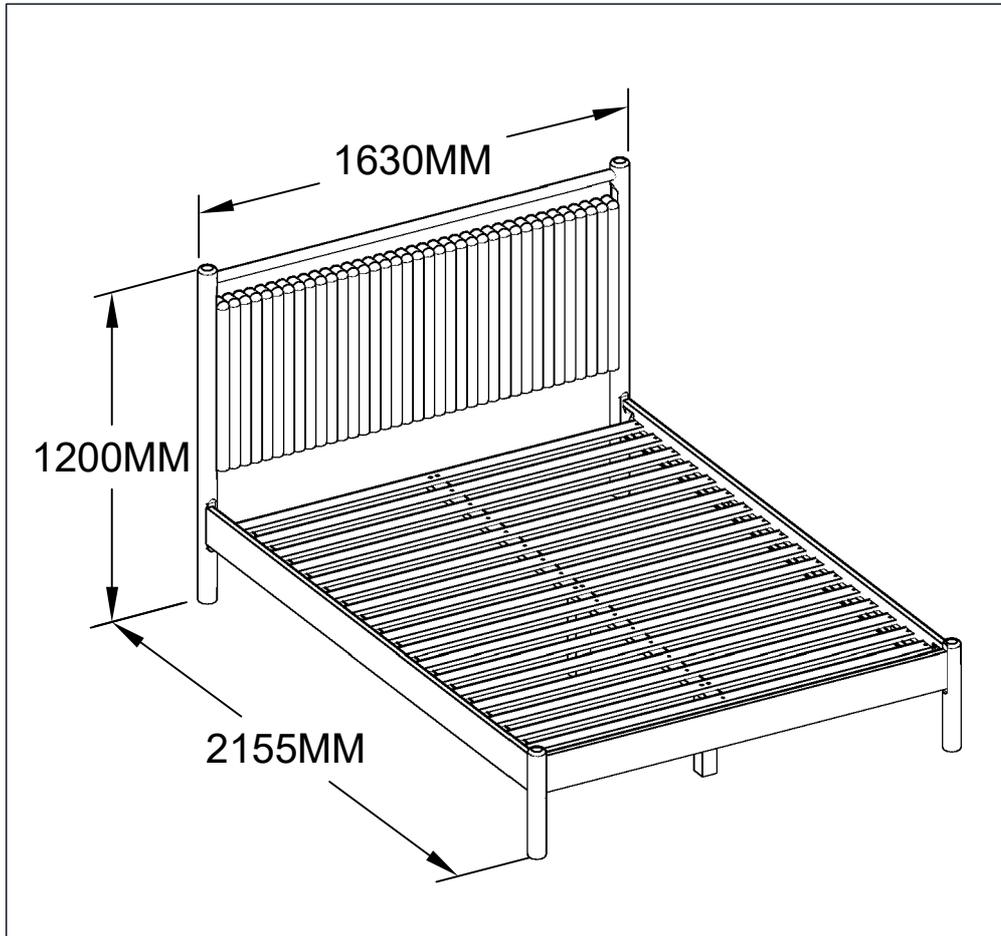


Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia.  
For any assistance with assembly or for missing parts please refer to your receipt


# PRE-ASSEMBLY PREPARATION

## Before you start:




1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

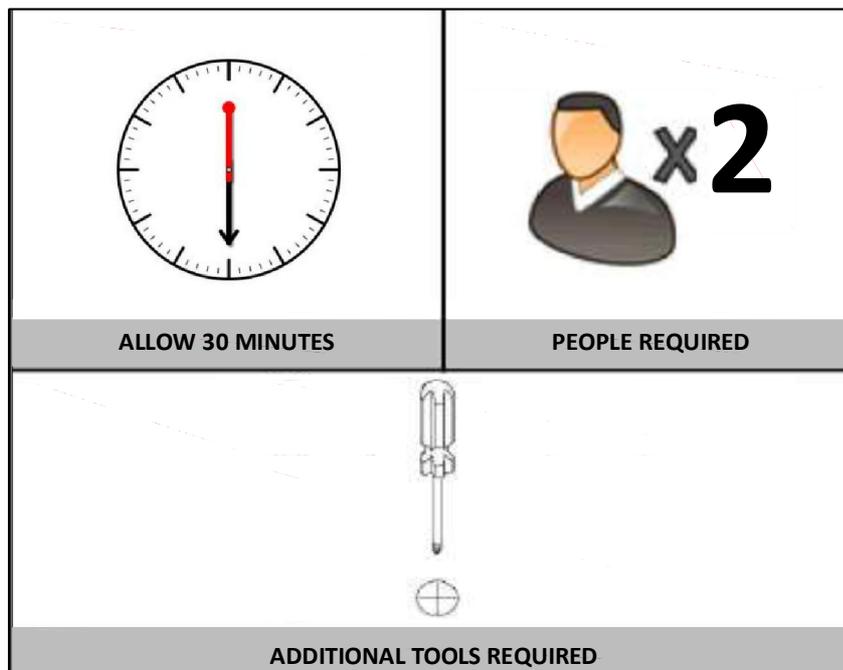


# PARTS LIST

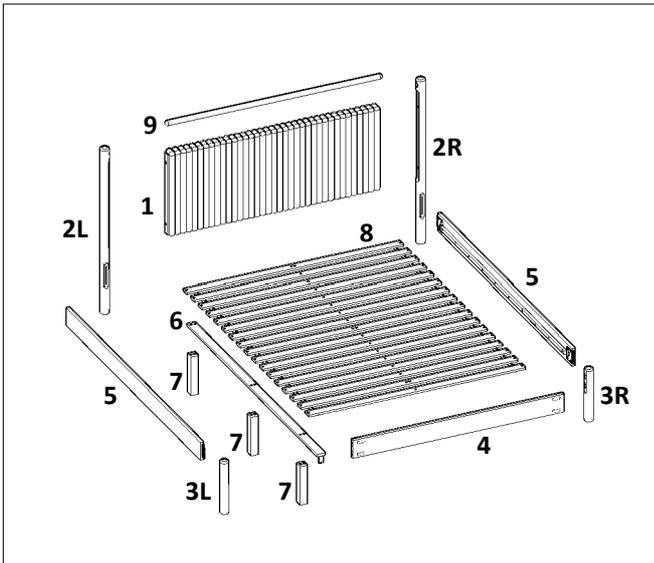

1	HEADBOARD
2	HEADBOARD LEG (L+R)
3	FOOTBOARD LEG (L+R)
4	FOOTBOARD
5	SIDE RAIL
6	CENTER RAIL
7	CENTER LEG
8	SLATS
9	HEADBOARD WOOD


<p><b>A</b> Allen Key M4 (Long Ball Head)</p>  <p>1xA</p>	<p><b>B</b> Allen Key M5</p>  <p>1xB</p>	<p><b>C</b> JCBB M8 x 40mm</p>  <p>4xC</p>
<p><b>D</b> JCBC M6 x 50mm</p>  <p>6xD</p>	<p><b>E</b> JCBC M6 x 40mm</p>  <p>4xE</p>	<p><b>F</b> JCBC M6 x 25mm</p>  <p>6xF</p>
<p><b>G</b> Wood Screw M4 x 25mm</p>  <p>42xG</p>	<p><b>H</b> Wood Screw M3.5 x 16mm</p>  <p>1xH</p>	<p><b>I</b> M8 Spring Washer</p>  <p>4xI</p>
<p><b>J</b> M8 Flat Washer</p>  <p>4xJ</p>	<p><b>K</b> M6 Spring Washer</p>  <p>4xK</p>	<p><b>L</b> Wood Dowel M8 x 30mm</p>  <p>4xL</p>

STEP 1 : Attach the (2) to (1) and (9) by using (C),(I) and (J) with Allen Key M5 (B) as shown.

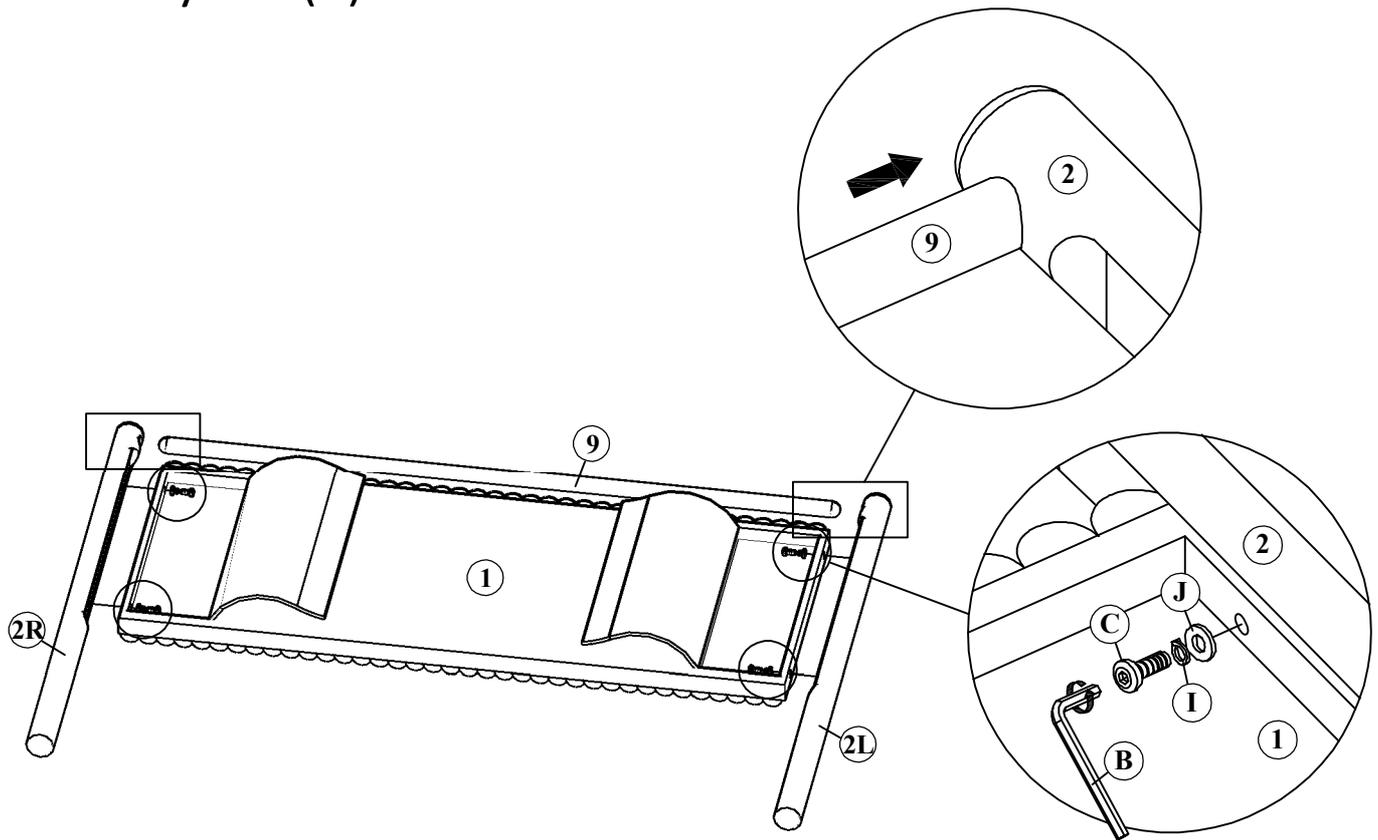


STEP 2 : Attach the (3) to (4) by using (L),(E) and (K) with Allen Key M4 (A) as shown.


Remarks:  
arrows sticker points upward

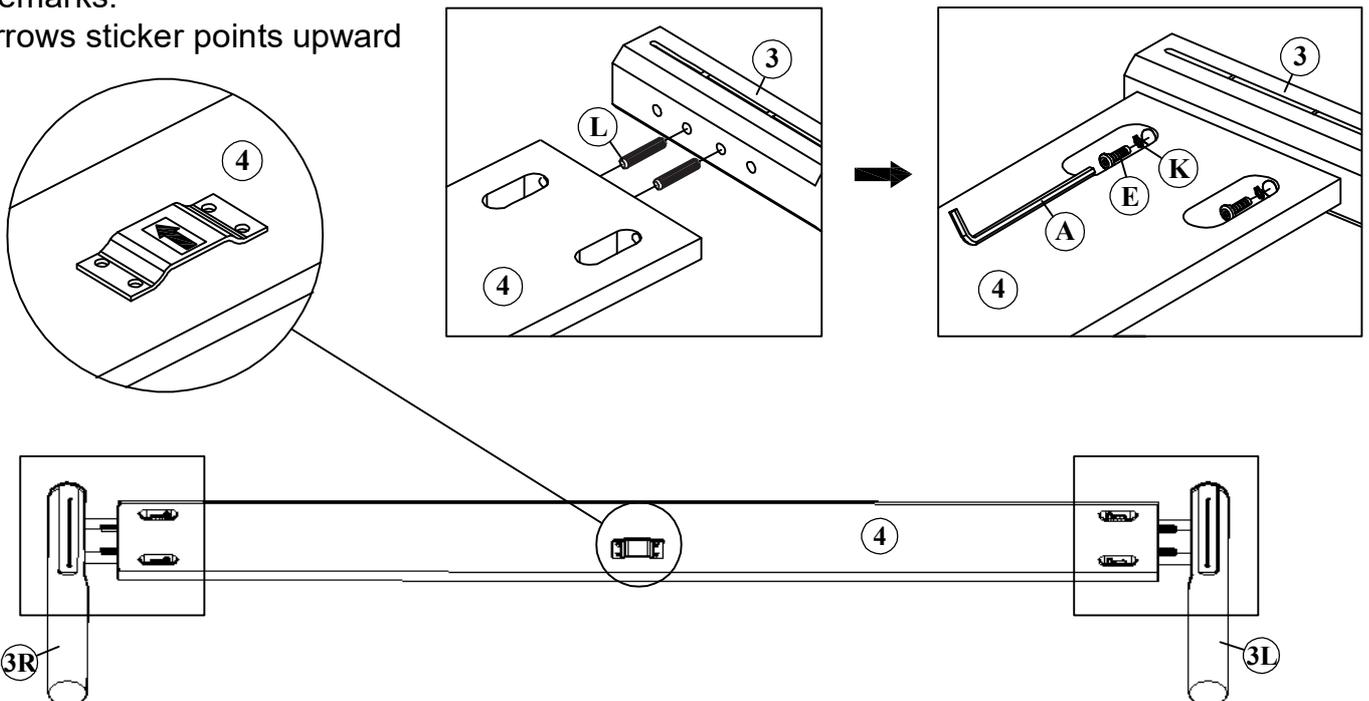


STEP 3 : Attach (5) to Assembled Headboard and Footboard as shown.

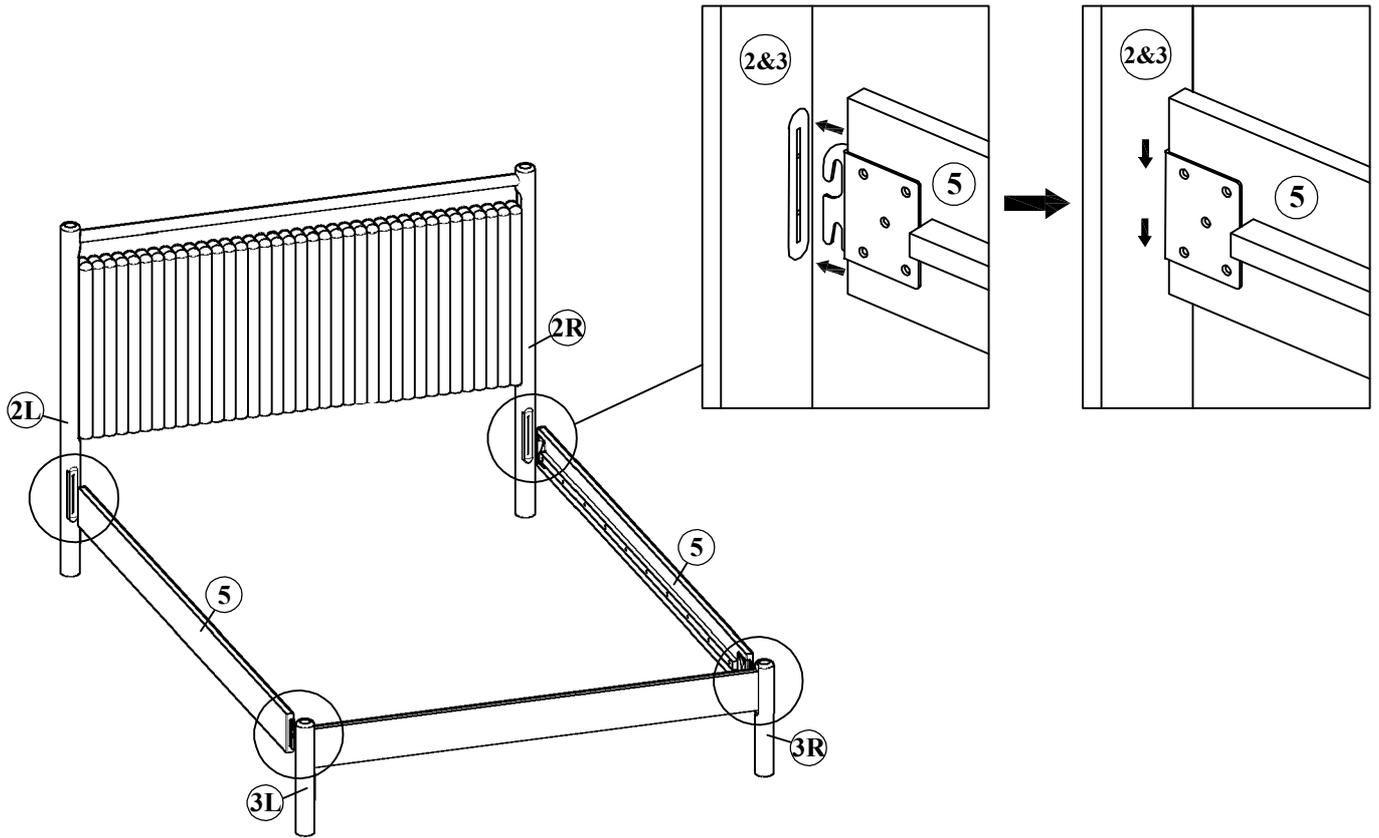


STEP 4 : Attach (8) and (7) to (6) With (D) Using a Allen Key M4 (A) as shown.

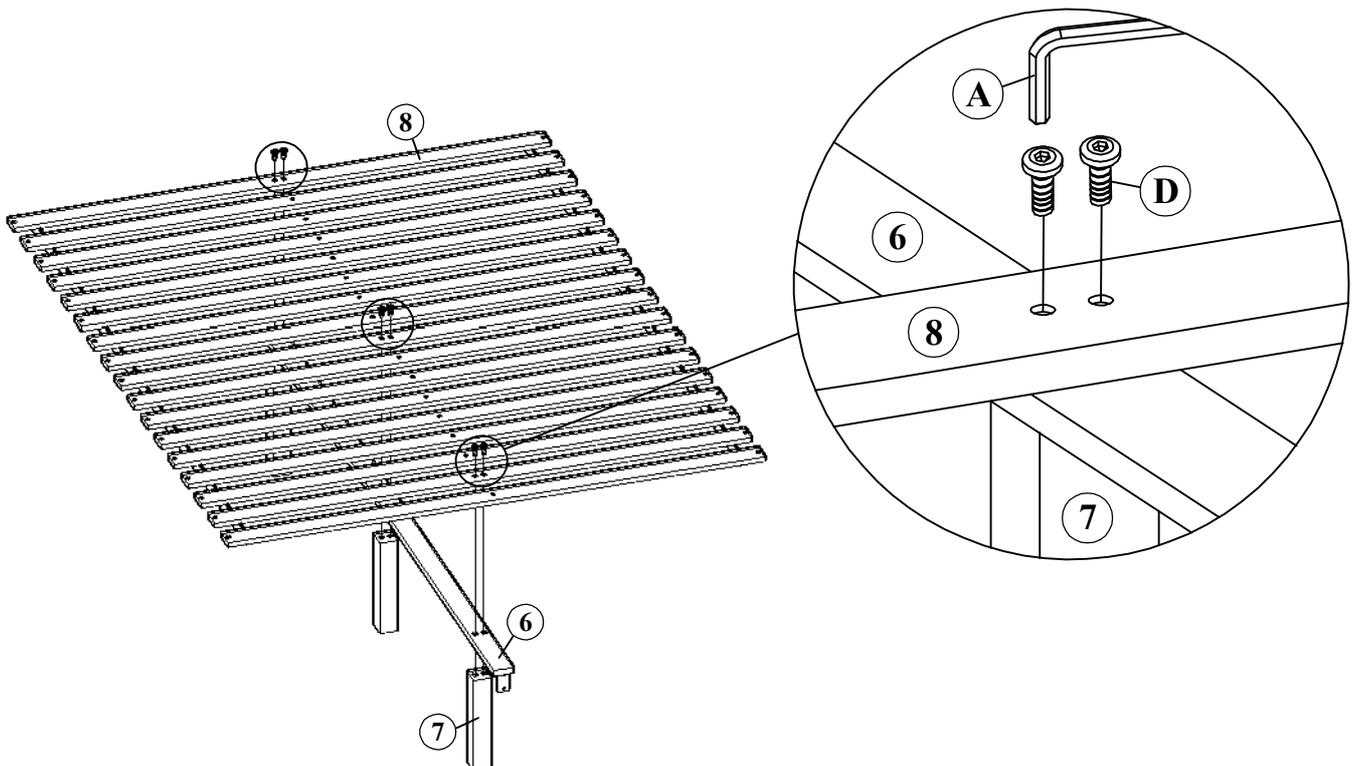


STEP 5 : Attach Assembled Center Support to Assembled Bed with (H) using a Screwdriver as shown.

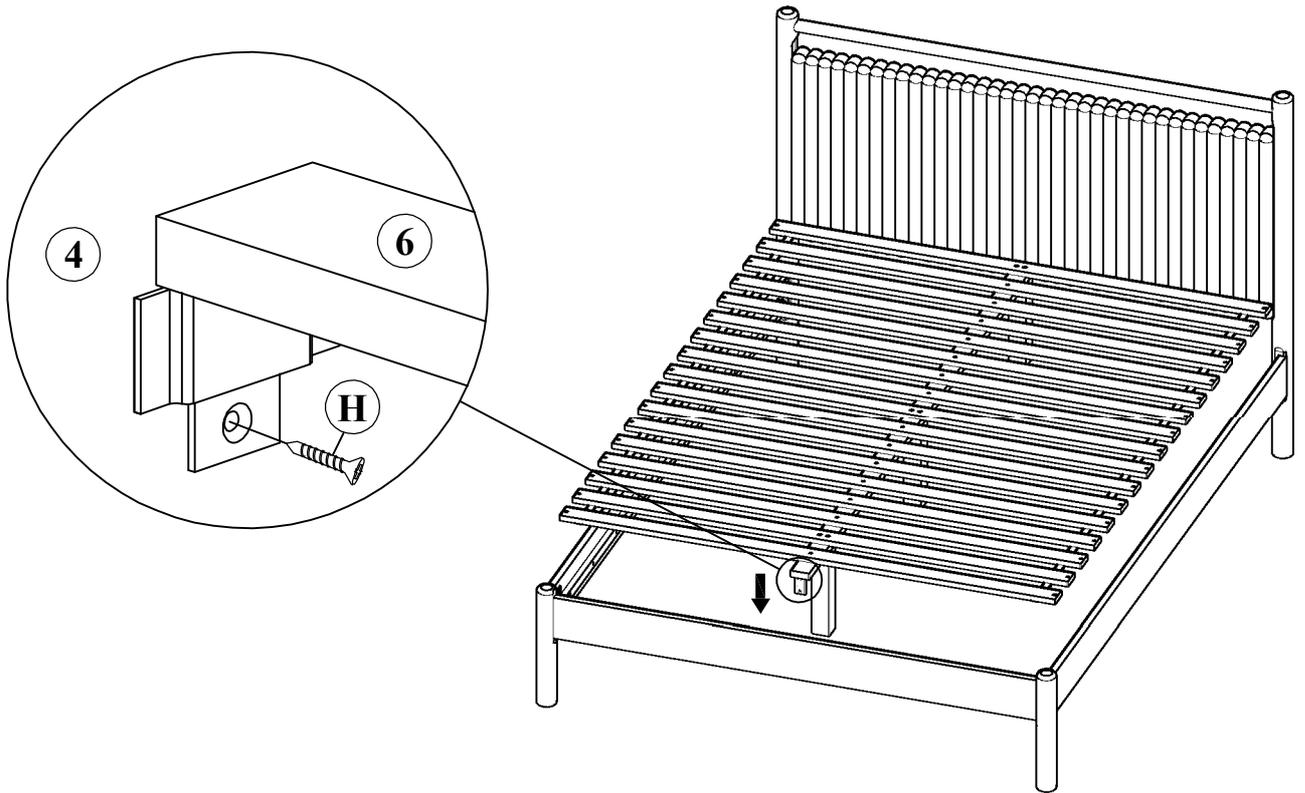


STEP 6 : Attach Assembled Bed Slats to Assembled Bed Frame with (F) Using a Allen Key M4 (A) as shown.

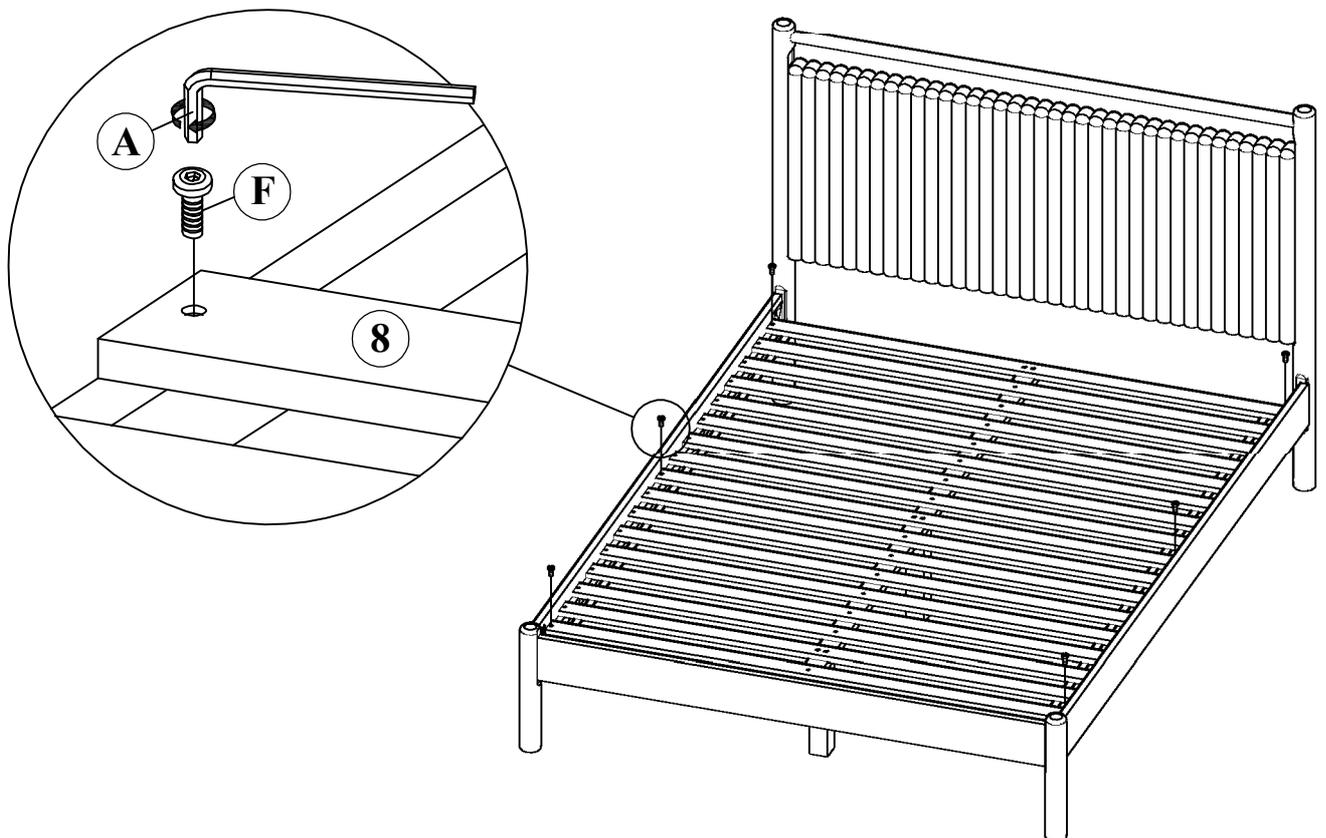

**STEP 7 : Attach Assembled Bed Slats to Assembled Bed Frame with (G) using a Screwdriver as shown.**

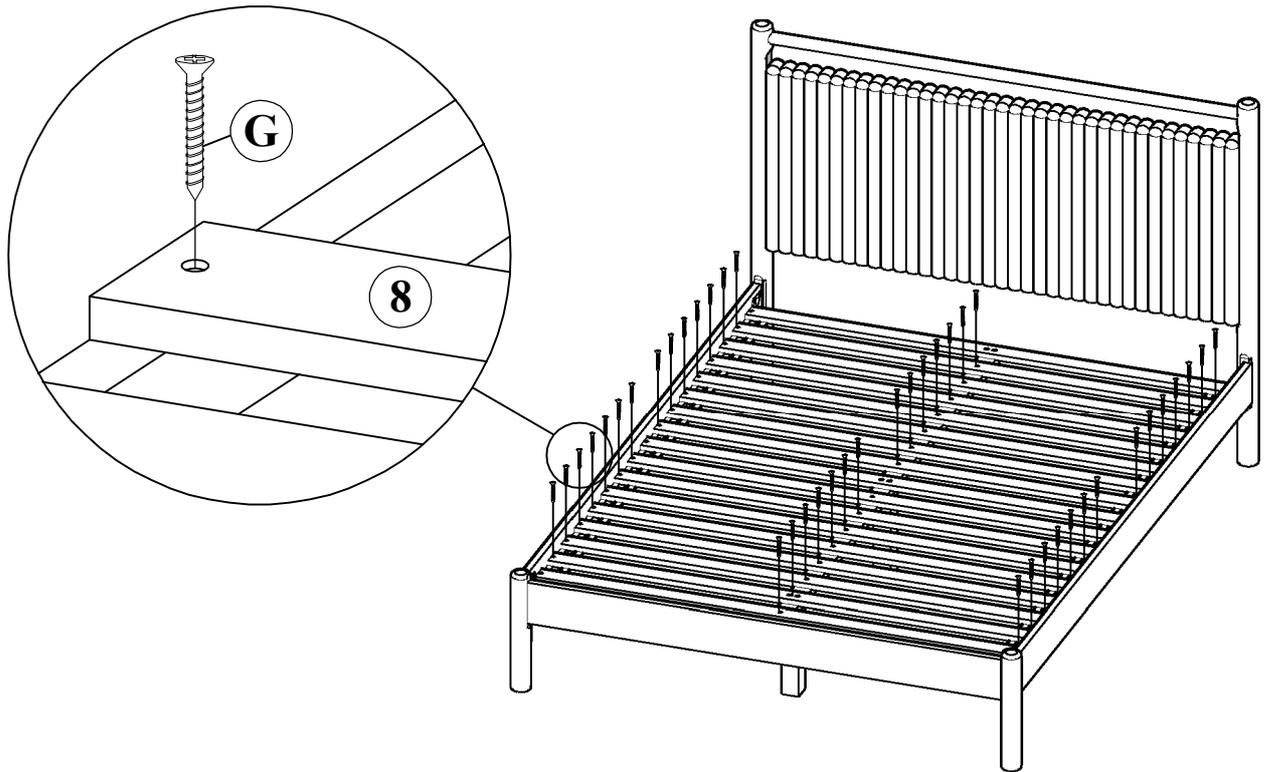

**ASSEMBLY IS COMPLETE**

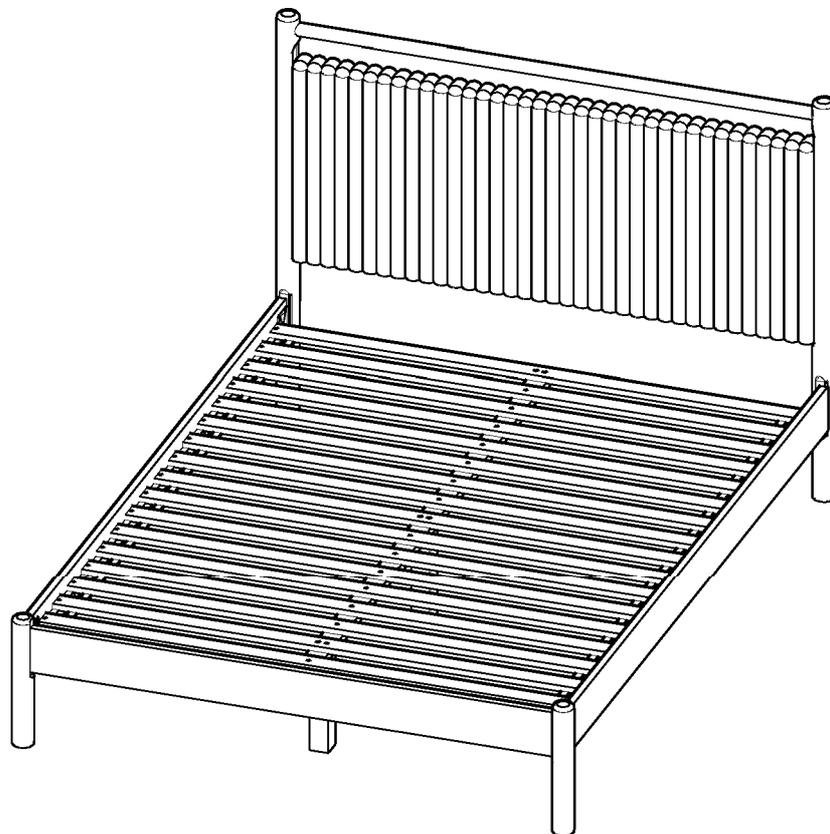

**CAUTION:**

**ALWAYS LIFT YOUR BED WHEN MOVING/RELOCATING - DO NOT DRAG.  
DRAGGING CAN CAUSE THE CENTRE SUPPORT LEGS TO BEND/BREAK**

# **PRODUCT CARE:**

## **REGULAR CARE:**

- **Protect from direct sunlight**
- **Vacuum regularly using low suction**
- **Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.**
- **Do not place material with high temperature directly onto the surface of your furniture.**

## **CLEANING:**

- **Protect from direct sunlight**
- **Vacuum regularly using low suction**
- **Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.**
- **Do not place material with high temperature directly onto the surface of your furniture.**

## **SPOT CLEANING:**

- **Do not rub**
- **Do not spot clean with any solvent**
- **Treat spills and stains as soon as possible**
- **Gently scrape off any soil or blot any liquid from the surface of the fabric before applying cleaner**
- **Apply proprietary cleaning agents strictly according to instructions to remove the residue of the spill**
- **Do not saturate the fabric or interior with water or other cleaning liquids**

## **WARNING:**

**Apply only water-based soil resist (fabric protection) treatments. Do not use aerosol products**

**\* PILLING IS NOT A FABRIC DEFECT OR FAULT AND IS NOT COVERED BY WARRANTY**

**\* PILLING IS A NORMAL OCCURRENCE CAUSED BY WEAR AND TEAR AND DOES NOT AFFECT THE DURABILITY OR FUNCTIONALITY OF THE FABRIC AND IS EASILY REMOVED**