
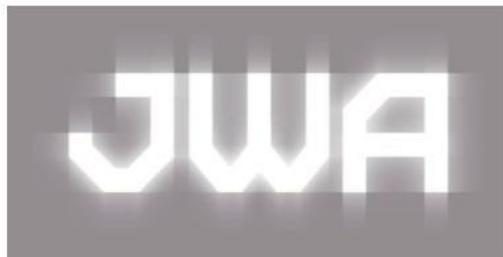


ASSEMBLY INSTRUCTION

MORRIS 3 DRAWER TALL CHEST
ITEM CODE 76372

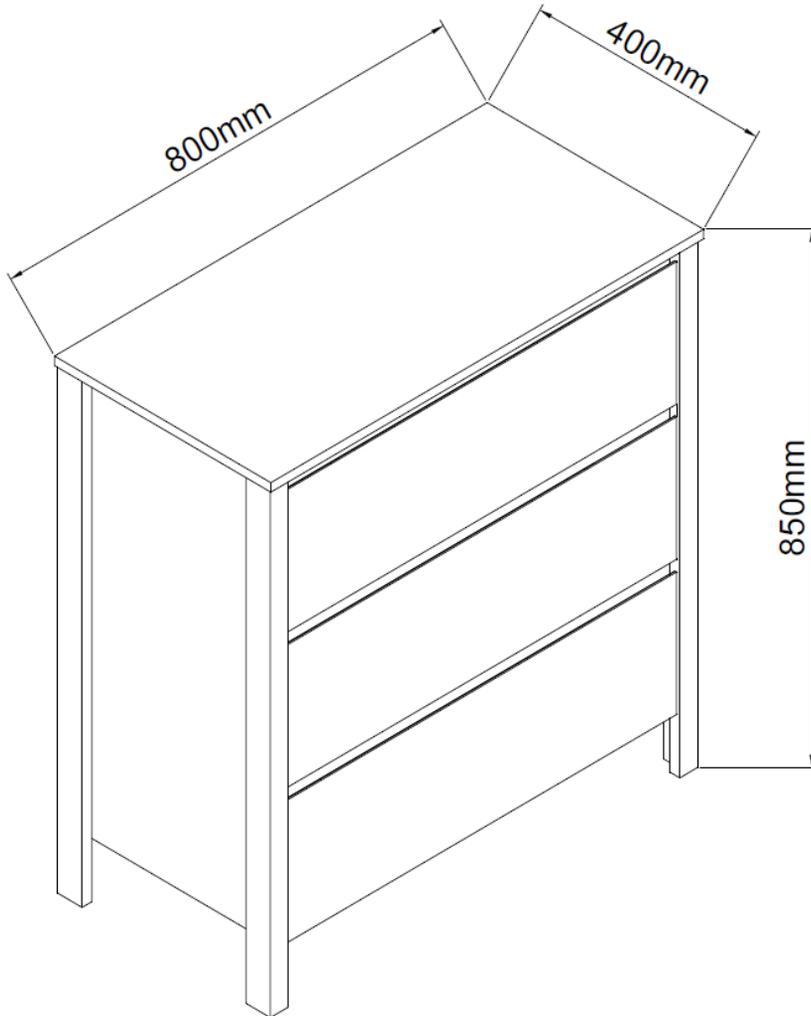


Imported by JWA Furniture Pty Ltd, Brisbane ,Qld, Australia.
For any assistance with assembly or for missing parts please refer to your receipt

PRE-ASSEMBLY PREPARATION

Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

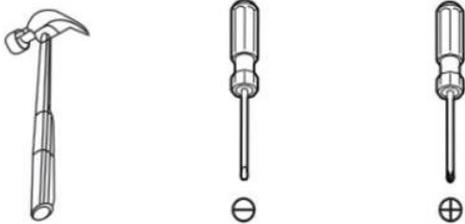		
<p>Allow 20 min</p>	<p>For 2 person</p>	<p>Additional tools required</p>



TIPPING WARNING





Serious or fatal injuries may occur from furniture toppling over. To help avoid this please follow the below recommendations:

- Install the provided "Tipping Kit" as per the instructions
- Never allow children to climb on or hang off of any part of this product
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product




If this product has drawers:

- Place the heaviest items in lowest drawers
- Do not open more than 1 drawer at a time as this may cause the product to become unbalanced
- Do not tamper with or remove any drawer interlocking/running system


Note: The use of the provided "Tipping Kit" may reduce but not necessarily eliminate the risk of furniture toppling over. Please use this product with caution.

This is a permanent label. Do not attempt to remove!

CAM LOCK INSTALLATION


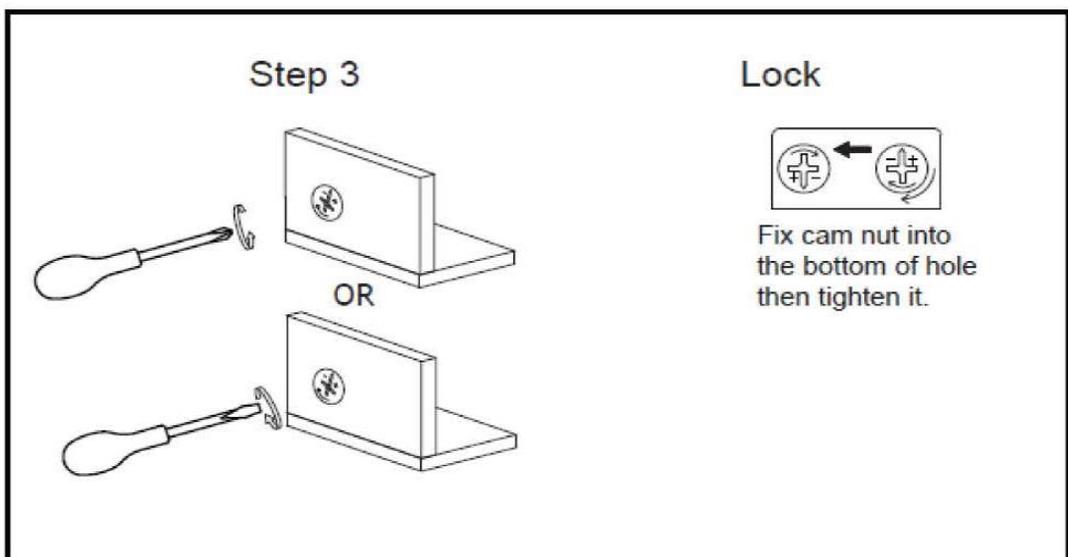
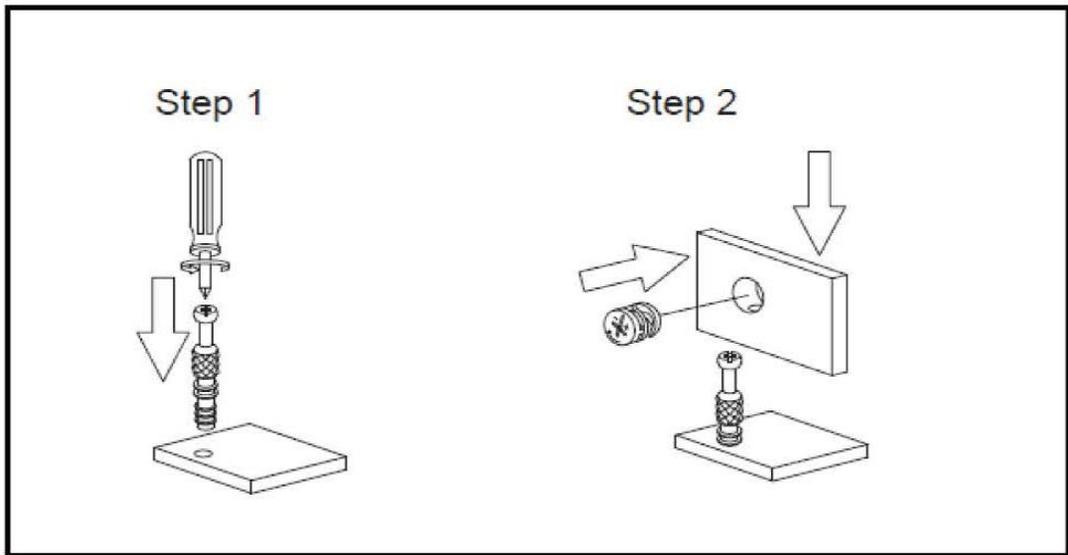
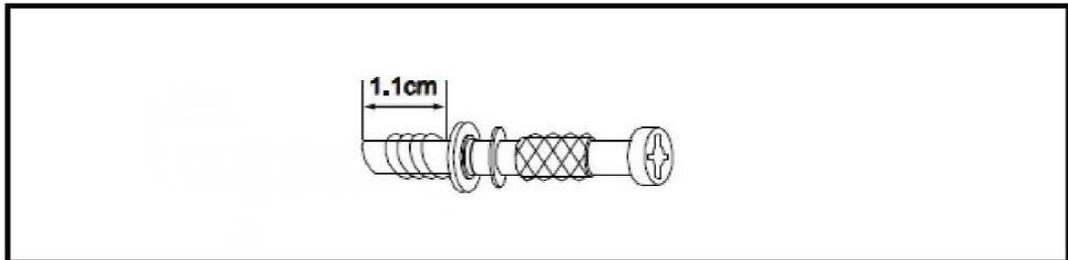


PARTS LIST

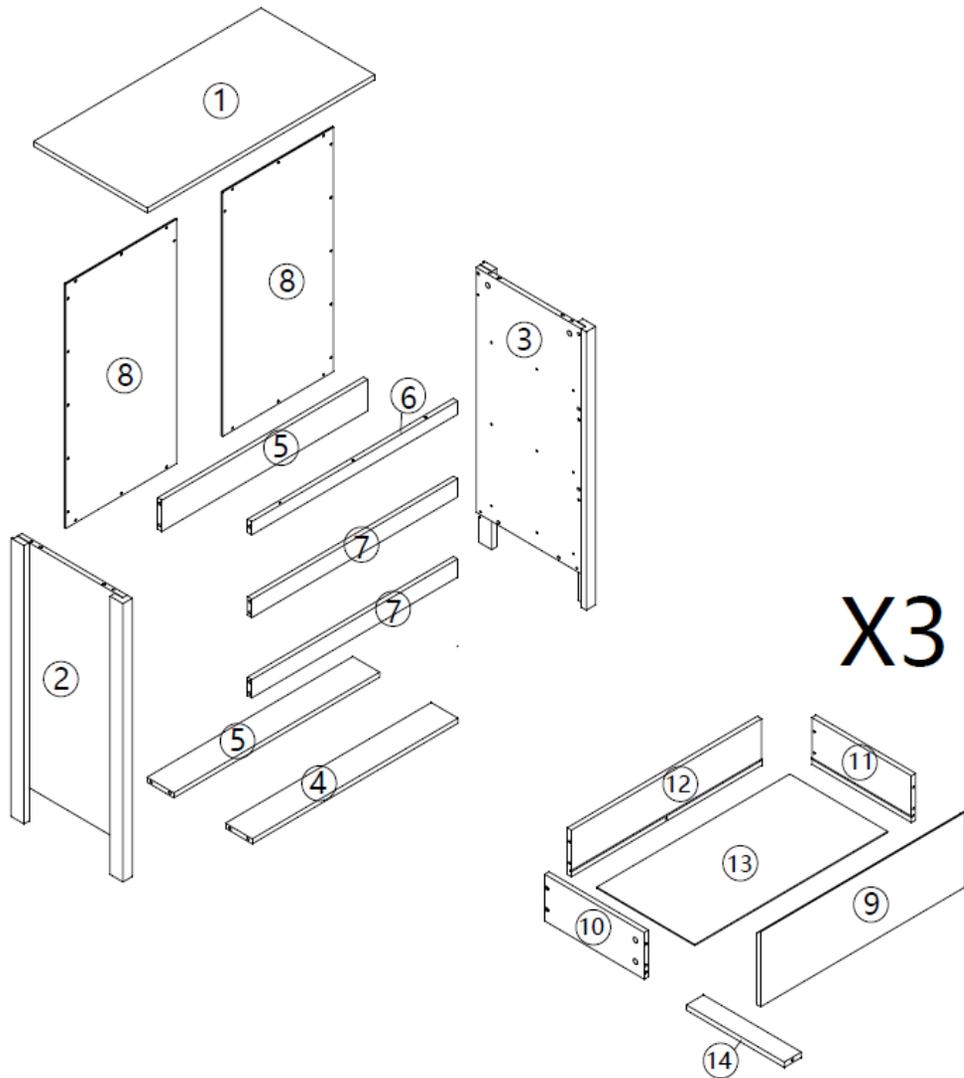


1	TOP BOARD
2	SIDE BOARD
3	SIDE BOARD
4	CROSSING BAR
5	CROSSING BAR
6	CROSSING BAR
7	CROSSING BAR
8	BACK BOARD
9	DRAWER SURFACE BOARD



10	DRAWER SIDE BOARD
11	DRAWER SIDE BOARD
12	DRAWER BACK BOARD
13	DRAWER BOTTOM BOARD
14	DRAWER SUPPORT BAR
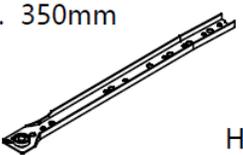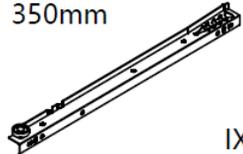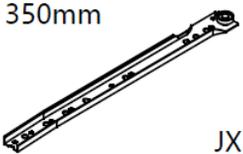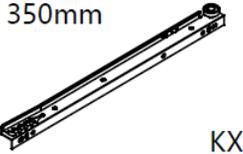
<p>A. $\phi 15 \times 12$</p>  <p>AX29</p>	<p>B. M7X39mm</p>  <p>BX29</p>	<p>C. $\phi 8 \times 40$mm</p>  <p>CX16</p>	<p>D. M5X40mm</p>  <p>DX15</p>
<p>E. M4X15mm</p>  <p>EX30</p>	<p>F. M5X50mm</p>  <p>FX3</p>	<p>G. M4X15mm</p>  <p>GX24</p>	<p>H. 350mm</p>  <p>HX3</p>
<p>I. 350mm</p>  <p>IX3</p>	<p>J. 350mm</p>  <p>JX3</p>	<p>K. 350mm</p>  <p>KX3</p>	<p>L. L=730mm</p>  <p>LX1</p>

M. WALL FIXING

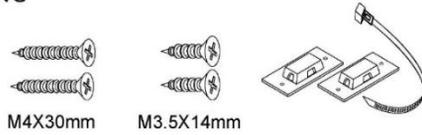

STEP:1

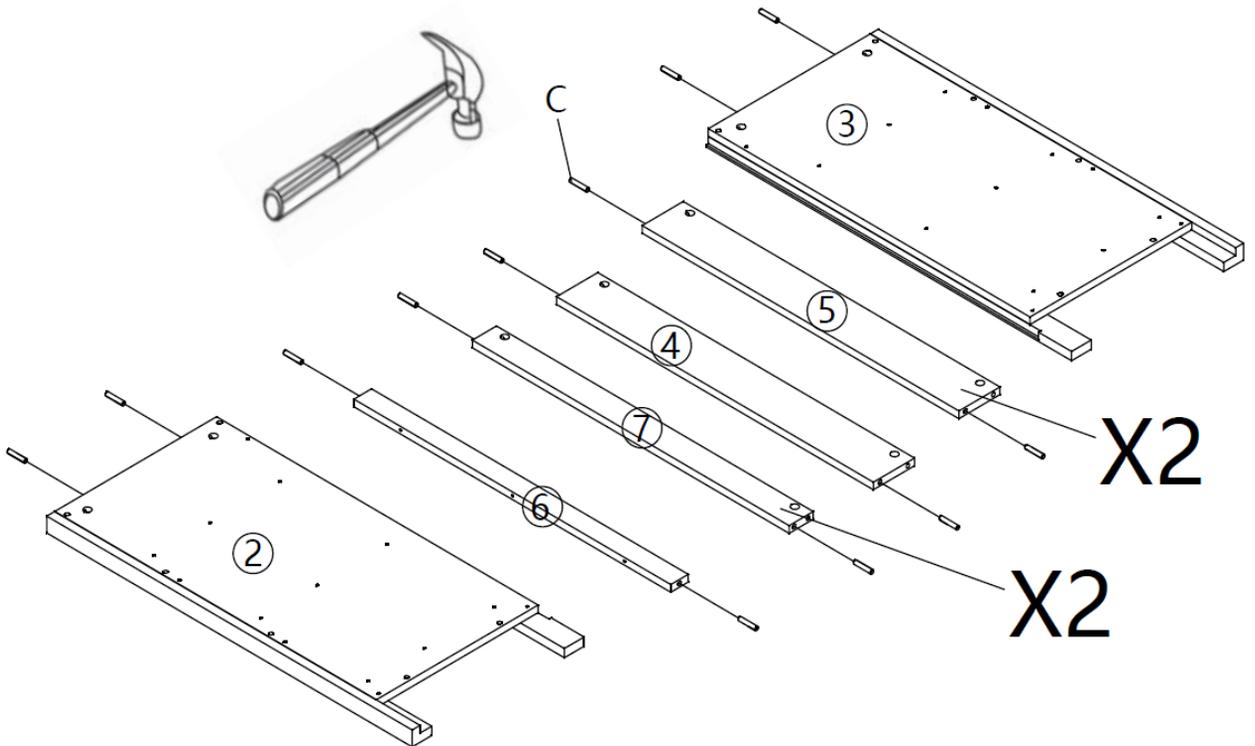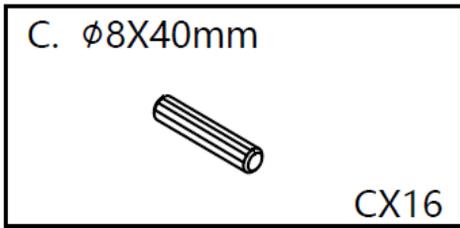


STEP:2

E. M4X15mm



EX18

H. 350mm


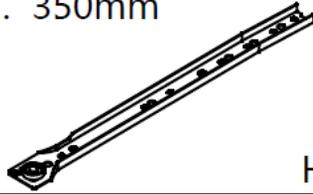


HX3

J. 350mm



JX3

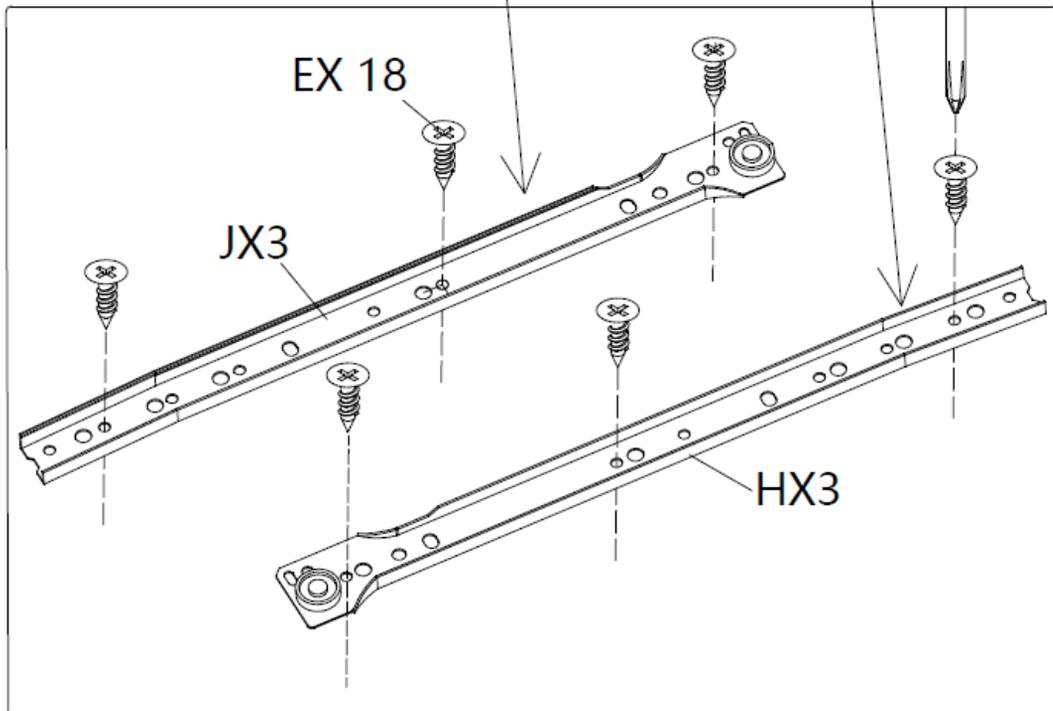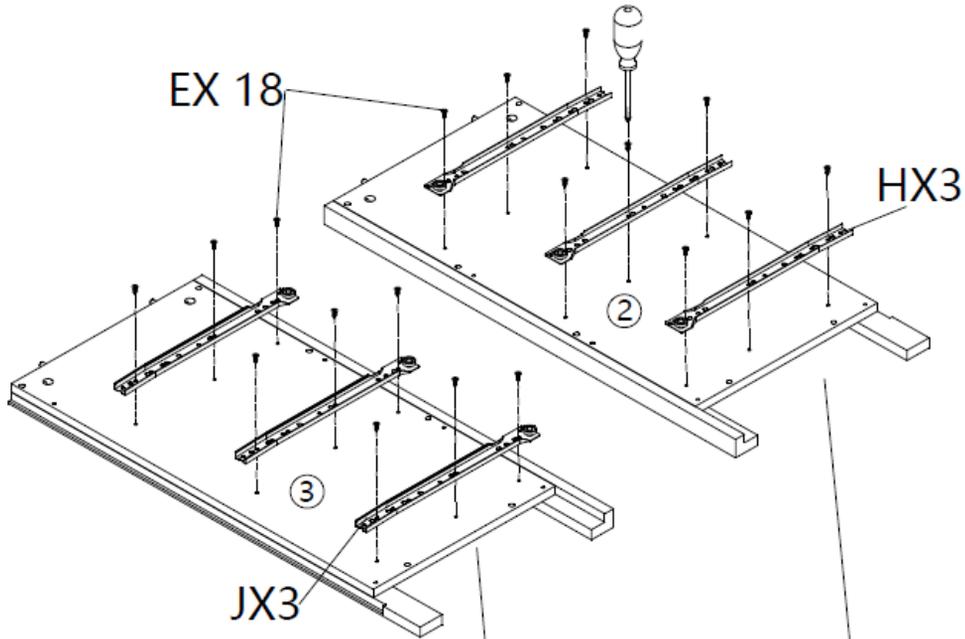

STEP:3

A. $\phi 15 \times 12$




AX10

B. M7X39mm



BX10

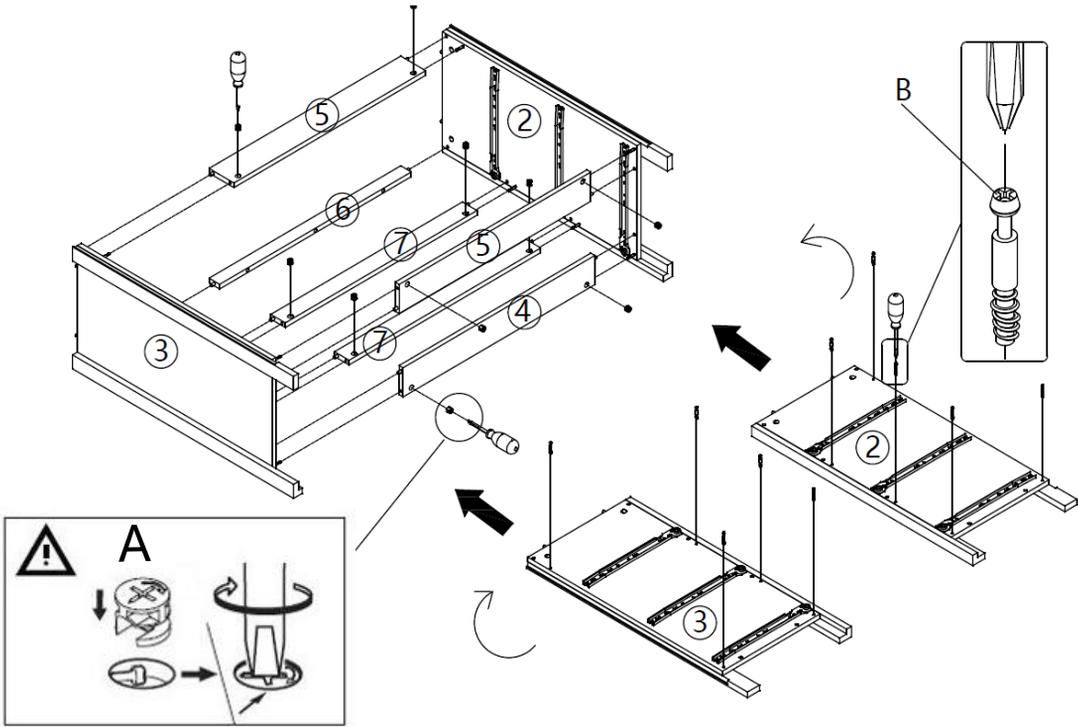

STEP:4

A. $\phi 15 \times 12$




AX4

B. M7X39mm



BX4


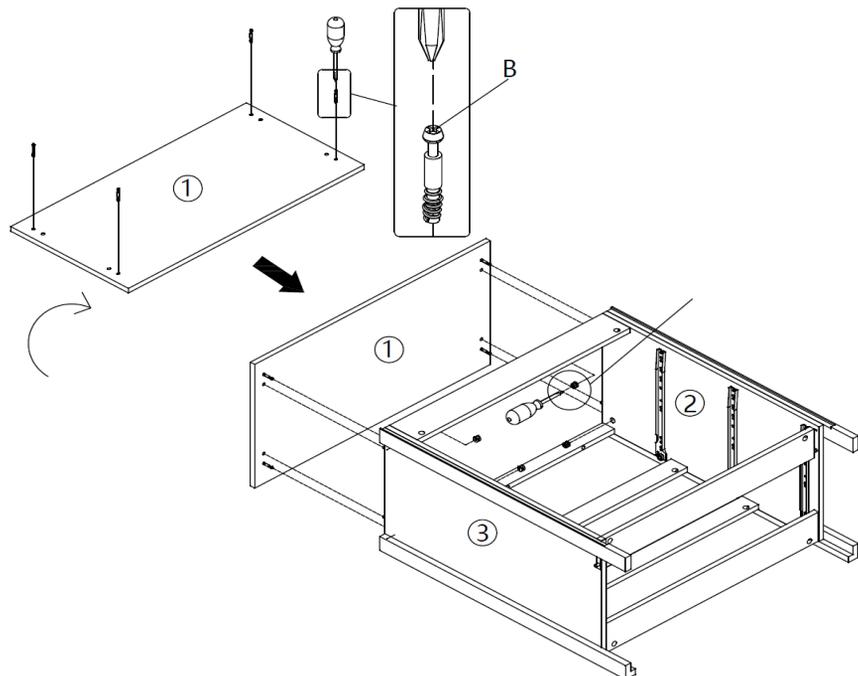


STEP:5

L. L=730mm



LX1

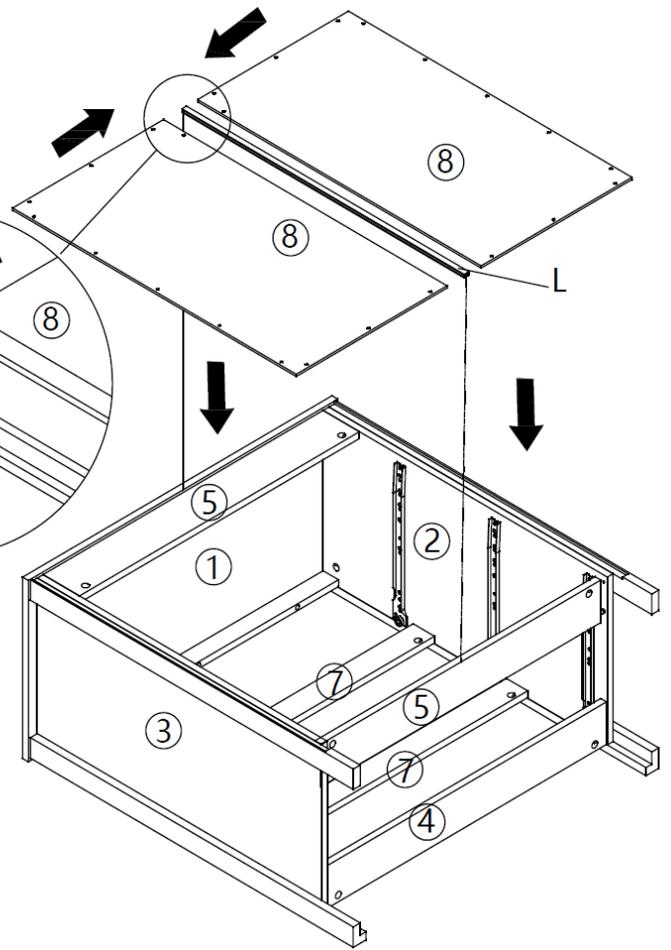
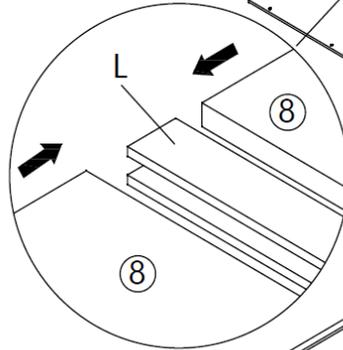


STEP:6

G. M4X15mm



GX24

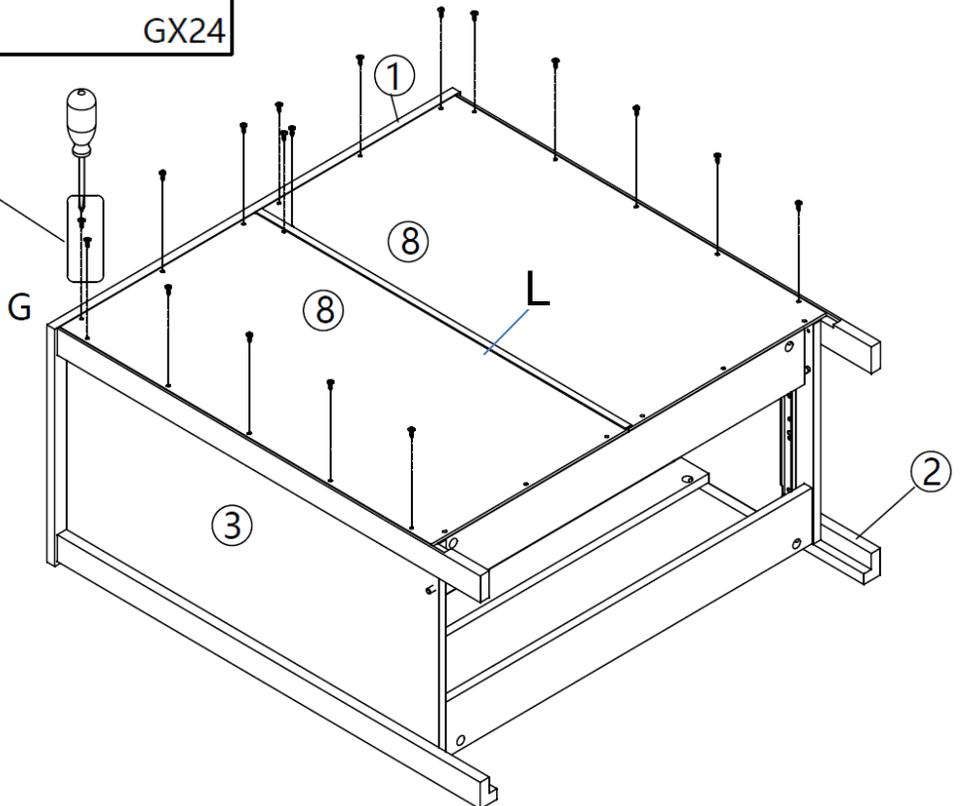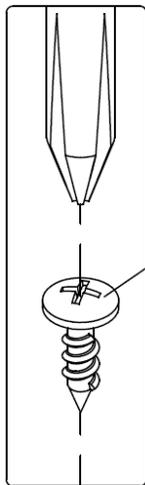


STEP:7

F. M5X50mm



FX3

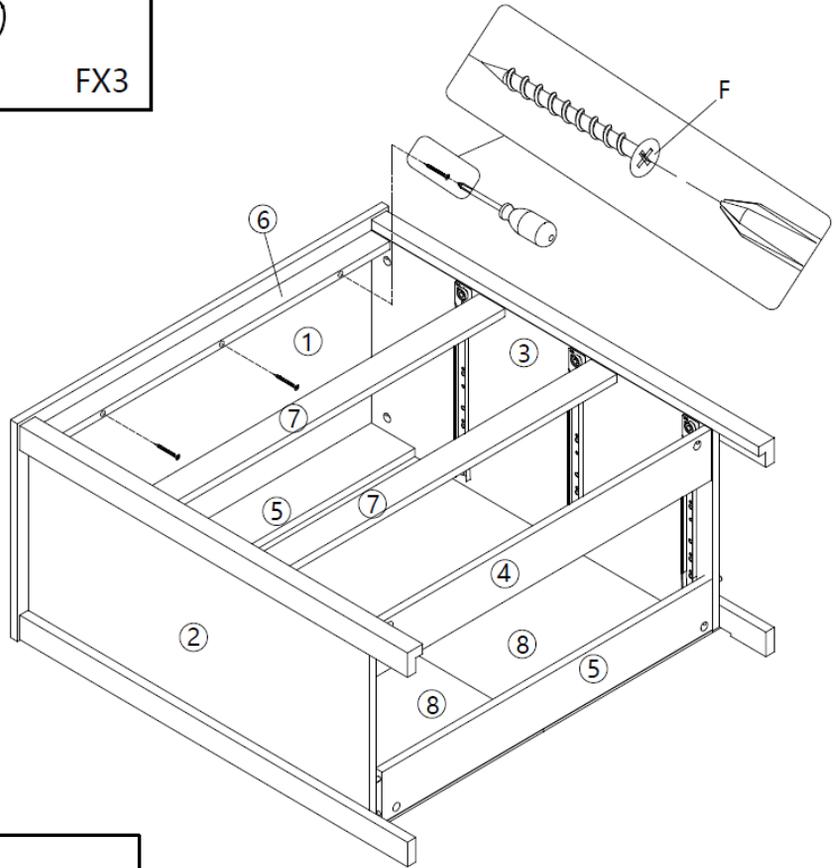


STEP:8

D. M5X40mm



DX15

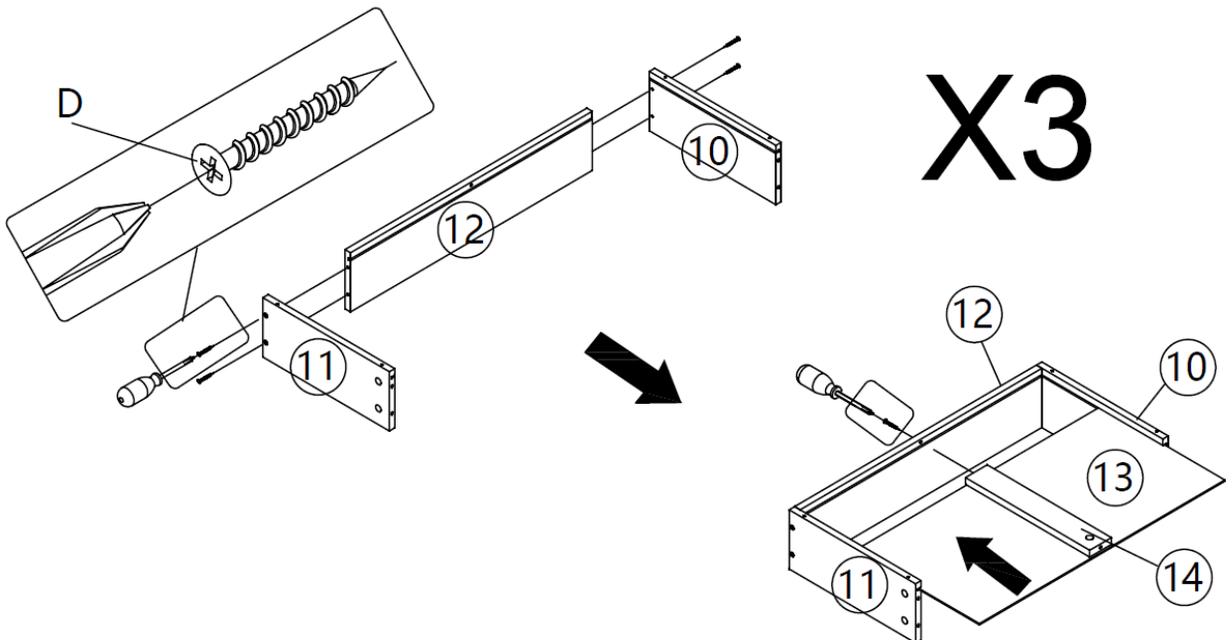

STEP:9

A. $\phi 15 \times 12$





AX15

B. M7X39mm







BX15

X3

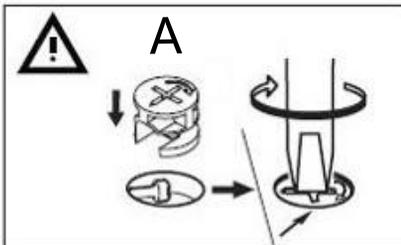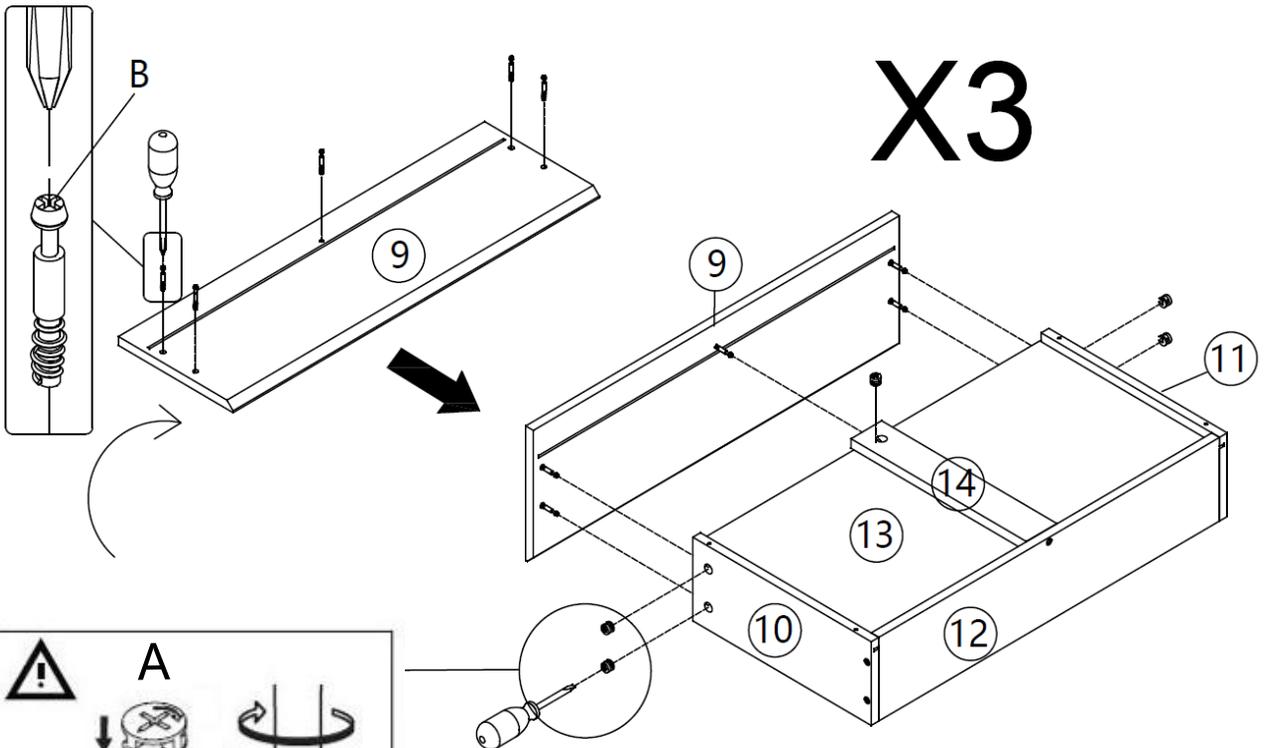


STEP:10

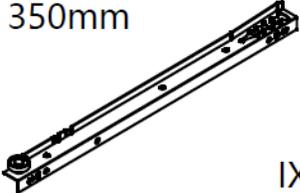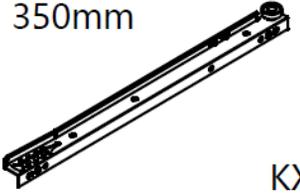
E. M4X15mm  EX12	I. 350mm  IX3	K. 350mm  KX3
---	--	---

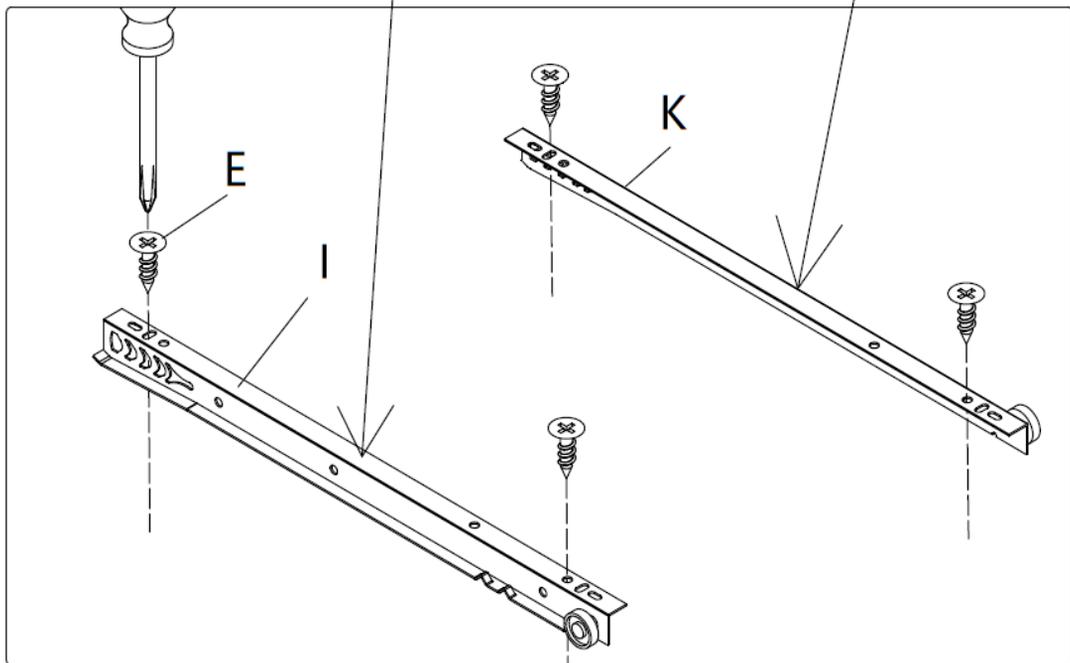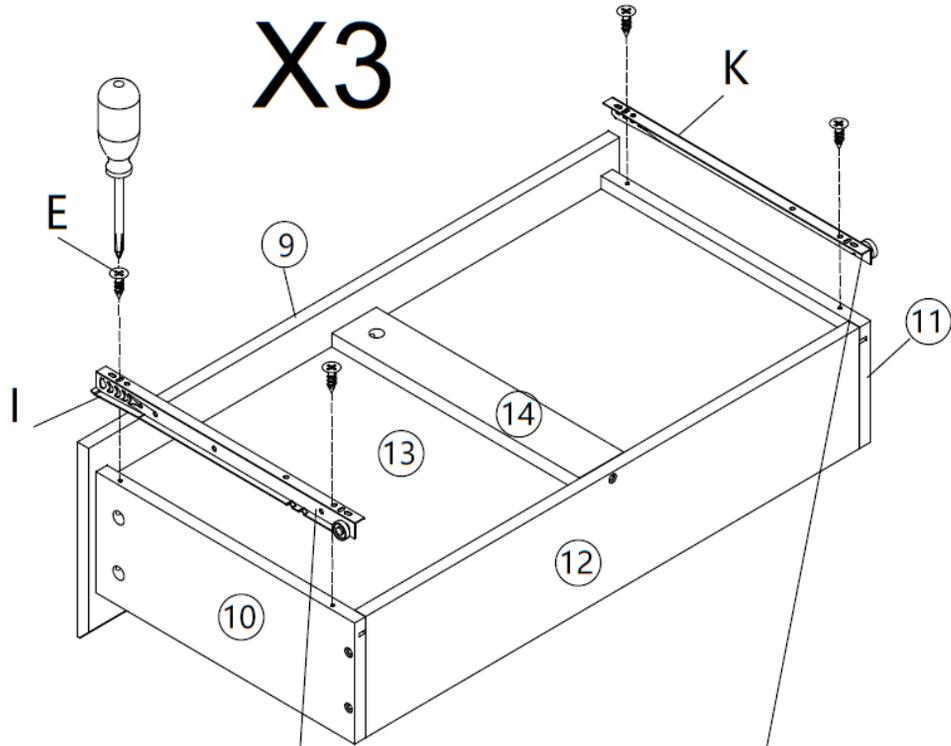

STEP:12

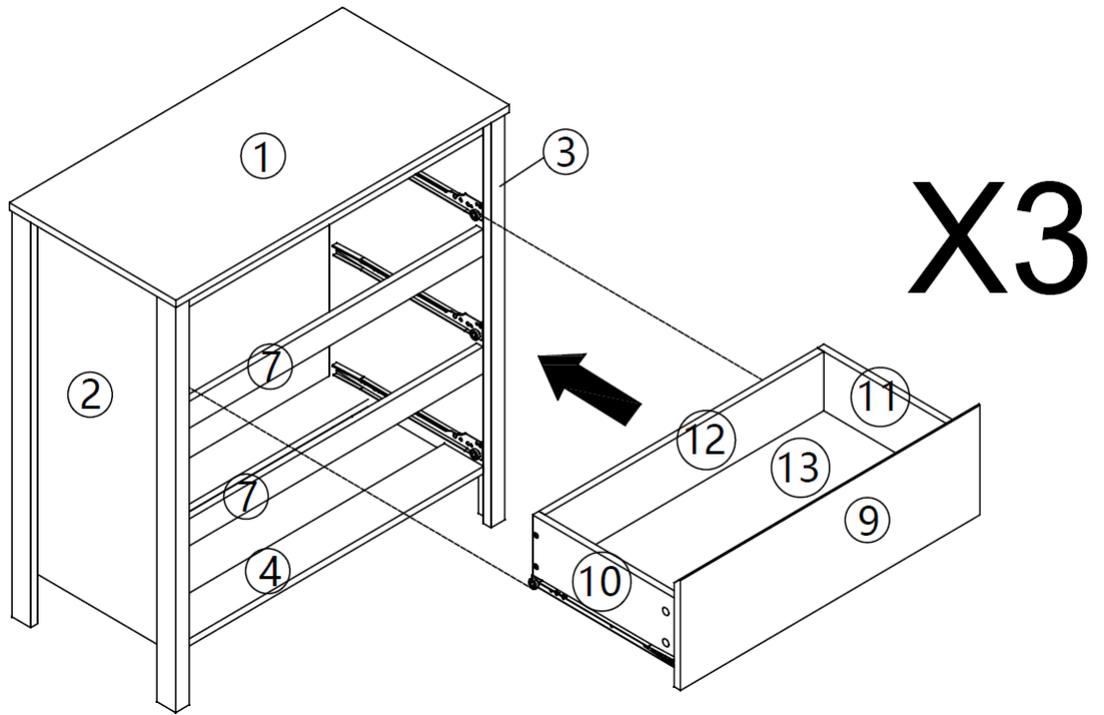

ASSEMBLY IS COMPLETE

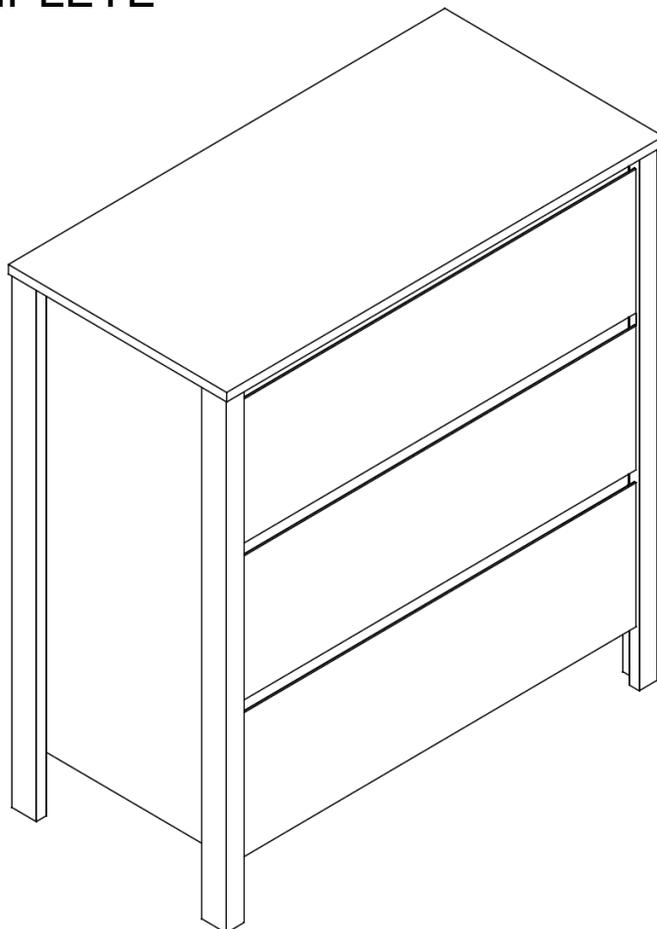

SAFETY BRACKETS INSTRUCTIONS

1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

HARDWARE



Mounting Plate x 2




Wall Strap x 1



Large Screw x2



Small Screw x2

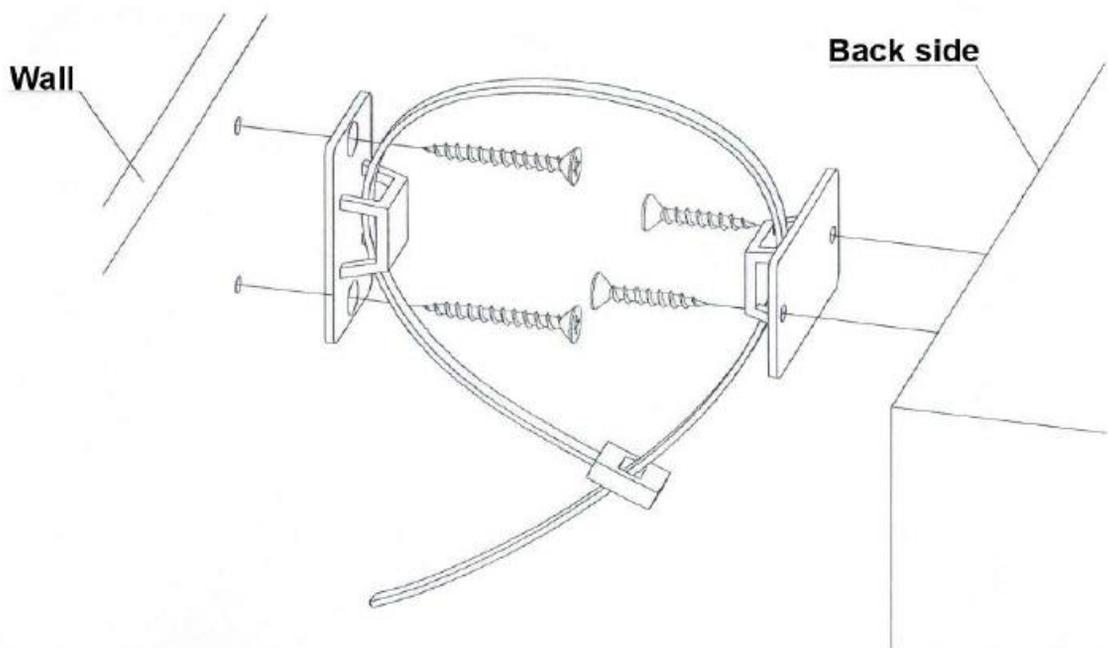

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void