
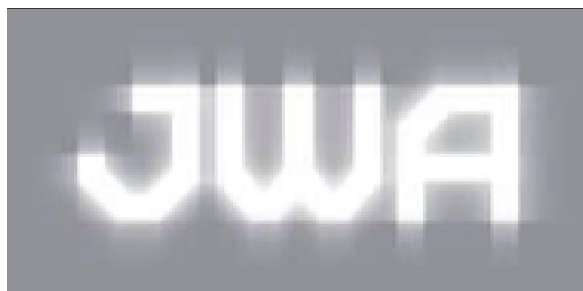


ASSEMBLY INSTRUCTION  
POWELL QUEEN BED  
83518

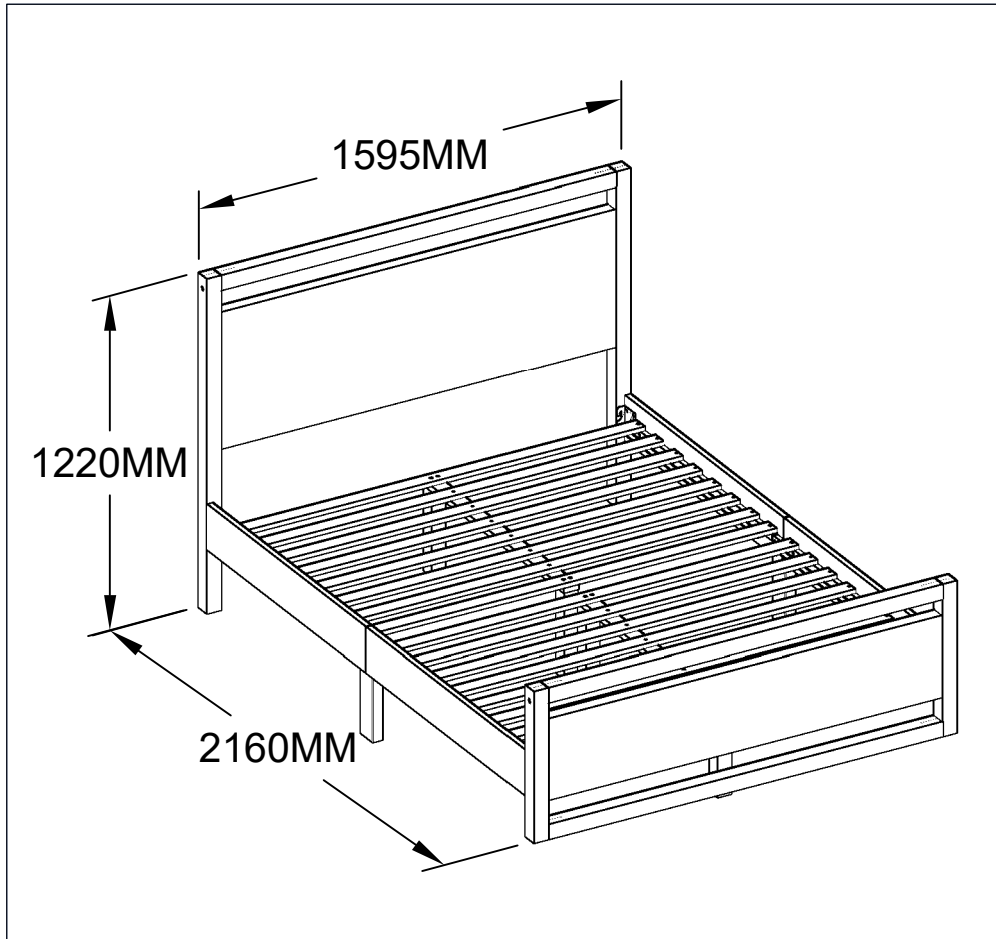


Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia.  
For any assistance with assembly or for missing parts please refer to your receipt


# PRE-ASSEMBLY PREPARATION

## Before you start:












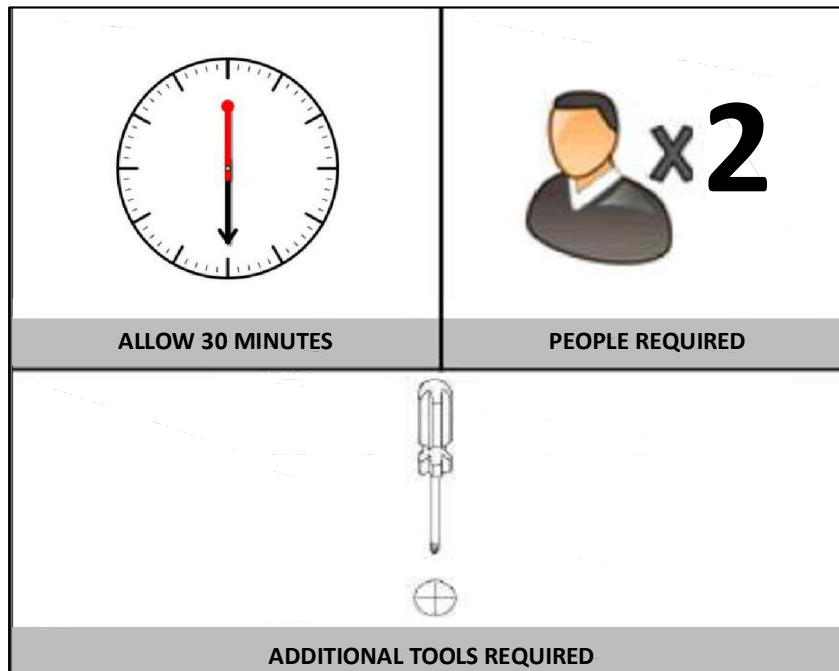1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

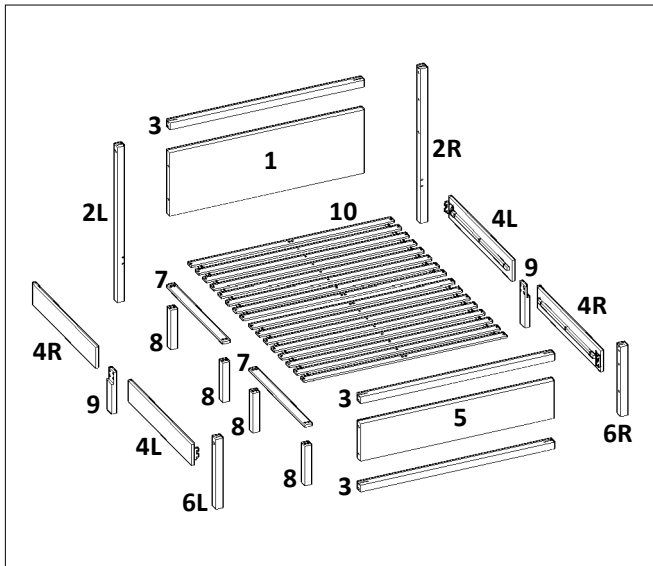


# PARTS LIST




1	HEADBOARD
2	HEADBOARD LEG (L+R)
3	HEADBOARD & FOOTBOARD WOOD
4	SIDE RAIL (L+R)
5	FOOTBOARD
6	FOOTBOARD LEG (L+R)
7	CENTER RAIL
8	CENTER LEG
9	SIDE RAIL LEG
10	SLATS

<b>A</b> Allen Key M4  1xA	<b>B</b> Allen Key M5  1xB	<b>C</b> JCBC M6 x 70mm  6xC
<b>D</b> JCBC M6 x 50mm  8xD	<b>E</b> JCBC M6 x 40mm  8xE	<b>F</b> JCBC M6 x 25mm  16xF
<b>G</b> Wood Dowel M8 x 30mm  6xG	<b>H</b> M6 Spring Washer  14xH	<b>I</b> M6 Flat Washer  8xI
<b>J</b> Flat Washer (1/4"x13x1.0mm)  6xJ	<b>K</b> Wood Screw M4 x 25mm  36xK	


STEP 1 : Attach the (2) to (1) and (3) by using (G),(C),(H),(J),(E) and (I) with Allen Key M4 (A) as shown.

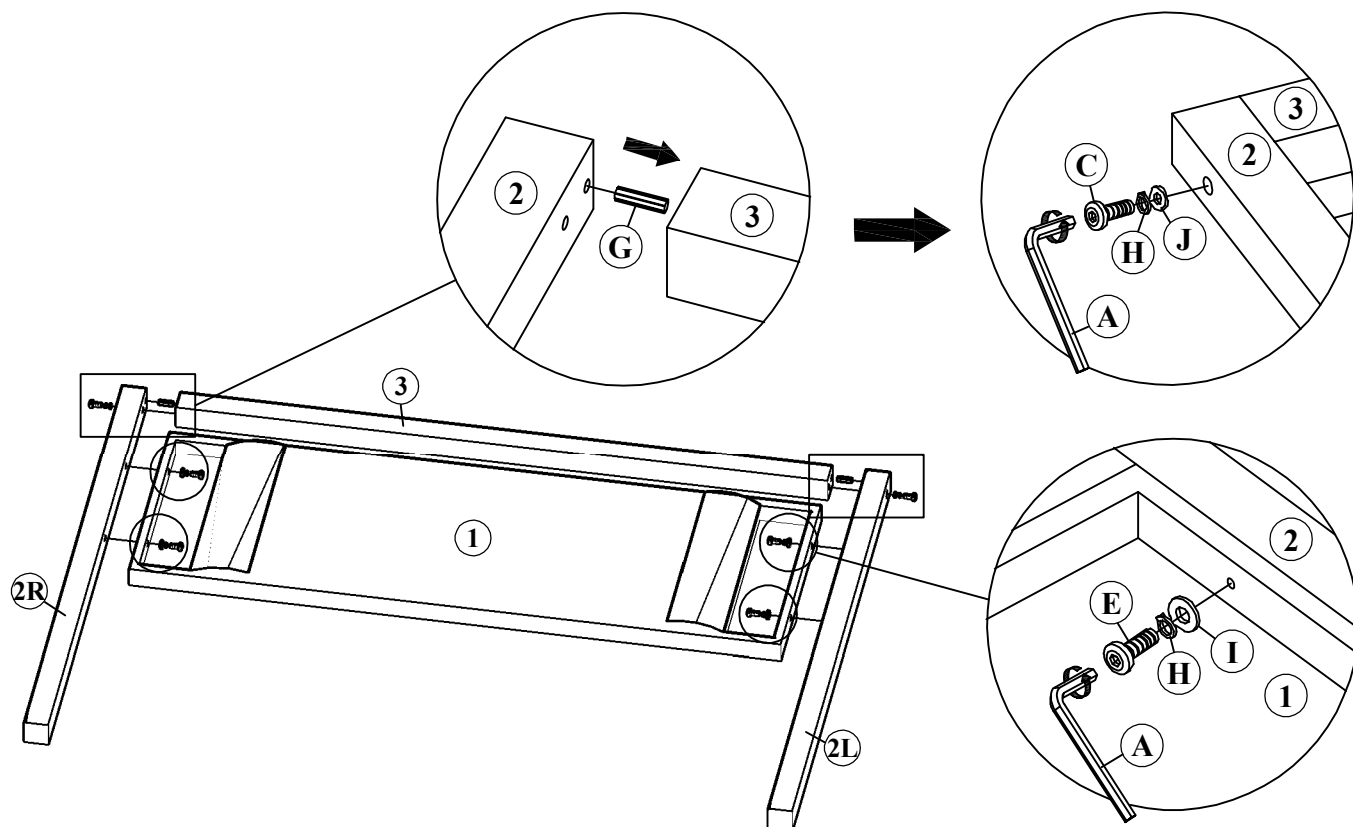


STEP 2 : Attach the (6) to (5) and (3) by using (G),(C),(H),(J),(E) and (I) with Allen Key M4 (A) as shown.

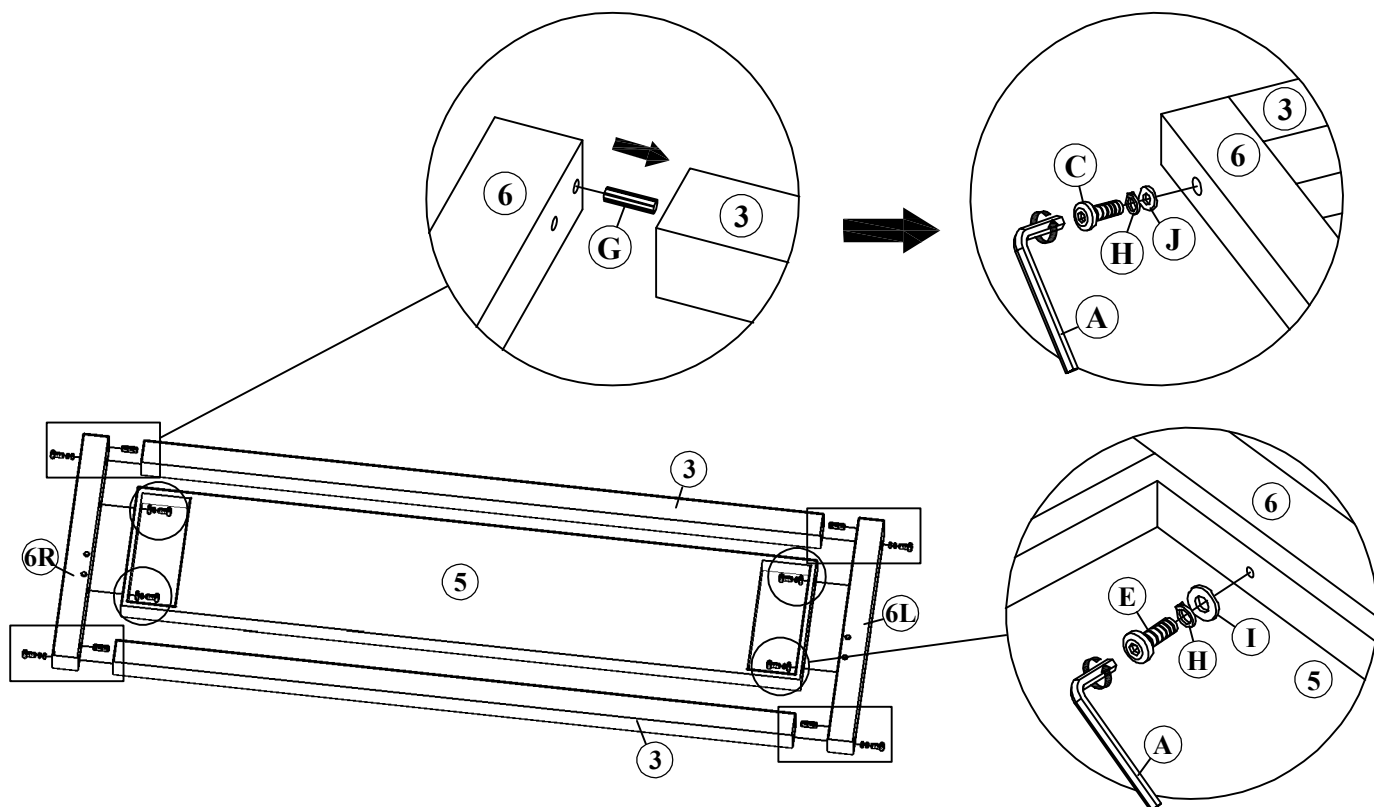


STEP 3 : Attach (4L) and (4R) to (9) With (F) Using a Allen Key M4 (A) as shown.

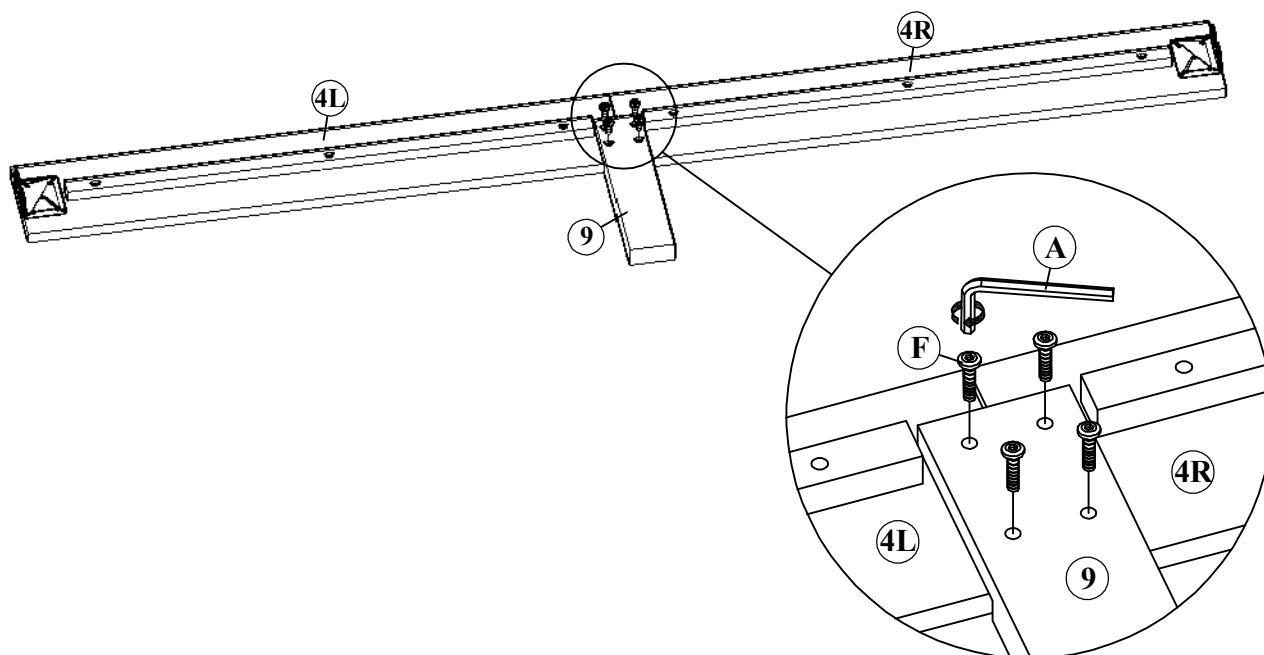


STEP 4 : Attach to Assembled Headboard and Assembled Footboard with the pre-attached bolt using a Allen Key M5 (B) as shown.

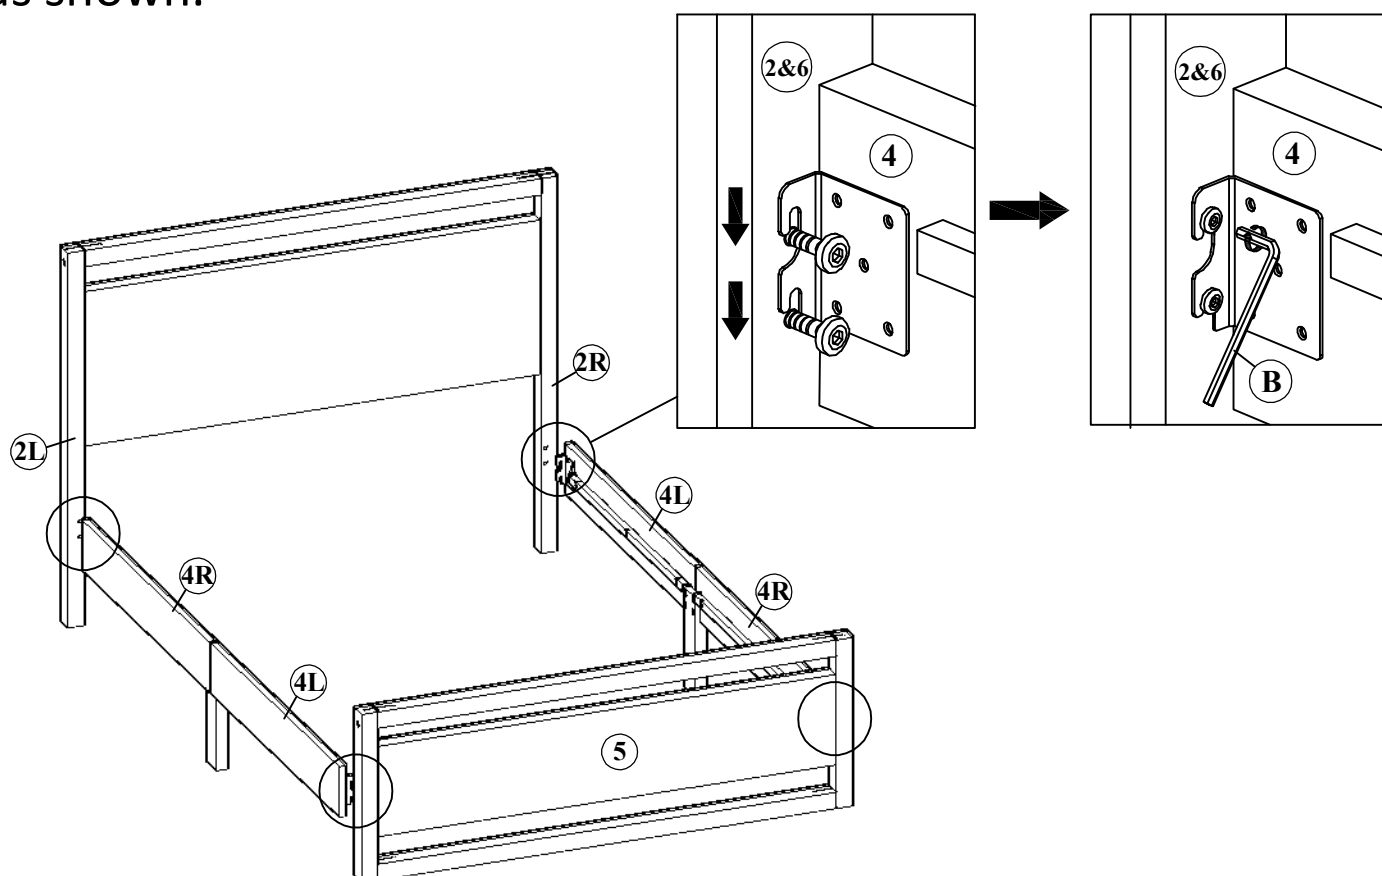


**STEP 5 : Attach (8) and (10) to (7) With (D) Using a Allen Key M4 (A) as shown.**

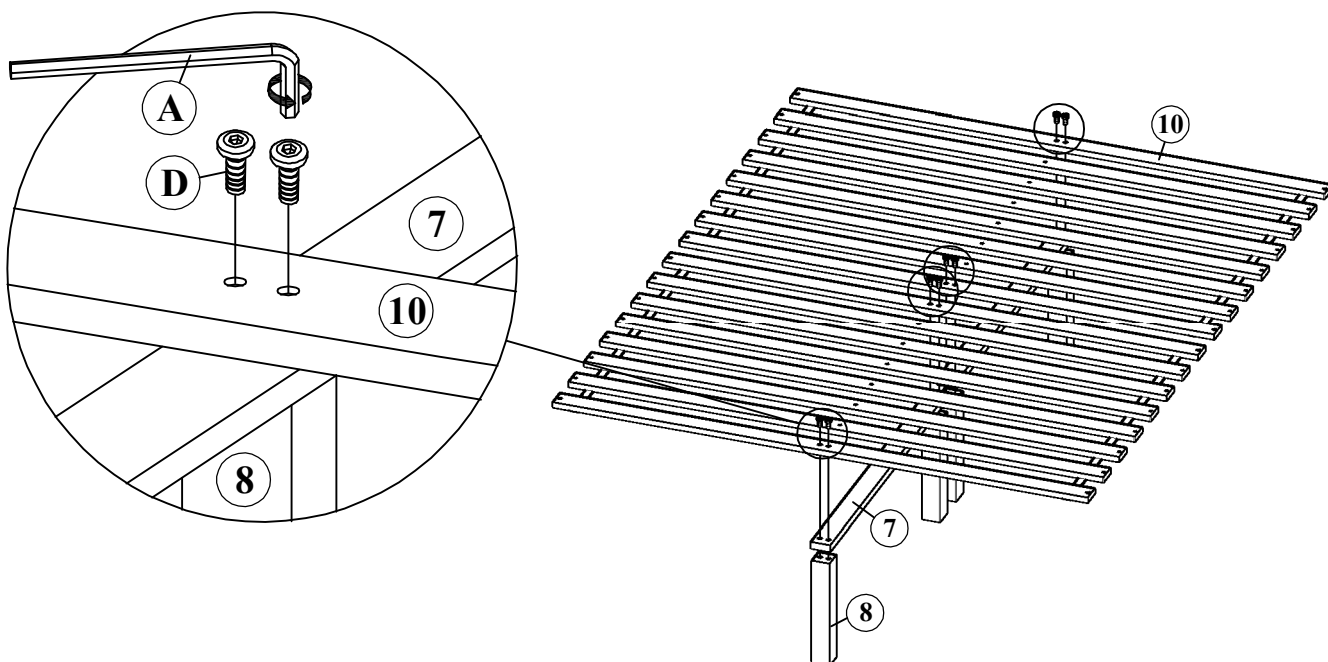


**STEP 6 : Attach Assembled Bed Slats to Assembled Bed Frame with (F) Using a Allen Key M4 (A) as shown.**

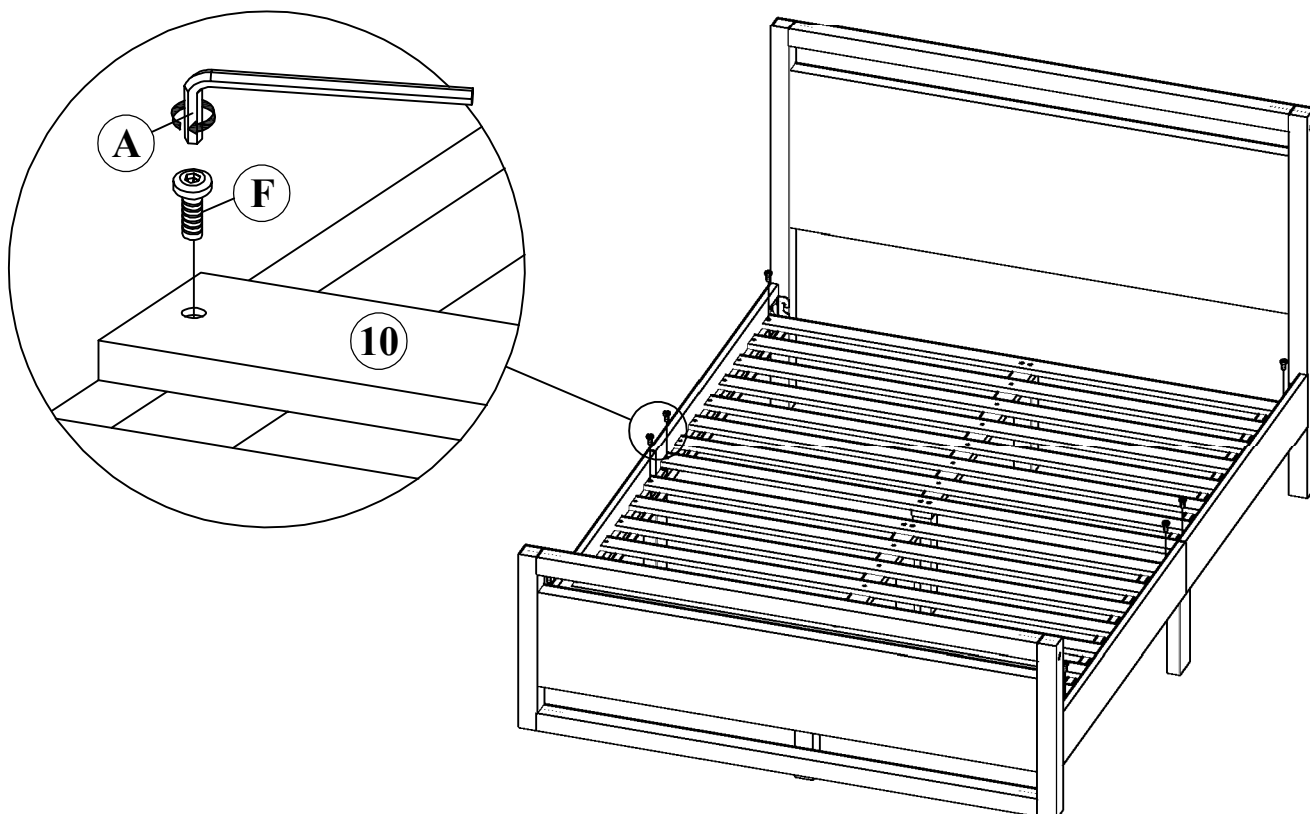

**STEP 7 : Attach Assembled Bed Slats to Assembled Bed Frame with (K) using a Screwdriver as shown.**

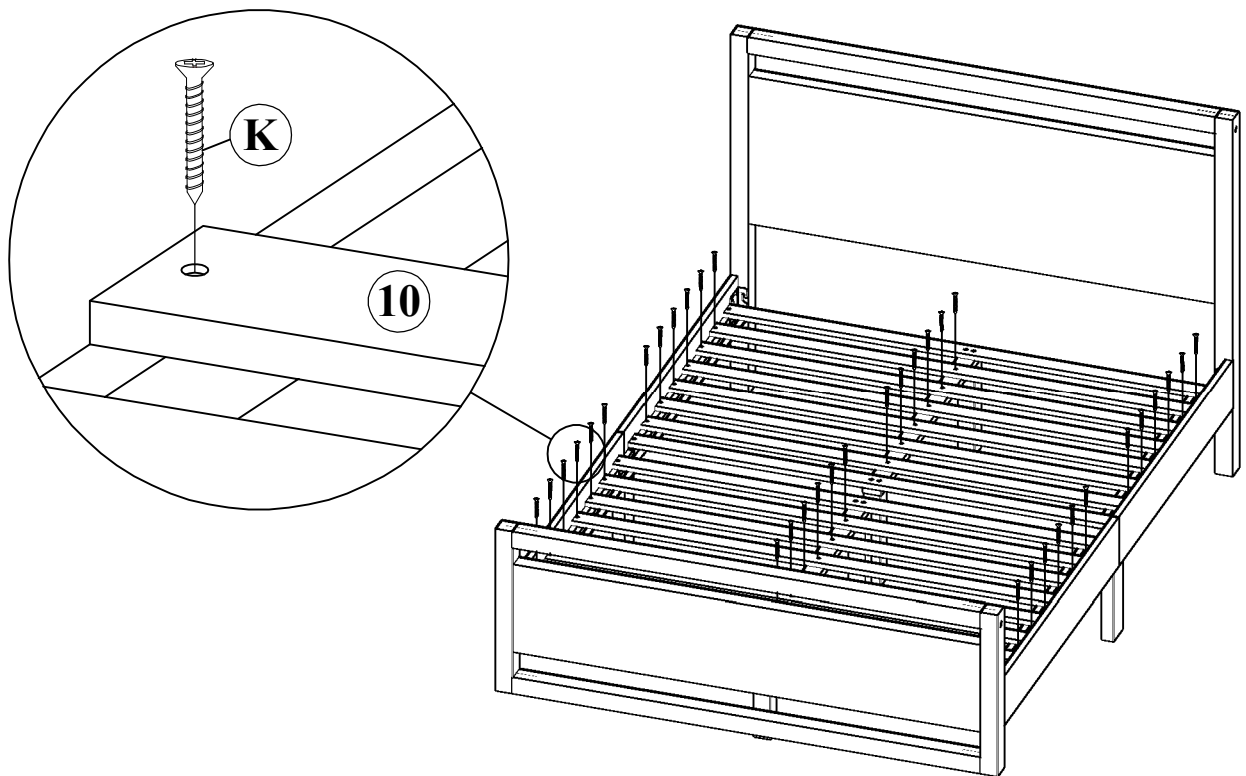

**ASSEMBLY IS COMPLETE**

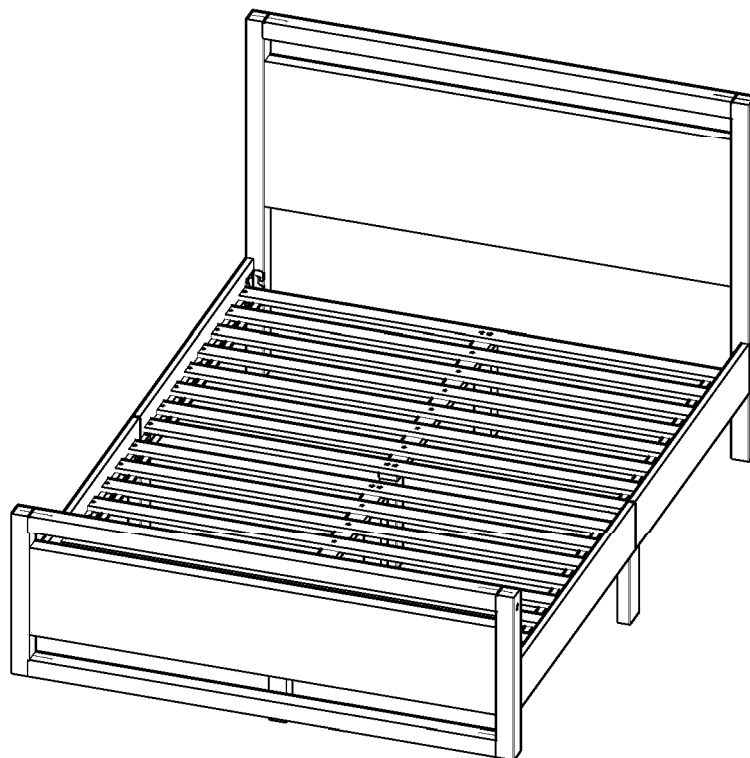

**CAUTION:**

**ALWAYS LIFT YOUR BED WHEN MOVING/RELOCATING - DO NOT DRAG.  
DRAGGING CAN CAUSE THE CENTRE SUPPORT LEGS TO BEND/BREAK**

# PRODUCT CARE:

## REGULAR CARE:

- Protect from direct sunlight
- Vacuum regularly using low suction
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.

## CLEANING:

- Protect from direct sunlight
- Vacuum regularly using low suction
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.

## SPOT CLEANING:

- Do not rub
- Do not spot clean with any solvent
- Treat spills and stains as soon as possible
- Gently scrape off any soil or blot any liquid from the surface of the fabric before applying cleaner
- Apply proprietary cleaning agents strictly according to instructions to remove the residue of the spill
- Do not saturate the fabric or interior with water or other cleaning liquids

## WARNING:

Apply only water-based soil resist (fabric protection) treatments. Do not use aerosol products

**\* PILLING IS NOT A FABRIC DEFECT OR FAULT AND IS NOT COVERED BY WARRANTY**

**\* PILLING IS A NORMAL OCCURRENCE CAUSED BY WEAR AND TEAR AND DOES NOT AFFECT THE DURABILITY OR FUNCTIONALITY OF THE FABRIC AND IS EASILY REMOVED**