
ASSEMBLY INSTRUCTION

MUNOZ BOOKCASE

Item Code 83541

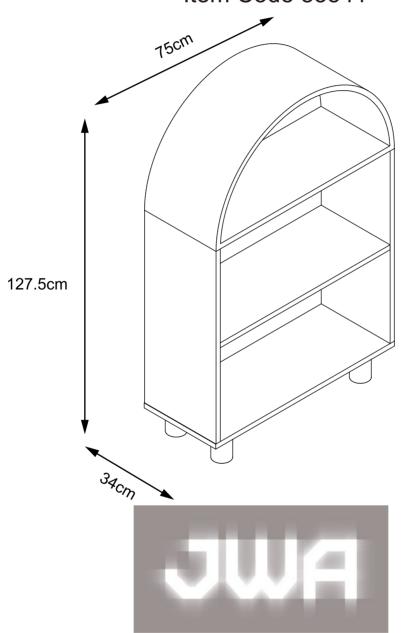


Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia. For any assistance with assembly or for missing parts please refer to your receipt

PRE-ASSEMBLY PREPARATION

Before you start:

- 1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use
- 3. Ensure that you have all required contents for complete assembly
- 4. Always read the assembly instructions carefully before beginning assembly
- 5. Keep all hardware parts and packaging out of reach of small chirldren
- 6.Do not over tighten the screws and bolts as this may damage the threads
- 7. Assembly is to be carried out by a competent adult(s) ONLY
- 8. During assembly, chirldren should be kept away from the product due to possible risk to injury
- 9.Do not use this item if any components are missing or damaged
- 10. Please keep the instructions for future reference.

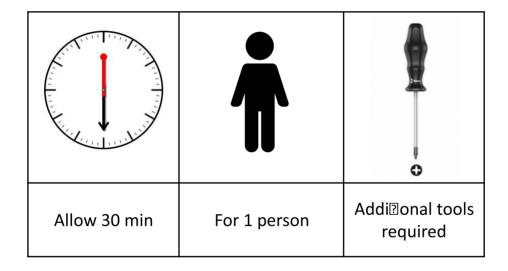




PARTS LIST

A Dowel M6x30mm x 12pcs	B Screw M5x50mm x 4pcs	C Bolt x 8pcs	D Locking Nut M10x15mm x 8pcs
Wedge x 8pcs	F Screw M3x16mm x 8pcs	G Foot Pad x 4pcs	H Allen Key M4x 1pc
V Safty Strap x 1pc	W Screw M4x14mm x 1pc	Wall Anchor M6x30mm x 1pc	Y Wall Screw M4x35mm x 1pc
Z Washer x 2pcs			


PARTS LIST

1	Top Panel x 1PC	2	Bottom Panel x 1PC
3	Left Side Panel x 1 PC	4	Right Side Panel x 1 PC
5	Back board x 2 PCS	6	Centre Panel x 1 PC
7	Wooden Legsx 4 PCS		

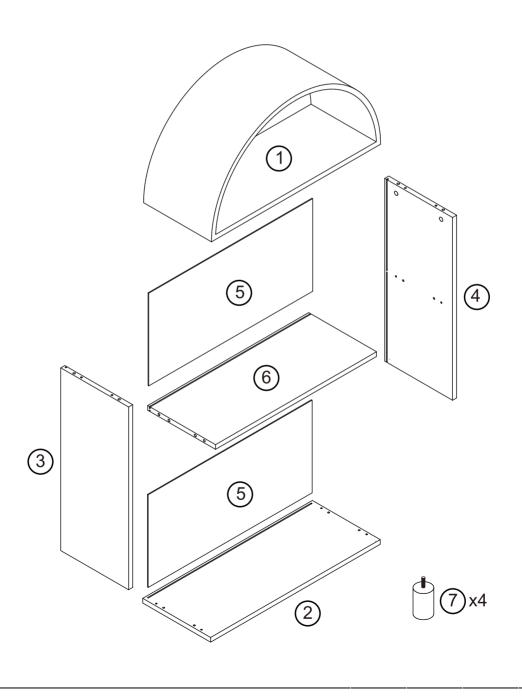


STEP 1:

• Prepare a protected surface with a blanket or cardboard.

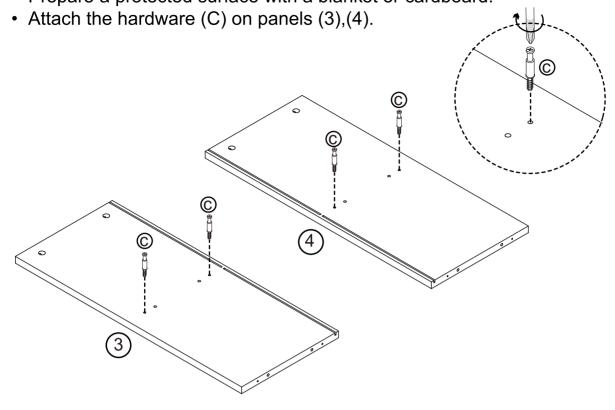


STEP 2:

• Assemble the centre panel (6) with side panels (3),(4) by hardware A,D;

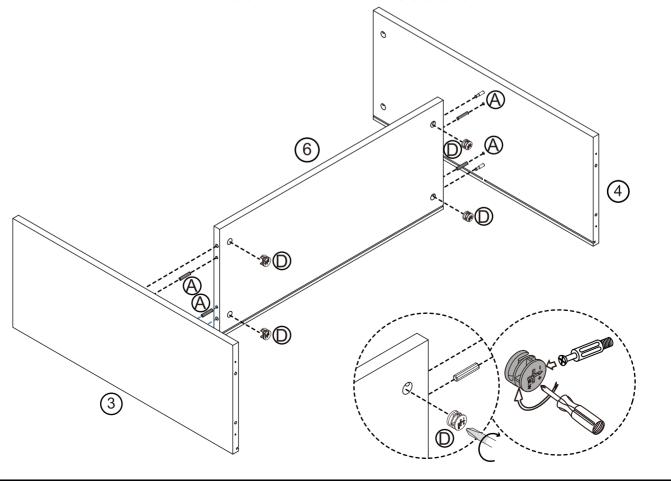


STEP 3:

• Attach the back board (5).

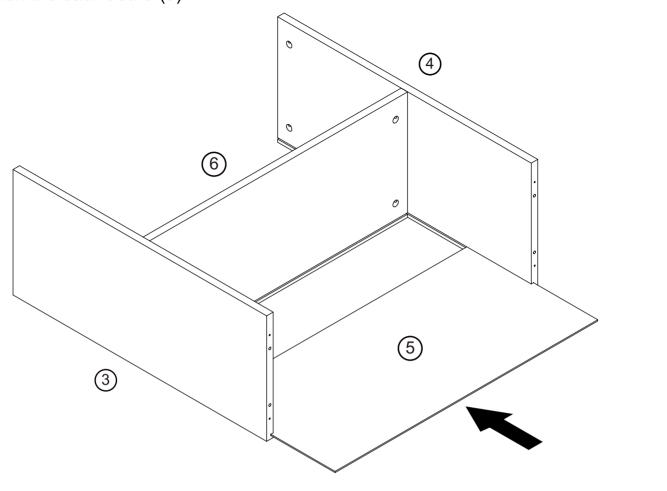


STEP 4:

• Attach the bottom panel (2) with frame by hardware A,B,H.

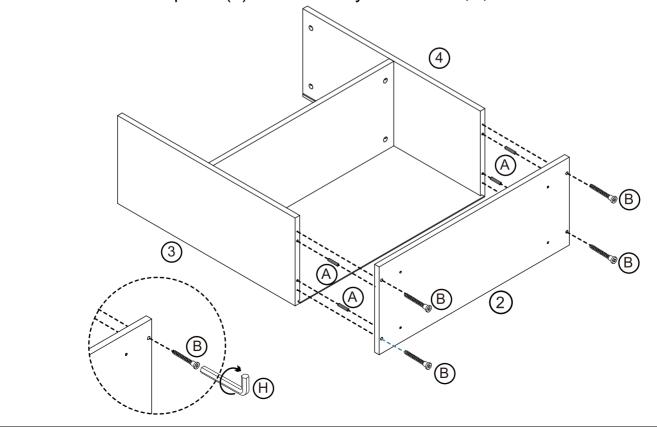


STEP 5:

• Assemble 4pcs wooden legs (7) on the bottom panel (2). Then, attach 4 pcs foot pad (G).

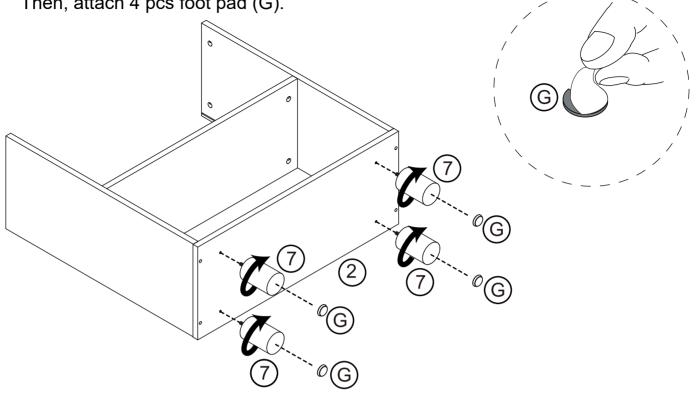


STEP 6:

• Attach the back board (5) with frame.

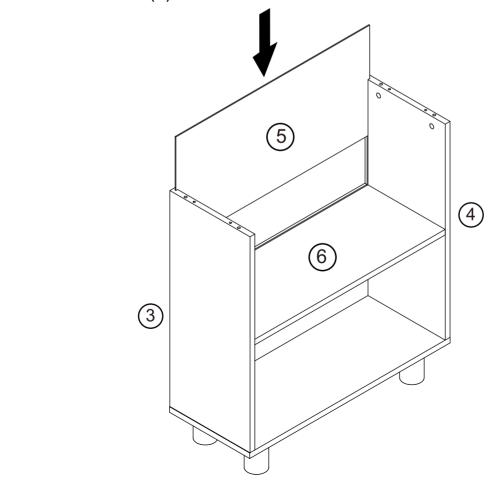


STEP 7:

• Secrew cambolts (C) into the top plate (1) .

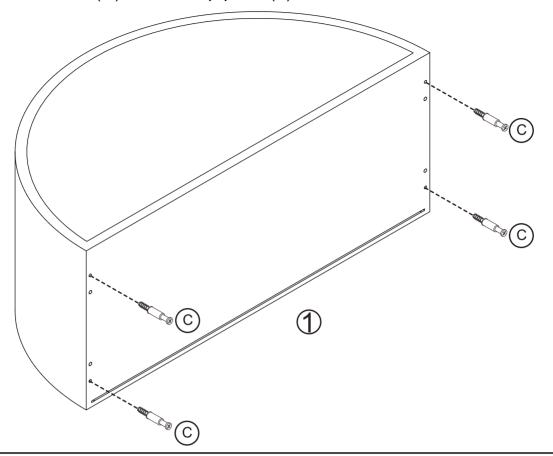


STEP 8:

• Slide the top panel (1) with frame by hardware (A), (D) .

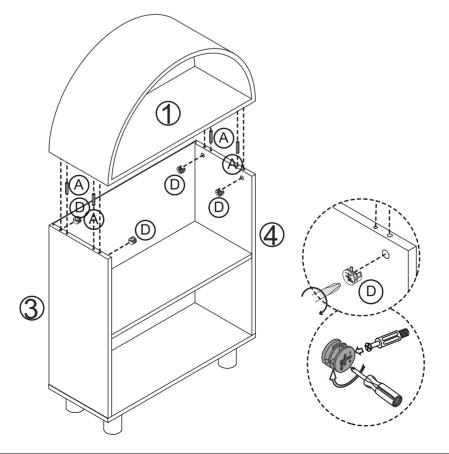


STEP 9:

• Attach the hardware (E),(F) on the back.

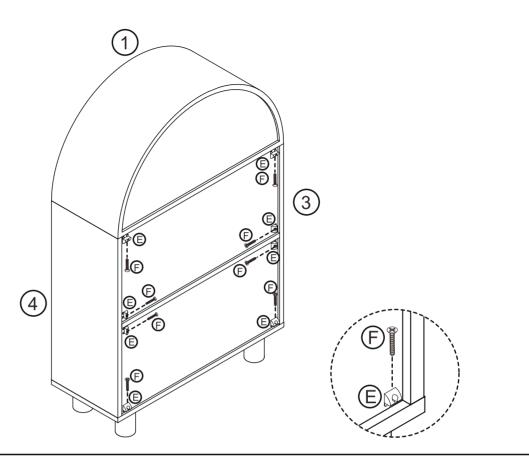


Finished

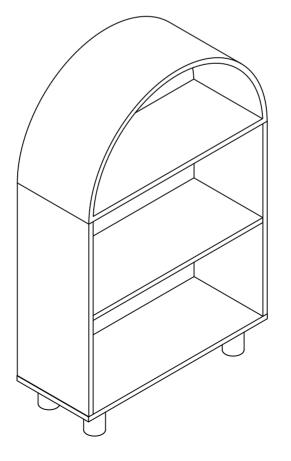

SAFETY BRACKETS INSTRUCTIONS


STEP 1:

• Secrue the safty strap(V) by hardware Z,W.

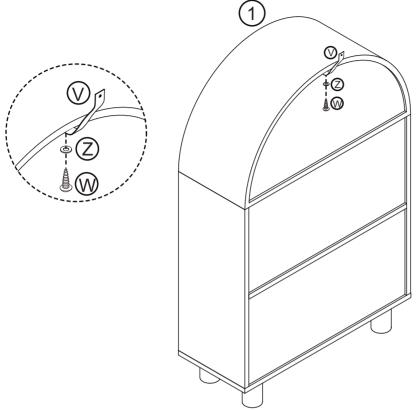

STEP 2:

• Secrue the safty strap(V) onto wall by hardware X,Y,Z.

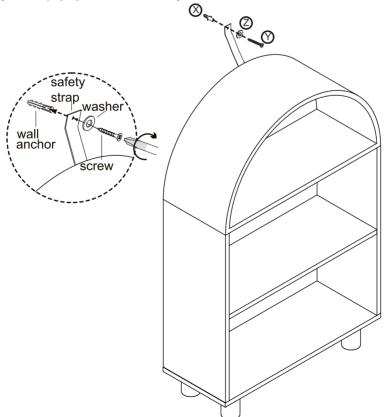

PRODUCT CARE:

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- •Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- •Use a clean, soft, dry, lint free absorbent cloth to clean your furniture.

 Do not use any detergent as they may contain ingredients that may react and damage the finish.