


# ASSEMBLY INSTRUCTION

ADAMS

Desk

ITEM CODE 75139


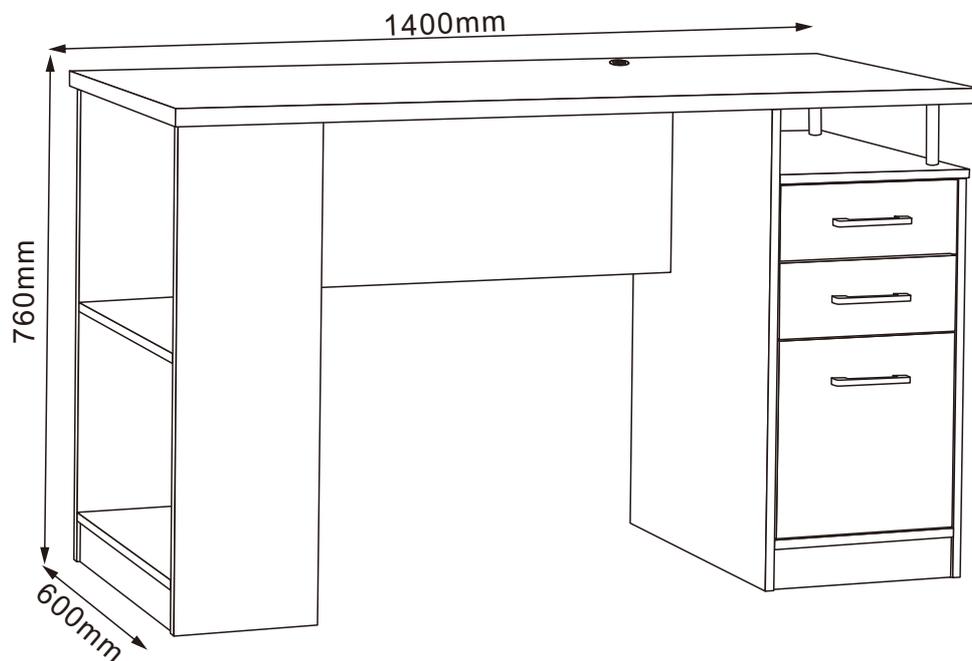


Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia.  
For any assistance with assembly or for missing parts please refer to your receipt

# PRE-ASSEMBLY PREPARATION

## Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads
7. Assembly is to be carried out by a competent adult(s) ONLY
8. During assembly, children should be kept away from the product due to possible risk to injury.
9. Do not use this item if any components are missing or damaged.
10. Please keep the instructions for future reference.

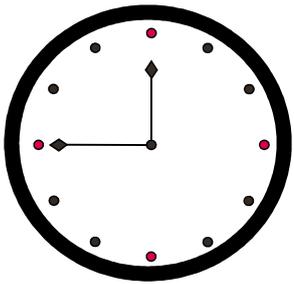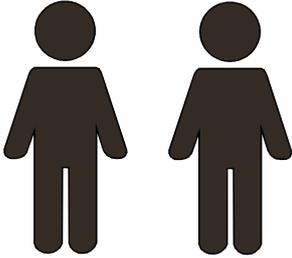		
Allow 45min	For 2 person	Additional tools required



## TIPPING WARNING





Serious or fatal injuries may occur from furniture toppling over. To help avoid this please follow the below recommendations;

- Install the provided "Tipping Kit" as per the instructions
- Never allow children to climb on or hang off of any part of this product
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product











IF this product has drawers:

- Place the heaviest items in lowest drawers
- Do not open more than 1 drawer at a time as this may cause the product to become unbalanced
- Do not tamper with or remove any drawer interlocking/running system

**Note:**The use of the provided "Tipping Kit" may reduce but not necessarily eliminate the risk of furniture toppling over. Please use this product with caution.

*This is a permanent label. Do not attempt to remove!*

# PARTS LIST
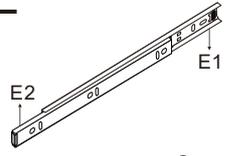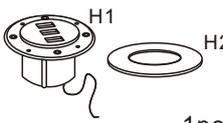
<p><b>A</b></p>  <p>68pcs</p>	<p><b>B</b></p>  <p>M6X25 mm 2pcs</p>	<p><b>C</b></p>  <p>M6X25mm 2pcs</p>	<p><b>D</b></p>  <p>M4X18mm 6pcs</p>	<p><b>E</b></p>  <p>6pcs</p>
<p><b>F</b></p>  <p>ST3.5X14mm 30pcs</p>	<p><b>G</b></p>  <p>ST3.5X18mm 6pcs</p>	<p><b>H</b></p>  <p>1pc</p>	<p><b>I</b></p>  <p>6pcs</p>	<p><b>J</b></p>  <p>ST5X50mm 12pcs</p>
<p><b>K</b></p>  <p>8X30mm 16pcs</p>	<p><b>L</b></p>  <p>3pcs</p>	<p><b>M</b></p>  <p>2pcs</p>	<p><b>N</b></p>  <p>2pcs</p>	<p><b>O</b></p>  <p>ST4X25mm 2pcs</p>


1	Top panel
2	Back panel
3	Cabinet left panel
4	Cabinet right panel
5	Cabinet top panel

6	Cabinet bottom panel
7	Cabinet foot panel
8	Cabinet back panel
9	Left front panel
10	Left back panel

11	Up layer panel
12	Bottom layer panel
13	Left foot panel
14	Middle panel
15	Drawer front panel


16	Drawer left panel
17	Drawer right panel
18	Drawer back panel
19	Drawer bottom panel
20	Large drawer front panel

21	Large drawer left panel
22	Large drawer right panel
23	Large drawer back panel
P1	Support frame

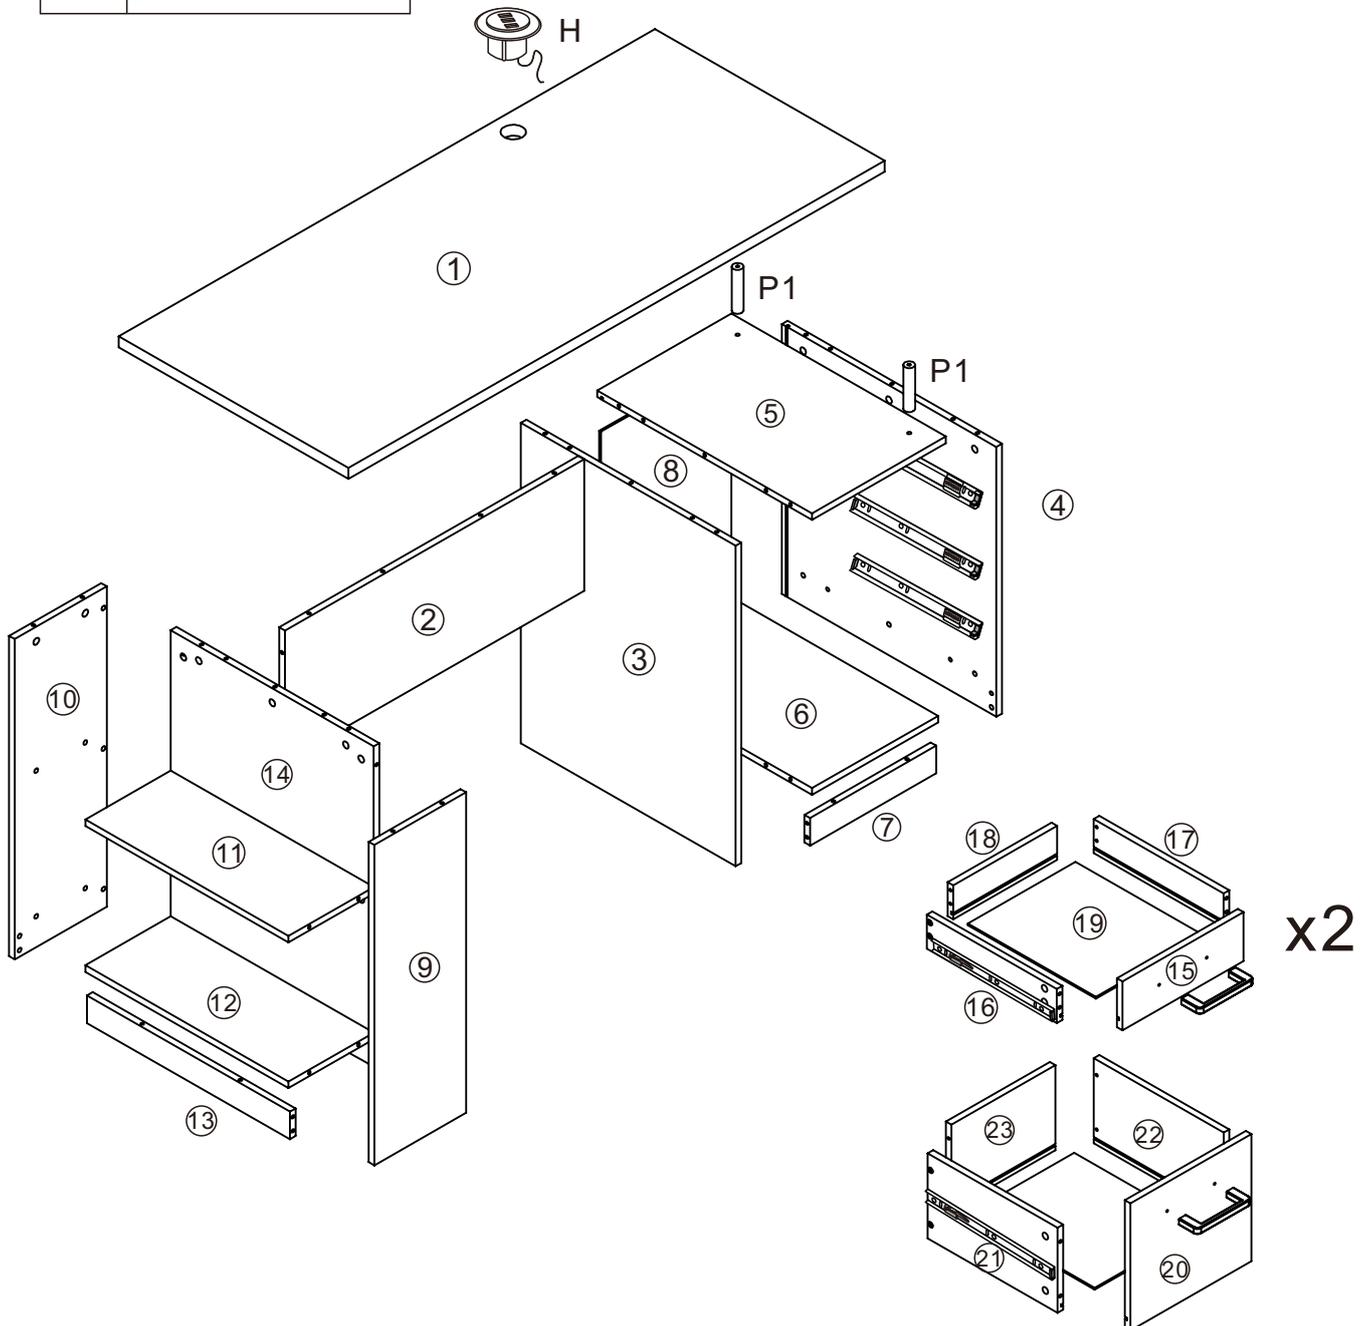


# STEP 1:

1. Insert parts A and K into panel 1.
2. Attach part M to panel 1 with part C.

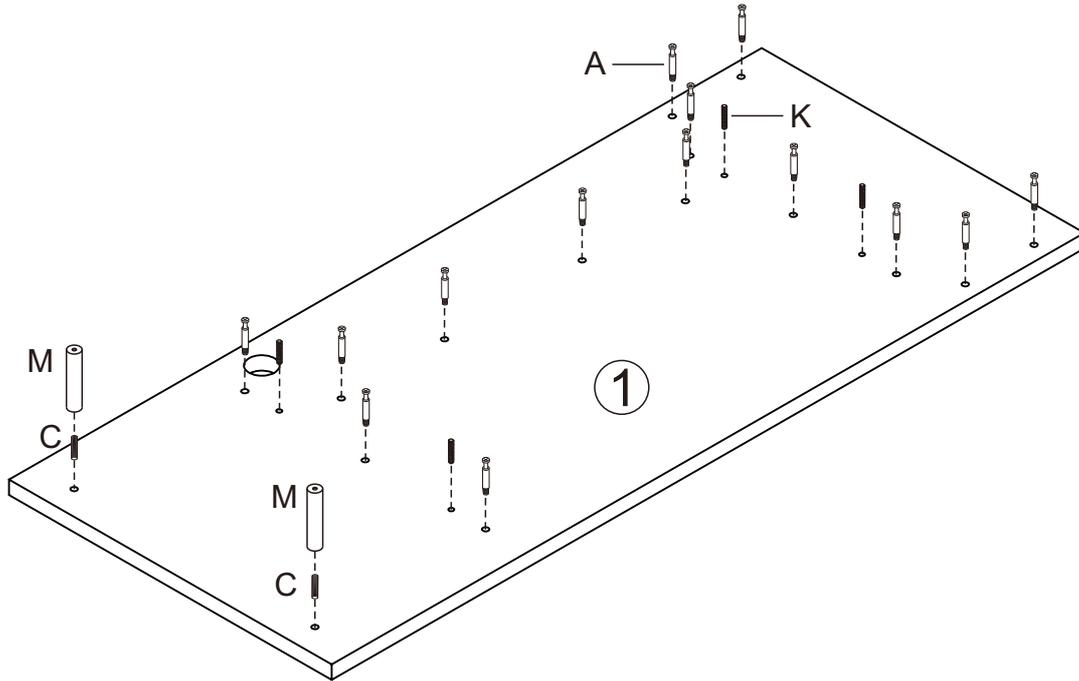



# STEP 2:

1. Insert part A and K into panels 9 and 10.

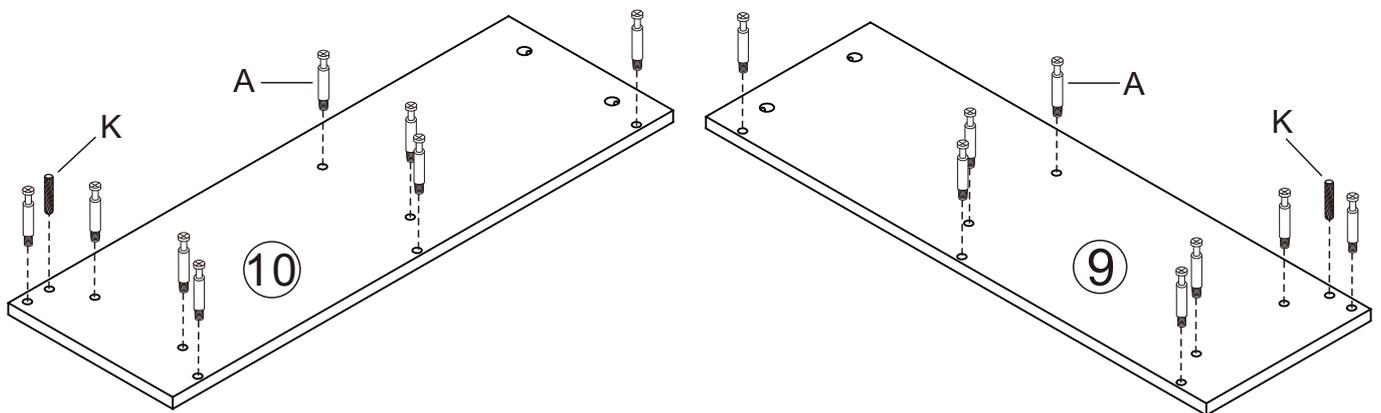



## STEP 3:

1. Insert part A into panel 12.
2. Attach panel 13 to panel 12 with part A.

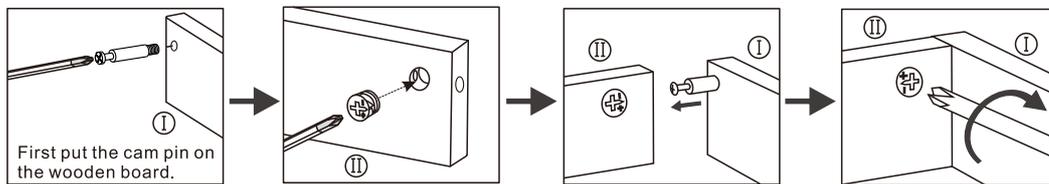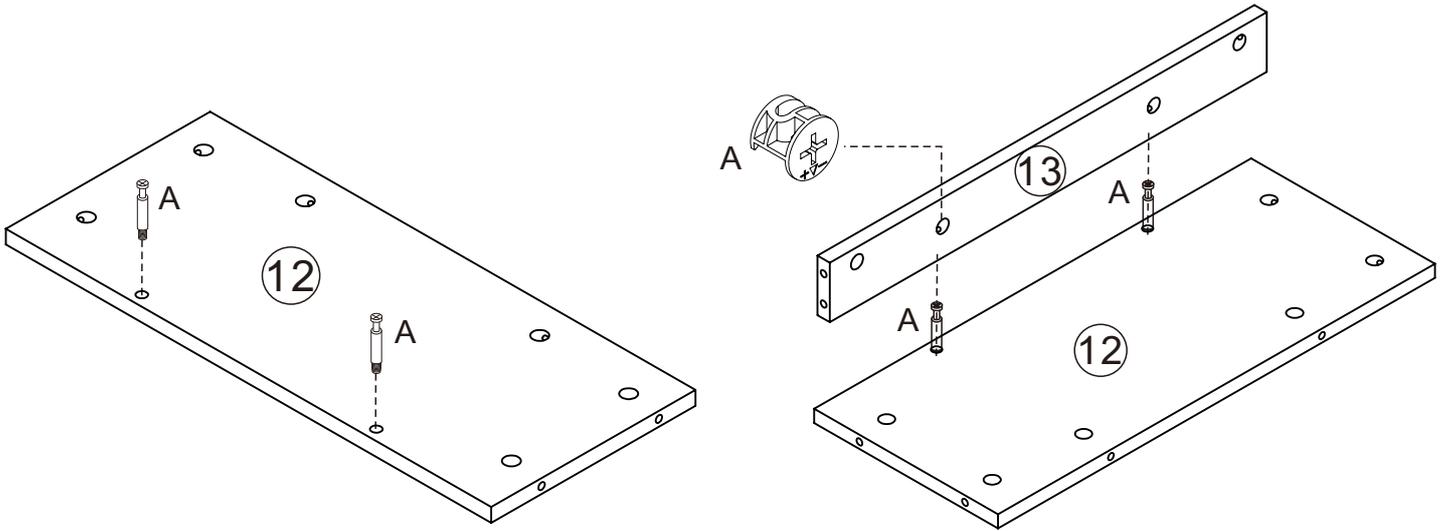



## STEP 4:

1. Insert part A into panel 14.
2. Attach panels 11 and 12 to panel 14 with part A.

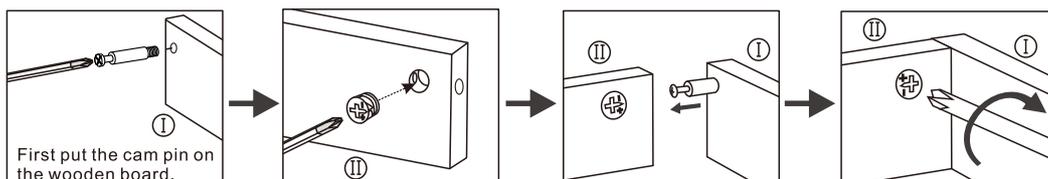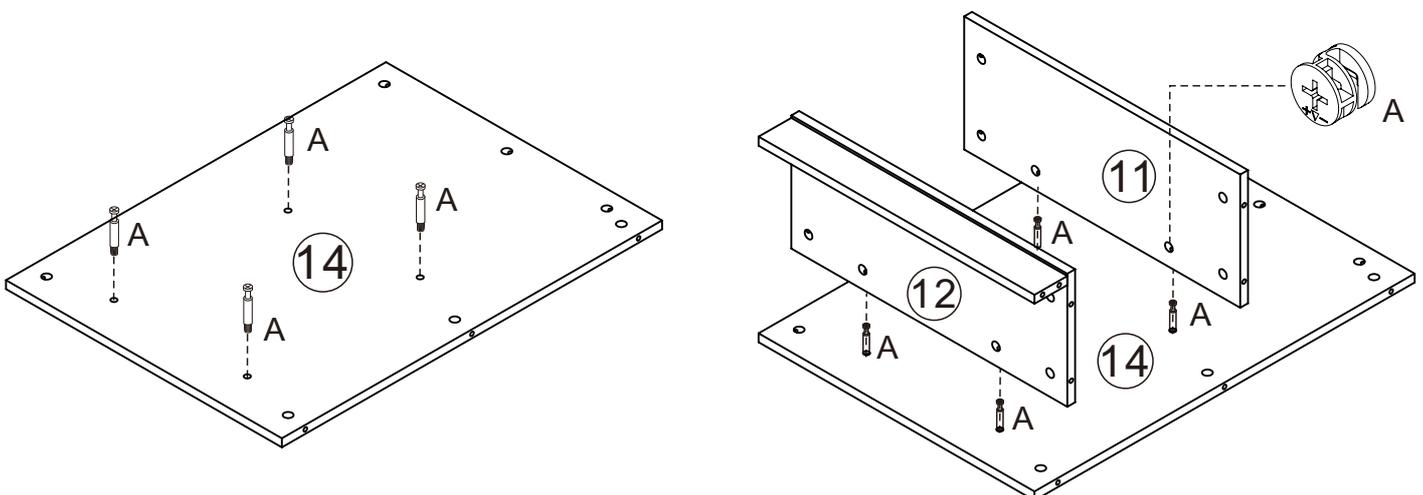



## STEP 5:

1. Attach panel 10 to panels 11, 12 and 14 with parts A and K.

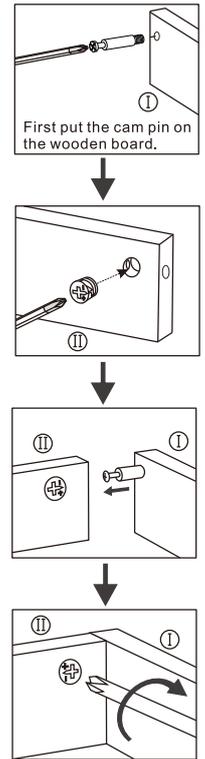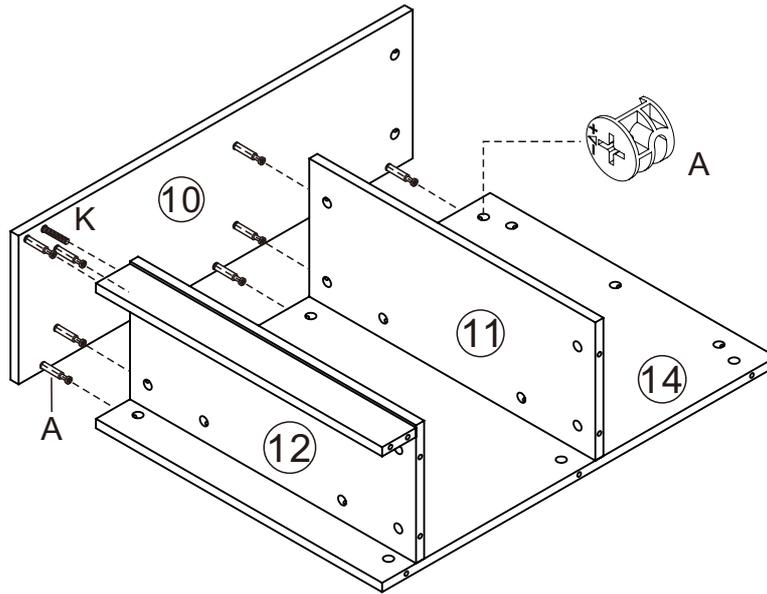


## STEP 6:

1. Attach panel 9 to panels 11, 12 and 14 with parts A and K.

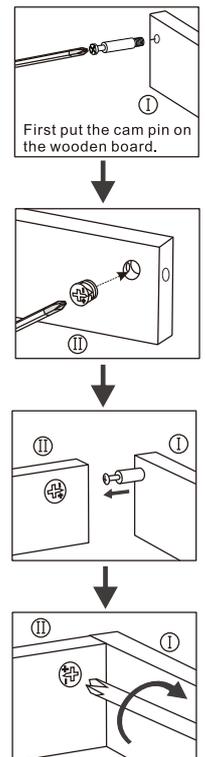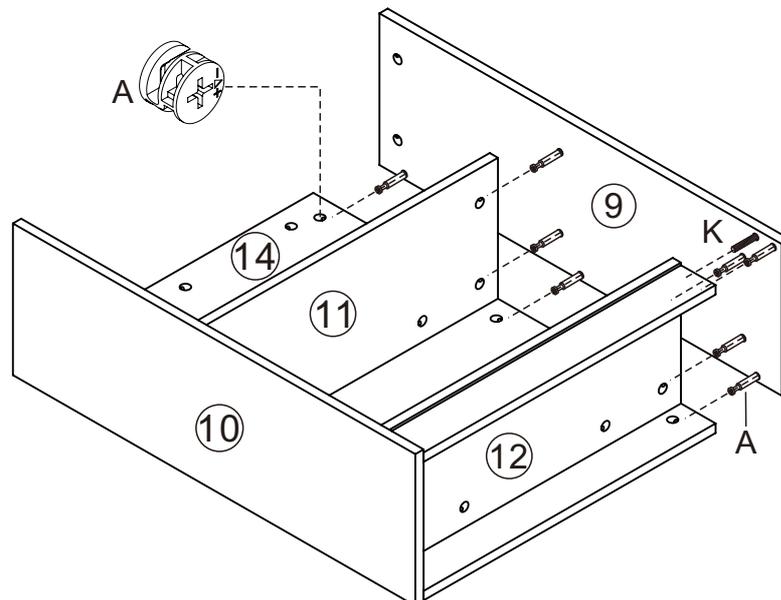



# STEP 7:

1. Insert part A into panel 14.

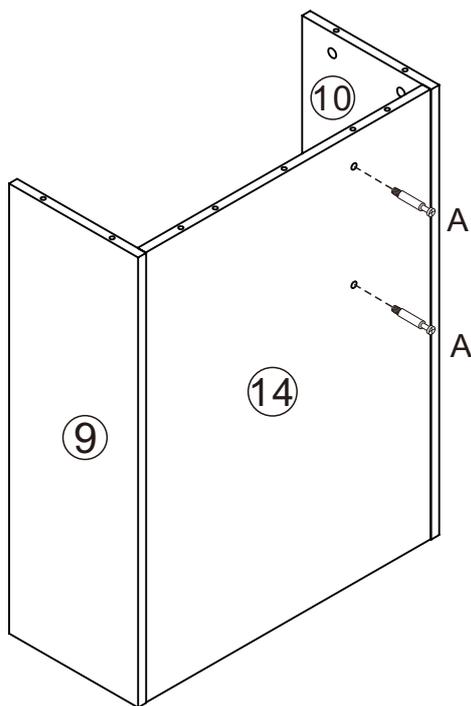


# STEP 8:

1. Insert part A into panel 6.
2. Attach panel 7 to panel 6 with part A.

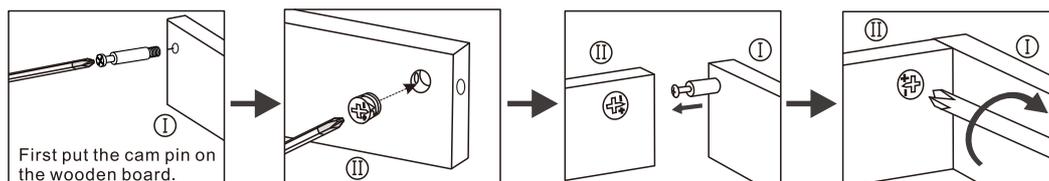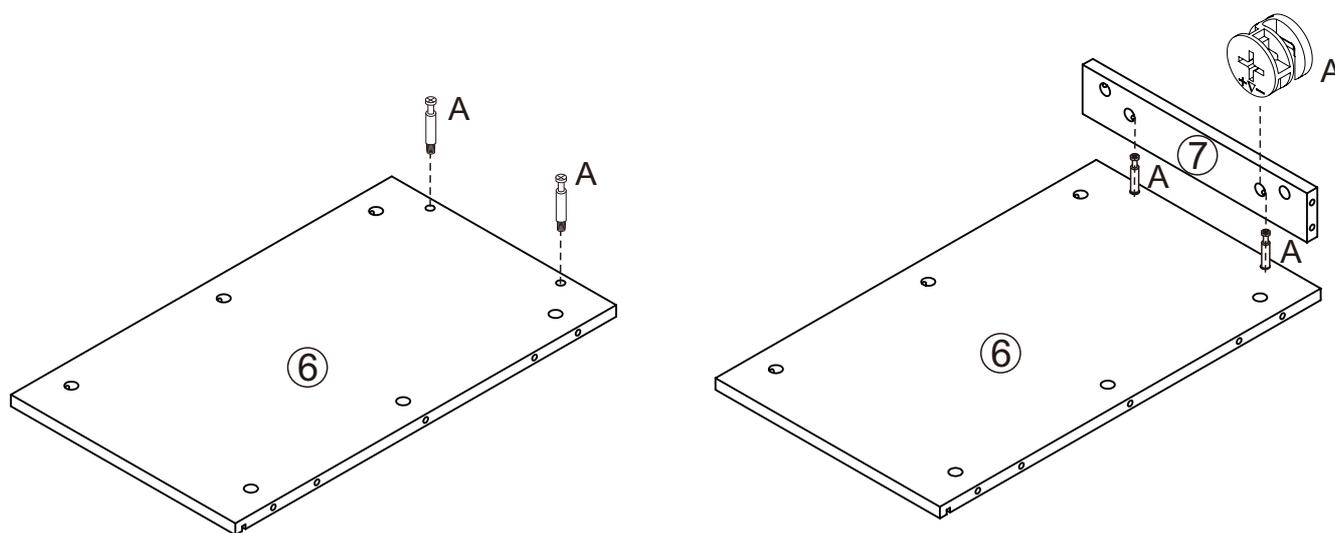


## STEP 9:

1. Attach part E1 to panel 3 with part F.
2. Insert parts A and K into the front and back of panel 3.

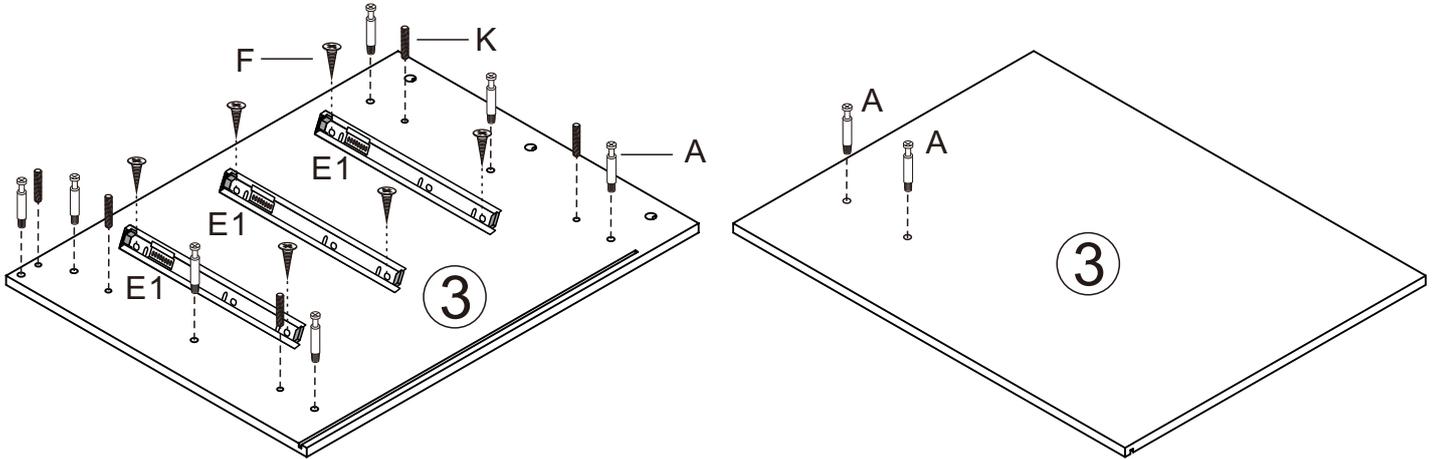


## STEP 10:

1. Attach part E1 to panel 4 with part F.
2. Insert parts A and K into panel 4.

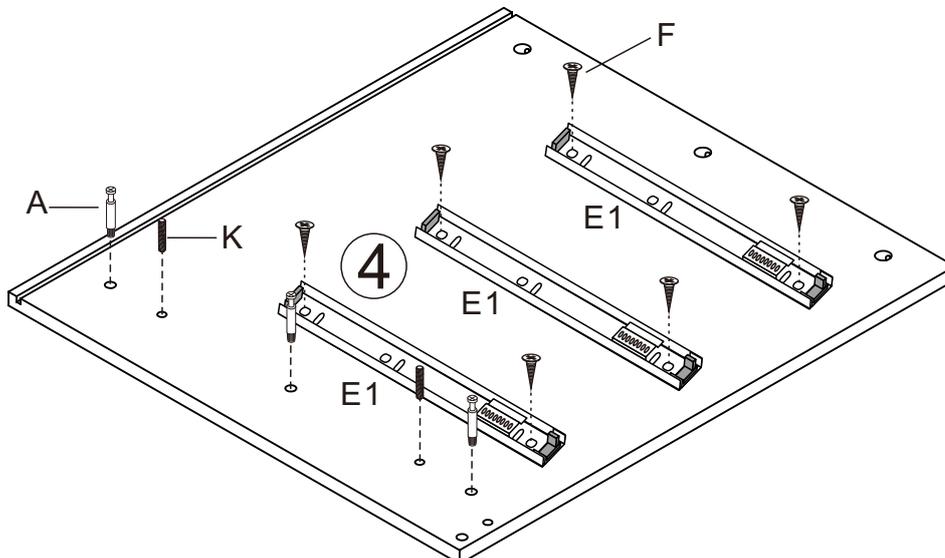



# STEP 11:

1. Insert parts A and K into panel 5.

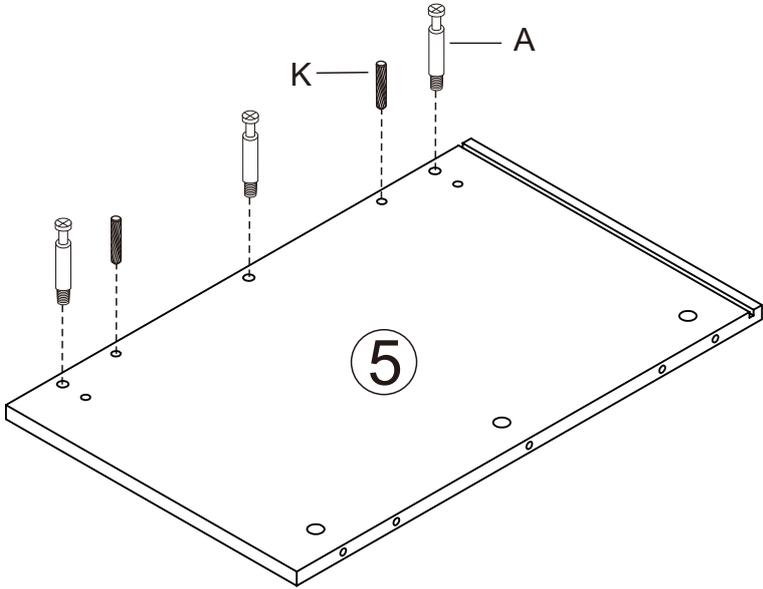


# STEP 12:

1. Attach panel 5 and 6 to panel 4 with parts A and K.

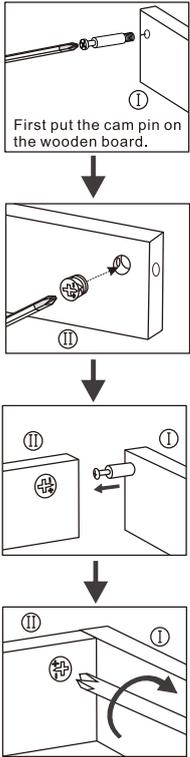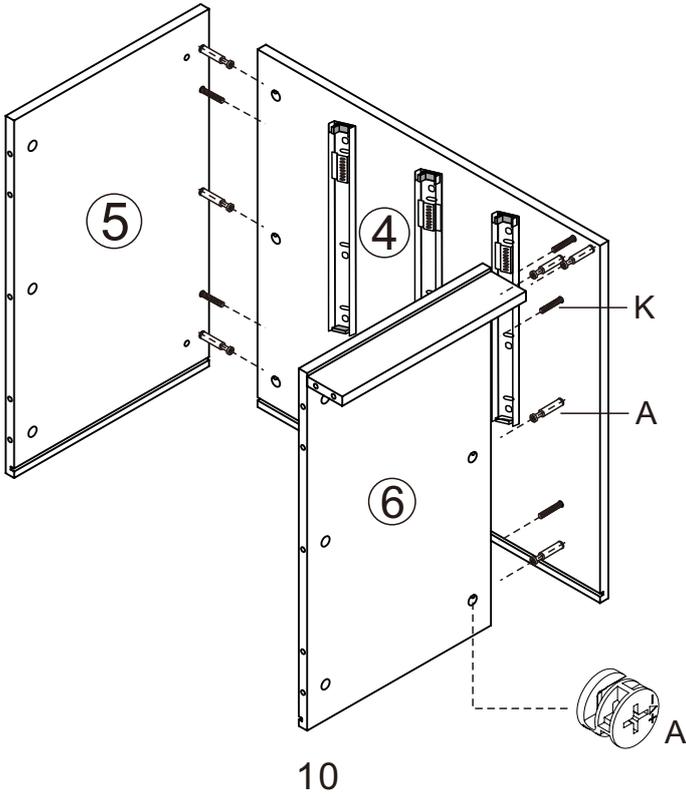



# STEP 13:

1. Slide panel 8 along slots of panels 5 and 6.

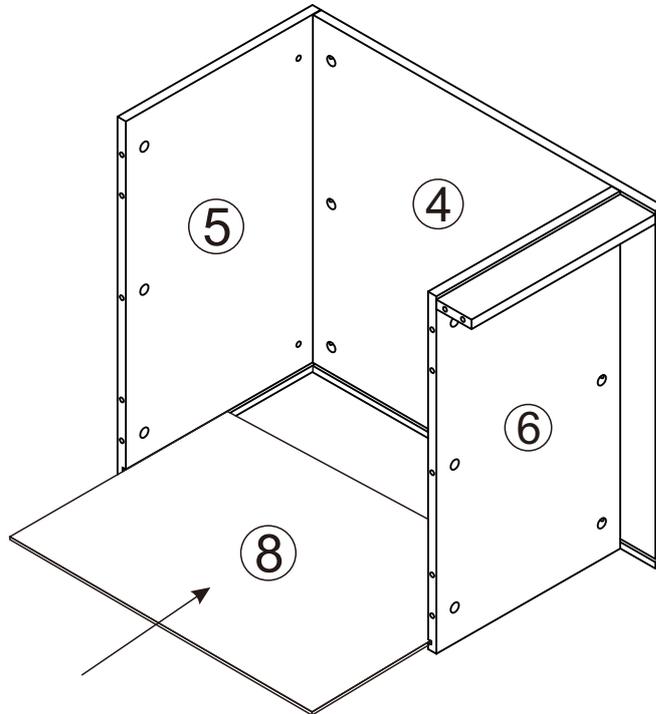



# STEP 14:

1. Attach panel 3 to panels 5 and 6 with parts A and K.

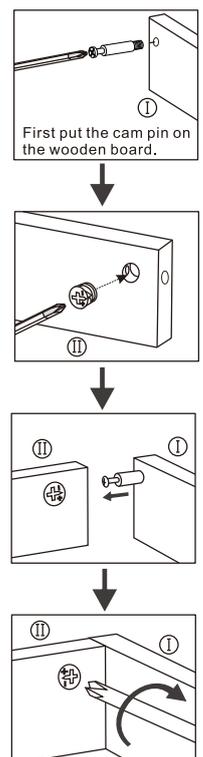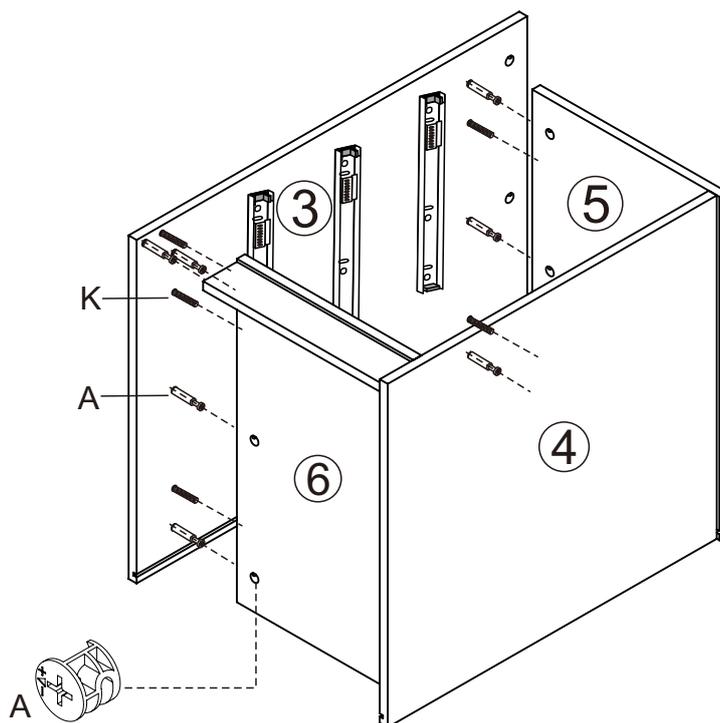



# STEP 15:

1. Attach panel 2 to panels 3 and 14 with part A.

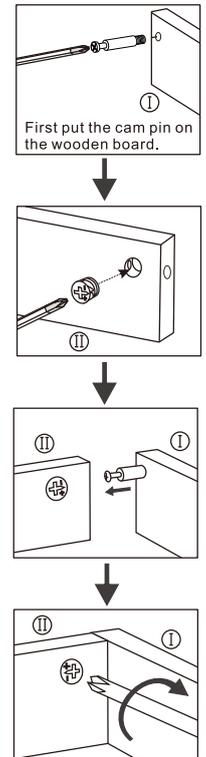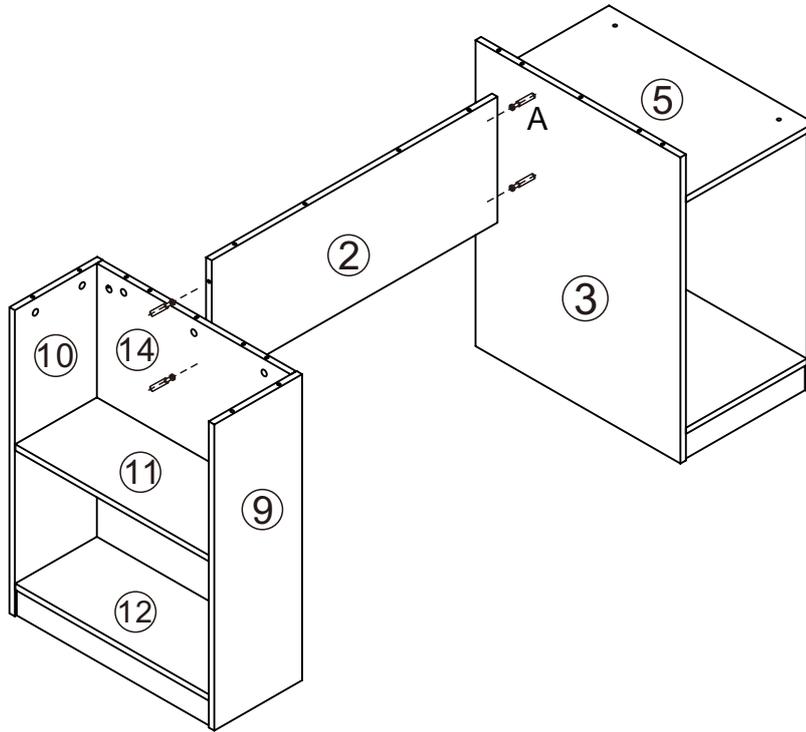


# STEP 16:

1. Attach panel 1 to panels 2, 3, 9, 10 and 14 with parts A and K.
2. Attach frame P1 to panel 5 with part B.

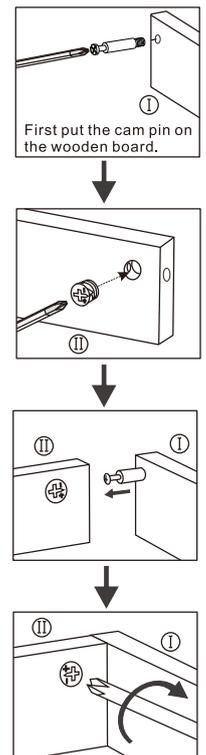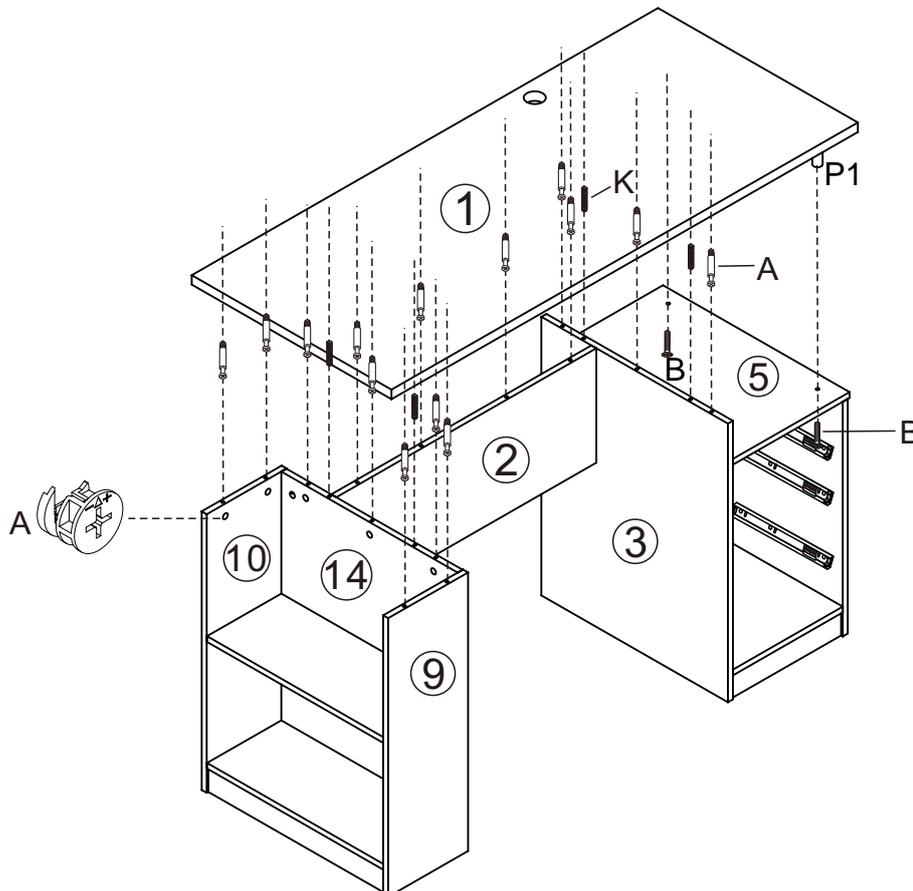


## STEP 17:

1. Insert part I into panel 8 with part G.

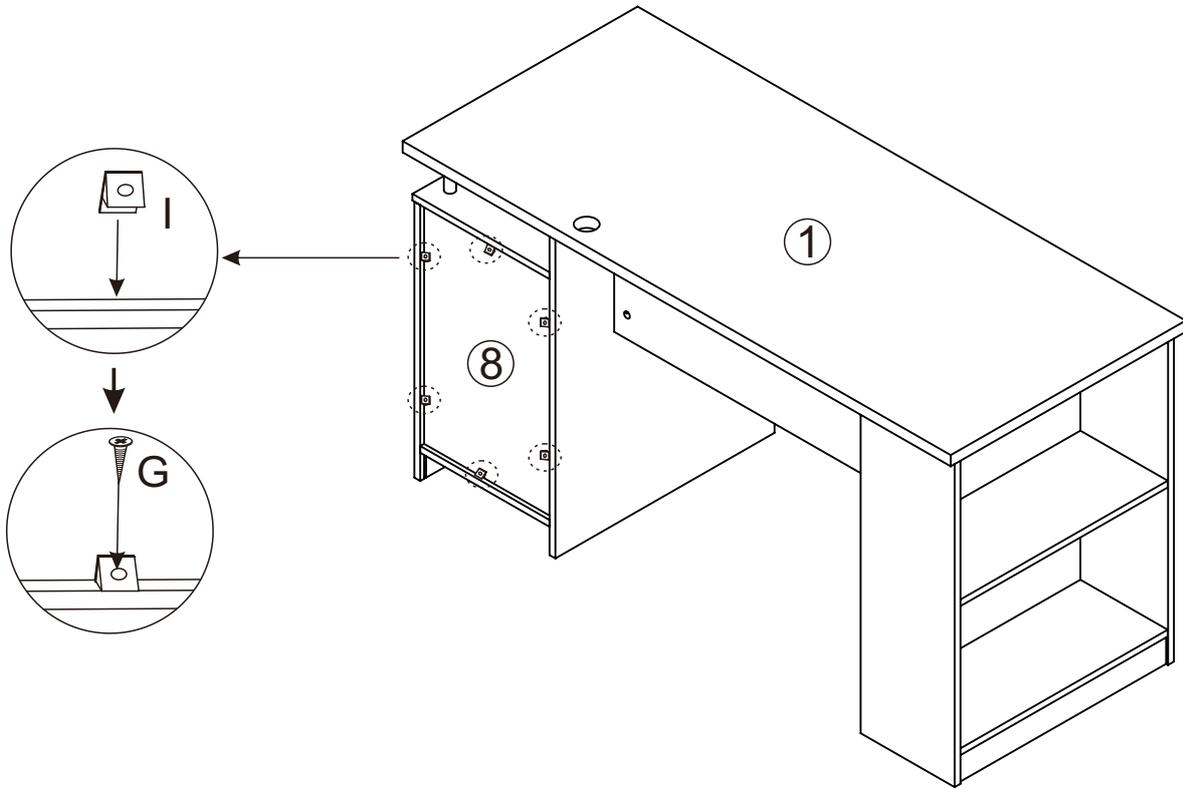

## STEP 18:


1. Insert part A into panel 15.
2. Attach part L to panel 15 with part D.

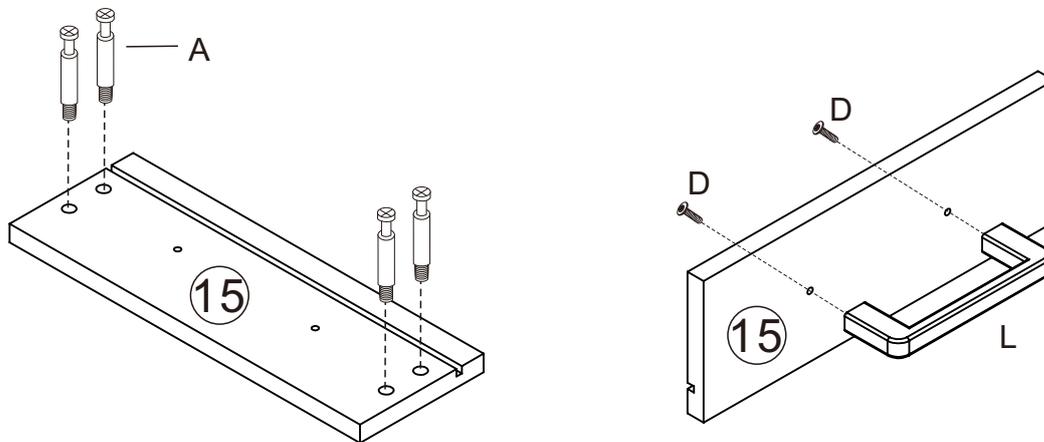

**X2**

## STEP 19:


1. Attach panels 16 and 17 to panel 18 with part J.
2. Slide panel 19 along slots of panels 16 and 17.

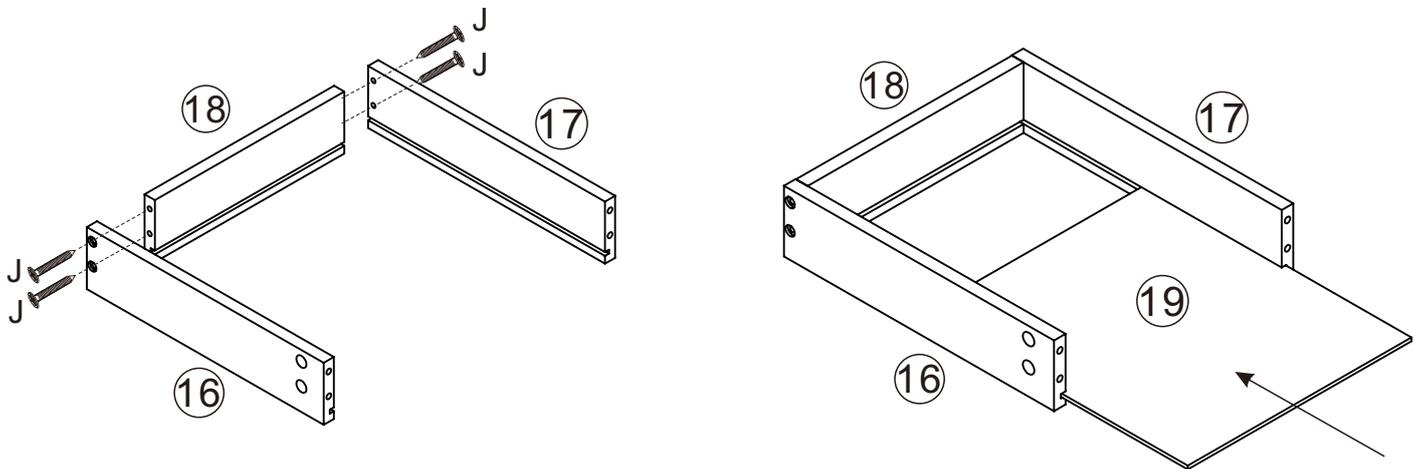

X2

## STEP 20:


1. Attach panel 15 to panels 16 and 17 with part A.

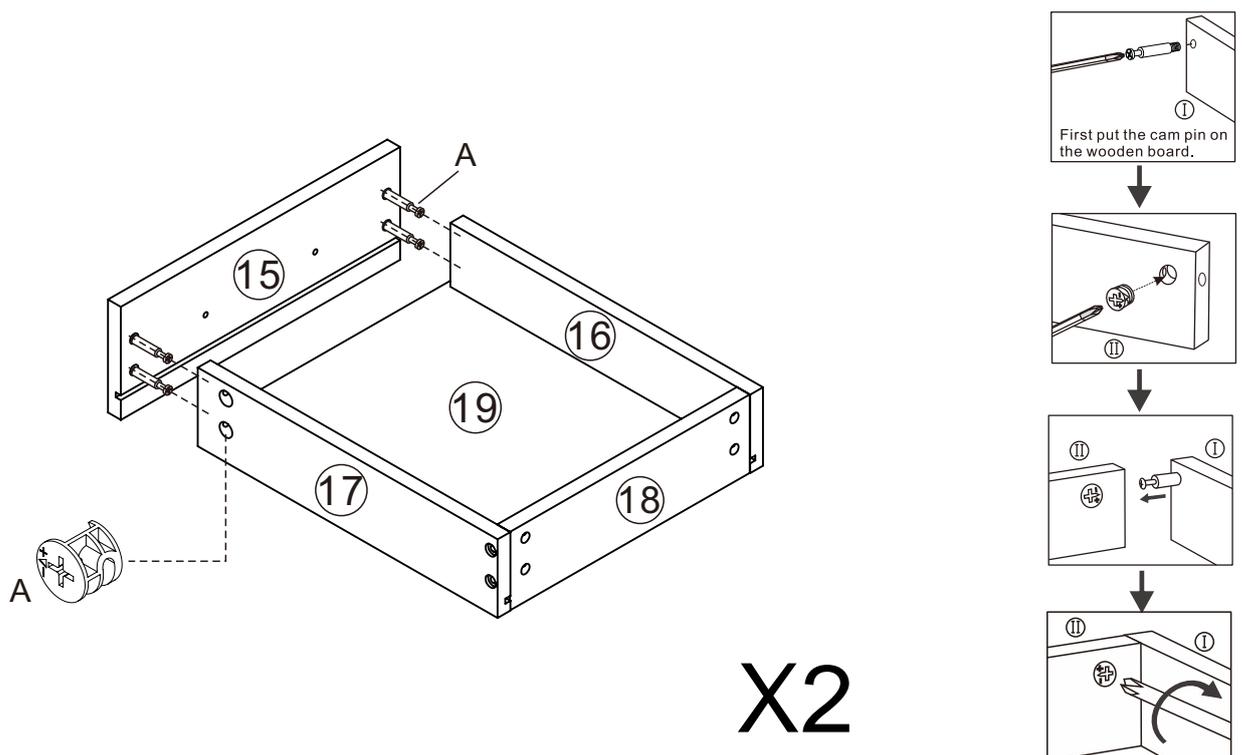

X2

## STEP 21:



1. Attach part E2 to panels 16 and 17 with part F.

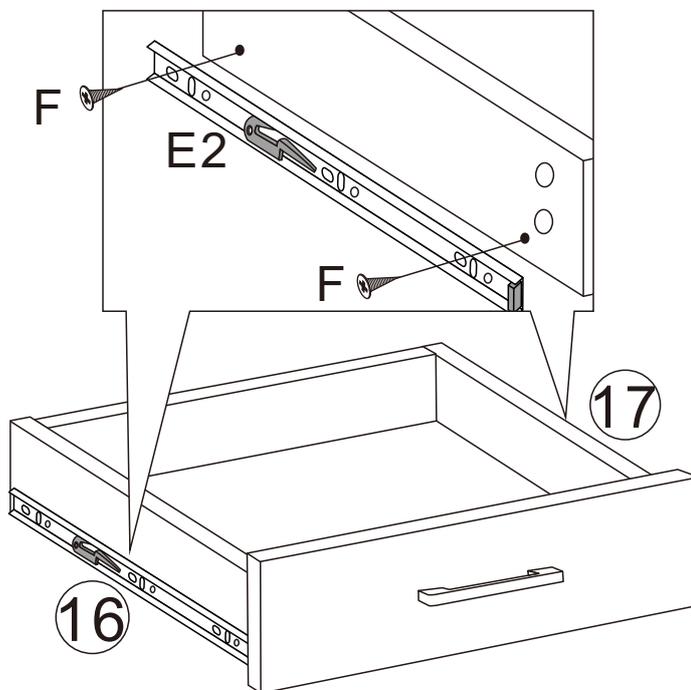

X2


## STEP 22:

1. Insert part A into panel 20.
2. Attach part L to panel 20 with part D.

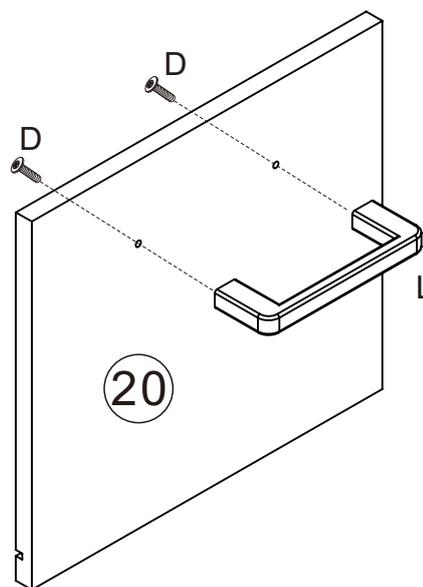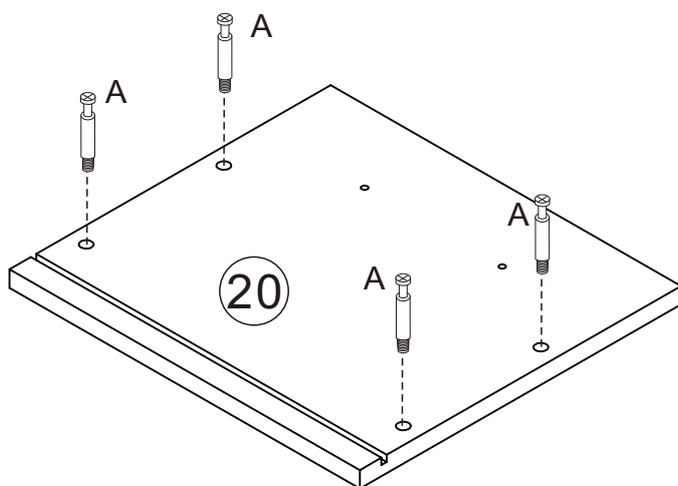



## STEP 23:

1. Attach panels 21 and 22 to panel 23 with part J.
2. Slide panel 19 along slots of panels 21 and 22.

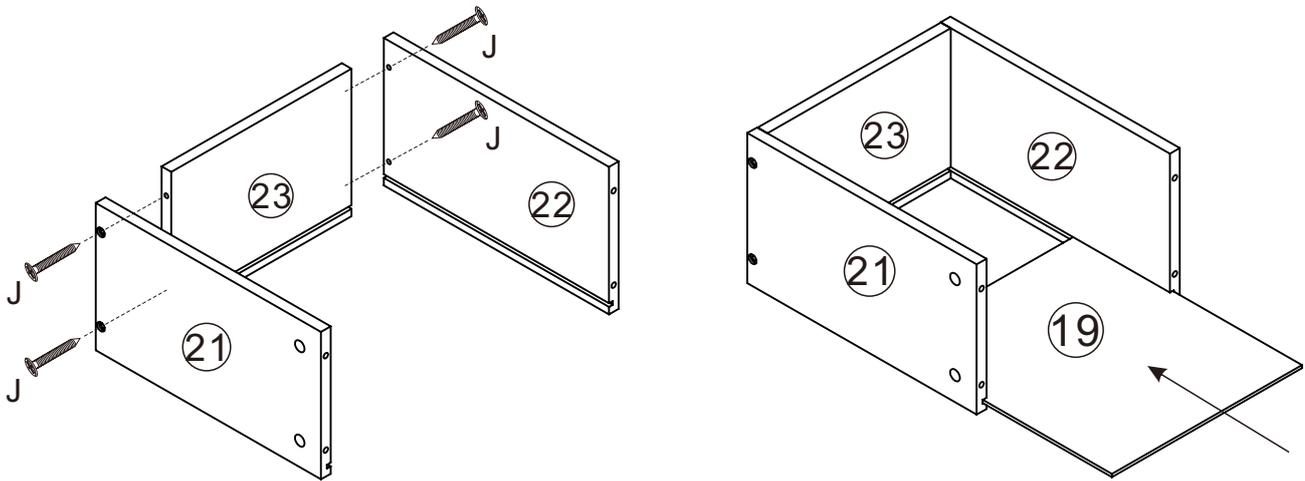


## STEP 24:

1. Attach panel 20 to panels 21 and 22 with part A.

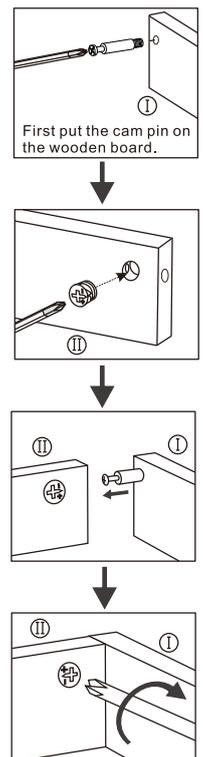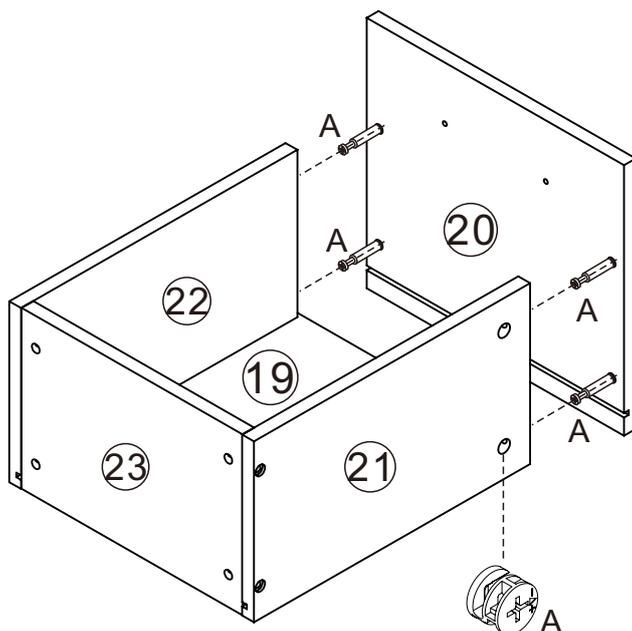


## STEP 25:

1. Attach part E2 to panels 21 and 22 with part F.

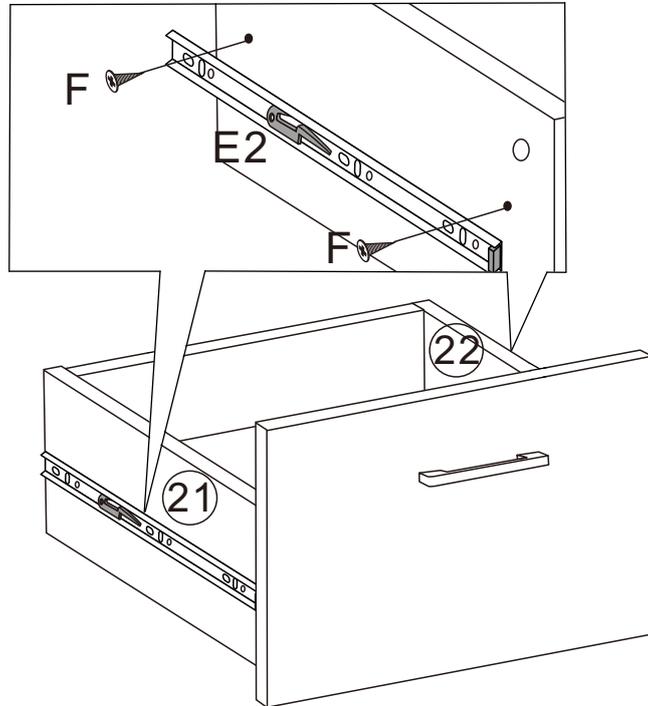

## STEP 26:


1. Install drawer into the cabinet, ensure runners are correctly aligned.
2. Insert part H1 to panel 1 with part F, then insert part H2.

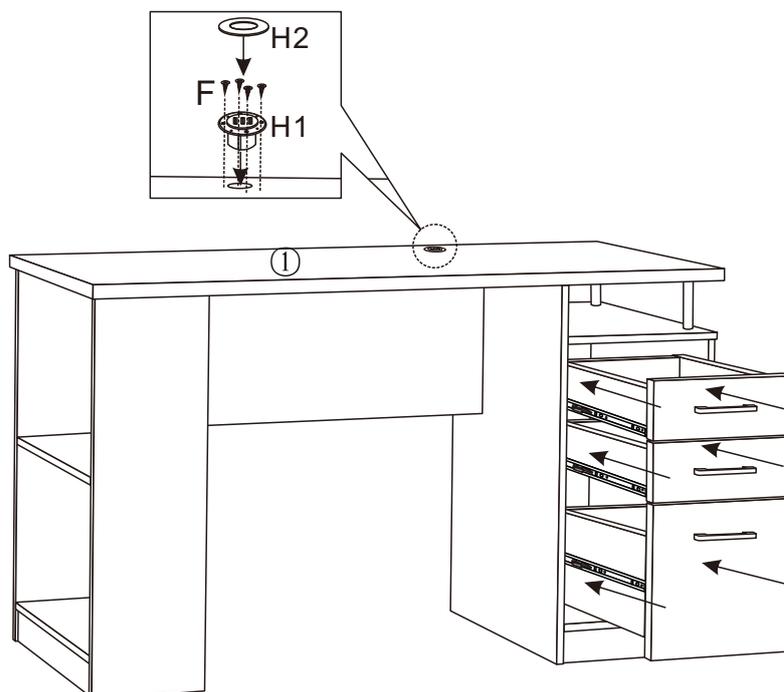

# STEP 27:


Install Tip Kit

1. Attach part N to panel 1 with part F.
2. Attach part N to the wall with part O.

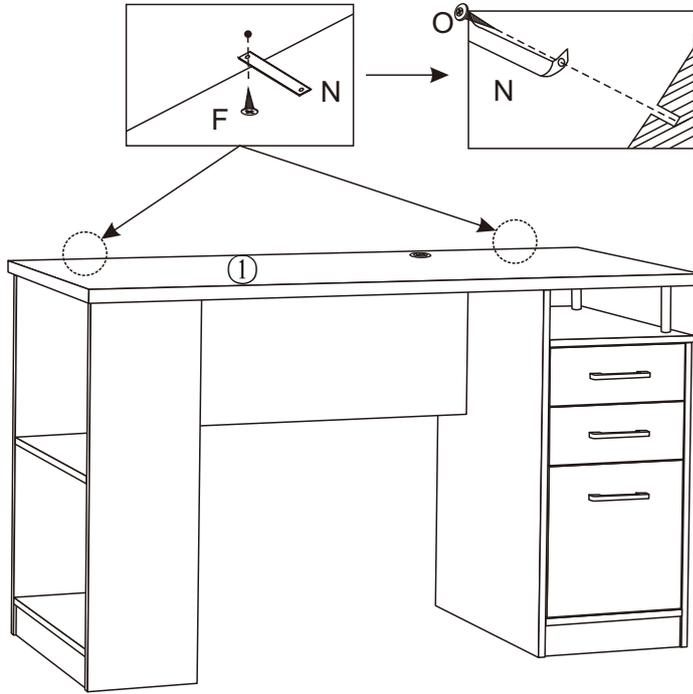

# STEP 28:

Assembly complete!

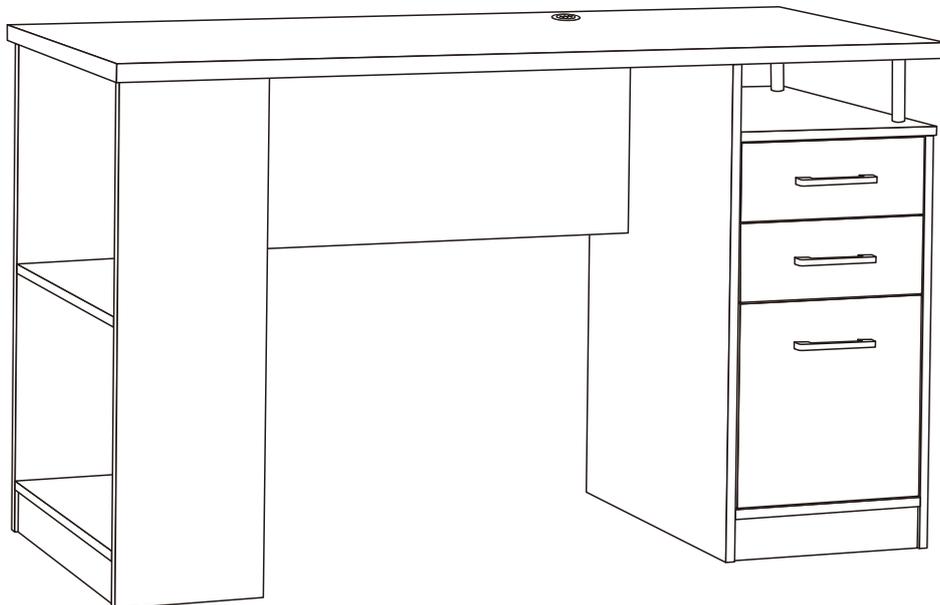

## **To protect your furniture, we suggest the following:**

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

**NOTE:** If the above care advise is not adhered to your product warranty may become void