
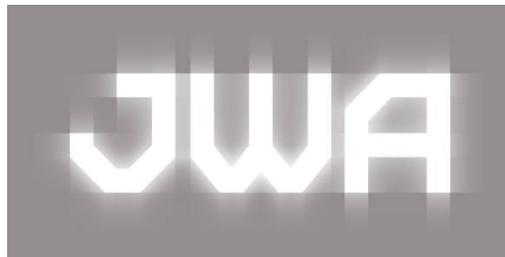


ASSEMBLY INSTRUCTION

MATTHEW DESK

ITEM CODE 69929

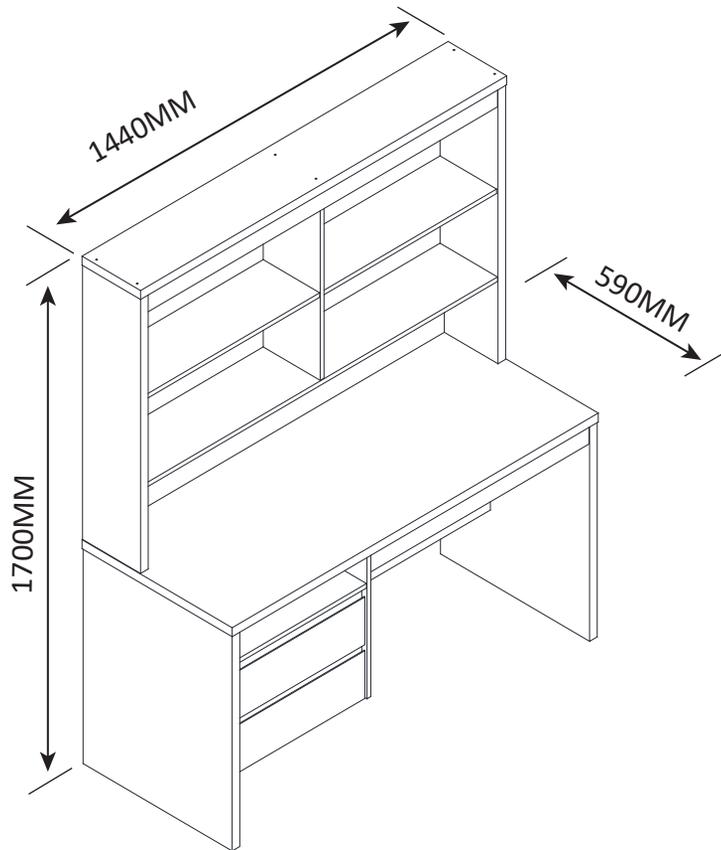


Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please refer to your receipt

PRE-ASSEMBLY PREPARATION

Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads
7. Assembly is to be carried out by a competent adult(s) ONLY
8. During assembly, children should be kept away from the product due to possible risk to injury.
9. Do not use this item if any components are missing or damaged.
10. Please keep the instructions for future reference.

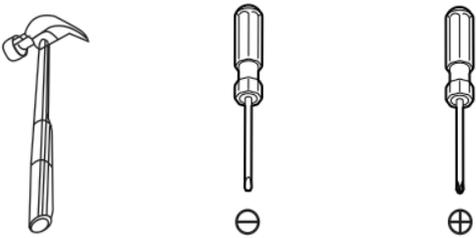		
<p>Allow 30 min</p>	<p>For 1 person</p>	<p>Additional tools required</p>

! **TIPPING WARNING** !



Serious or fatal injuries may occur from furniture toppling over. To help avoid this please follow the below recommendations:

- Install the provided "Tipping Kit" as per the instructions
- Never allow children to climb on or hang off of any part of this product
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product

If this product has drawers:

- Place the heaviest items in lowest drawers
- Do not open more than 1 drawer at a time as this may cause the product to become unbalanced
- Do not tamper with or remove any drawer interlocking/running system

Note: The use of the provided "Tipping Kit" may reduce but not necessarily eliminate the risk of furniture toppling over. Please use this product with caution.

This is a permanent label. Do not attempt to remove!

PARTS LIST



A  M6X39mm 40pcs	B  M15X12mm 40pcs	C  M8X30mm 55pcs	D  M3.5X14mm 24pc
E  M5X40mm 10pcs	F  4pcs	G  M8X50mm 2pc	H  M5X60mm 6pcs
I  M3X16mm 19pcs	J  2pcs	K  M3.5X12mm 8pc	L  2pc
M  2pcs	CL  2pcs	CR  2pcs	DL  2pcs
DR  2pcs			

1	SIDE PANEL
2	MIDDLE PANEL
3	SIDE PANEL
4	SHELF
5	BACK PANEL
6	SKIRT
7	SKIRT
8	SKIRT




9	TOP PANEL
10	DRAWER SIDE PANEL
11	DRAWER SIDE PANEL
12	DRAWER BACK PANEL
13	DRAWER BASE
14	DRAWER FRONT
15	MIDDLE PANEL
16	SHELF

17	SHELF
18	BOTTOM PANEL
19	SIDE PANEL
20	SIDE PANEL
21	SKIRT
22	TOP PANEL
23	SKIRT
24	BACK PANEL
25	BACK PANEL


PARTS LIST

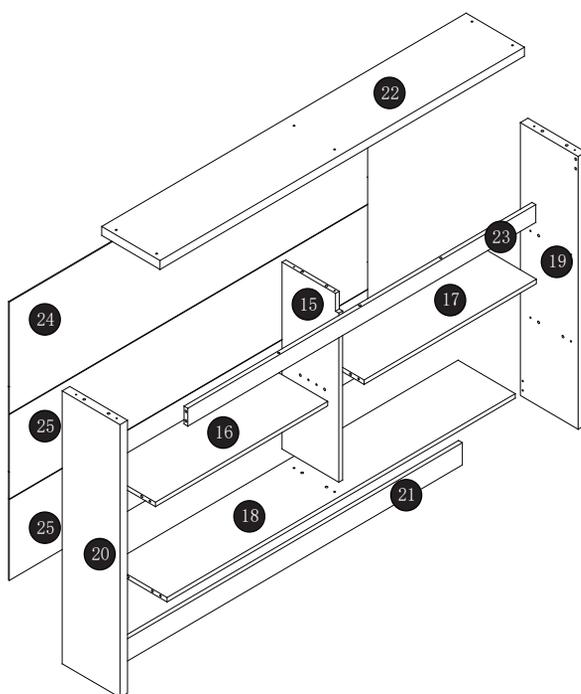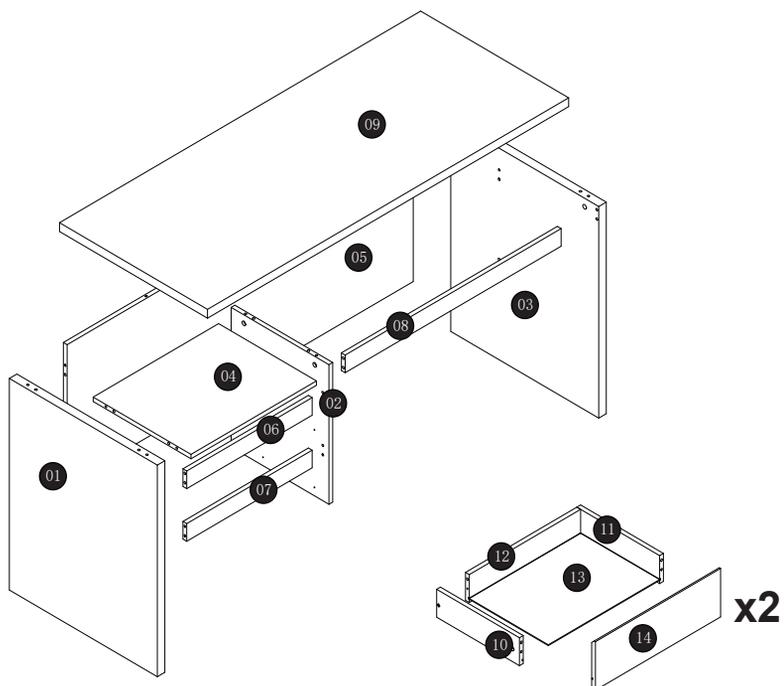


CAM LOCK INSTALL METHOD AS FOLLOWS

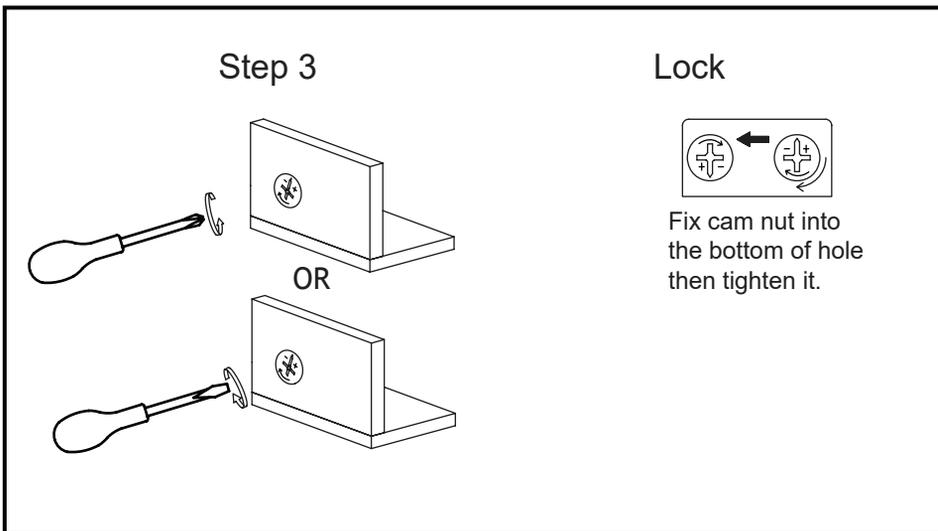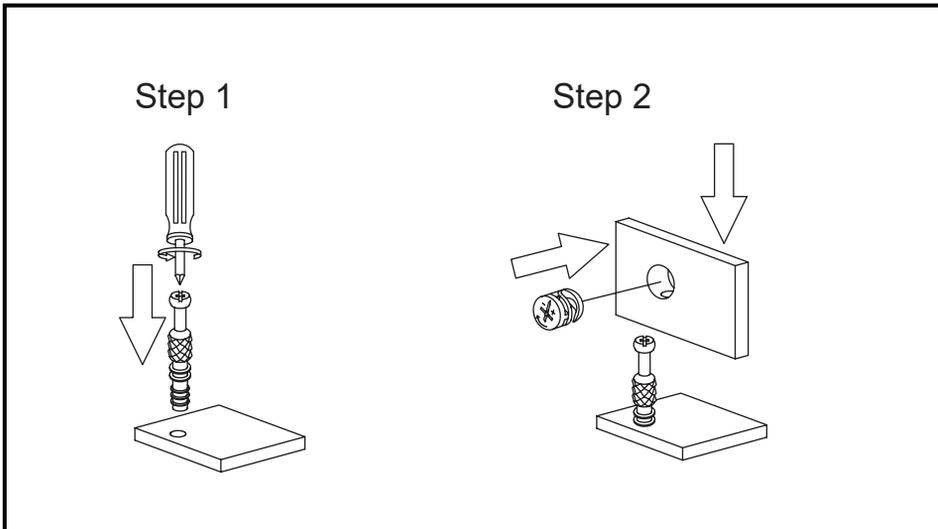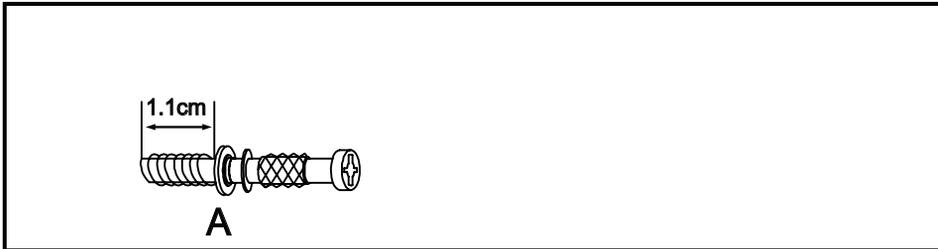


STEP 1

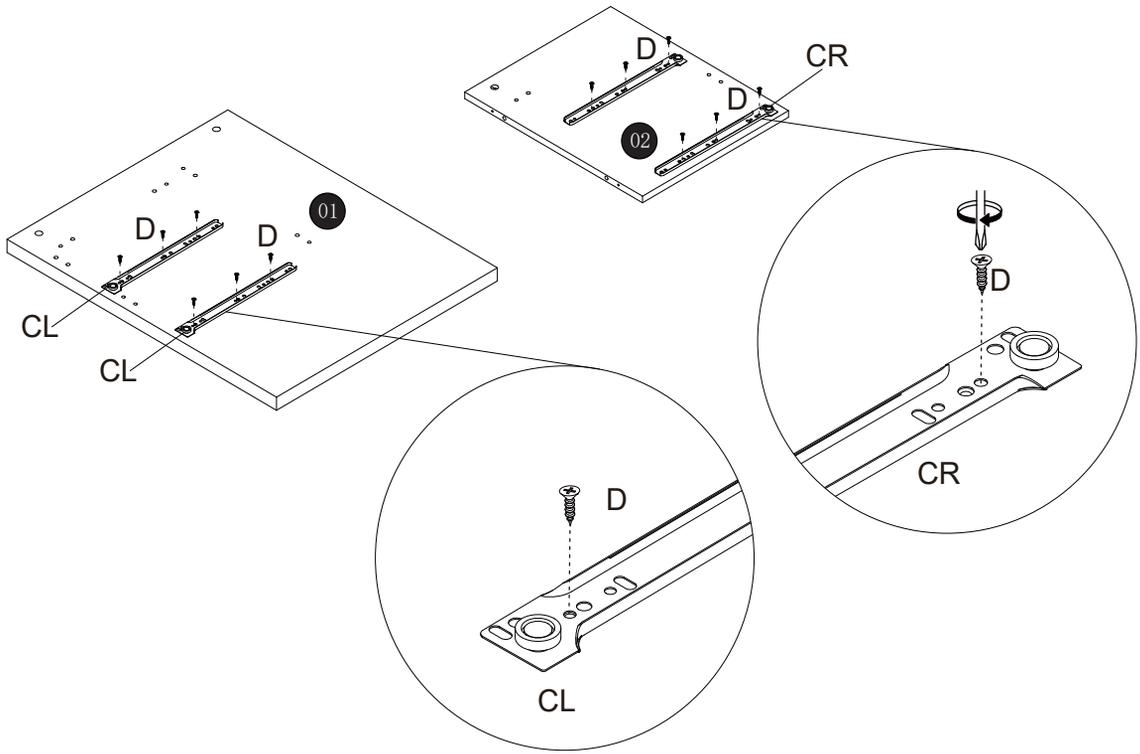


STEP 2

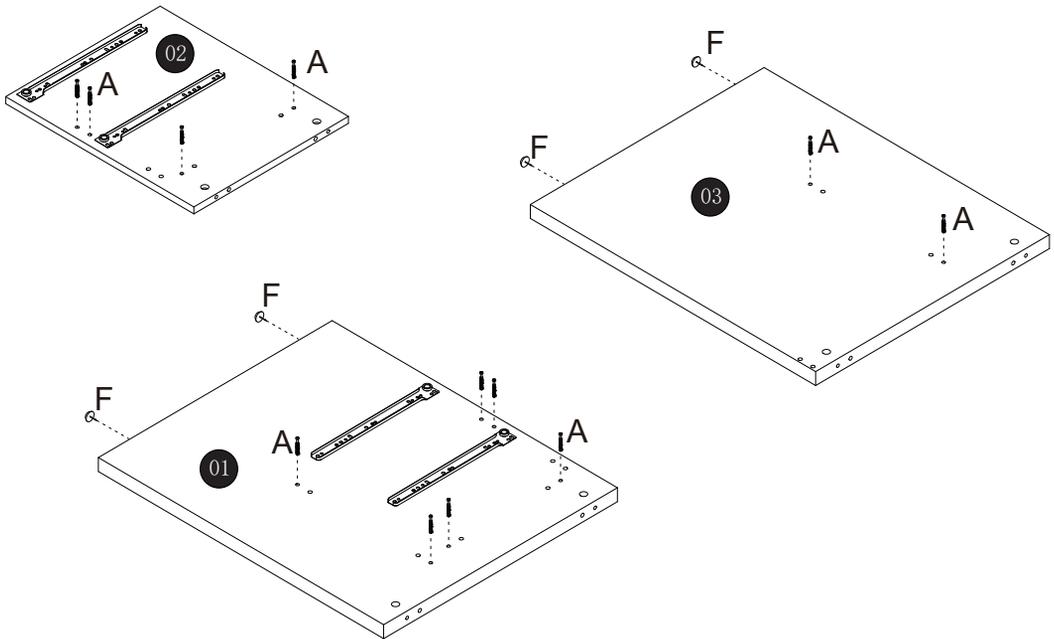


STEP 3

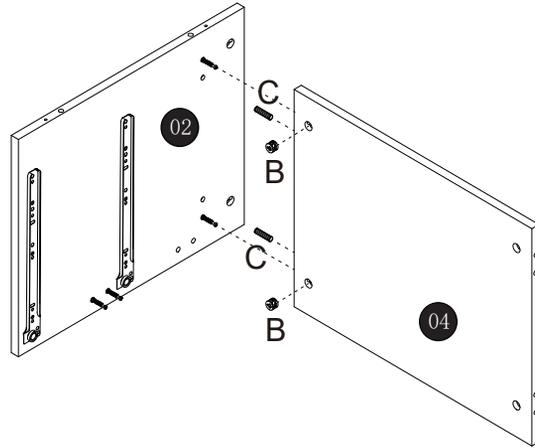


STEP 4

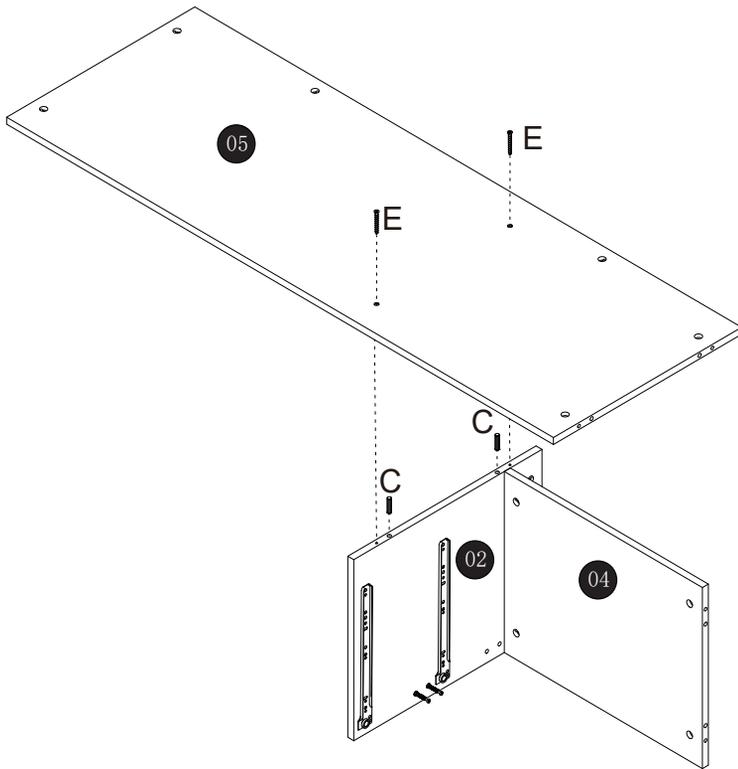


STEP 5

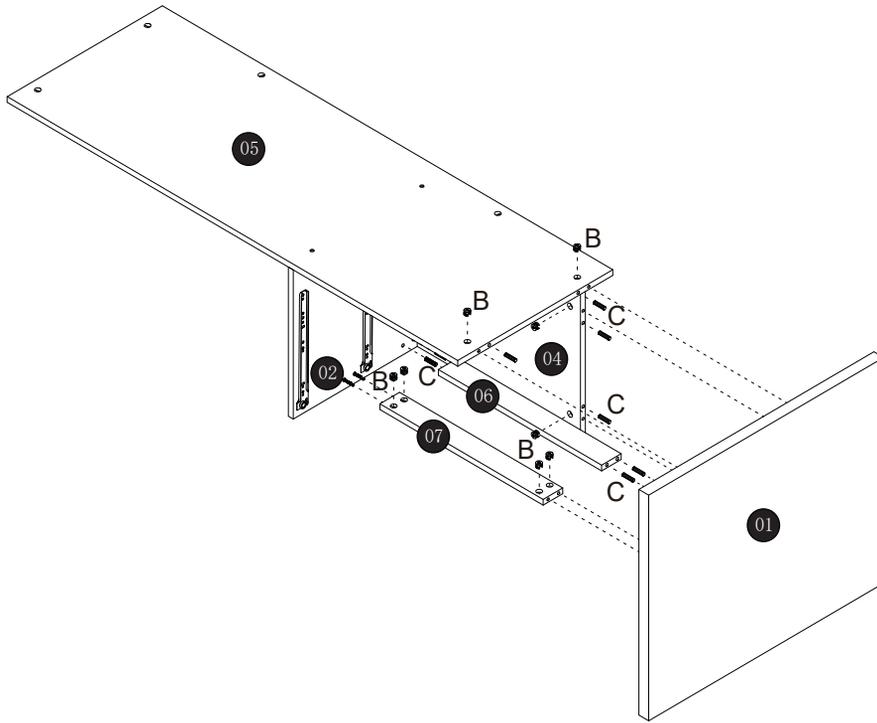


STEP 6

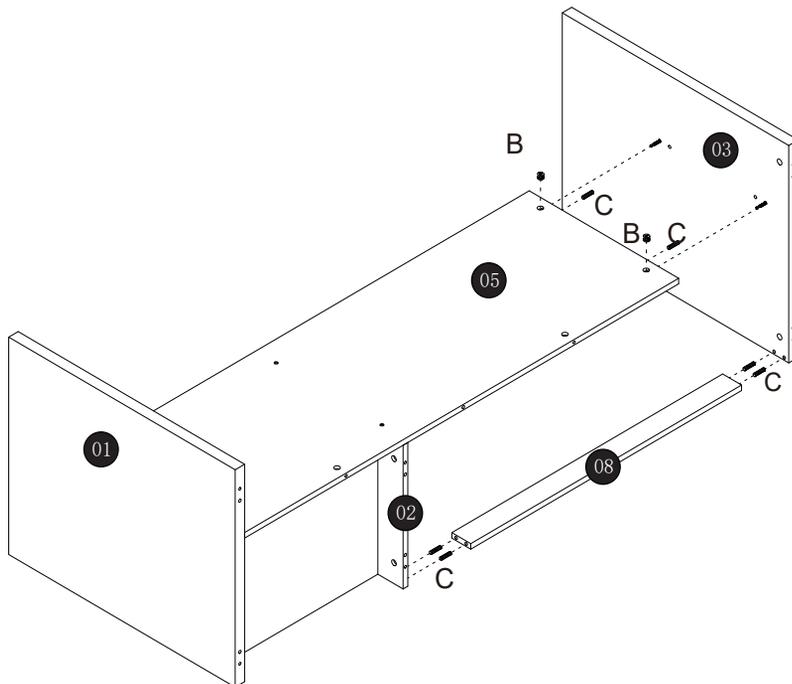


STEP 7

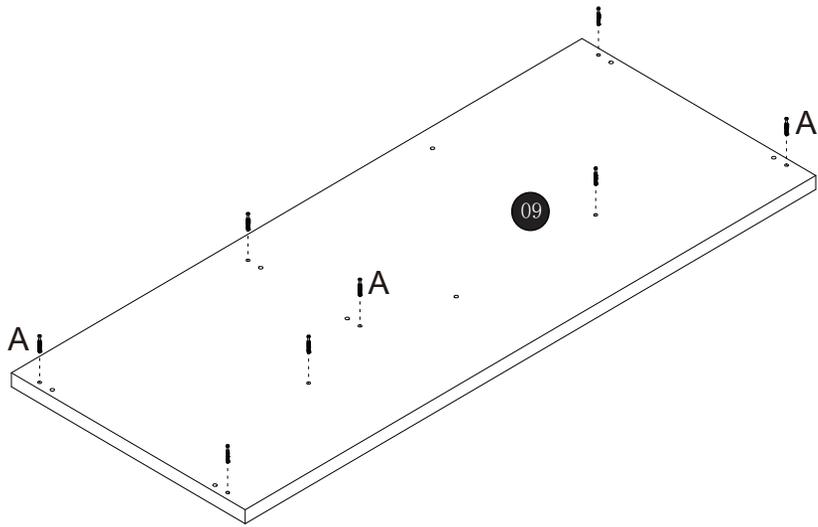

STEP 8


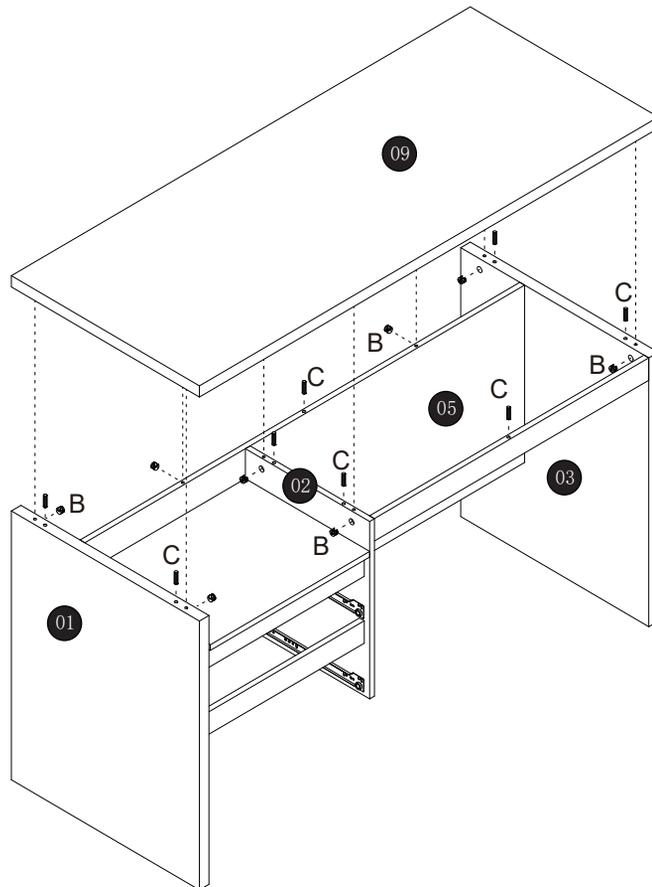


STEP 9

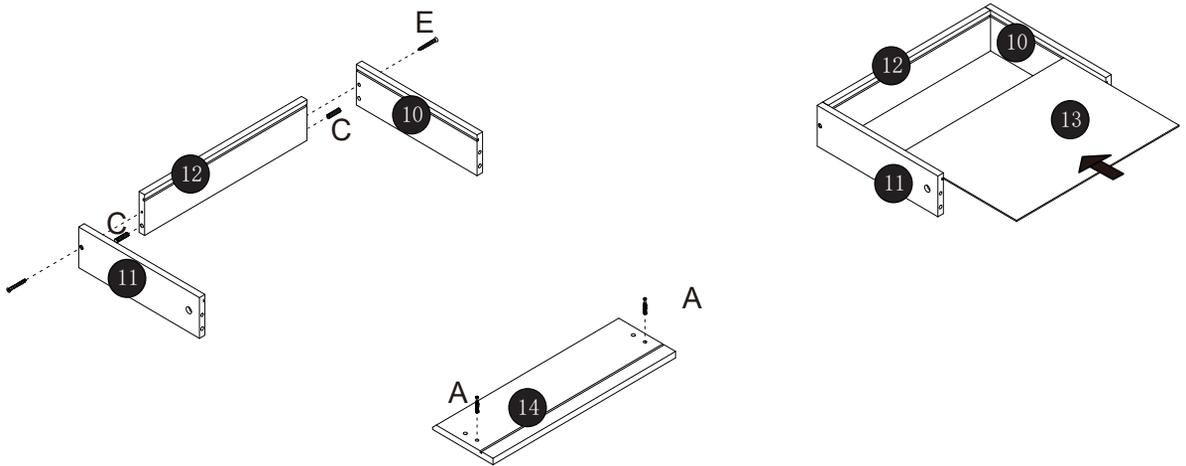


× 2

STEP 10

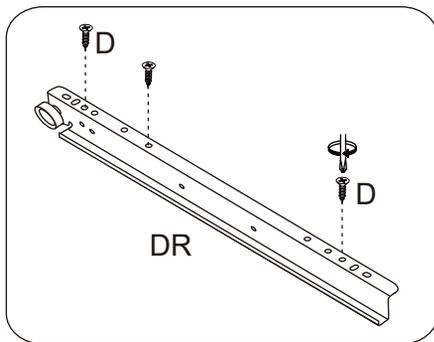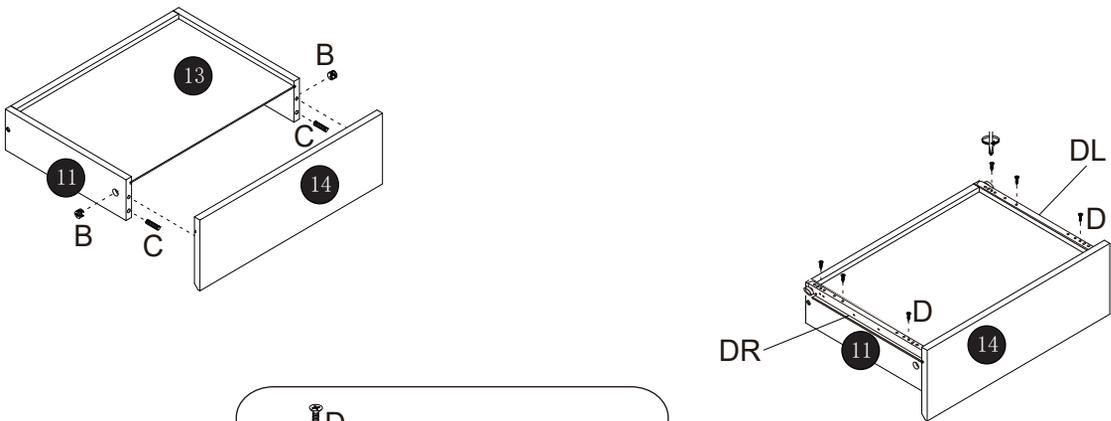


× 2


STEP 11

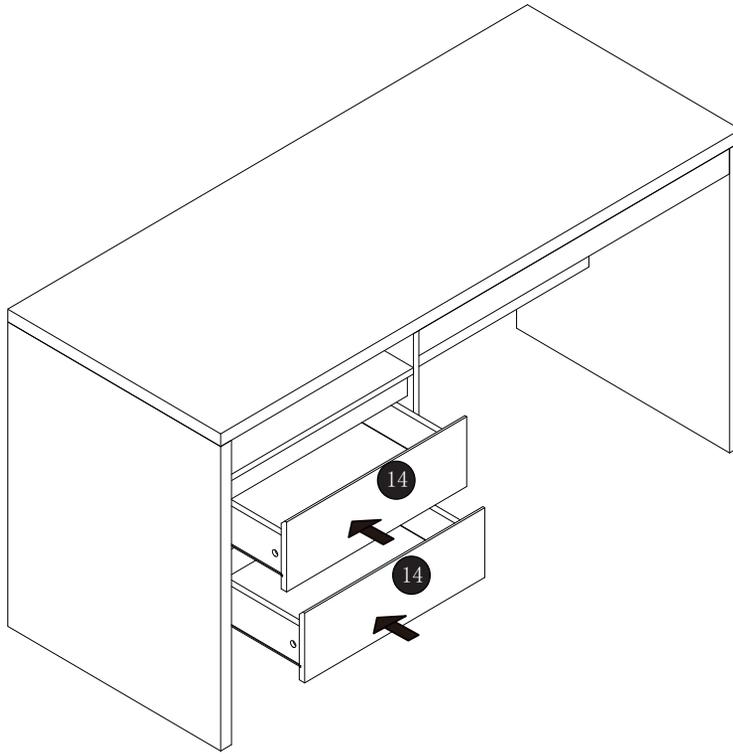


STEP 12

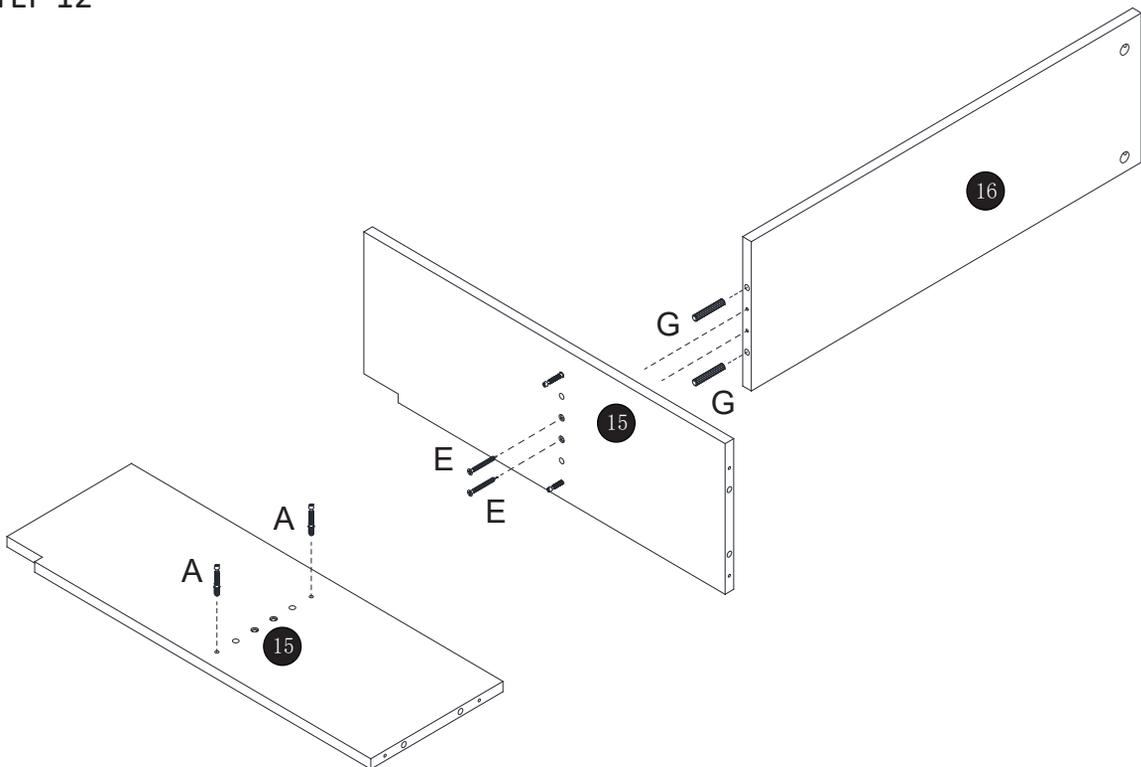


STEP 13

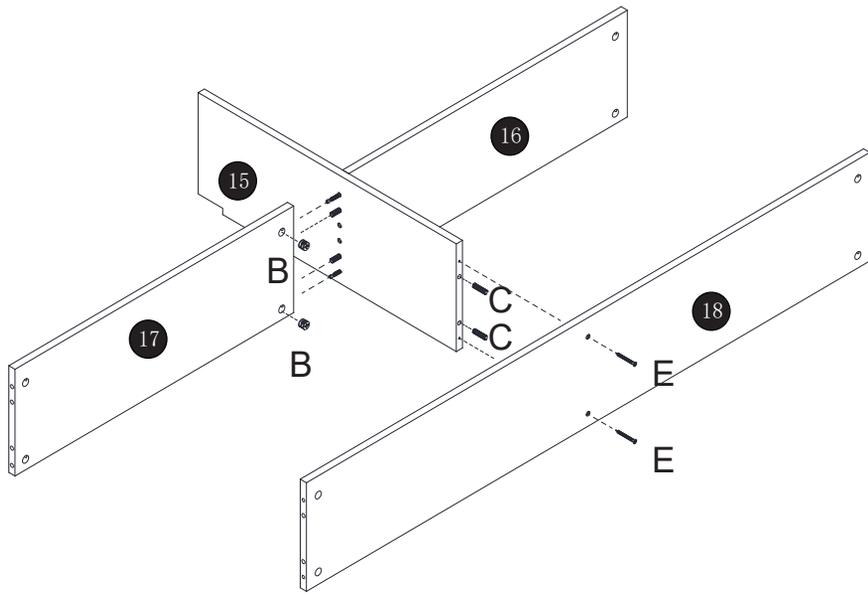


STEP 14

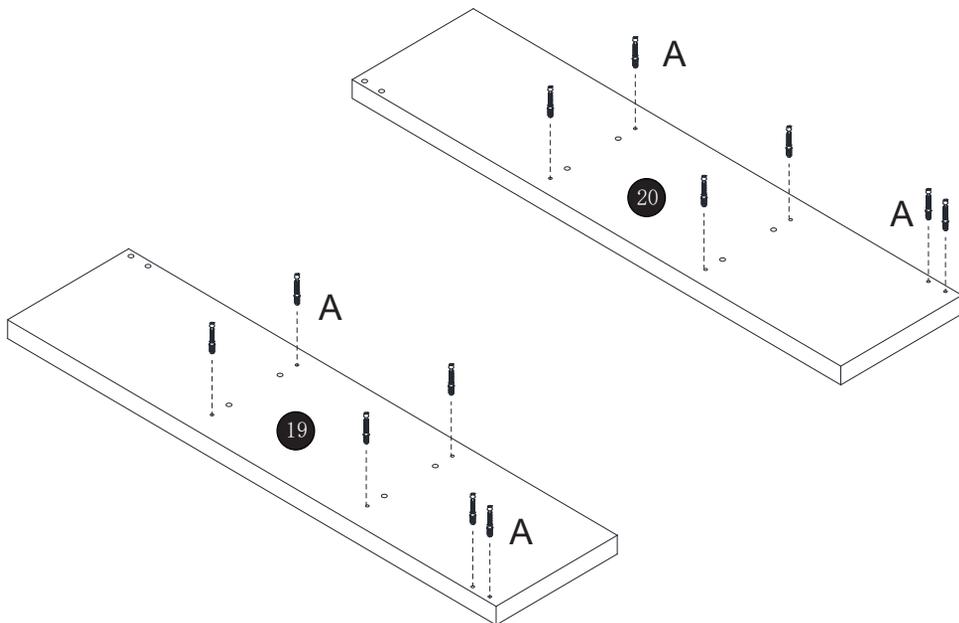


STEP 15

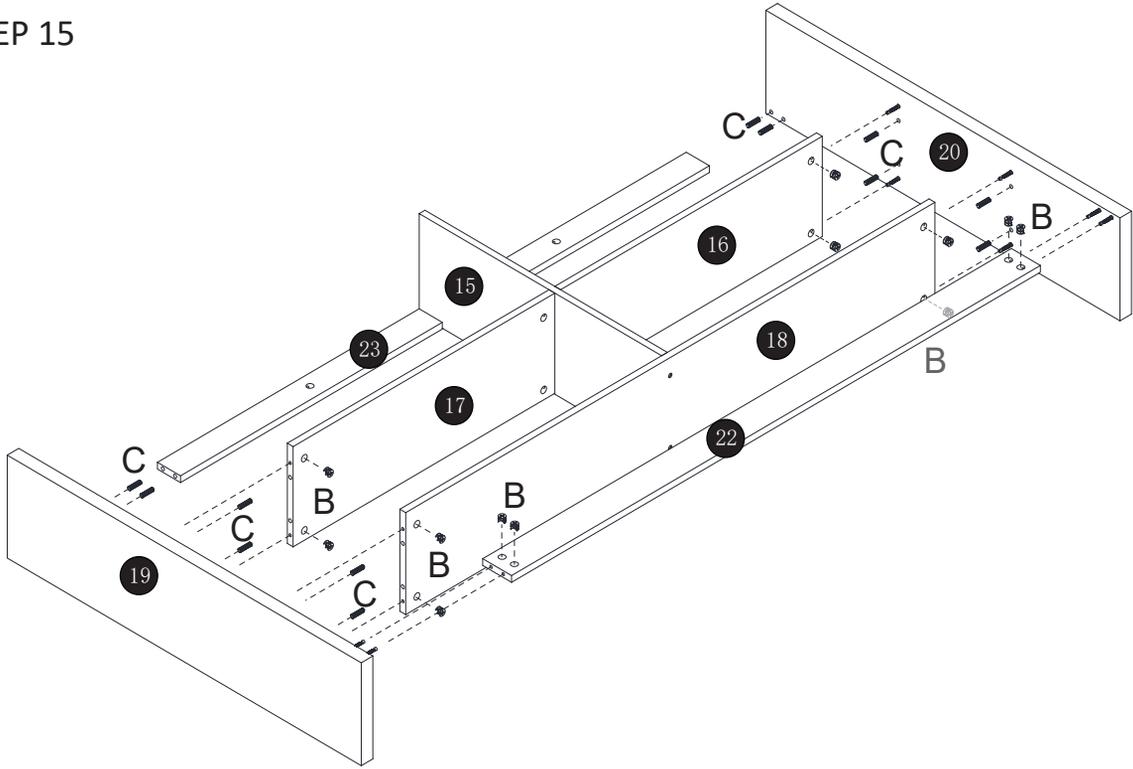


STEP 16

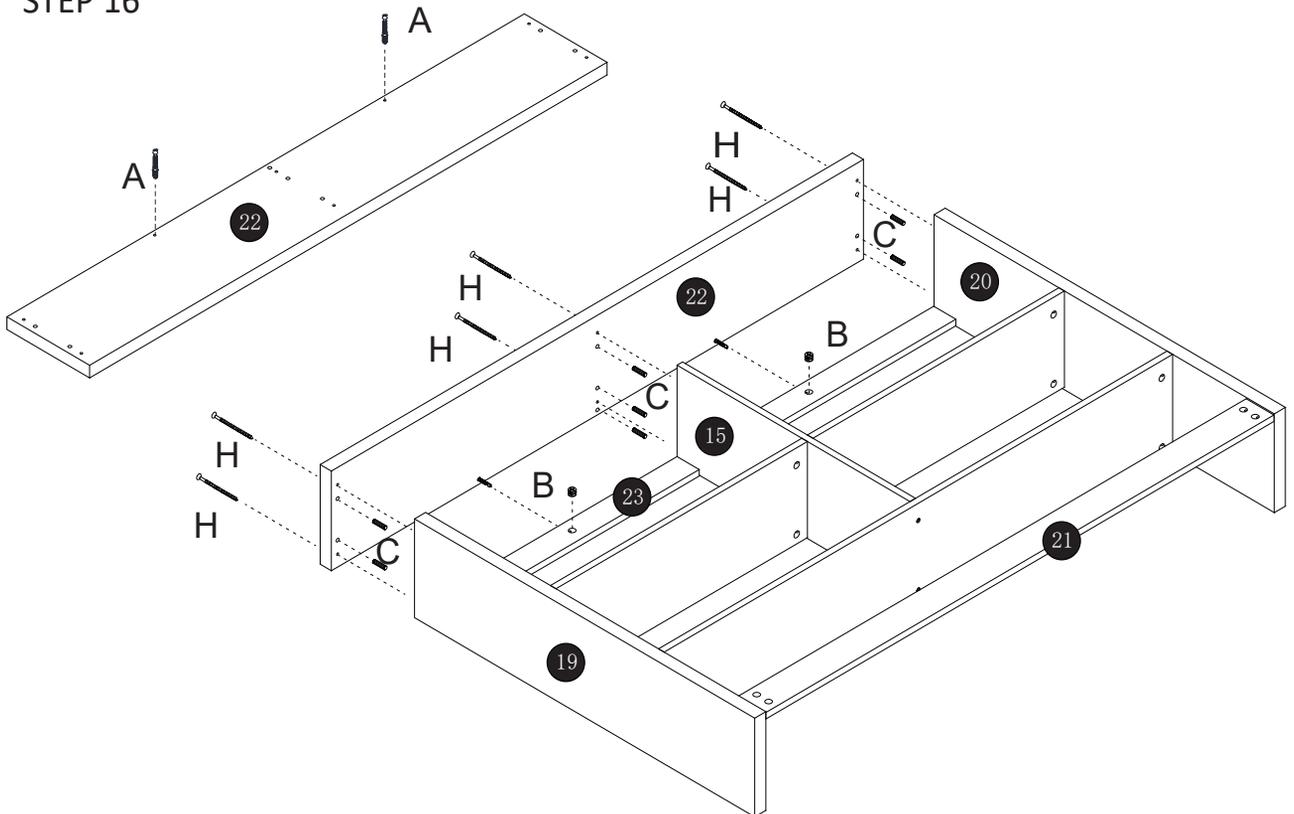



STEP 17

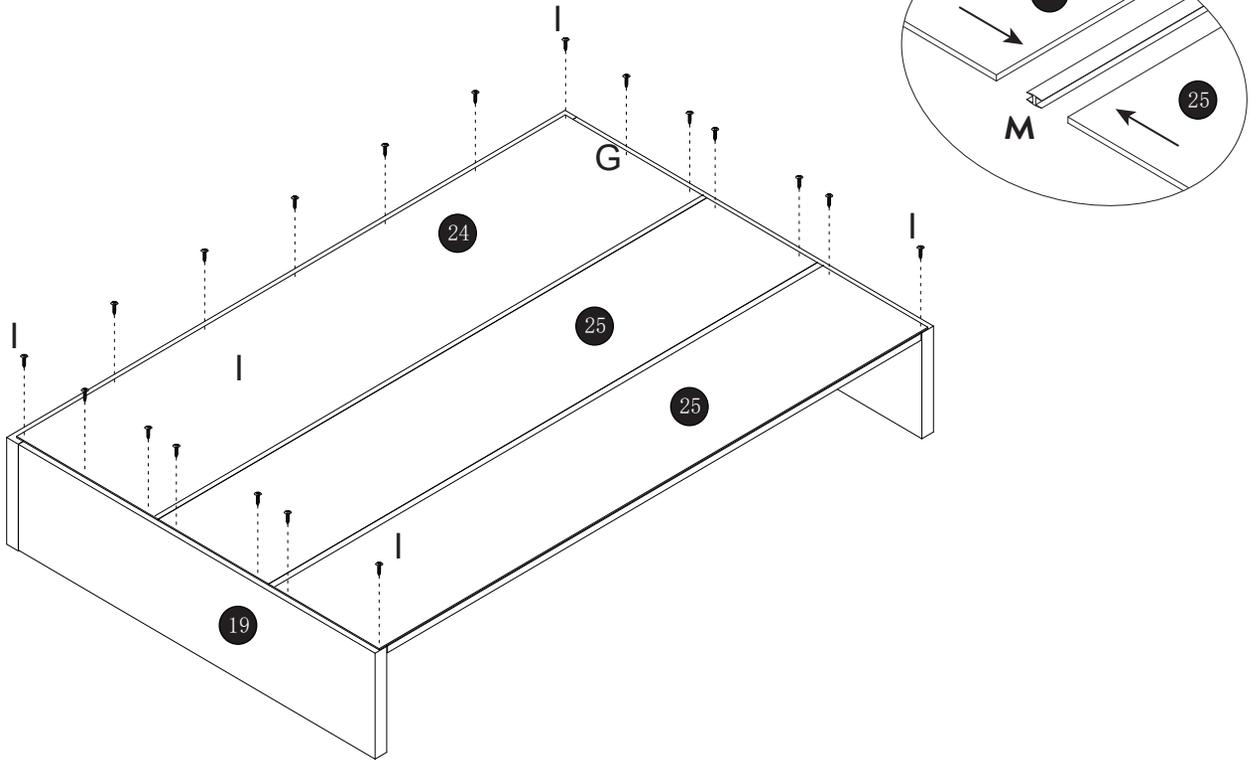


STEP 18

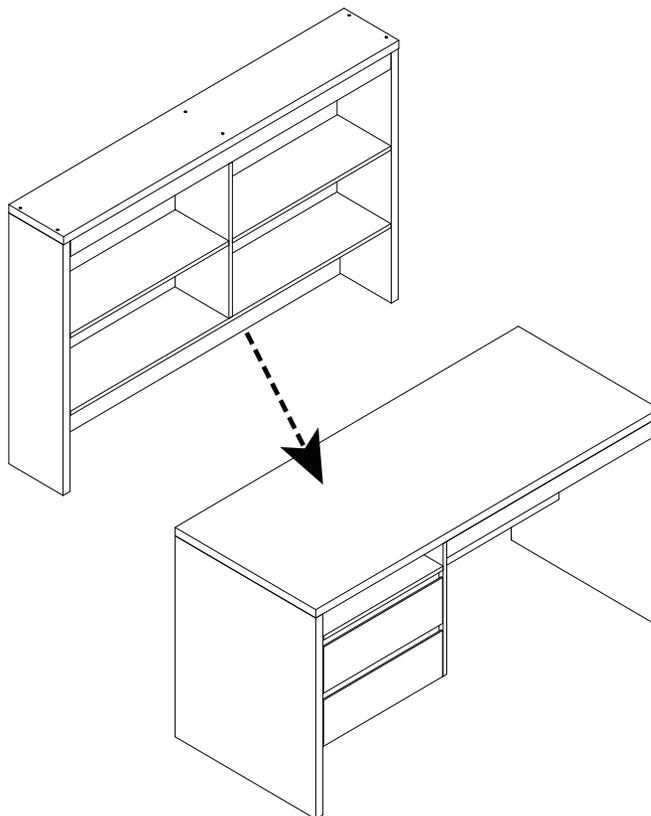

STEP 19

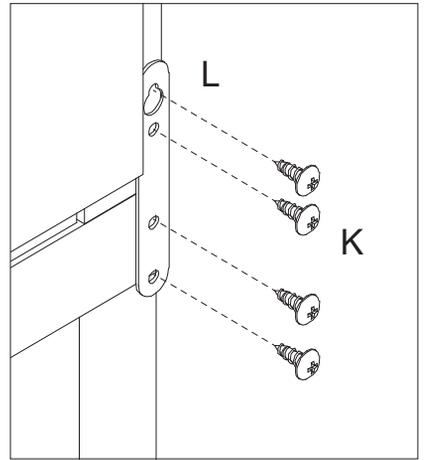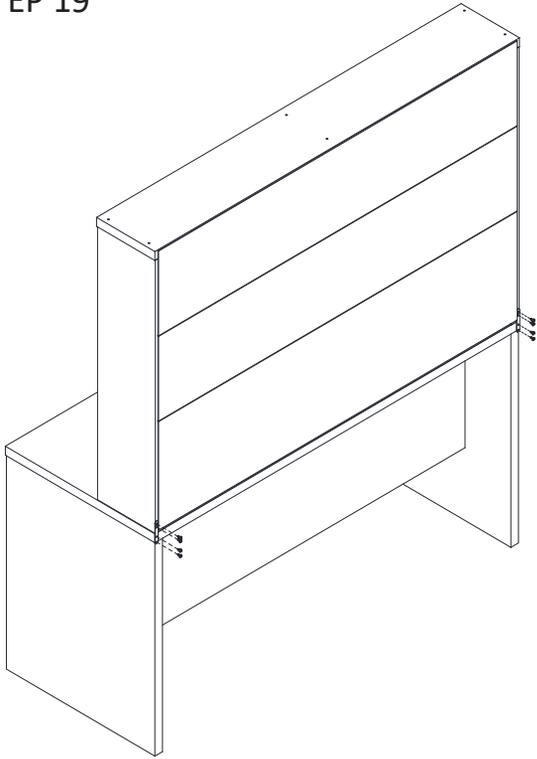


STEP 20

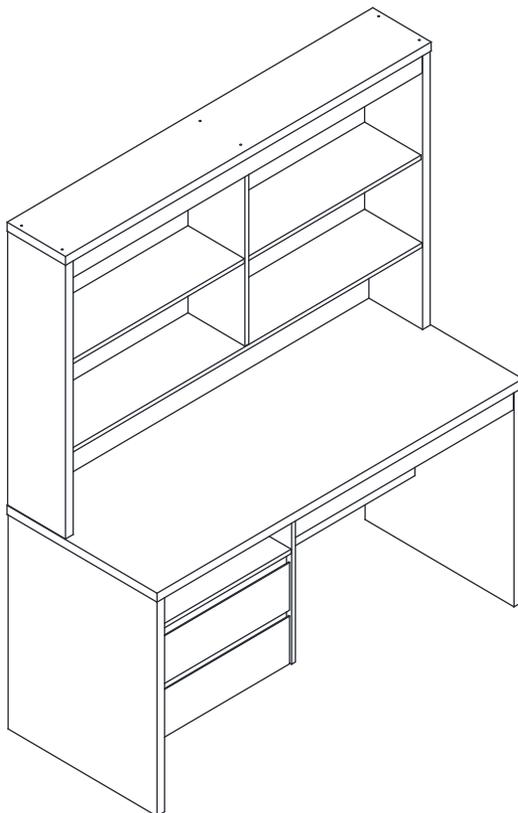

ASSEMBLY COMPLETE

SAFETY BRACKETS INSTRUCTIONS

1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

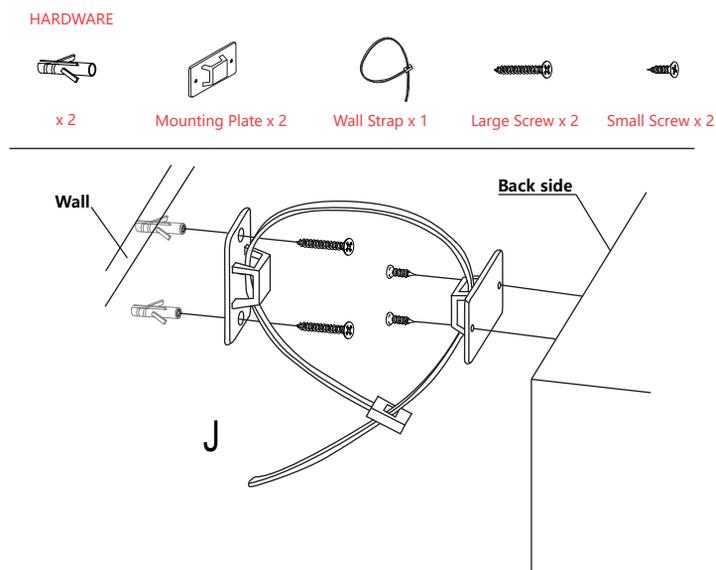

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void