


# Amart

## ASSEMBLY INSTRUCTION

### CARMELITA 4 PIECE OUTDOOR LOUNGE SETTING

ITEM CODE - 81301

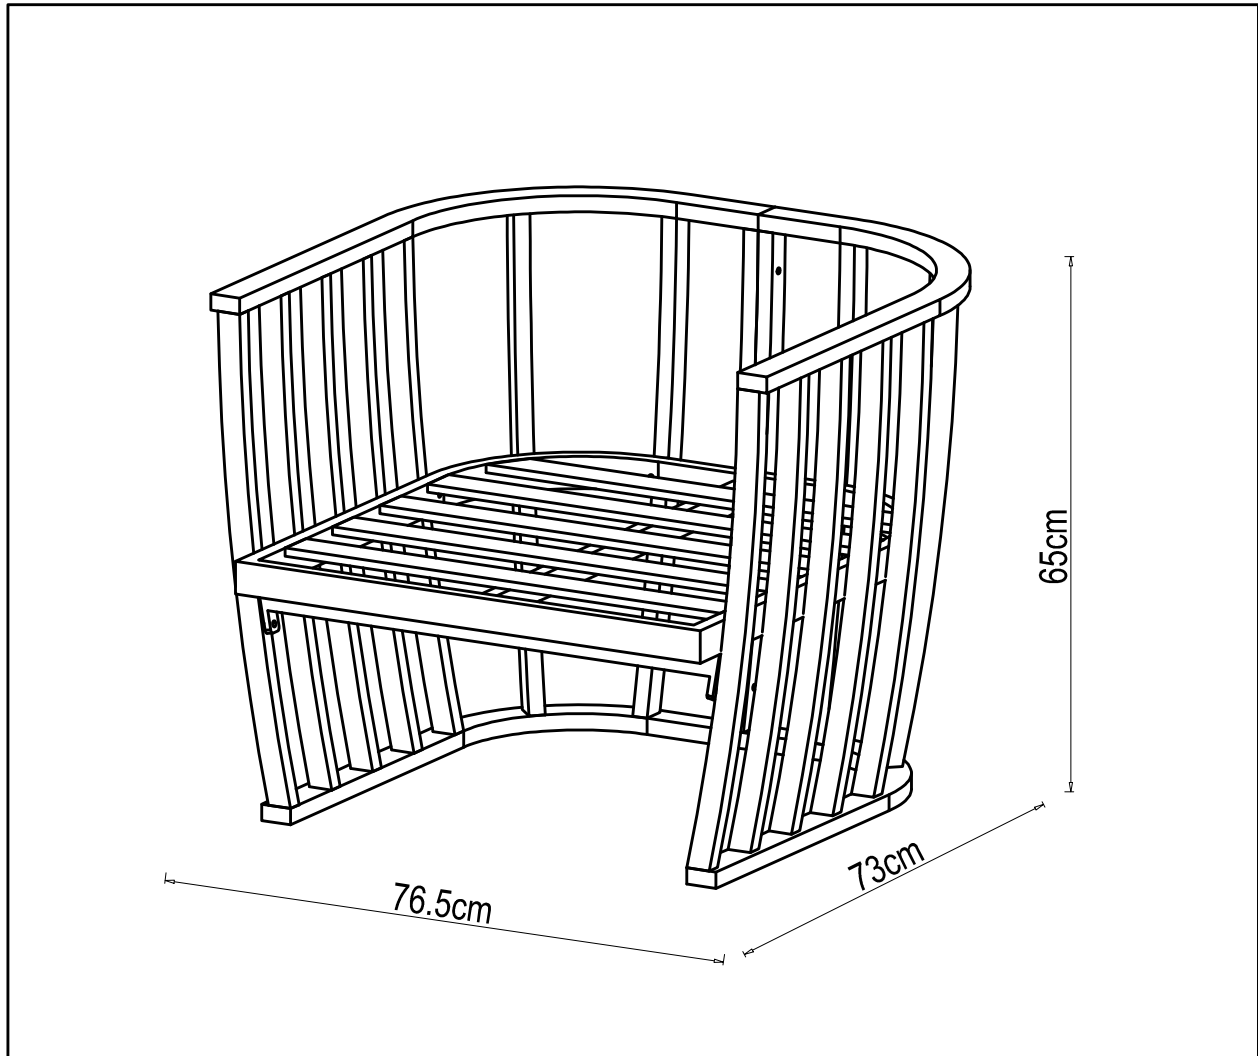


Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia .  
For any assistance with assembly or for missing parts please phone  
Amart Furniture, Customer Service Freecall 1800 351 084


## PRE-ASSEMBLY PREPARATION

### Before you start:









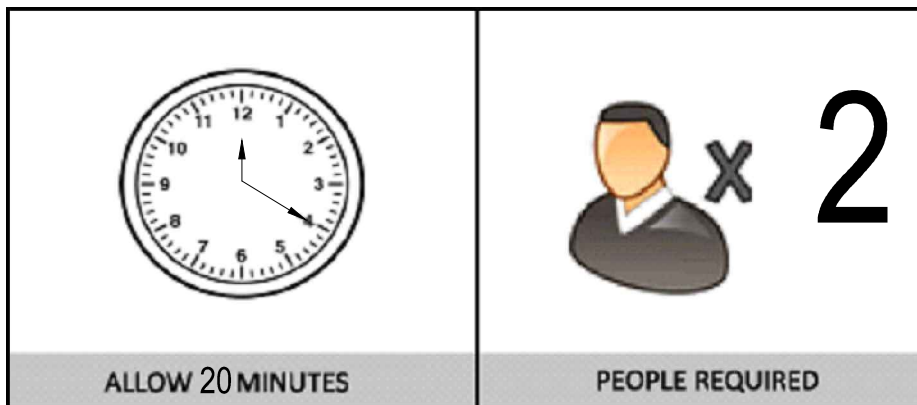




1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.

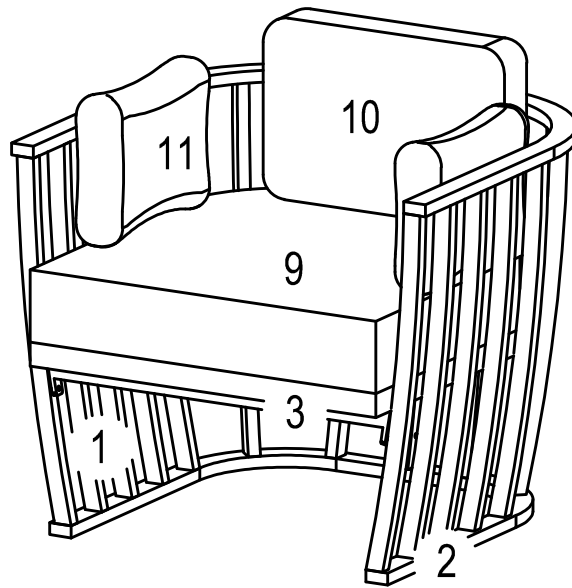

# PARTS LIST

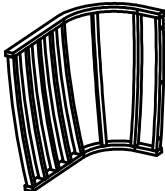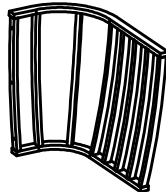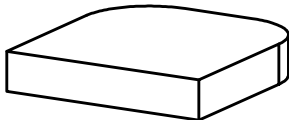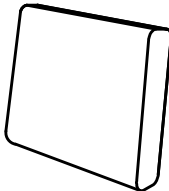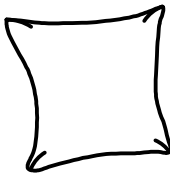






x 2

1 Right Arm			2PCS	2 Left Arm			2PCS
3 Seat			2PCS	9 Seat Cushion			2PCS
10 Back cushion			2PCS	11 Armrest Pillow			4PCS
A. Bolt			M6*20*4PCS	B. Bolt			M6*35*12PCS
C. Bolt			M6*50*6PCS	D. Washer			M6*28PCS
E. Nut			M6*6PCS	F. Allen Key			M6*1PC
G. Wrench			M6*1PC				


# Step 1:
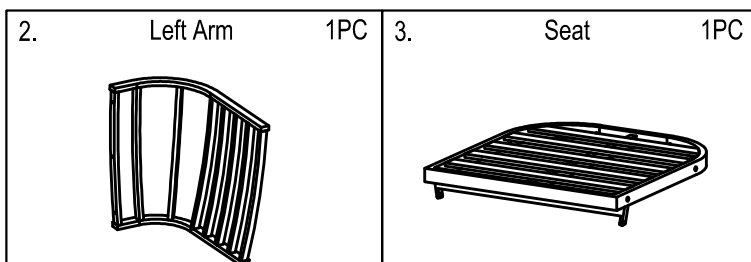
## ITEMS REQUIRED








A.	Bolt	B.	Bolt	D.	Washer	F.	Allen Key
							
M6*20*1PC		M6*35*3PCS		M6*4PCS		M6*1PC	

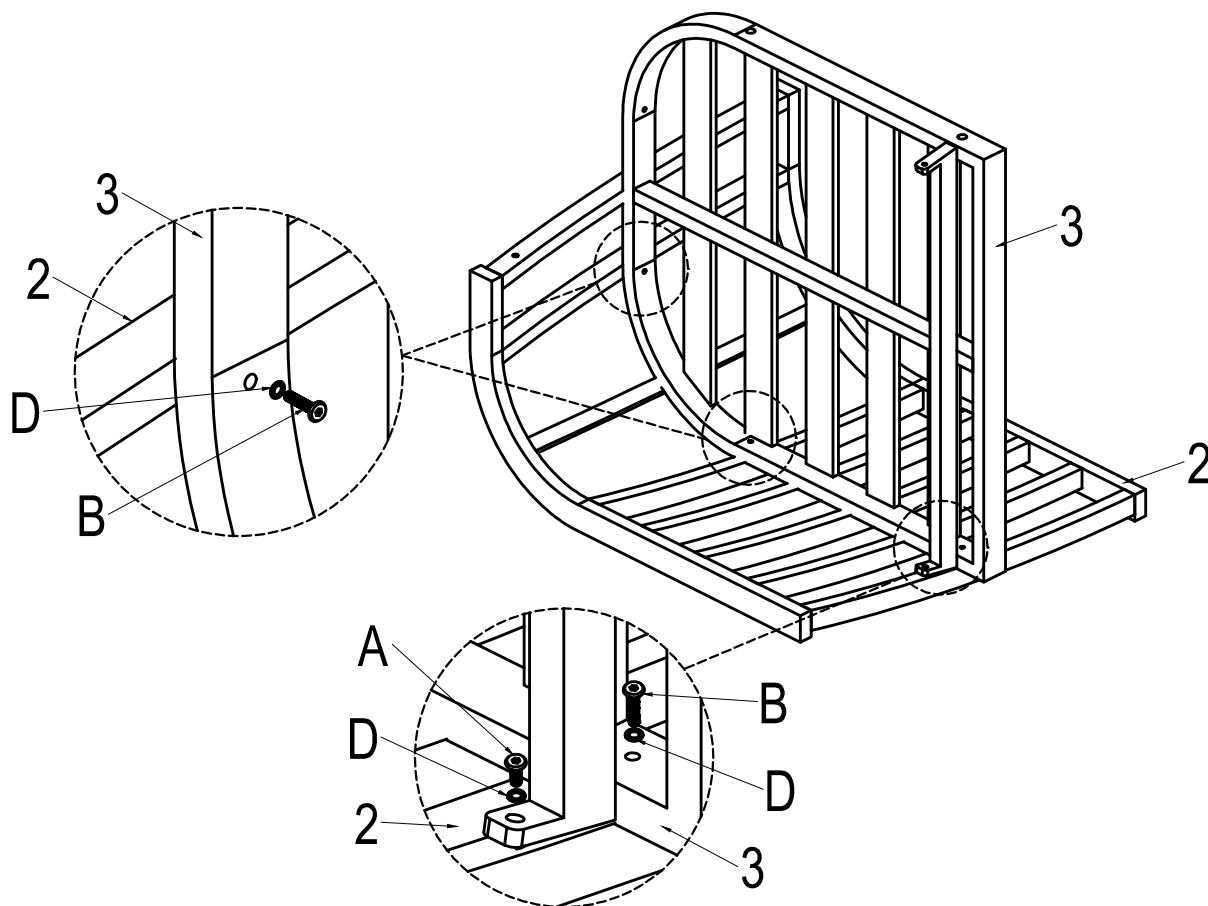- Attach left arm (2) to seat (3) using bolt (A) and bolt (B) with washer (D) .
- Insert all bolts before fully tightening .
- Tighten with allen key (F) .




# Step 2:
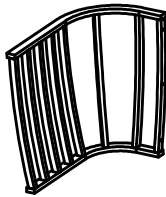
## ITEMS REQUIRED






<div>1. Right Arm 1PC</div> 			
A. Bolt	B. Bolt	D. Washer	F. Allen Key
			
M6*20*1PC	M6*35*3PCS	M6*4PCS	M6*1PC

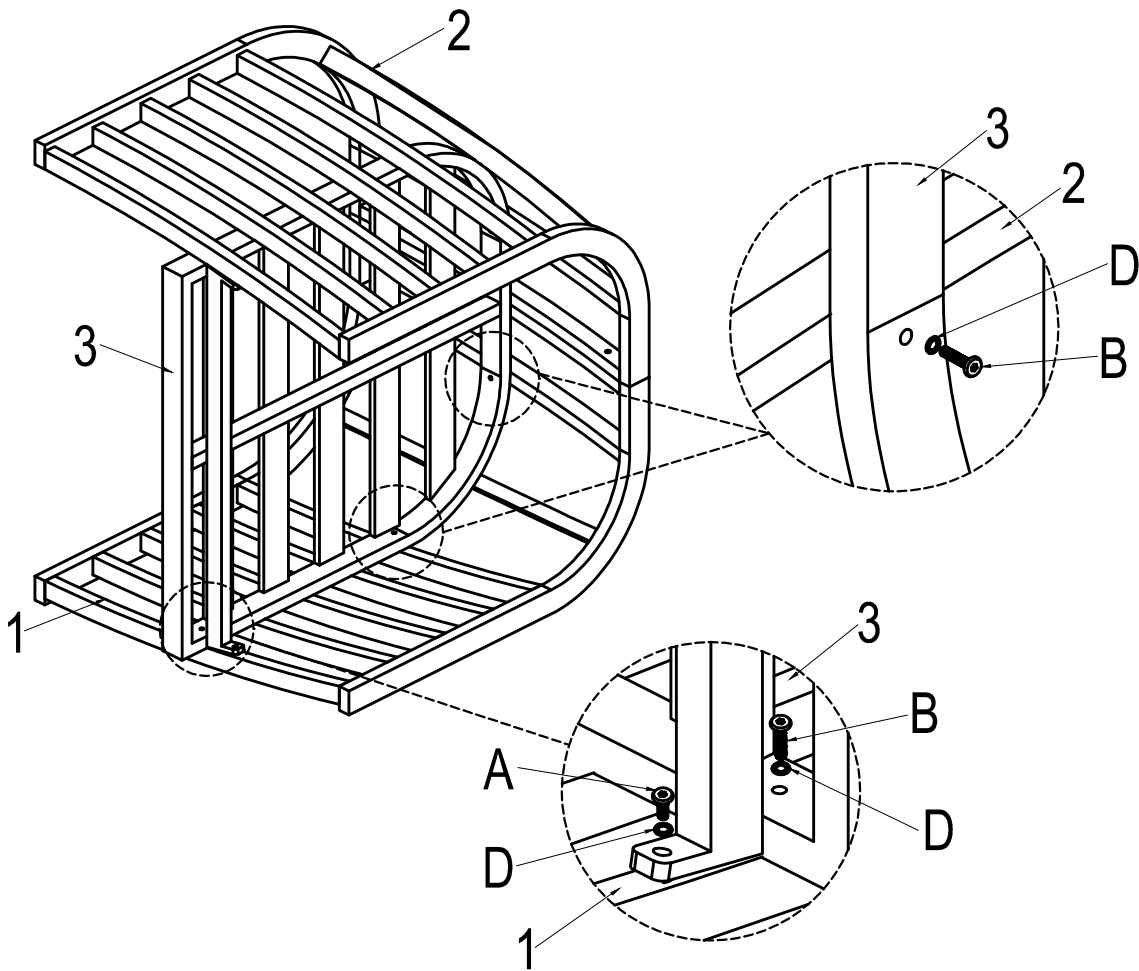- Attach right arm (1) to seat (3) using bolt (A) and bolt (B) with washer (D) .
- Insert all bolts before fully tightening .
- Tighten with allen key (F) .




# Step 3:


## ITEMS REQUIRED


C. Bolt  M6*50*3PCS	D. Washer  M6*6PCS	E. Nut  M6*3PCS	F. Allen Key  M6*1PC
G. Wrench  M6*1PC			

- Attach right arm (1) to left arm (2) using bolt (C) with washer (D) and nut (E).
- Insert all bolts before fully tightening .
- Align right arm (1) and left arm (2) to make sure the top surface are even before fully tightening them with allen key (F) and wrench (G).

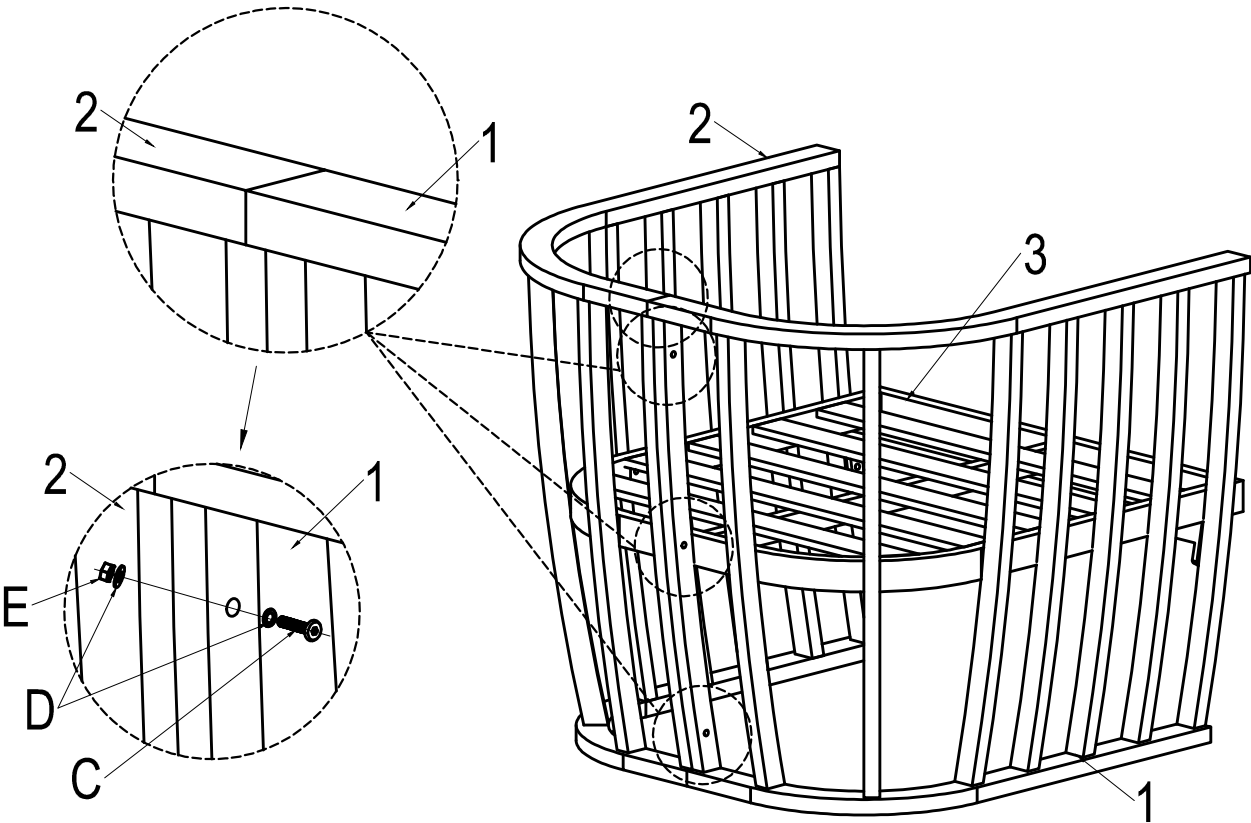

**ASSEMBLY IS COMPLETE**

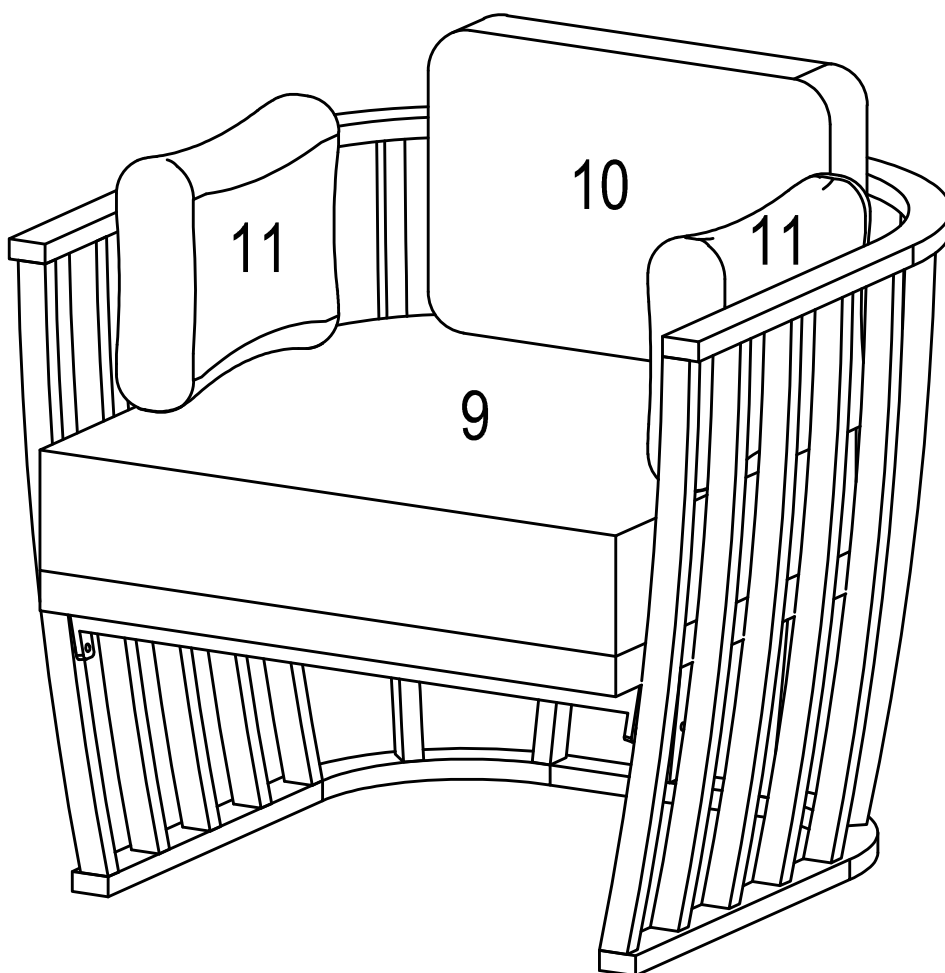

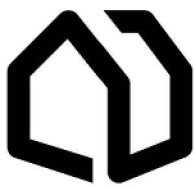


# Amart

## ASSEMBLY INSTRUCTION

### CARMELITA 4 PIECE OUTDOOR LOUNGE SETTING

ITEM CODE - 81301

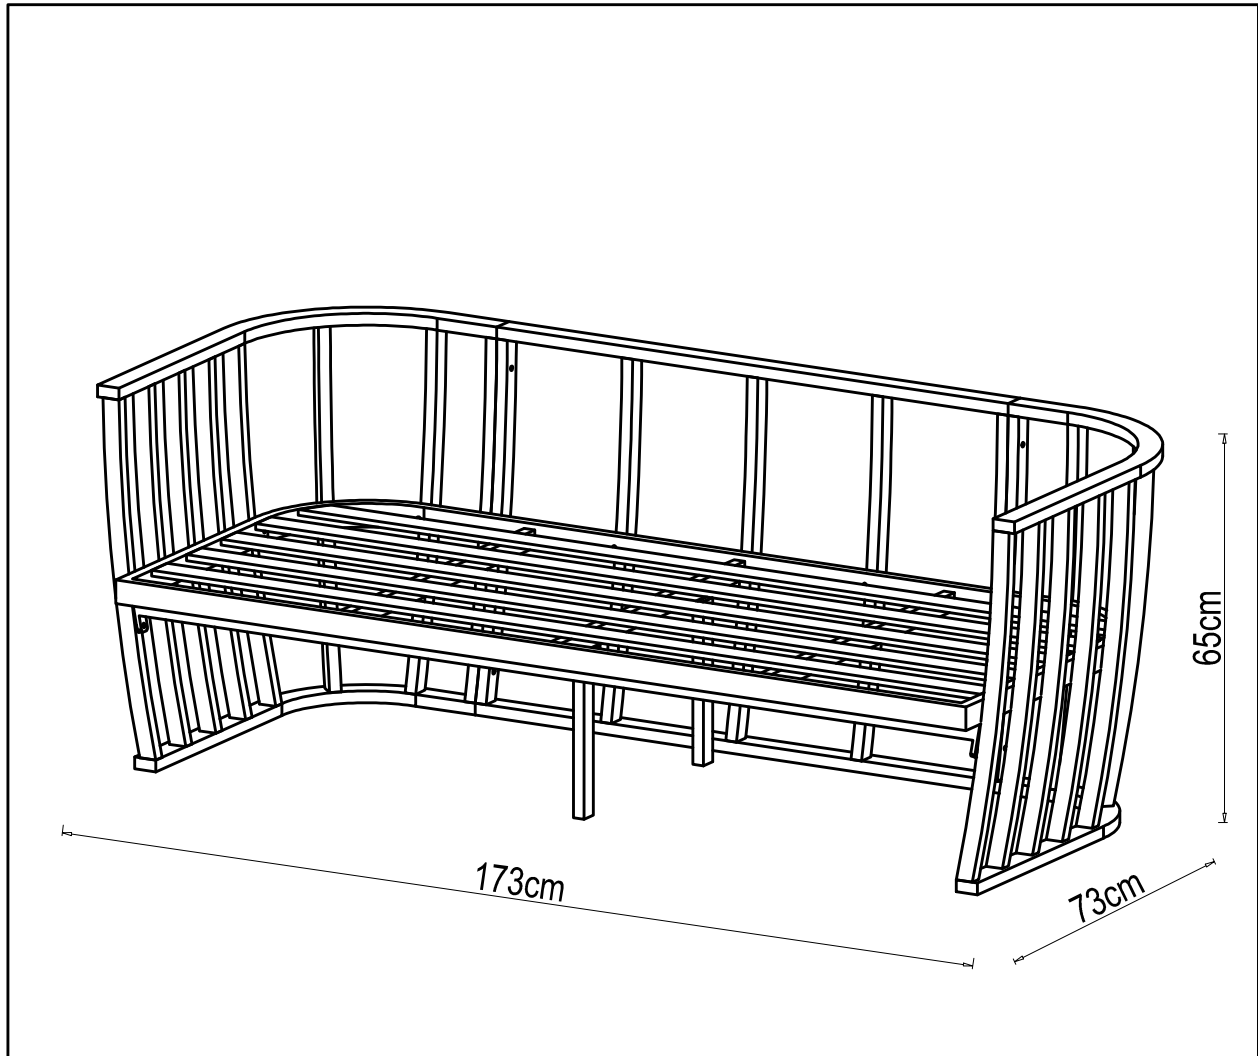


Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia .  
For any assistance with assembly or for missing parts please phone  
Amart Furniture, Customer Service Freecall 1800 351 084




## PRE-ASSEMBLY PREPARATION



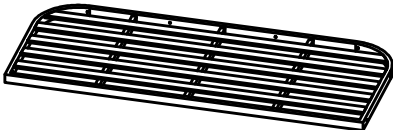
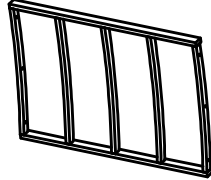

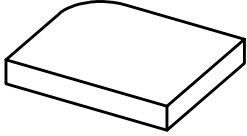
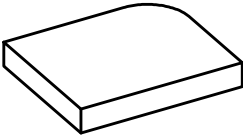
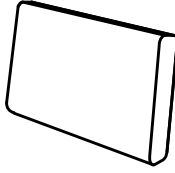
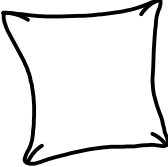
### Before you start:



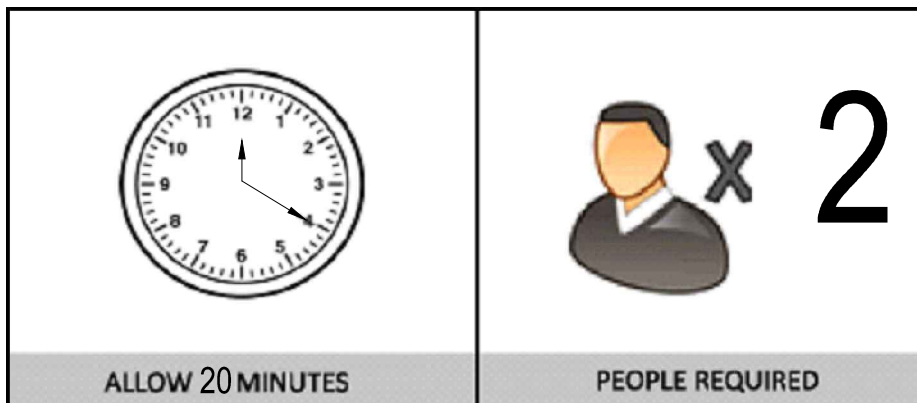




1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.

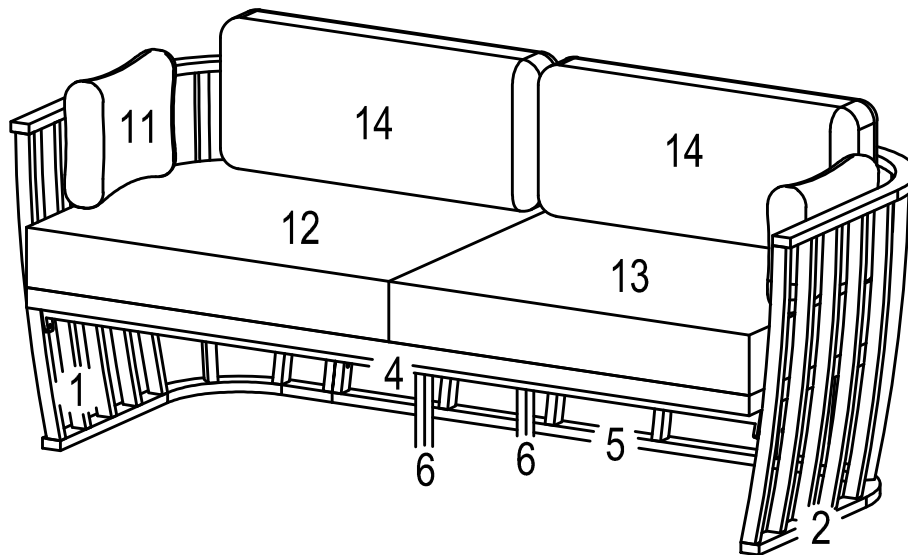
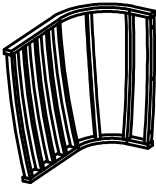
# PARTS LIST








1	Right Arm		1PC	2	Left Arm		1PC
4	Seat		1PC	5	Backrest		1PC
6	Legs		2PCS	12	Seat Cushion		1PC
13	Seat Cushion		1PC	14	Back cushion		2PCS
11	Armrest Pillow		2PCS				


A.	Bolt		M6*20*6PCS	B.	Bolt		M6*35*8PCS	C.	Bolt		M6*50*6PCS	D.	Washer		M6*26PCS
E.	Nut		M6*6PCS	F.	Allen Key		M6*1PC	G.	Wrench		M6*1PC				

# Step 1:

## ITEMS REQUIRED






4.      Seat      1PC 	6.      Legs      2PCS 	
A.      Bolt  M6*20*4PCS	D.      Washer  M6*4PCS	F.      Allen Key  M6*1PC

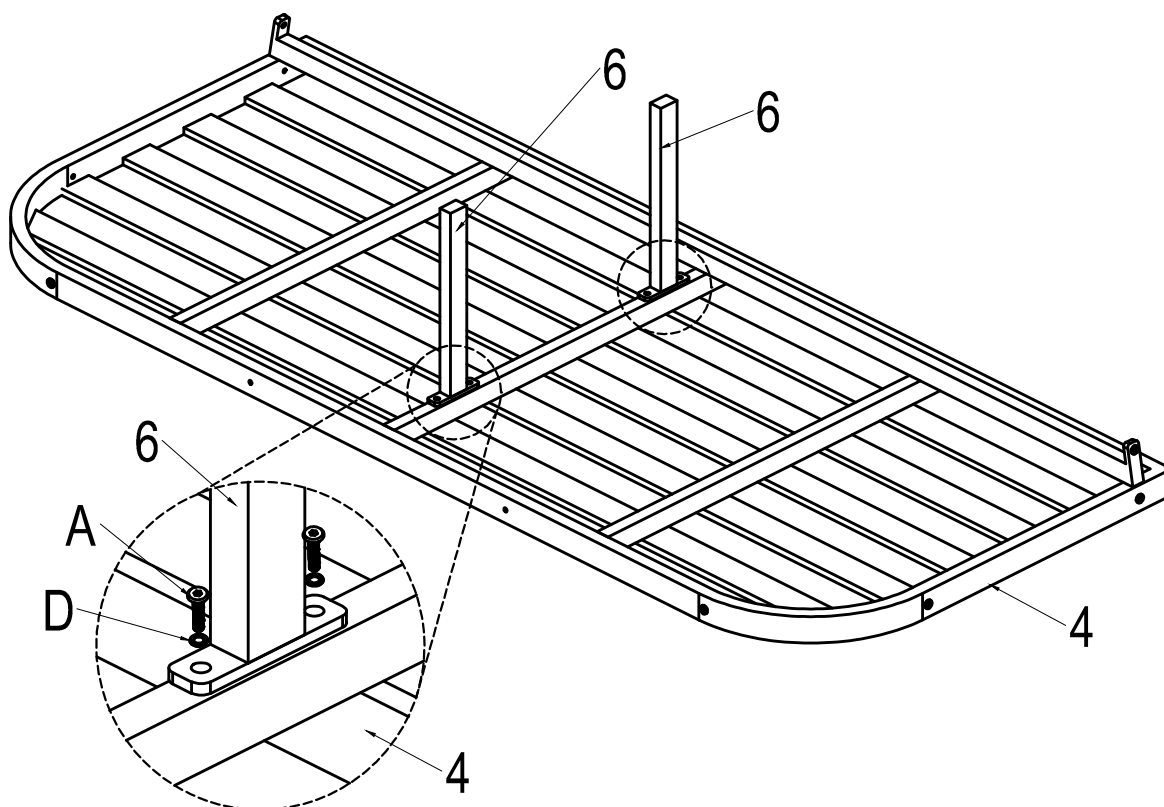- Attach legs (6) to seat (4) using bolt (A) with washer (D) .
- Insert all bolts before fully tightening .
- Tighten with allen key (F) .




# Step 2:
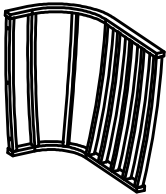
## ITEMS REQUIRED






<div>2. Left Arm 1PC</div> 			
A. Bolt	B. Bolt	D. Washer	F. Allen Key
			
M6*20*1PC	M6*35*3PCS	M6*4PCS	M6*1PC

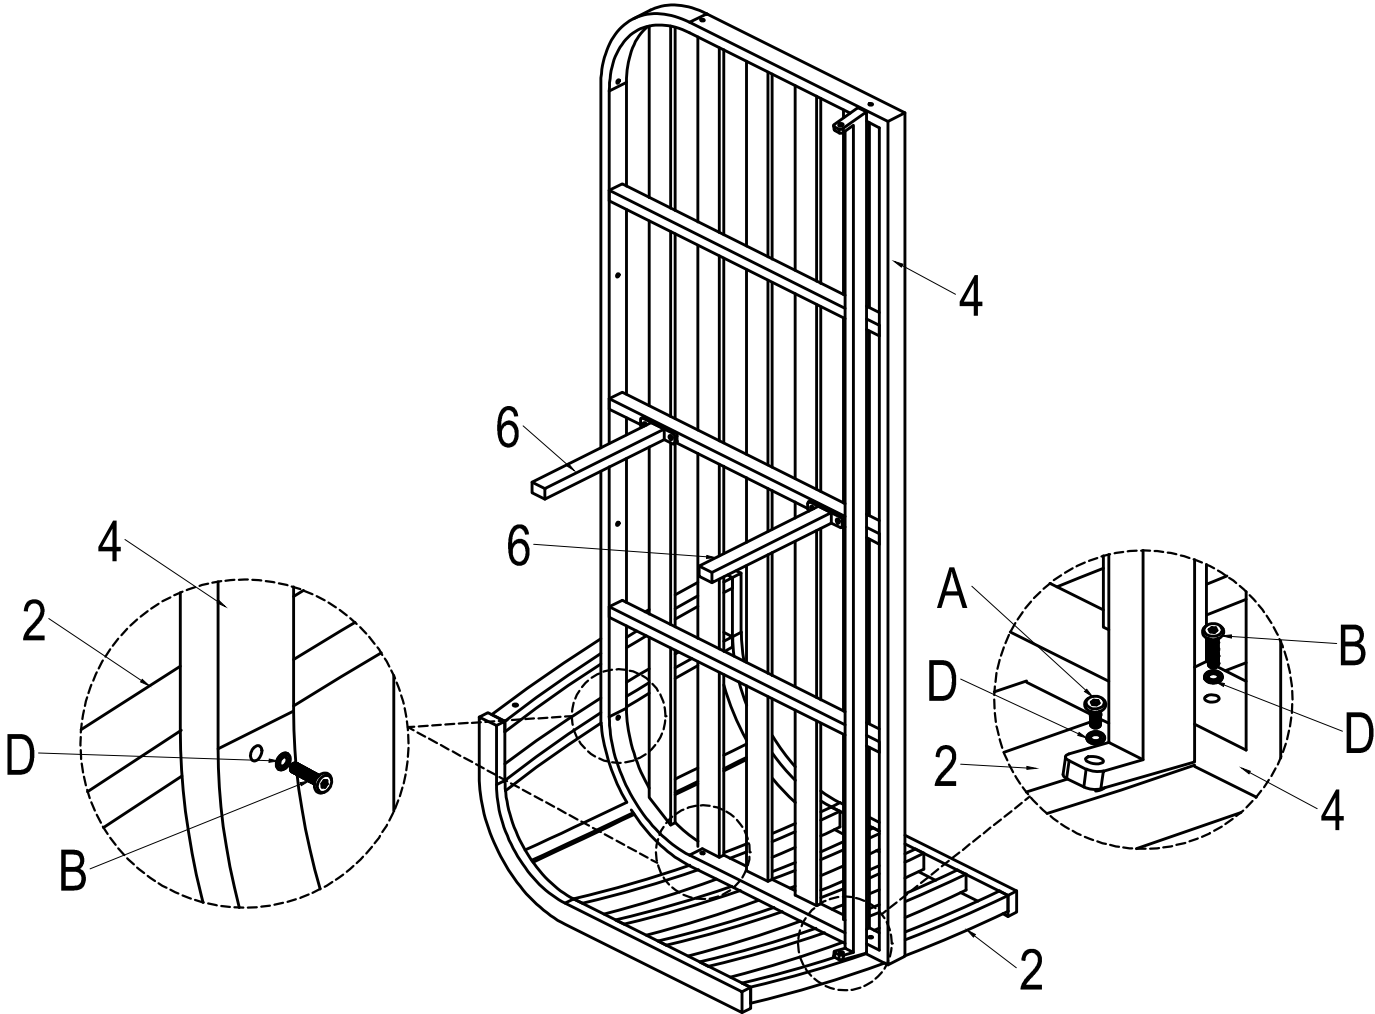- Attach left arm (2) to seat (4) using bolt (A) and bolt (B) with washer (D) .
- Insert all bolts before fully tightening .
- Tighten with allen key (F) .




# Step 3:
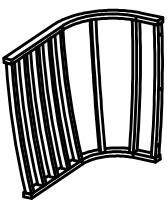
## ITEMS REQUIRED





<div>1. Right Arm 1PC</div> 			
A. Bolt	B. Bolt	D. Washer	F. Allen Key
			
M6*20*1PC	M6*35*3PCS	M6*4PCS	M6*1PC

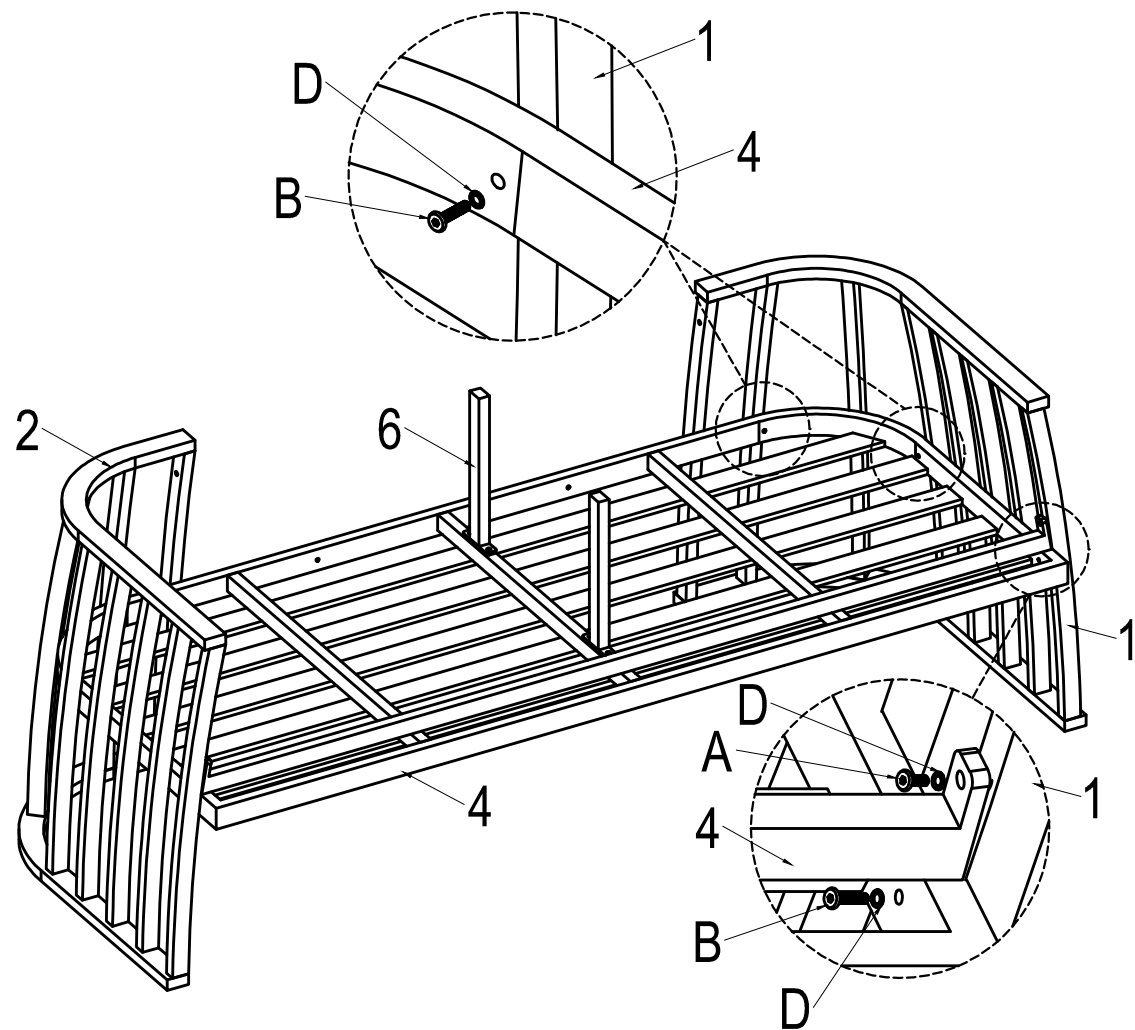- Attach right arm (1) to seat (4) using bolt (A) and bolt (B) with washer (D) .
- Insert all bolts before fully tightening .
- Tighten with allen key (F) .




## Step 4:
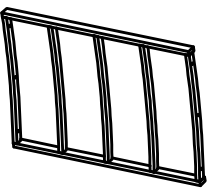
### ITEMS REQUIRED






5. Backrest 1PC		
		
B. Bolt	D. Washer	F. Allen Key
		
M6*35*2PCS	M6*2PCS	M6*1PC

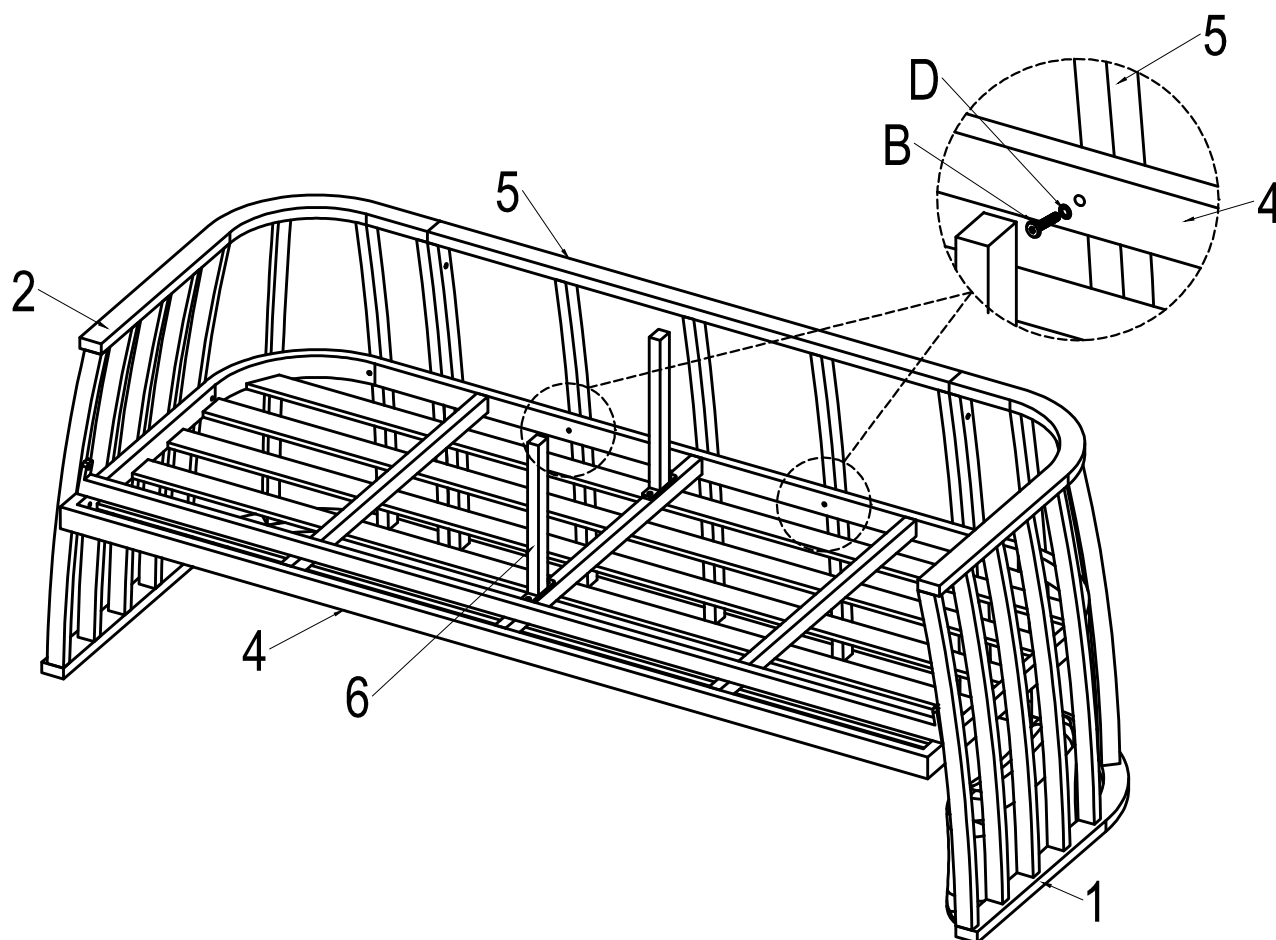- Attach backrest (5) to seat (4) using bolt (B) with washer (D) .
- Insert all bolts before fully tightening .
- Tighten with allen key (F) .




# Step 5:


## ITEMS REQUIRED

C. Bolt  M6*50*6PCS	D. Washer  M6*12PCS	E. Nut  M6*6PCS	F. Allen Key  M6*1PC
G. Wrench  M6*1PC			


- Attach right arm (1) and left arm (2) to backrest (5) using bolt (C) with washer (D) and nut (E).
- Insert all bolts before fully tightening .
- Align right arm (1) and left arm (2) to backrest (5) to make sure the top surface are even before fully tightening them with allen key (F) and wrench (G).

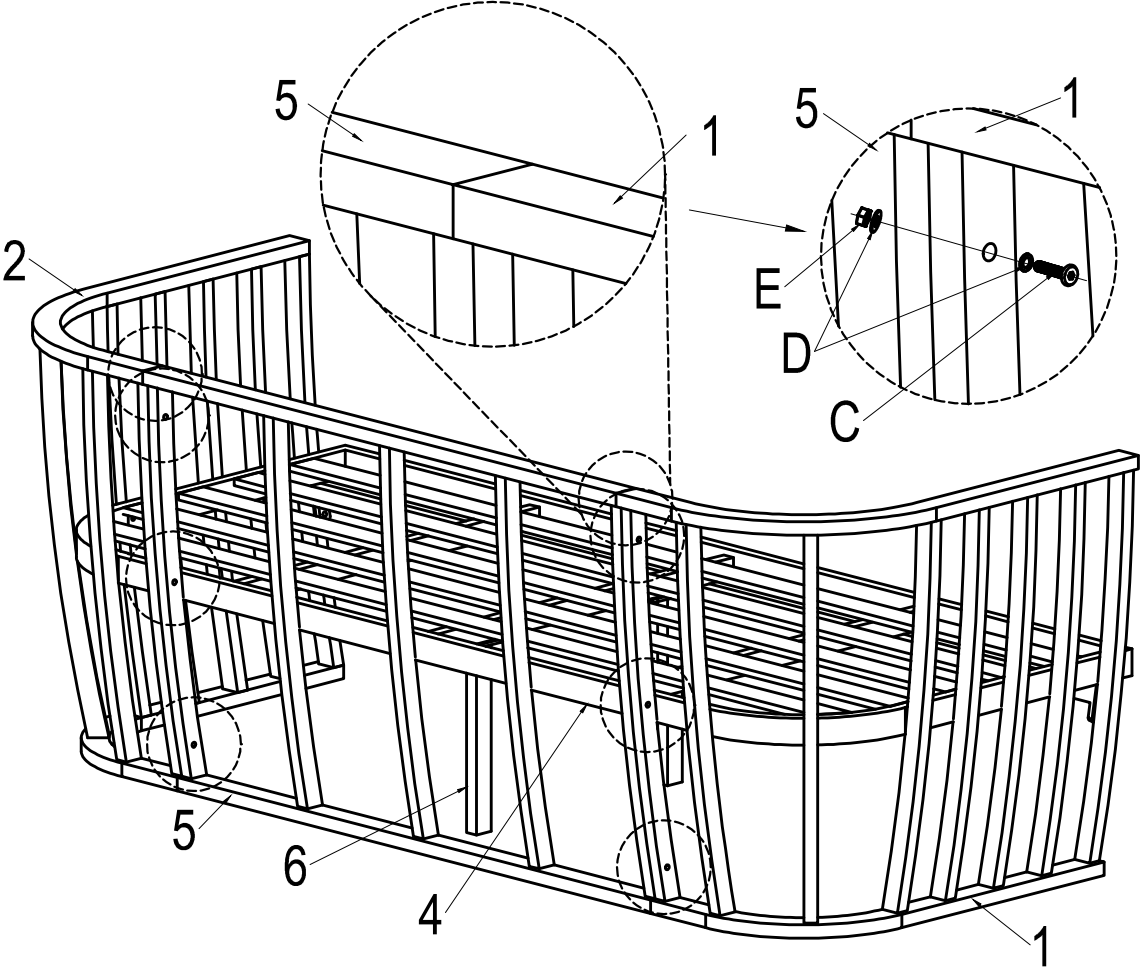

**ASSEMBLY IS COMPLETE**

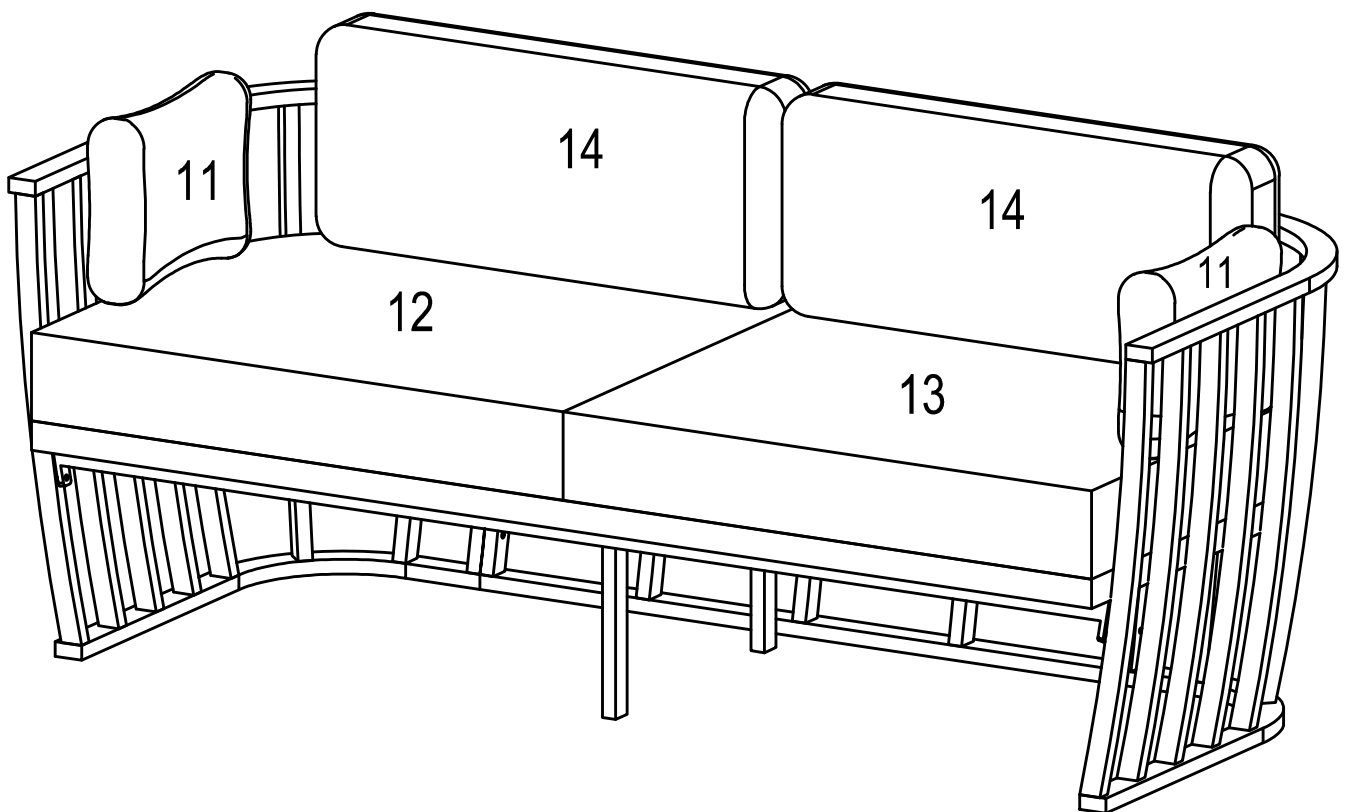



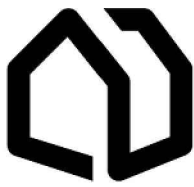


# Amart

## ASSEMBLY INSTRUCTION

### CARMELITA 4 PIECE OUTDOOR LOUNGE SETTING

ITEM CODE - 81301

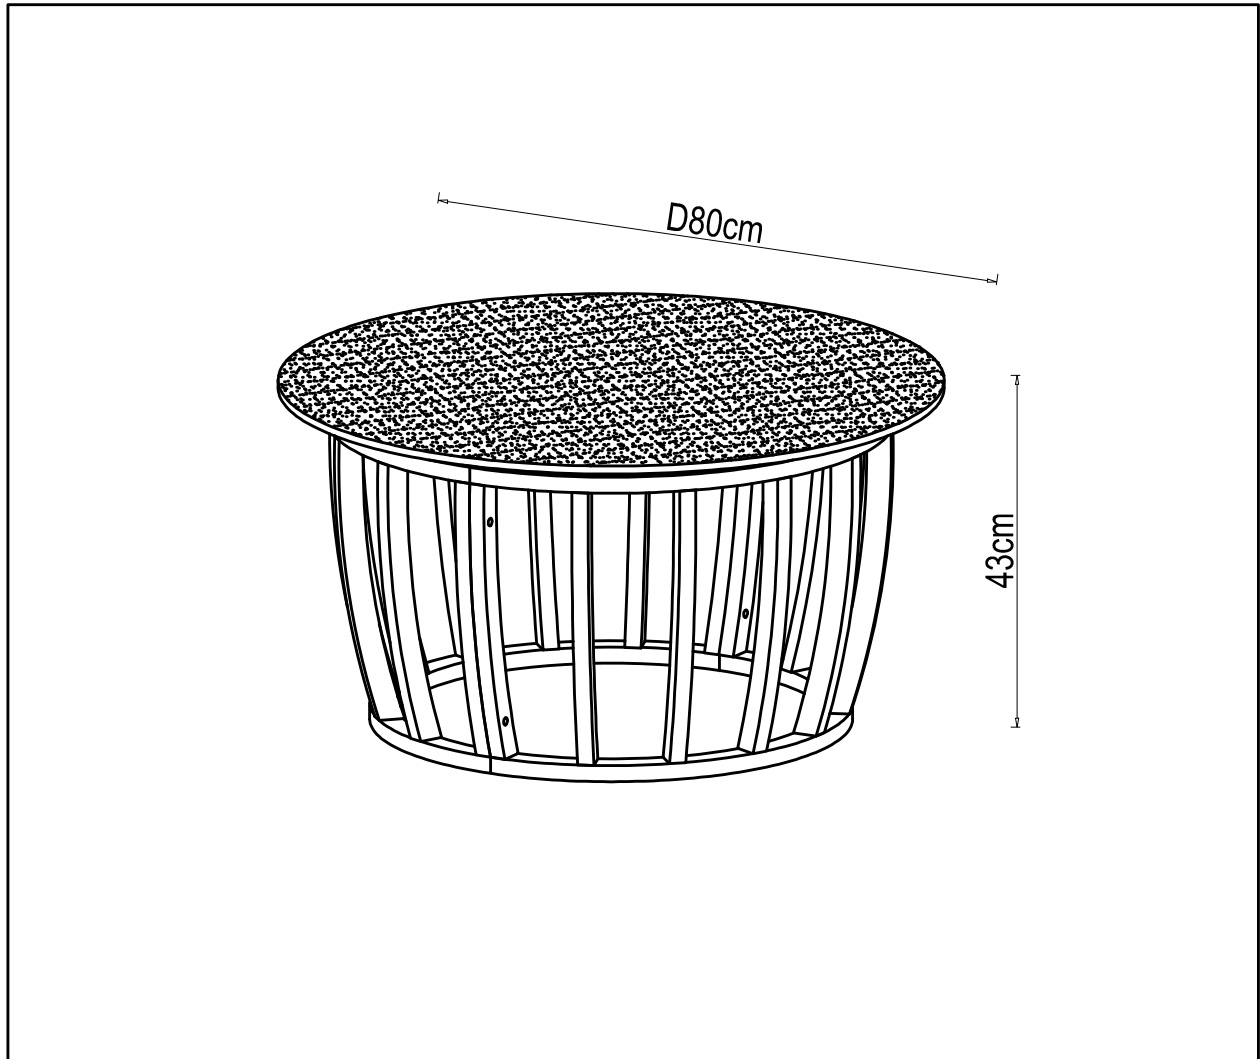


Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia .  
For any assistance with assembly or for missing parts please phone  
Amart Furniture, Customer Service Freecall 1800 351 084


## PRE-ASSEMBLY PREPARATION

### Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.

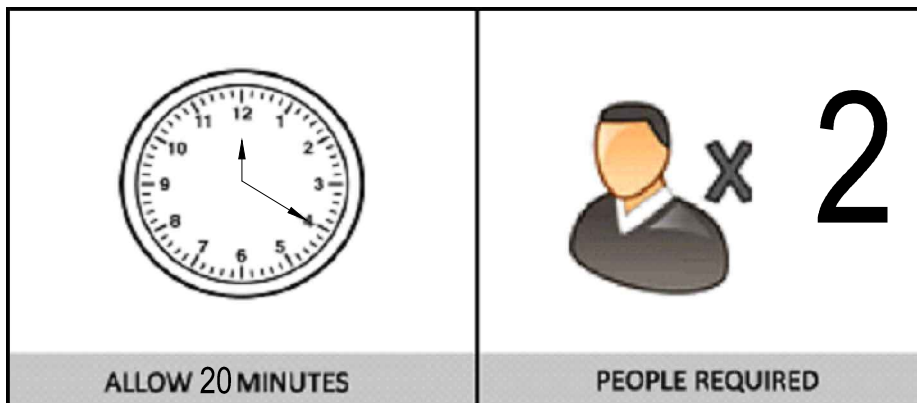

PARTS LIST


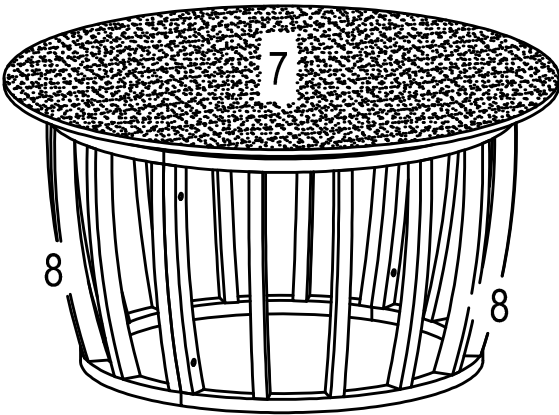





7	Table Top		1PC	8	Legs		2PCS
---	-----------	--	-----	---	------	--	------


B.	Bolt		C.	Bolt		D.	Washer	
	M6*35*4PCS			M6*50*4PCS			M6*12PCS	
E.	Nut		F.	Allen Key		G.	Wrench	
	M6*4PCS			M6*1PC			M6*1PC	

# Step 1:
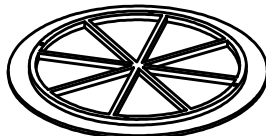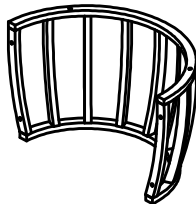
## ITEMS REQUIRED






7.	Table Top	1PC	8.	Legs	2PCS
					
B.	Bolt		D.	Washer	
					
M6*35*4PCS			M6*4PCS		
F.	Allen Key				
			M6*1PC		

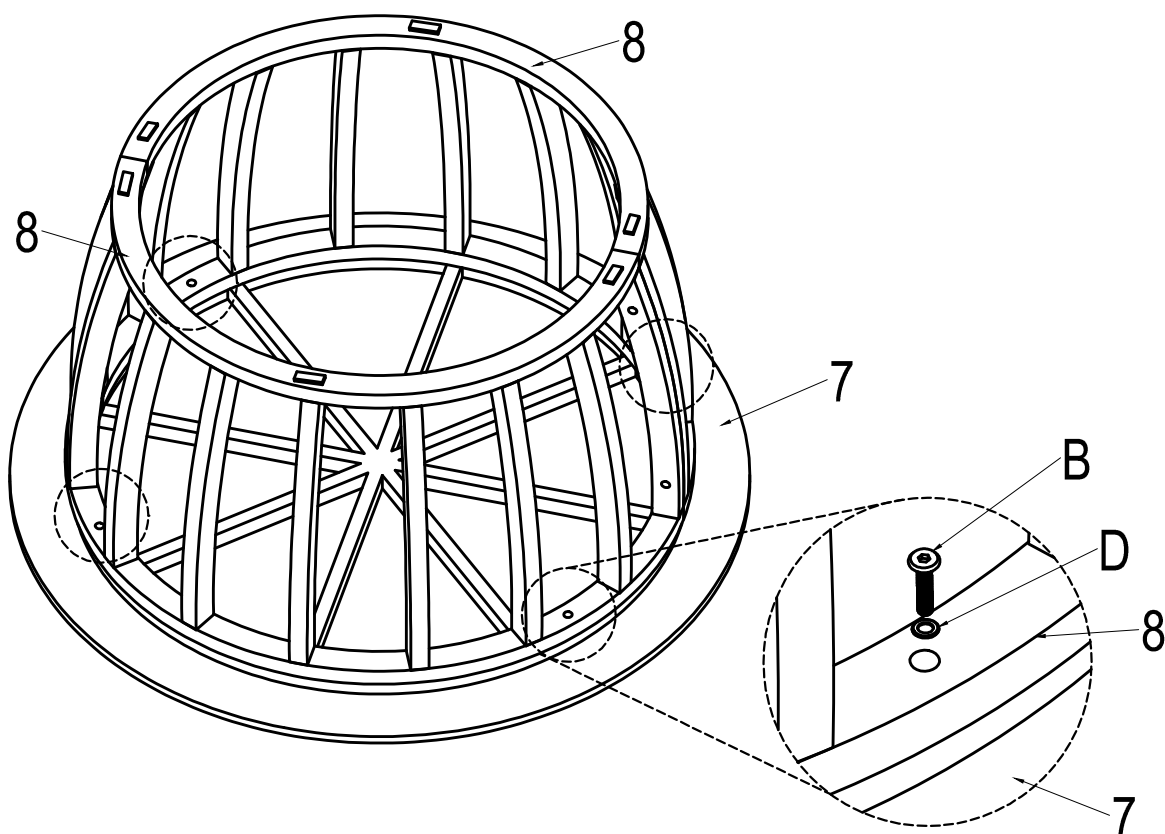- Attach legs (8) to table top (7) using bolt (B) with washer (D) .
- Insert all bolts before fully tightening .
- Tighten with allen key (F) .




# Step 2:


## ITEMS REQUIRED

C. Bolt  M6*50*4PCS	D. Washer  M6*8PCS	E. Nut  M6*4PCS	F. Allen Key  M6*1PC
G. Wrench  M6*1PC			

- Attach legs (8) to legs (8) using bolt (C) with washer (D) and nut (E).
- Insert all bolts before fully tightening .
- Tighten with allen key (F) and wrench (G) .

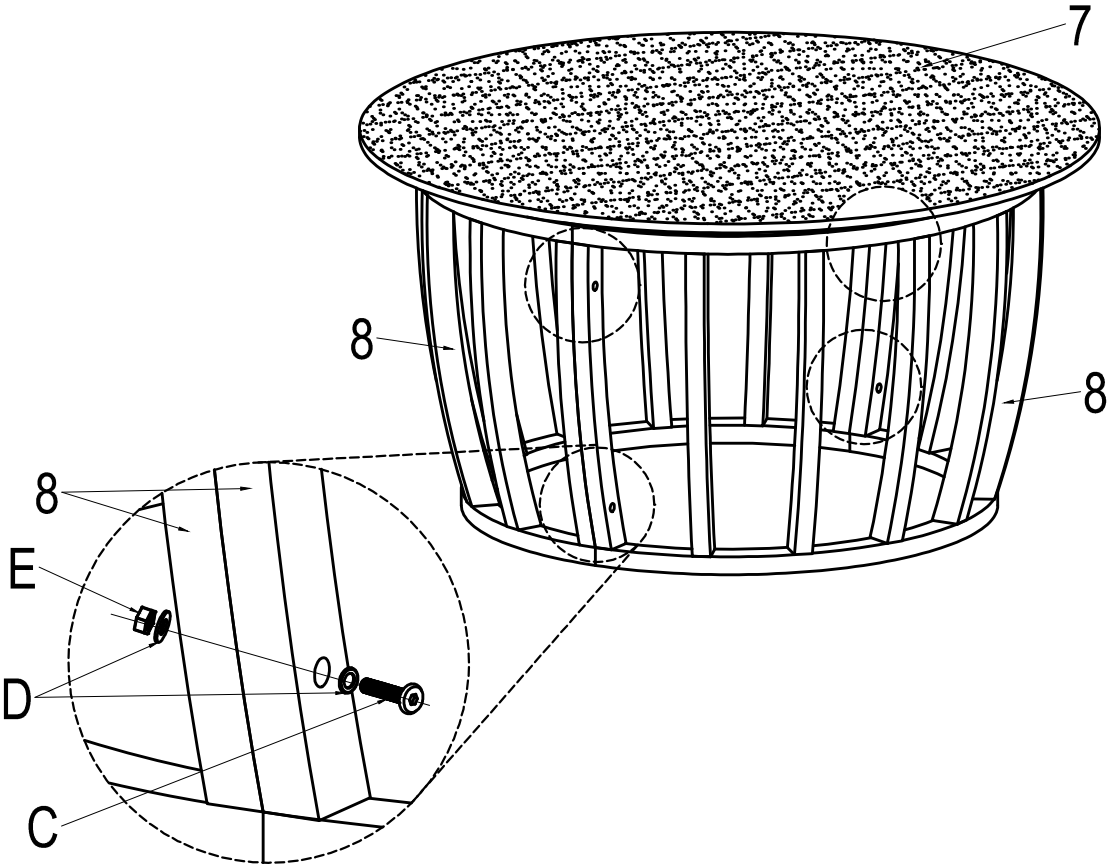

**ASSEMBLY IS COMPLETE**

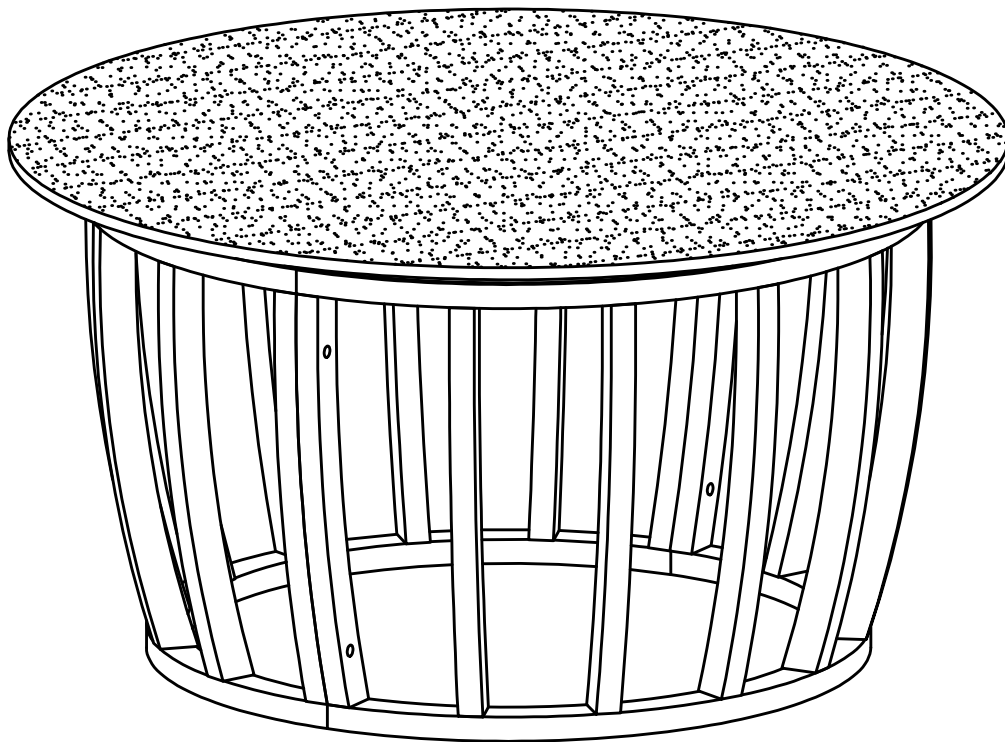

# Care and maintenance



## Aluminium

- ☒ Item is designed for use outdoors. However we do not recommend leaving this product outside when not in use. To preserve the life of this item, avoid prolonged exposure to the elements & store inside/under cover or use an outdoor cover.
- ☒ DO NOT allow the furniture to be left in the rain or left wet for extended periods of time.
- ☒ Wipe furniture Dry immediately after it becoming wet.
- ☒ DO NOT clean your furniture down with any harsh solvents, abrasives or chemicals.
- ☒ To remove dirt and grime, simply rinse with fresh water or periodically clean using a sponge and mild detergent solution as required

## Cushions

- ☒ Direct exposure to the Sun's harmful UV rays is likely to cause rapid colour fading to fabrics. For best results we recommend avoiding exposure to direct sunlight
- ☒ To ensure product longevity it is recommended outdoor products are not left permanently exposed to the elements
- ☒ Spot clean using mild detergent and damp cloth. Dry flat in shade
- ☒ Do not unzip
- ☒ Do not put in washing machine
- ☒ Do not tumble dry
- ☒ Do not bleach
- ☒ Do not dry clean
- ☒ Cool iron only