


# ASSEMBLY INSTRUCTION

## NIVA 6 DRAWERS DRESSER

Item Code 83326

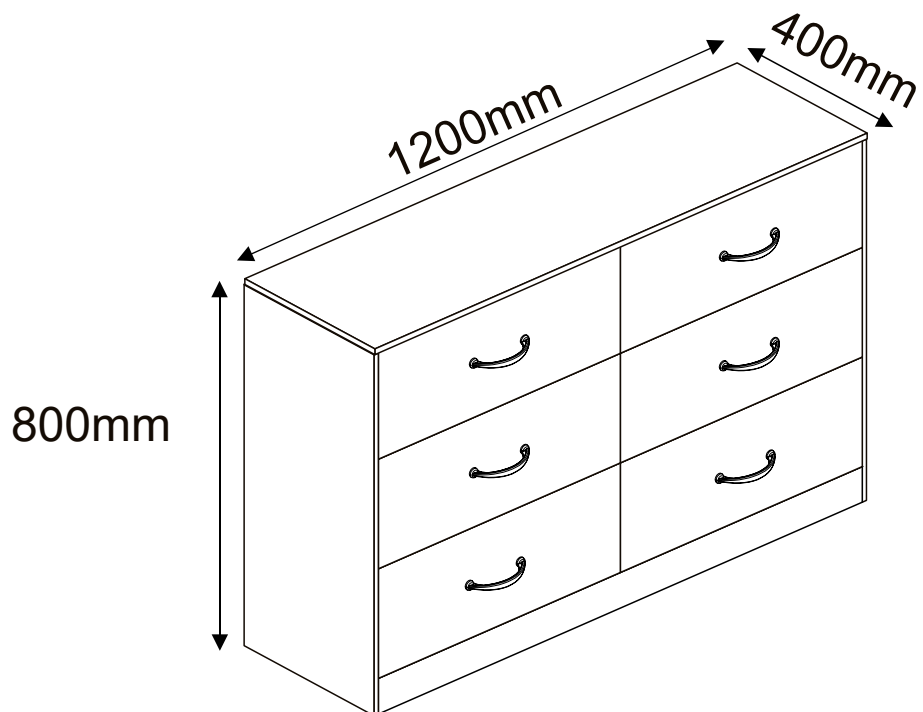




Imported by JWA Furniture Pty Ltd, Qld, Brisbane Australia.  
For any assistance with assembly or for missing parts please refer to your receipt


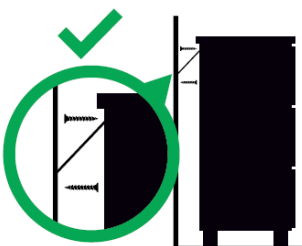
## PRE-ASSEMBLY PREPARATION

### Before you start:
















1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly
5. Keep all hardware parts and packaging out of reach of small children
6. Do not over tighten the screws and bolts as this may damage the threads
7. Assembly is to be carried out by a competent adult(s) ONLY
8. During assembly, children should be kept away from the product due to possible risk to injury
9. Do not use this item if any components are missing or damaged
10. Please keep the instructions for future reference.

		
Allow 30 min	For 1 person	Additional tools required

**! WARNING**


		<p><b>Children have died from furniture tipover.</b></p> <ul style="list-style-type: none"> <li>• ALWAYS secure it with an anchor device.</li> <li>• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.</li> <li>• NEVER open more than one drawer at a time.</li> <li>• Place heavy items down low</li> </ul> <p><b>NEVER put a TV on this furniture</b> </p> <p style="color: red; font-size: small;">This is a permanent label. Do not remove!</p>
---	---	---

## PARTS LIST

<b>A</b> Cam Bolt x 55pcs 	<b>B</b> Cam Lock x 55pcs 	<b>C</b> Wooden Dowel M6x30mmx28pcs 	<b>D</b> Screw M4x30mmx30pcs 
<b>E</b> Handle x 6pcs 	<b>F</b> Screw M4x16mmx12pcs 	<b>G</b> Screw M3.5x12mmx72pcs 	<b>H</b> Rail x 12pcs 
<b>I</b> Rail x12pcs 	<b>J</b> Foot Pads x 6pcs 	<b>K</b> Plastic Wedge Set x 12pcs 	<b>M</b> Screw M4x14mmx16pcs 
<b>N</b> Screw M4X35mmx3pcs 	<b>O</b> Metal Sheet x4pcs 	<b>P</b> Safety Bracket Kit x 2pcs 	


## PARTS LIST

1	Side Panel(Left) x 1 pc	2	Side Panel(Right) x 1 pc
3	Side Panel(Middle) x 1 pc	4	Top Panel x 1 pc
5	Connect Panel x 1 pc	6	Connect Panel x 1 pc
7	Back Rail x 1 pc	8	Connect Panel x 1 pc
9	Connect Panel x 4 pcs	10	Drawer Side Panel(Left) x 6 pcs
11	Drawer Side Panel(Right) x 6 pcs	12	Drawer Back Panel x 6 pcs
13	Drawer Bottom Panel x 6 pcs	14	Drawer Support Rail x 6 pcs
15	Drawer Front Panel (Left) x 3 pcs	16	Drawer Front Panel (Right) x 3 pcs
17	Back Panel x 2 pcs		

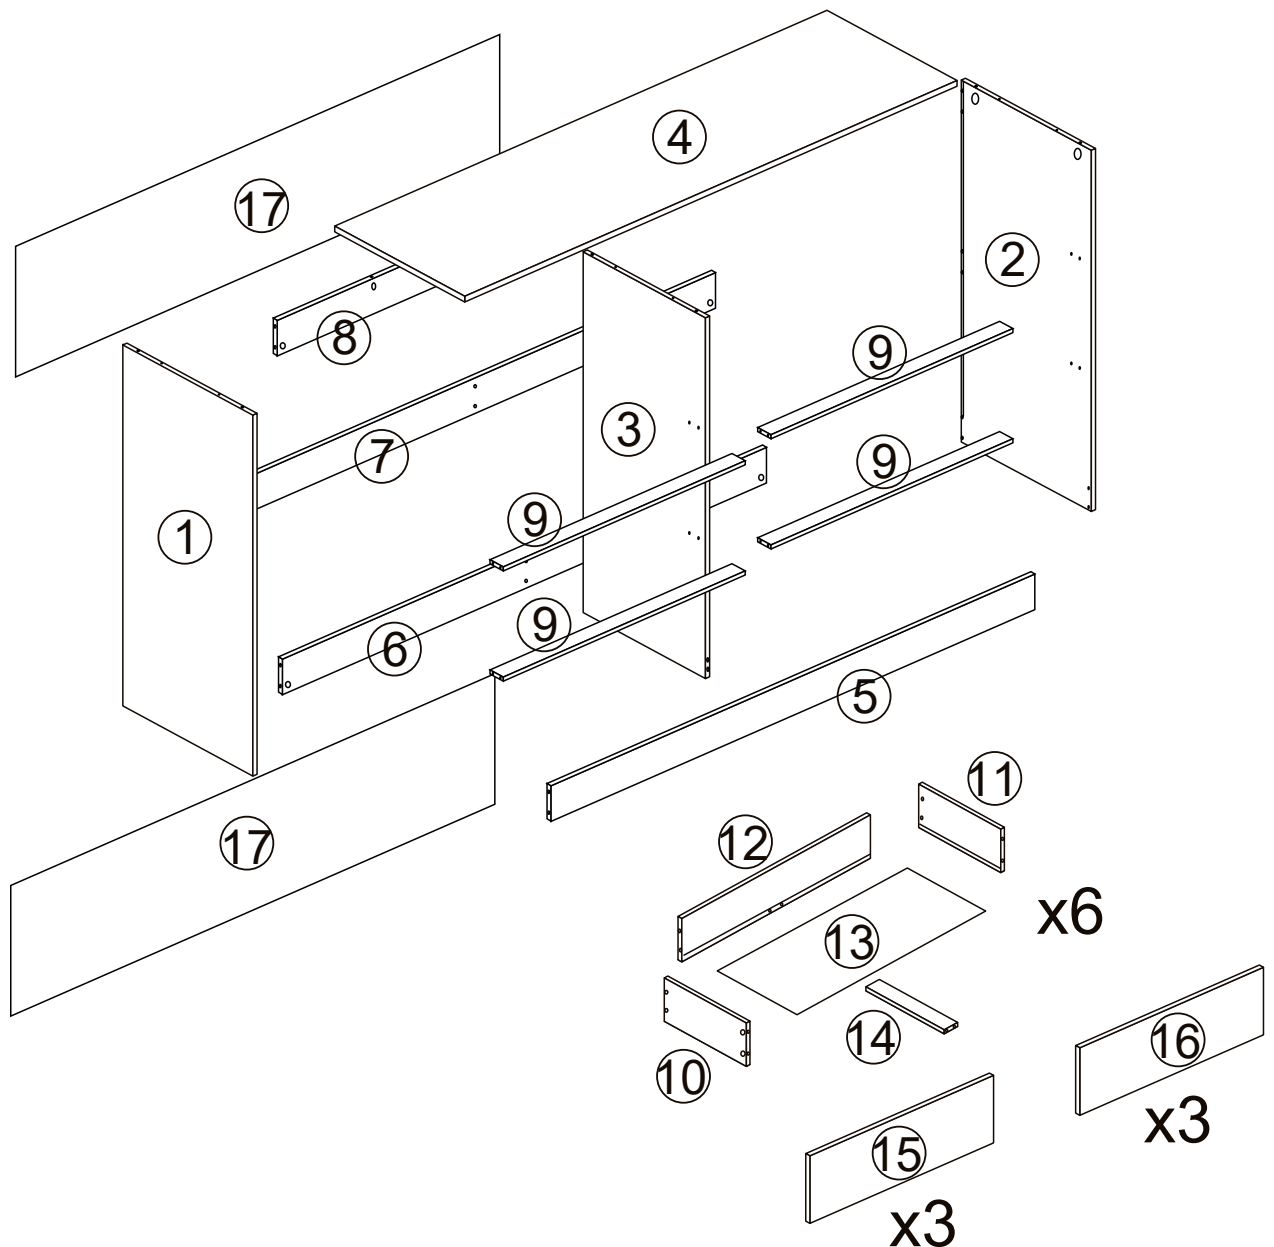


### STEP 1:

- Prepare a protected surface with a blanket or cardboard.
- Attach drawer back panel(12) to drawer side panel(10),(11), support rail(14) using hardware (D); Then attach the bottom panel(13) before assembly the drawer front panel(15), (16); Attach the drawer front panel(15), (16) by hardware (A,B);and then,assemble the handle(E) with screw(F);

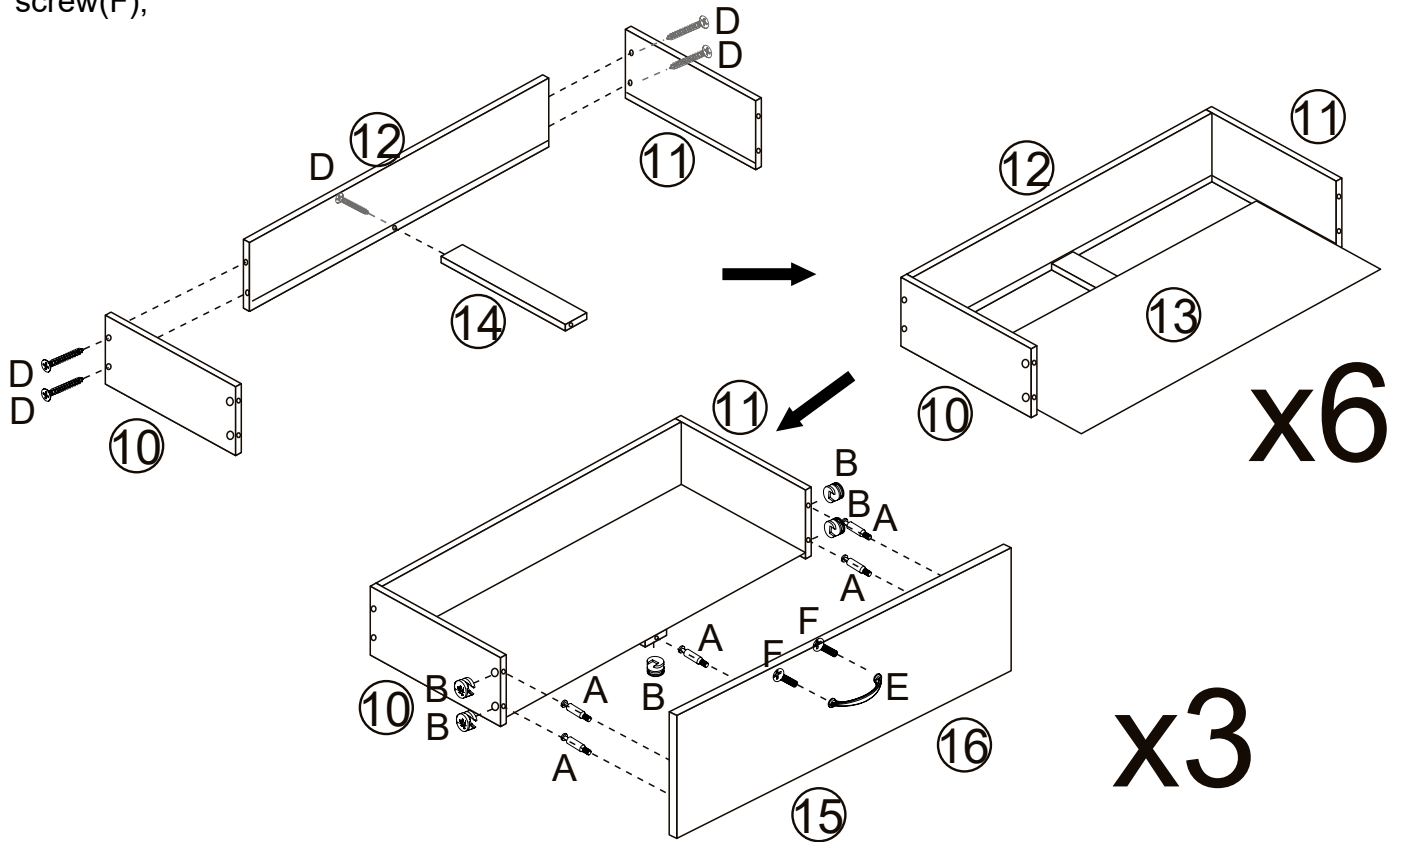


### STEP 2:

- Open the metal runner as shown in the diagram below; Then, attach the runner(H) on left&right side panel(10),(11) by hardware (G);

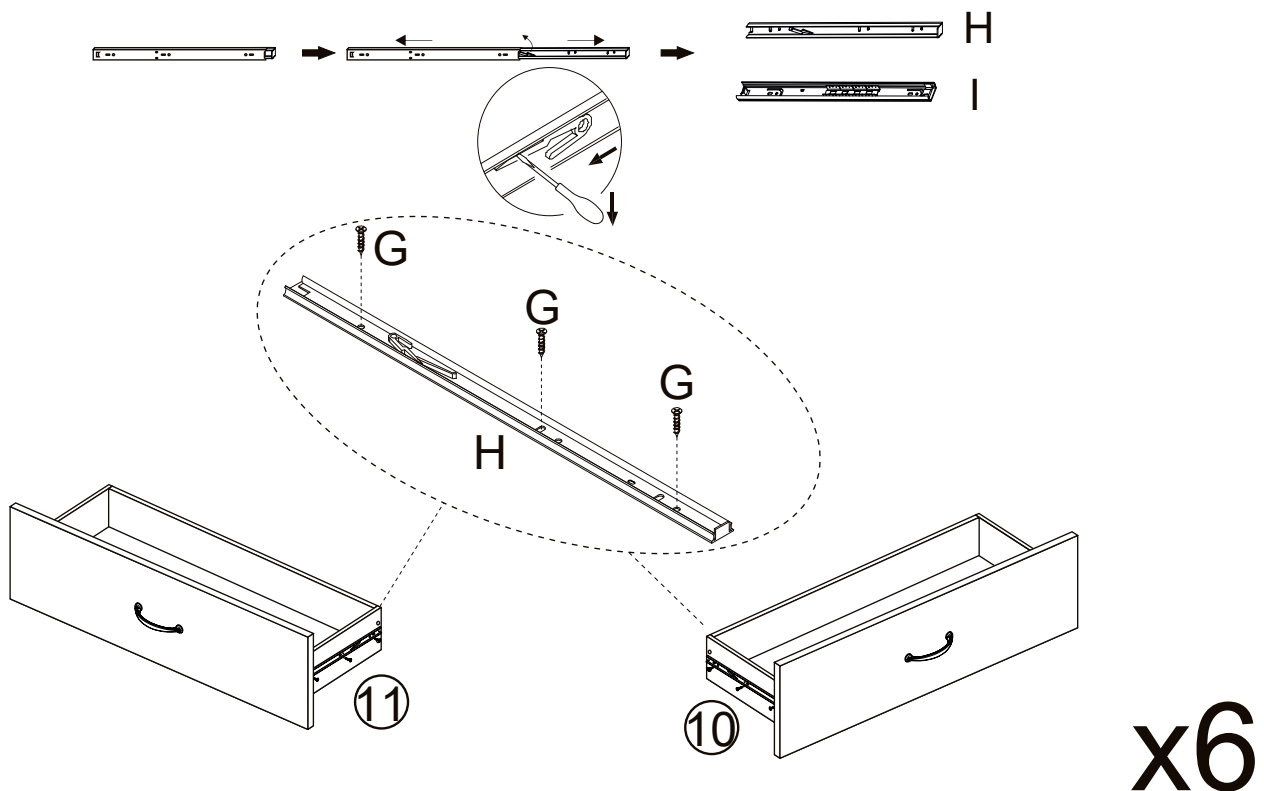


### STEP 3:

- Attach the runner(I) to the middle side panel(3), left&right side panel (1),(2) by hardware (G).

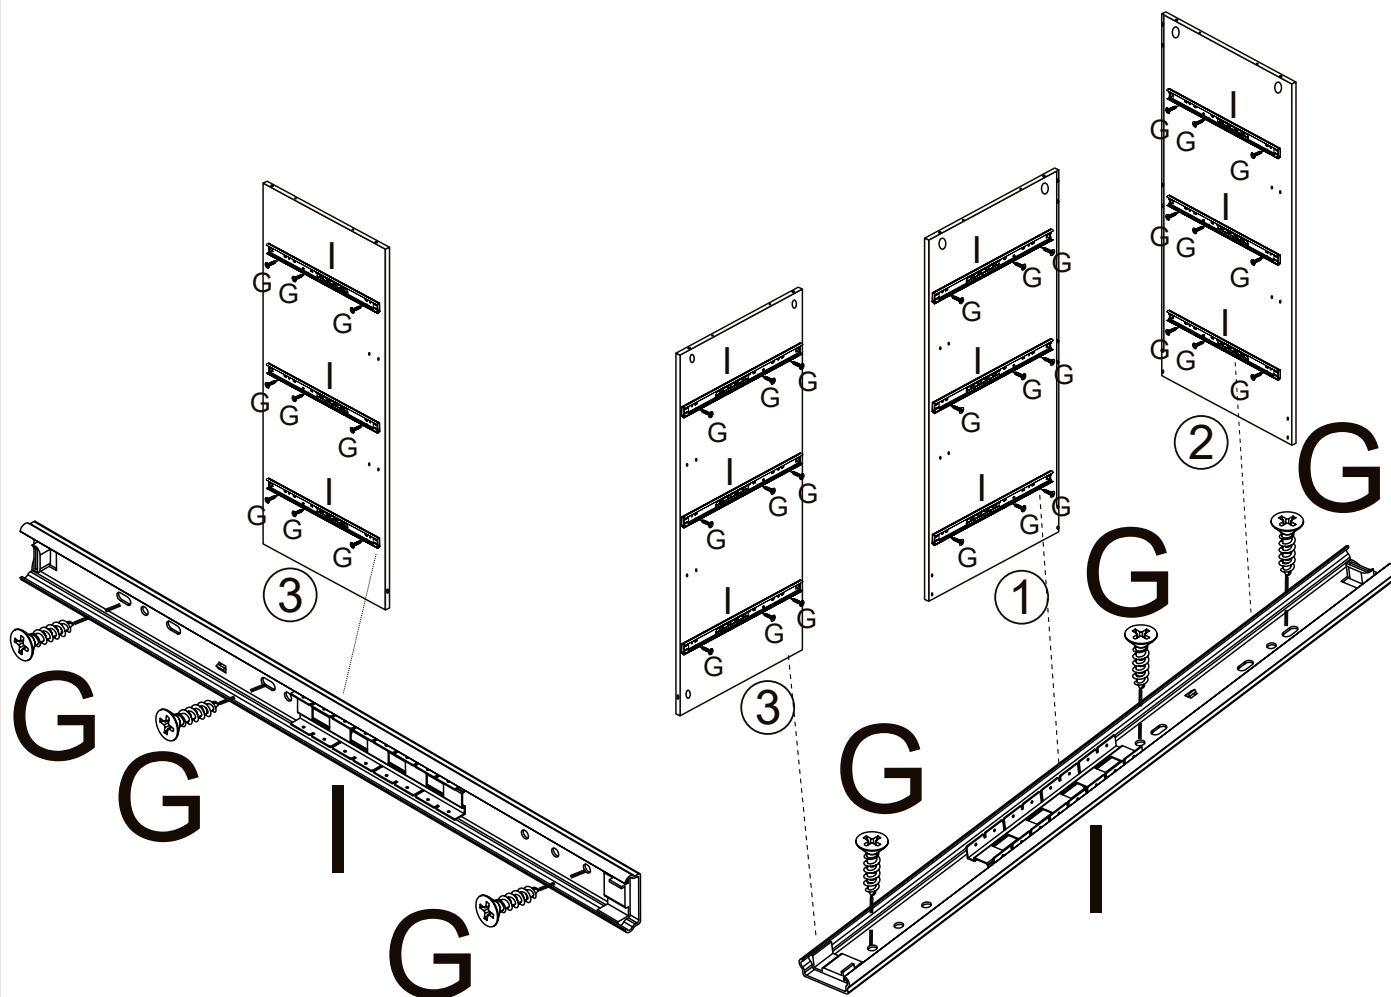


### STEP 4:

- Assemble the middle side panel (3) with connect panel (5),(6),(8) and back rail (7) by hardware (A,B,C,N).

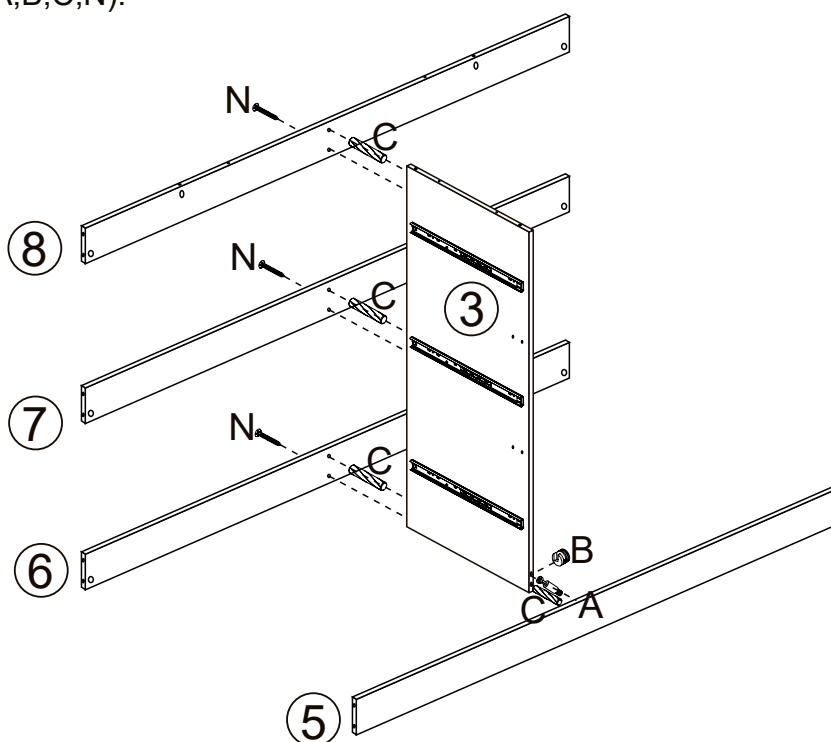


STEP 5:

- Assemble the connect panel(9) with side panel (3) by hardawre(A,B,C);  
Then assemble the right side panel (2) with the frame by hardware (A,B,C).

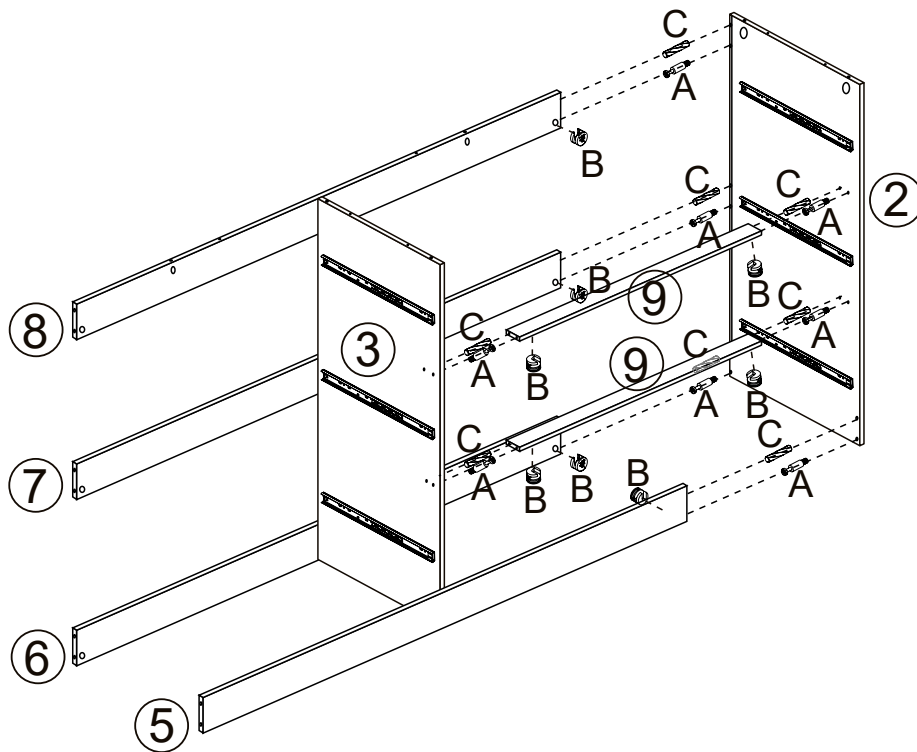


STEP 6:

- Attach the back panel(17) with the frame.

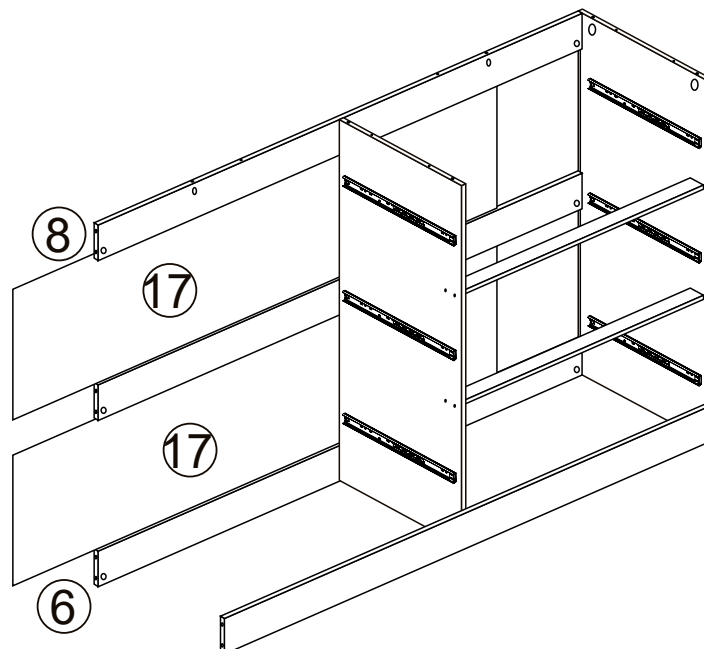


**STEP 7:**

- Assemble the connect panel(9) with side panel (3) by hardawre(A,B,C);  
Then assemble the left side panel (1) with the frame by hardware (A,B,C).

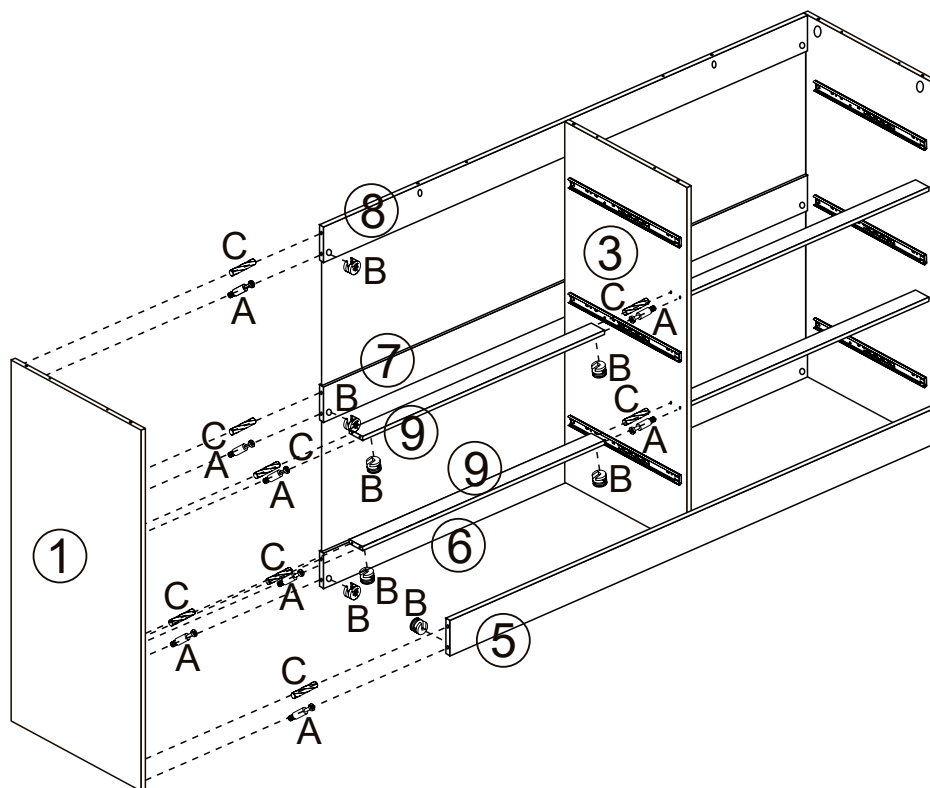

**STEP 8:**


- Assemble the hardware (O) on the four corners of the item by hardware (M).

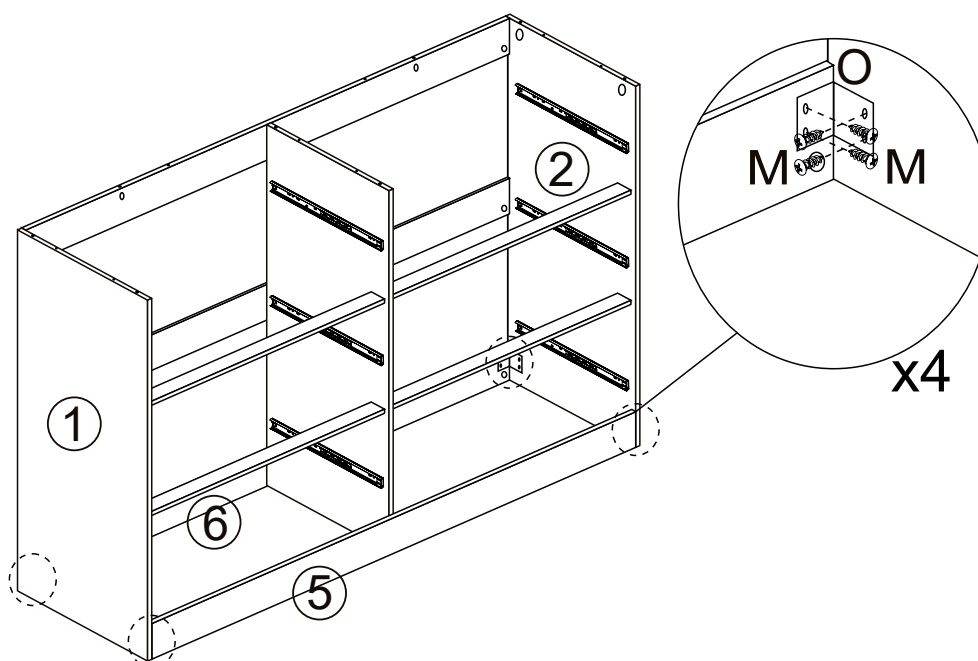




STEP 9:

- Attach the top panel (4) with the chest frame by hardware (A,B,C).

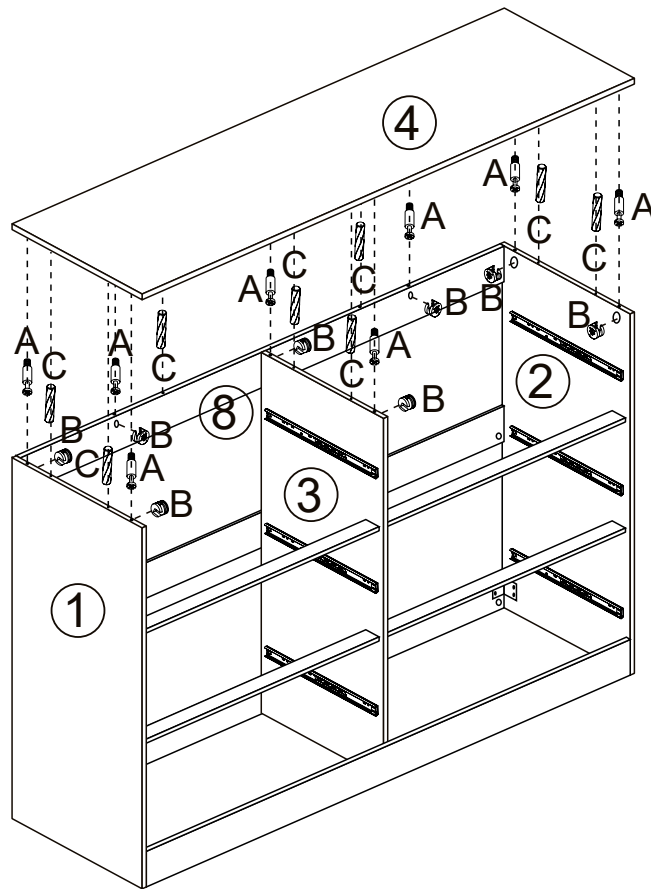


STEP 10:

- Attach the hardware (K) on the back of the item.  
Attach the hardware pad (J).

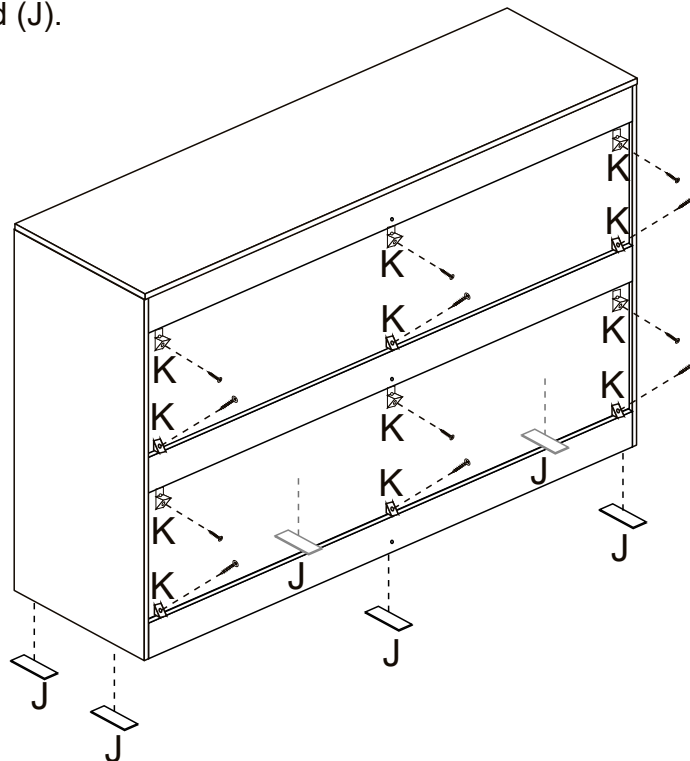


STEP 11:

- Install the drawers.

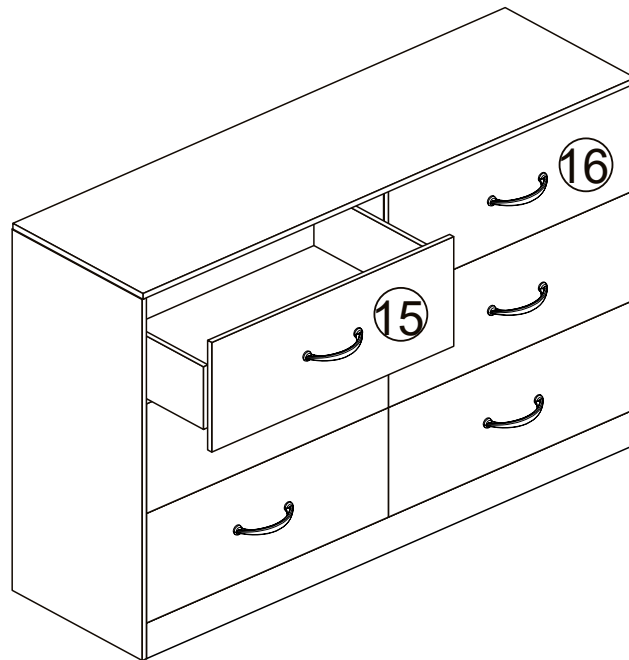

Finished.

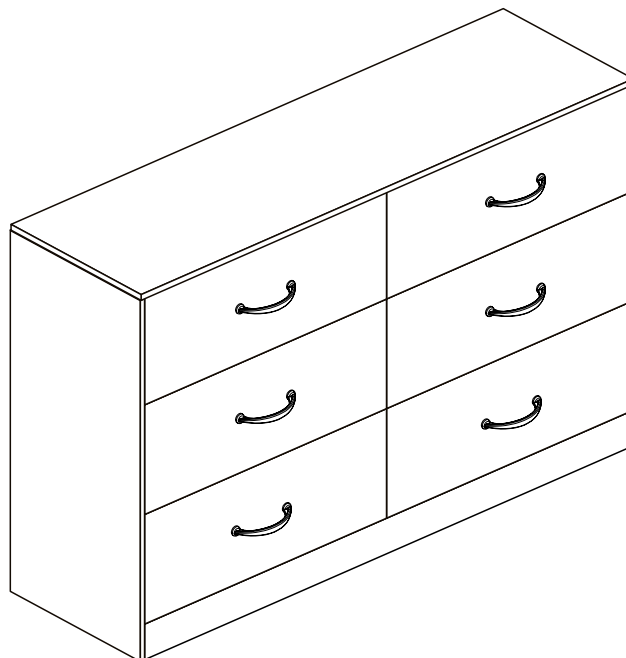

## SAFETY BRACKETS INSTRUCTIONS

This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

### HARDWARE



Mounting Plate x 2




Wall Strap x 1



Large Screw x2



Small Screw x2

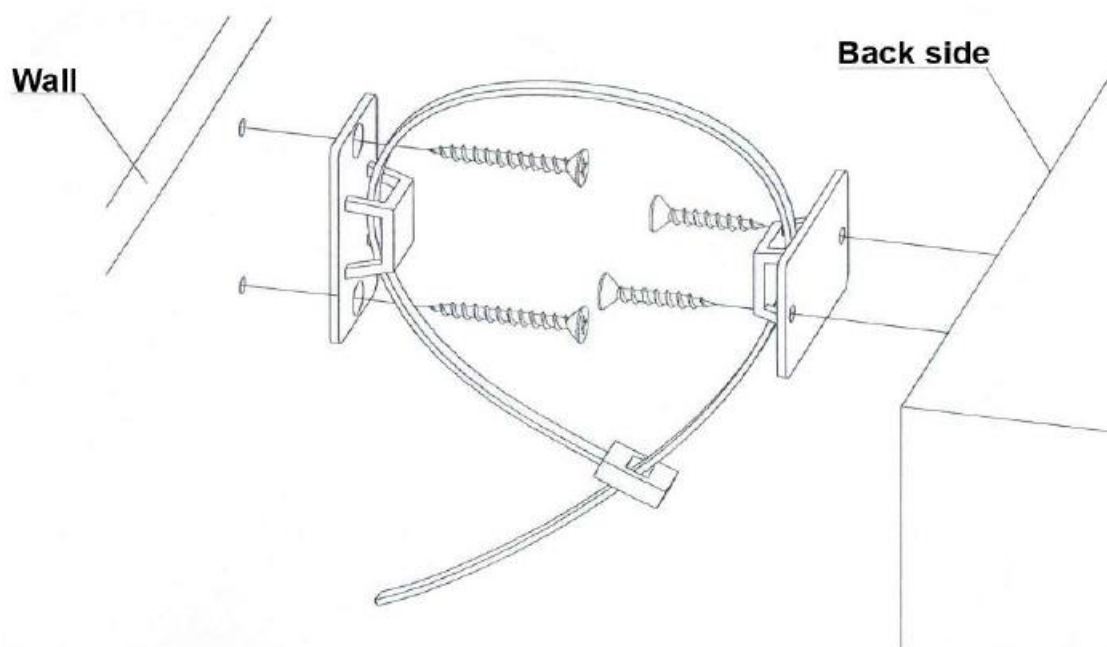

## PRODUCT CARE:

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.