


ASSEMBLY INSTRUCTION SUSIE DOUBLE BUNK BED ITEM CODE - 48938

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Free call 1800 351 084

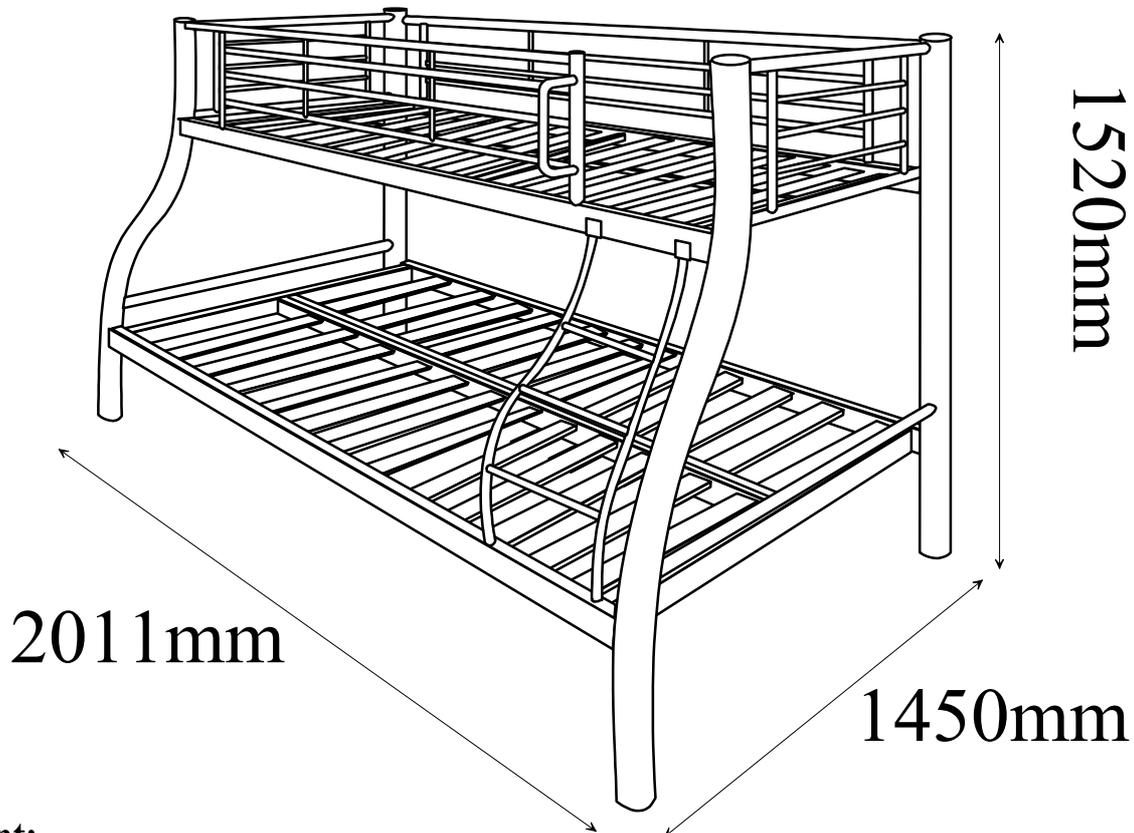

Important:

DUE TO THE SIZE OF THIS UNIT, WE RECOMMEND THAT ASSEMBLING IS DONE IN THE ROOM INTENDED FOR USE AND ASSEMBLED BY TWO PEOPLE.

WARNING:

**TOP BUNK AND ELEVATED BEDS
ARE DANGEROUS AND ARE NOT RECOMMENDED
FOR CHILDREN UNDER THE AGE OF 9**

Falls from elevated beds can be fatal and deaths have occurred where children have fallen from elevated beds. this is relevant for all ages. The risk is greater for younger children.

The risk of injury or death from a fall from an elevated bed compared to a non-elevated bed is:

10 x greater for 7-8 year olds

7 x greater for 9-10 year olds

3 x greater for 11-12 year olds


WARNING:

The upper bunk must be more than 2m from any ceiling fan.

PRE-ASSEMBLY PREPARATION

Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

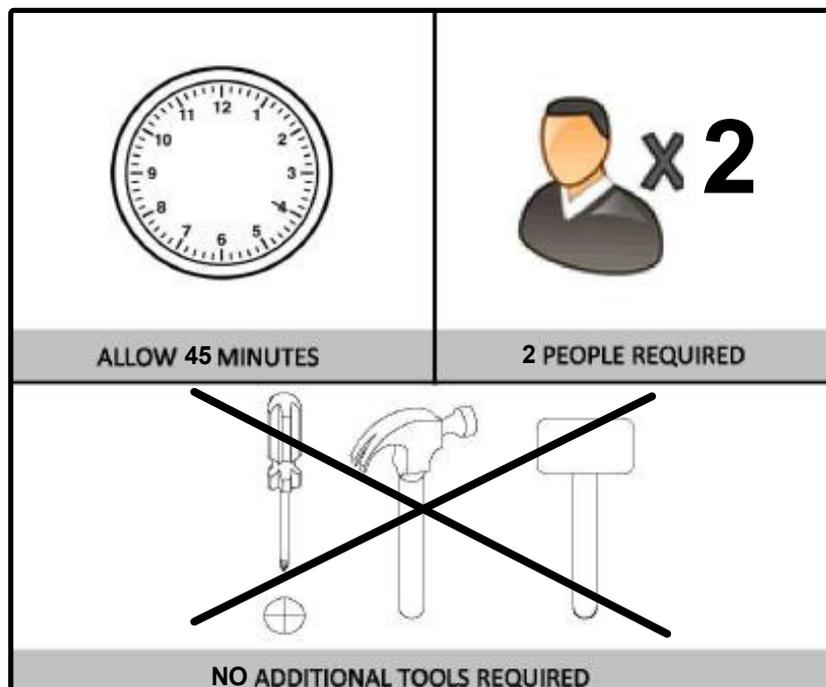

WARNING


To help prevent serious or fatal injuries from entanglement or falls:








- Use the correct size mattress as specified
- Upper surface of mattress must be at least 160mm below upper edge of guard rails
- Follow all written instructions included with this bed
- Use guardrails on both sides of upper bunk
- Check the bunk bed periodically to ensure that the guardrails, access device and other components are maintained in the correct position and state of repair and that all connectors are tight with nothing protruding more than 8mm
- Ensure the upper bunk is more than 2m from any ceiling fan
- Prohibit horseplay on under bed
- Prohibit more than one person on the upper bunk

TOP BUNKS AND ELEVATED BEDS ARE DANGEROUS AND ARE NOT RECOMMENDED FOR CHILDREN UNDER THE AGE OF 9.

DO NOT REMOVE THIS LABEL

PART LIST

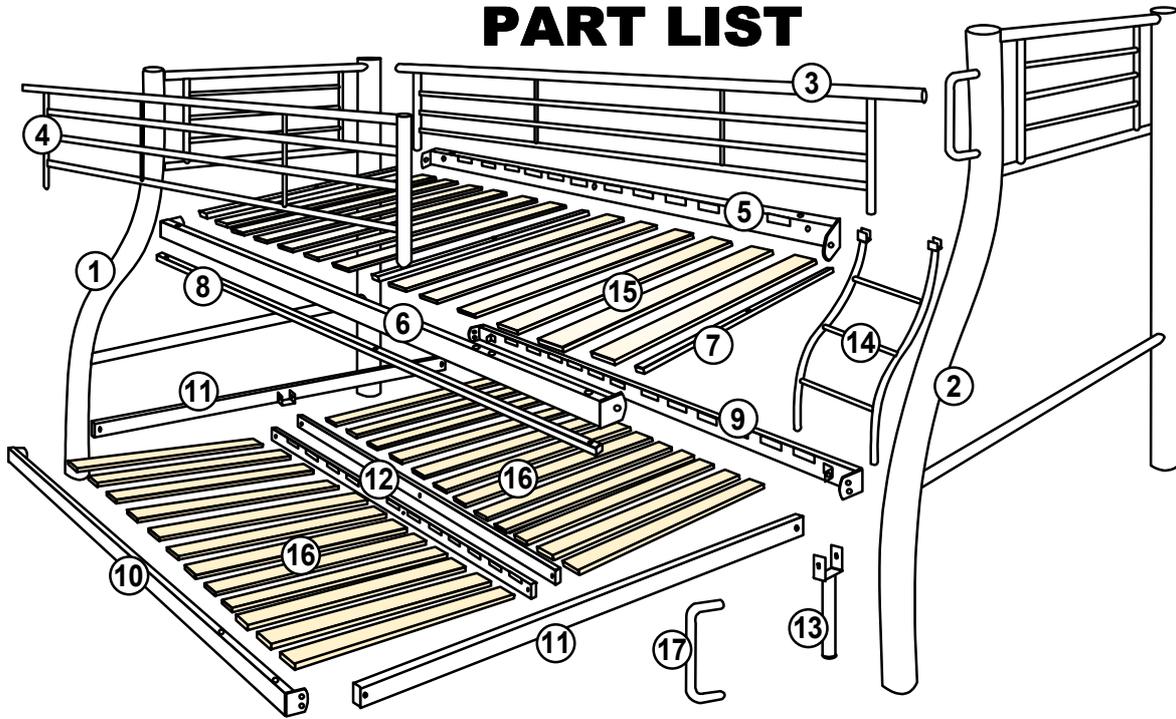


1	Left End Frame x 1pc	A M6x50mm bolts x 8pcs 	B M6x30mm bolts x 3pcs 
2	Right End Frame x 1pc		
3	Back Guardrail x 1pc	C JCN M6x12mm nuts x 3pcs 	D M8x40mm bolts x 4pcs 
4	Front Guardrail x 1pc		
5	Upper Bunk Back Siderail x 1pc (2 holes on the top surface for assembly of Back Guardrail)	E M8x70mm bolts x 3pcs 	F M8 Hex Nut x 7pcs 
6	Upper Bunk Front Siderail x 1pc (4 holes on the top surface for assembly of front guardrail & ladder)		
7	Upper Bunk Across Bar x 3pcs	G M10x30mm Hex bolts x 4pcs 	H M10 Spring Washer x 4pcs 
8	Centre Bar x 1pc		
9	Lower Bunk Back Siderail x 1pc (No holes on the top surface.)	I M10 Hex Nut x 4pcs 	J M3/8x25mm Hex bolts x 8pcs 
10	Lower Bunk Front Siderail x 1pc (2 holes on the top surface for assembly of Ladder)		
11	Lower Bunk Across Bar x 2pcs (with U-bracket & 2 holes)	K M3/8 Spring Washer x 8pcs 	L M3/8 Hex nut x 8pcs 
12	Lower Bunk Centre rail x 2pcs (with 3 holes)		
13	Support Leg x 1pc	M M4 Allen Key x 1pc (used with M6 bolts) 	N M5 Allen Key x 1pc (used with M8 bolts) 
14	Ladder x 1pc		
15	Longer Wood Slats x 12pcs (970mmx65mmx11mm) (for upper bunk base)		
16	Shorter Wood Slats x 24pcs (707mmx65mmx11mm) (for lower bunk base)	O M6x80mm bolts x 11pcs 	
17	Handrail x 1pc		

ASSEMBLY..

STEP 1: Assembling Upper Bunk Bedbase. (Tool needed (M))

Attach Upper/Bottom Bunk Bed Siderail (5) with cross bar (7) and Centre Bar (8) to Upper Bunk Siderail (6)

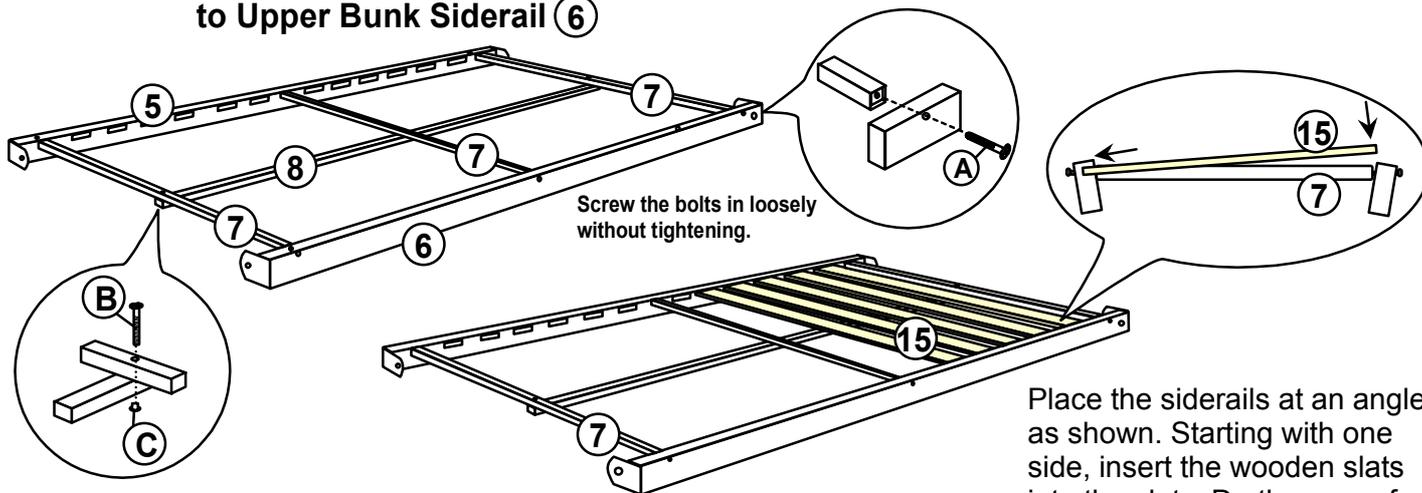


Place the siderails at an angle as shown. Starting with one side, insert the wooden slats into the slots. Do the same for the other side.


IMPORTANT!! TAKE NOTE!!

Ensure slots are on the upper side of the Siderail; with the sides without slots facing outwards.


Follow the direction of the arrow on the label. Failure may result in damage.



STEP 2: Assembling Lower Bunk Bedbase. (Tool needed (N))

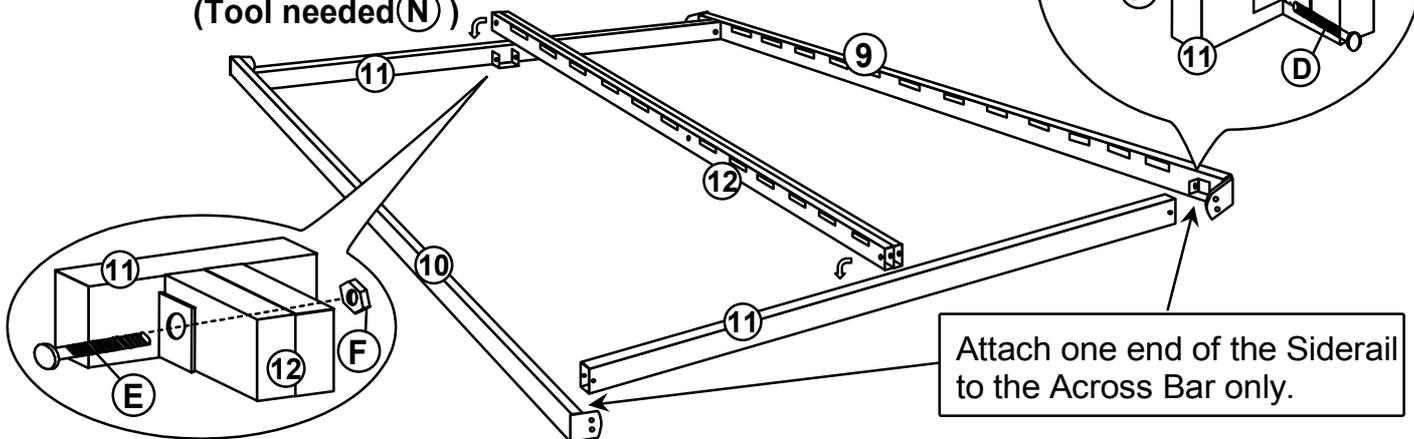

Attach the other end after all Wooden Slat inserted.


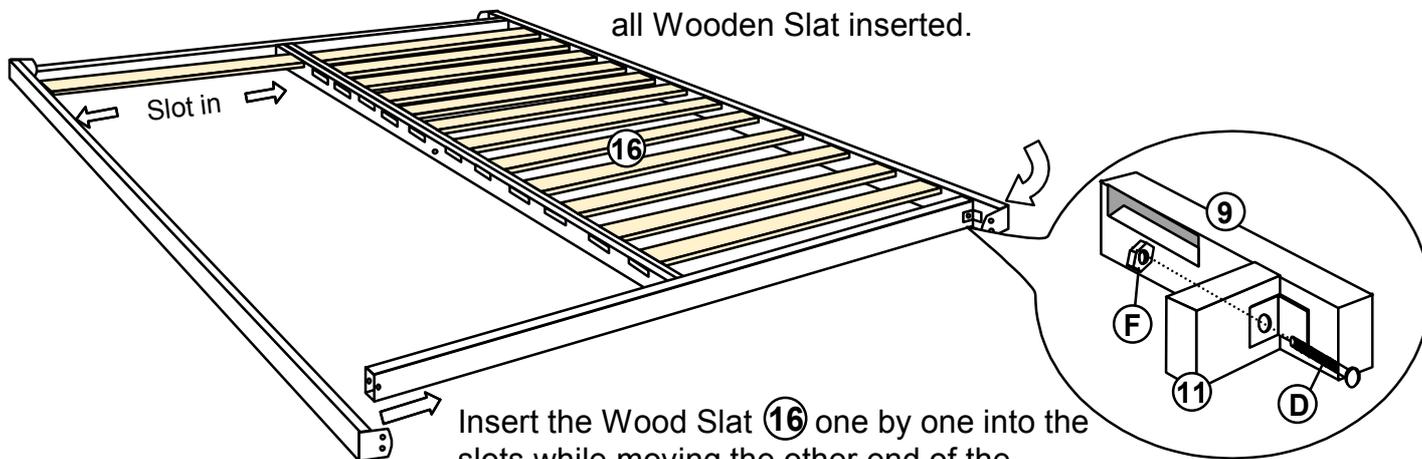


Insert the Wood Slat (16) one by one into the slots while moving the other end of the Siderail slightly inward until all 12 slats are inserted. At Last tighten all bolts.

ASSEMBLY..

STEP 3: Attach Upper & Lower Bunk Bedbase to Left End Frame ① & Right End Frame ②
Attach the Ladder ⑭

Tool needed:-Adjustable spanner
(not provided)

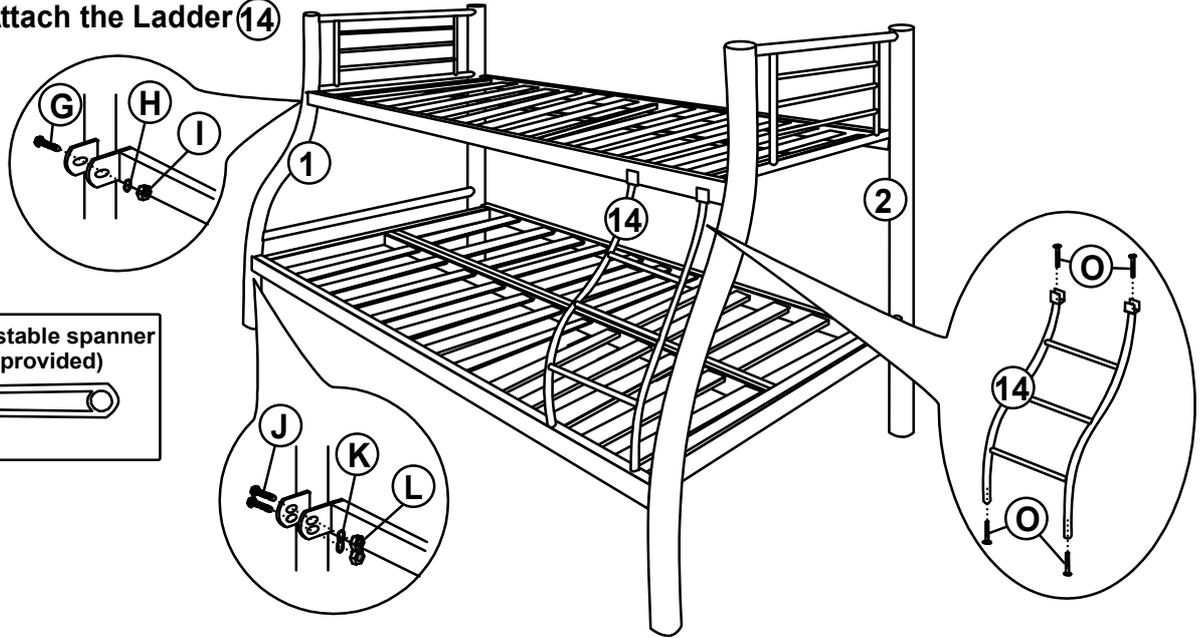

STEP 4: Attach the Back Guardrail ③ and Front Guardrail ④
Attach the Handrail ⑰
Attach the Support Leg ⑬



CARE AND MAINTENANCE

FURNITURE/ BED

1. When assembling your furniture/ bed please ensure that you have checked the contents for all relevant parts.
2. When tightening bolts make sure that they are fully tightened but not forced.
3. When moving your fully assembled bed you must first remove the mattress and lift the frame into position, take care when lifting and always have two people handling the bed. PLEASE DO NOT DRAG THE BED as this will cause damage to the rail.
4. It is advisable to use approved cleaning products when cleaning the furniture and bed frame as certain chemical based cleaners could have an adverse effect on the bed finish.