


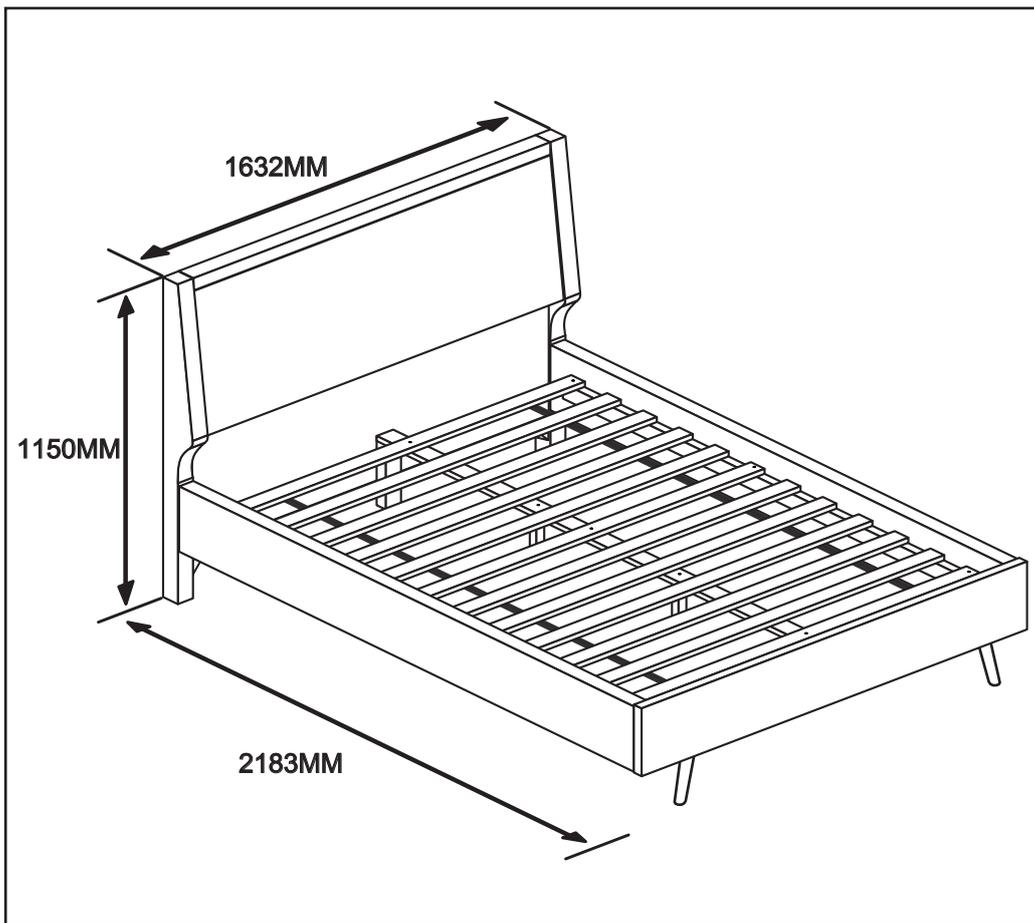

ASSEMBLY INSTRUCTION  
KORI QUEEN BED  
ITEM CODE 61196

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.  
For any assistance with assembly or for missing parts please phone  
Amart Furniture, Customer Service Free call 1800 351 084




Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.  
For any assistance with assembly or for missing parts please phone  
Amart Furniture, Customer Service Free call 1800 351 084


# PRE-ASSEMBLY PREPARATION

## Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

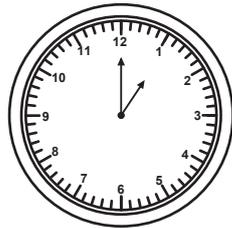


**ALLOW 60 MINUTES**

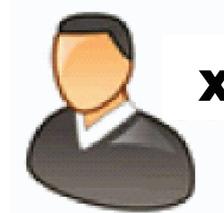

**x 2**

**PEOPLE REQUIRED**




**TOOLS REQUIRED**




<b>PART NUMBER</b>	<b>QTY</b>	<b>DIMENSIONS (MM)</b>
1	1	2050x190x42
2	1	205x190x42
3	1	1630x1150x110
4	1	263x70x25
5	1	1630x192x42
6	1	390x46x25
9	1	2050x70x20
10	1	260x30x30
11	12	1535x70x15


STEP 1: Insert dowel ② to left side panel ① and right side panel ②. Fix angle irons ① to left side panel ① and right side panel ② with 6MM spring washer ④, 6MM washer ⑤, hexagon socket screw ⑥ using 4MM allen key ⑦.

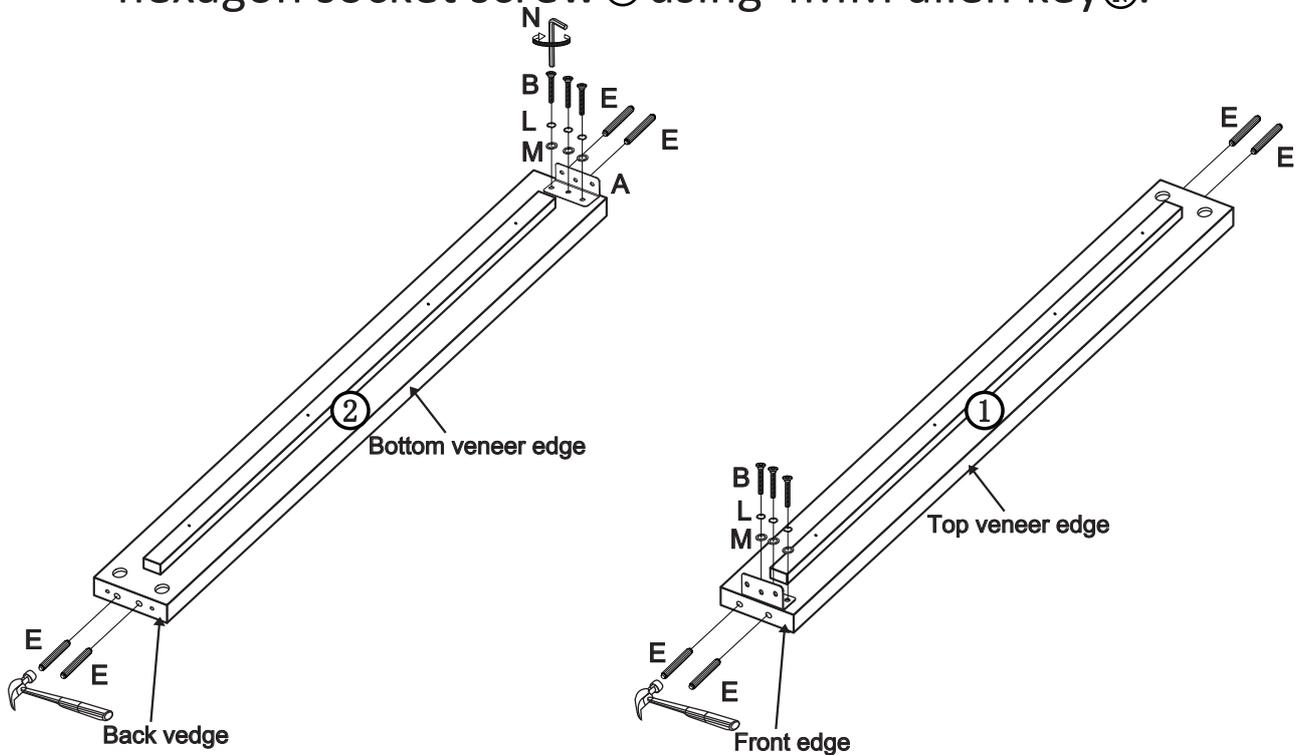

STEP 2: Attach support bar ④ to headboard ③ with 6MM washer ⑤, 6MM spring washer ④, hexagon socket screw ⑥ using 5MM allen key ⑦.

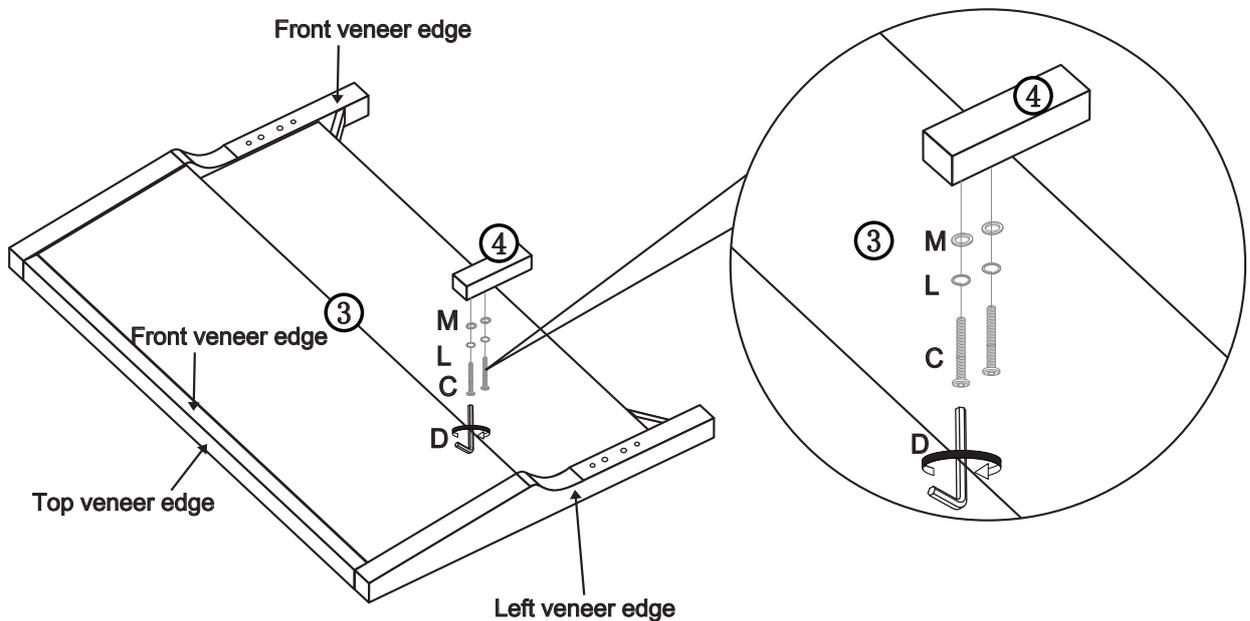


STEP 3: Attach left side panel ① and right side panel ② to headboard ③ using 8MM washer ④ ,hexagon socket screw ⑤ ,6MM nut ⑥ and 5MM allen key ⑦ .


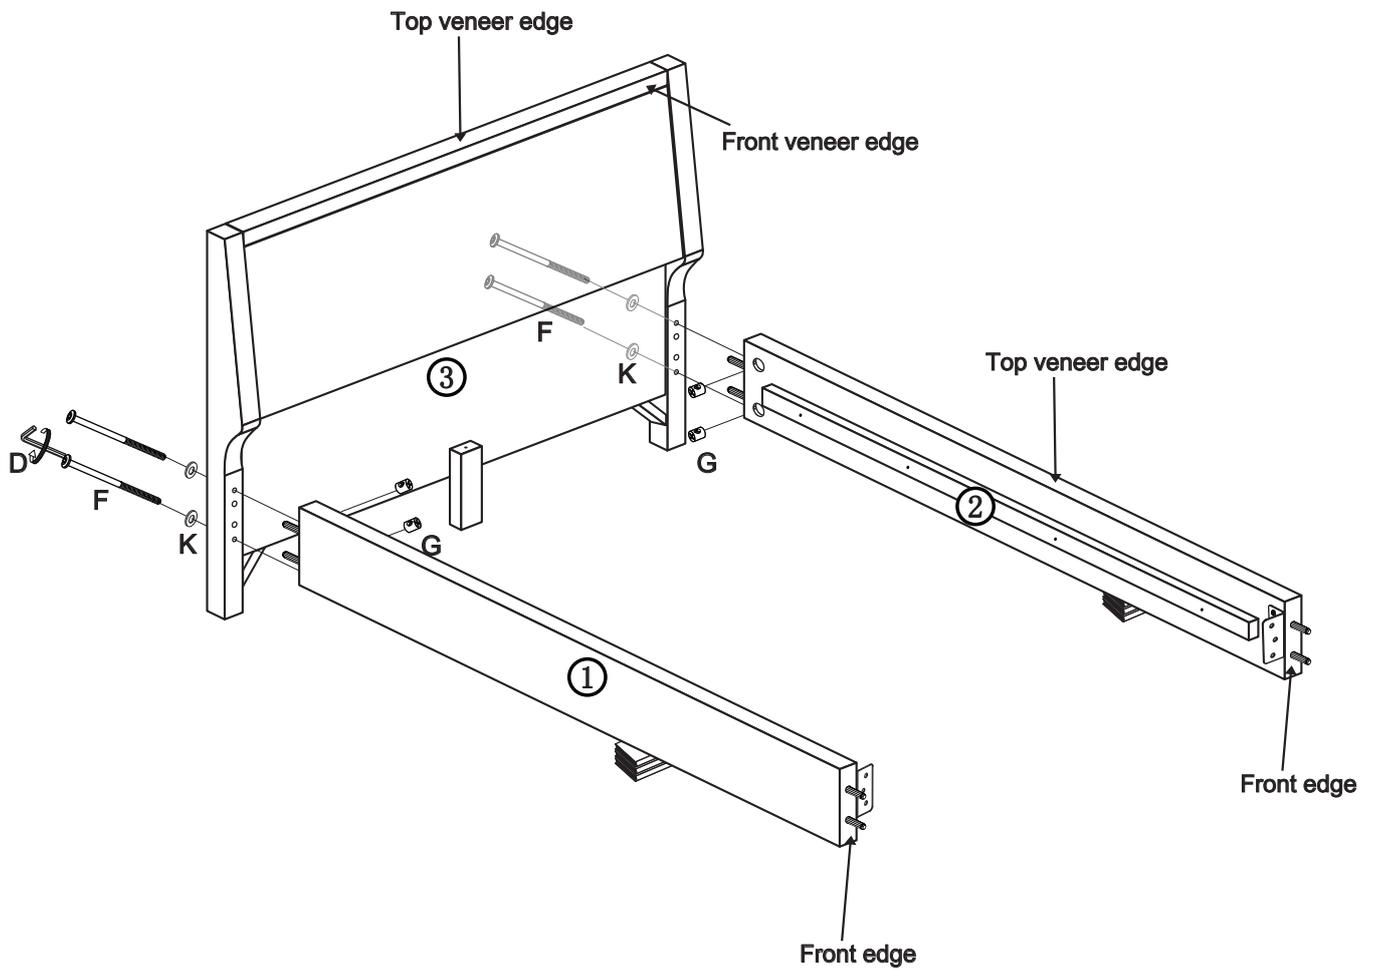





STEP 5: Attach left side panel ① and right side panel ② to and footboard ⑤ with 6MM spring washer ①, 6MM washer ②, hexagon socket screw ③ using 4MM allen key ④.

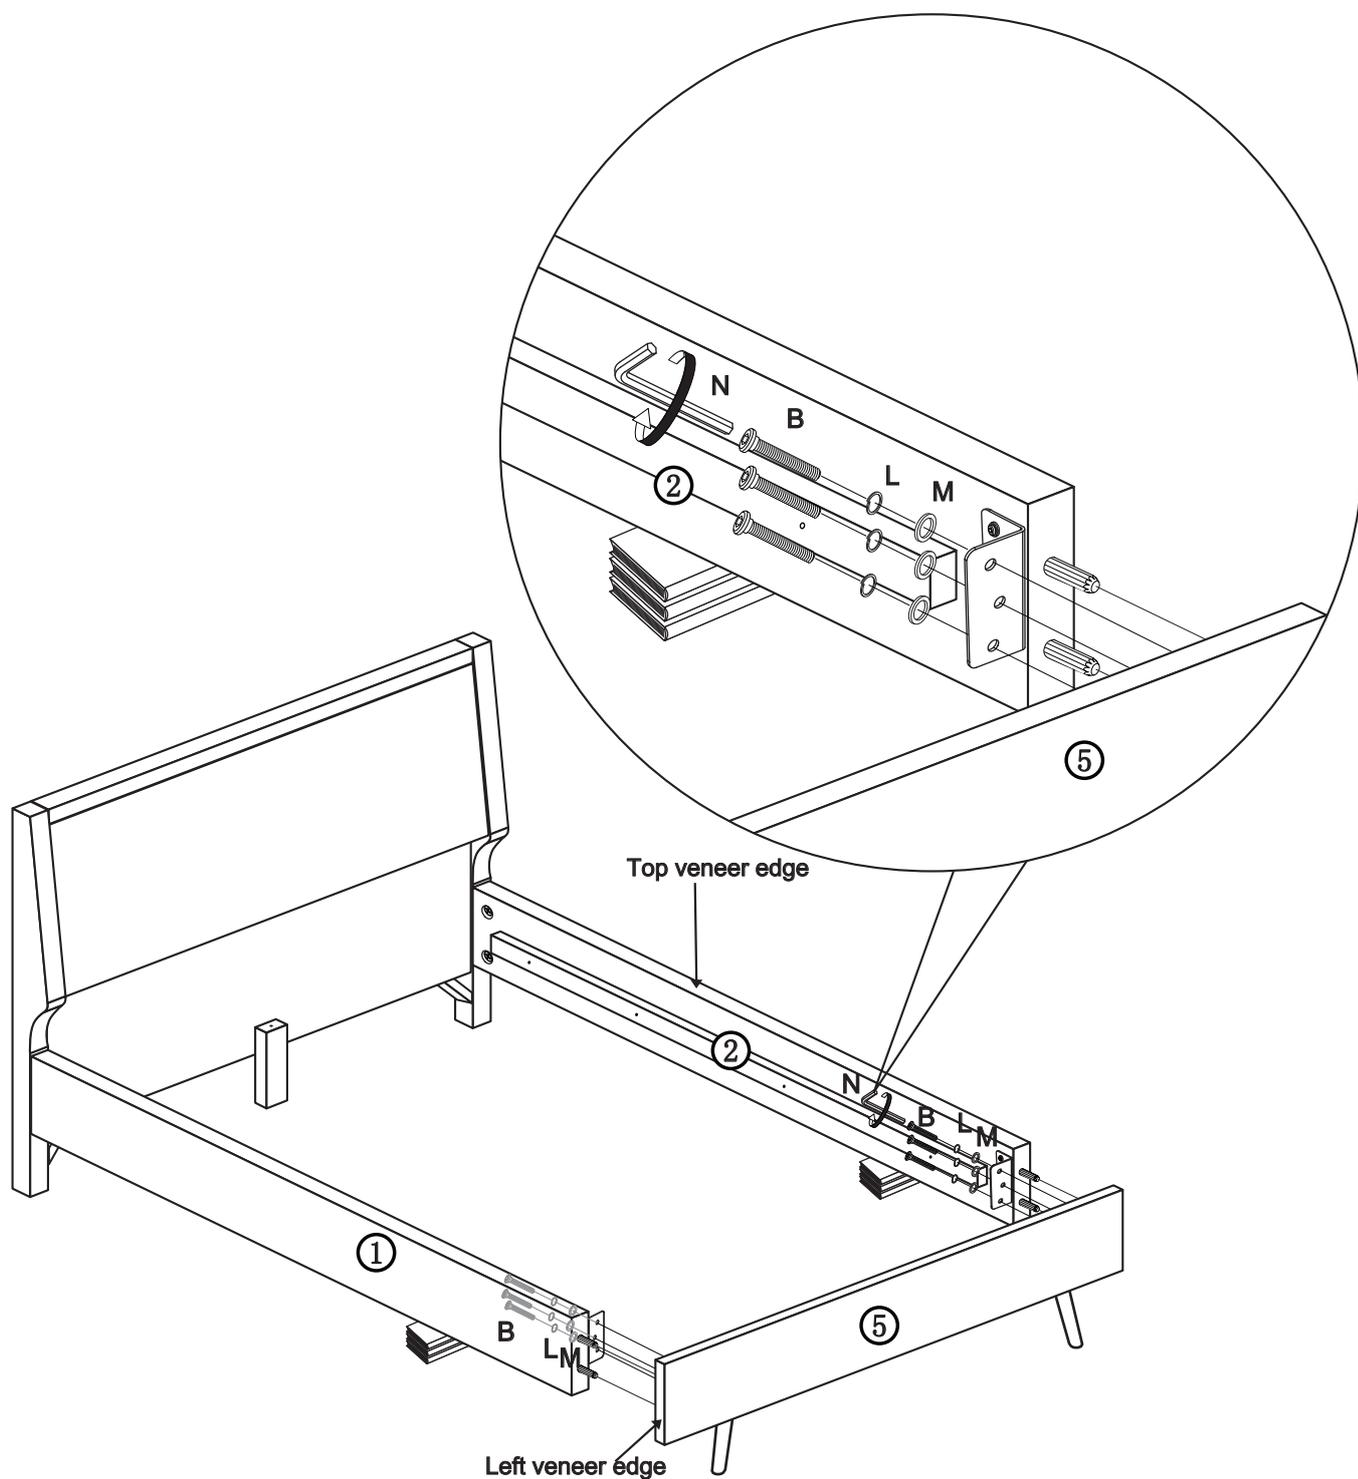

STEP 6: Attach legs ⑩ to middle support panel ⑨ with hexagon socket screw ⑨ using 6MM allen key ⑮. Attach middle support panel ⑨ to support leg ④ and support bar ⑥ with 6MM washer ⑮, 6MM spring washer ⑮, hexagon socket screw ③ using 4MM allen key ⑮.

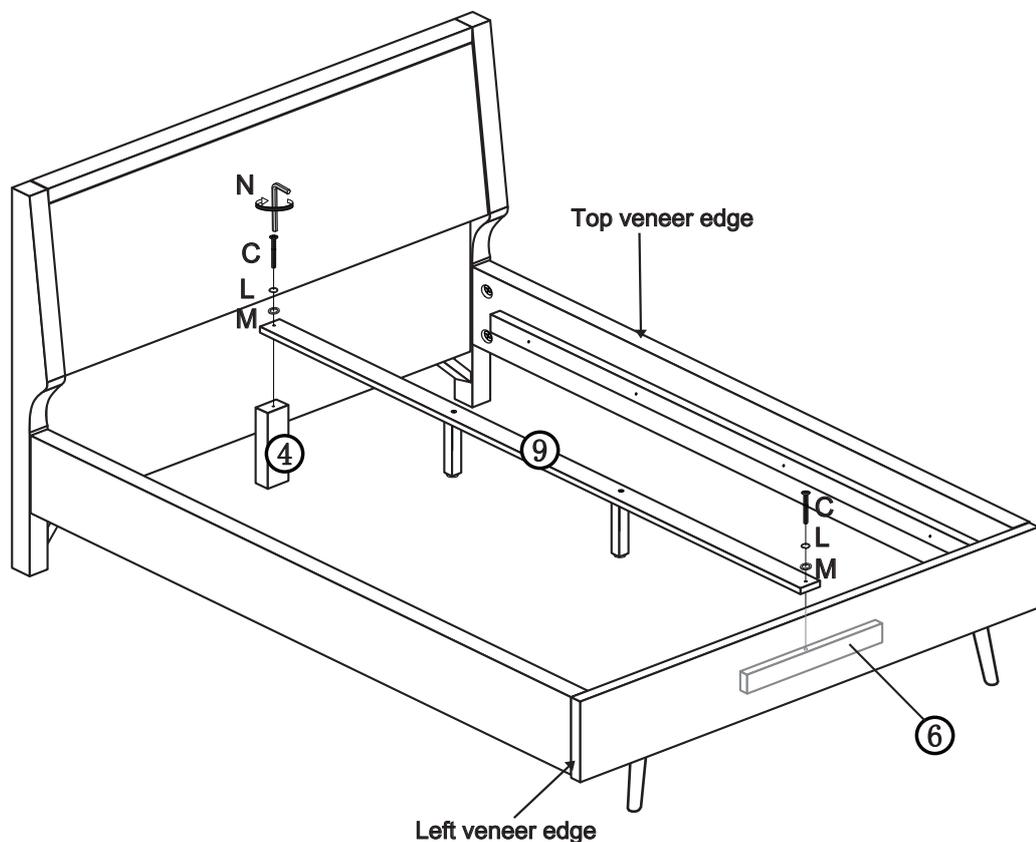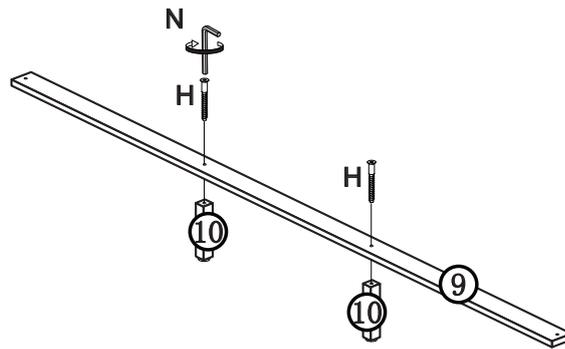

STEP 7: Attach slats ① to the existing unit using screws ①.

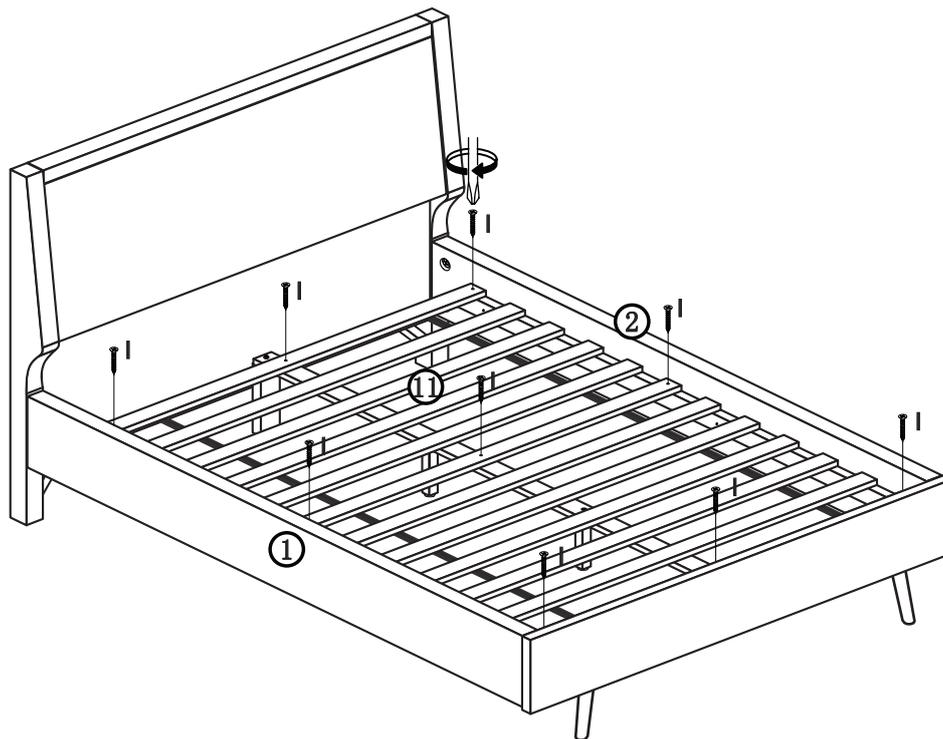


ASSEMBLY COMPLETE

DO NOT PUSH OR DRAG THIS FURNITURE – IT WILL CAUSE DAMAGE TO THE LEGS

**CAUTION**

ALWAYS LIFT YOUR BED WHEN MOVING/RELOCATING – DO NOT DRAG. DRAGGING CAN CAUSE THE CENTRE SUPPORT LEGS TO BEND/BREAK

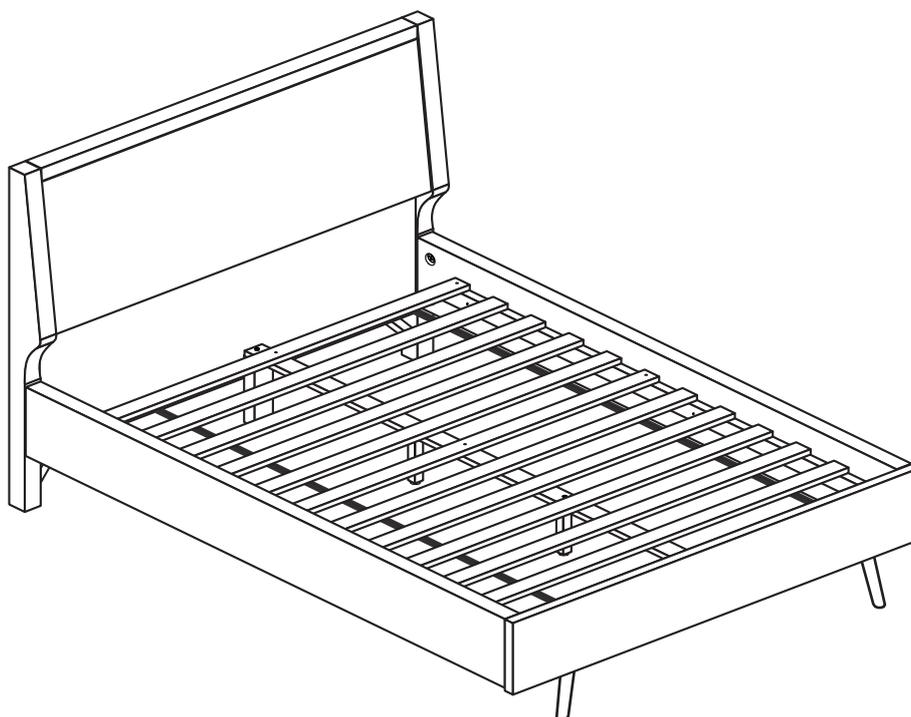

## **PRODUCT CARE:**

To protect your furniture, we suggest the following:

- \*Avoid placing your furniture in direct sunlight.
- \*Do not place furniture directly under windows.
- \*Do not place sharp materials(knife, fork, etc) directly onto your furniture as sharp material may scrape and damage the finish.
  
- Do not place material with high temperature directly onto the surface of your furniture.
- \*Protective padding is strongly recommended when using your furniture .
- \*Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- \*Use a clean, soft, dry, lint free absorbant cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void.