


Amart

ASSEMBLY INSTRUCTION

MONTEBELLO 4PC OD LOUNGE SETTING

ITEM CODE - 81290

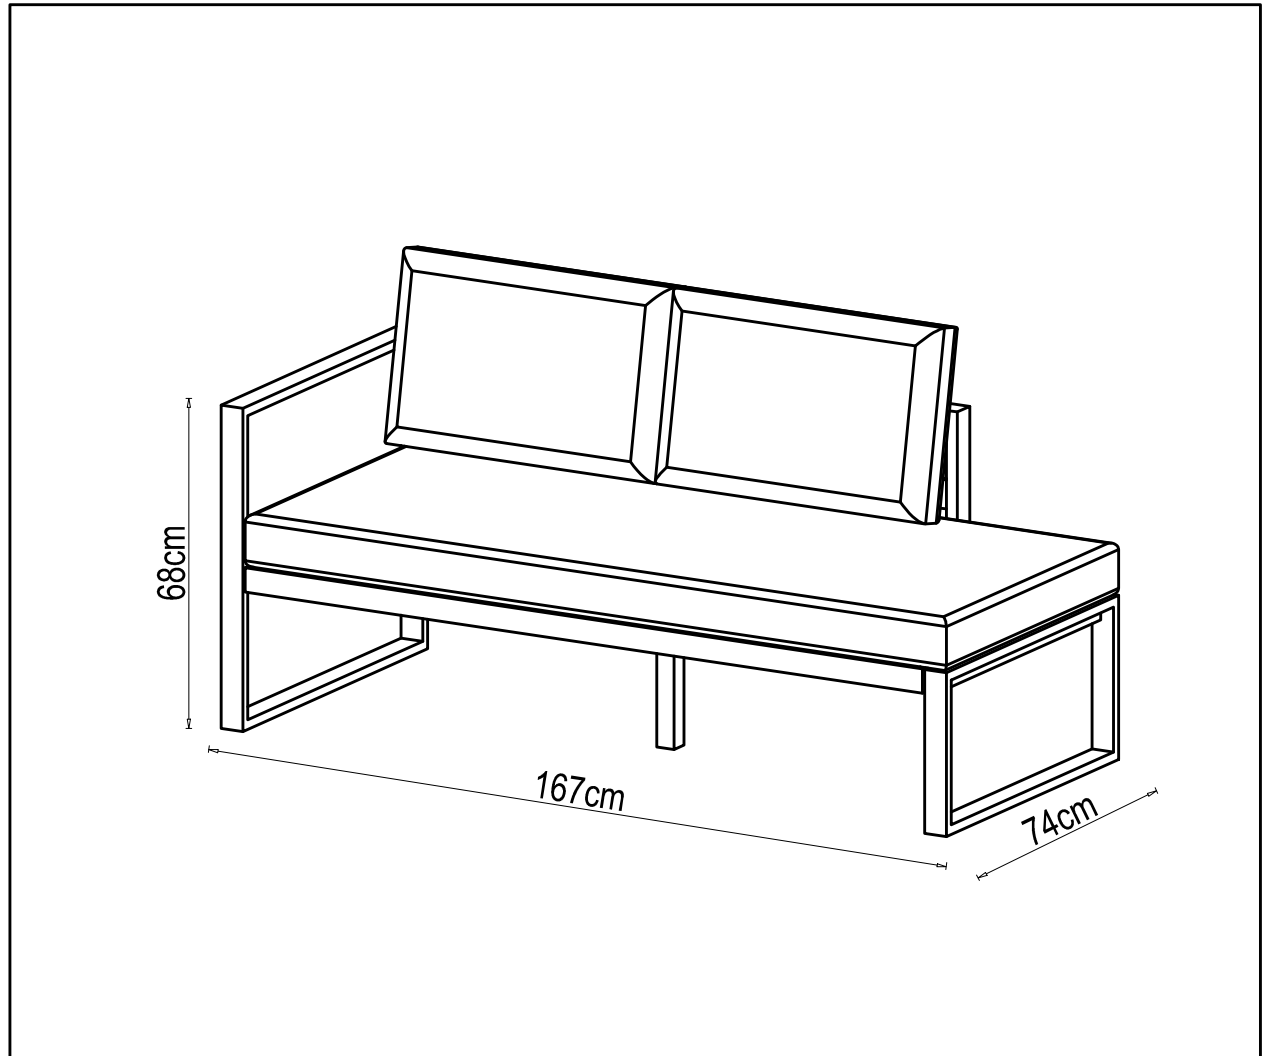


Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia .
For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Freecall 1800 351 084


PRE-ASSEMBLY PREPARATION







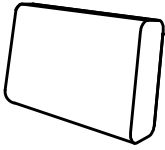
Before you start:

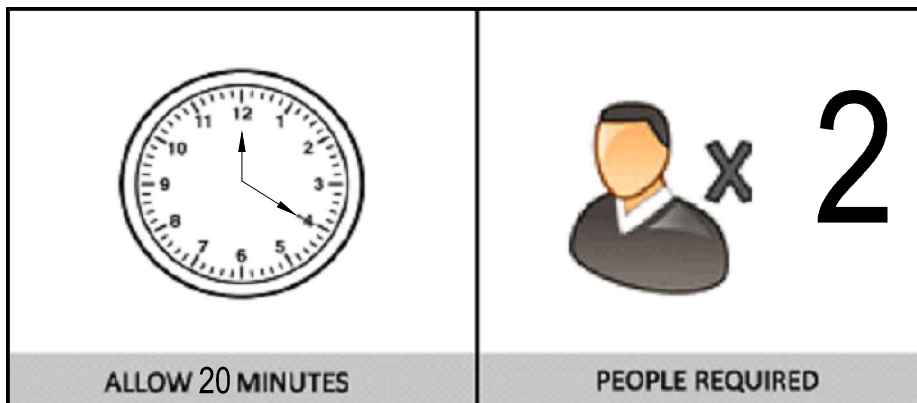



1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.

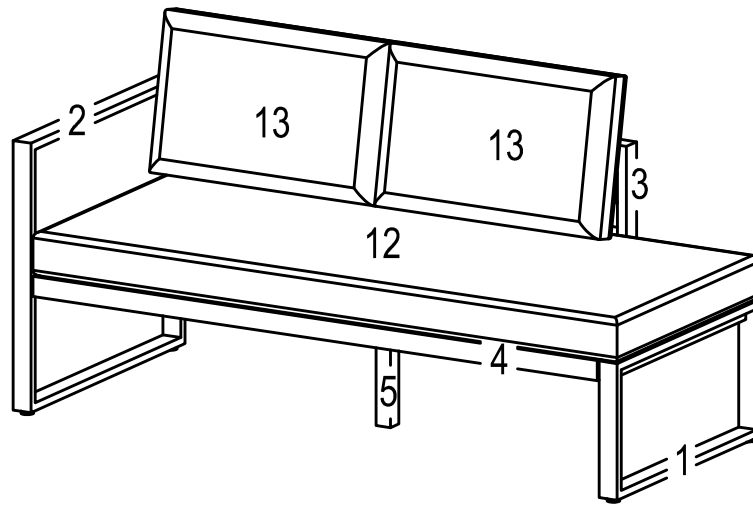

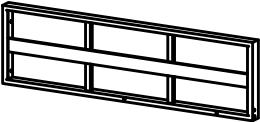PARTS LIST








1. Left Feet		1PC	2. Right Arm		1PC
3. Backrest		1PC	4. Seat		1PC
5. Leg		1PC	12. Seat Cushion		1PC
13. Back cushion		2PCS			


A. Bolt	B. Bolt	C. Washer	D. Allen Key
			
M6*20*6PCS	M6*35*12PCS	M6*18PCS	M6*1PC

Step 1:

ITEMS REQUIRED





2.	Right Arm	1PC	4.	Seat	1PC
					
B.	Bolt		C.	Washer	
					
M6*35*4PCS			M6*4PCS		
			D.	Allen Key	
					
			M6*1PC		

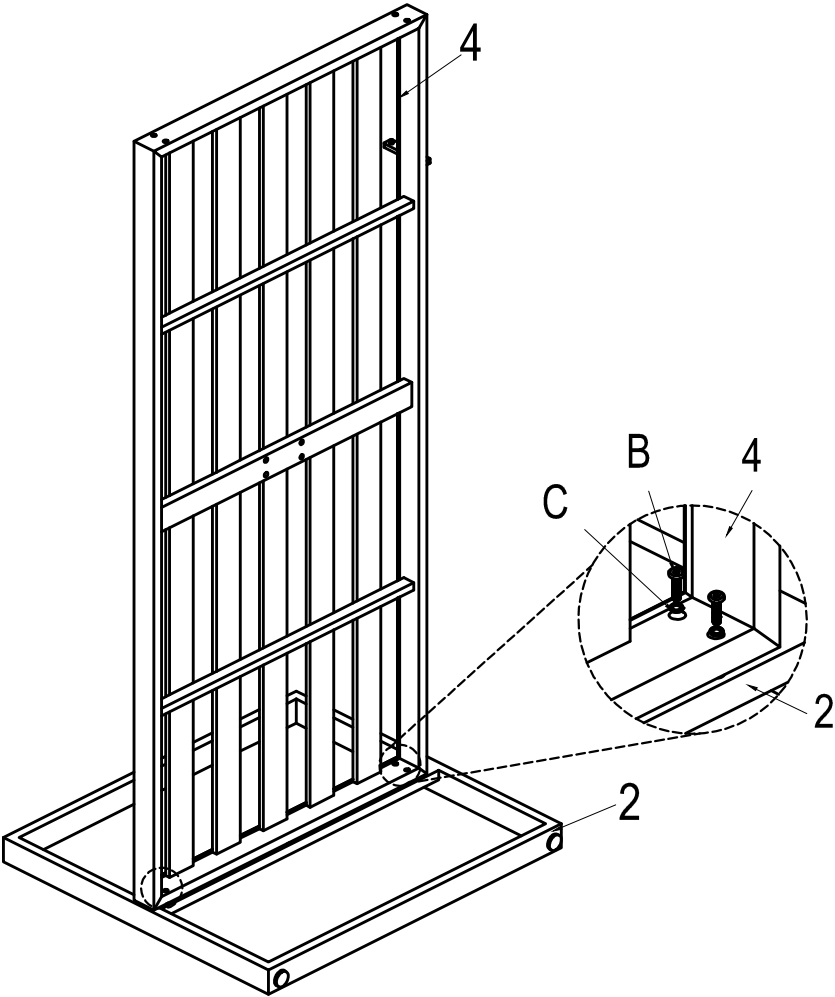- Attach right arm (2) to seat (4) using bolt (B) with washer (C) .
- Insert all bolts before fully tightening .
- Tighten with allen key (D) .




Step 2:

ITEMS REQUIRED





1. Left Feet 1PC 		
B. Bolt  M6*35*4PCS	C. Washer  M6*4PCS	D. Allen Key  M6*1PC

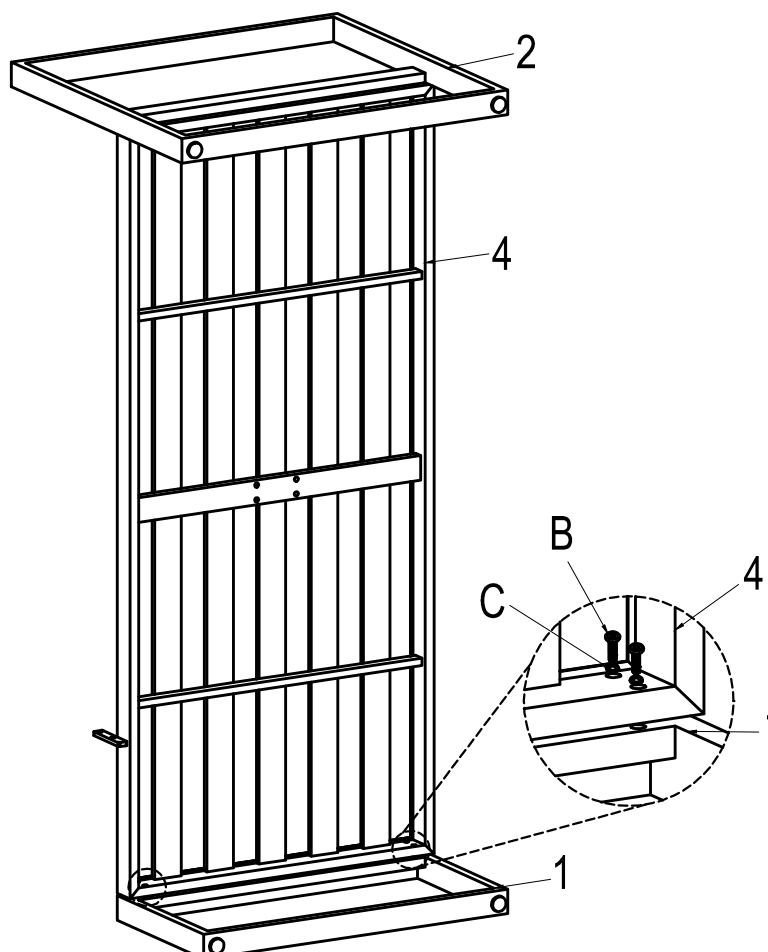- Attach left feet (1) to seat (4) using bolt (B) with washer (C) .
- Insert all bolts before fully tightening .
- Tighten with allen key (D) .




Step 3:

ITEMS REQUIRED






5.	Leg	1PC
		
A.	Bolt	
		
	M6*20*4PCS	
C.	Washer	
		
	M6*4PCS	
D.	Allen Key	
		
	M6*1PC	

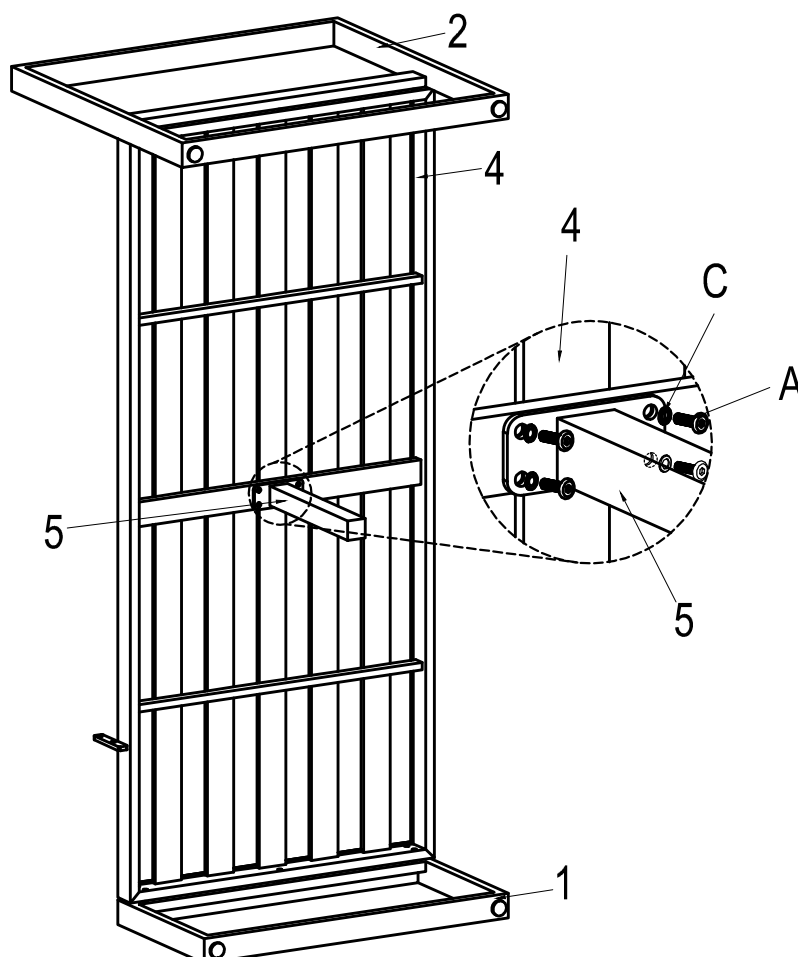- Attach leg (5) to seat (4) using bolt (A) with washer (C) .
- Insert all bolts before fully tightening .
- Tighten with allen key (D) .




Step 4:

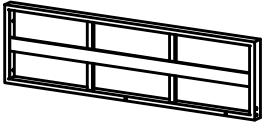
ITEMS REQUIRED


<div>3. Backrest 1PC</div> 			
A. Bolt	B. Bolt	C. Washer	D. Allen Key
			
M6*20*2PCS	M6*35*4PCS	M6*6PCS	M6*1PC

- Attach backrest (3) to seat (4) and right arm(2) using bolt (A) and bolt (B) with washer (C) .
- Insert all bolts before fully tightening .
- Tighten with allen key (D) .

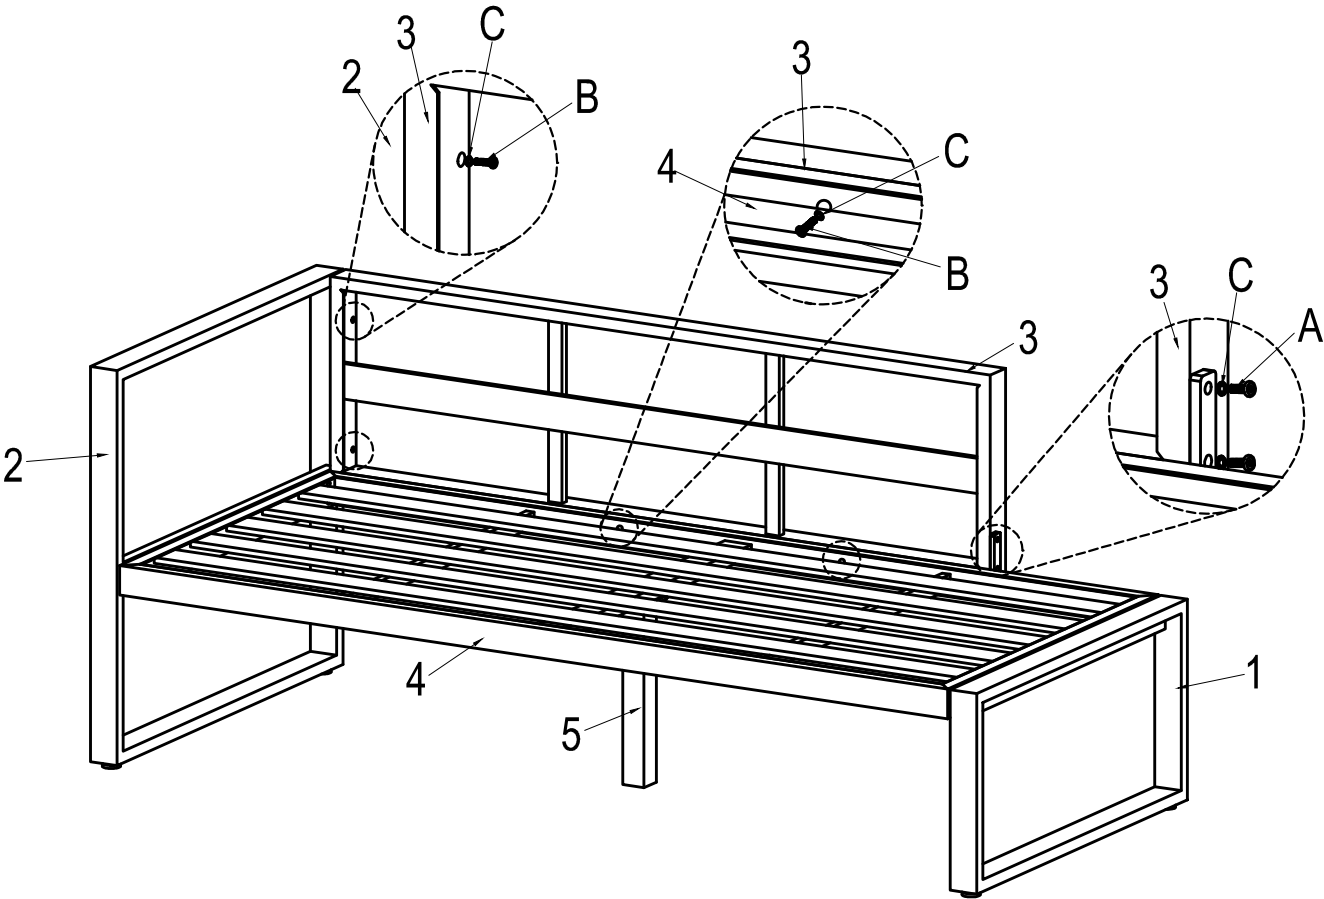

ASSEMBLY IS COMPLETE

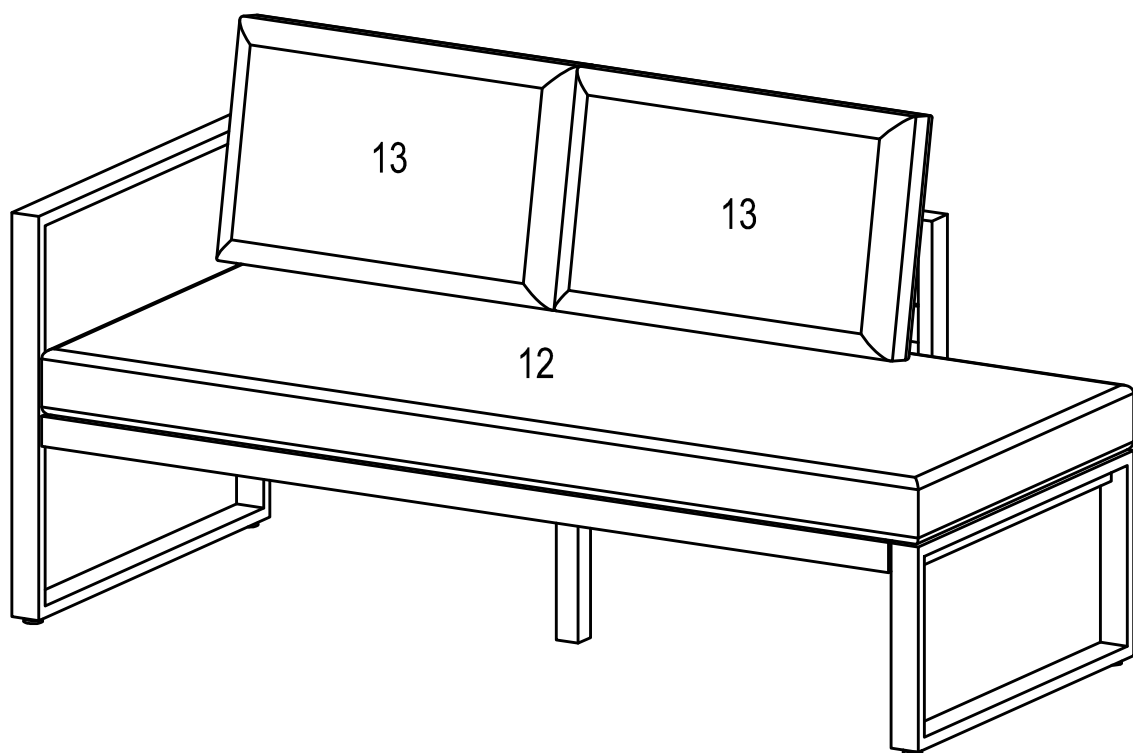

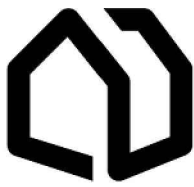


Amart

ASSEMBLY INSTRUCTION

MONTEBELLO 4PC OD LOUNGE SETTING

ITEM CODE - 81290

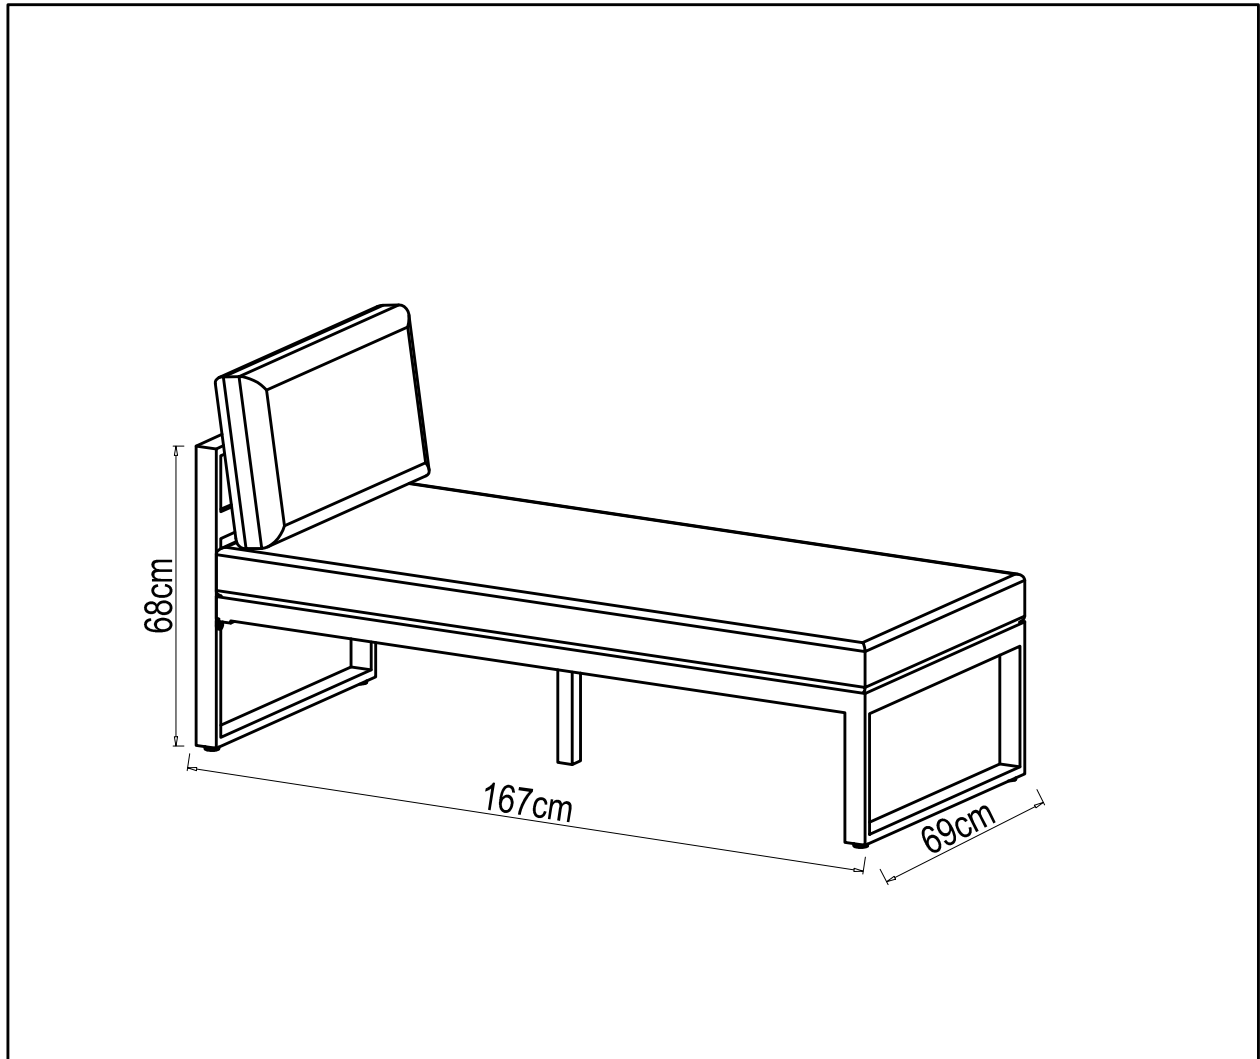


Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia .
For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Freecall 1800 351 084


PRE-ASSEMBLY PREPARATION






Before you start:

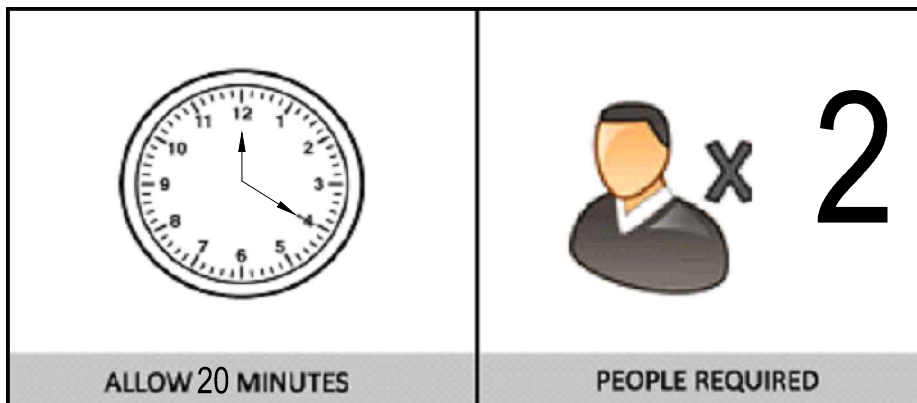



1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.

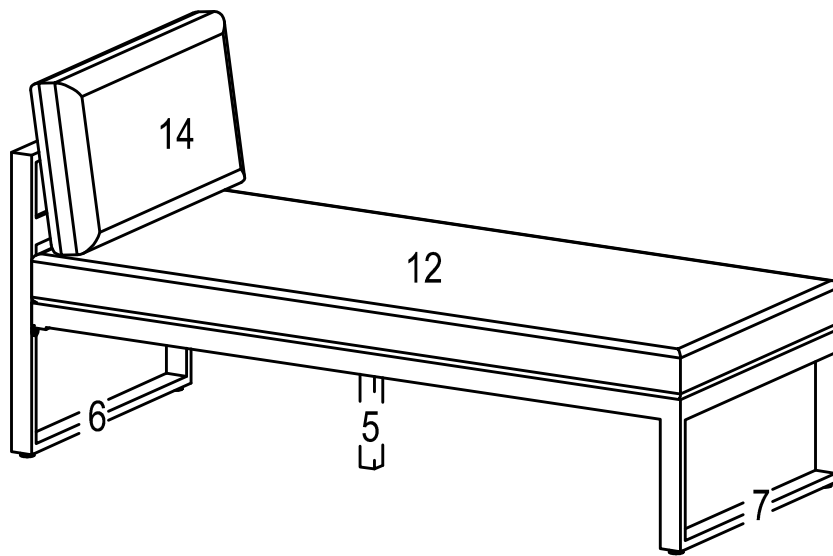

PARTS LIST

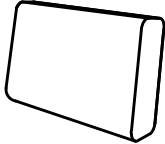






6. Backrest		1PC	7. Seat		1PC
12. Seat Cushion		1PC	14. Back cushion		1PC
5. Leg		1PC			


A. Bolt	B. Bolt	C. Washer	D. Allen Key
			
M6*20*6PCS	M6*35*4PCS	M6*10PCS	M6*1PC

Step 1:

ITEMS REQUIRED




6.	Backrest	1PC	7.	Seat	1PC
					
A.	Bolt		C.	Washer	
					
M6*20*2PCS			M6*2PCS		
			D.	Allen Key	
					
			M6*1PC		

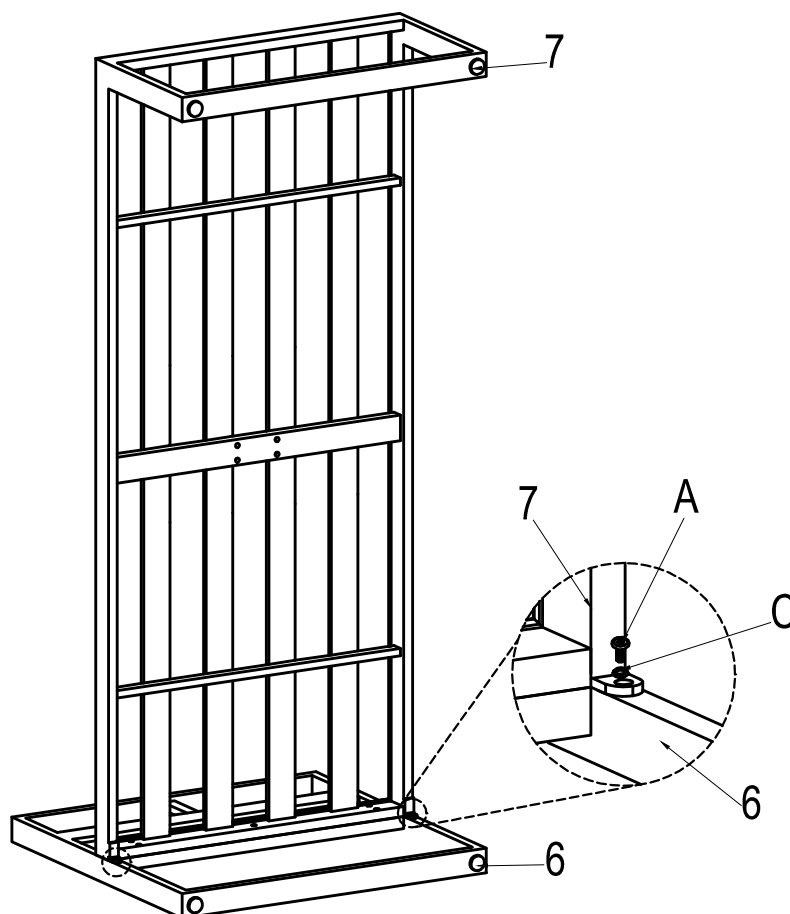- Attach right arm (6) to seat panel (7) using bolt (A) with washer (C) .
- Insert all bolts before fully tightening .
- Tighten with allen key (D) .




Step 2:

ITEMS REQUIRED





B.	Bolt	C.	Washer	D.	Allen Key
					
	M6*35*4PCS		M6*4PCS		M6*1PC

- Attach right arm (6) to seat panel (7) using bolt (B) with washer (C) .
- Insert all bolts before fully tightening .
- Tighten with allen key (D) .

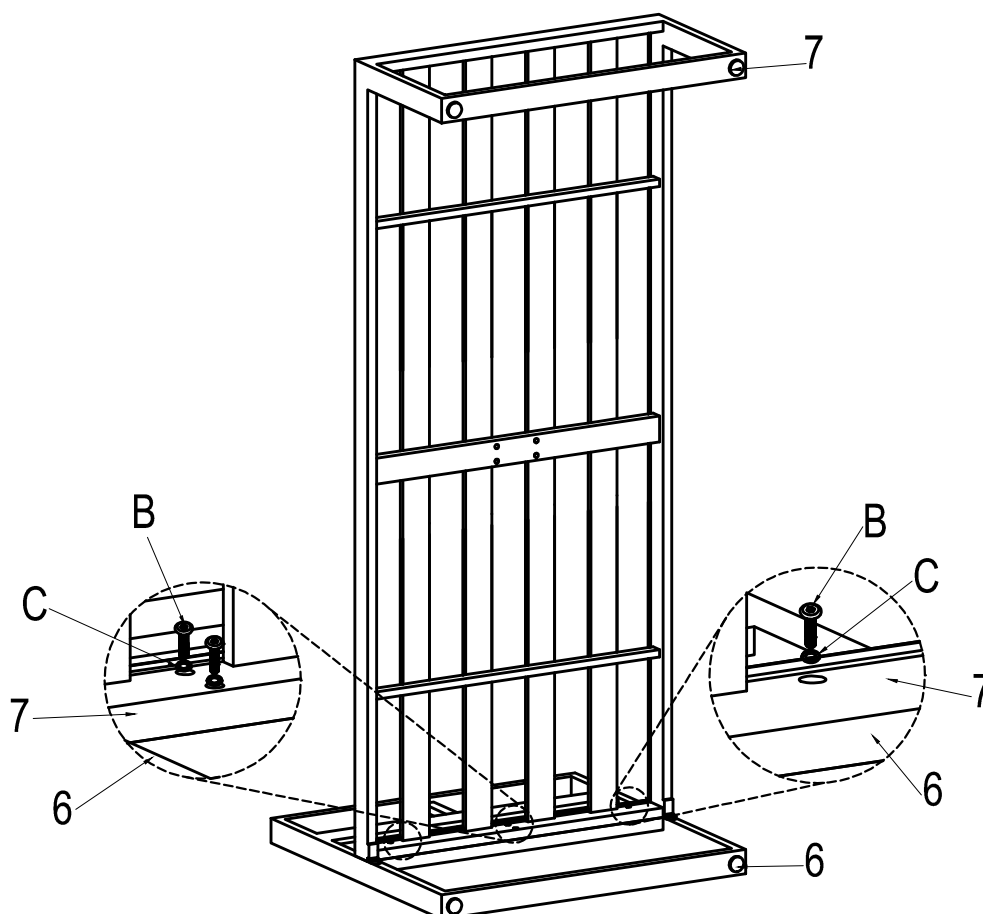


Step 3:


ITEMS REQUIRED


<p>5. Leg 1PC</p> 	<p>A. Bolt</p>  <p>M6*20*4PCS</p>	<p>C. Washer</p>  <p>M6*4PCS</p>	<p>D. Allen Key</p>  <p>M6*1PC</p>
---	--	---	---

- Attach leg (5) to seat (7) using bolt (A) with washer (C) .
- Insert all bolts before fully tightening .
- Tighten with allen key (D) .

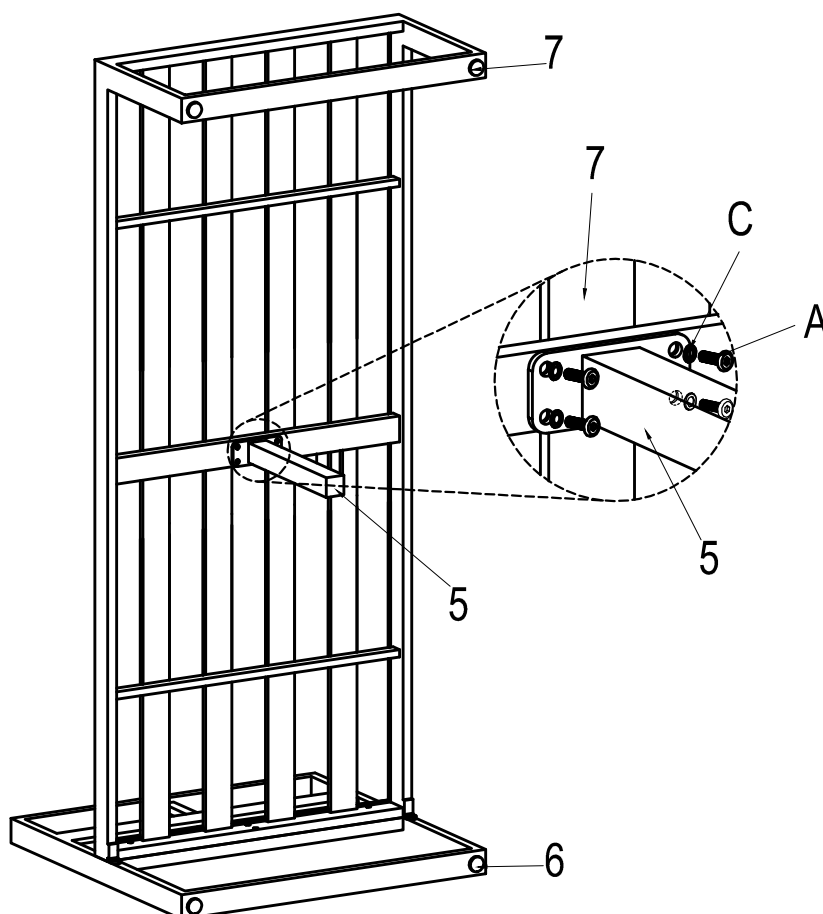

ASSEMBLY IS COMPLETE

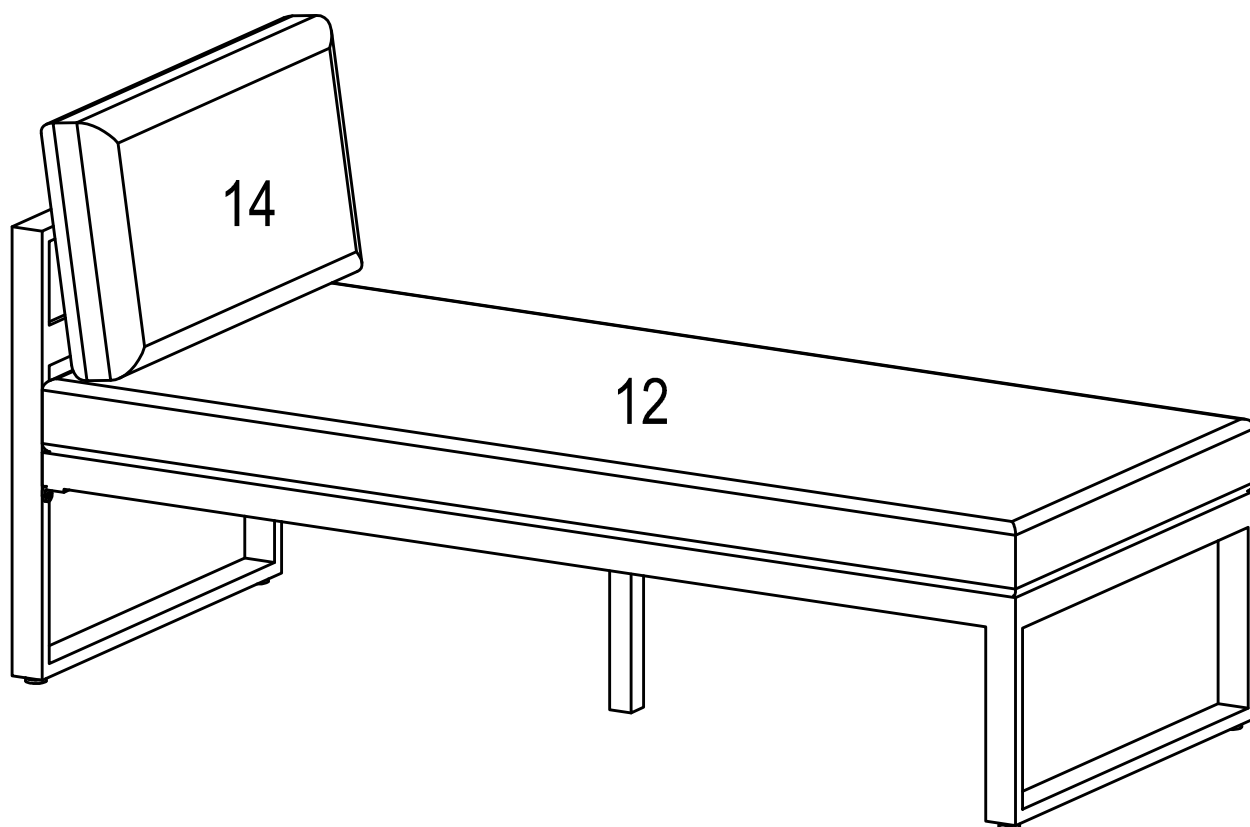

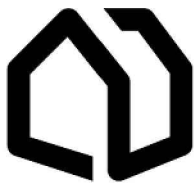


Amart

ASSEMBLY INSTRUCTION

MONTEBELLO 4PC OD LOUNGE SETTING

ITEM CODE - 81290

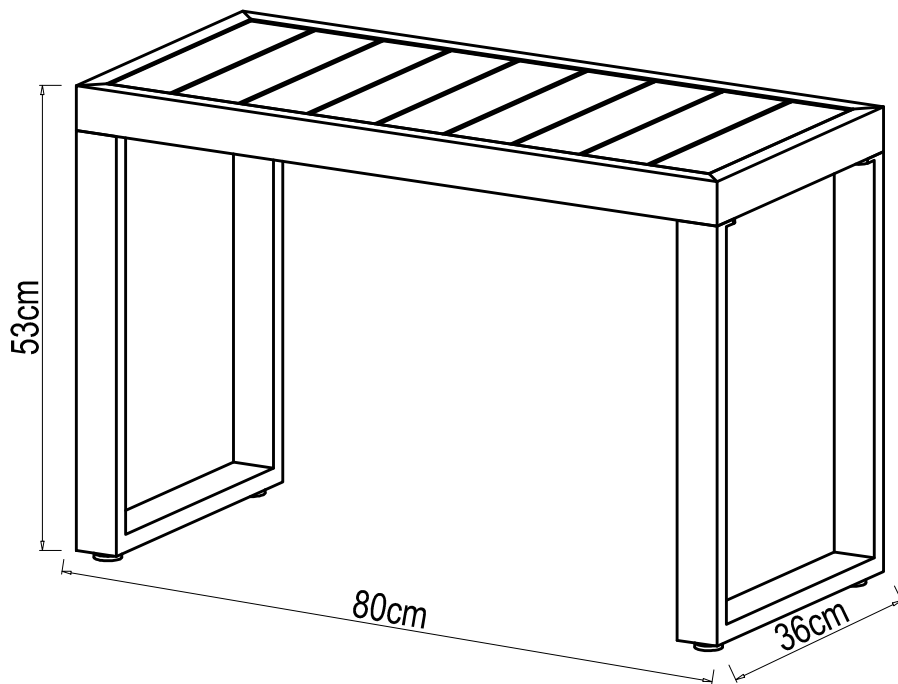

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia .
For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Freecall 1800 351 084


PRE-ASSEMBLY PREPARATION



Before you start:




1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.

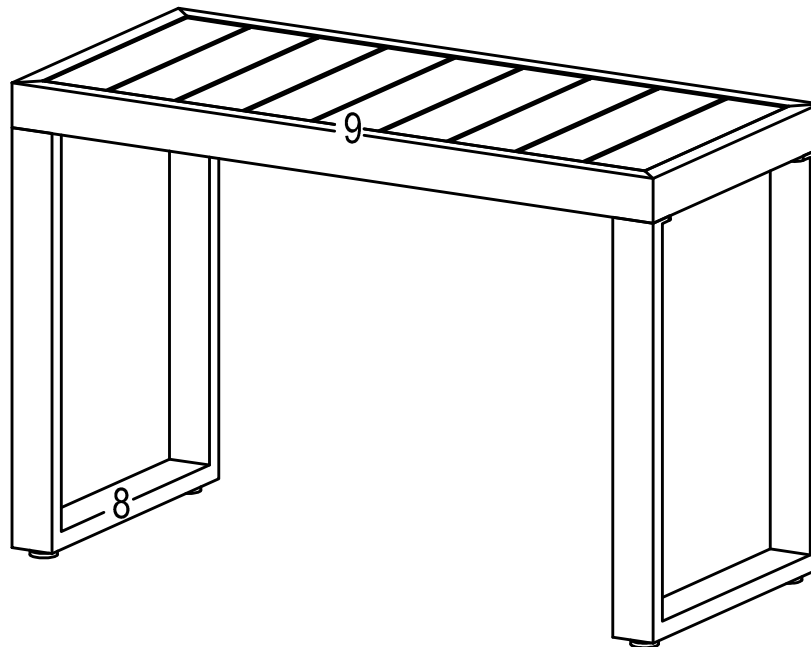

PARTS LIST








8.	Legs		2PCS	9.	Table Top		1PC
----	------	---	------	----	-----------	---	-----


A.	Bolt	C.	Washer	D.	Allen Key
					
M6*20*8PCS	M6*8PCS	M6*1PC			

Step 1:


ITEMS REQUIRED


8.	Legs	2PCS	9.	Table Top	1PC
					
A.	Bolt		C.	Washer	
					
M6*20*8PCS			M6*8PCS		
D.	Allen Key				
			M6*1PC		

- Attach legs (8) to table top (9) using bolt (A) with washer (C) .
- Insert all bolts before fully tightening .
- Tighten with allen key (D) .

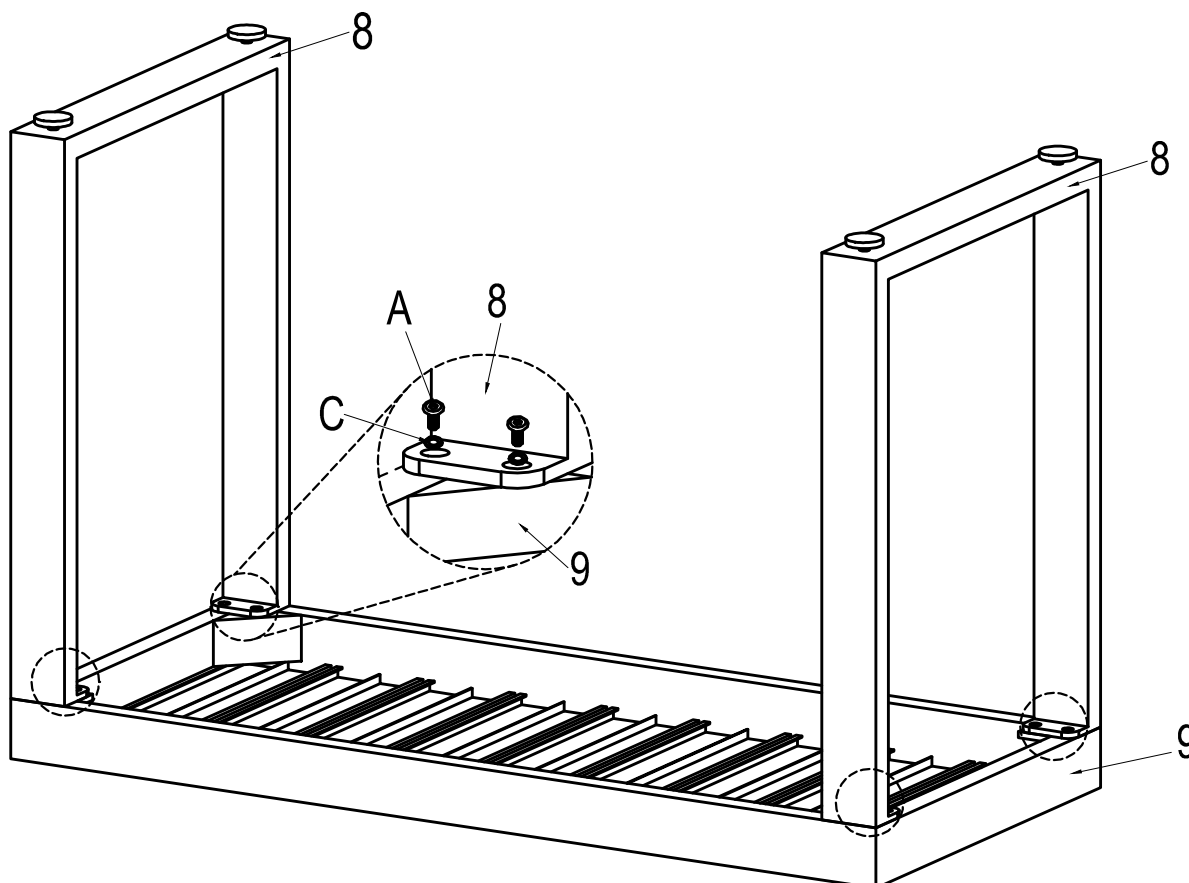

ASSEMBLY IS COMPLETE

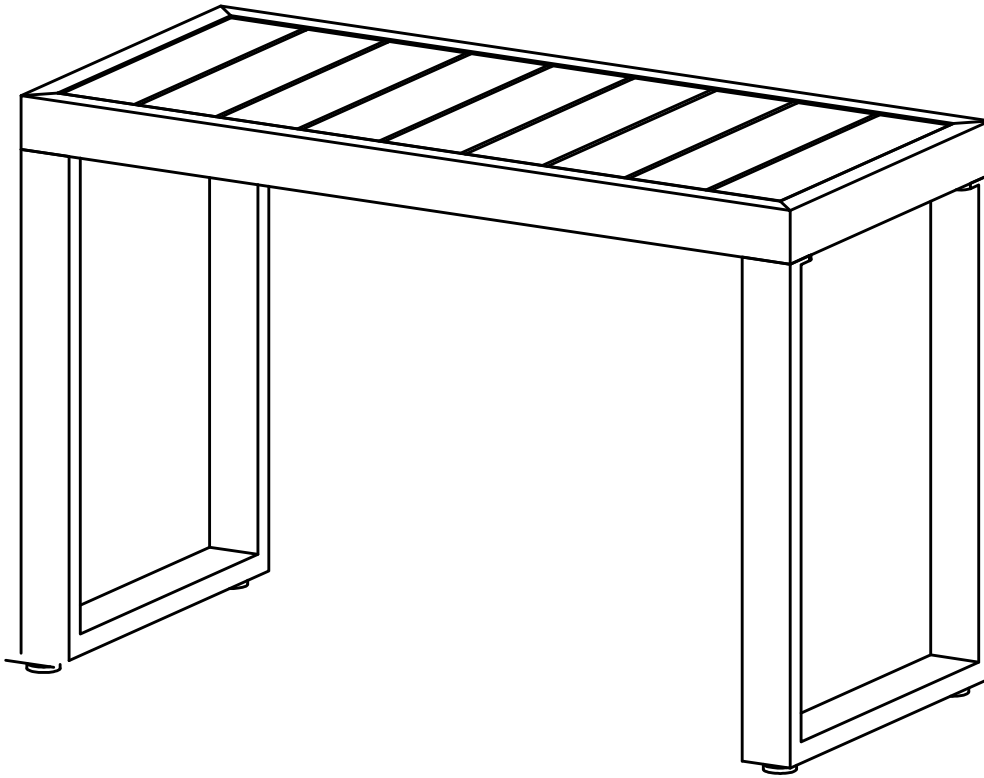

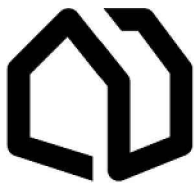


Amart

ASSEMBLY INSTRUCTION

MONTEBELLO 4PC OD LOUNGE SETTING

ITEM CODE - 81290

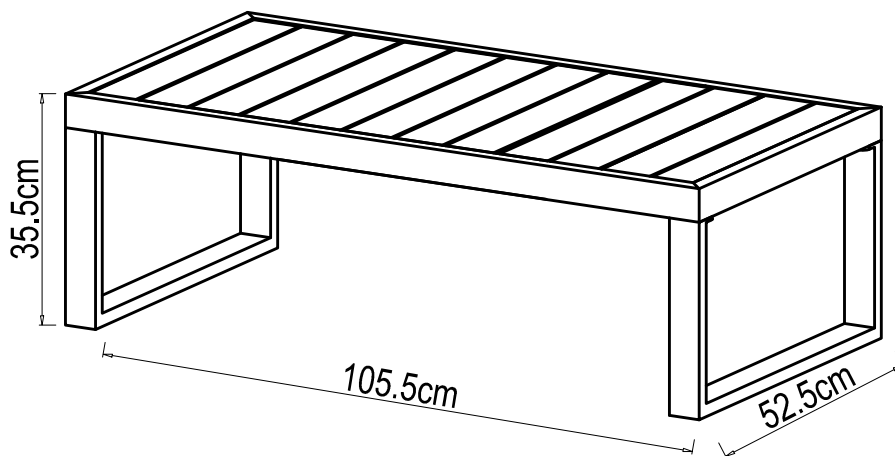


Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia .
For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Freecall 1800 351 084


PRE-ASSEMBLY PREPARATION



Before you start:

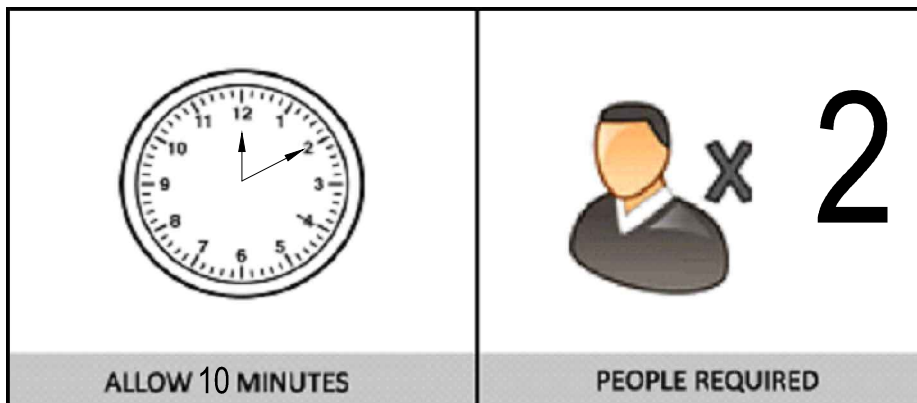


1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.

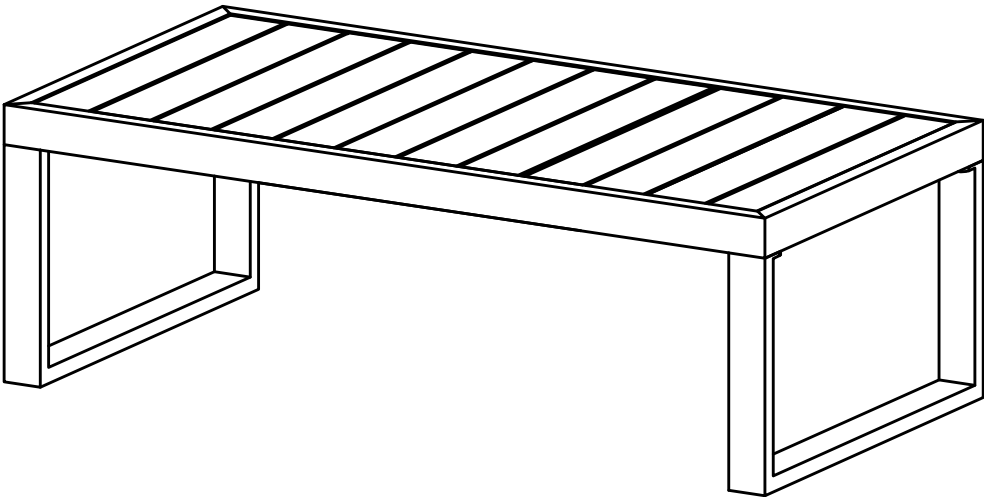

PARTS LIST








10.	Legs		2PCS	11.	Table Top		1PC
-----	------	---	------	-----	-----------	---	-----


A.	Bolt	C.	Washer	D.	Allen Key
					
M6*20*8PCS		M6*8PCS		M6*1PC	

Step 1:


ITEMS REQUIRED

10.	Legs	2PCS	11.	Table Top	1PC
					
A.	Bolt		C.	Washer	
					
M6*20*8PCS			M6*8PCS		
			D.	Allen Key	
					
			M6*1PC		


- Attach legs (10) to table top(11) using bolt (A) with washer (C) .
- Insert all bolts before fully tightening .
- Tighten with allen key (D) .

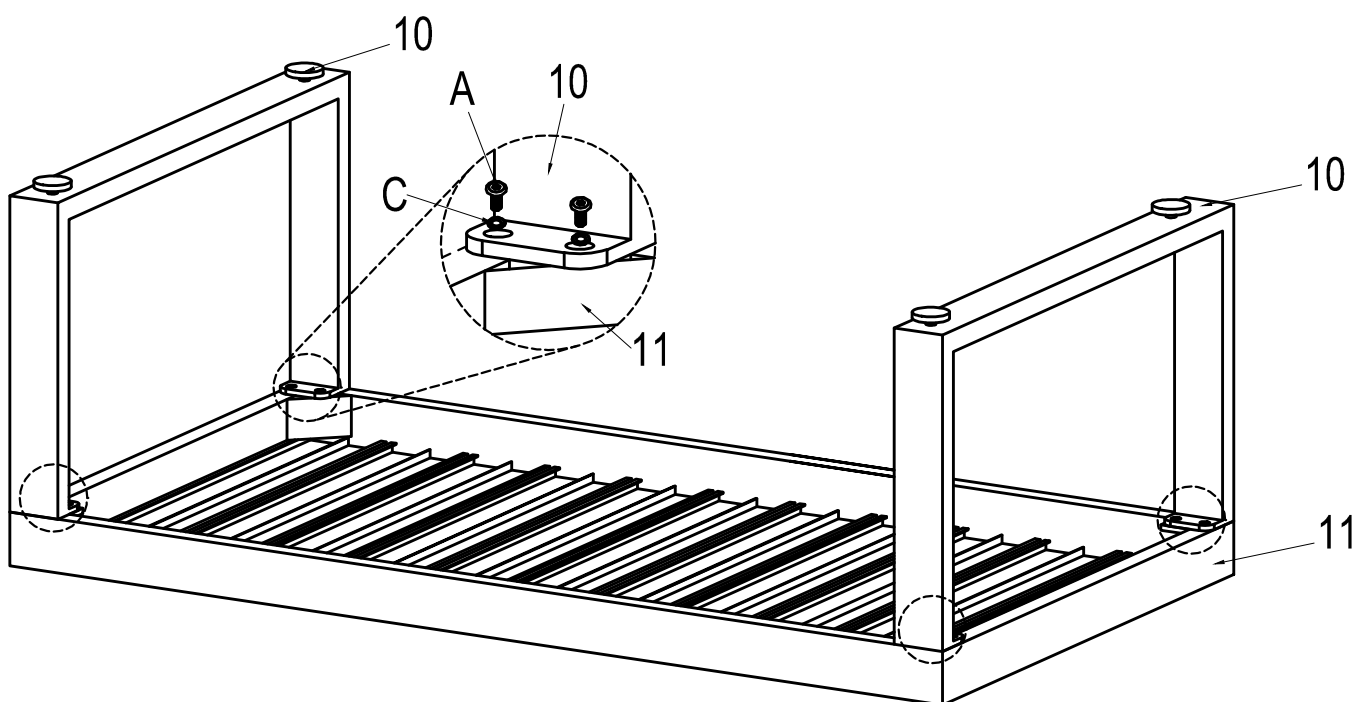

ASSEMBLY IS COMPLETE

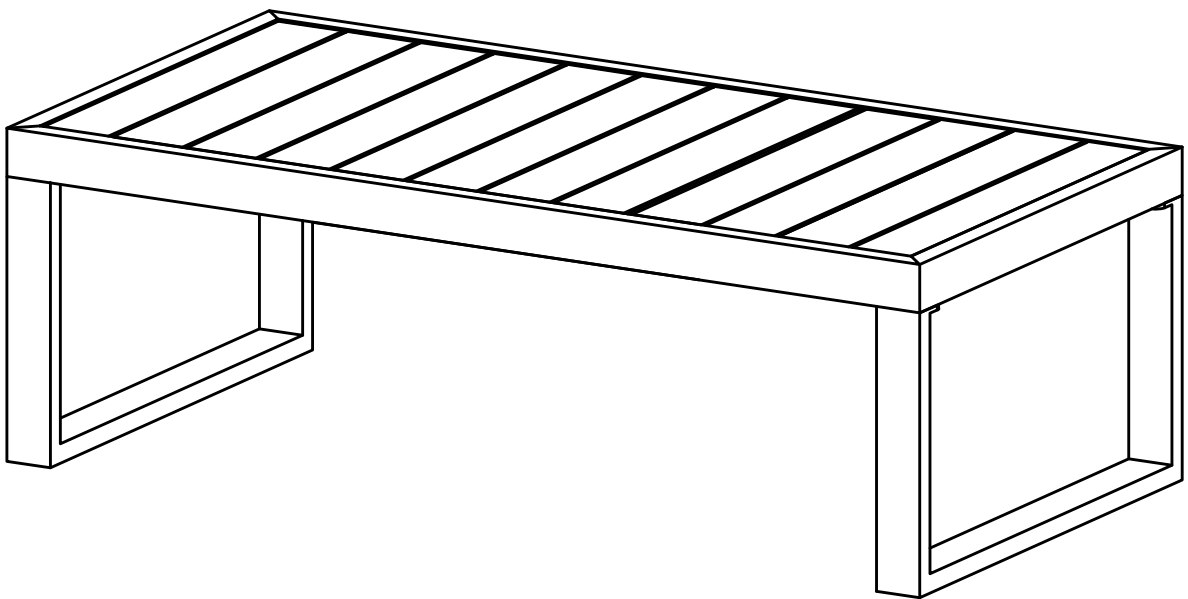

ASSEMBLY IS COMPLETE

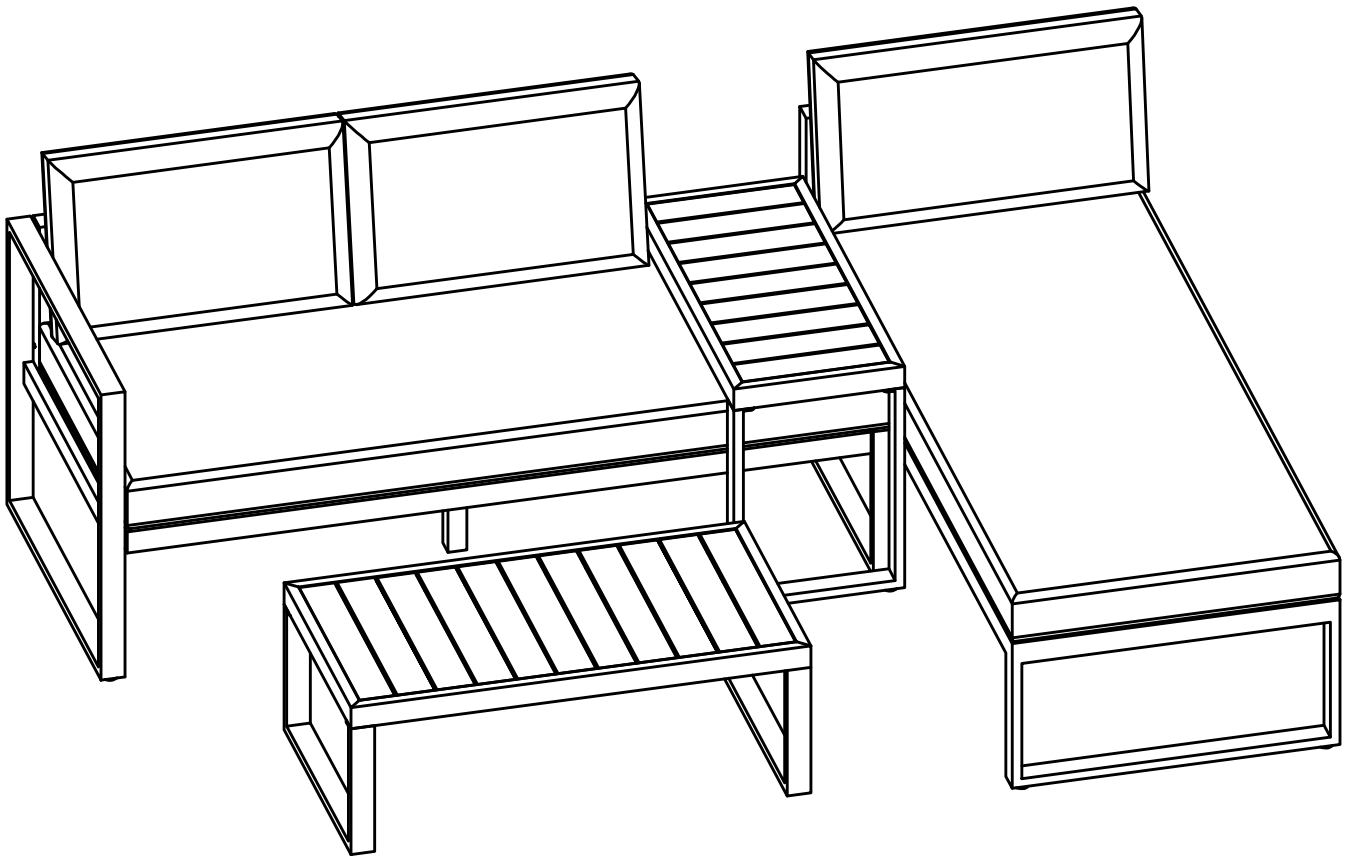

Aluminium

- ☒ Item is designed for use outdoors. However we do not recommend leaving this product outside when not in use. To preserve the life of this item, avoid prolonged exposure to the elements & store inside/under cover or use an outdoor cover.
- ☒ DO NOT allow the furniture to be left in the rain or left wet for extended periods of time.
- ☒ Wipe furniture Dry immediately after it becoming wet.
- ☒ DO NOT clean your furniture down with any harsh solvents, abrasives or chemicals.
- ☒ To remove dirt and grime, simply rinse with fresh water or periodically clean using a sponge and mild detergent solution as required

Cushions

- ☒ Direct exposure to the Sun's harmful UV rays is likely to cause rapid colour fading to fabrics. For best results we recommend avoiding exposure to direct sunlight
- ☒ To ensure product longevity it is recommended outdoor products are not left permanently exposed to the elements
- ☒ Spot clean using mild detergent and damp cloth. Dry flat in shade
- ☒ Do not unzip
- ☒ Do not put in washing machine
- ☒ Do not tumble dry
- ☒ Do not bleach
- ☒ Do not dry clean
- ☒ Cool iron only