




ASSEMBLY INSTRUCTION

DIAMOND 2 SEATER SOFA

ITEM CODE 50951

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.

For any assistance with assembly or for missing parts please phone Amart Furniture, Customer Service Free call 1800 351 084

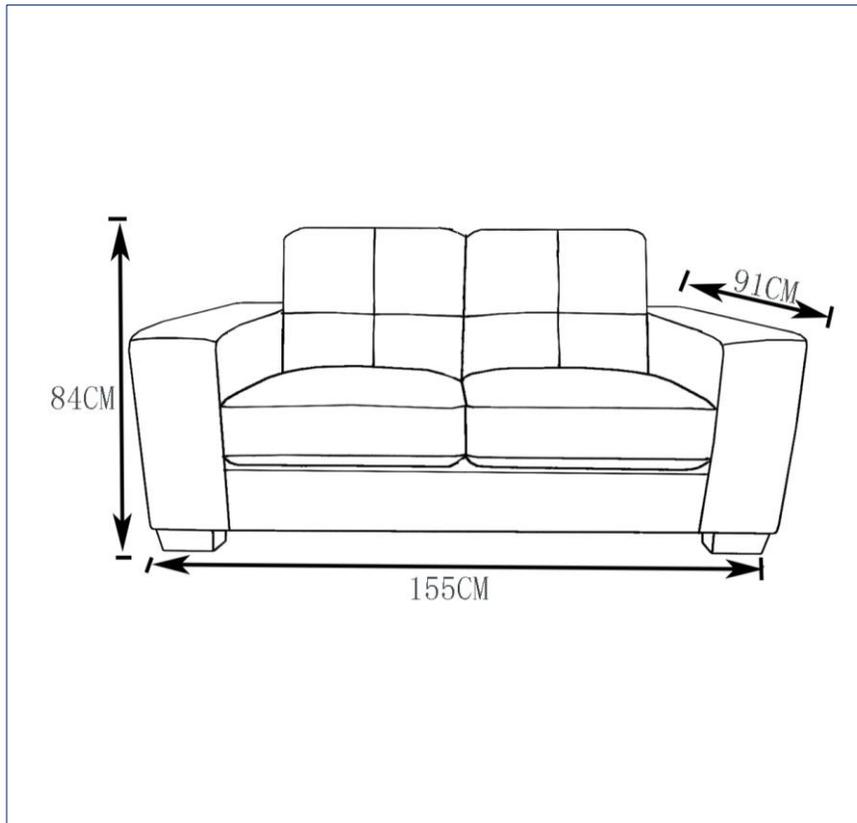

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.

For any assistance with assembly or for missing parts please phone Amart Furniture, Customer Service Free call 1800 351 084


PRE-ASSEMBLY PREPARATION

Before you start:


1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

	
ALLOW 10 MINUTES	1 PEOPLE REQUIRED
	
ADDITIONAL TOOLS REQUIRED	

PARTS LIST

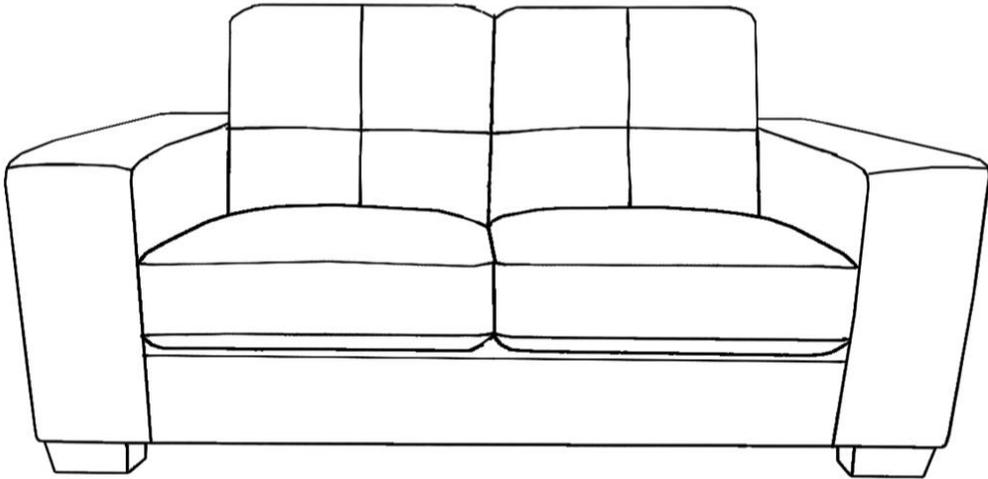


Hardware

<i>HARDWARE LIST</i>		
<i>NO</i>	<i>DESCRIPTION</i>	<i>QTY</i>
<i>A</i>		1PCS
<i>B</i>		1PCS
<i>C</i>	Screw 	12PCS
<i>D</i>	Inclined Sofa Legs 	4PCS

PLEASE TAKE NOTE:
PIECES REQUIRE FOR ASSEMBLY ARE LOCATED INSIDE THE DUST
COVER UNDERNEATH SOFA


Step 1

DETAILS (1) - Align each foot (D) with the pre-threaded holes in the undersides of the sofa as shown in the below diagram. Insert Screw (C) and tighten by turning clockwise using power tool.

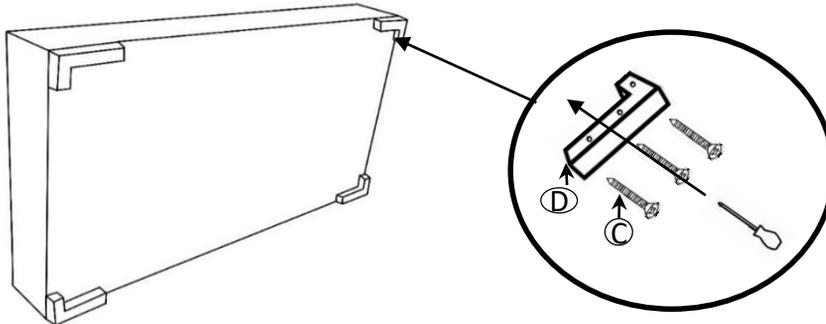


Step 2

DETAILS (2) - When assembling back to arms ,place Bracket B Into Sleeve A ,and press top of back down firmly to lock the retaining clip into place. Listen for the clip to pop into place – and your KD back is securely in place!

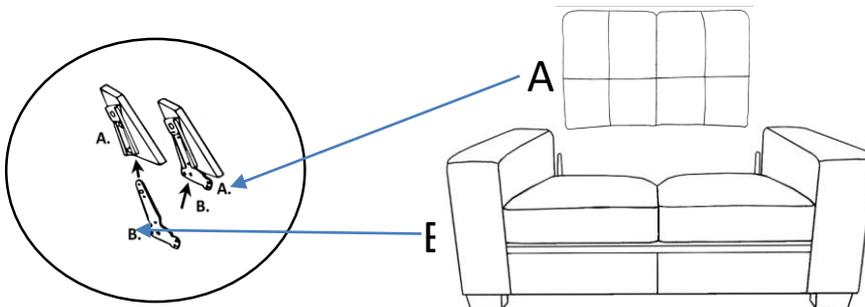

Step 3 ASSEMBLY COMPLETED

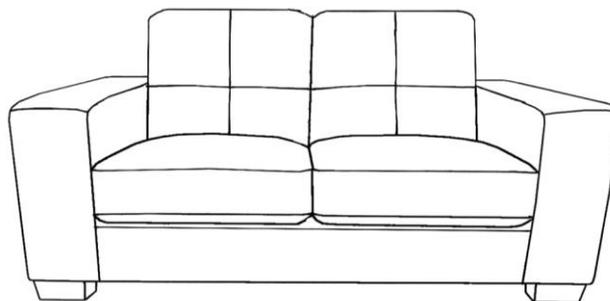

IMPORTANT:

PLEASE ENSURE FEET ARE TIGHTENED SECURELY BEFORE USE!

CARE LABEL

PU CARE

WHEN NECESSARY BRUSH OR VACUUM AWAY DUST AND GRIT. WIPE OVER WITH A SOFT, CLEAN, DYEFAST CLOTH.

FOR SPOTS AND SPILLS:

WIPE EXCESS LIQUID UP IMMEDIATELY WITH AN ABSORBENT CLOTH OR SPONGE.

NOTES:

ACCUMULATION OF PERSPIRATION AND BODY OILS ON ARMPADS, HEADREST ETC. MAY

DAMAGE YOUR PU - THESE AREAS MAY REQUIRE MORE FREQUENT CLEANING.

DO NOT EXPOSE PU TO DIRECT SUNLIGHT; INTENSIVE HEAT; WEATHER; OR SOAK UNNECESSARILY. ALWAYS AVOID EXCESSIVE HARD RUBBING.

DO NOT DRY CLEAN OR MACHINE WASH.

DO NOT USE SADDLE SOAP; DETERGENTS; SOLVENTS; ABRASIVES; UNIDENTIFIED PU CLEANERS; SUEDE CLEANERS OR ANY PRODUCTS CONTAINING SILICON OR SOLVENTS.