




ASSEMBLY INSTRUCTION

AVA KING BED

ITEM CODE 67601

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.  
For any assistance with assembly or for missing parts please  
phone Amart Furniture, Customer Service Free call 1800 351  
084

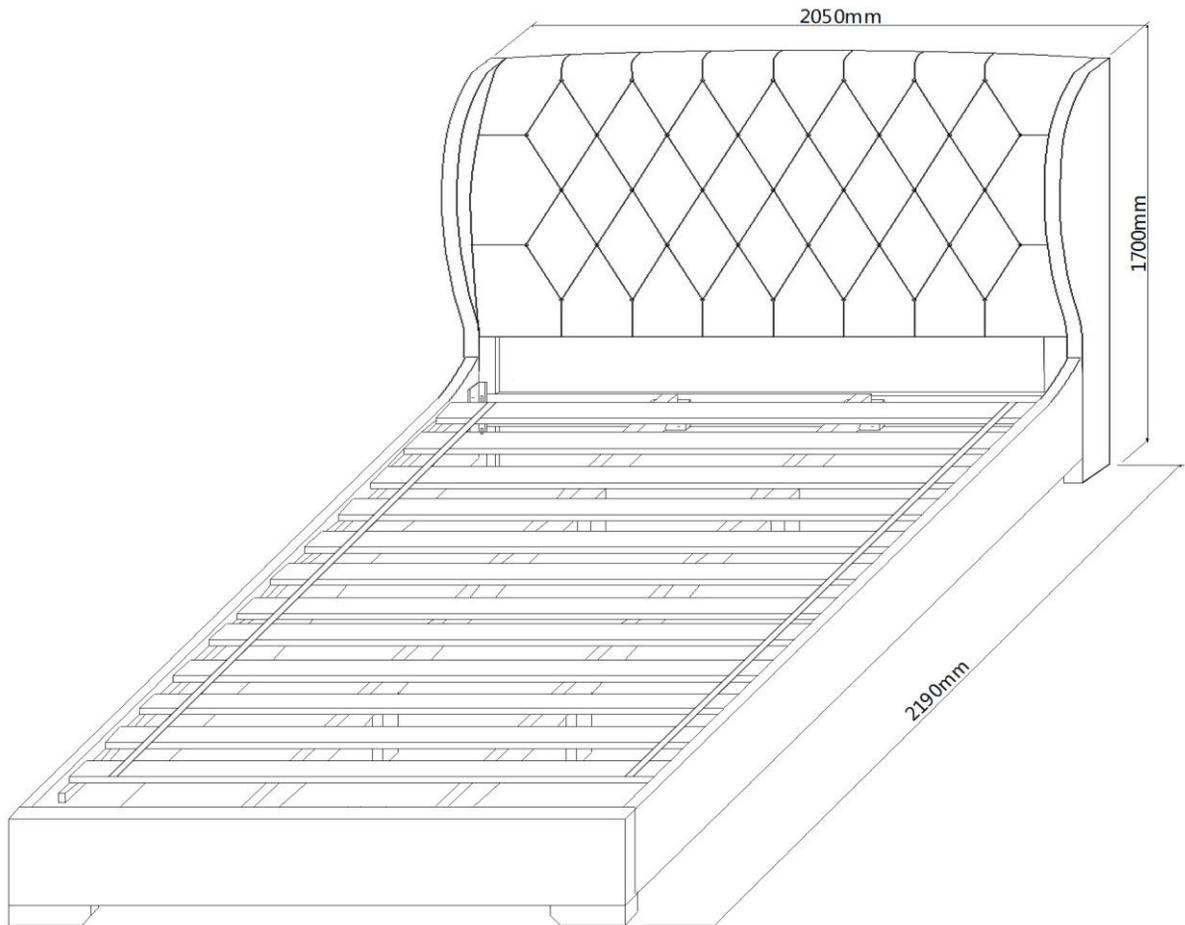



Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.


For any assistance with assembly or for missing parts please phone  
Amart Furniture, Customer Service Free call 1800 351 084

## PRE-ASSEMBLY PREPARATION


### Before you start:


1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

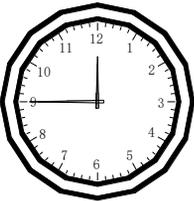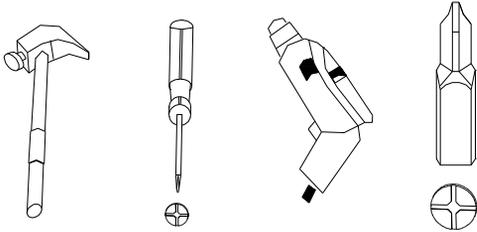
	
ALLOW 45 MINUTES	2 PEOPLE REQUIRED
	
TOOLS REQUIRED	

		<p>We recommend using a screwdriver to put this item together. However if you choose to use a power drill it must be used on <b>LOW SPEED (LOW TORQUE)</b> as too much pressure could damage the product</p>
		

# PARTS LIST

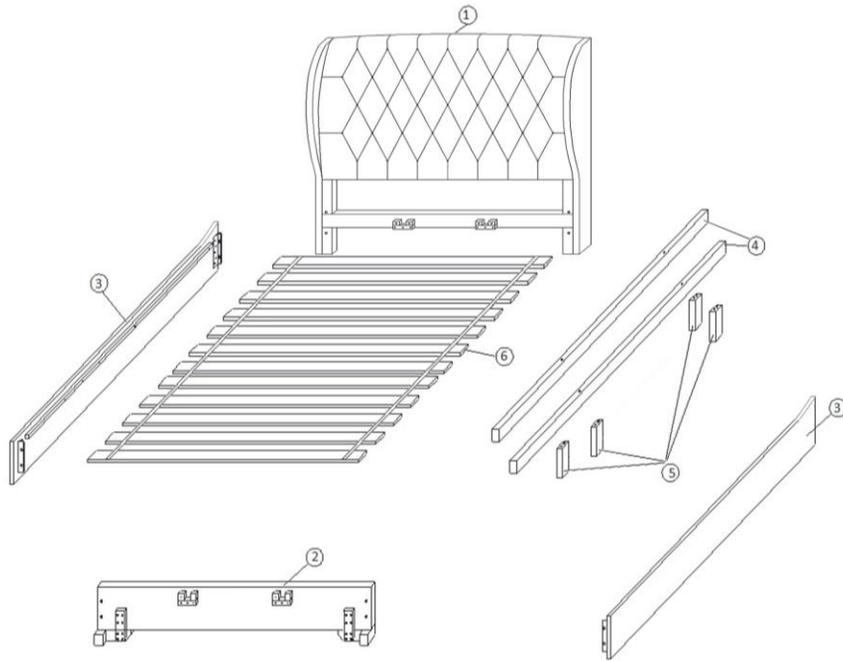

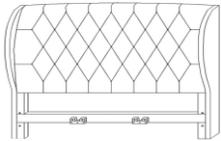
<p>1、 HEADBOARD: 2070*250*1700mm=1PCS</p> 	<p>2、 FOOTBOARD: 1840*280*40mm=1PCS</p> 
<p>3、 SIDERAIL: 2050*280*40mm=2PCS</p> 	<p>4、 CENTRE RAIL: 2050*40*60=2PCS</p> 
<p>5、 SUPPORT LEGS: 230*60*40=4PCS</p> 	<p>6、 SLATS : 1840*85*18=12PCS</p> 


<p>A. BOLT 5/16"X32MM</p>  <p>8PCS</p>	<p>B. BOLT 5/16"X60MM</p>  <p>4PCS</p>	<p>C. ALLEN KEY</p>  <p>1PCS</p>	<p>D. SCREW 4X30MM</p>  <p>6PCS</p>
<p>E. FLAT WASHER</p>  <p>8PCS</p>	<p>F. LOCK WASHER</p>  <p>8PCS</p>		

# ITEMS REQUIRED

# 1

C. ALLEN KEY	A. BOLT 5/16"X32MM	F. LOCK WASHER	E. FLAT WASHER
			
1PCS	8PCS	8PCS	8PCS

- Attach side rail (3) to headboard (1) and footboard (2) using flat washer (e), lock washer (f) and bolts (a).
- Tighten with Allen Key (c).

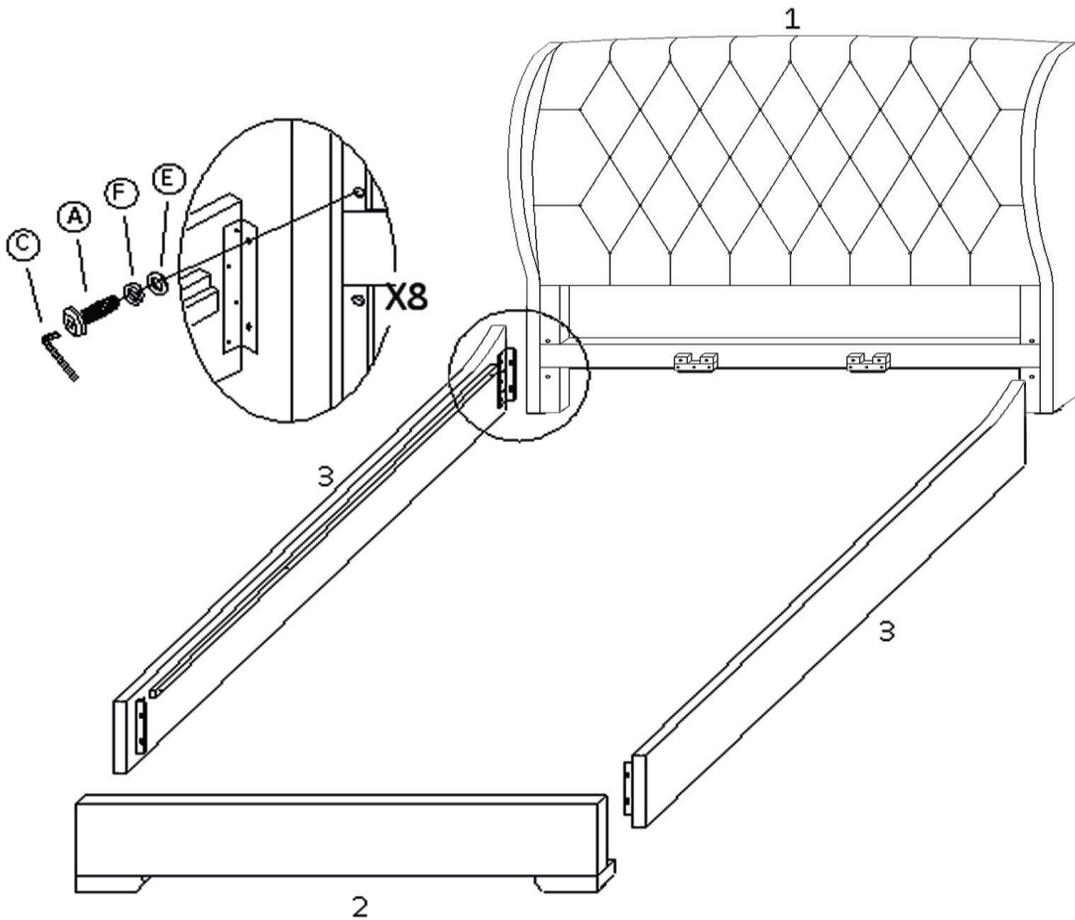


## ITEMS REQUIRED


# 2



- Attach support legs (5) to centre rail (4) with
- bolts (b)
- Tighten with allen key (c)

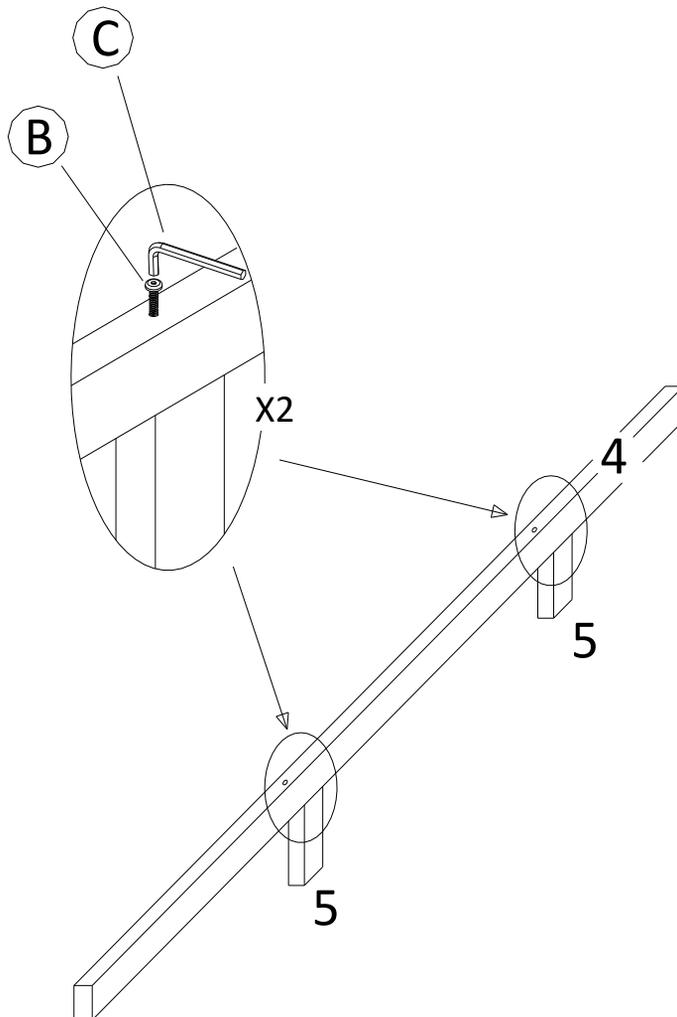


- 3.** Put centre rail (4) between head board (1) and foot board (2) .

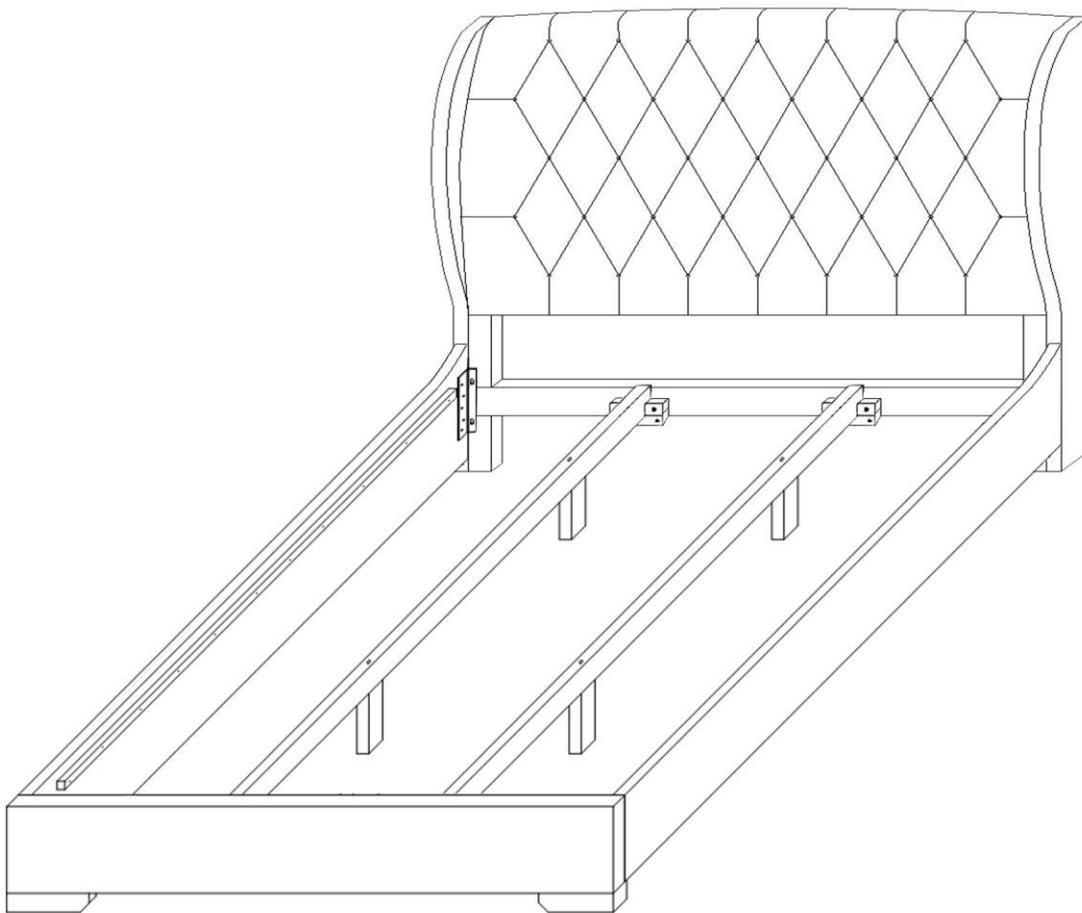


## ITEMS REQUIRED


# 4

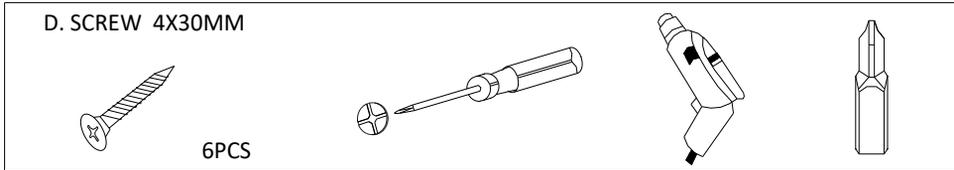

- Attach slats (6) to siderail (3) using screws (d).
- Use Screwdriver or Power Drill on Low Speed.

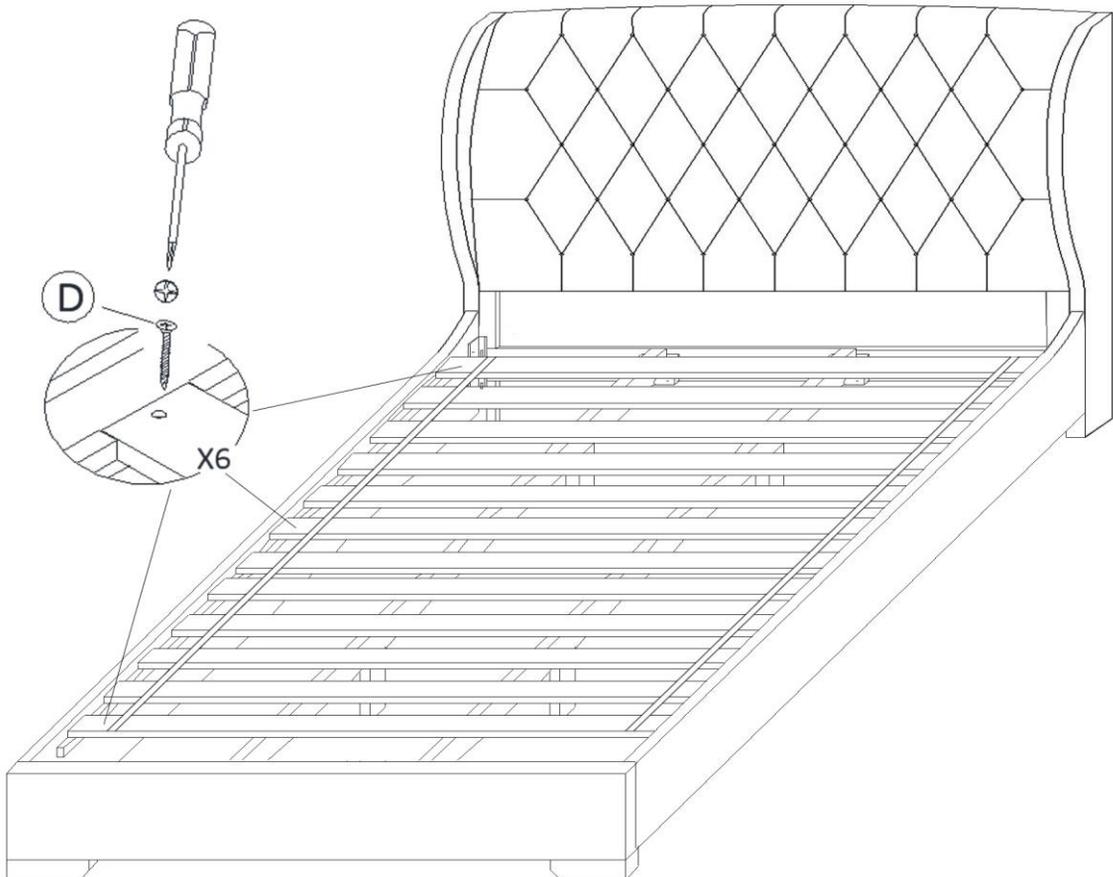

**ASSEMBLY IS COMPLETE**

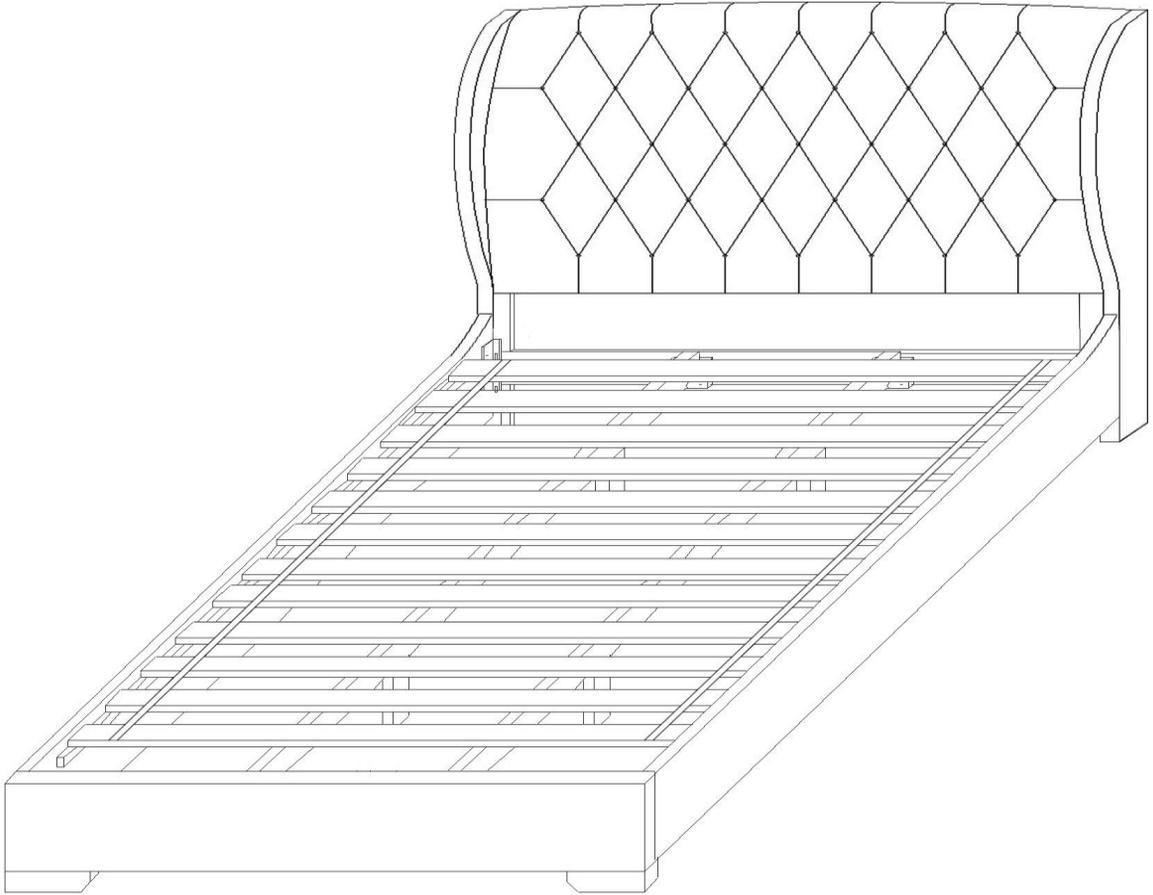

**CAUTION**

**ALWAYS LIFT YOUR BED WHEN MOVING/RELOCATING – DO NOT DRAG.  
DRAGGING CAN CAUSE THE CENTRE SUPPORT LEGS TO BEND/BREAK**

# Care and maintenance



## **REGULAR CARE:**

- Protect from direct sunlight
- Vacuum regularly using low suction
- Rotate reversible cushions regularly

## **CLEANING:**

- Do not remove cushion covers for separate cleaning even though they may have zippers
- Do not wash , Do not dry clean , Do not shampoo clean
- Clean with hot water extraction machine. Professional cleaning recommended
- Do not use dishwashing liquid or laundry detergent
- Use only upholstery detergents
- Do not wet filling
- Dry in shade away from direct heat and sunlight
- Allow to dry thoroughly before re-use

## **SPOT CLEANING:**

- Do not rub
- Do not spot clean with any solvent
- Treat spills and stains as soon as possible
- Gently scrape off any soil or mop any liquid from the surface of the fabric
- Apply proprietary cleaning agents strictly according to instructions to remove the residue of the spill
- Do not saturate the fabric or interior with water or other cleaning liquids

## **WARNING:**

Apply only water-based soil resist (fabric protection) treatments. Do not use aerosol products

\* PILLING IS NOT A FABRIC DEFECT OR FAULT AND IS NOT COVERED BY WARRANTY

\* PILLING IS A NORMAL OCCURRENCE CAUSED BY WEAR AND TEAR AND DOES NOT AFFECT THE DURABILITY OR FUNCTIONALITY OF THE FABRIC AND IS EASILY REMOVED