


ASSEMBLY INSTRUCTION

Spacemaster Babylon Extra Large Robe Frame

ITEM CODE 54936

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.

For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Free call 1800 937 566

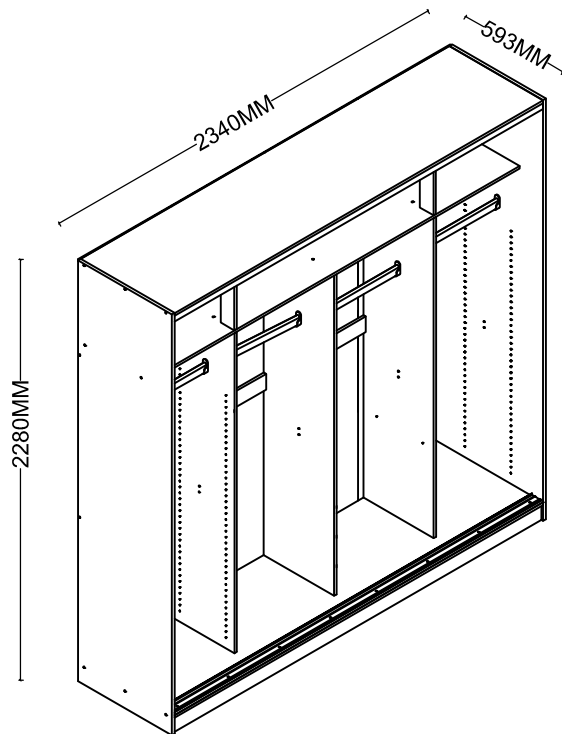

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.





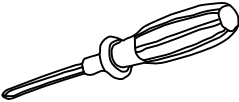
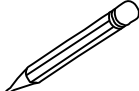

For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Free call 1800 937 566

Item Code- 54936


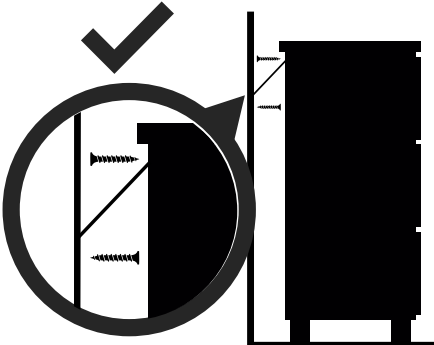

PRE-ASSEMBLY PREPARATION


Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.

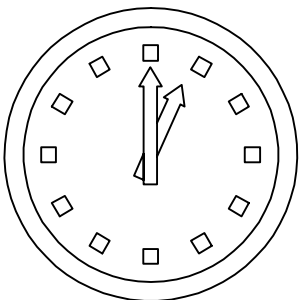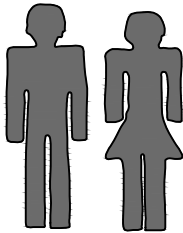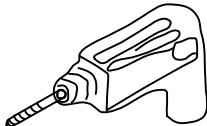 160min	 2 People Required	IF REQUIRED  Low speed (Ø6mm)
    ADDITIONAL TOOLS REQUIRED		

WARNING

		<p>Children have died from furniture tipover.</p> <ul style="list-style-type: none">• ALWAYS secure it with an anchor device.• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.• NEVER open more than one drawer at a time.• Place heavy items down low <p>NEVER put a TV on this furniture </p> <p>This is a permanent label. Do not remove!</p>
---	---	---

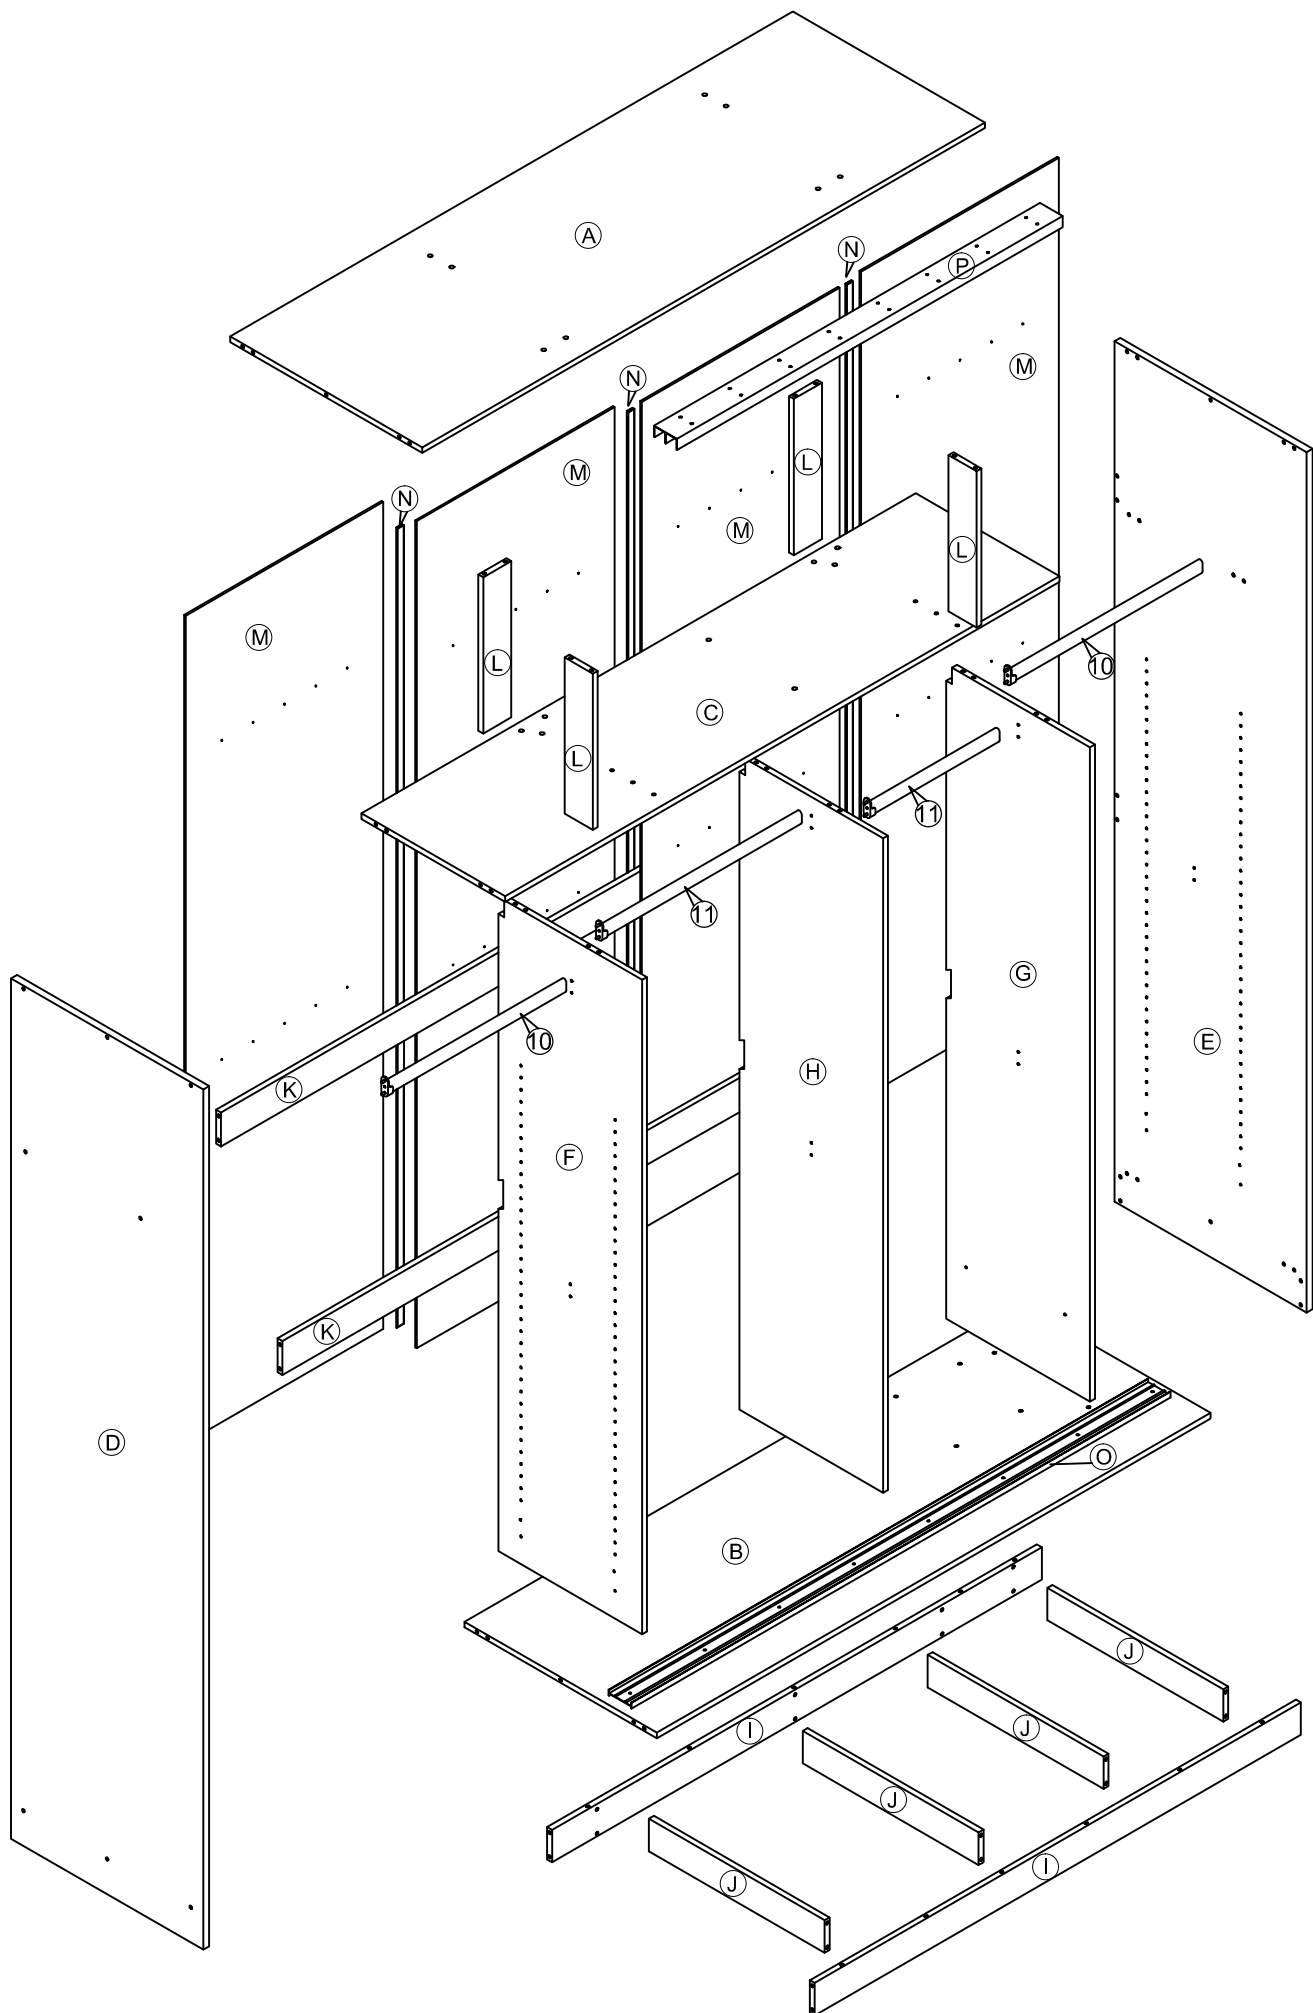


Item Code- 54936


Panel(Mark)	Packing carton	Quantily	Picture	Dimension
A	(Box 2)	1 PC		2305*588*15mm
B	(Box 2)	1 PC		2305*588*15mm
C	(Box 2)	1 PC		2305*440*15mm
D	(Box 1)	1 PC		2280*591*18mm
E	(Box 1)	1 PC		2280*591*18mm
F	(Box 3)	1 PC		1730*440*15mm
G	(Box 3)	1 PC		1730*440*15mm
H	(Box 3)	1 PC		1730*440*15mm
I	(Box 2)	2 PCS		2305*90*15mm
J	(Box 3)	4 PCS		537*90*15mm
K	(Box 2)	2 PCS		2305*90*15mm
L	(Box 3)	4 PCS		414*90*15mm
M	(Box 1)	4 PCS		2190*581*5mm
N	(Box 1)	3 PCS		2158*15*9mm
O	(Box 2)	1 PC		2304*70*15mm
P	(Box 2)	1 PC		2304*65*30mm



① 76 PCS Ø8 x 30 mm	② 40 PCS Ø10xM7x49 mm	③ 26 PCS Ø15 x 5 mm	④ 16 PCS 4 x 18mm	⑤ 8 PCS 4 x 22mm	⑥ 72 PCS 3.5 x 14 mm	⑦ 40 PCS Ø9 x Ø3 x 14 mm
⑧ 94 PCS Ø3 x M1.5 x18mm	⑨ 8 PCS 40*20*13mm	⑩ 2PC 514x 15 x 28 mm	⑪ 2PCS 600x 15 x 28 mm	⑫ 16 PCS 29x 18 x 18 mm	⑬ 1 PC Ø4 x 60 x 20mm	⑭ 3 PCS 20 x 40 x 1.2mm
⑮ 3 PCS Ø9 x Ø6 x 25mm	⑯ 3 PCS Ø9 x Ø4 x 15mm	⑰ 3 PCS Ø9 x Ø4 x25mm				

Please note - All Hardwares in box 2.




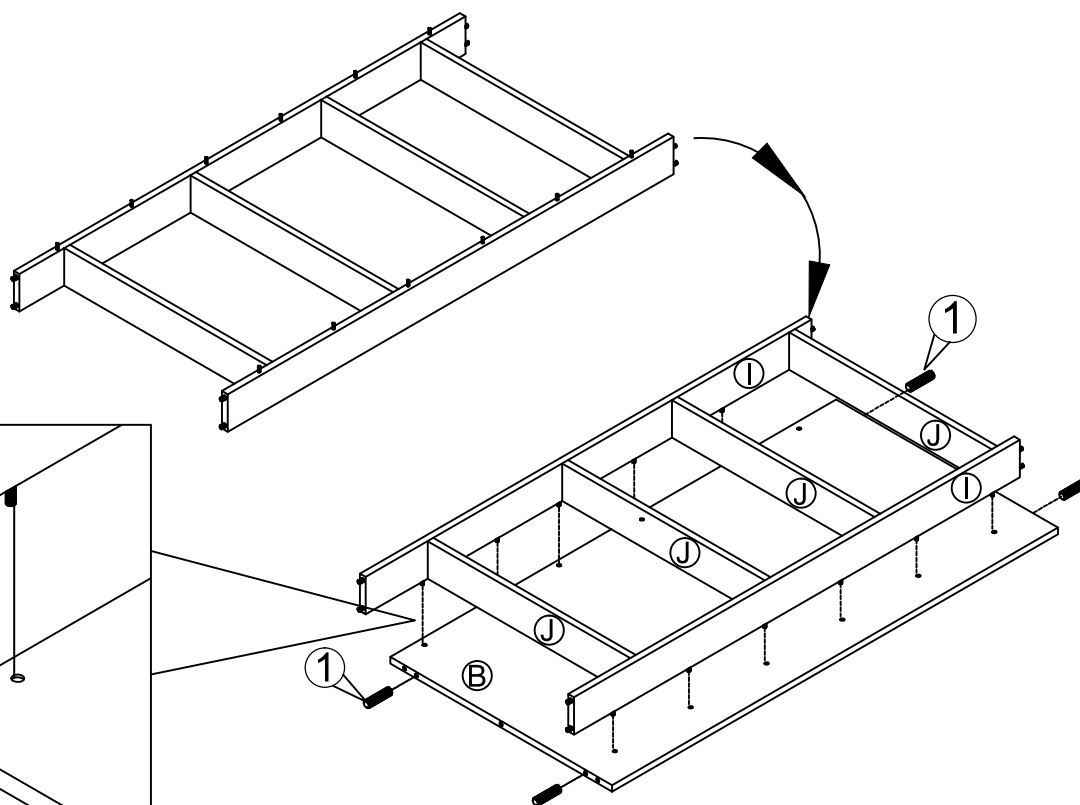
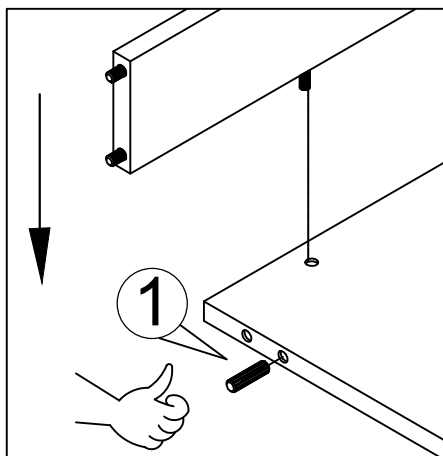
1

 ① x 36

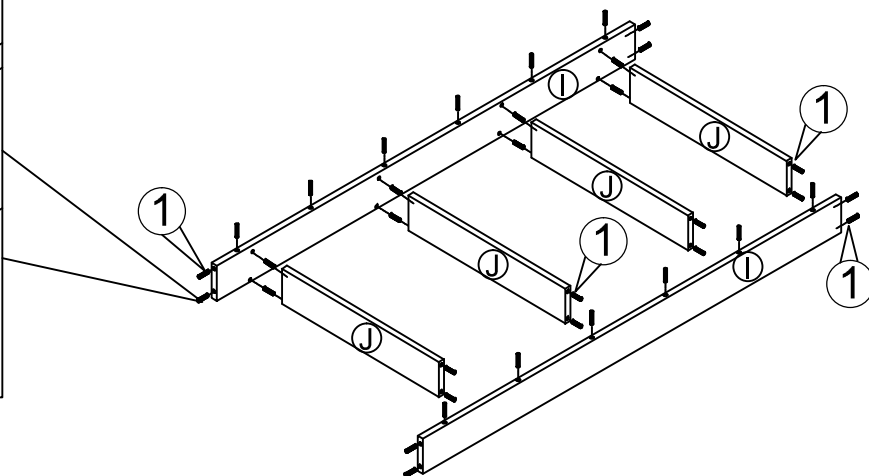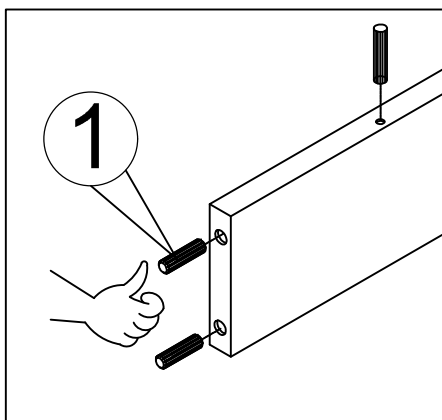

2



 ① x 4



3



⑥ x 64

⑫ x 16

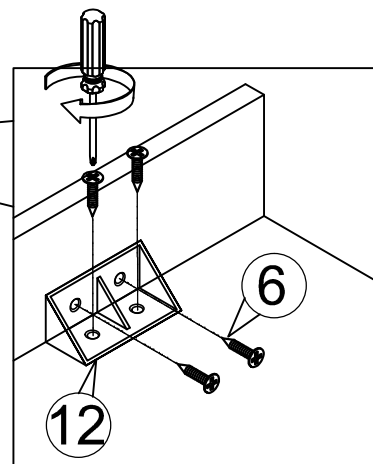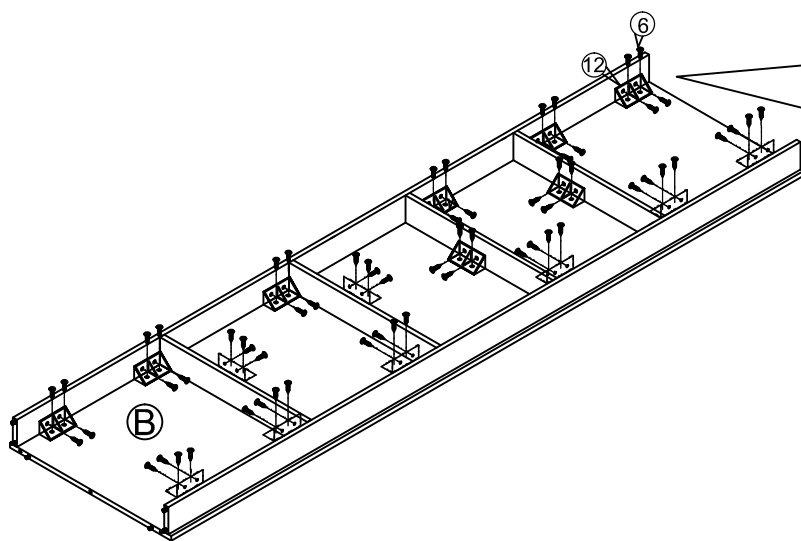




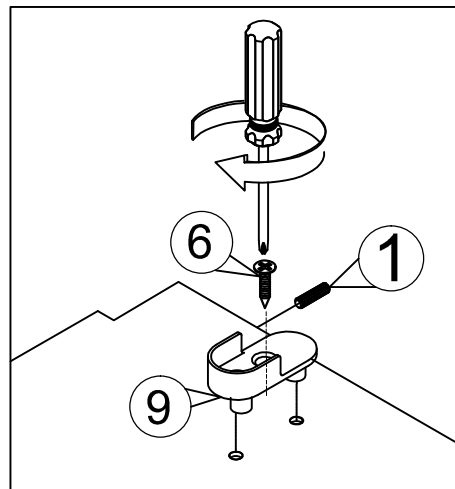
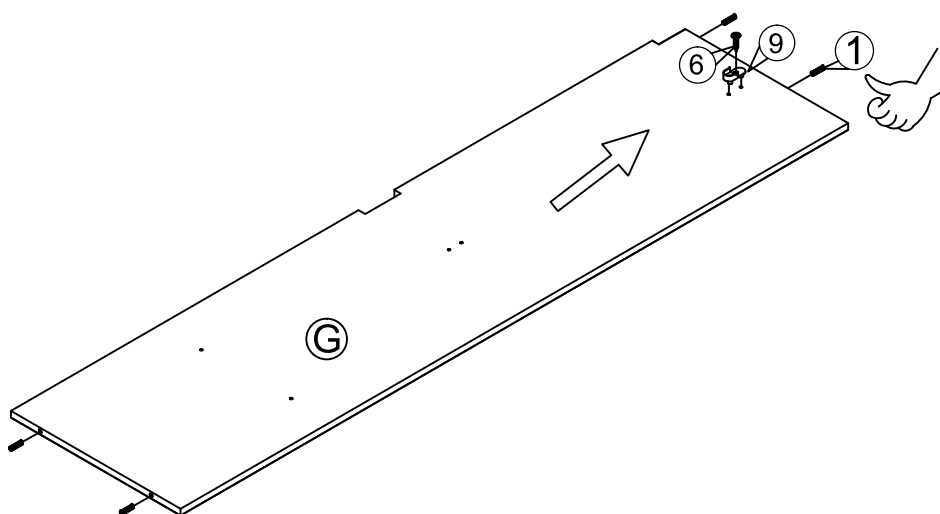
4

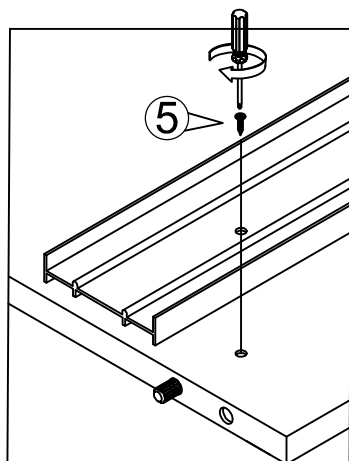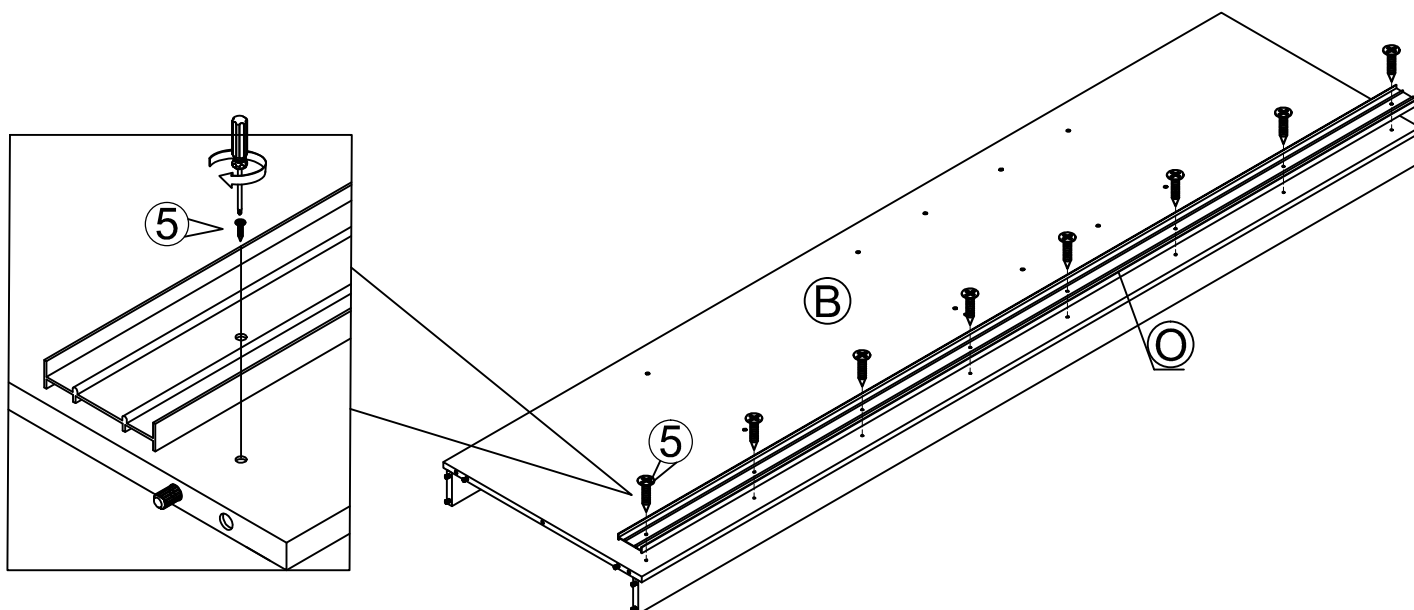⑤ x 8





5

-  ① x4
  ⑥ x1
  ⑨ x1





6

-  ⑥ x1
  ⑨ x1

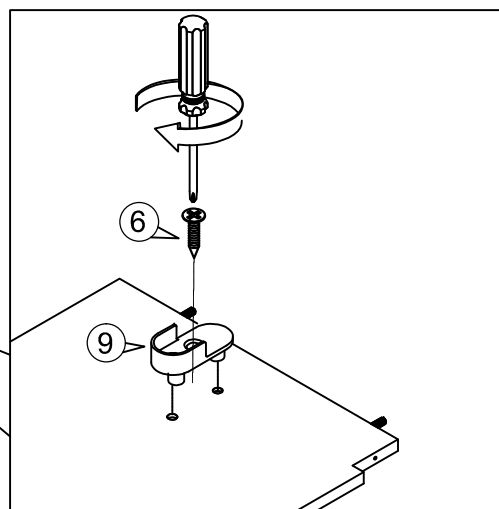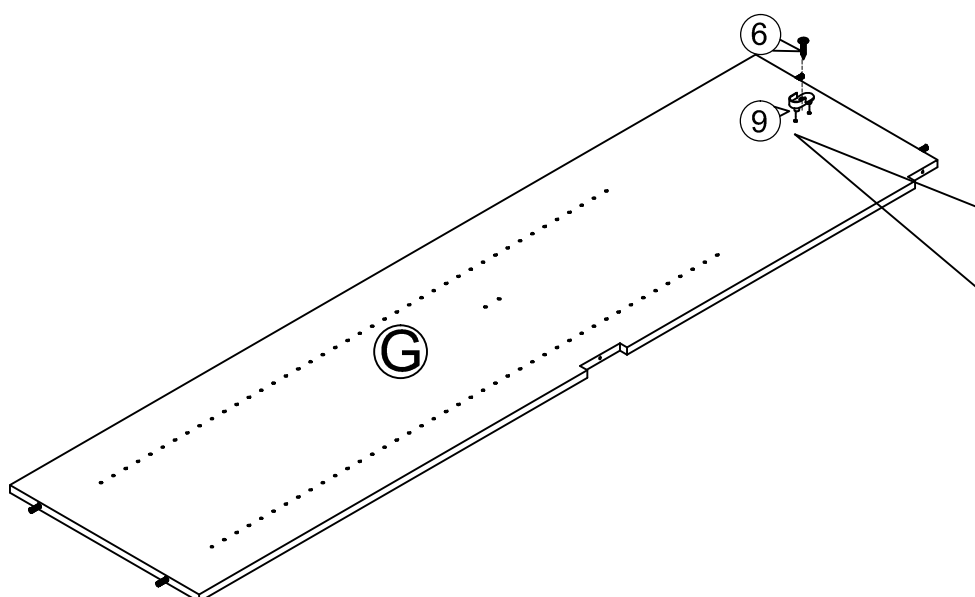



7

- ① x4
- ⑥ x1
- ⑨ x1

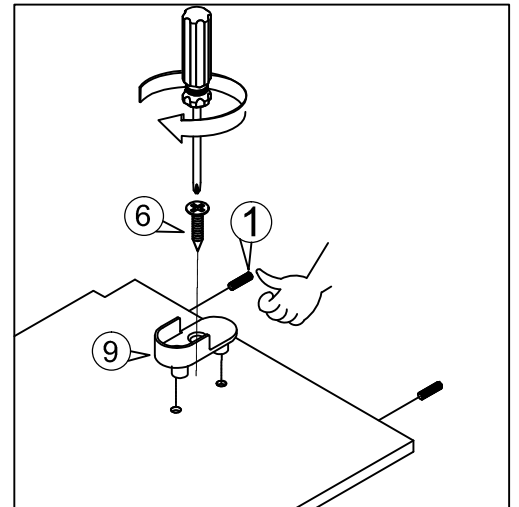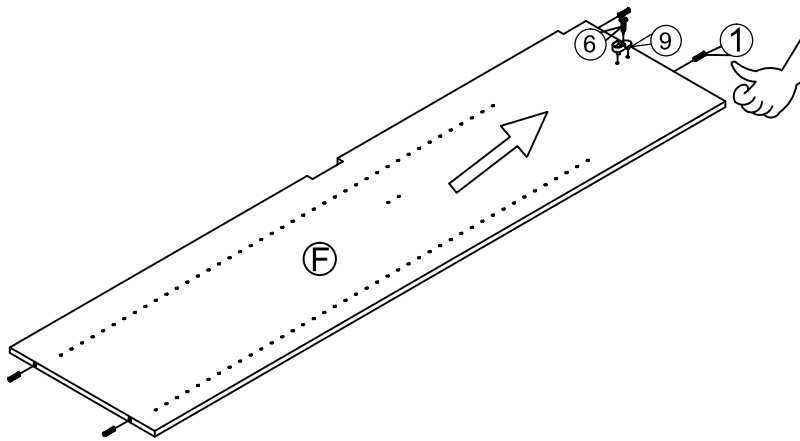



8

- ⑥ x1
- ⑨ x1

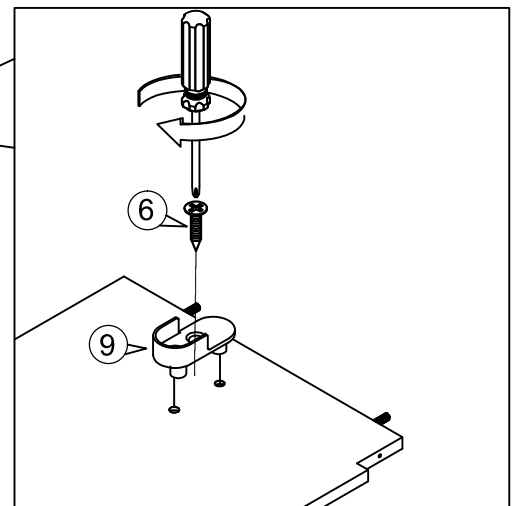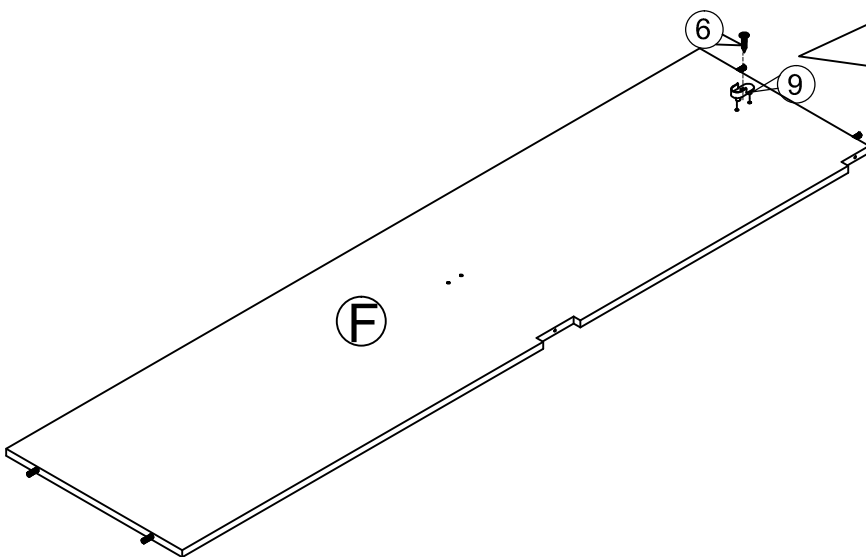



9

- ① x4
- ⑥ x1
- ⑨ x1

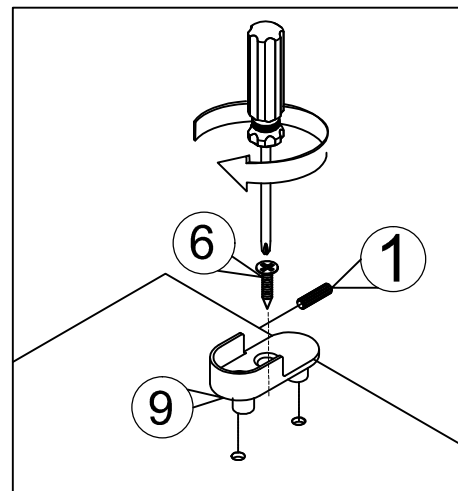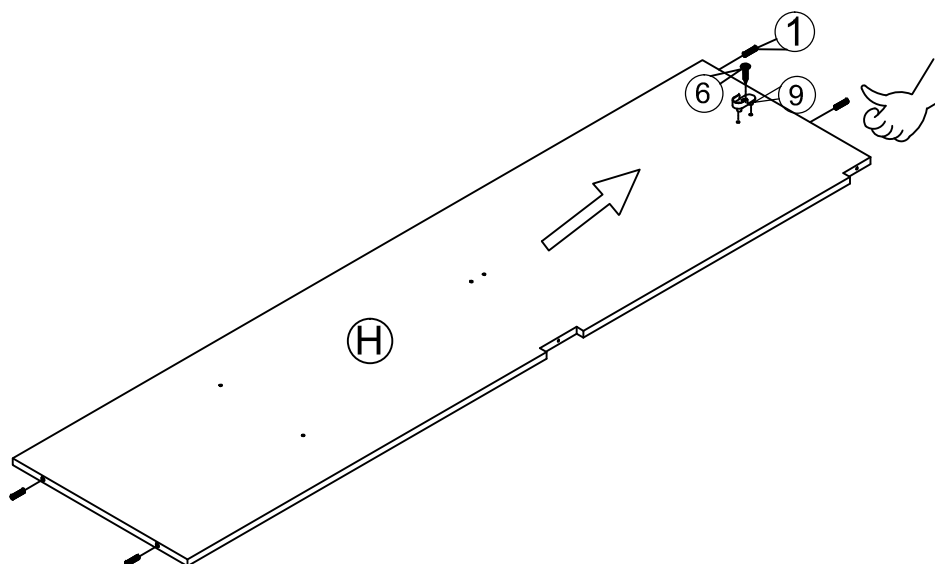


10

- ⑥ x1
- ⑨ x1

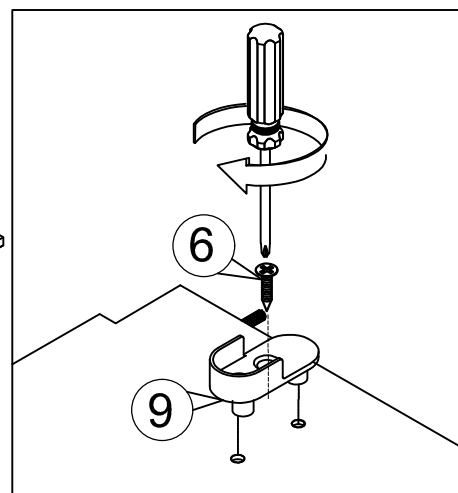
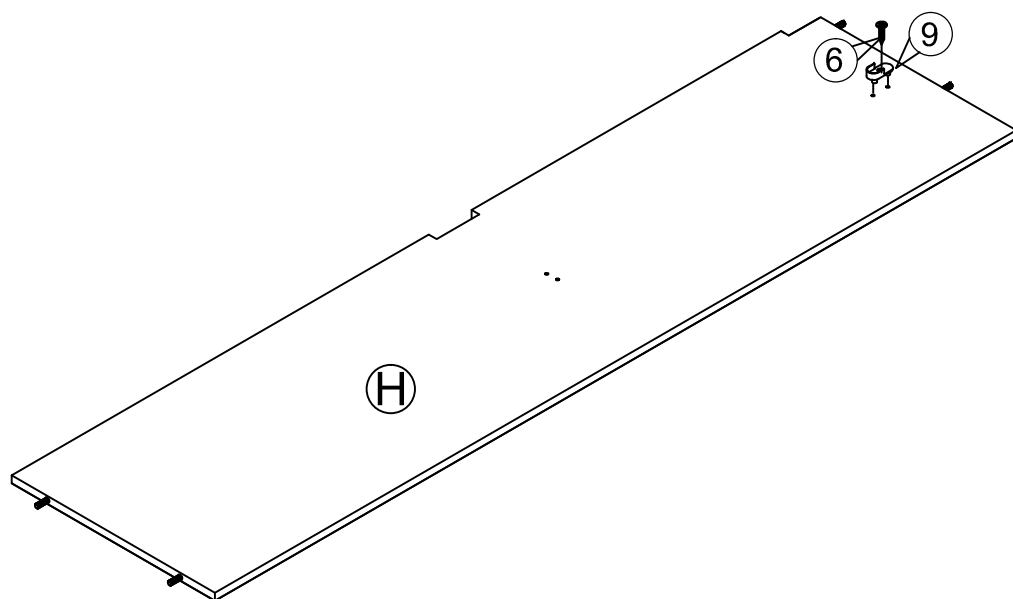


11


 **6** x1
  **9** x1

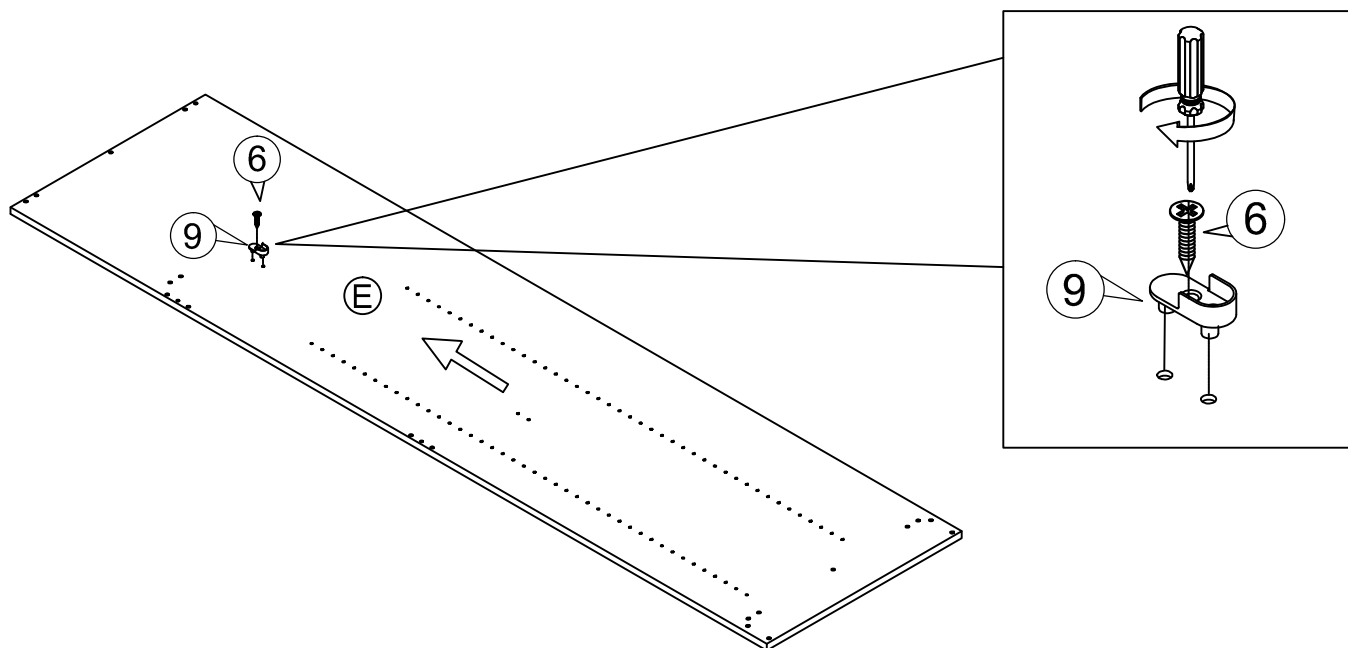

12

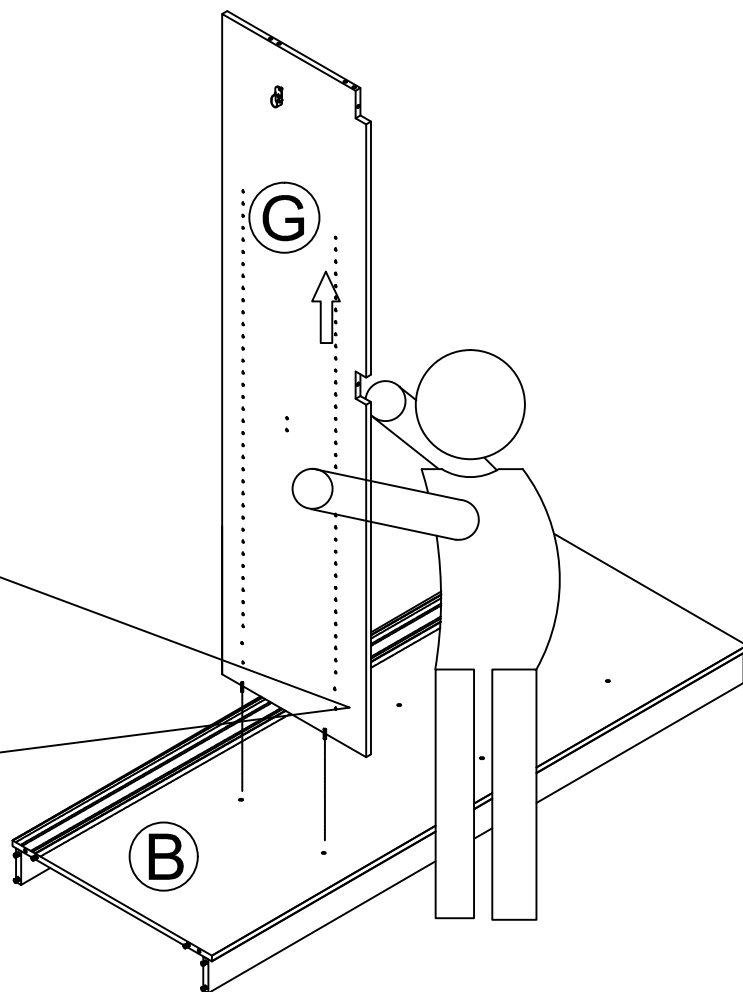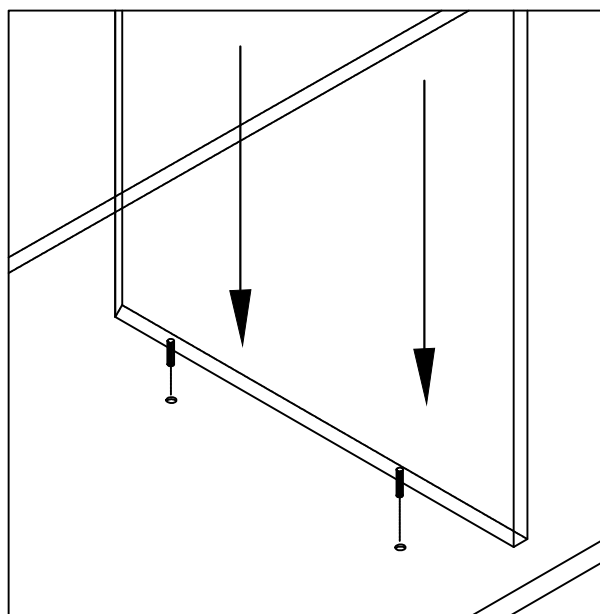


13

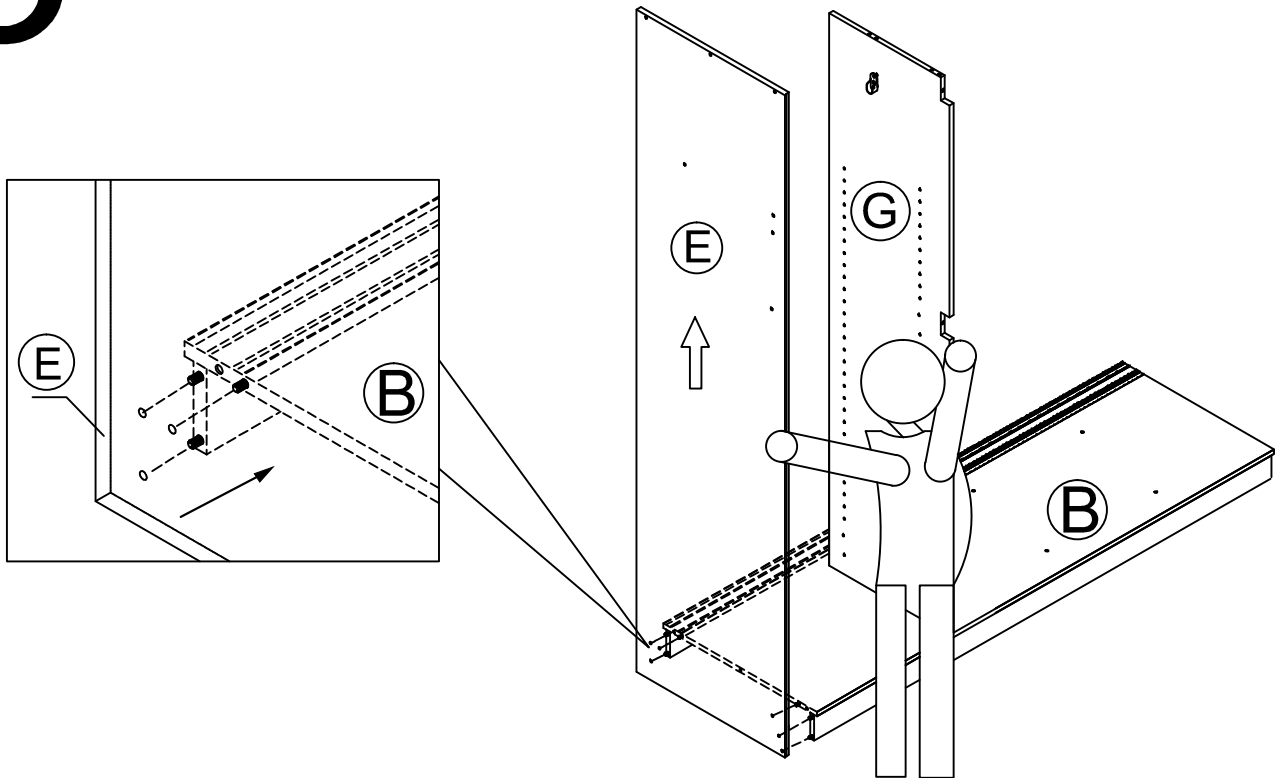


14

② x 3

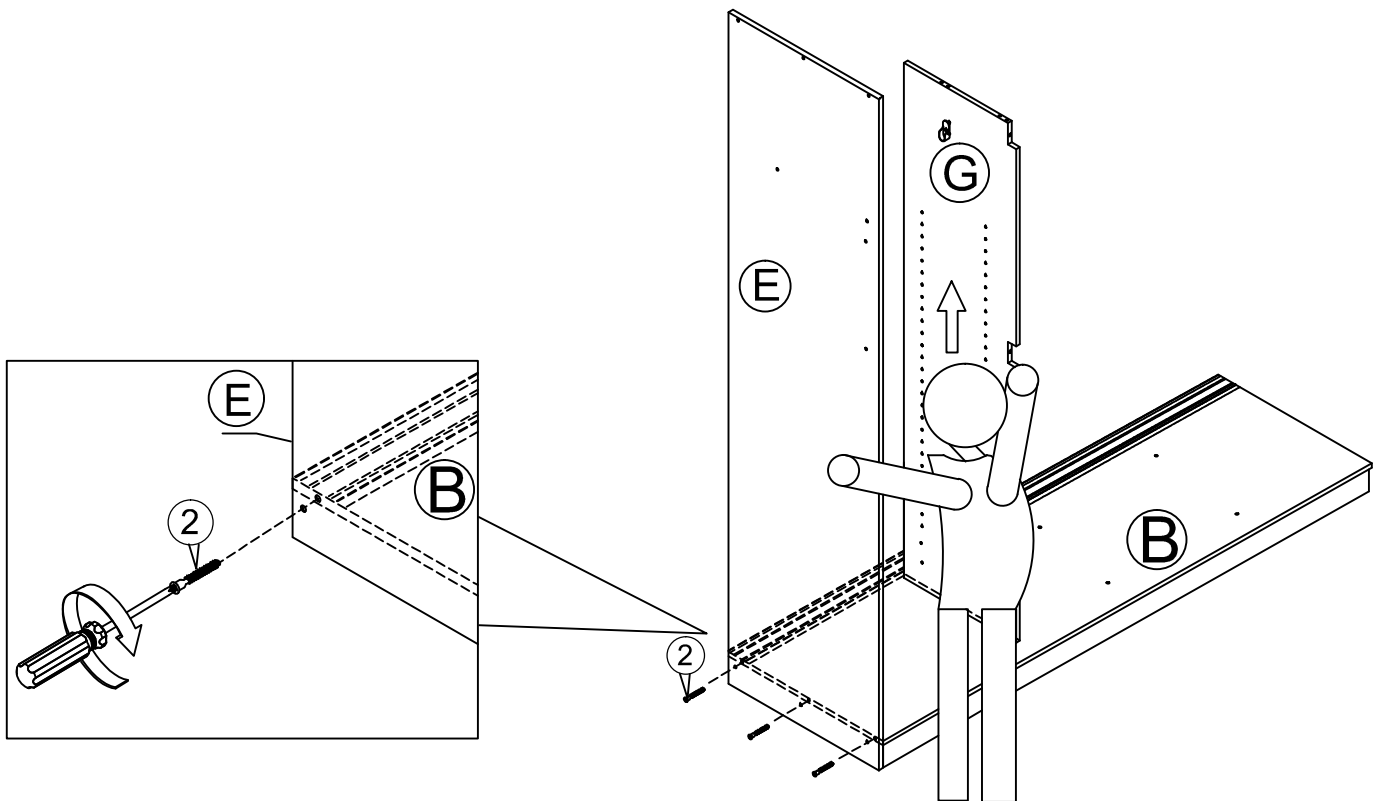


15

① x 8

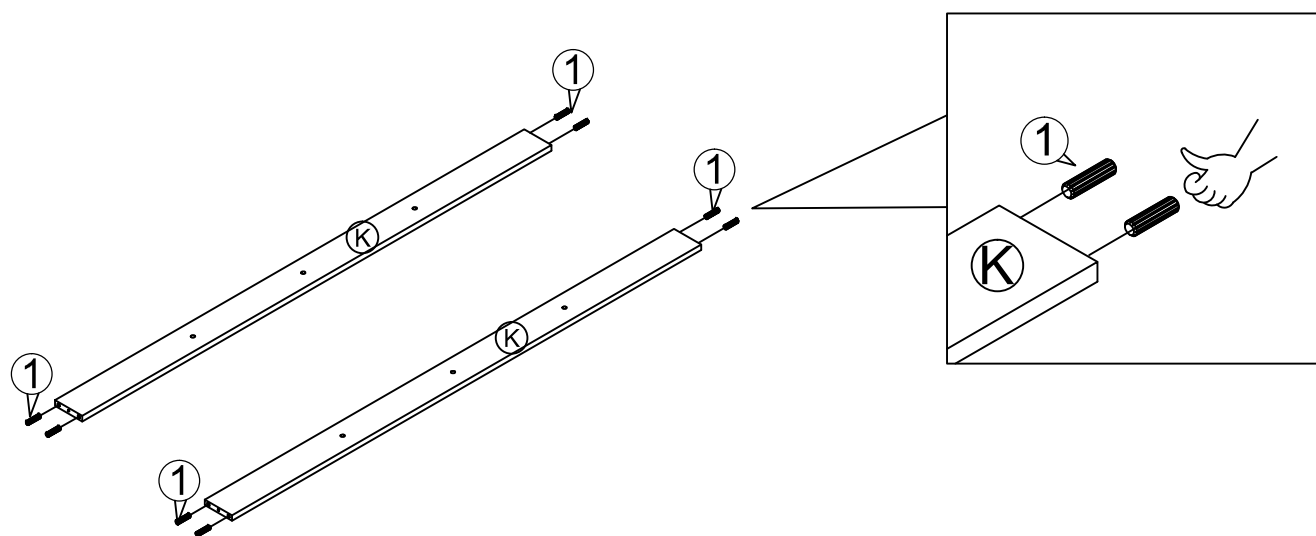


16

② x 2

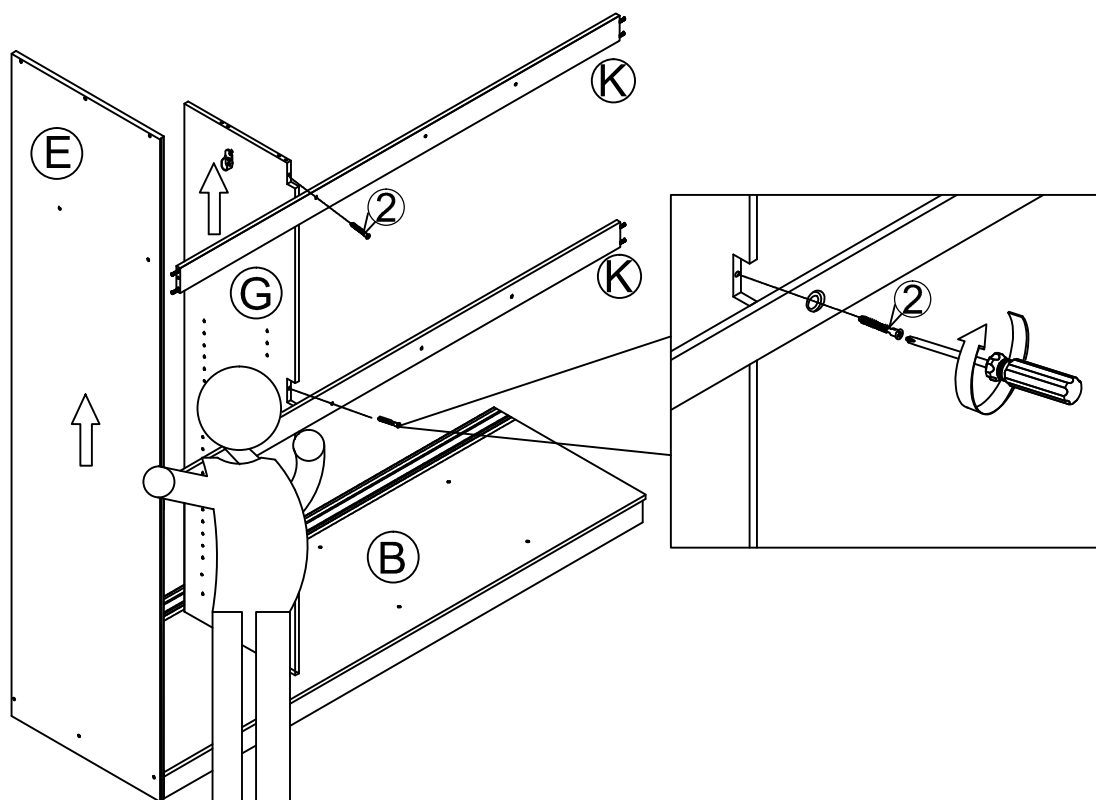


17


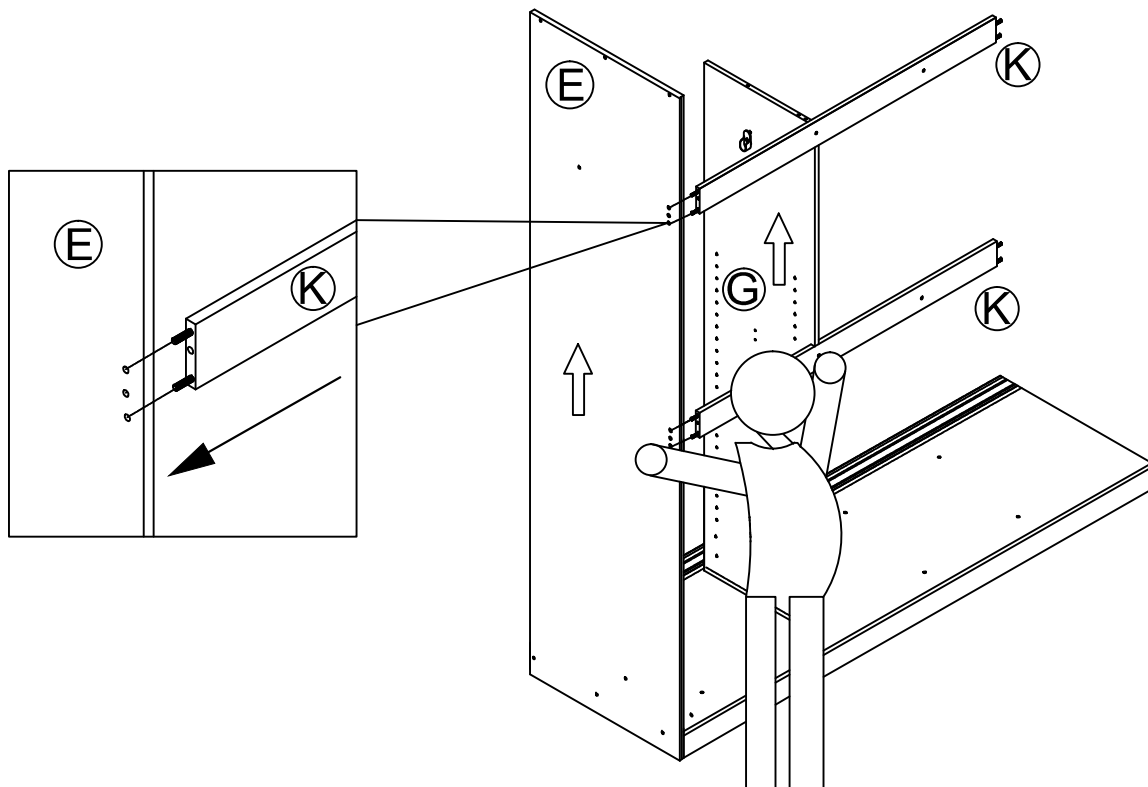


18

② x 2


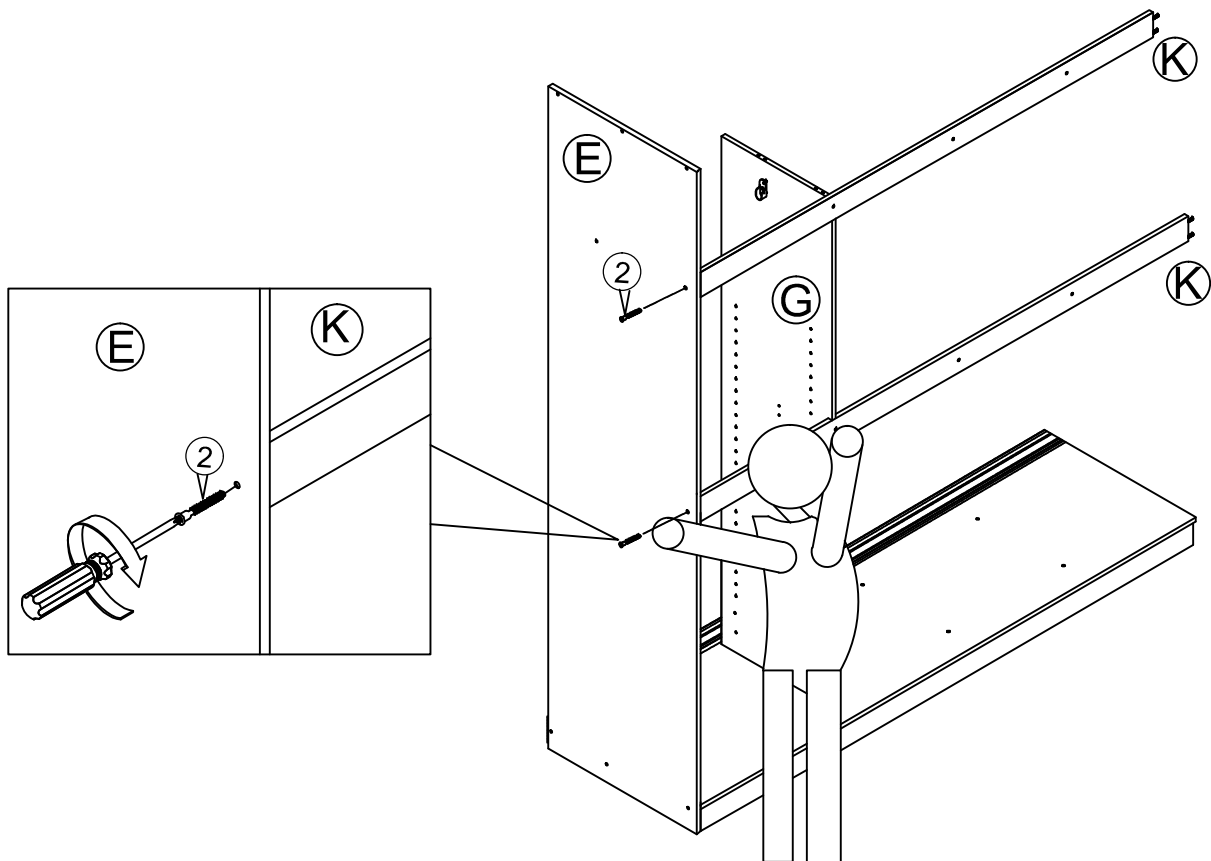


19

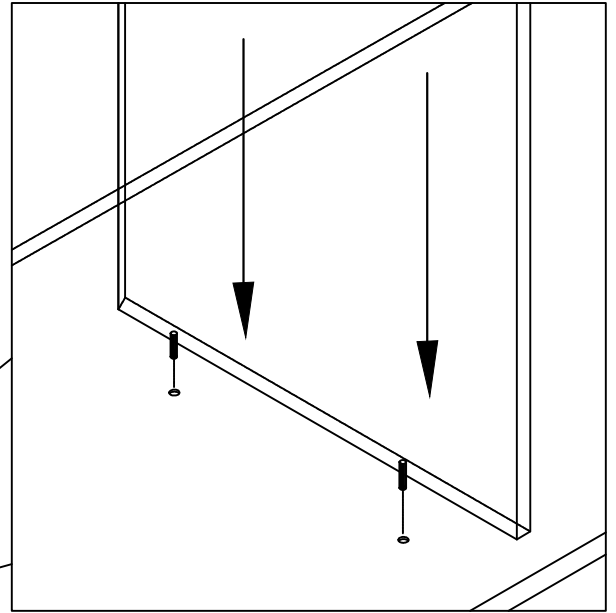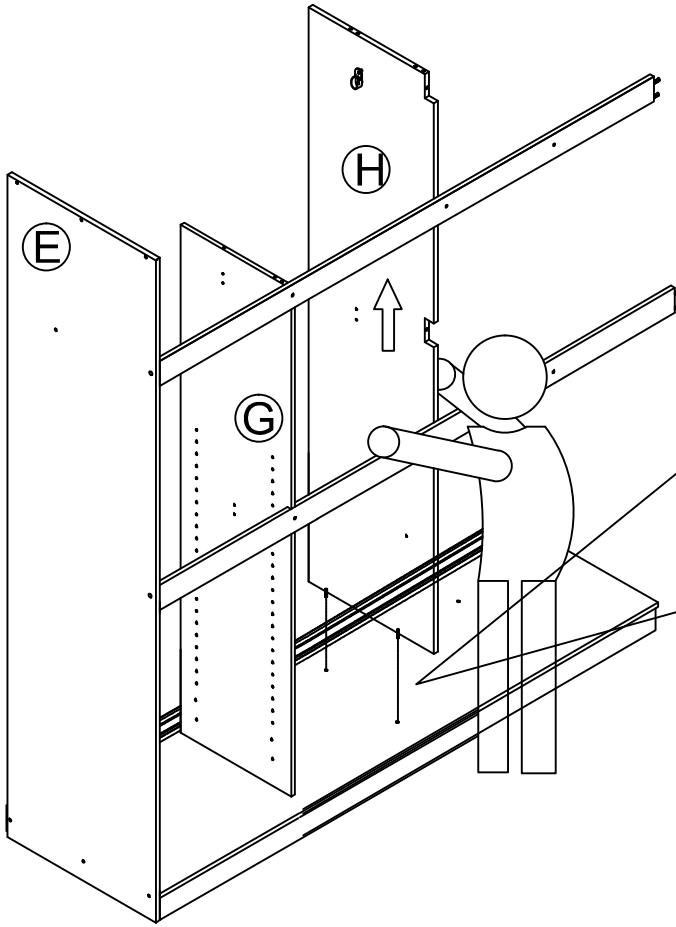


20


② x 2

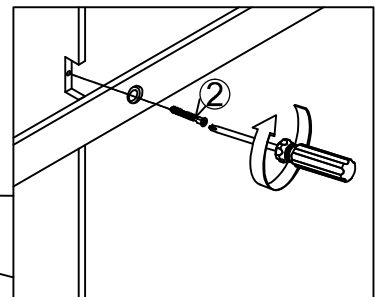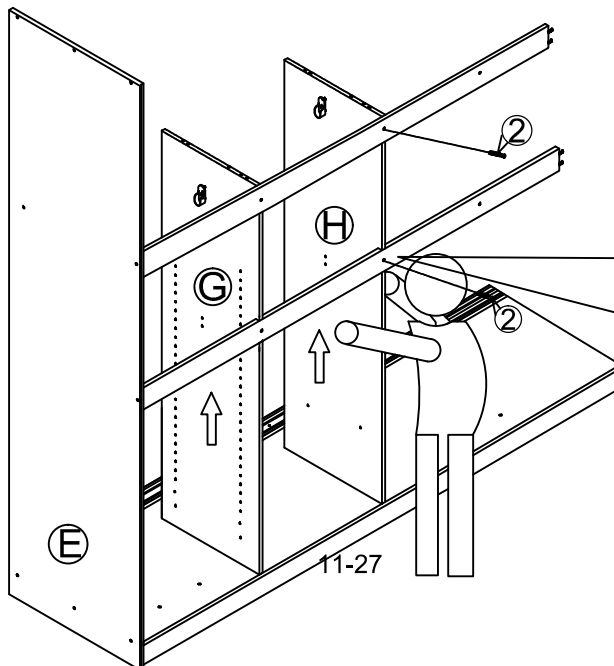


21

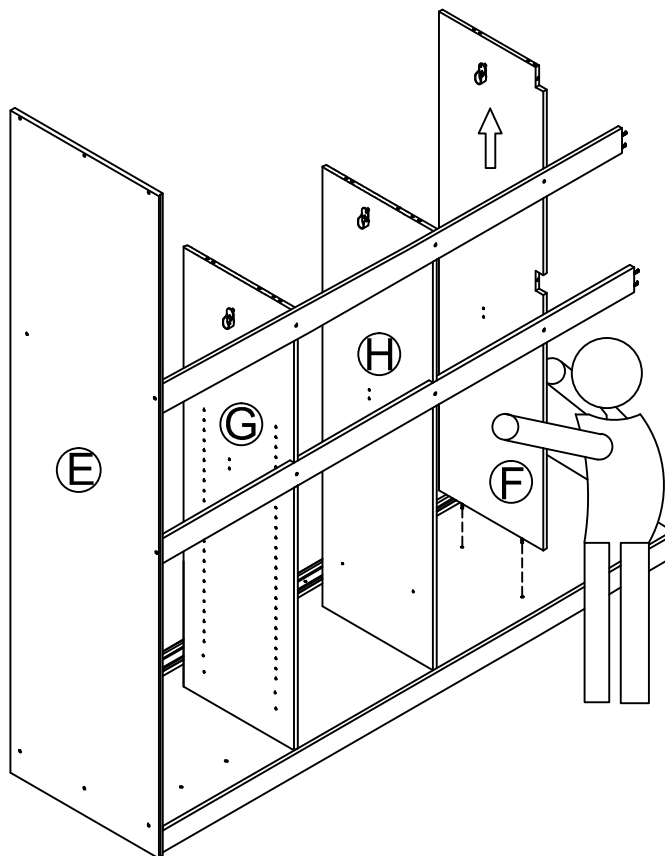




22


② x 2



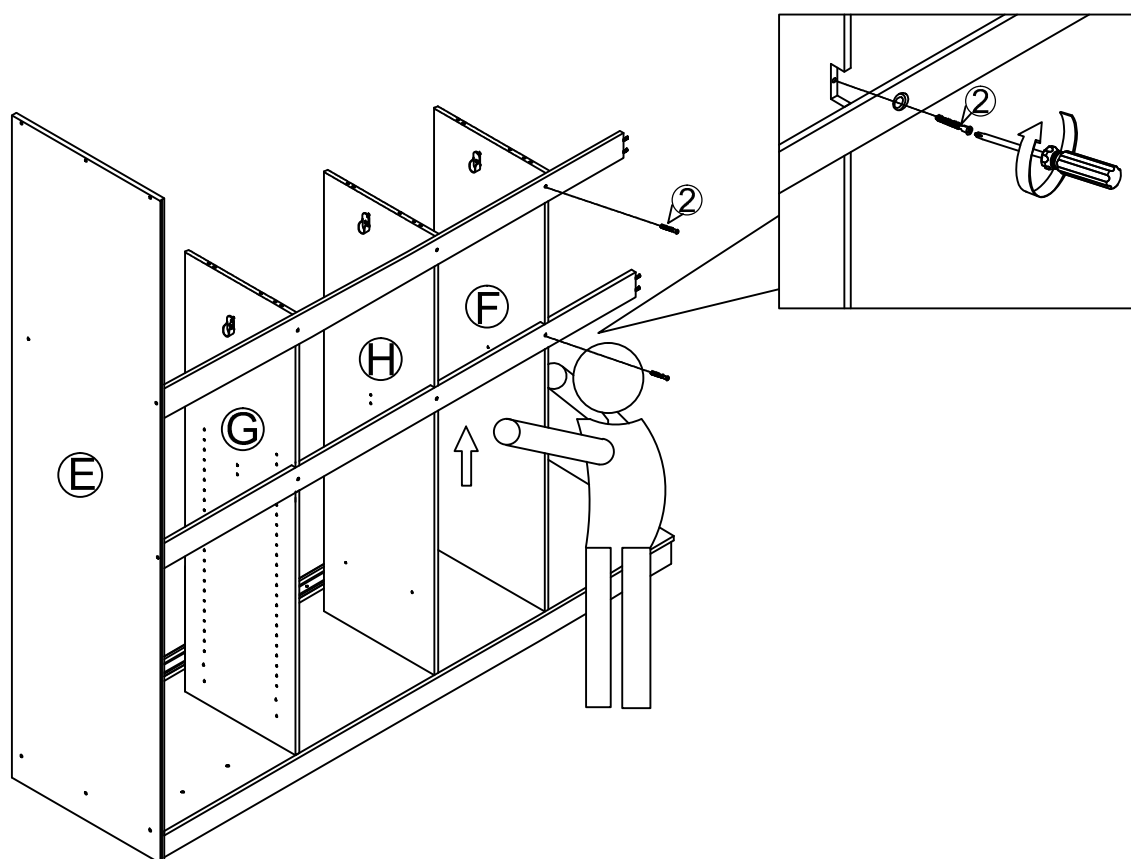


23

 ① x 4

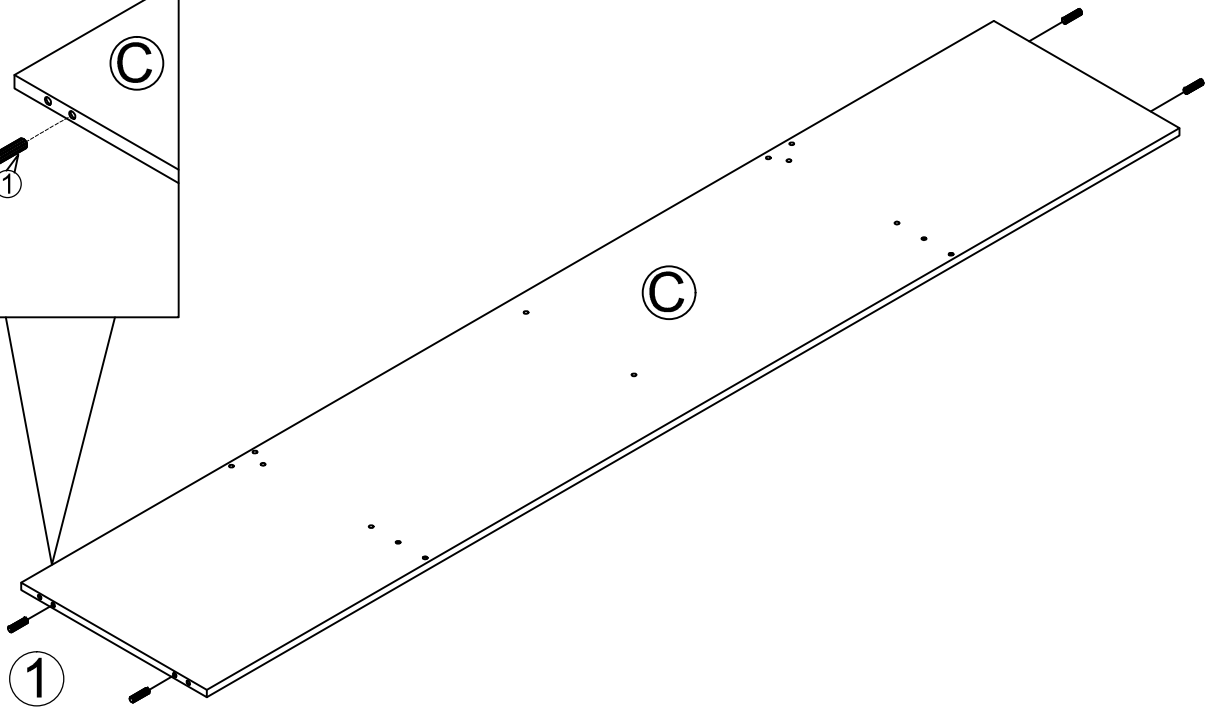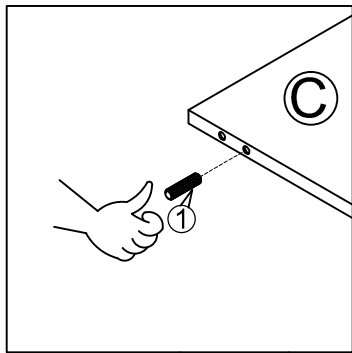


24

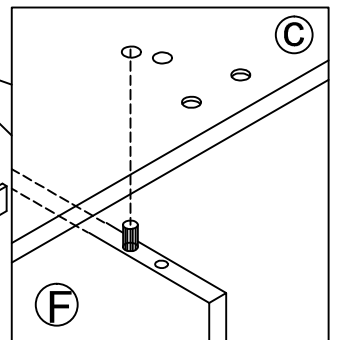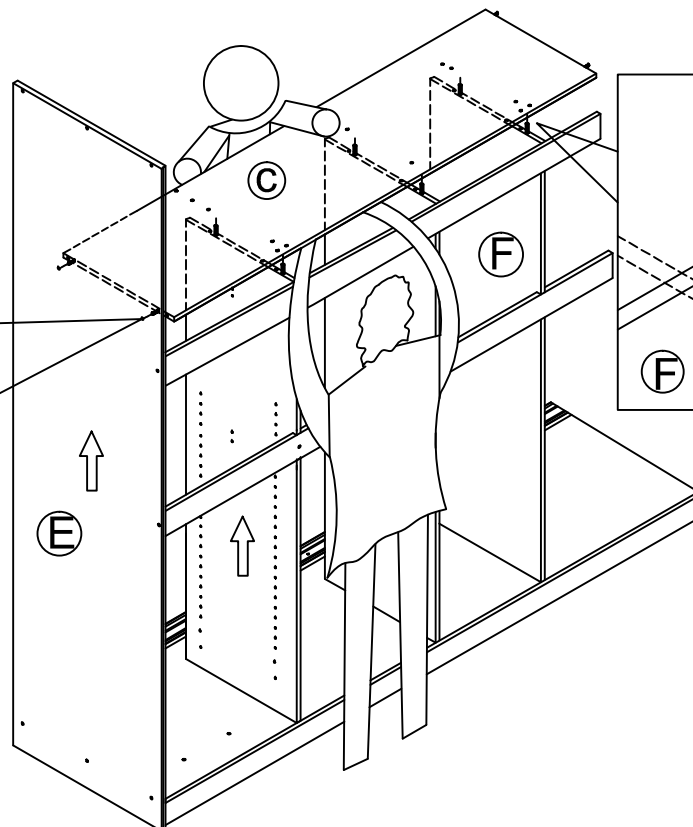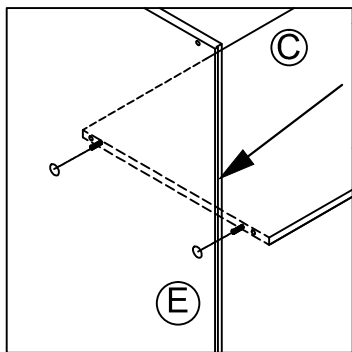


25

② x 8

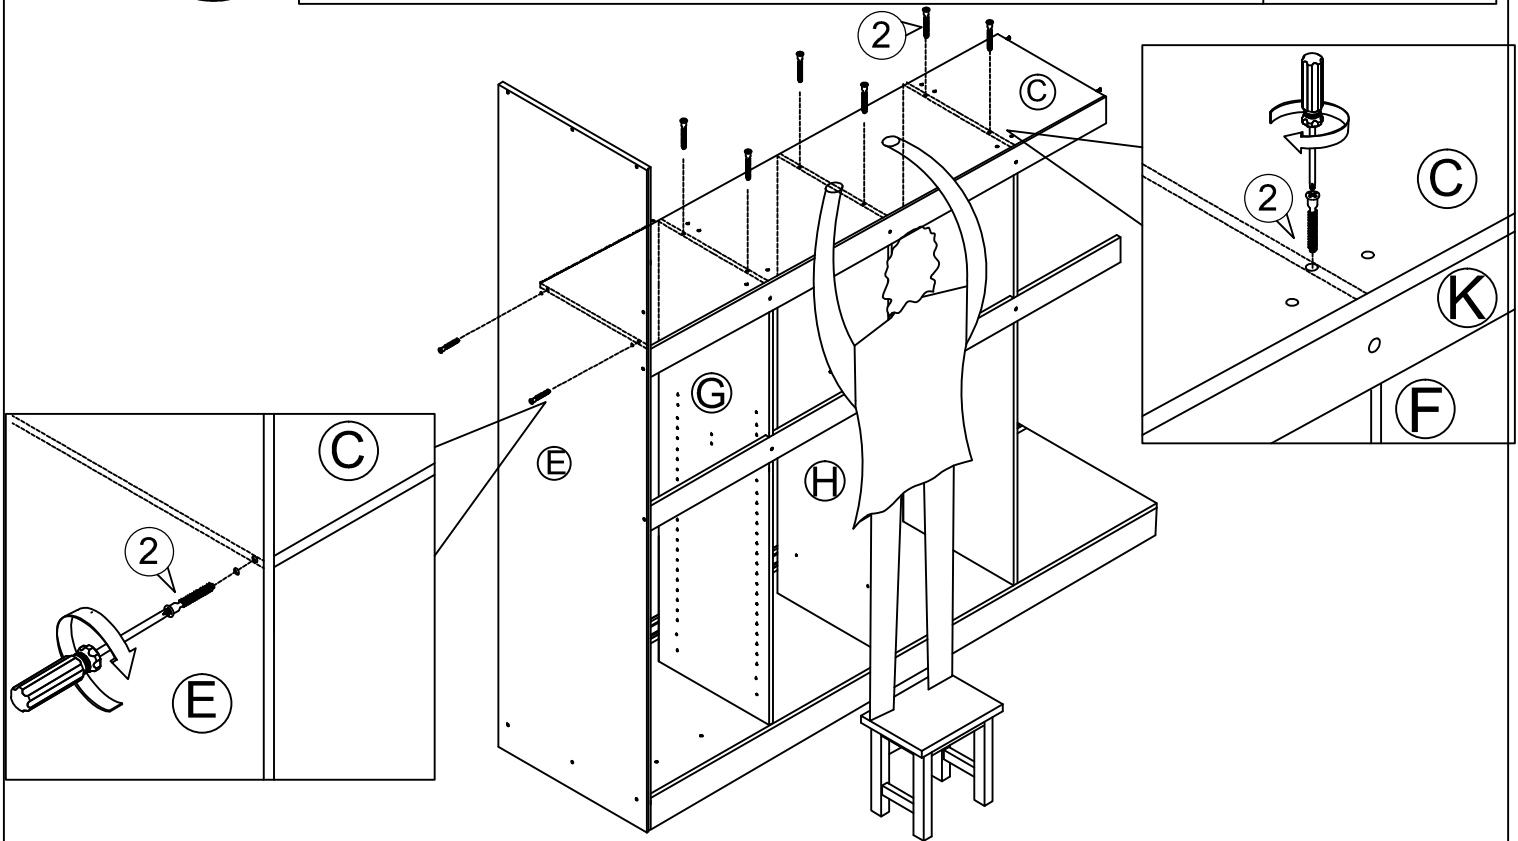


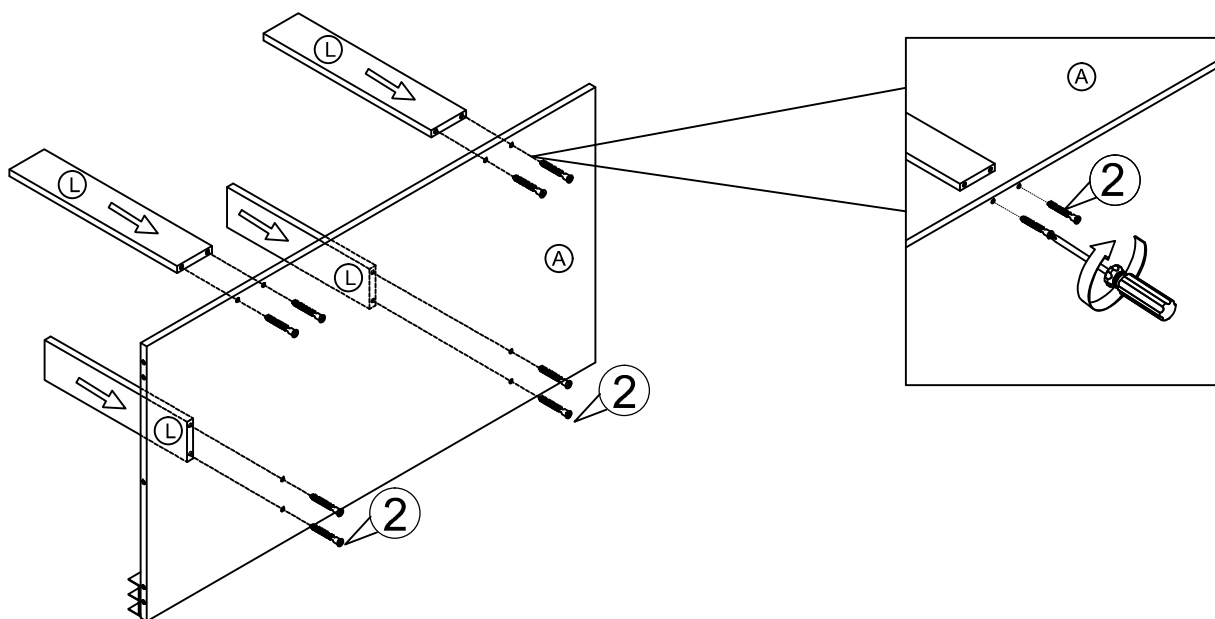
26

① x 4 ④ x 16

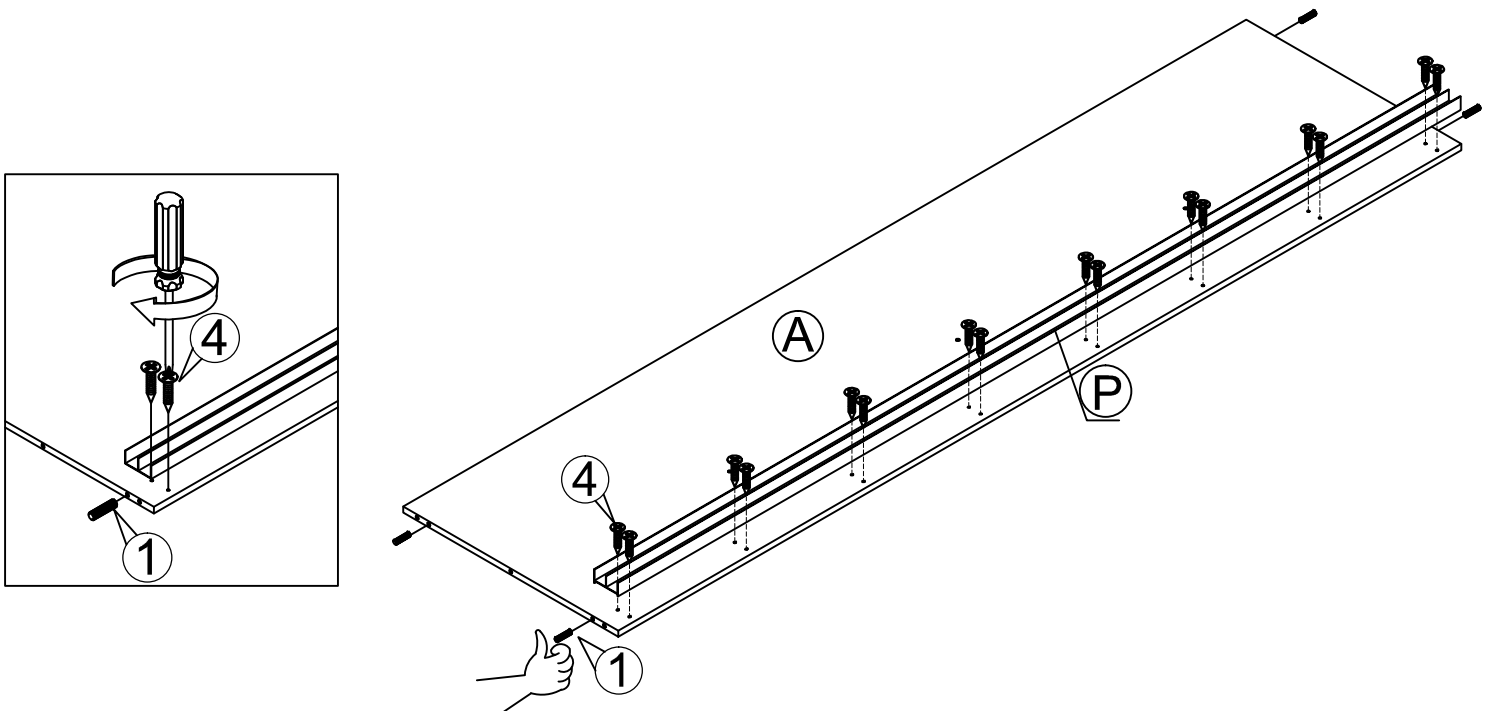


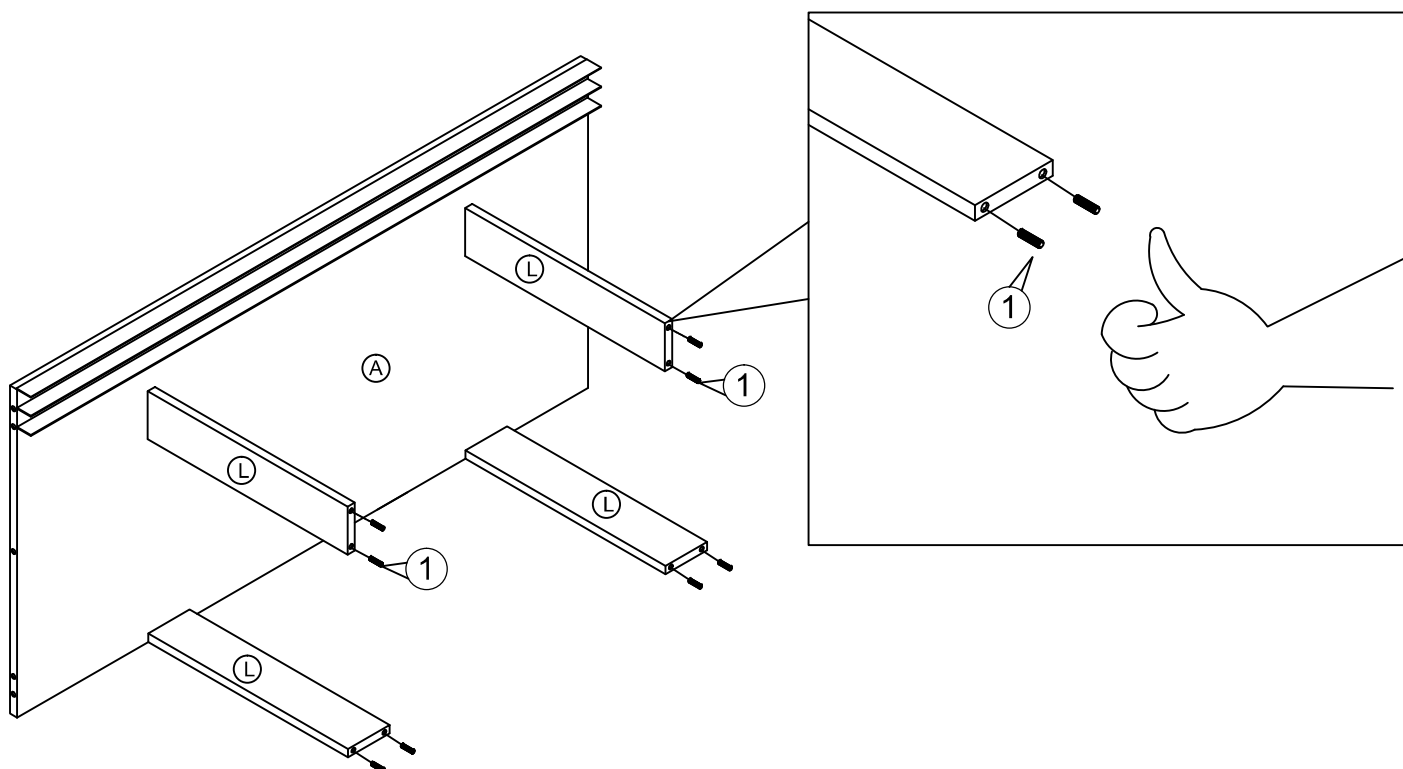
27

 ② x 8






28


 ① x 8





29

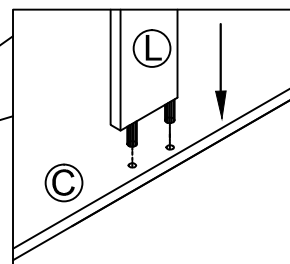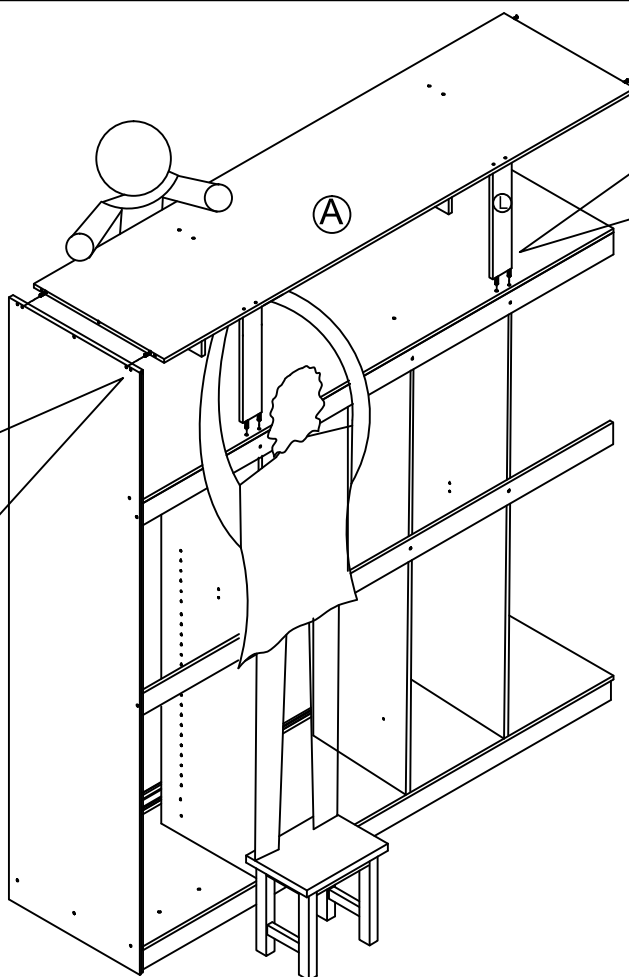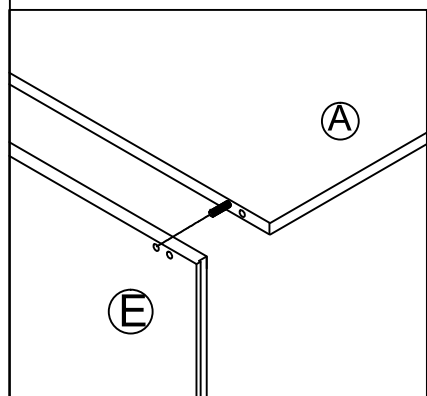



30


② x 3

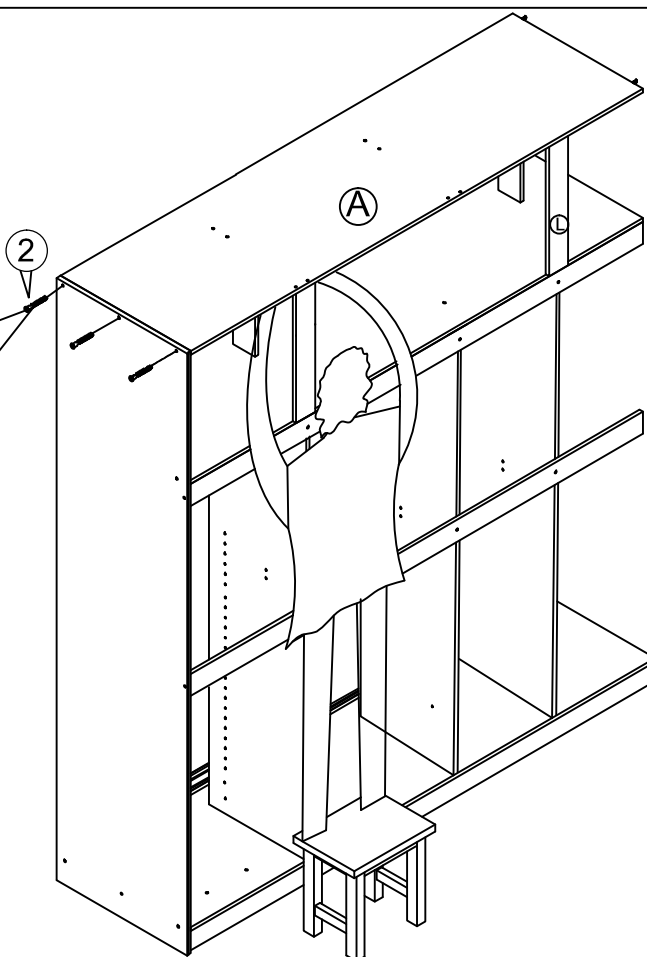
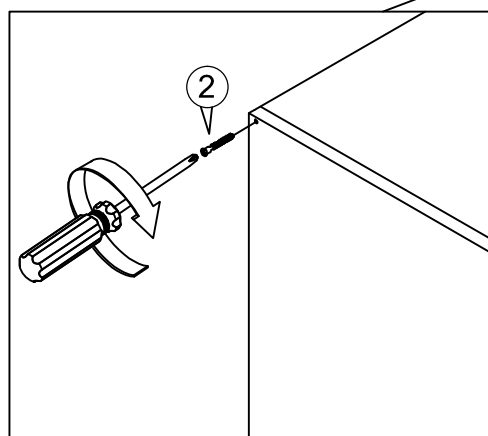


31

 ⑥ x1	 ⑨ x1	
--	--	---

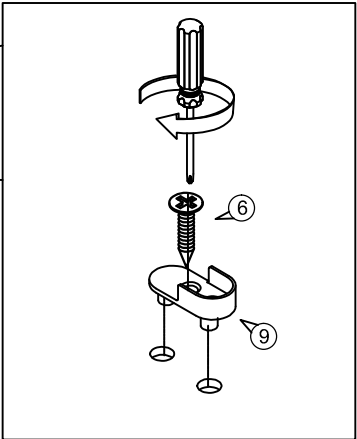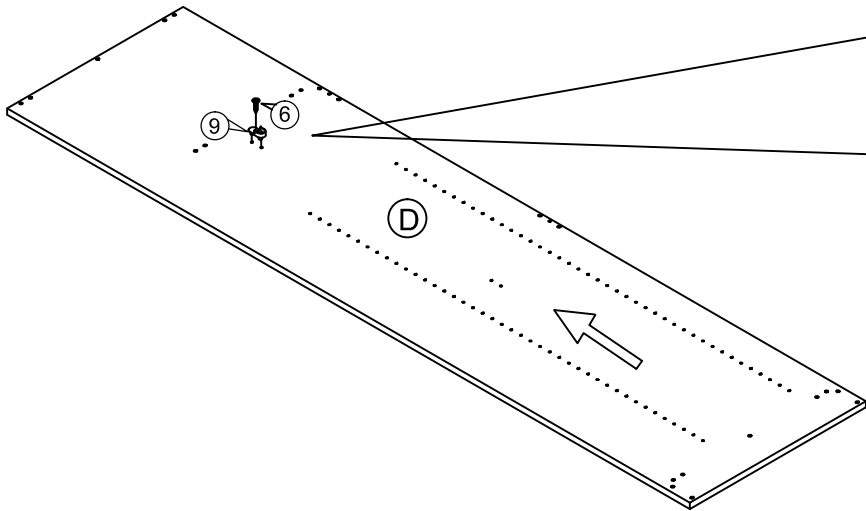


32

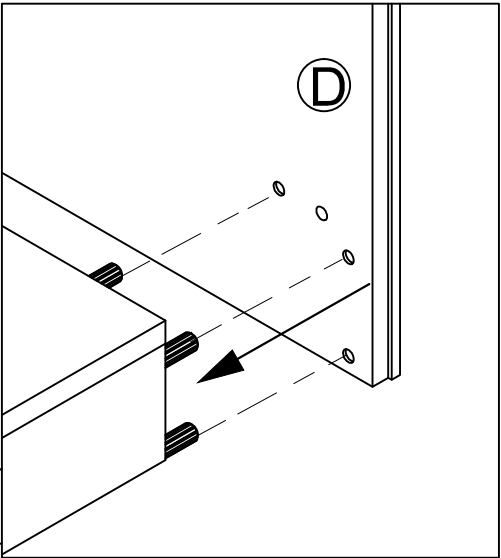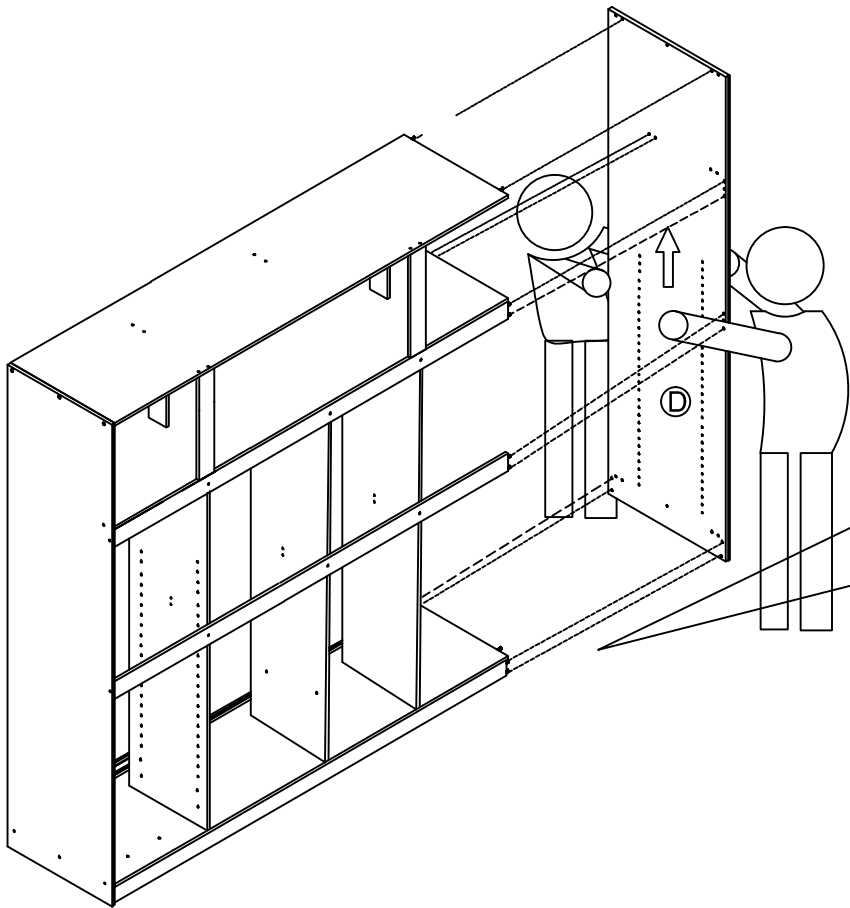


33

② x10

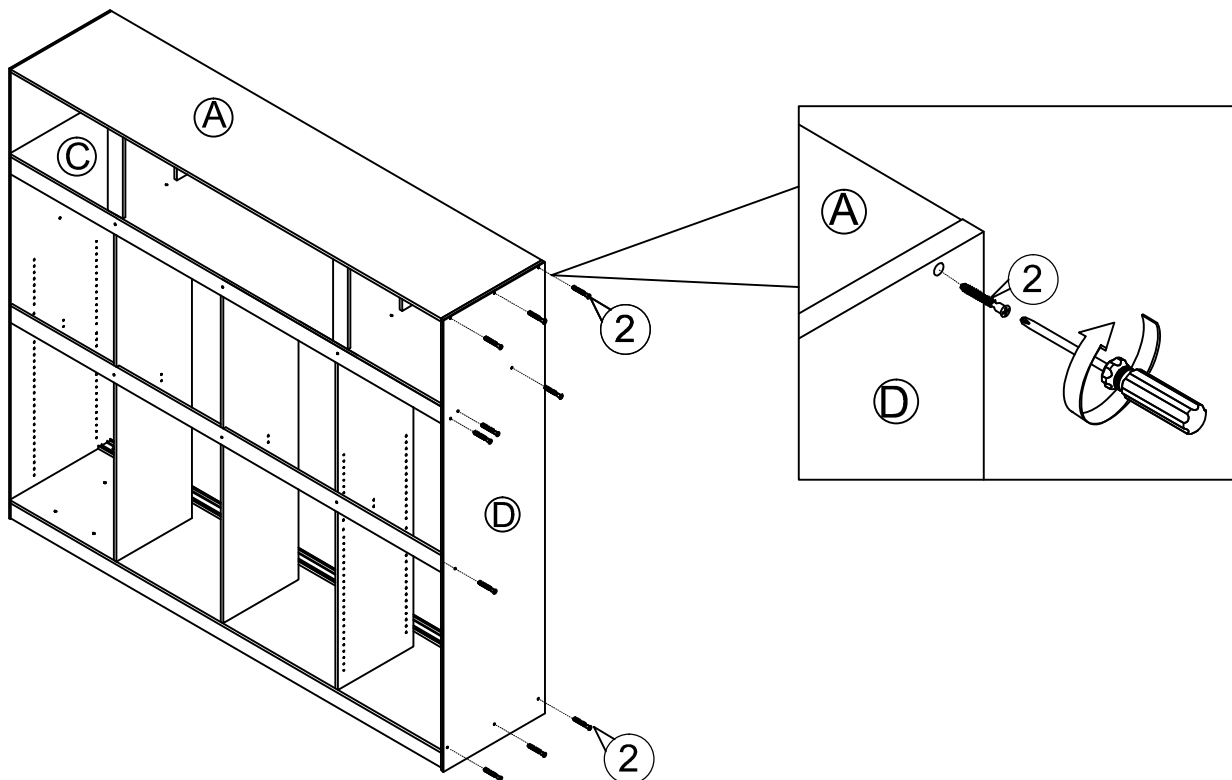


34



③ x 26

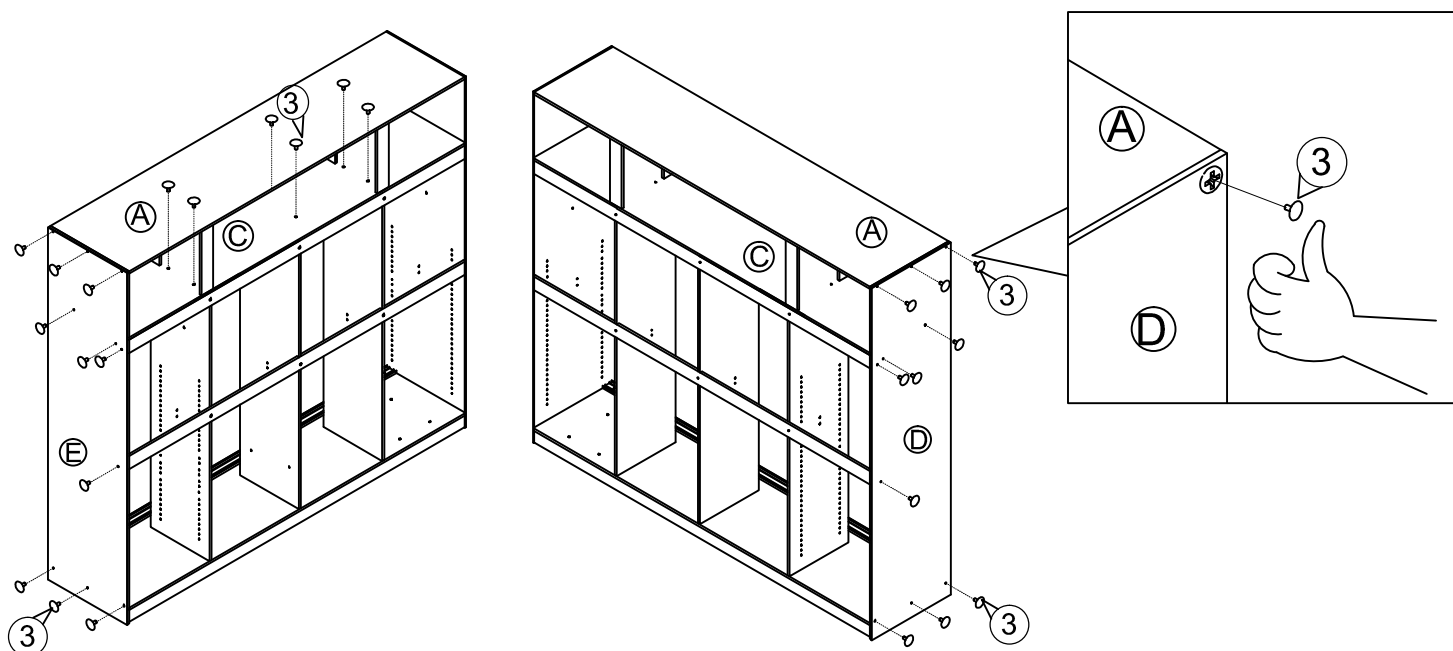


35


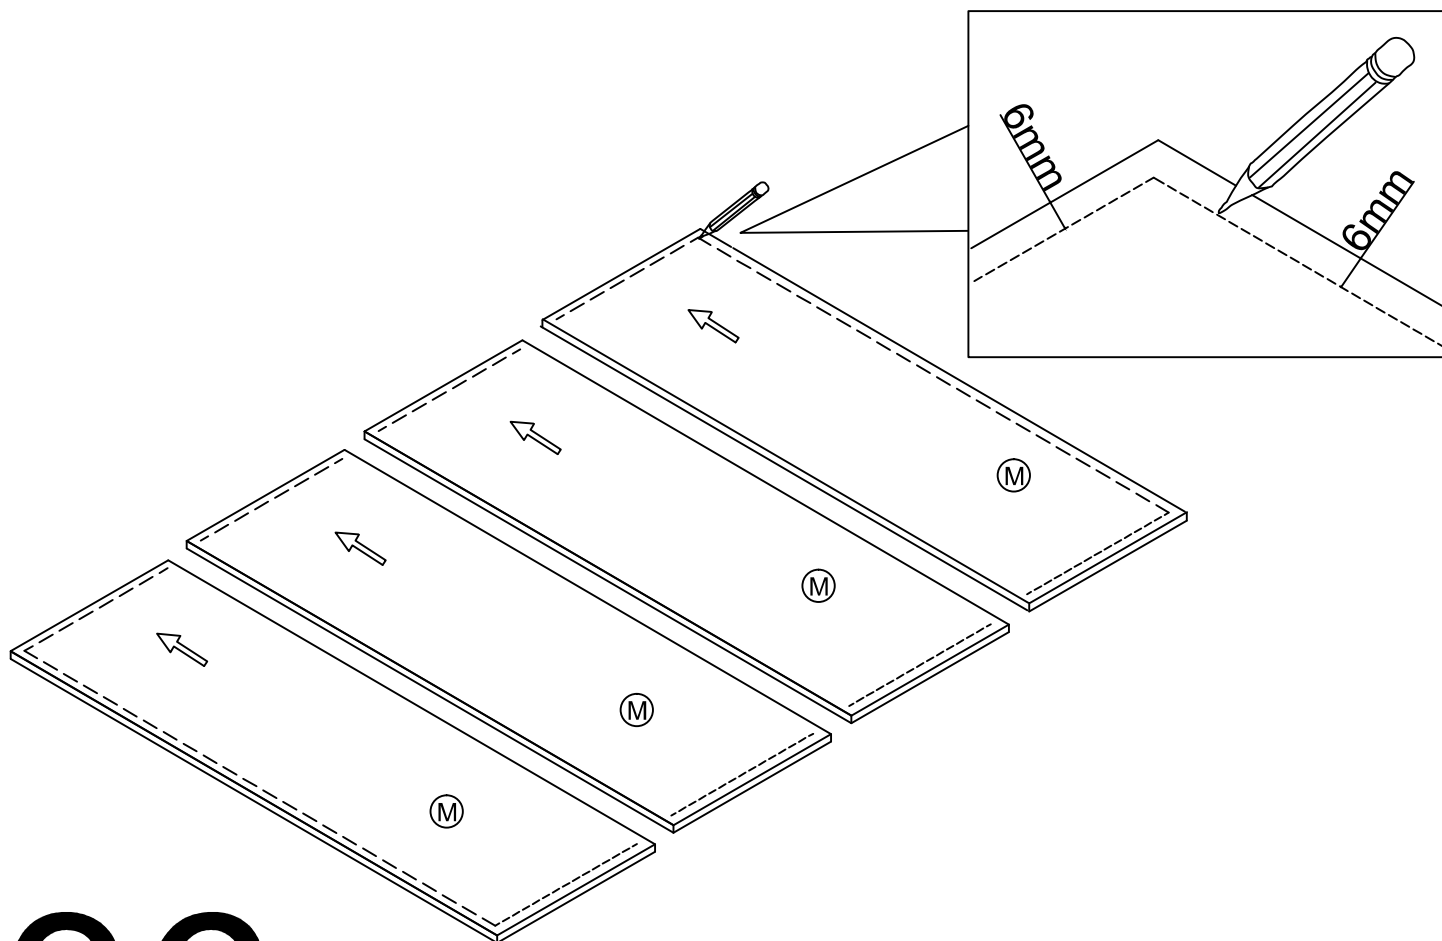


36

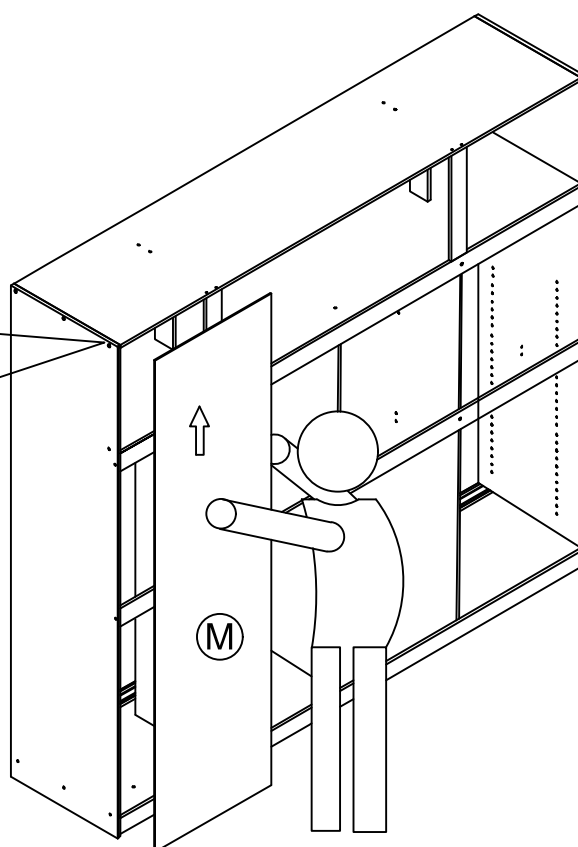
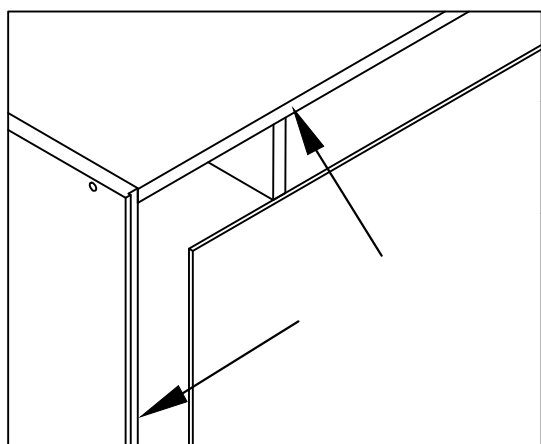


37



(8) x 33

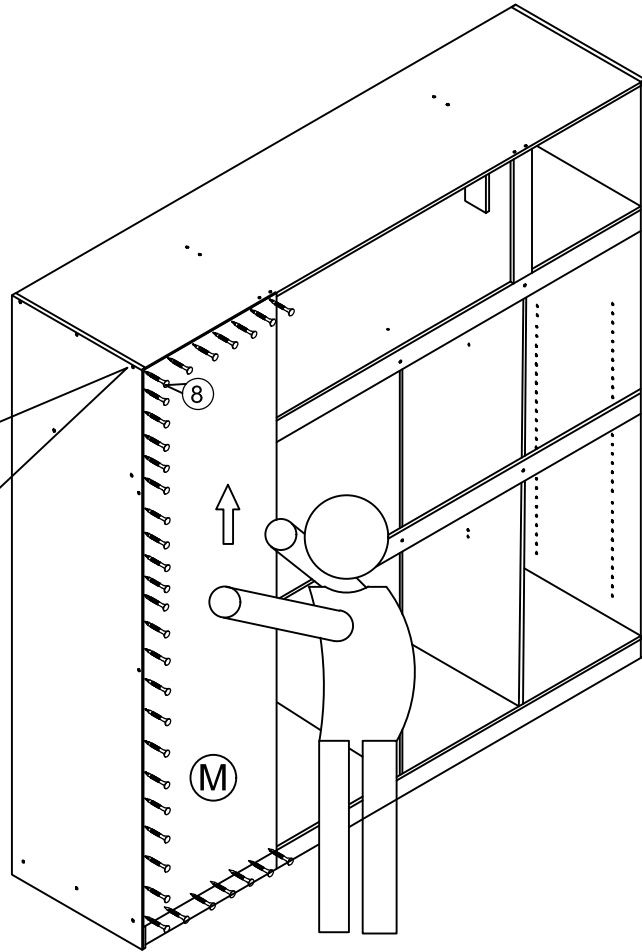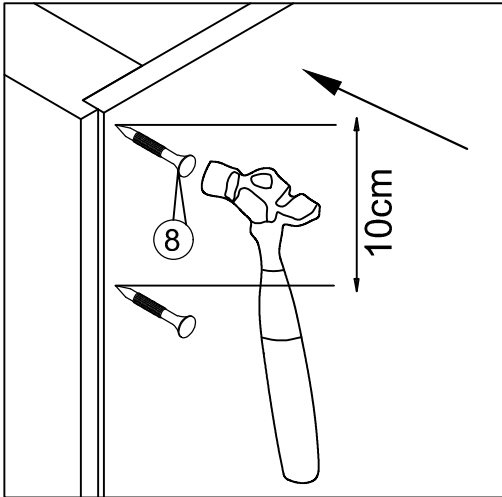


38

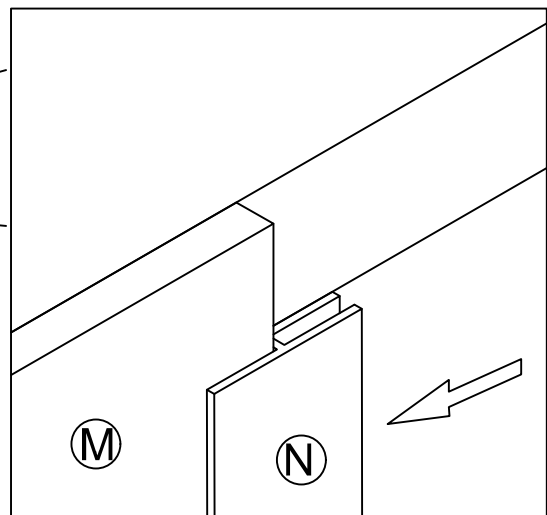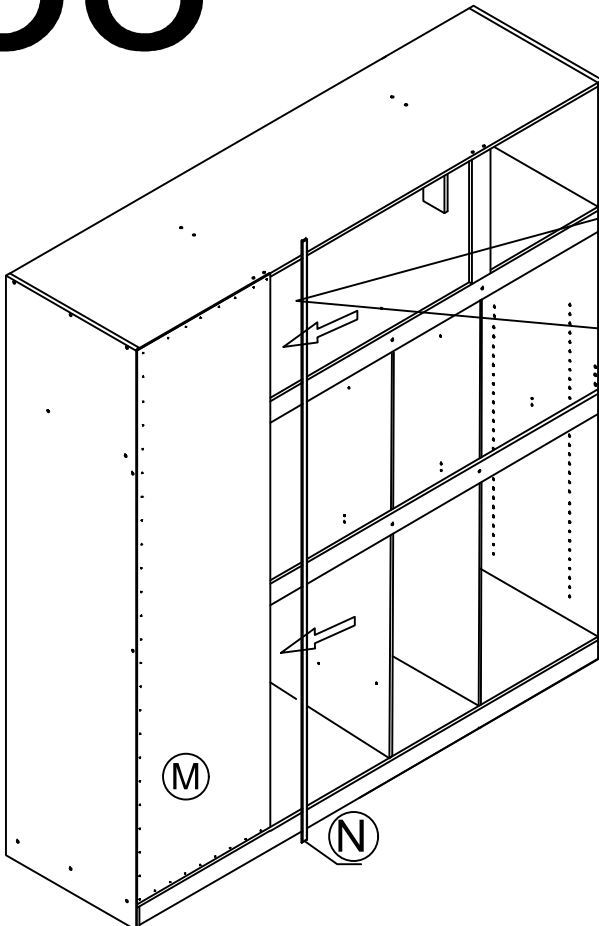


39


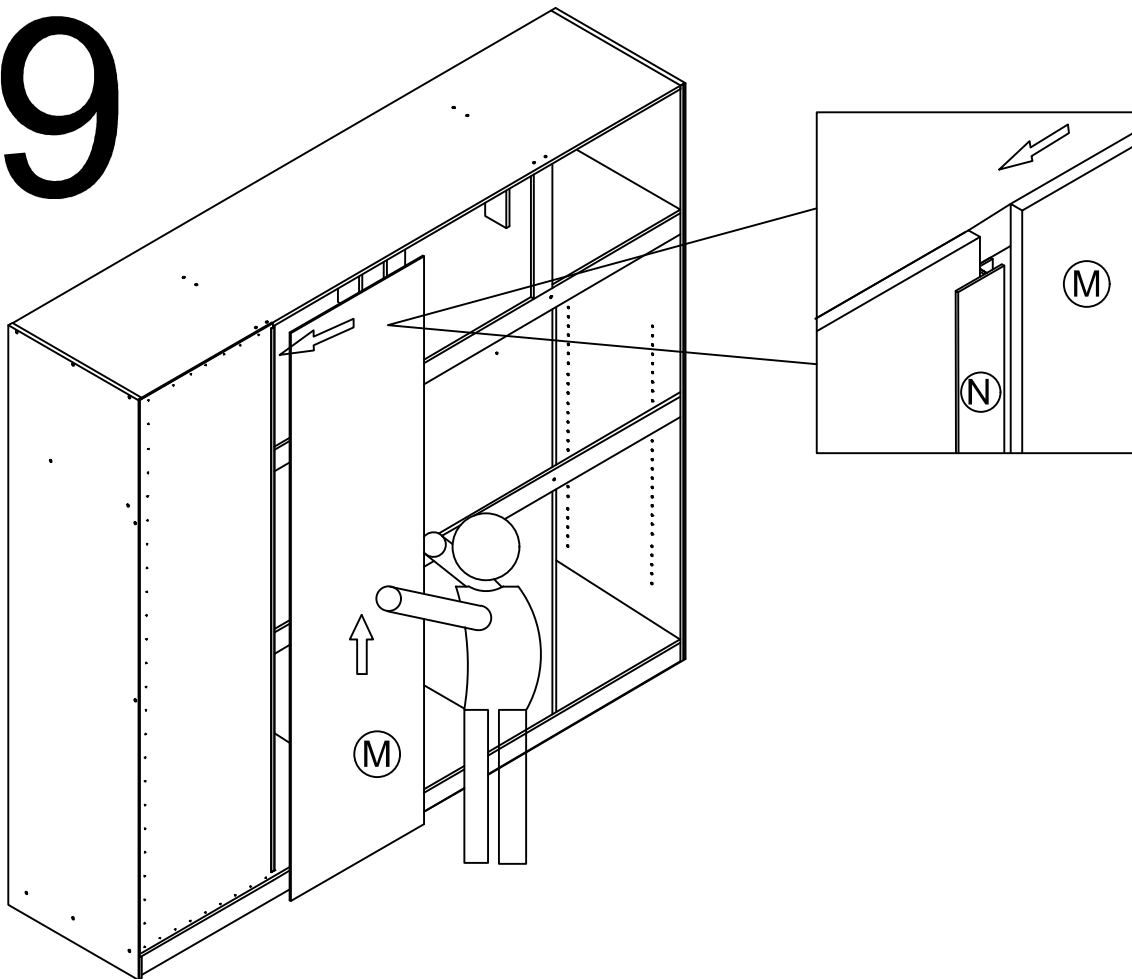


40



 8 x 14

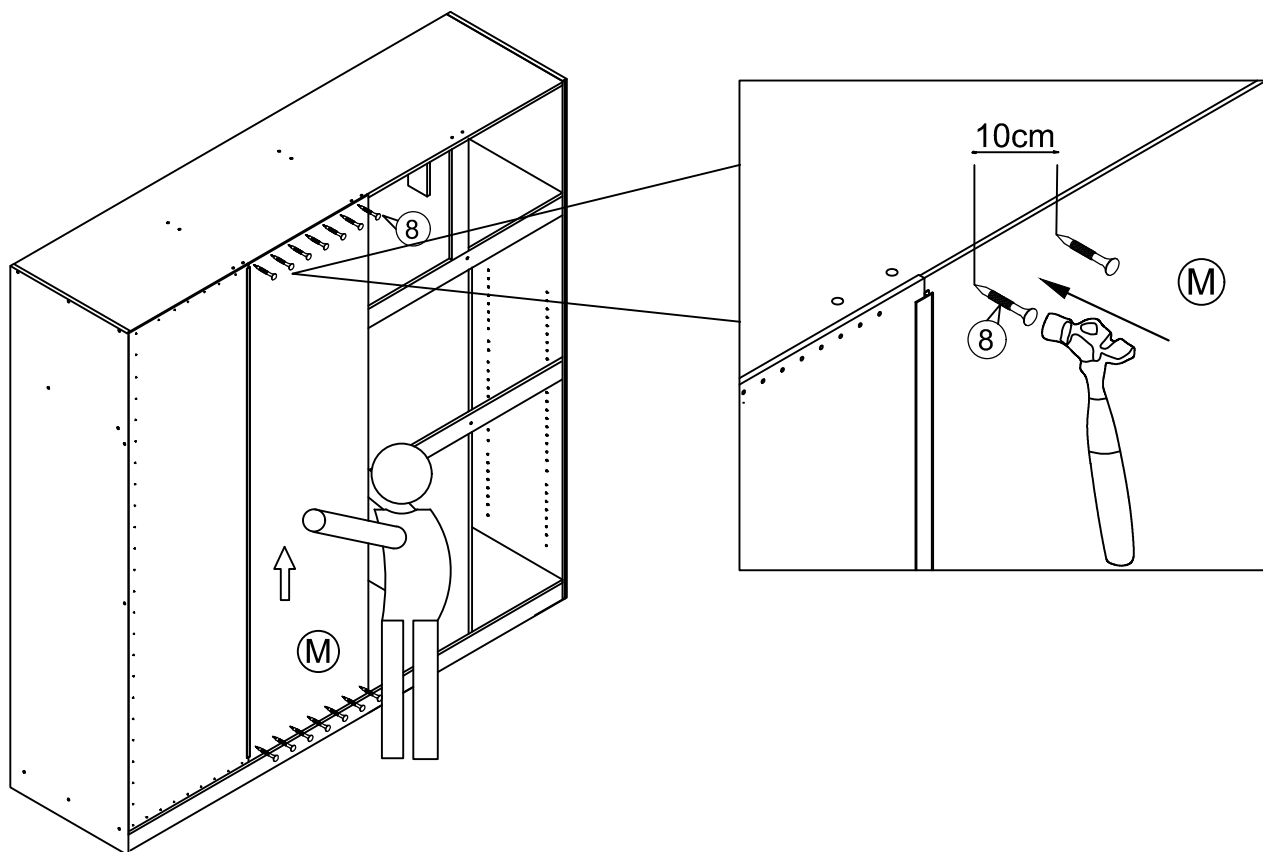


41

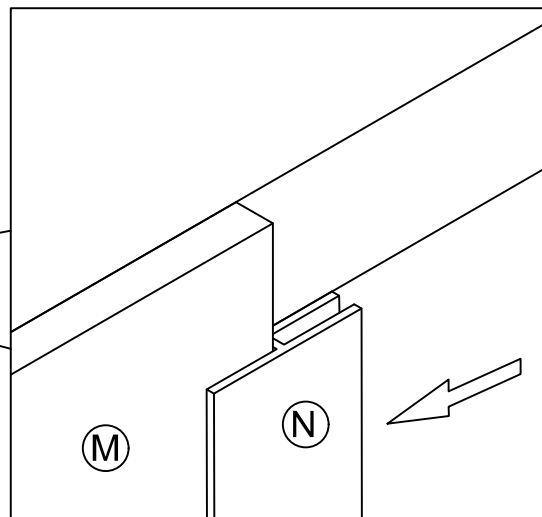
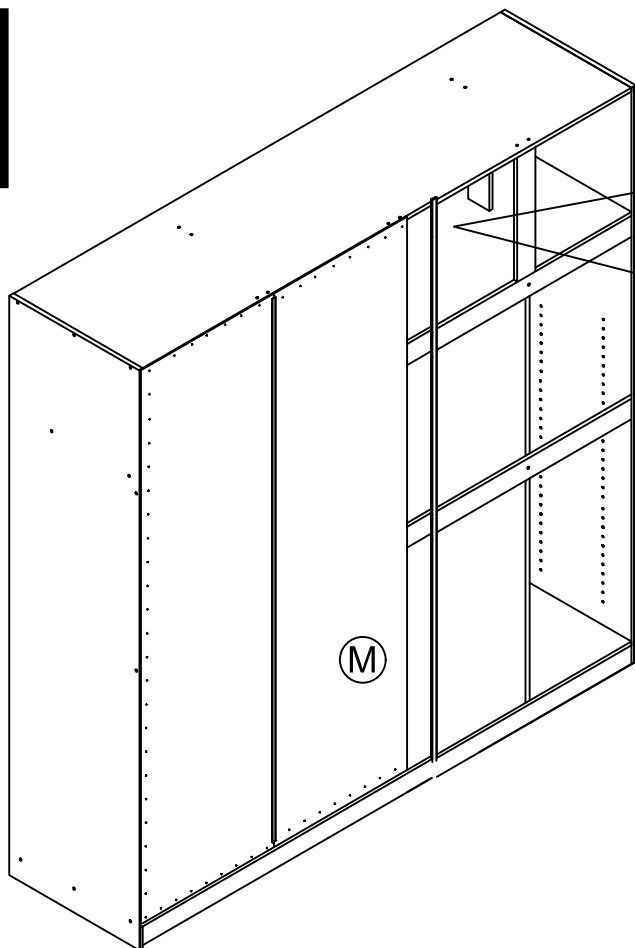


42

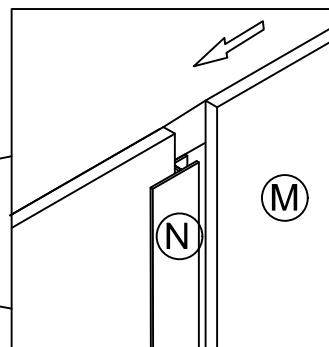
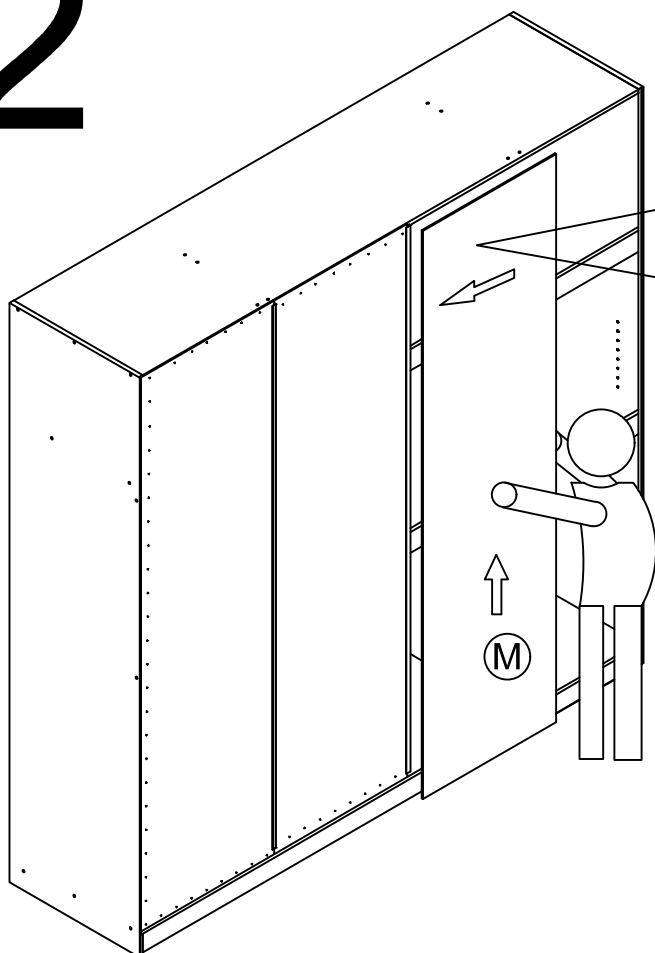


43



(8) x 14

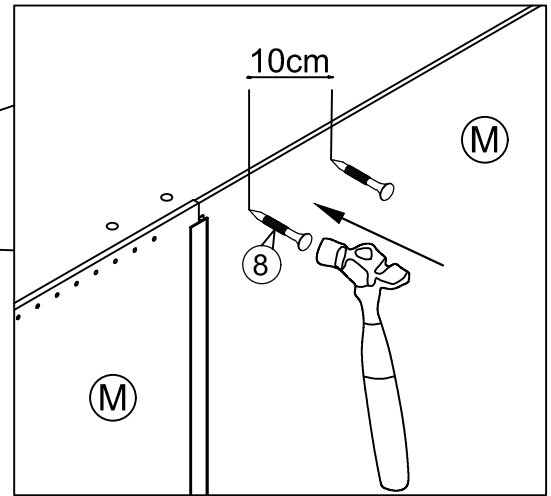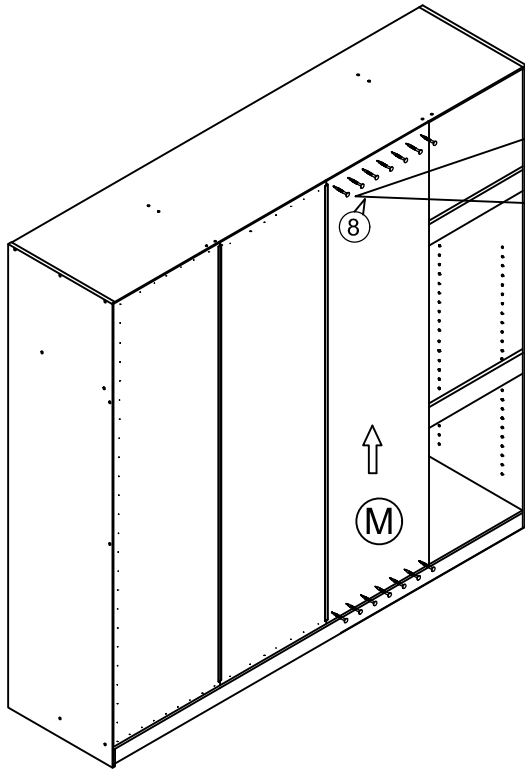


44

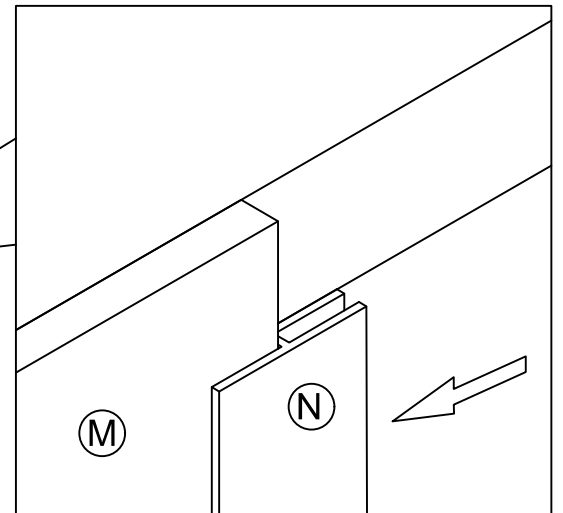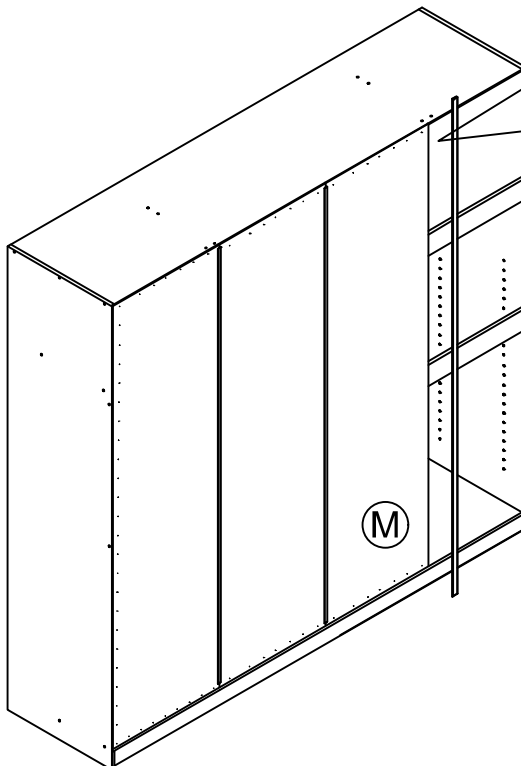


45

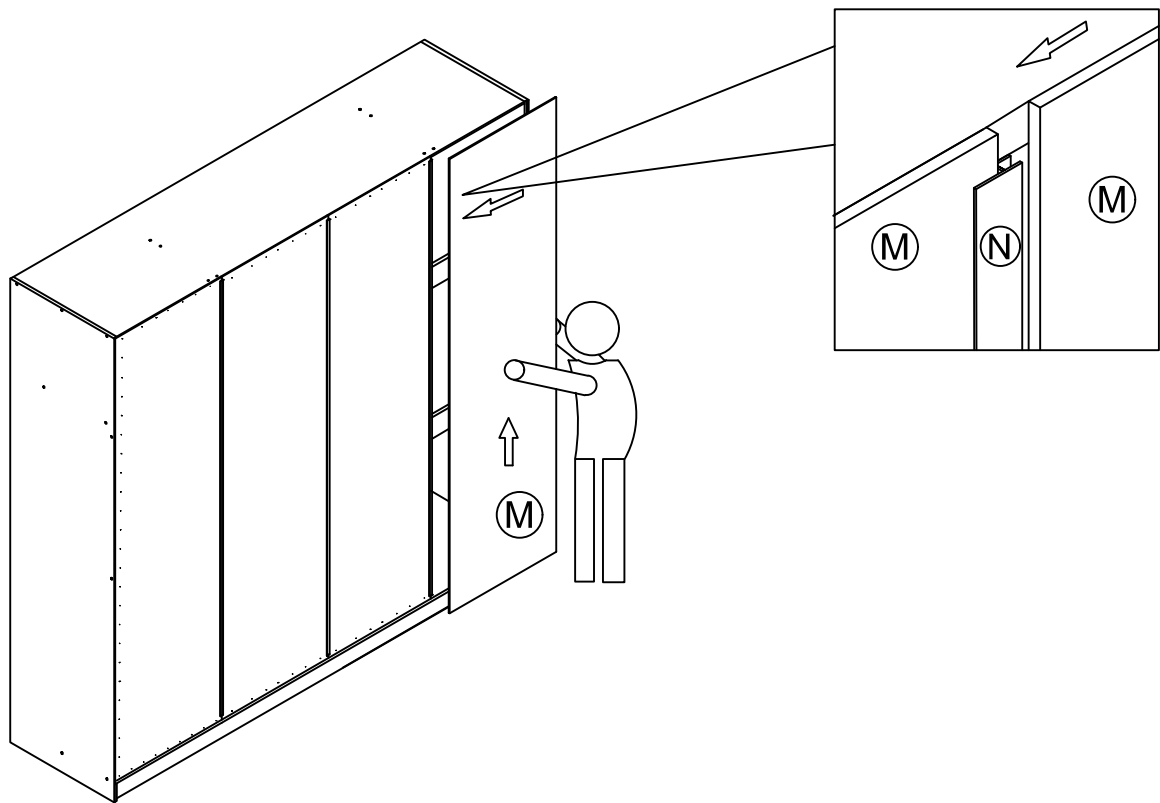


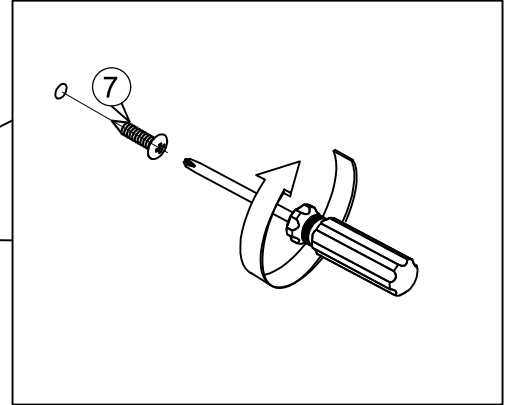
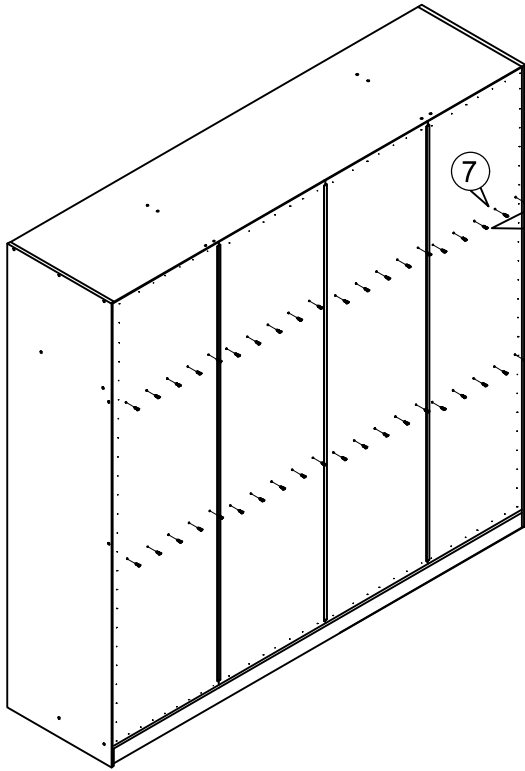
46

 8 x 33

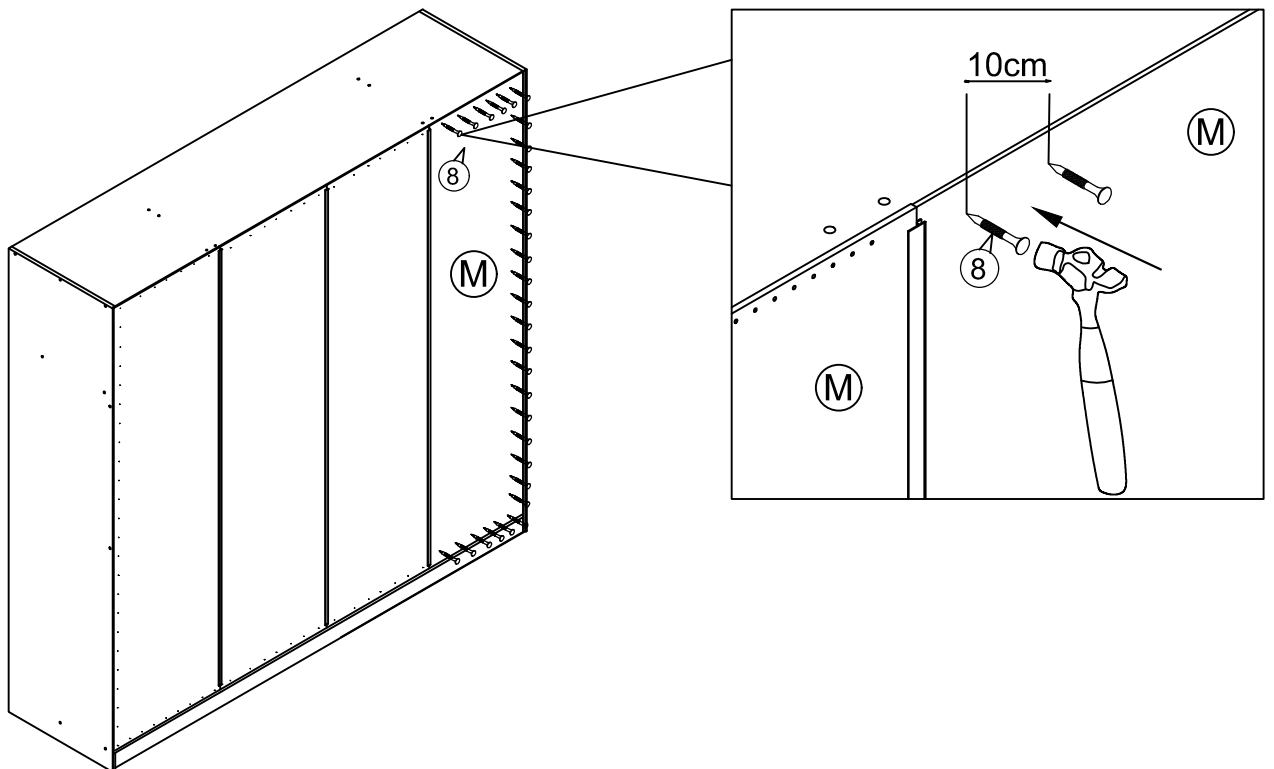

47

 **7** x 40



SAFETY BRACKETS INSTRUCTIONS


This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

1. Attach one Mounting plate to the wall with the Large screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
2. Attach the second Mounting Plate to the furniture frame with the Short screws.
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.


HARDWARE




3 PCS
20 x 40 x 1.2mm
Wall Bracket

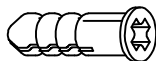


3 PCS
Ø9 x Ø6 x 25mm
Plastic Screw

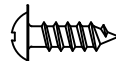



3 PCS
Ø9 x Ø4 x 15mm
Screw





3 PCS
Ø9 x Ø4 x 25mm
Screw

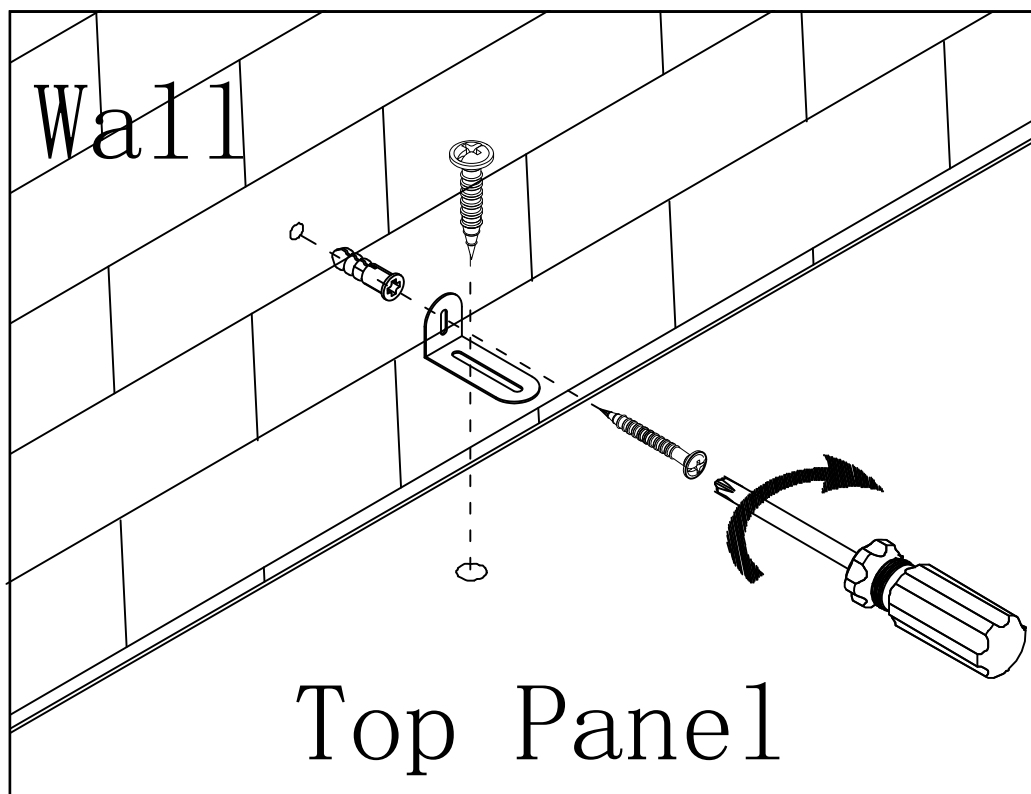


48

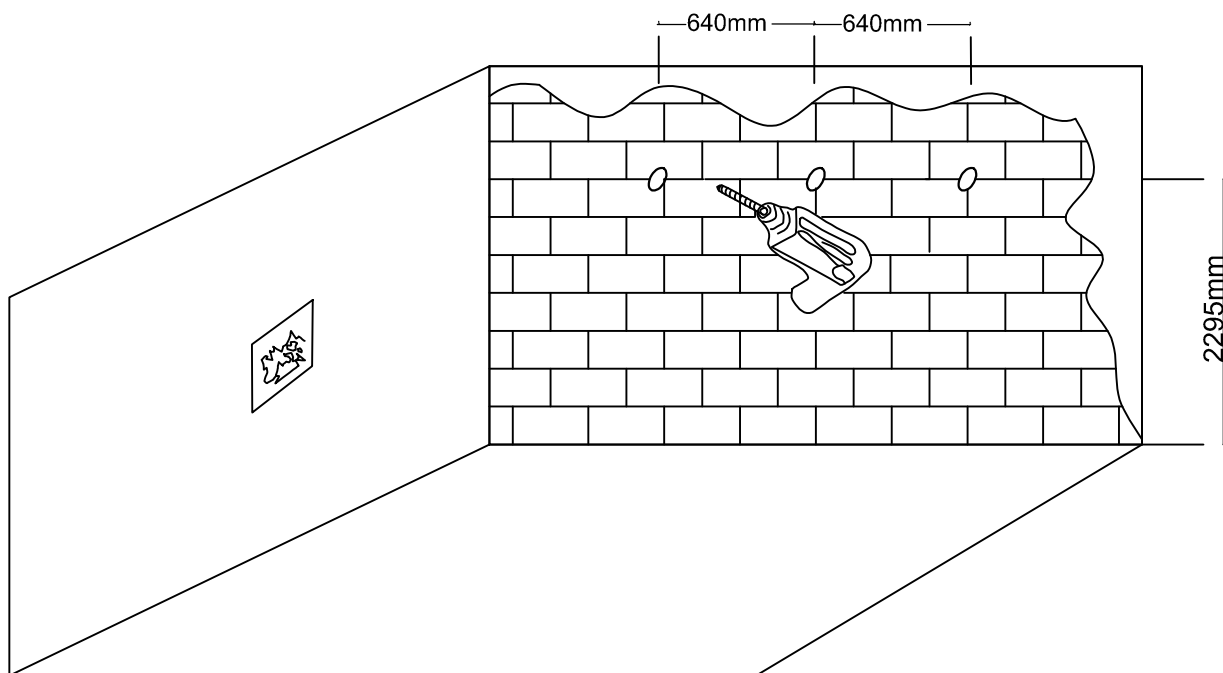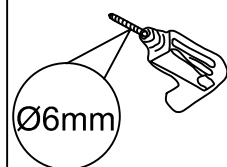



49

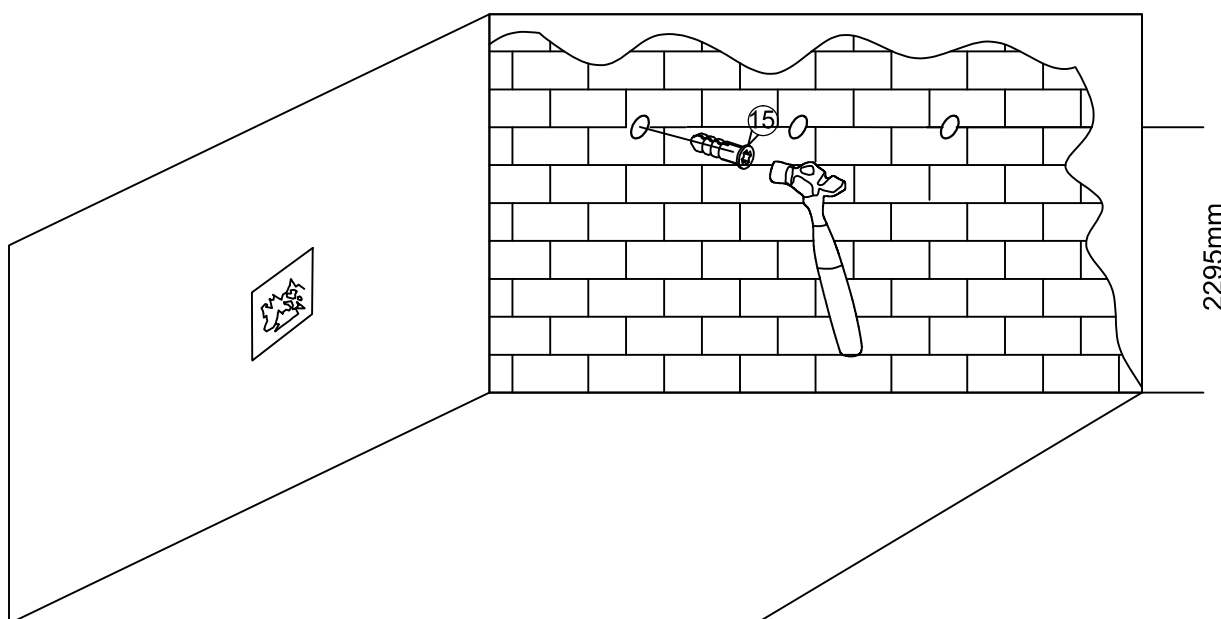
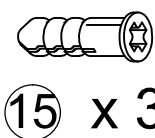


50


 ⑭ x 3

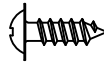
 ⑯ x 3


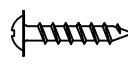
 ⑰ x 3

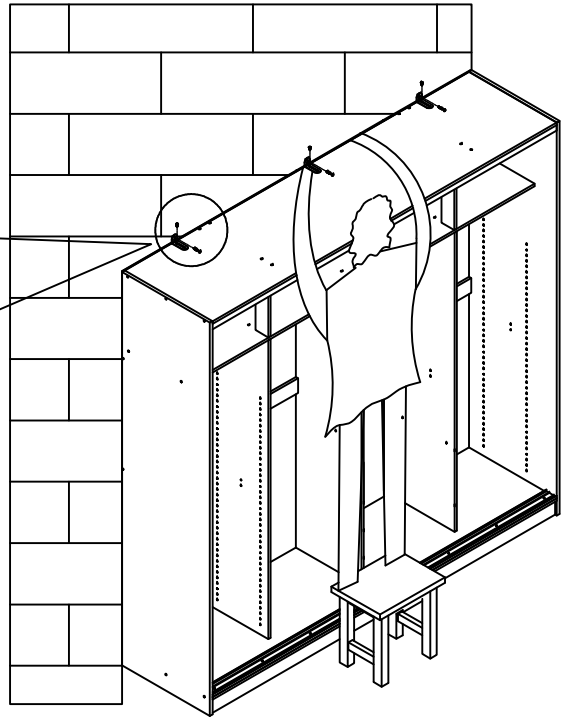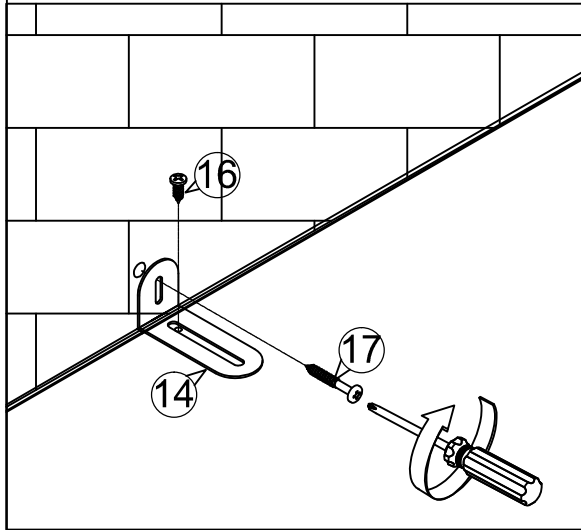


51

 ⑩ x 2

 ⑪ x 2

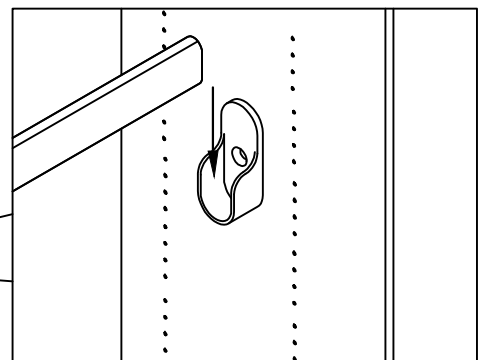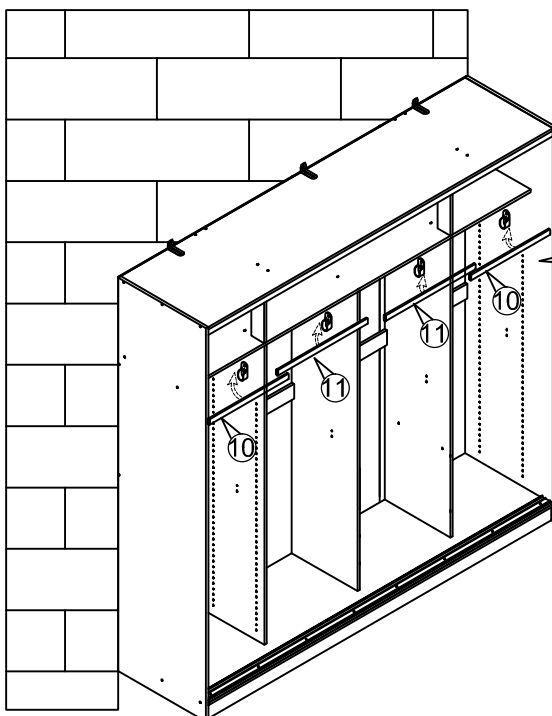




ASSEMBLY IS COMPLETE

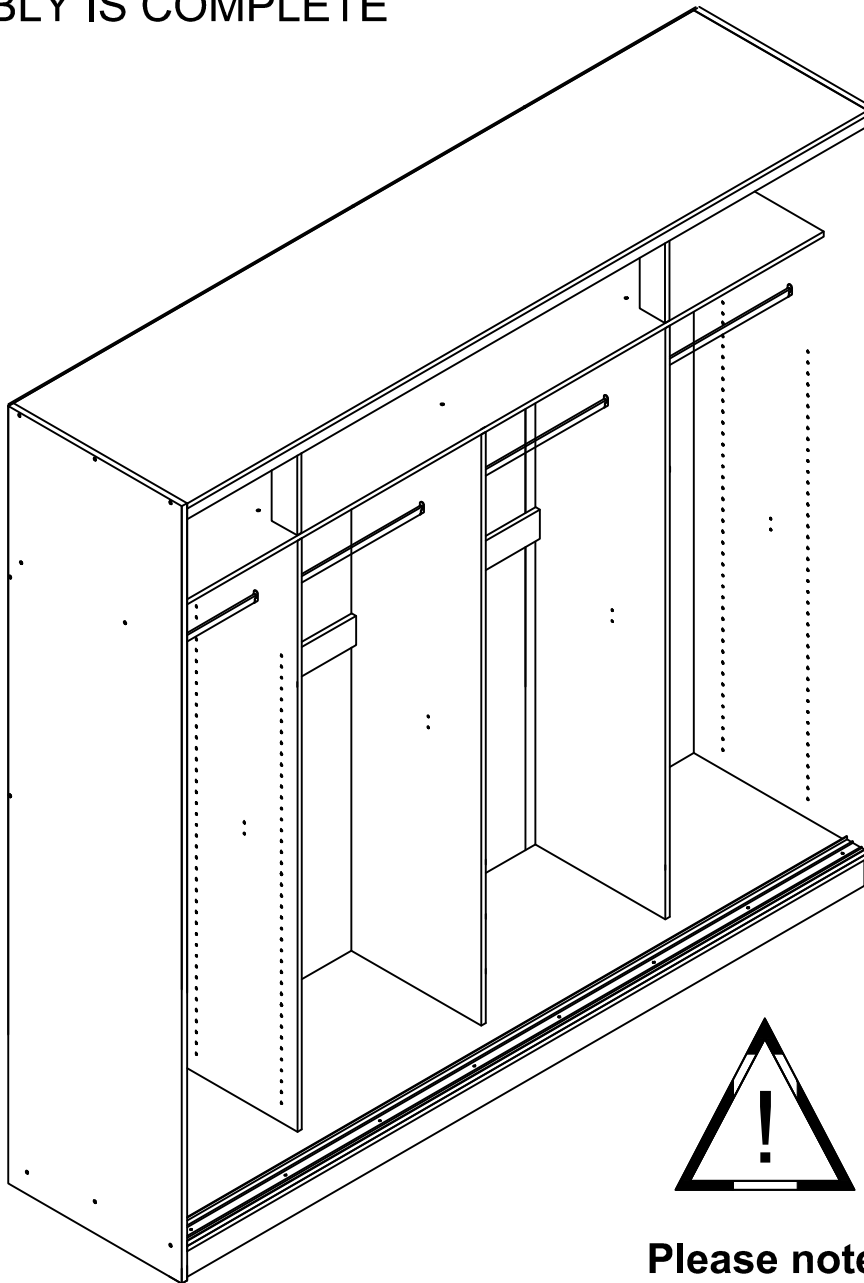


Please note – Some floors could possibly not be level or flat so it is best to ensure the wardrobe carcass frame is square and level prior to fitting of doors. This might involve the use of packing material under the base.


● IF YOU HAVE ISSUES — HELPFUL HINTS

If back panel strap drop down with gap between back panel and top panel, loosen some screw beside back panel strap, then push back panel strap upward until contact with top panel and tight screws again.

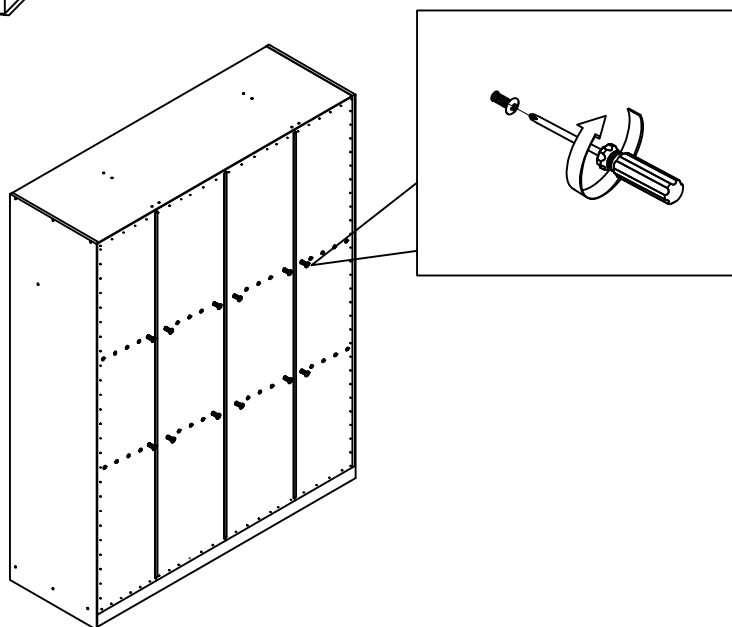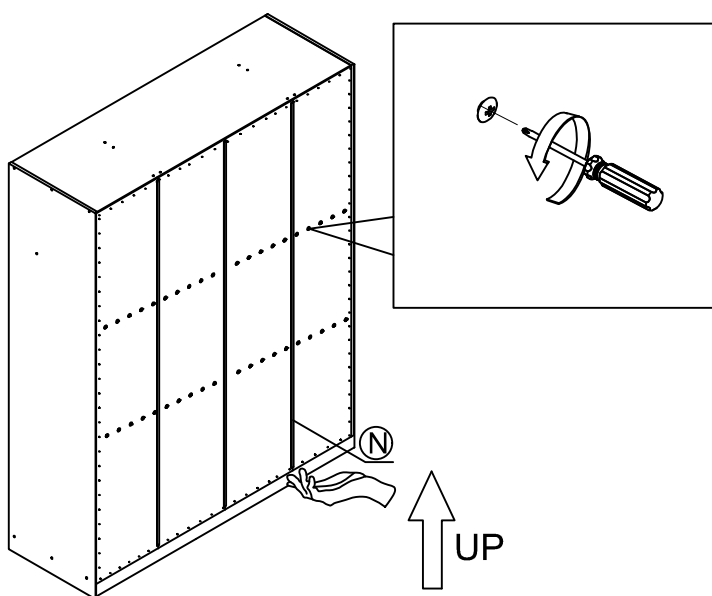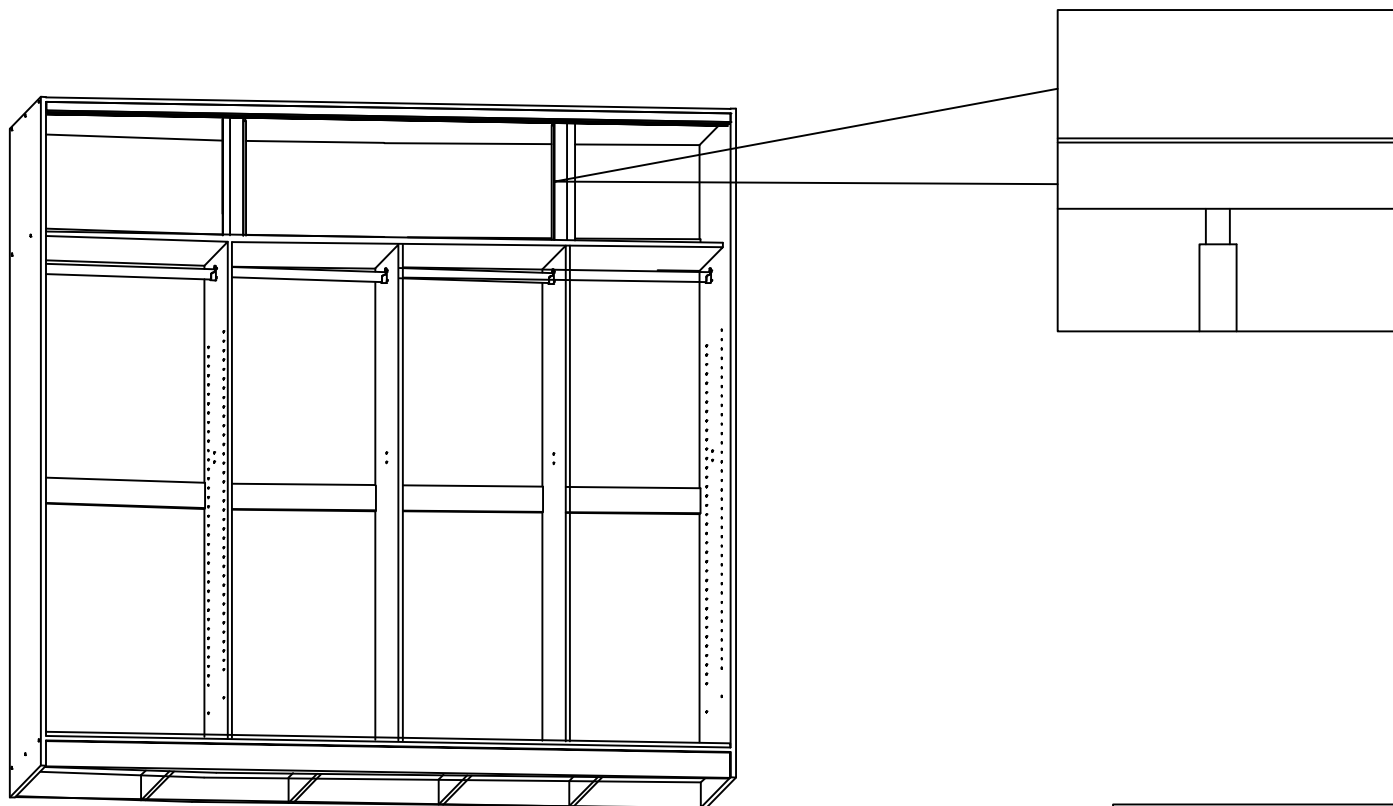


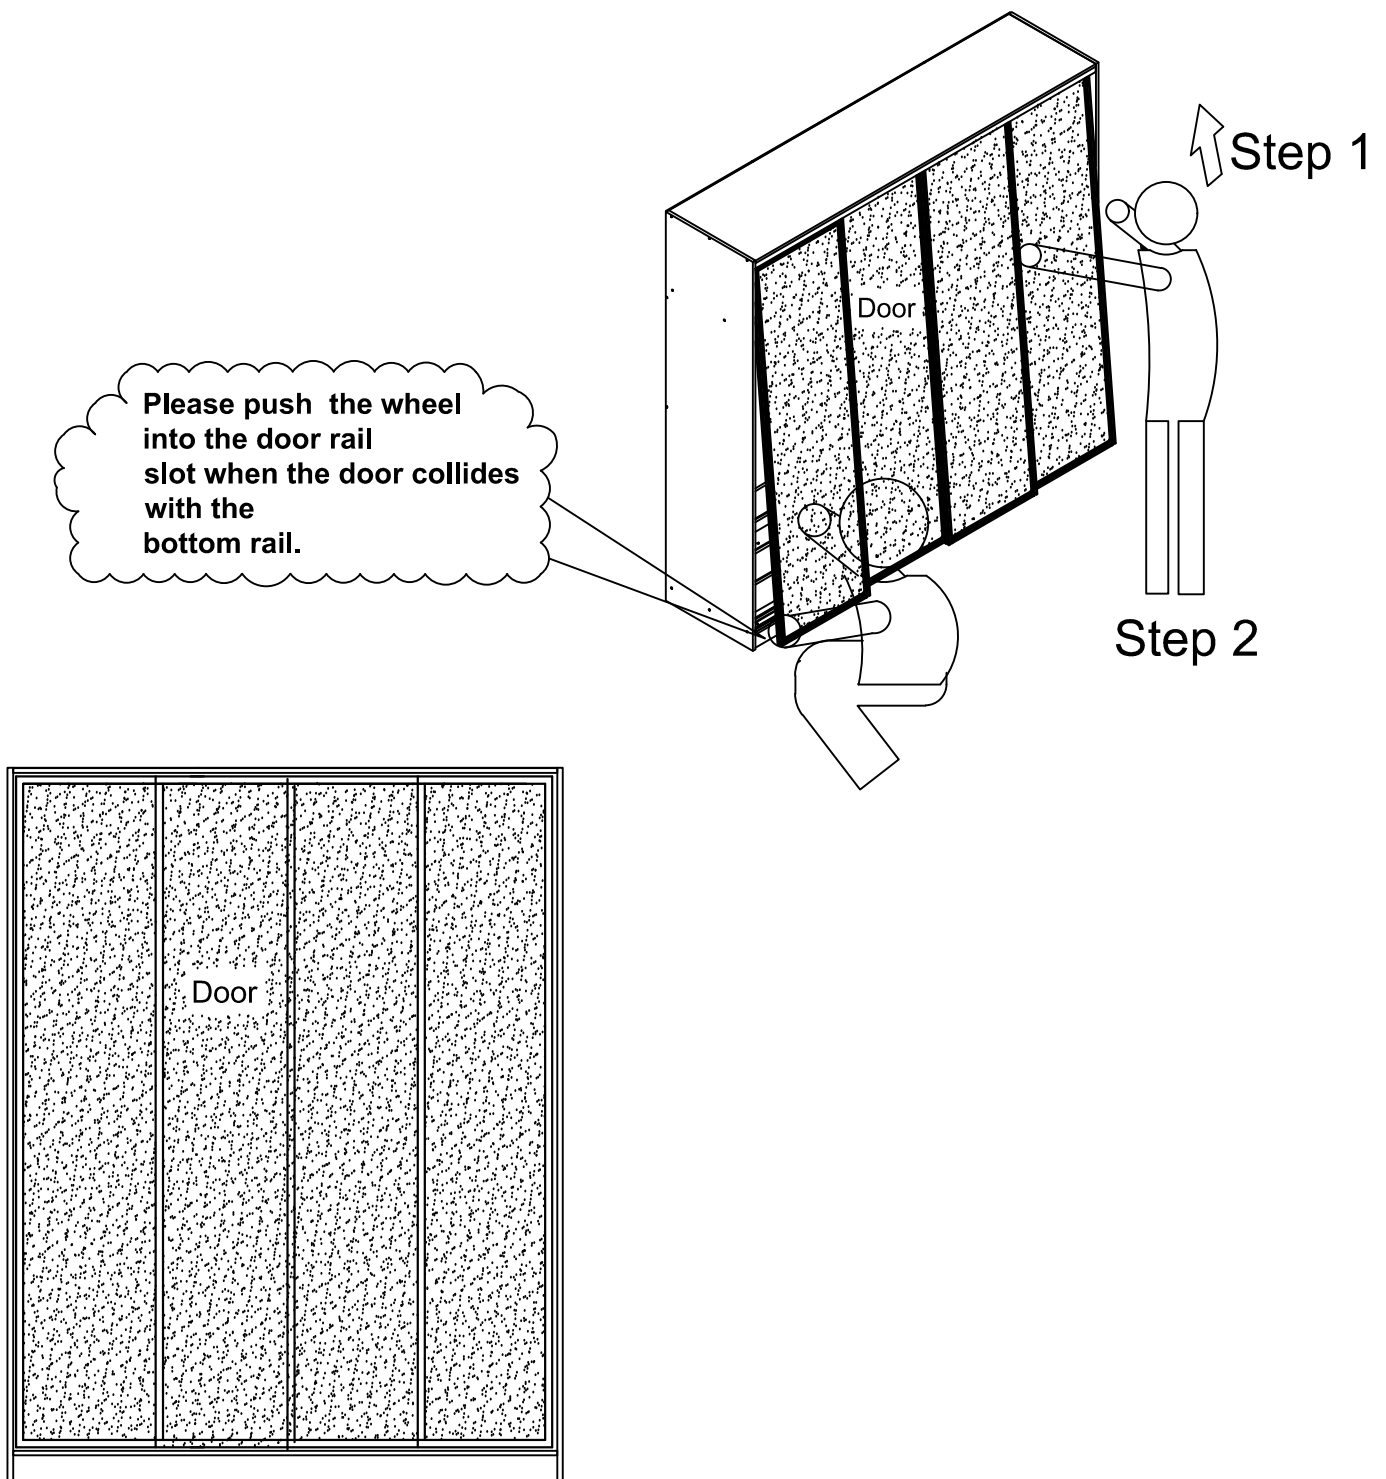



Normally the vertical edge of door should be aligned with the wardrobe side panel. Refer to below instruction if it's not.

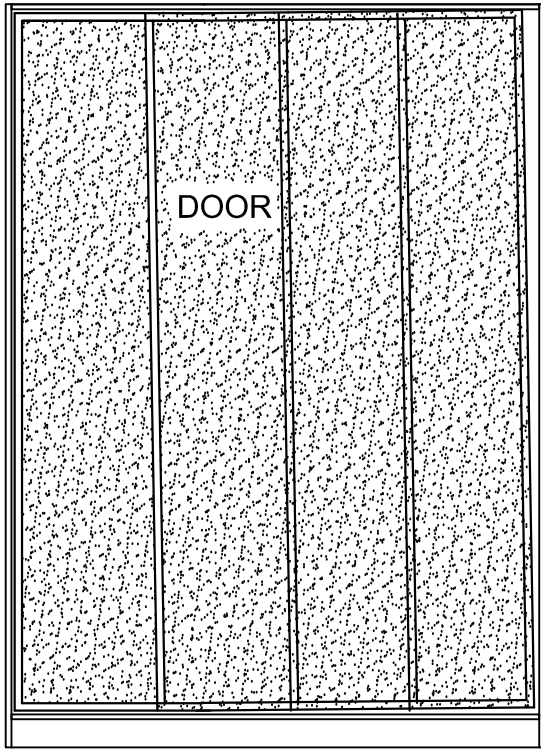


Condition

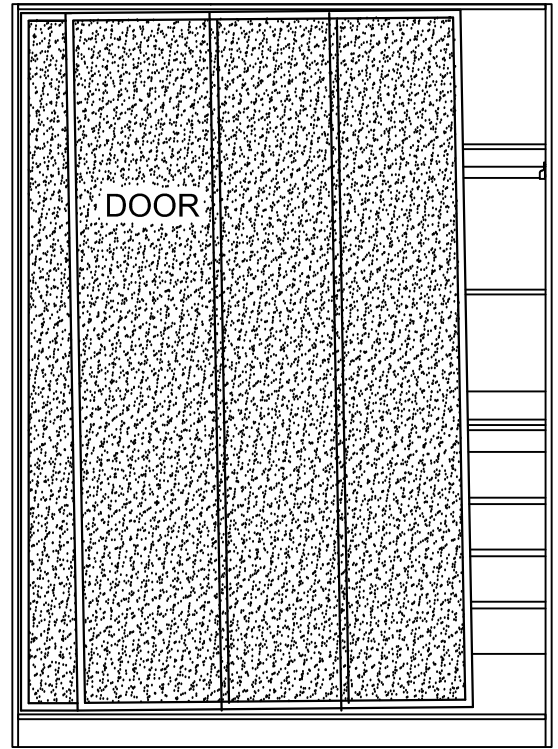


Move the tilted door to middle position.

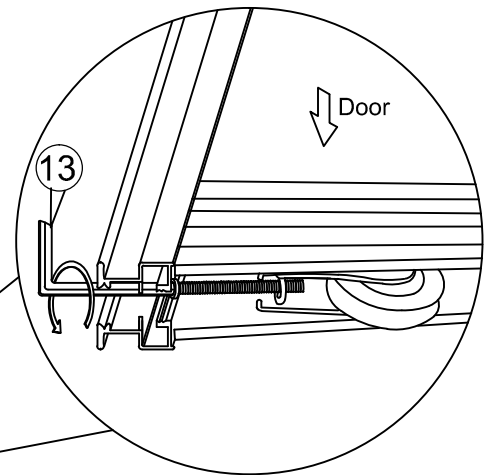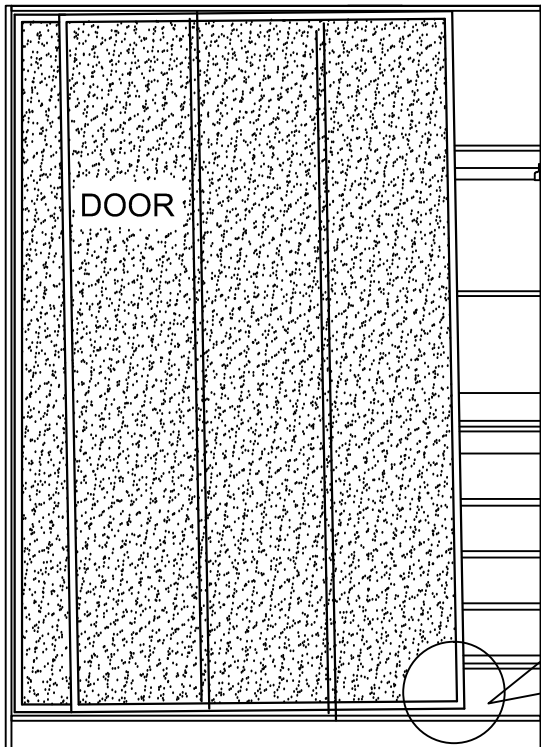



- *Turn allen wrench anticlockwise a little and remove it.
- *Slide the door to side end and check if it aligns with the side panel.
- *You may repeat the procedure several times until the door is perfectly aligned.

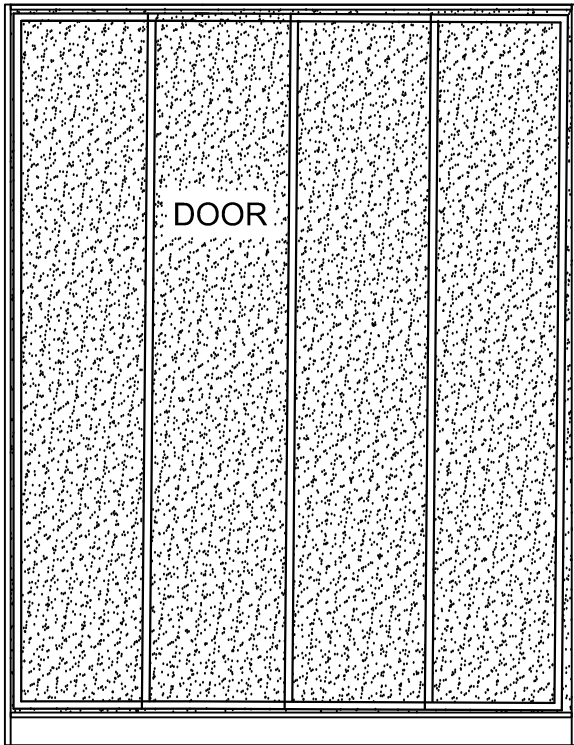

Condition

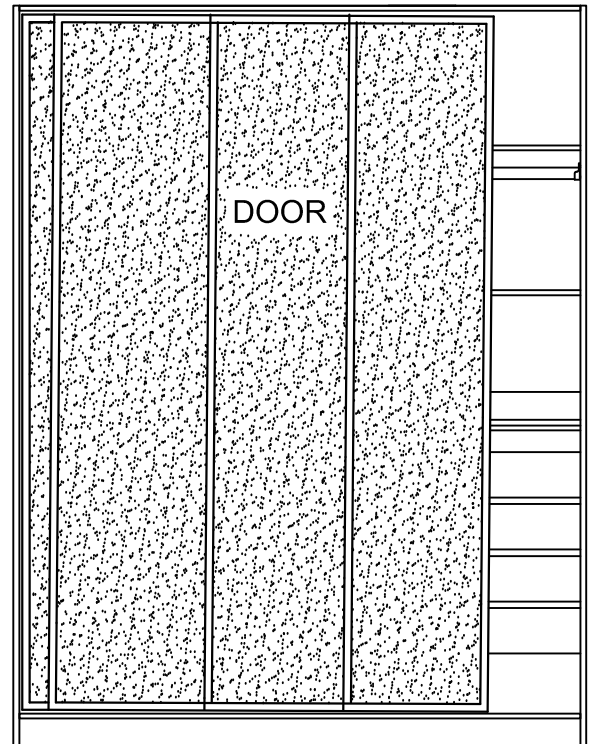


Move the tilted door to middle position.

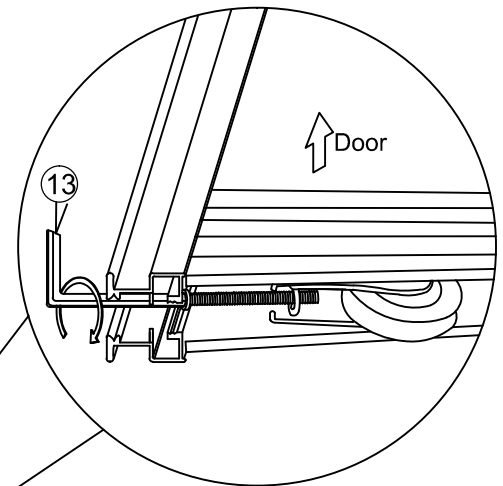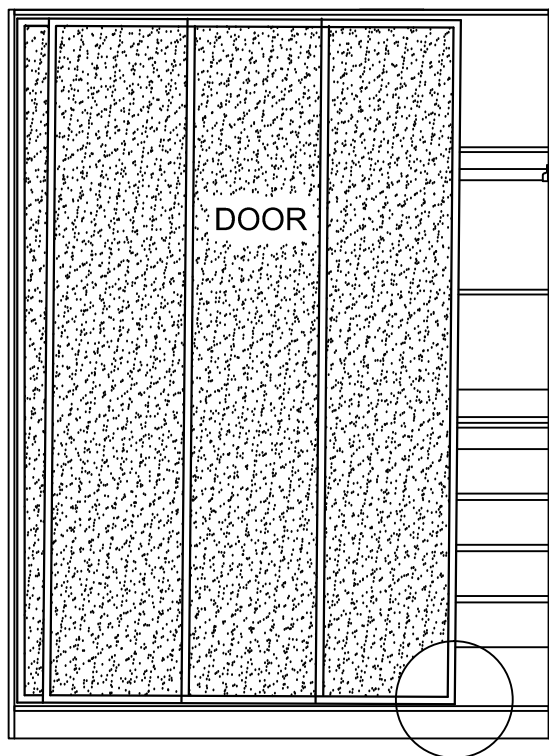



- *Turn allen wrench clockwise a little and remove it.
- *Slide the door to side end and check if it aligns with the side panel.
- *You may repeat the procedure several times until the door is perfectly aligned.

DOOR JAM


If a door jams against the rail, try re-tightening screws as follows(either on top or bottom rail).

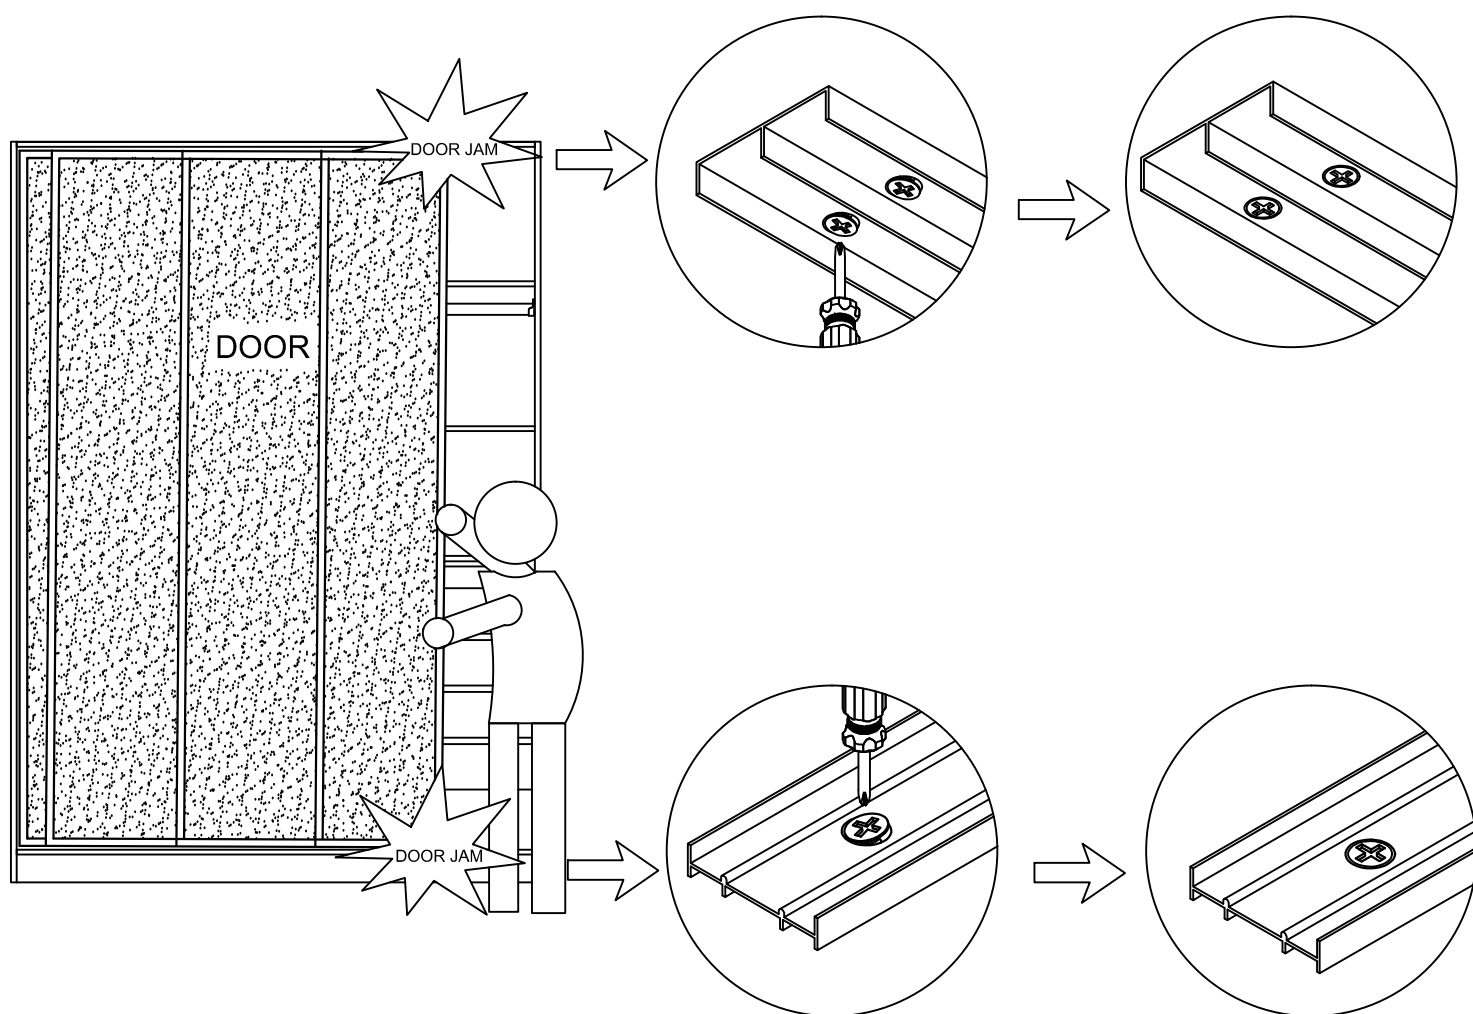

● CUSTOMISE YOUR WARDROBE WITH EXTRA MOUDLESPURCHASE SEPERATELY

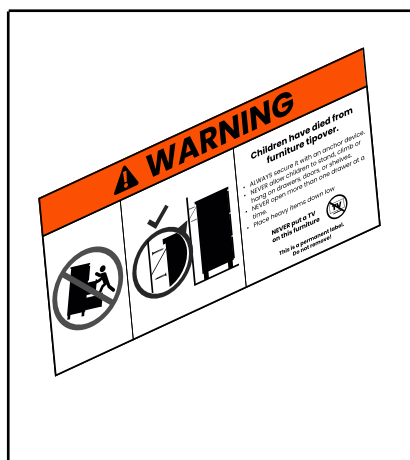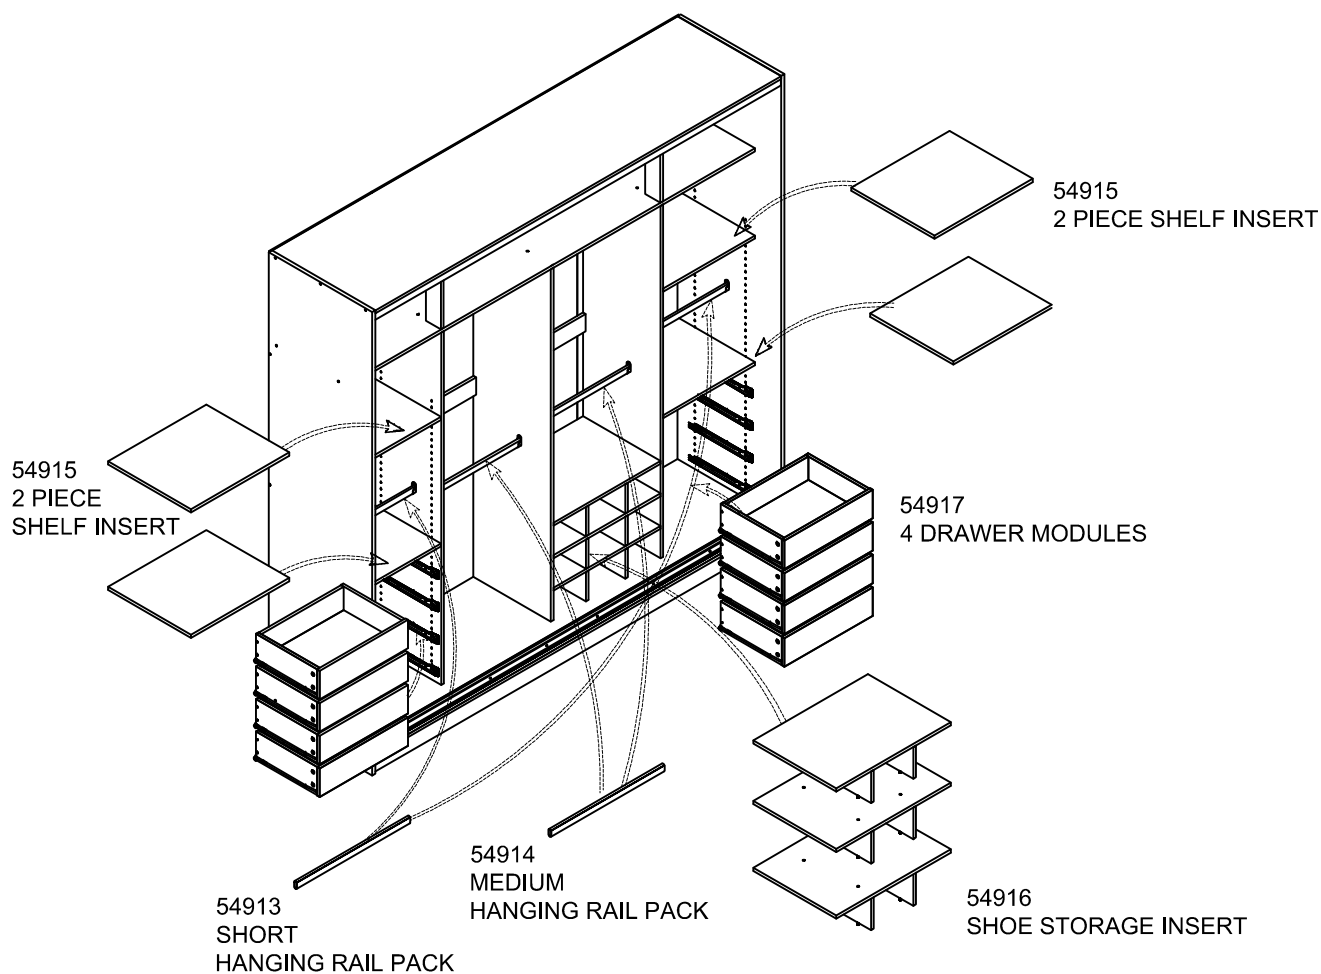

Product Care

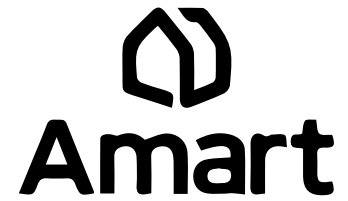

Our furniture is built to last. Following these steps for basic care should protect your investment for years to come

- Dust frequently with a clean damp lint-free cloth. This will help remove abrasive build up which can damage a finish over time
- Do not place hot objects on any furniture surface. Always use a hot plate or placemat.
- Avoid exposing your furniture to strong sunlight, heat outlet, open windows or dampness. Prolonged exposure to direct sunlight can fade the finish of your furniture, while extreme temperature and humidity changes can cause cracking or splitting
- Do not expose your furniture to any liquids. Never allow water to sit on your furniture. Alcohol, nail polish and perfume are also dangerous as they will dissolve the finish on contact and may require professional repairs
- Do not allow plastic to come in direct contact with your furniture. Chemicals in the plastic of placemats etc. may soften and mark the finish if left in contact with the furniture for a period of time

1