




ASSEMBLY INSTRUCTION

VALDA TALL CHEST

ITEM CODE 85104

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please phone
Amart Furniture Road, Customer Service Free call 1800 351 084

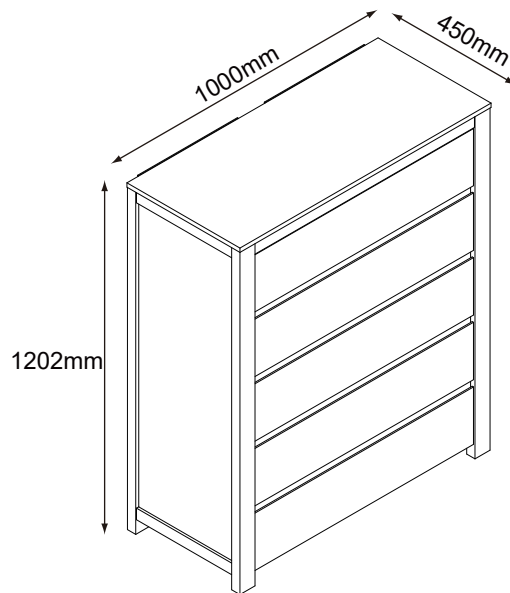


Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia.
For any assistance with assembly or for missing parts please phone
Amart Furniture Road, Customer Service Free call 1800 351 084

PRE-ASSEMBLY PREPARATION


Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.

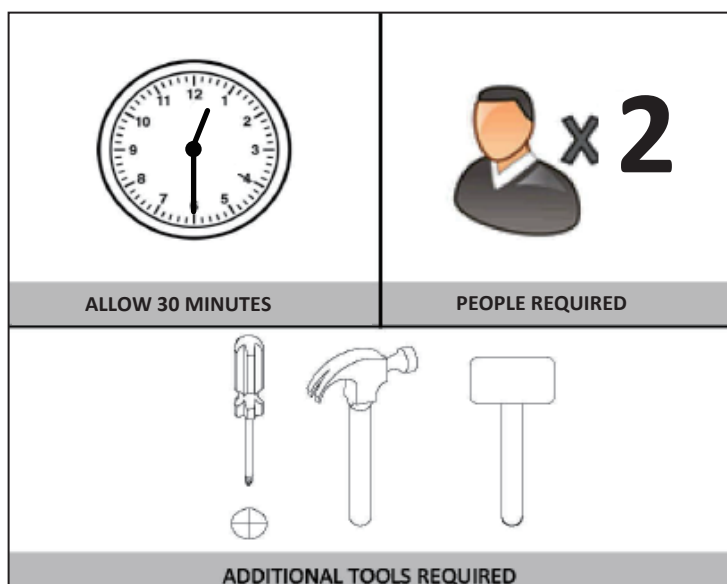






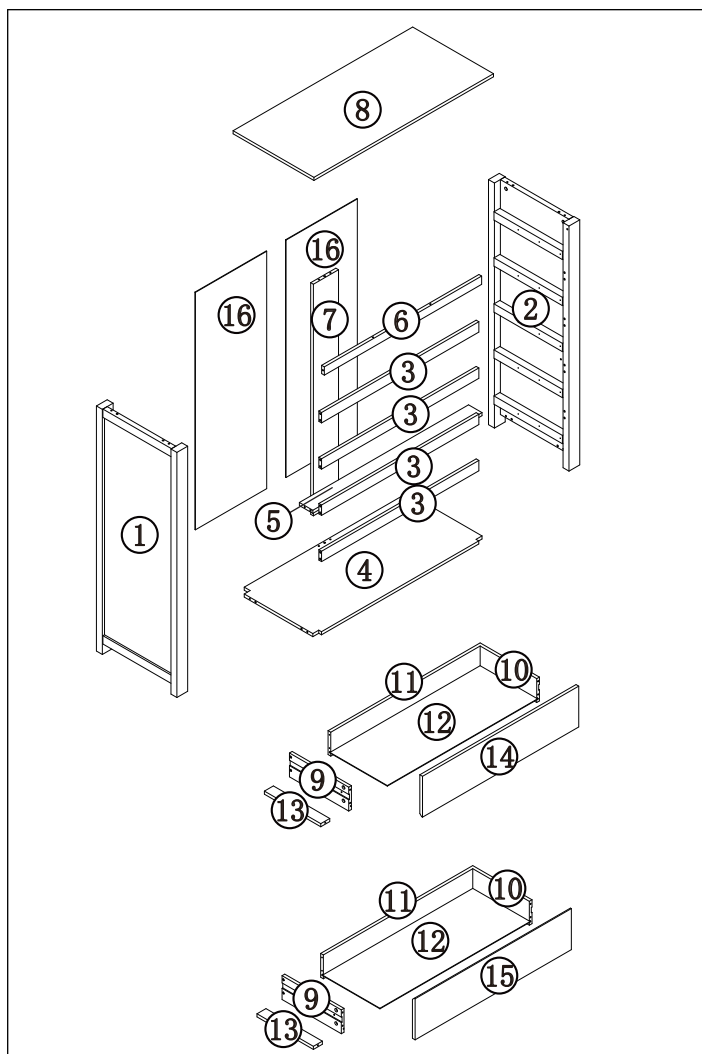





 WARNING		
		<p>Children have died from furniture tipover.</p> <ul style="list-style-type: none">• ALWAYS secure it with an anchor device.• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.• NEVER open more than one drawer at a time.• Place heavy items down low <p>NEVER put a TV on this furniture </p> <p>This is a permanent label. Do not remove!</p>


PARTS LIST




1	Side panel
2	Side panel
3	Rail
4	Bottom panel
5	Rail
6	Rail
7	Connect panel
8	Top panel
9	Drawer side panel
10	Drawer side panel
11	Drawer back panel
12	Drawer base
13	Support panel
14	Drawer front
15	Drawer front
16	Back panel

A cam pin  M7×39mm 39×A	B cam lock  39×B	C dowel  M8×30mm 29×C	D screw  M3.5×14mm 30×D	E screw  M5×40mm 47×E	F screw  M4×14mm 10×F
G screw  M3×16mm 28×G	H foot nail  4×H	I screw  M5×50mm 2×I	J slide  10×J	K wall fixing  M4×30mm M3.5×14mm 1×K	


CAM LOCK INSTALLATION




Step 1

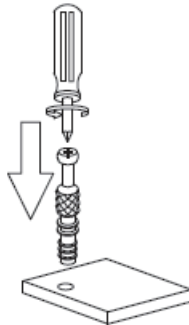


Step 2

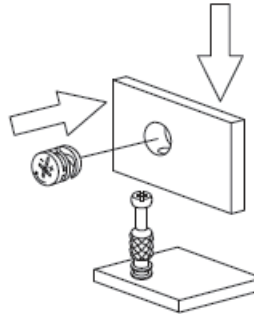

Step 3


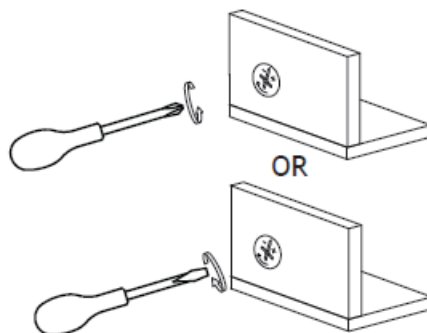


Lock




Fix cam nut into the bottom of hole then tighten it.


STEP1: Fix slide (J) to panel (1&2) with screws (D).

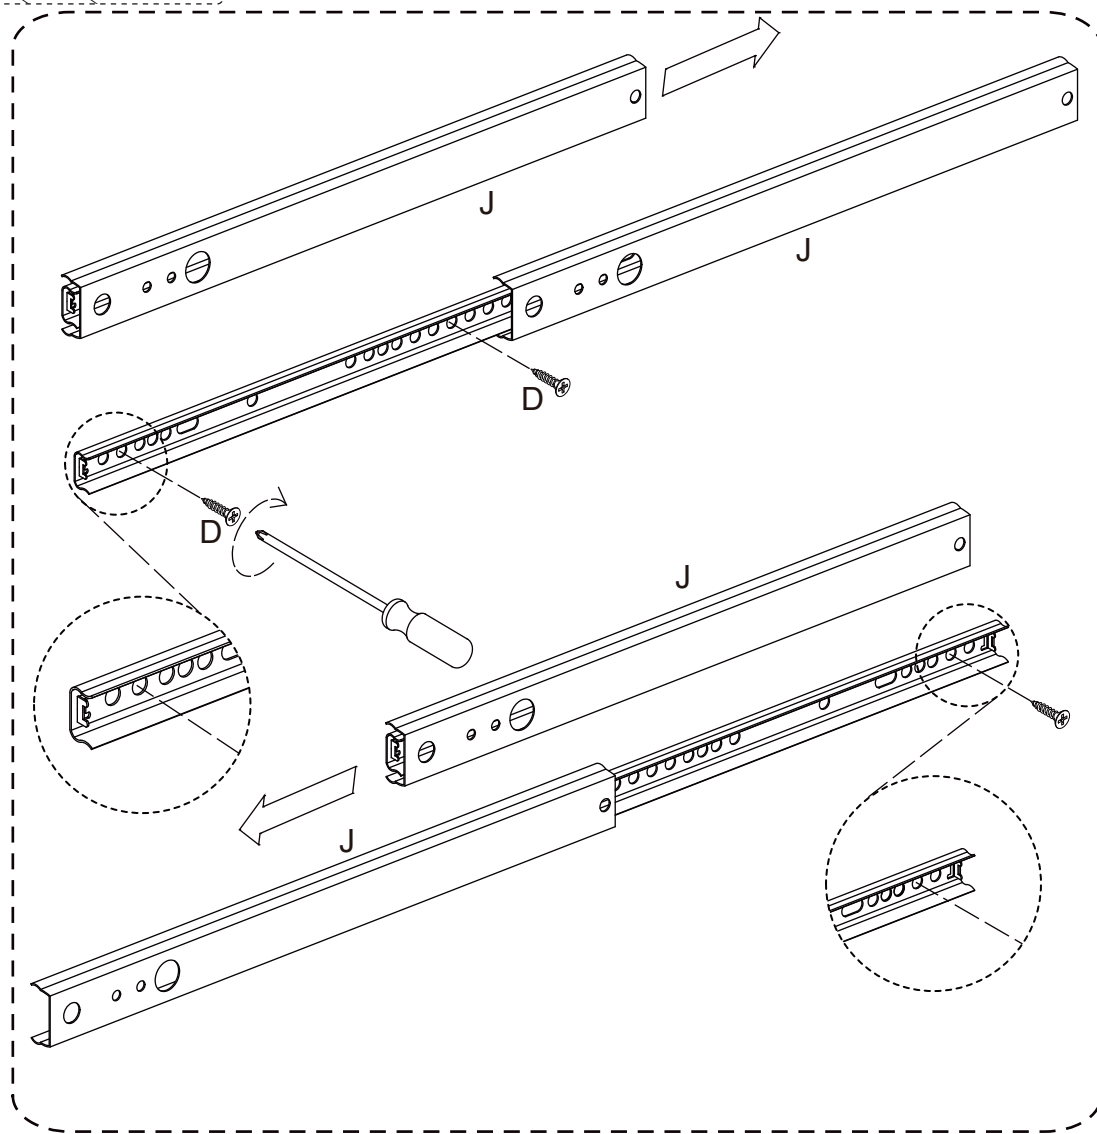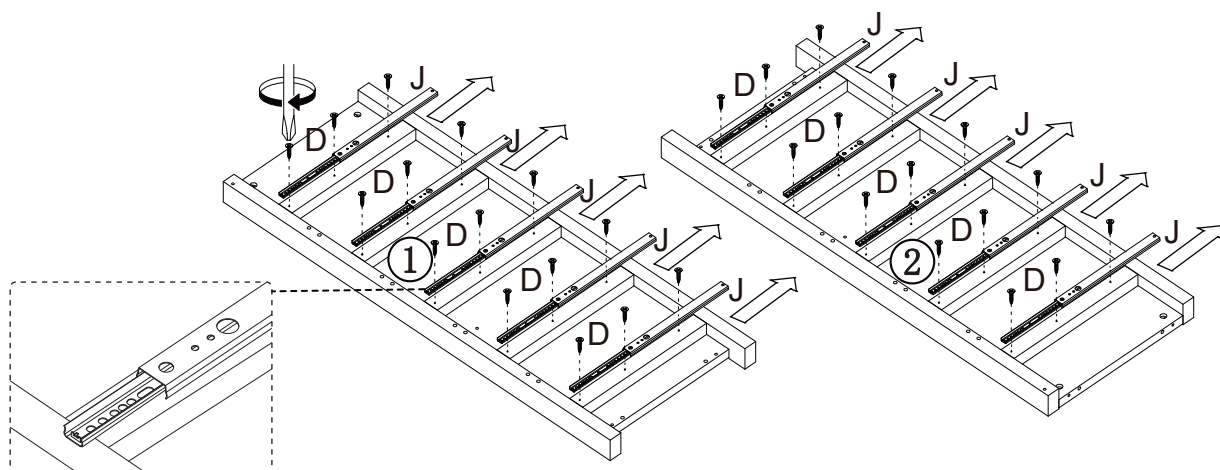


STEP2: Fix cam pin (A) to panel (1&2).

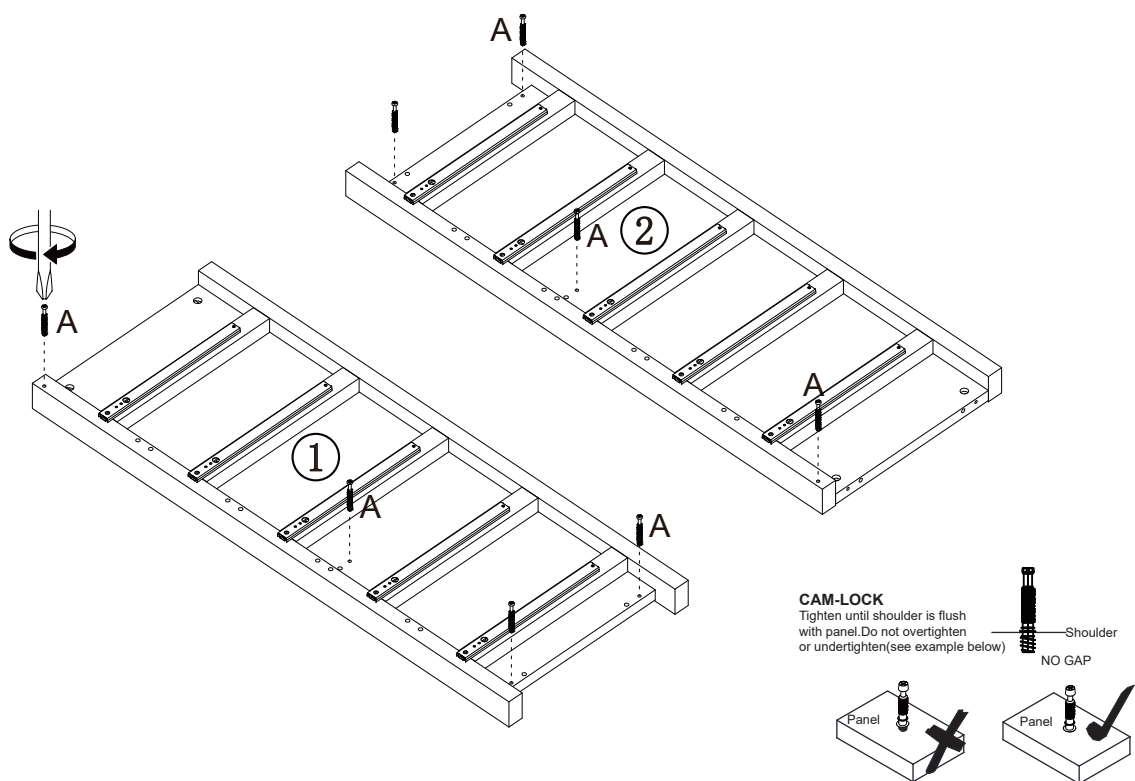


STEP3: Insert dowel (C) to panel (3&4).

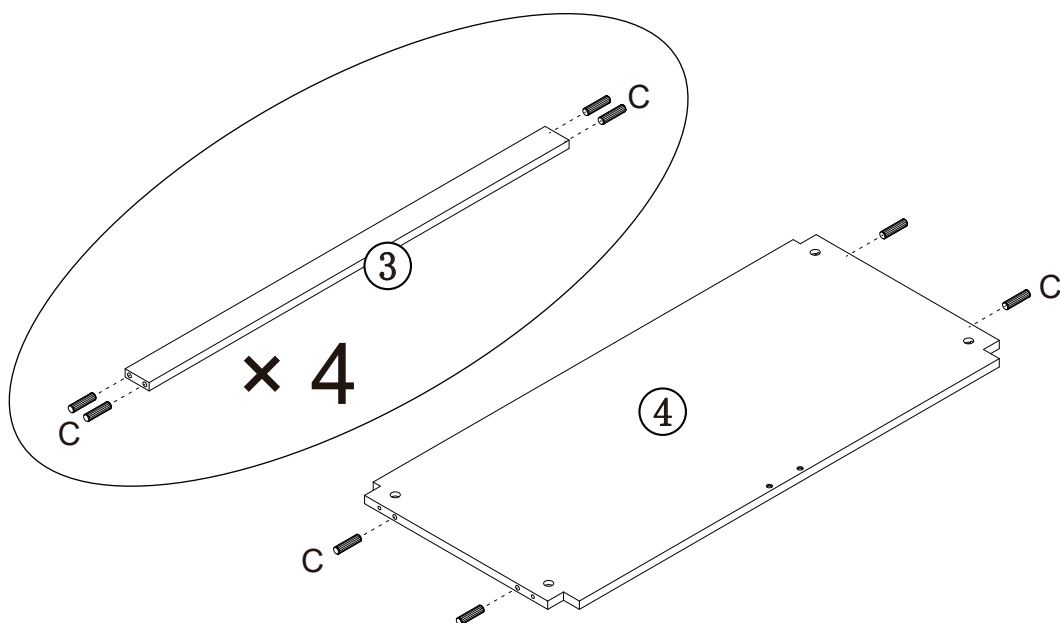


STEP4: Insert dowel (C) to panel (5&7).

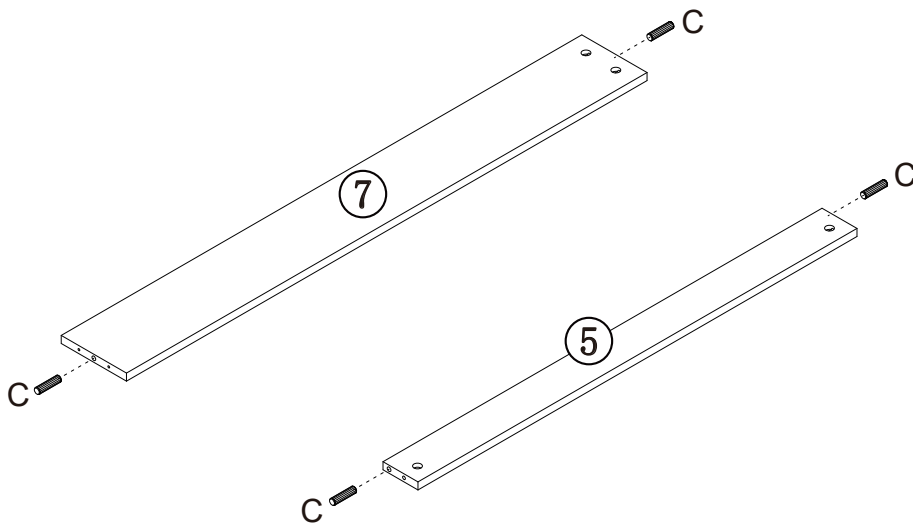


STEP5: Attach panel (3&4&5&6) to panel (1) with cam lock (B).

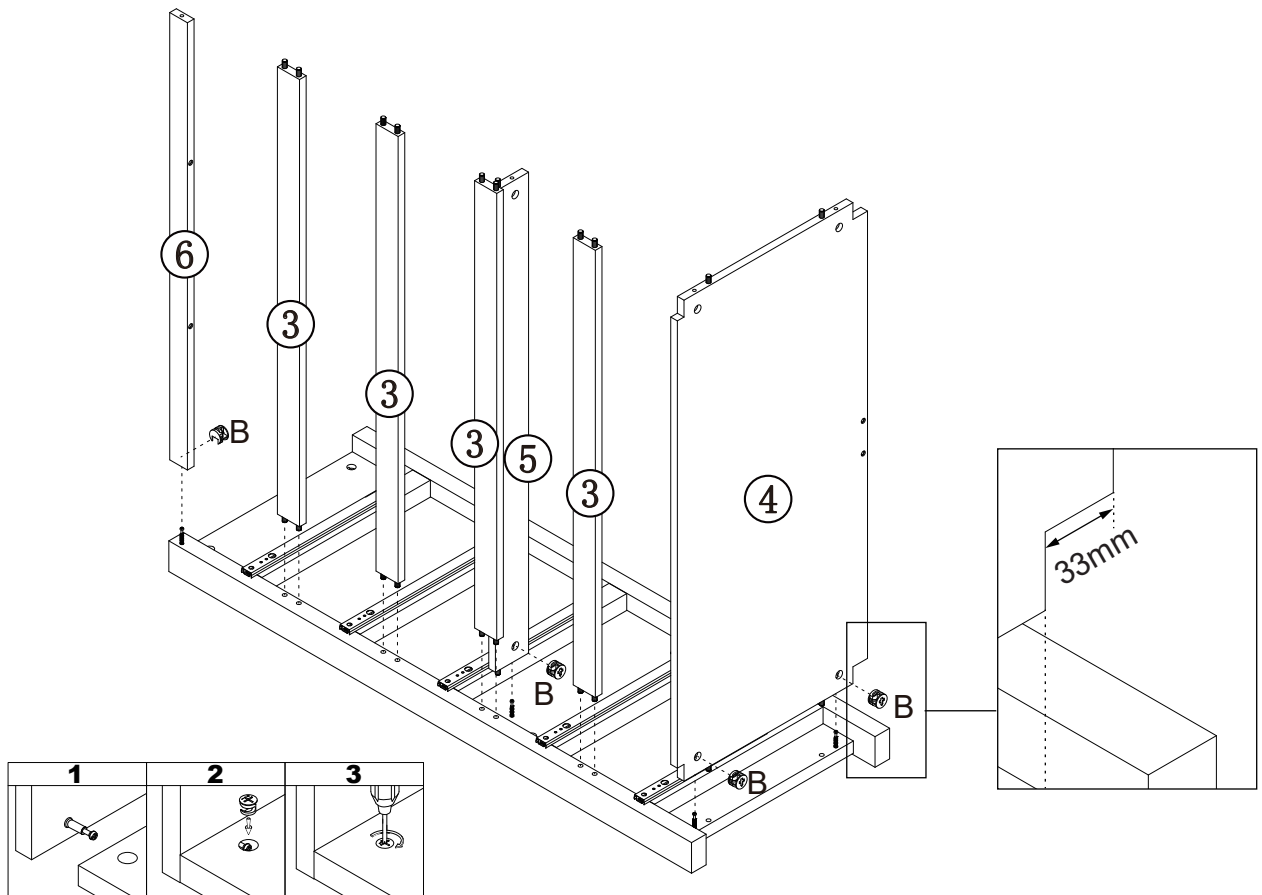


STEP6: Attach panel (2) to the body with cam lock (B).

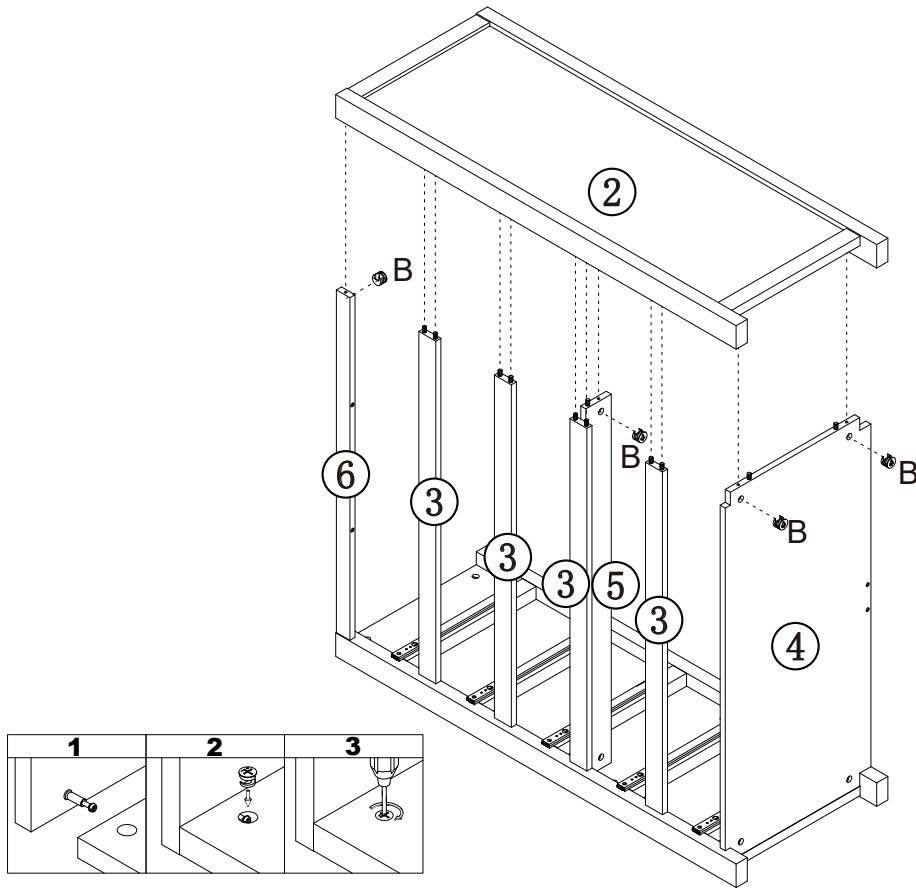


STEP7: Attach panel (7) to the body with screws (E).

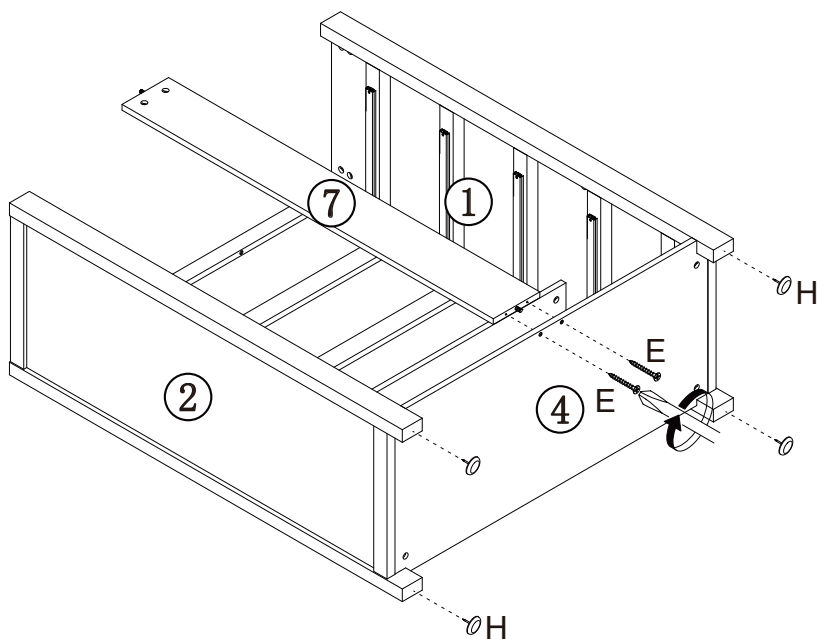



**STEP8: Attach panel (7) to the body with screws (E).
Fix foot nail (H) to panel (1&2).**

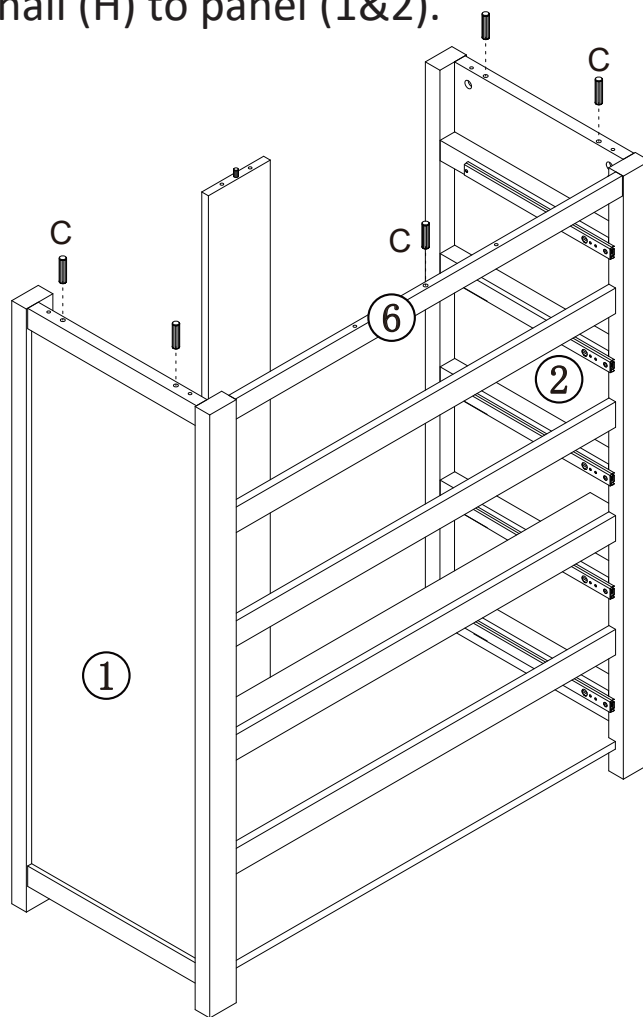


STEP9: Fix cam pin (A) to panel (8).

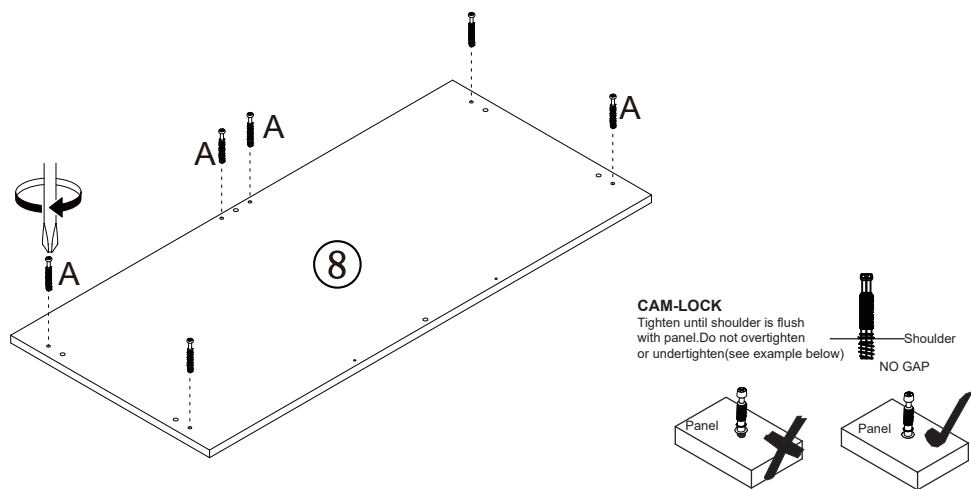

STEP10: Attach panel (8) to the body with cam lock (B).

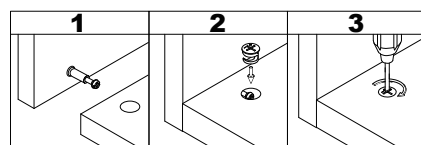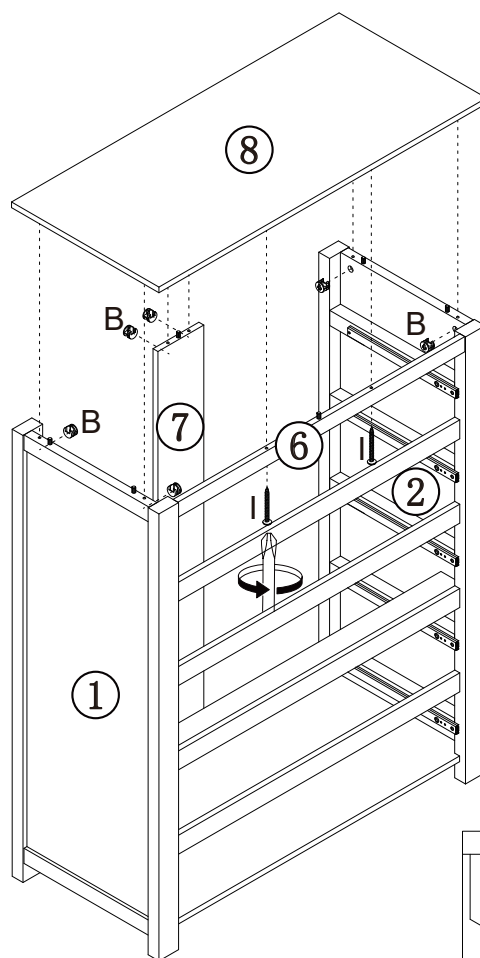


STEP11: Attach panel (9&10) to panel (11) with screws (E).
Insert drawer base (12) and support panel (13) to drawer body.

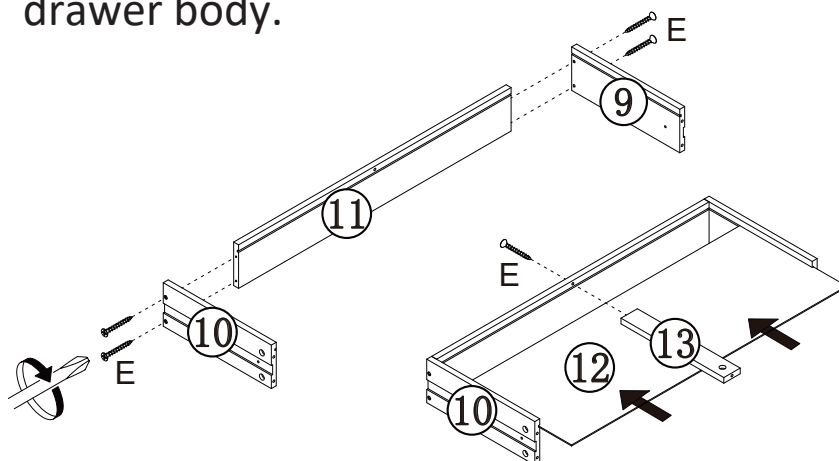

× 5


STEP12: Fix cam pin (A) to panel (14).

Attach panel (14) to the body with cam lock (B).

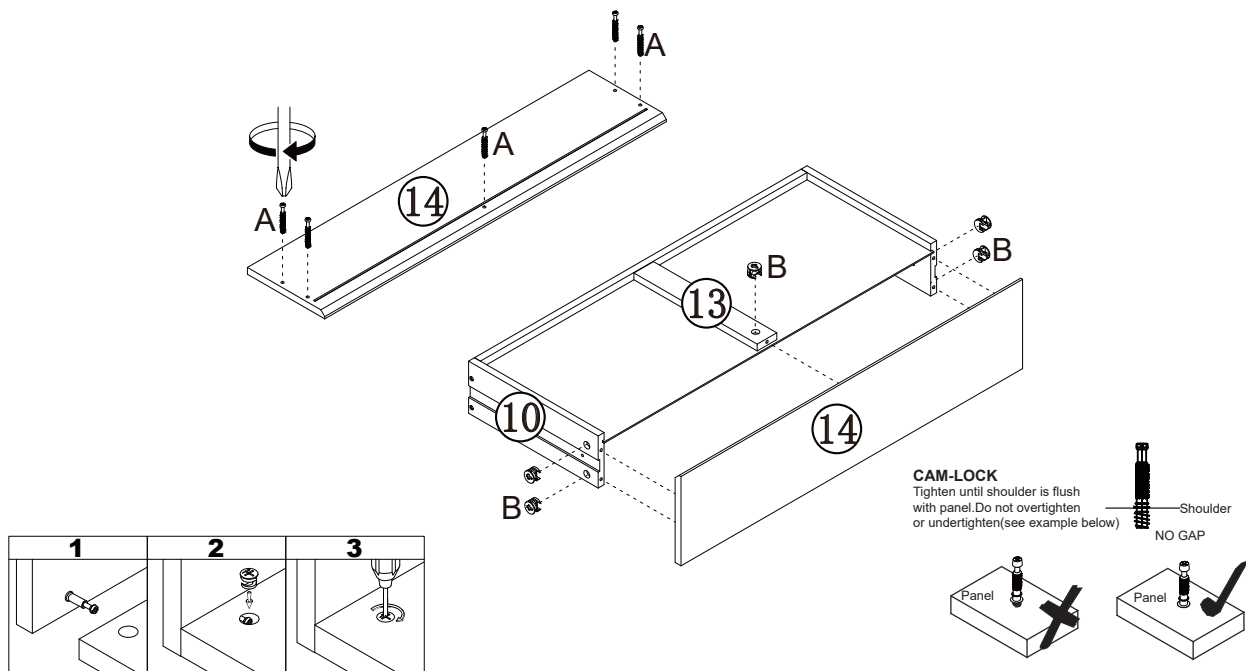



STEP13: Fix cam pin (A) to panel (15).

Attach panel (15) to the body with cam lock (B).

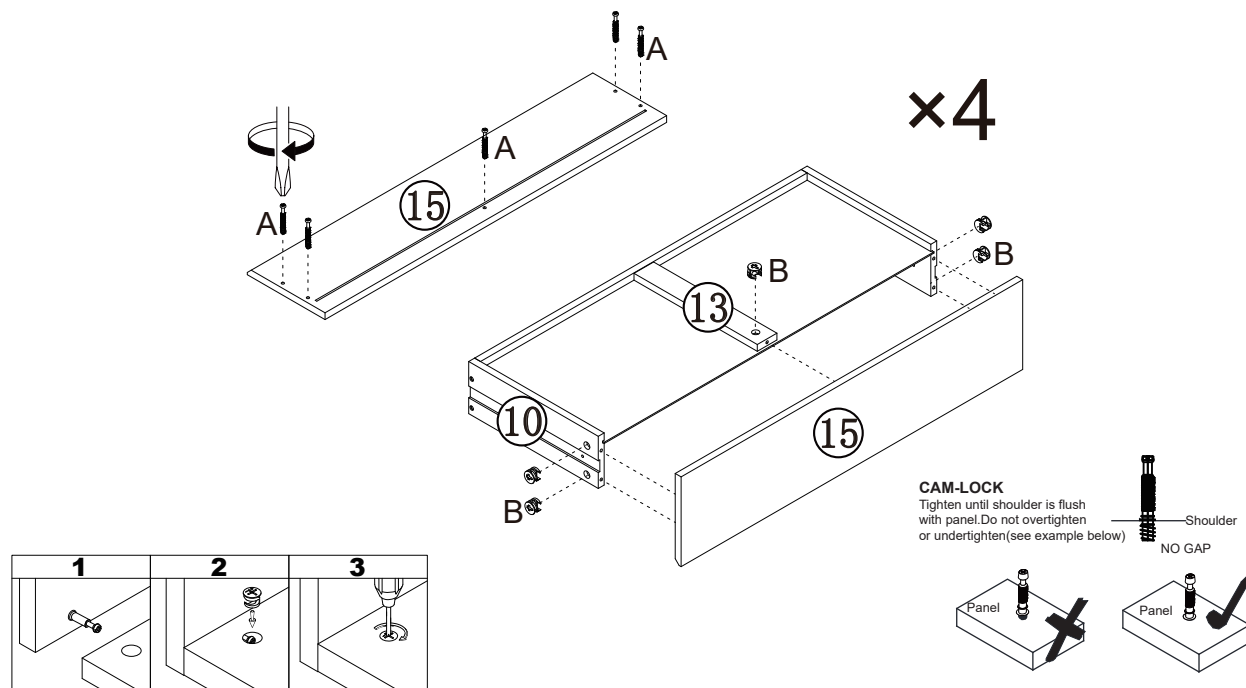


STEP14: Fix slide (J) to drawer side panels.

Please insert the drawer with tip warning sticker to top slot of the bedside table.

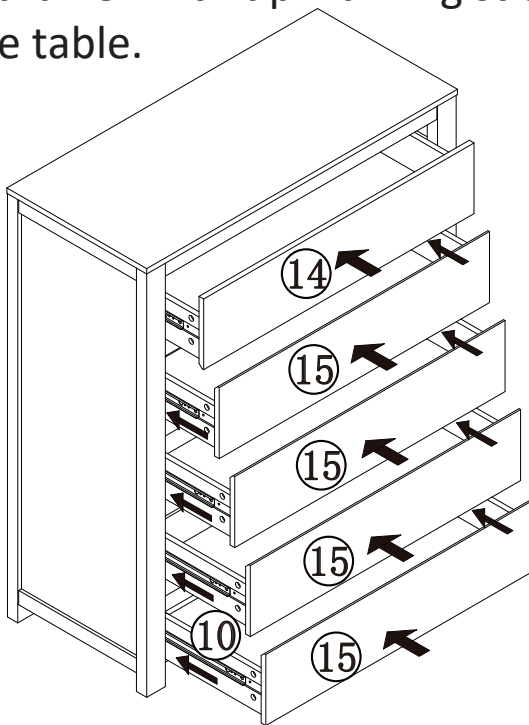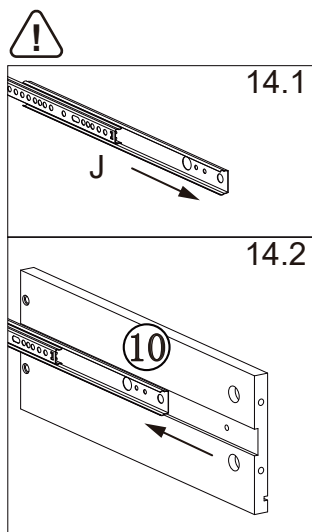


STEP15: Lock slide (J) to drawer with screw (F).


Please insert the drawer with tip warning sticker to top slot of the bedside table.

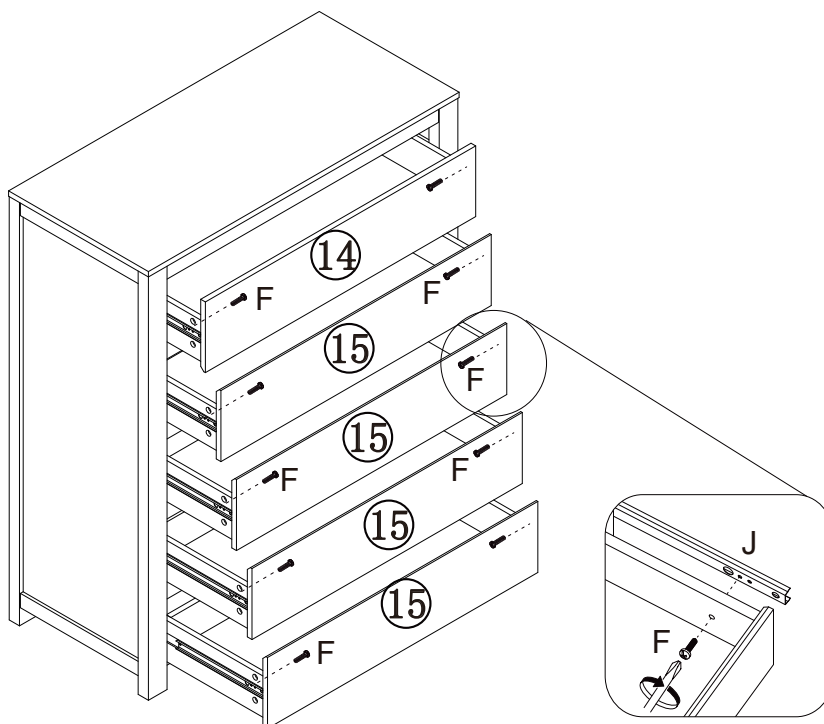

STEP16: Attach panel (16) to the body with screws (G).

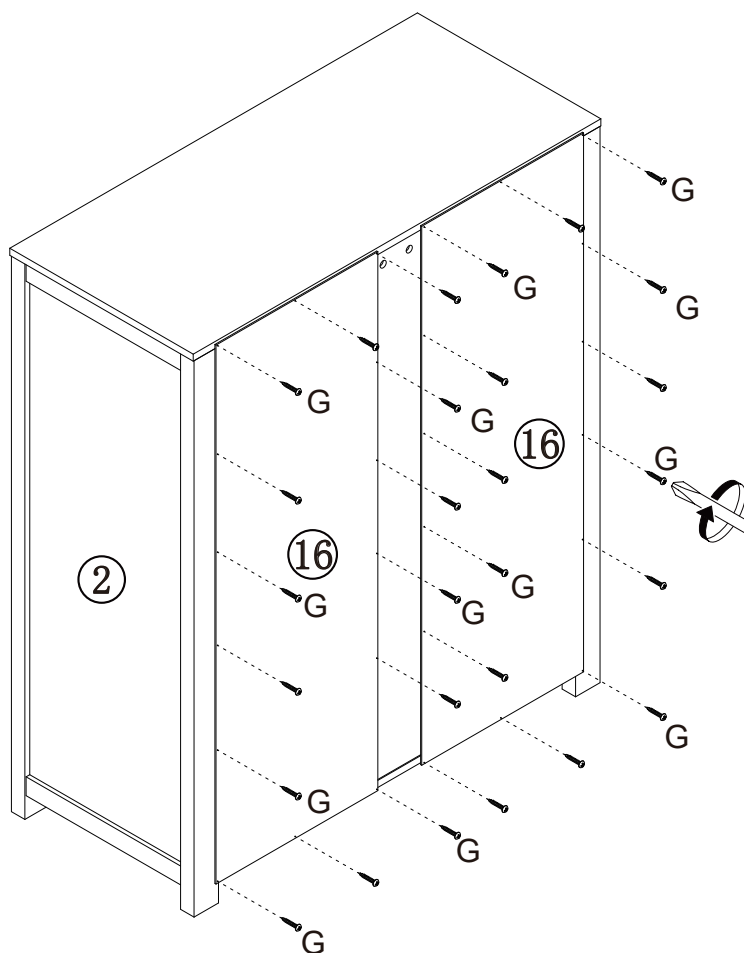

ASSEMBLY IS COMPLETE

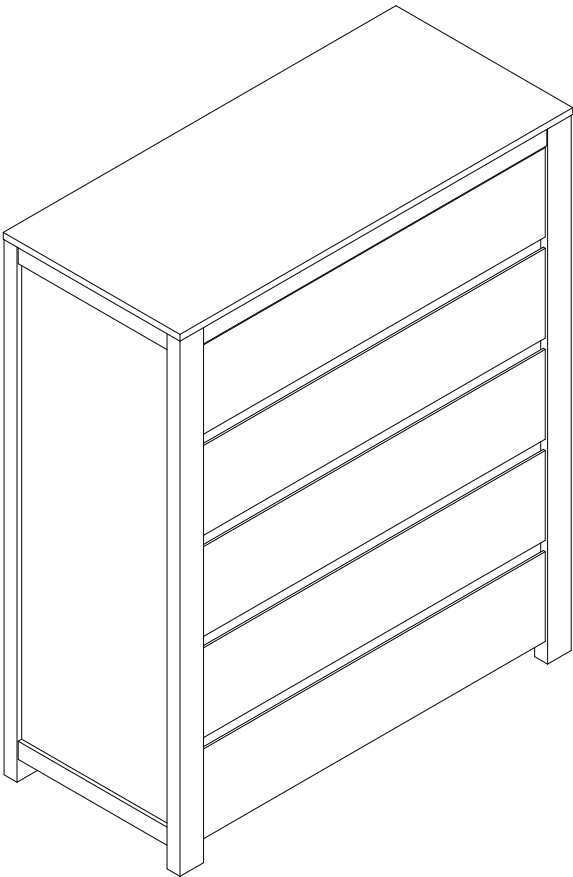

SAFETY BRACKETS INSTRUCTIONS

This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

HARDWARE



Mounting Plate x 2




Wall Strap x 1



Large Screw x2



Small Screw x2

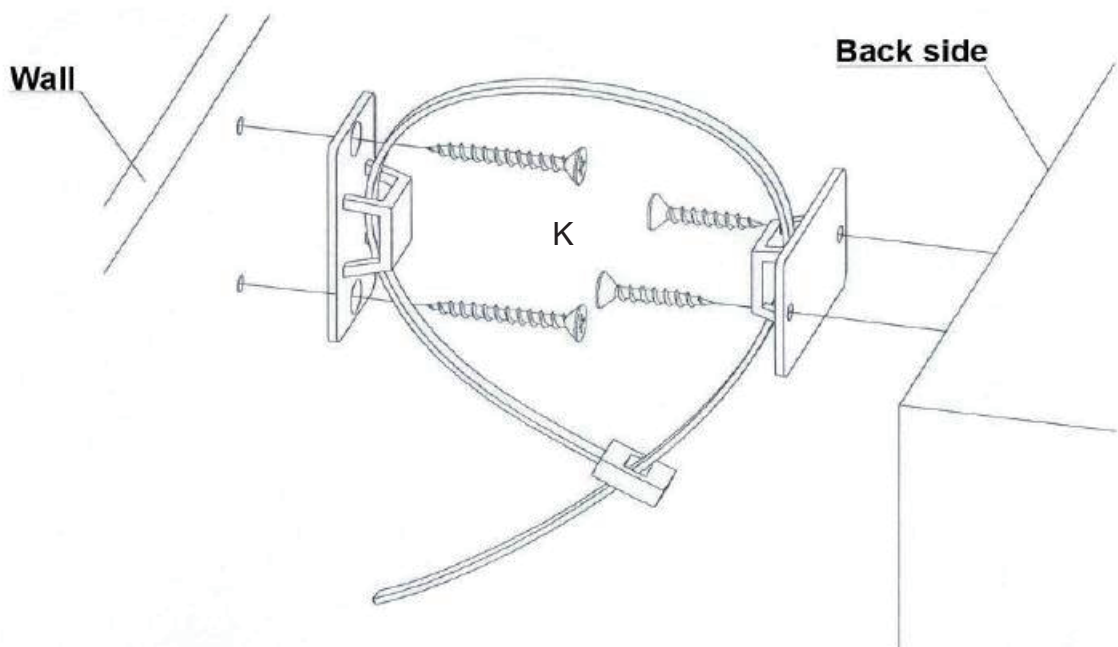

General Product Care

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.