




ASSEMBLY INSTRUCTION

KENDRICK TALL CHEST

ITEM CODE 84722

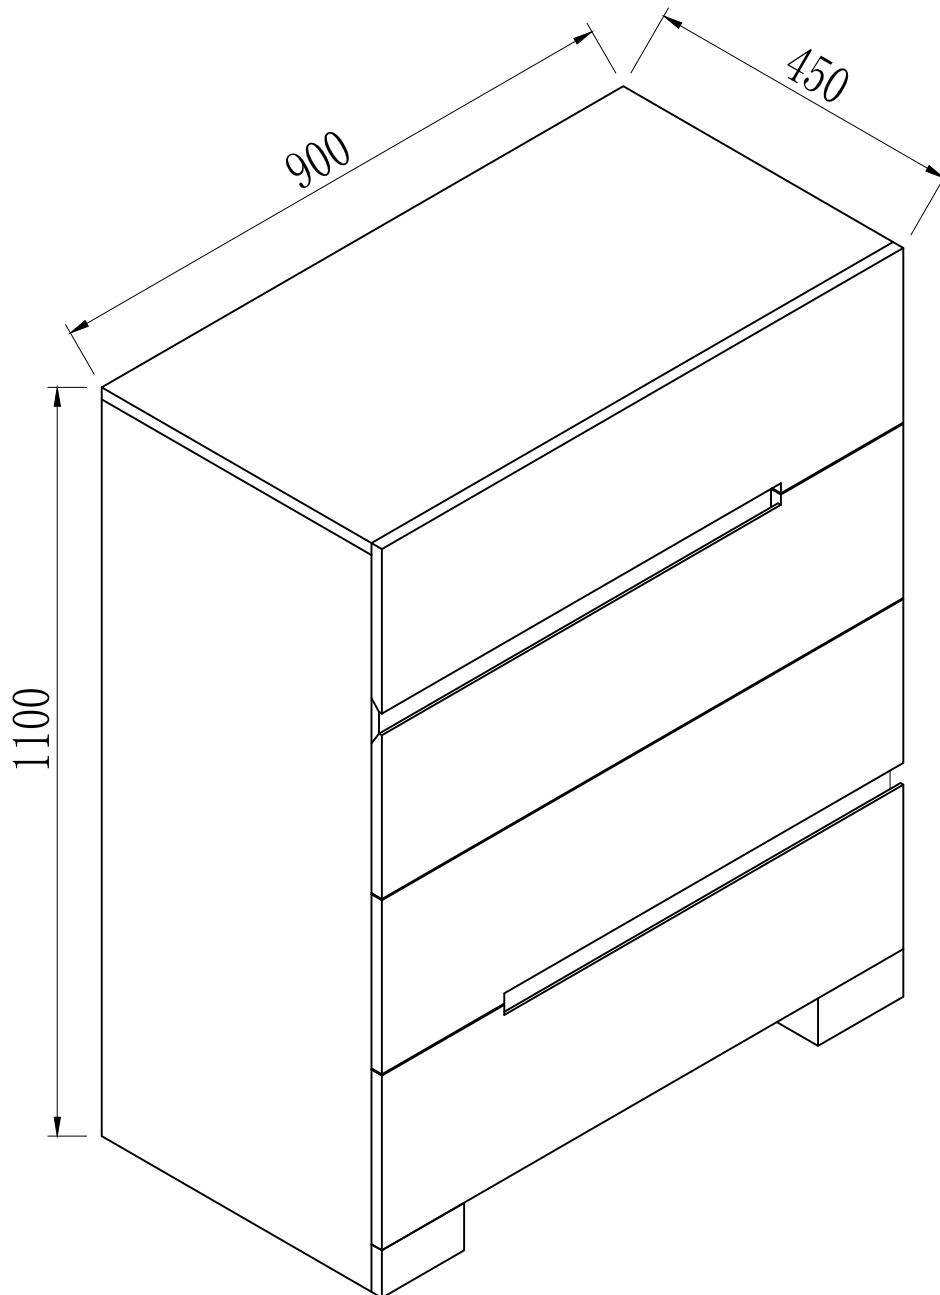


Imported by Amart Furniture Pty Ltd.Qld.Brisbane Australia.
For any assistance with assembly or for missing parts please phone Amart Furniture
Customer Service Free call 1800 351 084

84722


PRE-ASSEMBLY PREPARATION

Before you start:










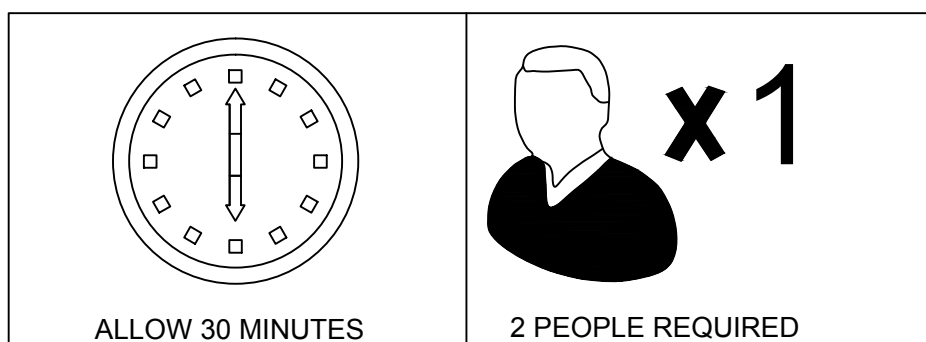


1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

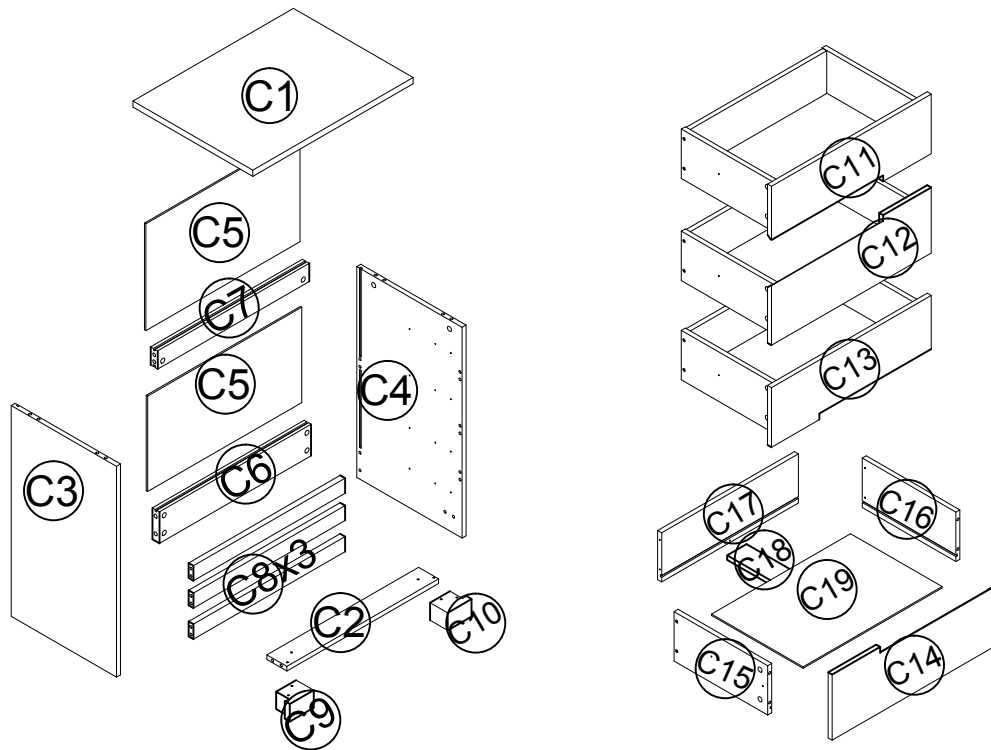

PARTS LIST




C1	Top Panel	C11	Drawer Front Panel
C2	Bottom Panel	C12	Drawer Front Panel
C3	Left Side Panel	C13	Drawer Front Panel
C4	Right Side Panel	C14	Drawer Front Panel
C5	Back Panel	C15	Drawer Left Side Panel
C6	Back Rail	C16	Drawer Right Side Panel
C7	Back Rail	C17	Drawer Back Panel
C8	Support Panel	C18	Support Panel
C9	Left Leg	C19	Drawer Bottom Panel
C10	Right Leg		

<input type="checkbox"/> A. Cam lock and Cam pin Ø15X35  36PCS	<input type="checkbox"/> B. Dowel Ø8x30  12PCS	<input type="checkbox"/> C. Screw Ø3.5x12  48PCS	<input type="checkbox"/> D. Screw Ø3.5x30  24PCS	<input type="checkbox"/> E. Connector 18x16x10  8PCS	<input type="checkbox"/> F. Screw Ø3x18  8PCS	<input type="checkbox"/> G. Bolt M6x30  4PCS
<input type="checkbox"/> H. Hex key M4  1PCE	<input type="checkbox"/> I. Protect foam 20x14x5mm  6PCS	<input type="checkbox"/> J. GLUE  1PCE	<input type="checkbox"/> K. Runner 300mm  8PCS	<input type="checkbox"/> L. Safety Bracket Kit  2PCS		

STEP 1:


Runner slide separately ($K=K1+K2$)

Carefully pull out the runner slide ($K2$) and press plastic clip to fully separate runner slide as diagram shown

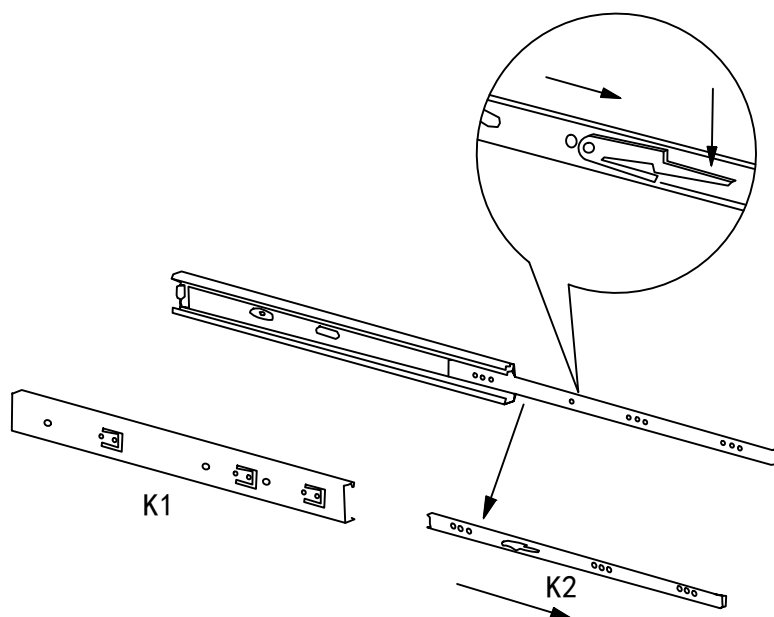




STEP 2:

Use Phillips Head Screwdriver to insert the Cam Pin(A) and Dowel(B) to the Top Panel(C1) and Left side Panel(C3) and Right Side Panel(C4) and Drawer Front Panel(C11/C12/C13/C14). And use Phillips Head Screwdriver to attach the Runner(K1) to the Left side Panel(C3) and Right Side Panel(C4) with Screw (C). Insert the Dowel(B) to the Left side panel (C3) and Right side Panel(C4)

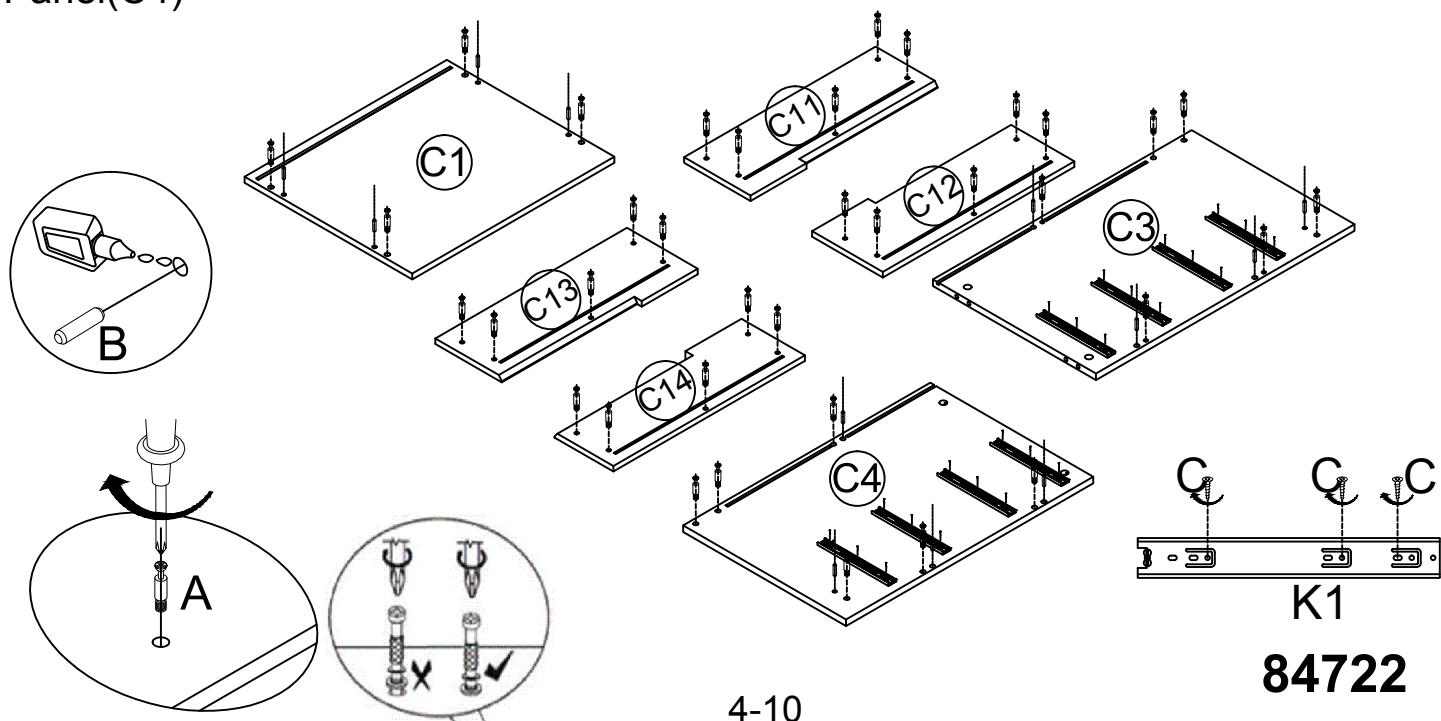


STEP 3:

Attach Panel(C2&C6&C7&C8) to Panel(C4).And turn Cam lock(A) to lock into the head of Cam Pin(A).

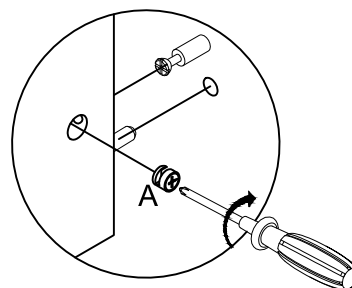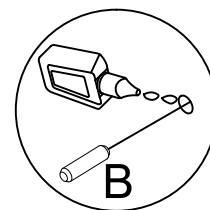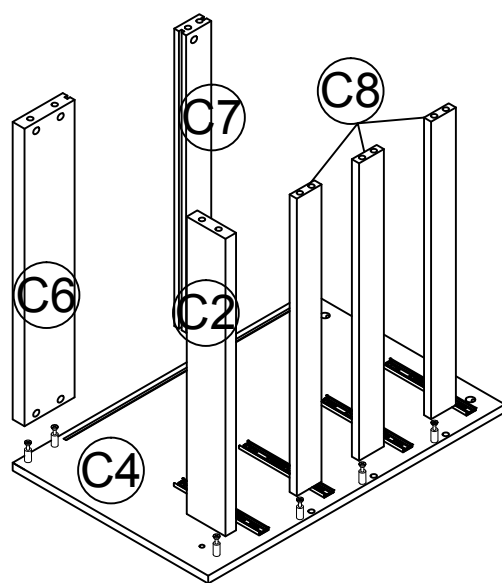


STEP 4:

Insert Panel(C15) to groove

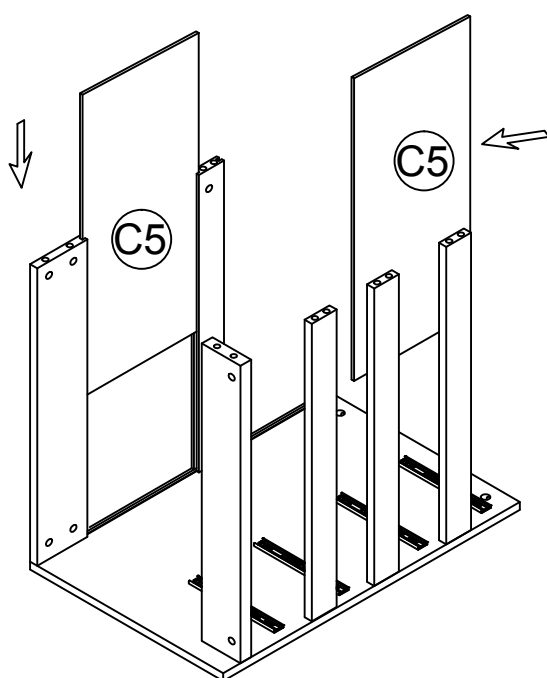


STEP 5:

Attach Panel(C4) to Panel(C2&C6&C7&C8) .And turn Cam lock(A) to lock into the head of Cam Pin(A). Use Hex Key(J)to assemble the Leg(C9,C10) to the Connect Panel(C2)with Bolt(H),Stick the Protect Foam(L)to the Leg(C9,C10) and Panel(C3,C4,C6).

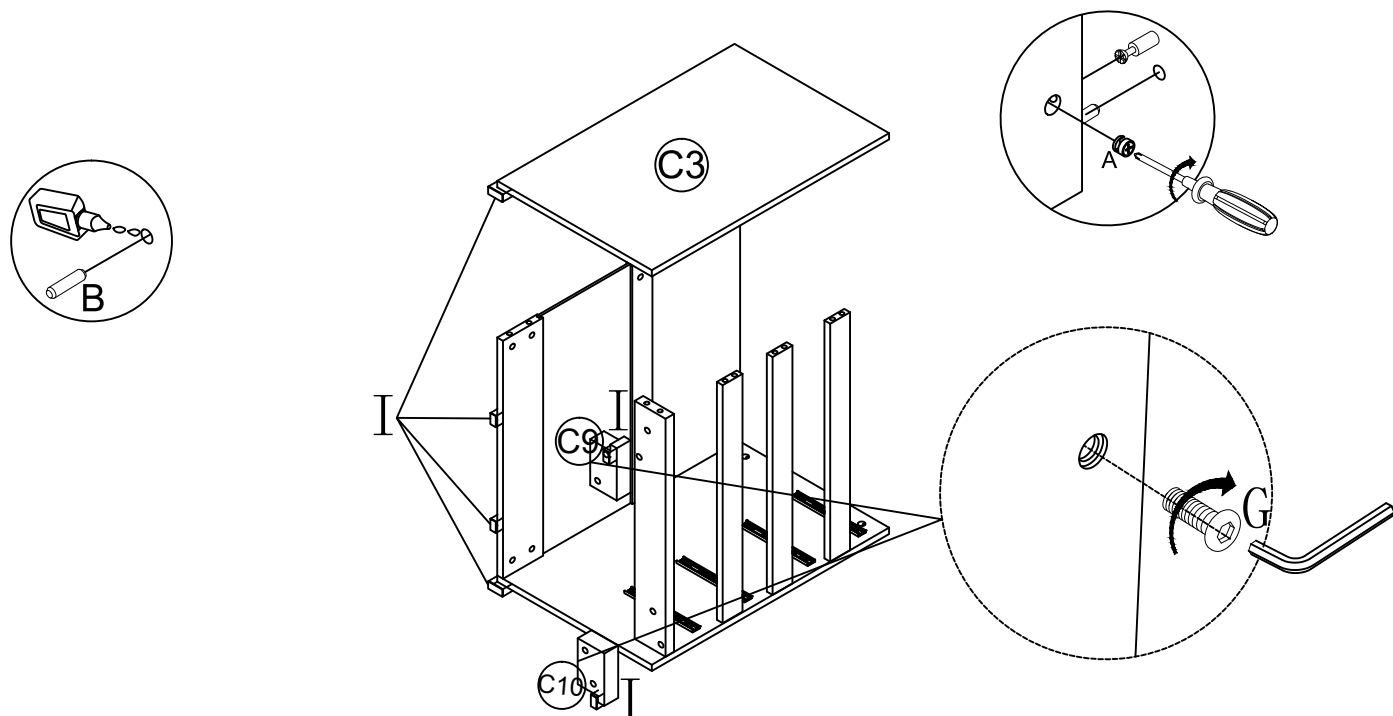


STEP 6:

Attach the Top Panel(C1) to the Left side Panel(C3) and Right Side Panel(C4). And use Phillips Head Screwdriver to turn Cam Lock(A) to lock into the head of Cam Pin(A).

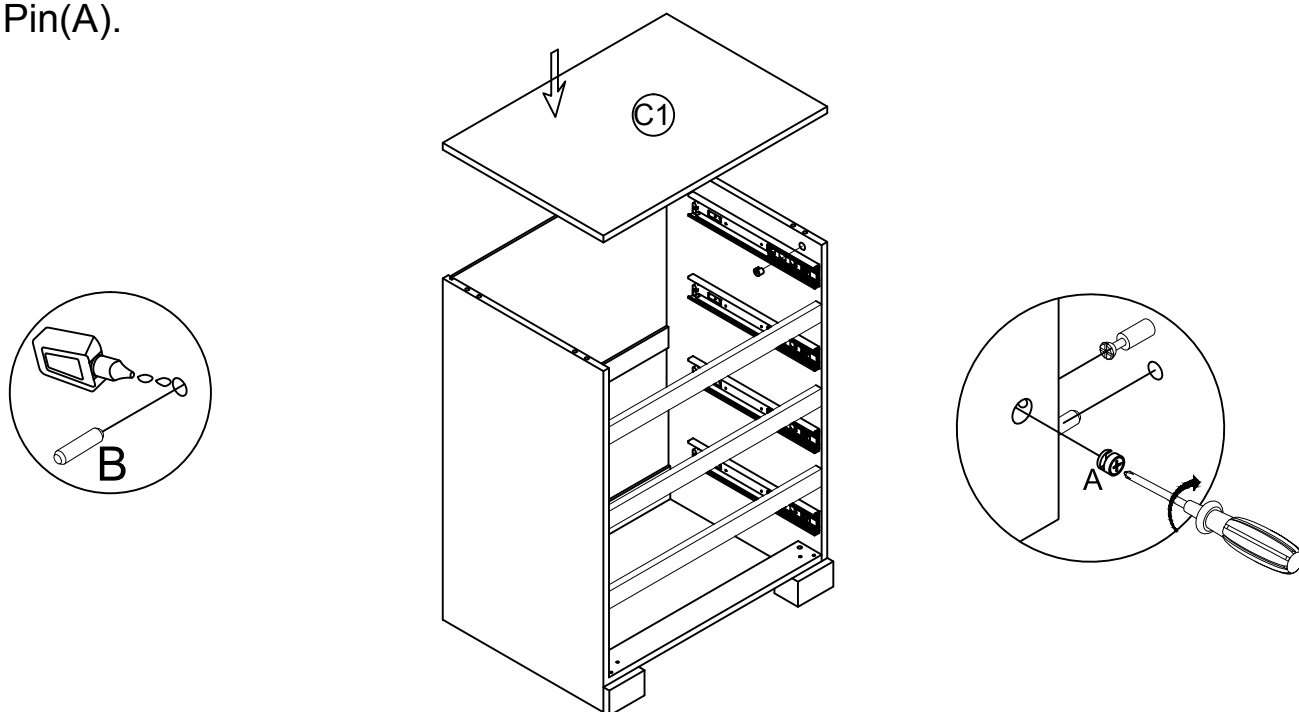


STEP 7:

Use Phillips Head Screwdriver to attach the Connector(F) to back corner with the Screw(G).

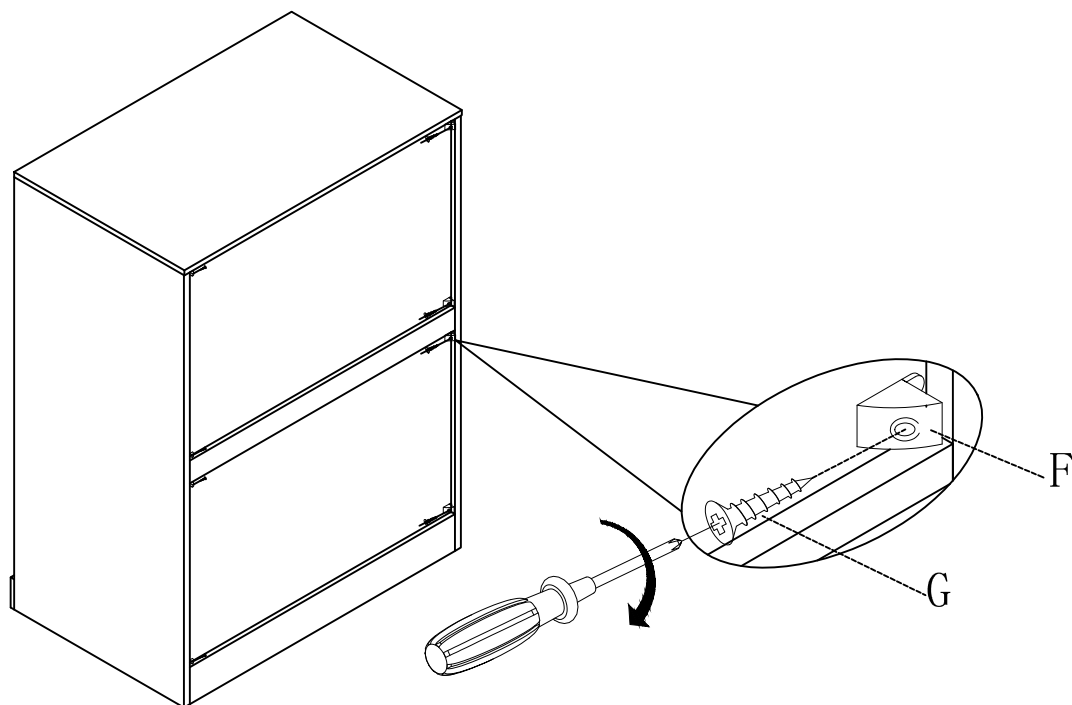

STEP 8:


Attach Panel(C17) to Panel(C15&C16&C18) with Screw(D).
Attach Runner(K2) to Panel(C13&C14) with Screw(C).

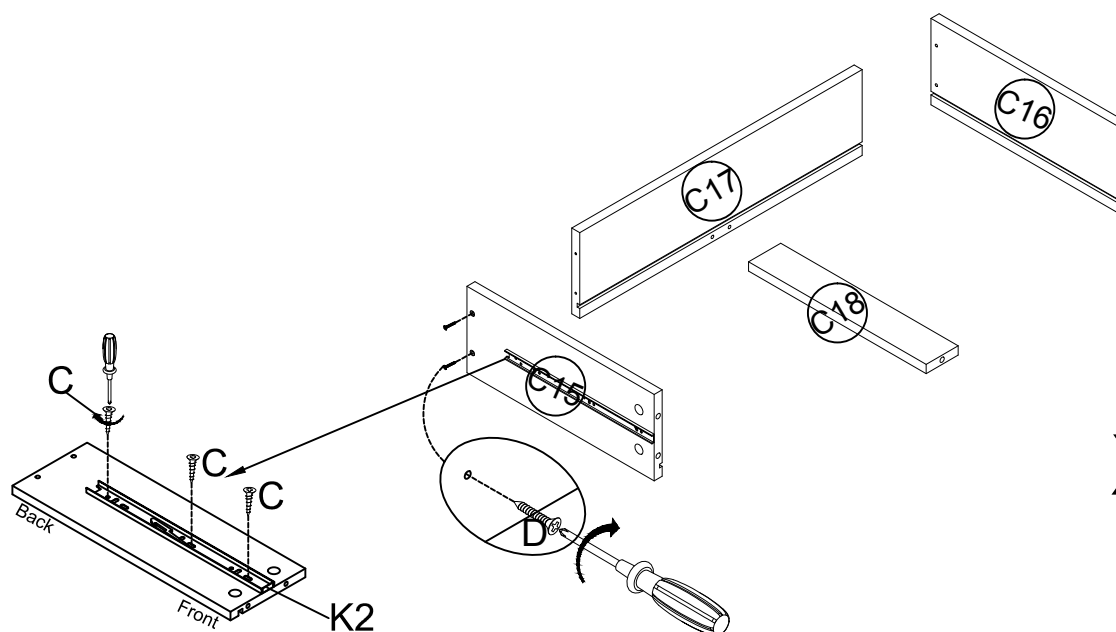

x 4


STEP 9:

Insert the Drawer Bottom Panel(C19) to the Groove, Assemble Drawer Front Panel(C11,C12) to the Drawer Leftside Panel (C15), and Rightside Panel(C16), Use Phillips Head Screwdriver to Lock the Cam Lock(A) to the Cam Pin(A).

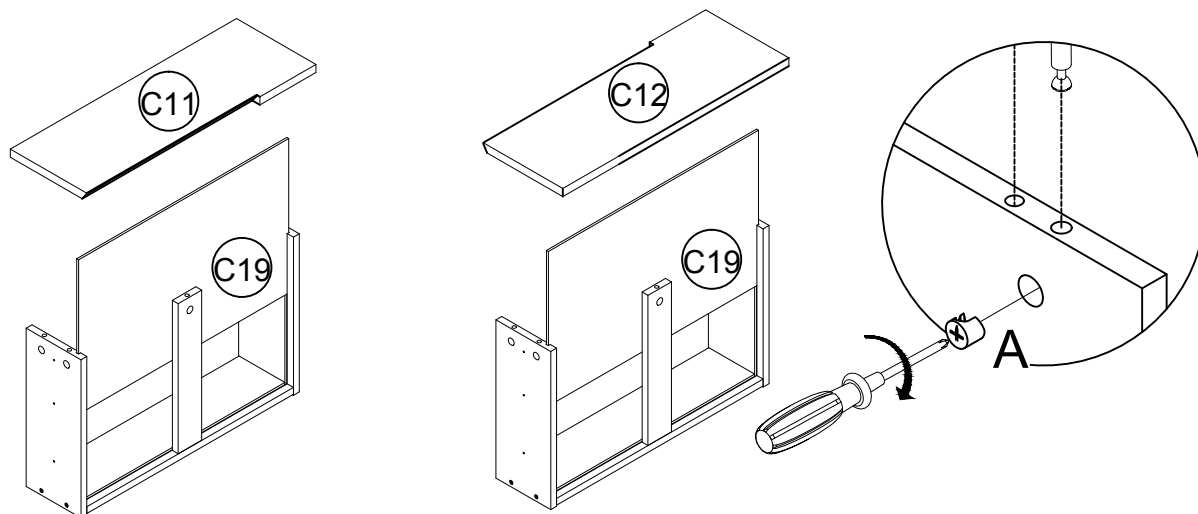


STEP 10:

Insert the Drawer Bottom Panel(C19) to the Groove, Assemble Drawer Front Panel(C13,C14) to the Drawer Leftside Panel(C15), and Rightside Panel(C16), Use Phillips Head Screwdriver to Lock the Cam Lock(A) to the Cam Pin(A)

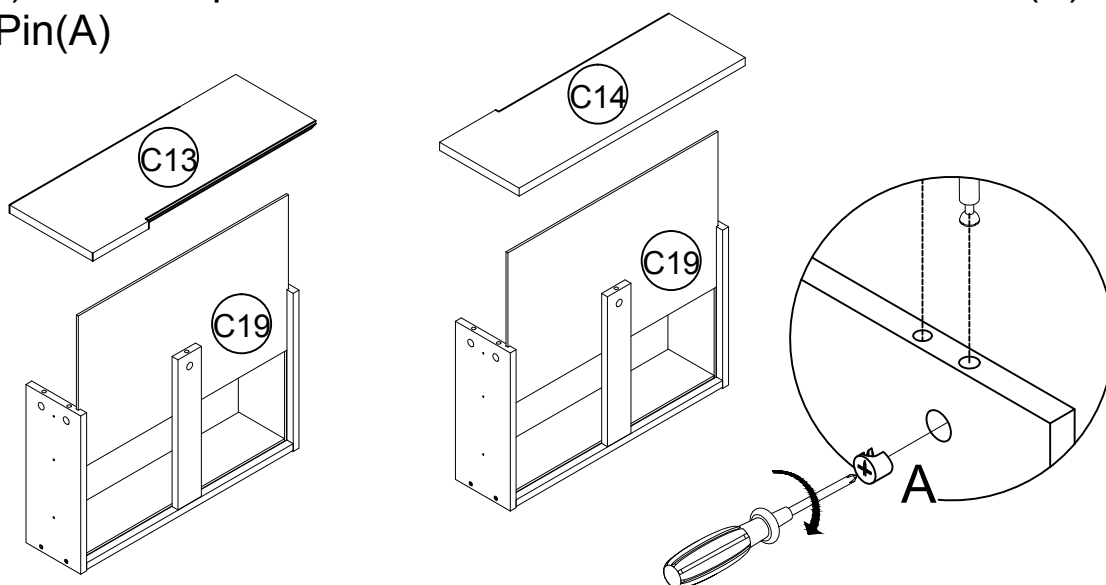


STEP 11:

Insert the drawers into the body.

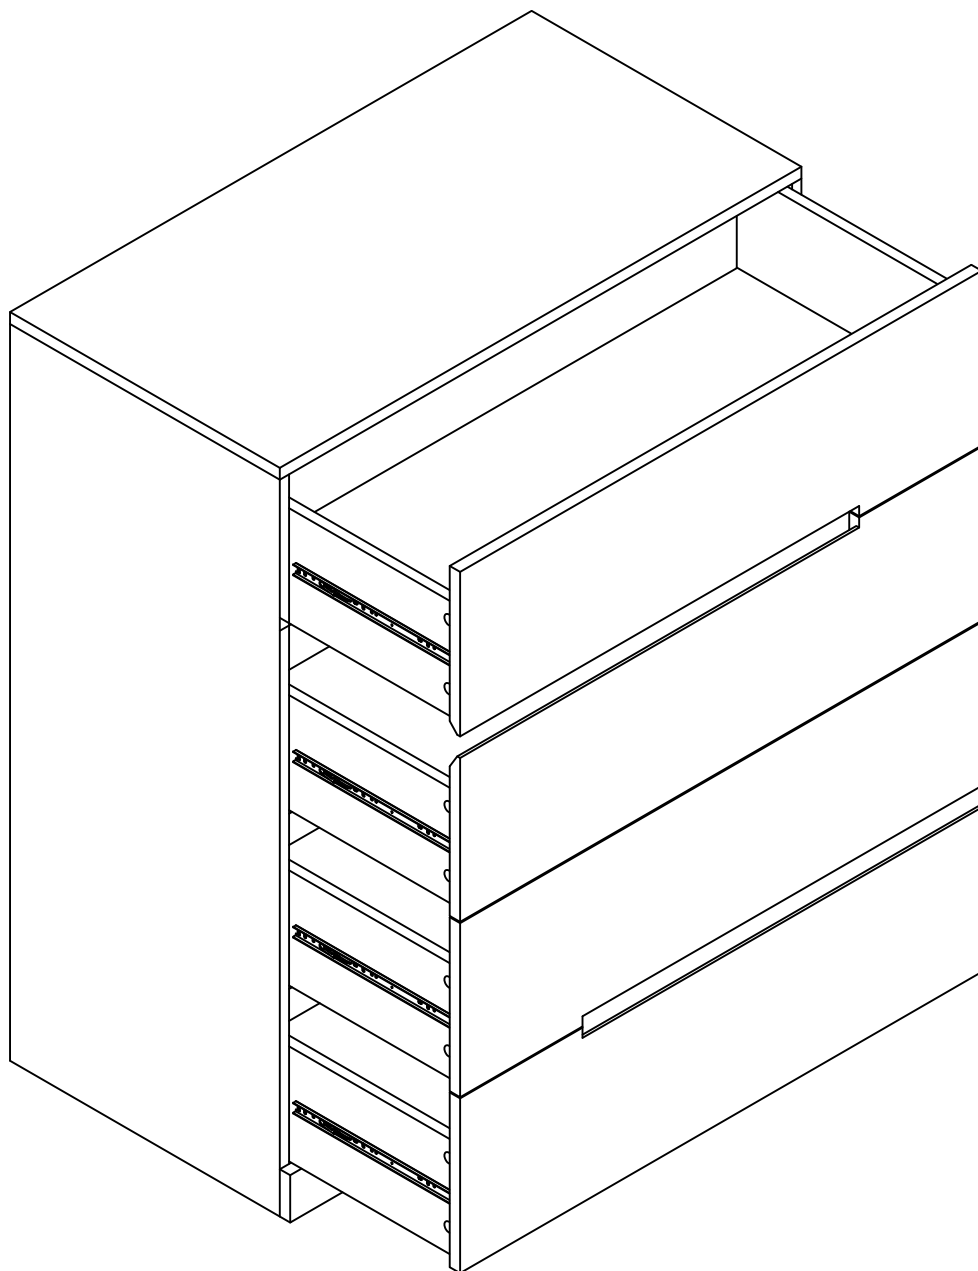

Please slot in the drawer with TIPPING WARNING STICKER inside is slotted to top layer.

Assembly is complete

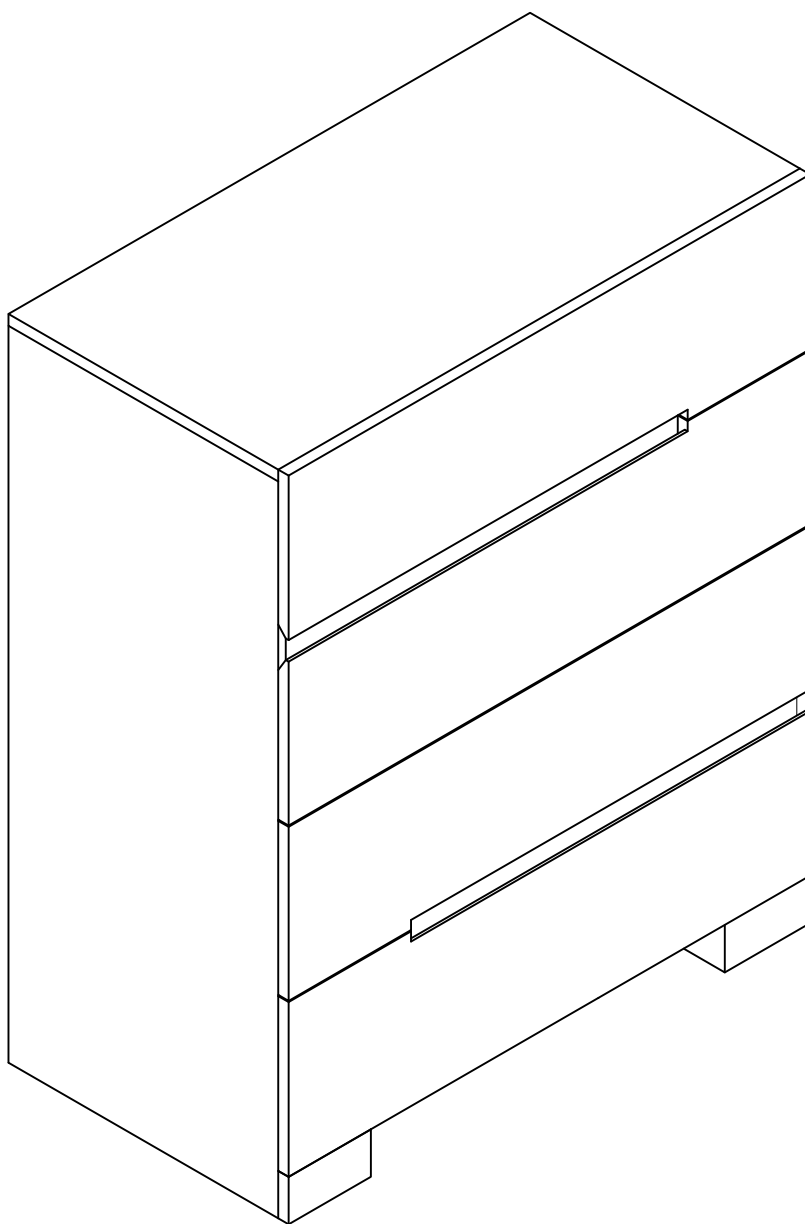

Note -

Do not drag the furniture as this may cause damage to the legs. Instead, use 2 persons to lift carefully from either end.

SAFETY BRACKETS INSTRUCTIONS

This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

HARDWARE



Mounting Plate x 2




Wall Strap x 1



Large Screw x2



Small Screw x2

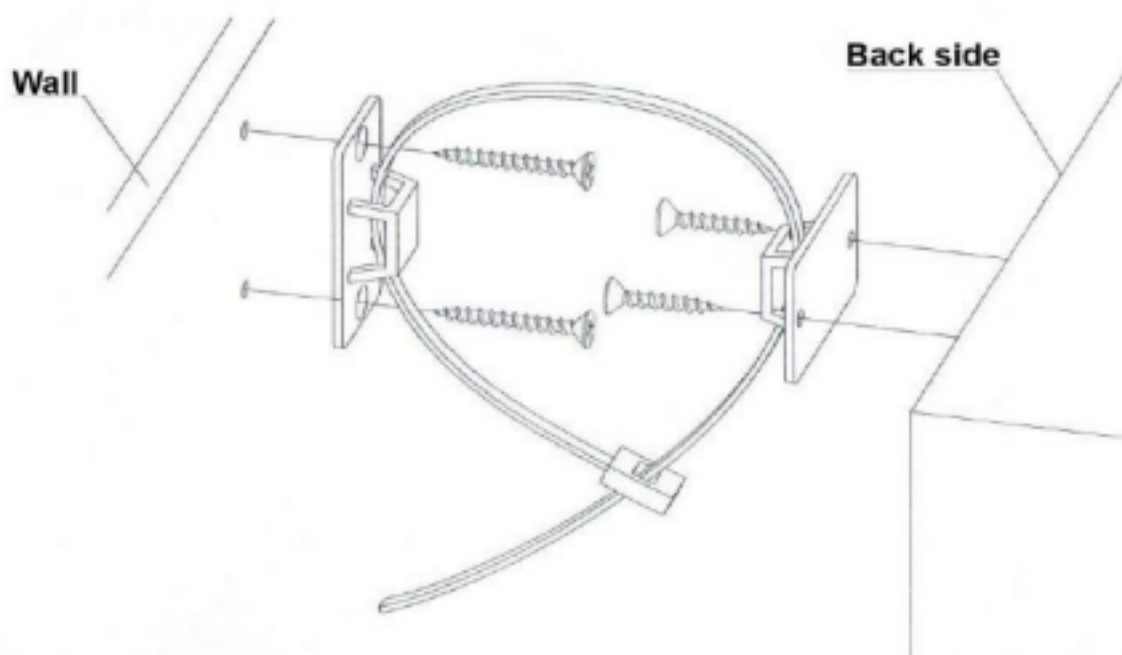

General Product Care

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.