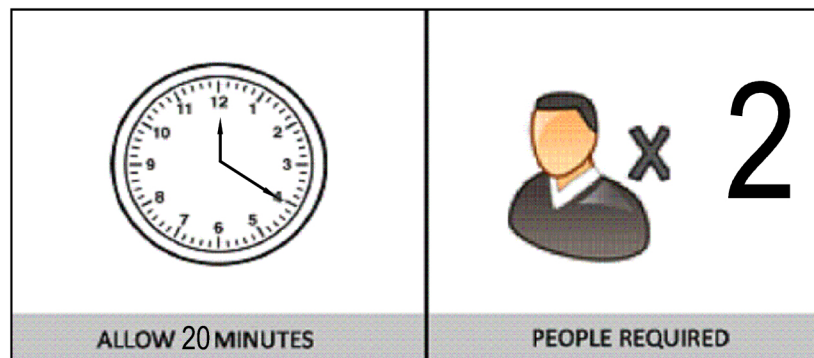


Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia .
For any assistance with assembly or for missing parts please phone
Amart Furniture, Customer Service Freecall 1800 351 084

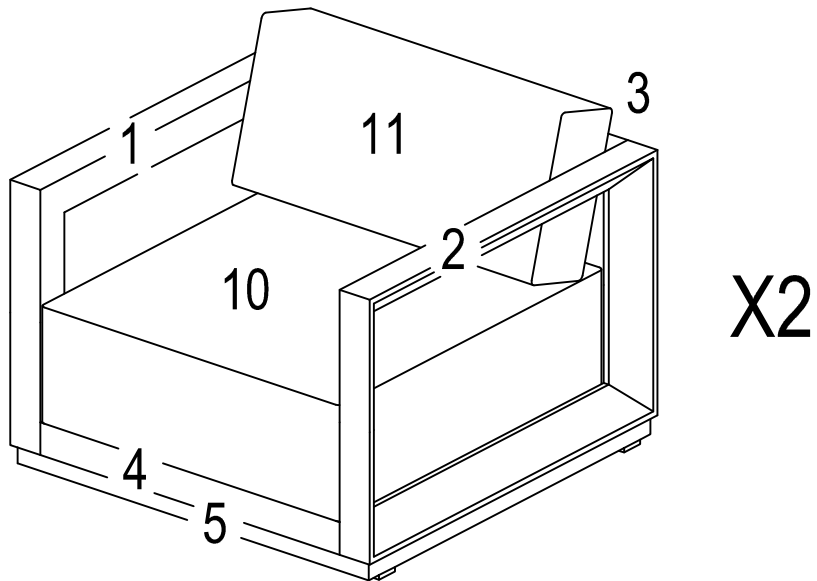
PRE-ASSEMBLY PREPARATION

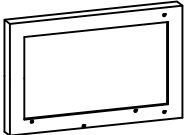
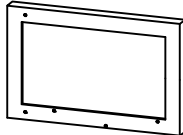
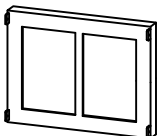


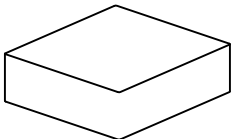

Before you start:






1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product.
2. Take care when lifting. Product should be assembled as near as possible to the point of use.
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads.



PARTS LIST

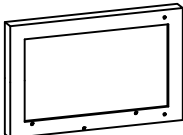
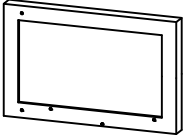
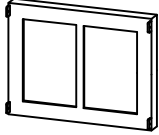





1. Right Arm		2PCS	2. Left Arm		2PCS
3. Backrest		2PCS	4. Seat		2PCS
5. Bottom frame		2PCS			
10. Seat Cushion		2PCS	11. Back Cushion		2PCS

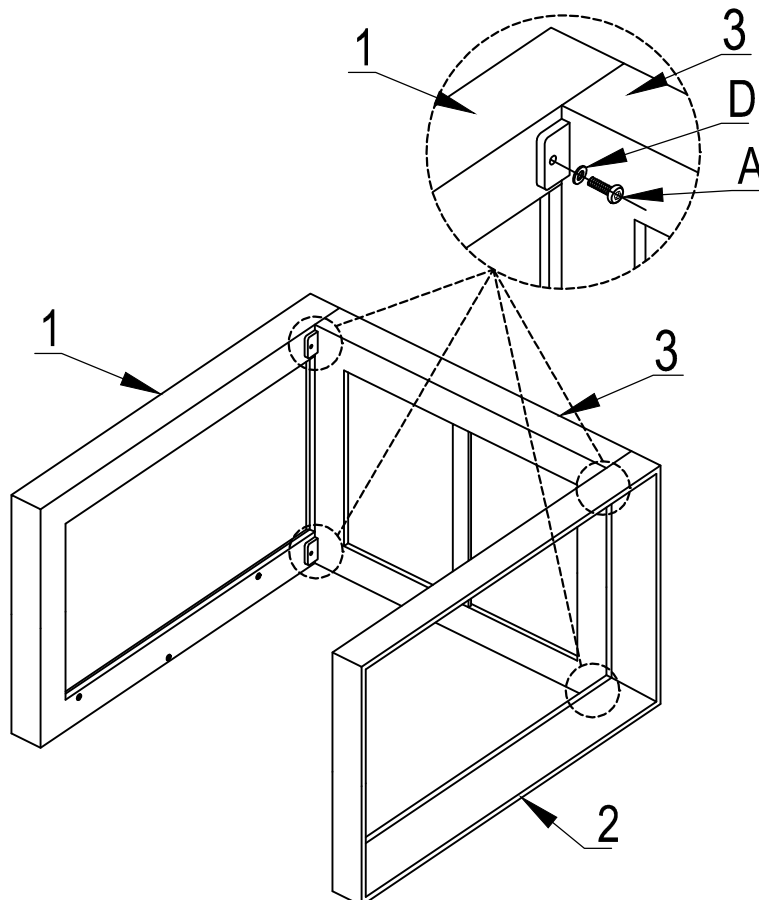
A. Bolt	B. Bolt	C. Bolt	D. Washer	E. Allen Key
				
M6*20*8PCS	M6*35*12PCS	M6*55*10PCS	M6*30PCS	M6*1PC

Step 1:

ITEMS REQUIRED





1. Right Arm 1PC 	2. Left Arm 1PC 	3. Backrest 1PC 
A. Bolt  M6*15*4PCS	D. Washer  M6*4PCS	E. Allen Key  M6*1PC

- Attach backrest (3) to right arm (1) and left arm (2) using bolt (A) with washer (D) .
- Insert all bolts before fully tightening .
- Tighten with allen key (E) .

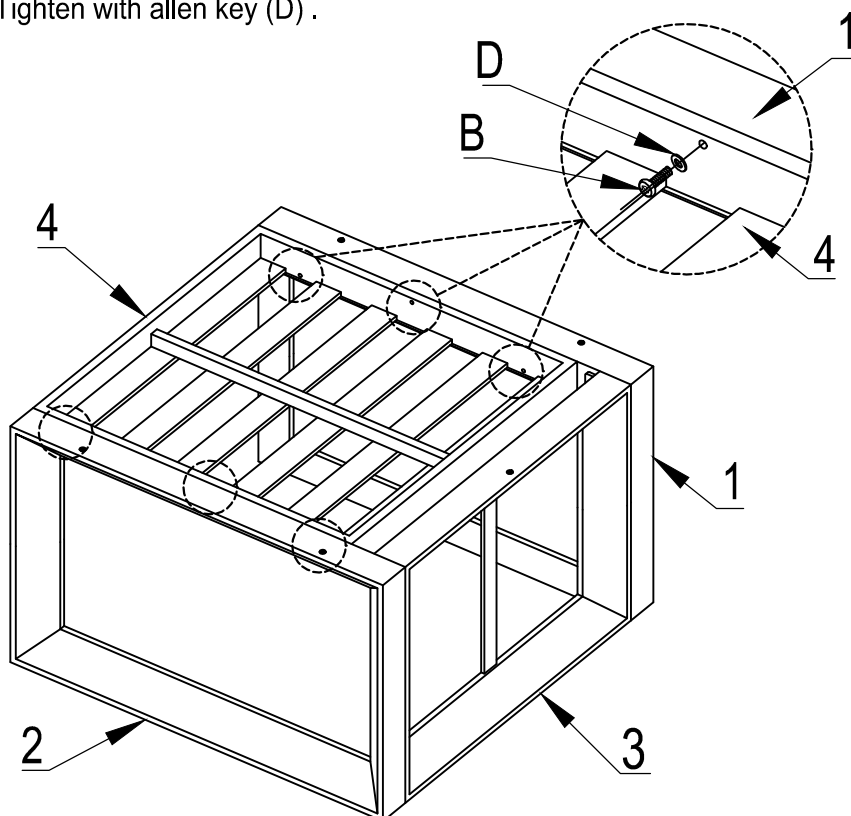


Step 2:

ITEMS REQUIRED





4. Seat 1PC		
		
B. Bolt	D. Washer	E. Allen Key
		
M6*35*6PCS	M6*6PCS	M6*1PC

- Attach seat (4) to left arm (2) and right arm (1) using bolt (B) with washer (D) .
- Insert all bolts before fully tightening .
- Tighten with allen key (D) .

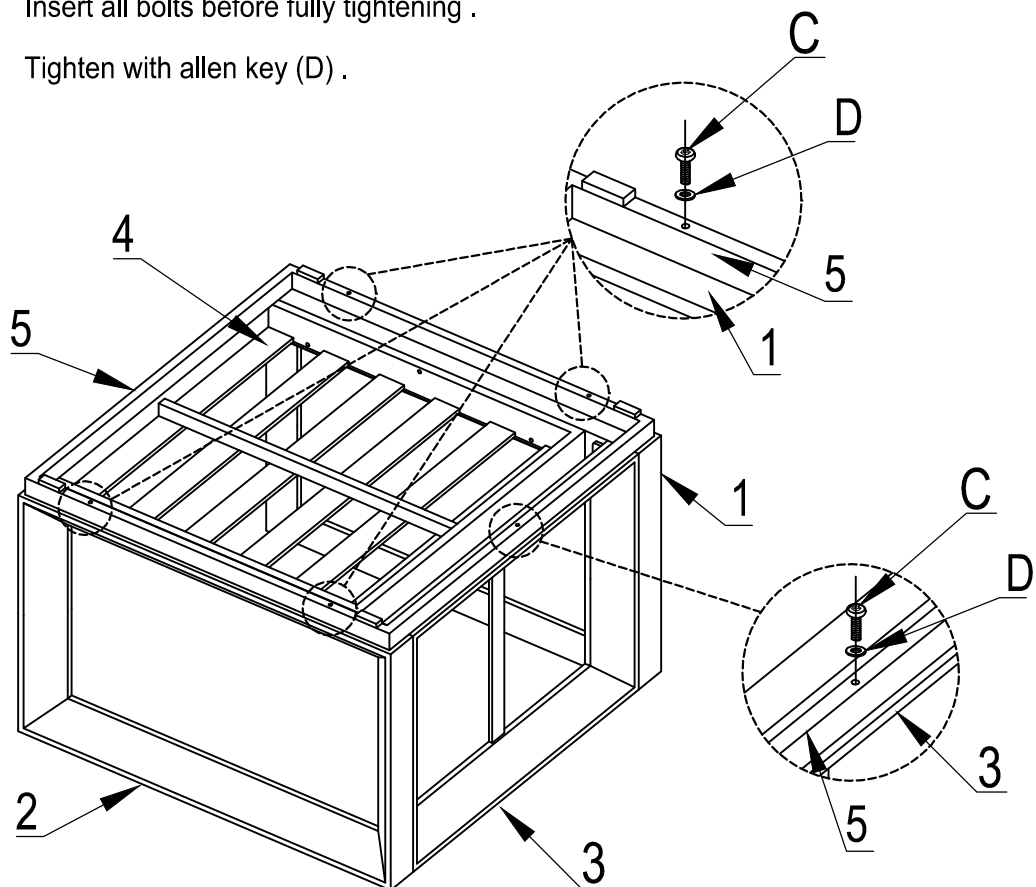


Step 3:

ITEMS REQUIRED

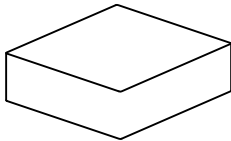

5. Bottom frame 1PC		
		
C. Bolt	C. Washer	D. Allen Key
		
M6*55*5PCS	M6*5PCS	M6*1PC

- Attach bottom frame (5) to left arm (2) and right arm (1) using bolt (C) with washer (D) .
Attach bottom frame (5) to bckrest (3) using bolt (C) with washer (D) .
- Insert all bolts before fully tightening .
- Tighten with allen key (D) .

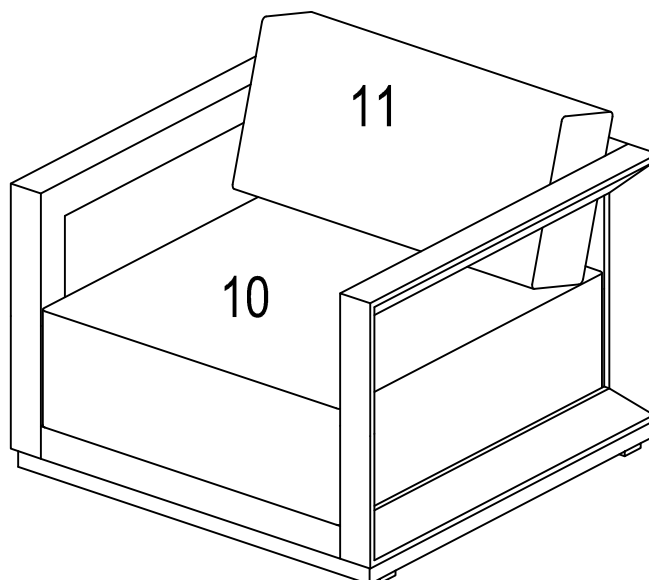


Step 4:

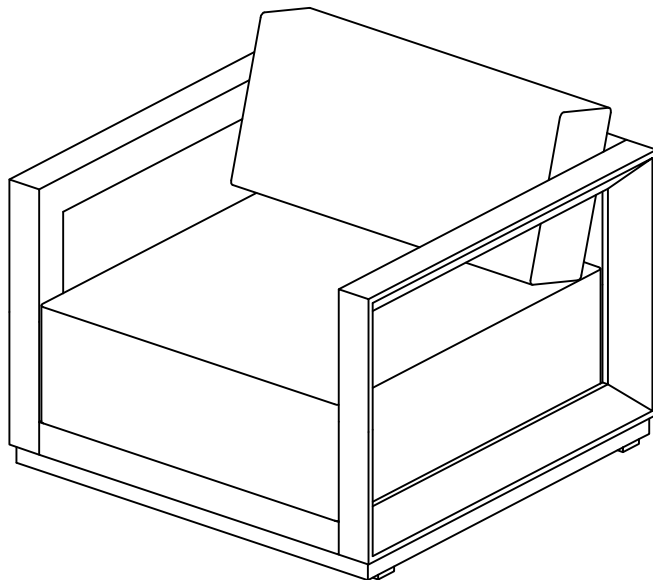
ITEMS REQUIRED

10.	Seat Cushion	1PC	11.	Back Cushion	1PC
					

- Put the seat cushion (10) and back cushion (11) on the seat .



ASSEMBLY IS COMPLETE



Care and maintenance



Aluminium

- ☒ Item is designed for use outdoors. However we do not recommend leaving this product outside when not in use. To preserve the life of this item, avoid prolonged exposure to the elements & store inside/under cover or use an outdoor cover.
- ☒ DO NOT allow the furniture to be left in the rain or left wet for extended periods of time.
- ☒ Wipe furniture Dry immediately after it becoming wet.
- ☒ DO NOT clean your furniture down with any harsh solvents, abrasives or chemicals.
- ☒ To remove dirt and grime, simply rinse with fresh water or periodically clean using a sponge and mild detergent solution as required

Cushions

- ☒ Direct exposure to the Sun's harmful UV rays is likely to cause rapid colour fading to fabrics. For best results we recommend avoiding exposure to direct sunlight
- ☒ To ensure product longevity it is recommended outdoor products are not left permanently exposed to the elements
- ☒ Spot clean using mild detergent and damp cloth. Dry flat in shade
- ☒ Do not unzip
- ☒ Do not put in washing machine
- ☒ Do not tumble dry
- ☒ Do not bleach
- ☒ Do not dry clean
- ☒ Cool iron only