


ASSEMBLY INSTRUCTION KORI 4 DRAWER TALL CHEST ITEM CODE 58236

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia. For any assistance with assembly or for missing parts please phone Amart Furniture, Customer Service Free call 1800 351 084

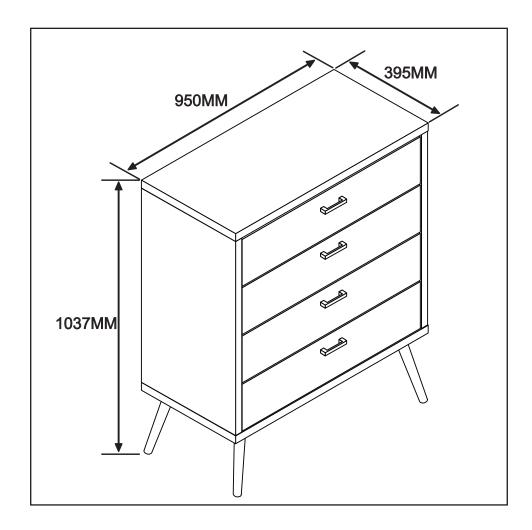


Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia. For any assistance with assembly or for missing parts please phone Amart Furniture, Customer Service Free call 1800 351 084

1

PRE-ASSEMBLY PREPARATION

Before you start:


- 1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
- 2. Take care when lifting. Product should be assembled as near as possible to the point of use
- 3. Ensure that you have all required contents for complete assembly
- 4. Always read the assembly instructions carefully before beginning assembly.
- 5. Keep all hardware parts and packaging out of reach of small children.
- 6. Do not over tighten the screws and bolts as this may damage the threads

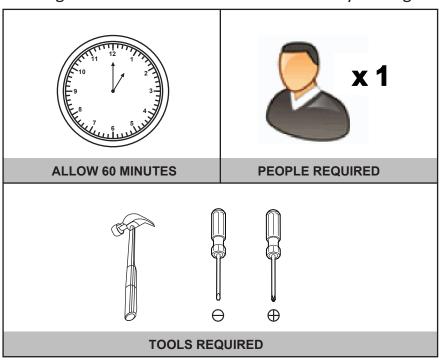





2

EXPLODED EXAMPLE

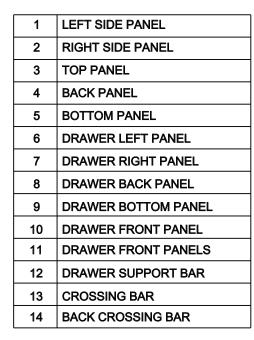


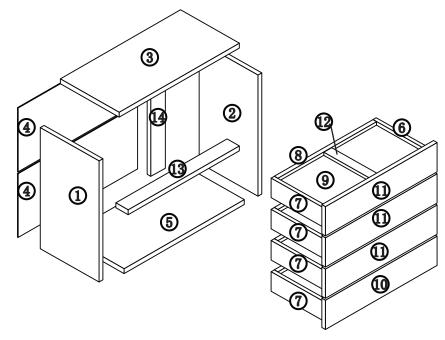


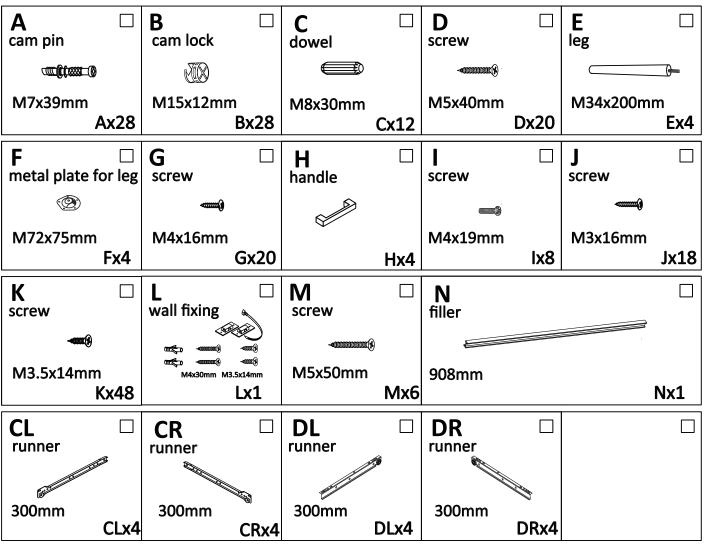


PART NUMBER	QTY	DIMENSIONS (MM)
1	1	795x394x18
2	1	795x394x18
3	1	950x395x18
4	2	940x41.3x2.5
5	1	950x395x18
6	4	330x140x15
7	4	330x140x15
8	4	850x1140x15
9	4	861x322x2.5
10	1	903x191x15
11	3	903x191x15
12	4	334x60x15
13	1	910x750x15
14	1	795x140x15


CAM LOCK INSTALL METHOD AS FOLLOWS

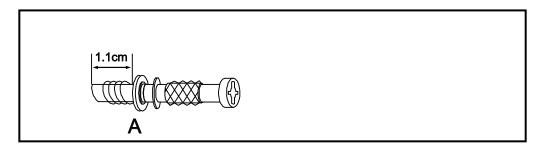

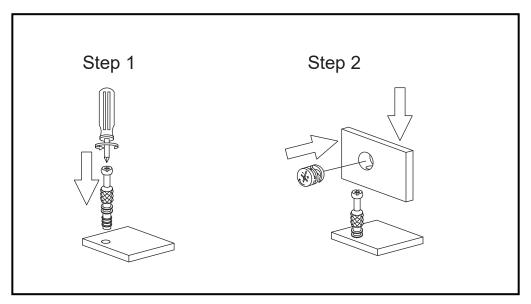


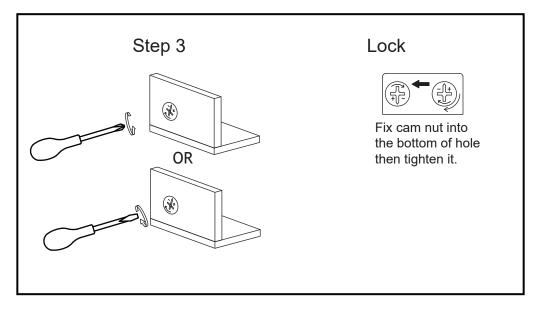


STEP 1: Fix runners@to left side panel @with screws @.Fix runners@to right side panel @with screws @.Insert dowel @ to left side panel @and right side panel @.

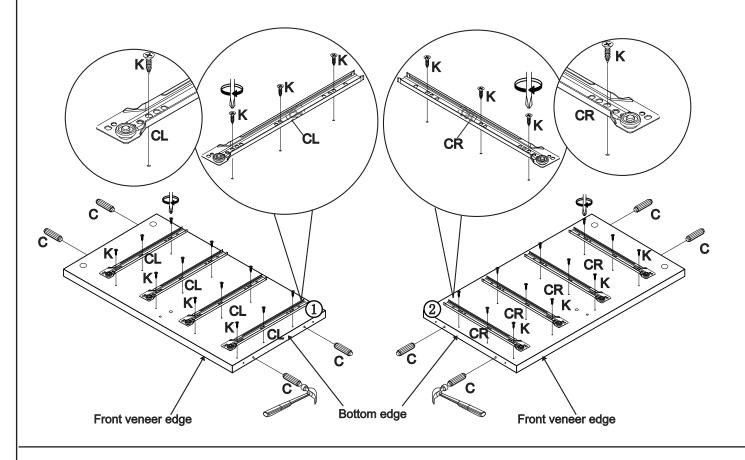


STEP 2: Fix cam pin (4) to left side panel (1) and right side panel (2).

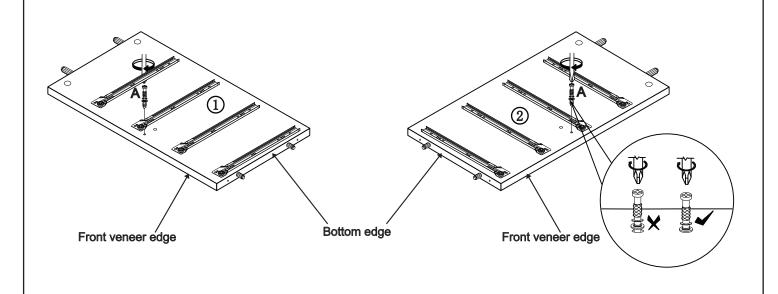


STEP 3: Insert dowel ® to crossing bar ® .Attach crossing bar ® to left side panel @ and right side panel @ using cam locks ® .

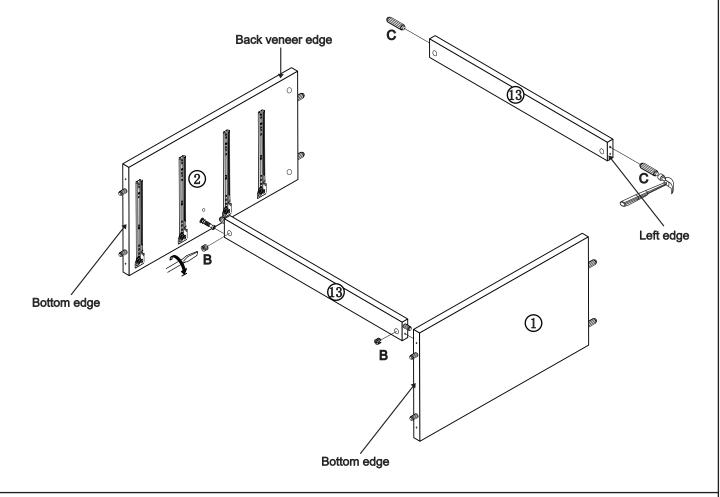


STEP 4: Fix cam pin ③ to top panel ④.

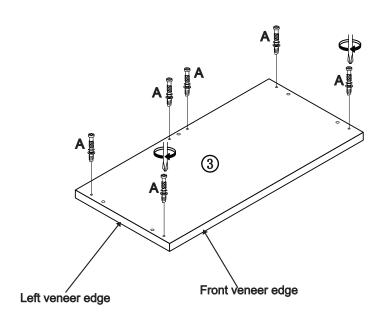


STEP 5: Insert dowel @ to back crossing bar @.Attach top panel@ to existing unit with cam locks ® .

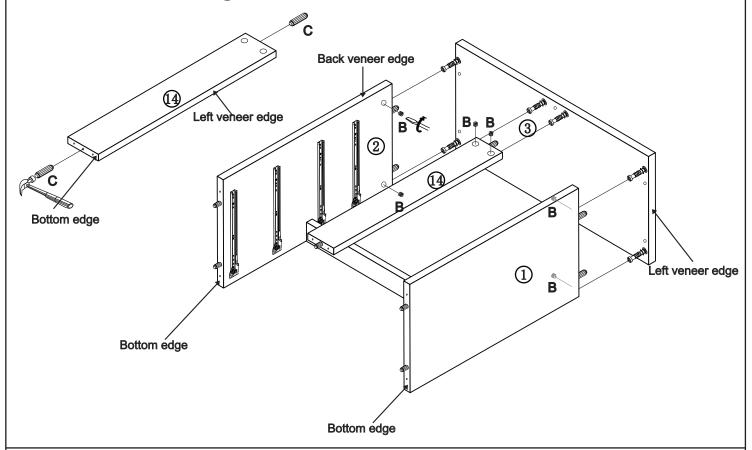


STEP 6: Attach bottom panel ⑤ to existing unit using screws ⑩.

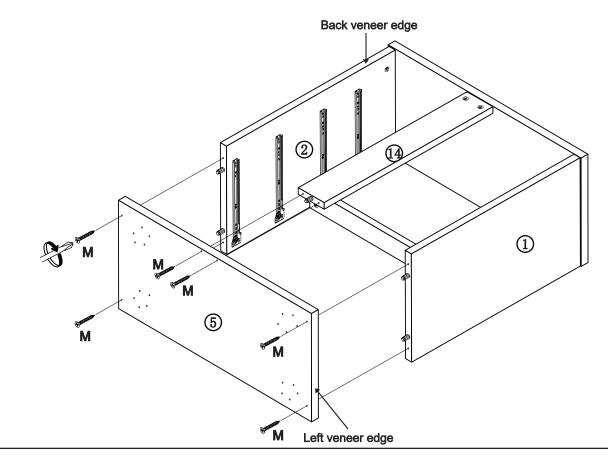

STEP 7: Fix metal plates ® to bottom panel ® with screws ® .

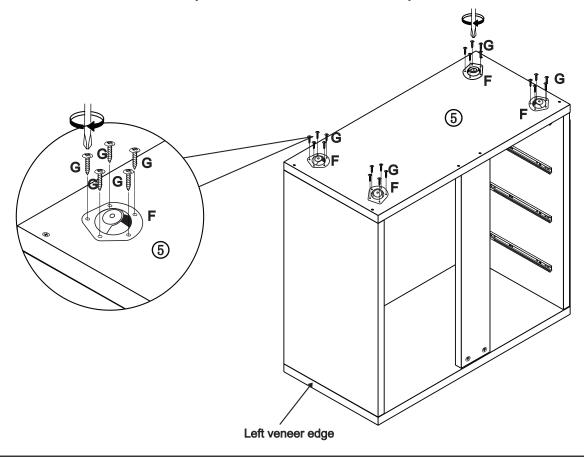


STEP 8: Fix legs \P to the metal plates \P .

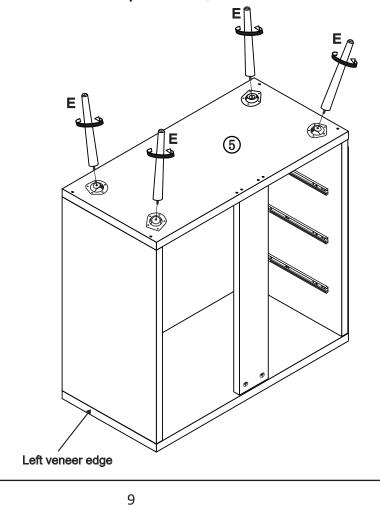


STEP 9: Attach drawer left panel @, drawer support bar @ and drawer right panel ® to drawer back panel ® with screw

. Insert panel


to the body of drawer.

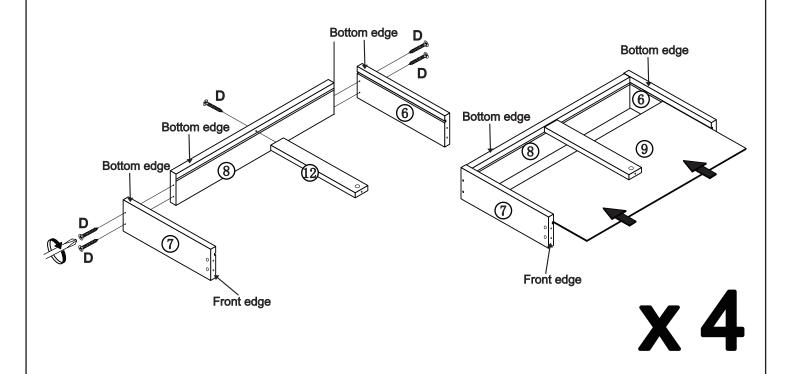


STEP 10: Fix cam pin (a) to drawer front panel (a) (a). Fix handles (b) to drawer front panel @ @ with screw @. Attach drawer front panel @ @to the body of drawer.

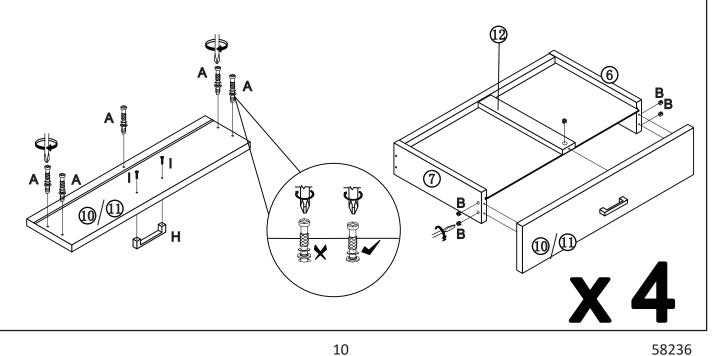


STEP 11: Install runner @ to bottom of drawer with screws ©.

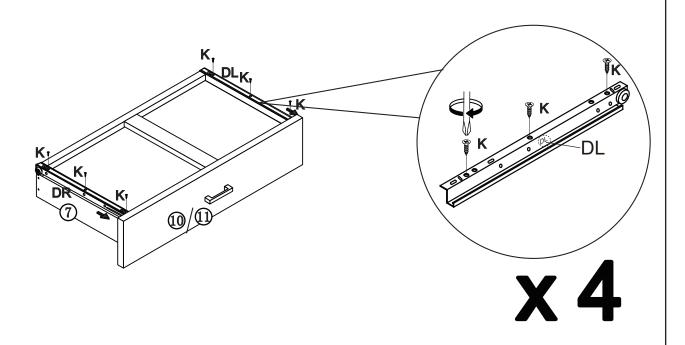

STEP 12: Assemble drawers into the body

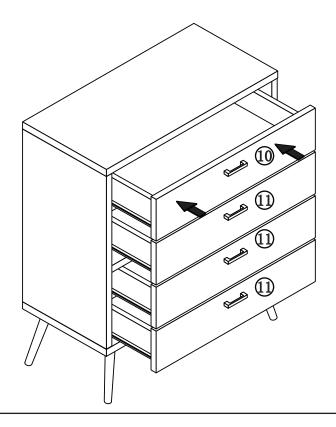


STEP 13: Attach back panels ④ to the exisiting unit using some of screws ① .Fix filler ® to join back panels ④ .

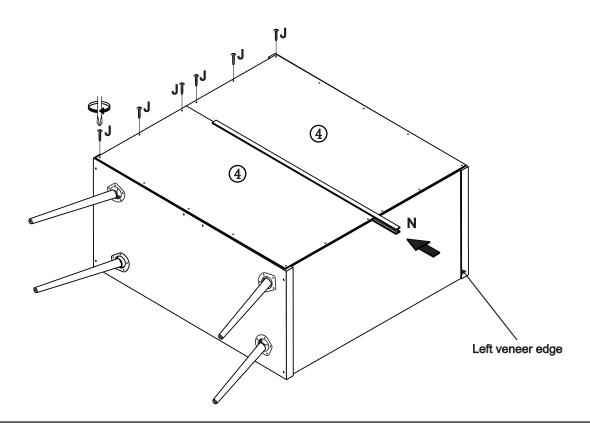

STEP 14: Attach back panel to existing unit using all rest screws ①.

DO NOT PUSH OR DRAG THIS FURNITURE – IT WILL CAUSE

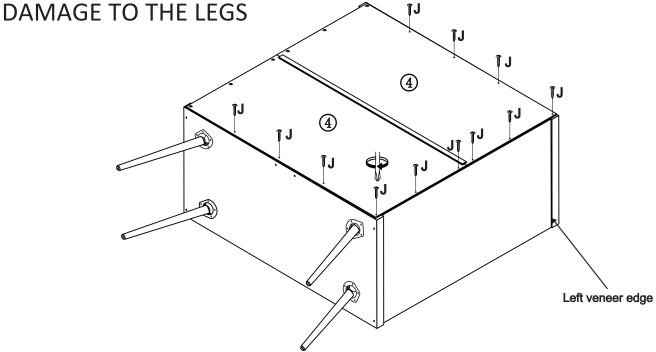

ASSEMBLY COMPLETE

DO NOT PUSH OR DRAG THIS FURNITURE – IT WILL CAUSE DAMAGE TO THE LEGS




13




STEP 1: Fix bracket to back panel using screws M3.5*14MM .


Put plastic string into bracket.

NOTE - This product must be fixed to a wall. Please ensure the correct wall fixings are used. Failure to do so may result in personal injury or cause property damage if the product topples over. Please note that the screws are only suitable for plasterboard wall materials, please contact local hardware store for corresponding screws for other wall materials.

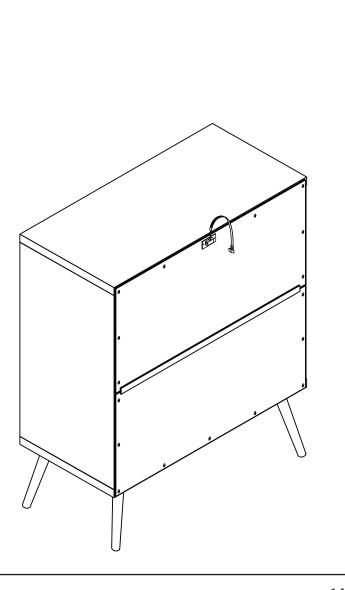

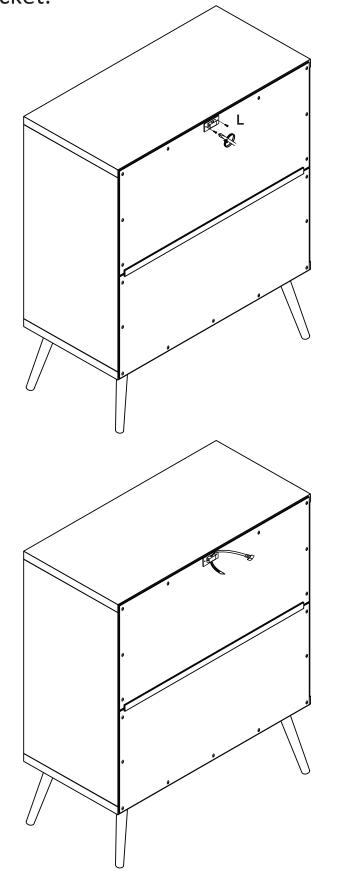

STEP 2: Fix bracket onto the wall using screws M4*30MM. Join wallboard and the furniture with plastic sting.

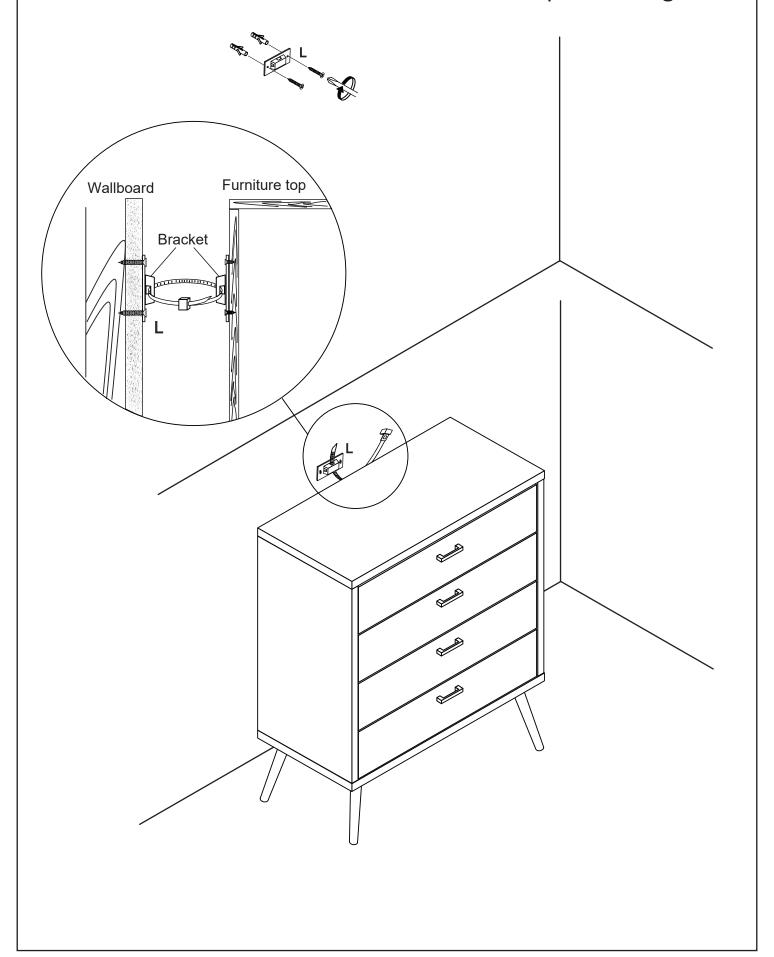

PRODUCT CARE:

To protect your furniture, we suggest the following:

- *Avoid placing your furniture in direct sunlight.
- *Do not place furniture directly under windows.
- *Do not place sharp materials(knife,fork,etc) directly onto your furniture as sharp material may scrape and damage the finish.

Do not place material with high temperature directly onto the surface of your furniture.

- *Protective padding is strongly recommended when using your furniture .
- *Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- *Use a clean, soft, dry, lint free absorbant cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void.