




ASSEMBLY INSTRUCTION
ISMENE BEDSIDE TABLE
ITEM CODE 83632


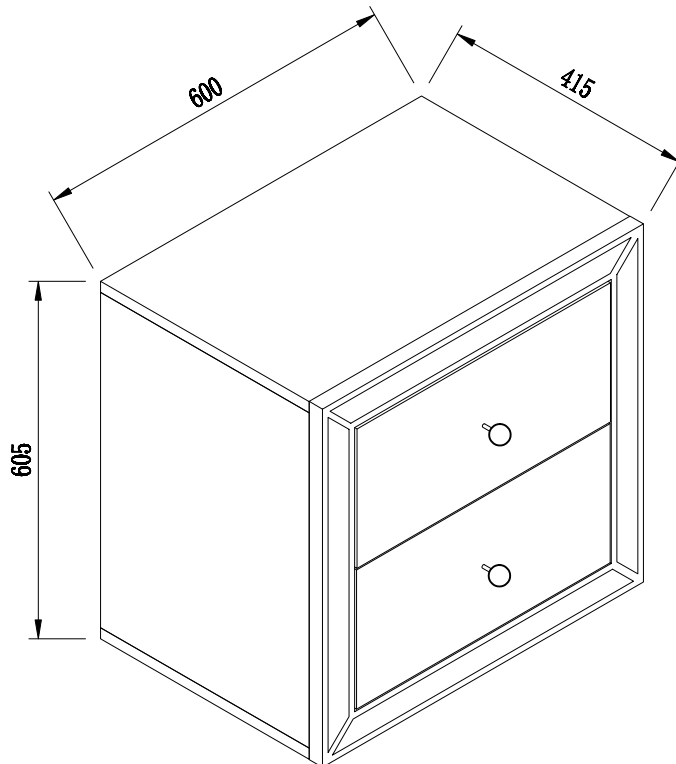


Imported by Amart Furniture Pty Ltd.Qld.Brisbane Australia.
For any assistance with assembly or for missing parts please phone Amart Furniture
Customer Service Free call 1800 351 084

PRE-ASSEMBLY PREPARATION


Before you start:

1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly.
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads




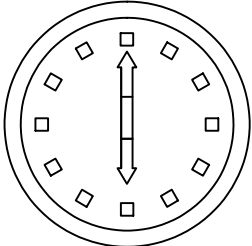
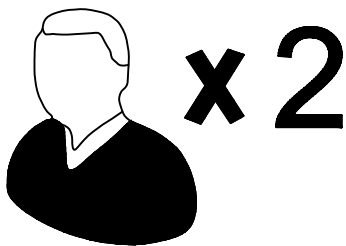









	
ALLOW 30 MINUTES	2 PEOPLE REQUIRED

! WARNING		
		<p>Children have died from furniture tipover.</p> <ul style="list-style-type: none">• ALWAYS secure it with an anchor device.• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.• NEVER open more than one drawer at a time.• Place heavy items down low <p>NEVER put a TV on this furniture </p> <p>This is a permanent label. Do not remove!</p>

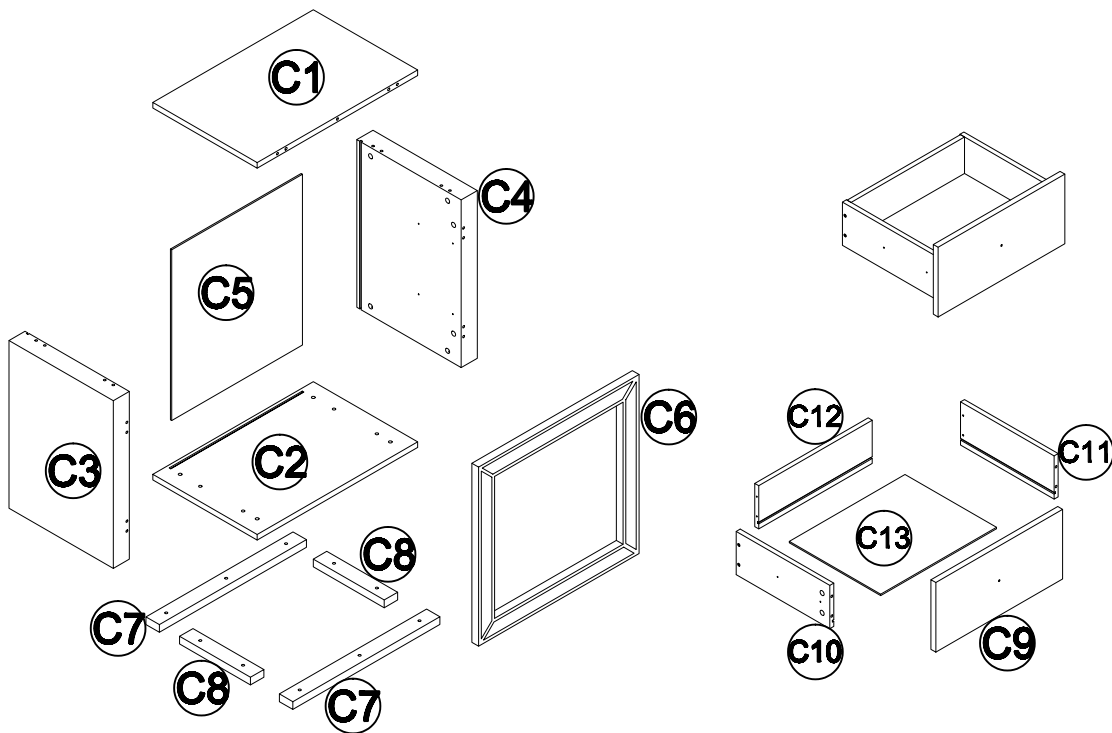PARTS LIST




C1	Top Panel	C8	Leg
C2	Bottom Panel	C9	Drawer Front Panel
C3	Left Side Panel	C10	Drawer Left Side Panel
C4	Right Side Panel	C11	Drawer Right Side Panel
C5	Back Rail	C12	Drawer Back Panel
C6	Front Rail	C13	Bottom Panel
C7	Leg		

A. Cam lock and Cam pin Ø16x36  23PCS	B. Dowel Ø8x30  14PCS	C. Screw Ø3.5x12  24PCS	D. Screw Ø3.5x30  8PCS	E. Bolt Ø6x30  10PCS	F. Bolt Ø4x22  2PCS	G. Hex key M4  1PCS
H. Handle  2PCS	I. Runner 250mm  4PCS	J. Glue  1PCE	K. Connector 18x18x10  4PCS	L. Screw Ø3x18  4PCS	M. Protect foam Ø35x5  4PCS	N. Safety Bracket Kit  1PCS


STEP 1:

Runner slide separately ($H=H1+H2$)

Carefully pull out the runner slide ($H2$) and press plastic clip to fully separate runner slide as diagram shown

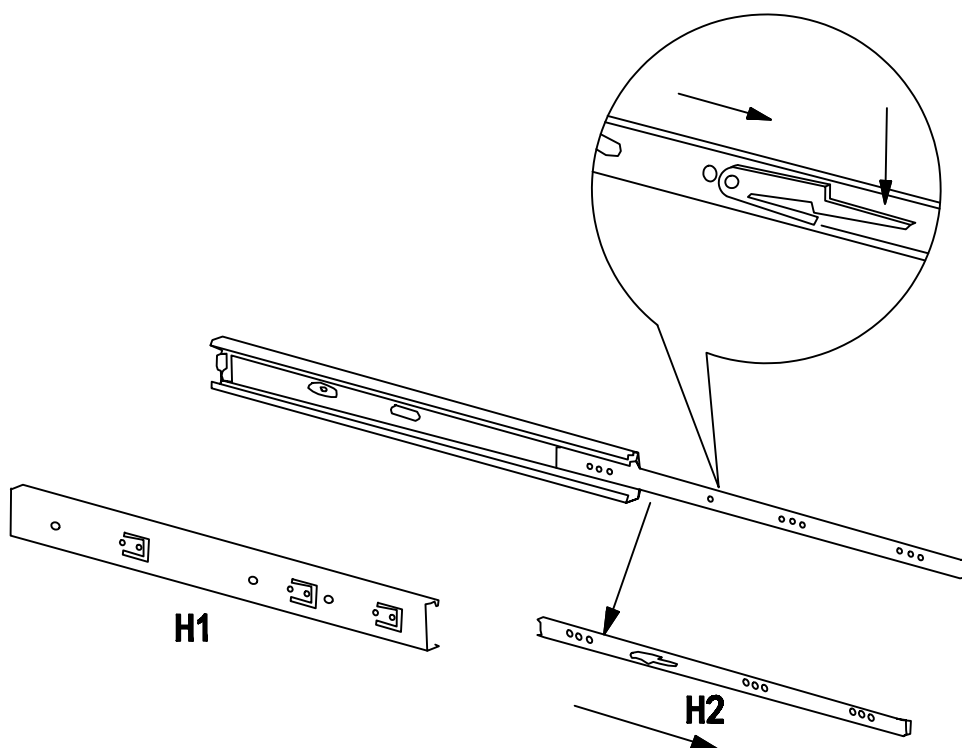


Step2: Attach Cam Pin(A) and Dowel(B) to Panel(C1&C2&C6&C9)

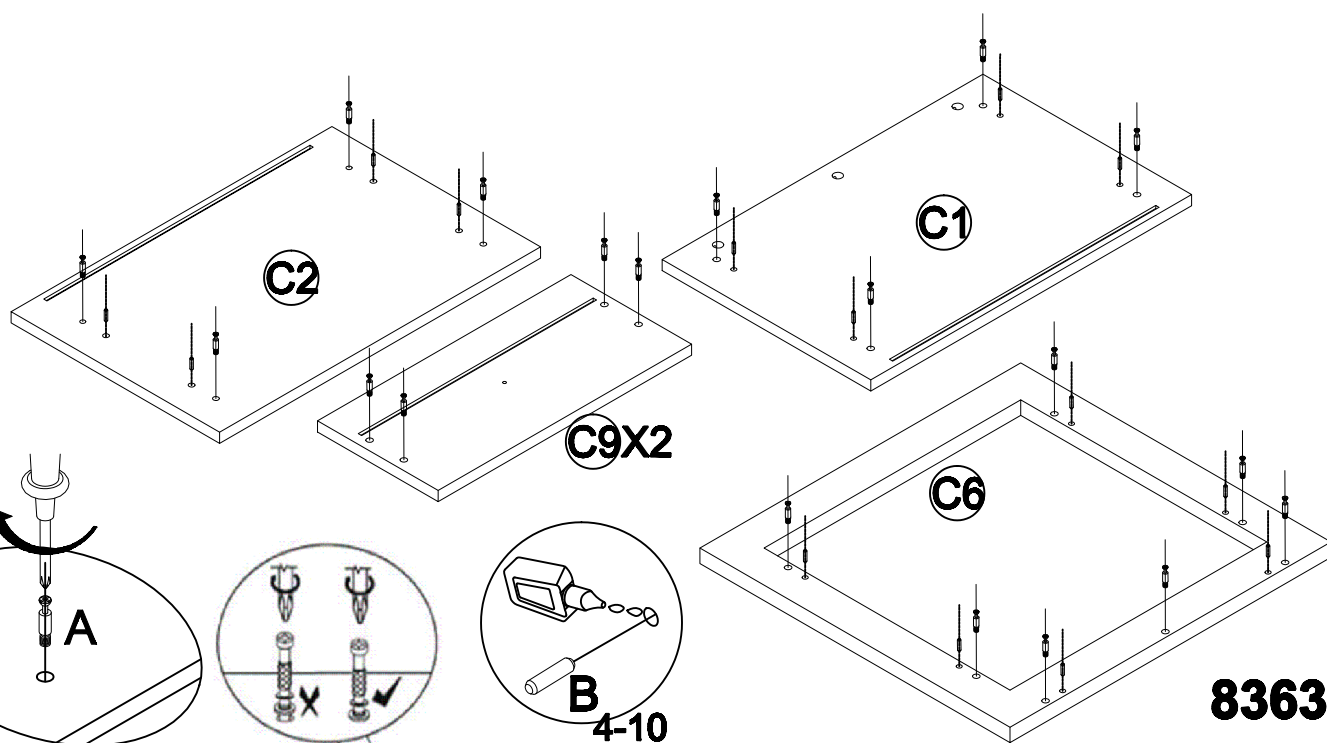

83632


STEP 3:

Use Hex Key(G) to attach Leg(C7&C8) to Panel(C2) with Bolt(E). Attach Runner(H1) to Panel(C3&C4) with Screw(C). Attach Protect Foam(K) to Panel(C7).

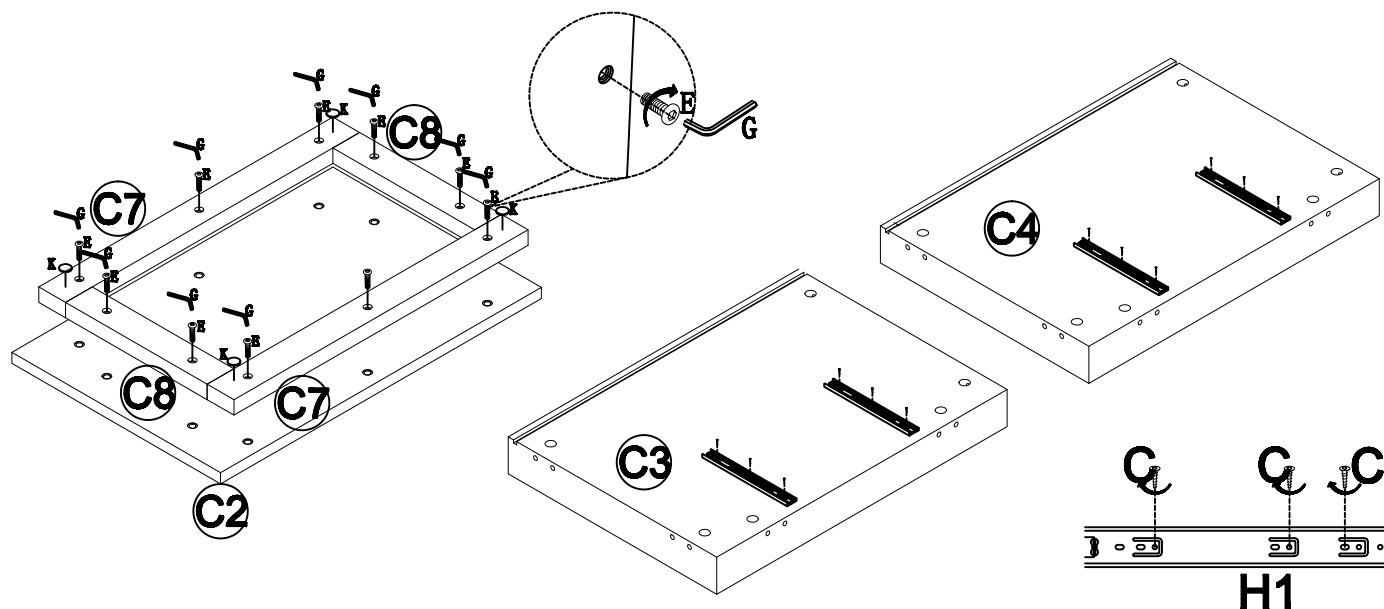

STEP 4:


Attach Panel(C3&C4) to Panel(C2). And turn Cam lock(A) to lock into the head of Cam Pin(A).

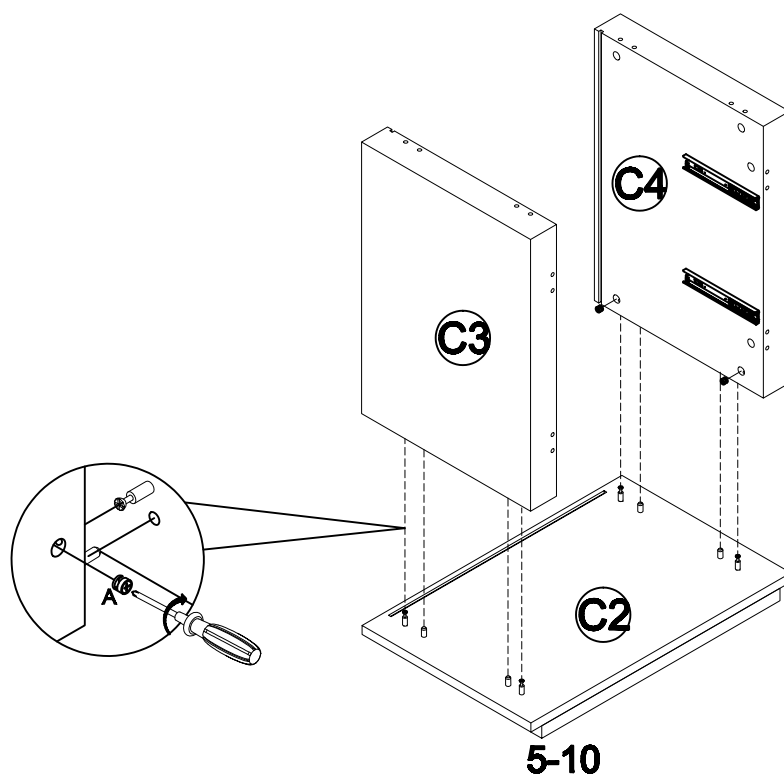

83632


STEP 5:

Insert Panel(C5) to the groove. Attach Panel(C1) to Panel(C3&C4). And turn Cam lock(A) to lock into the head of Cam Pin(A).

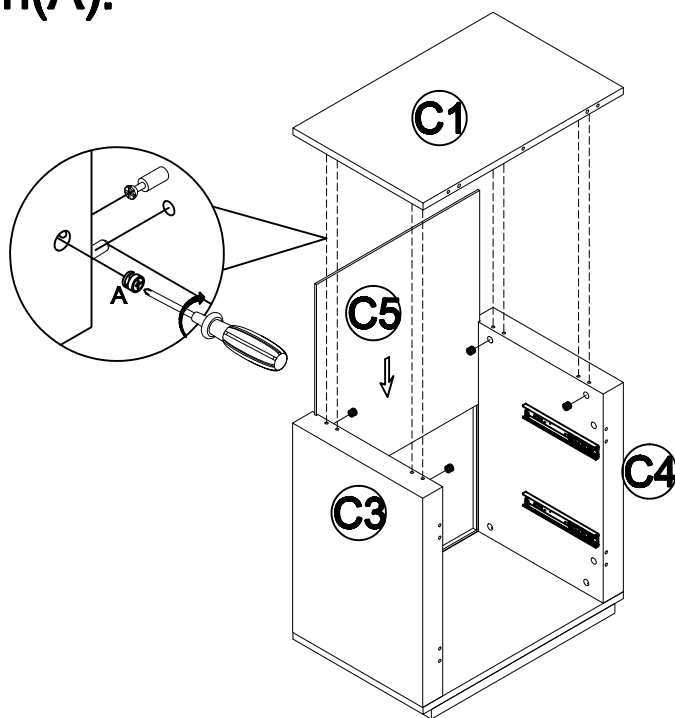


STEP 6:


Attach Panel(C6) to Panel(C1&C3&C4). And turn Cam lock(A) to lock into the head of Cam Pin(A).

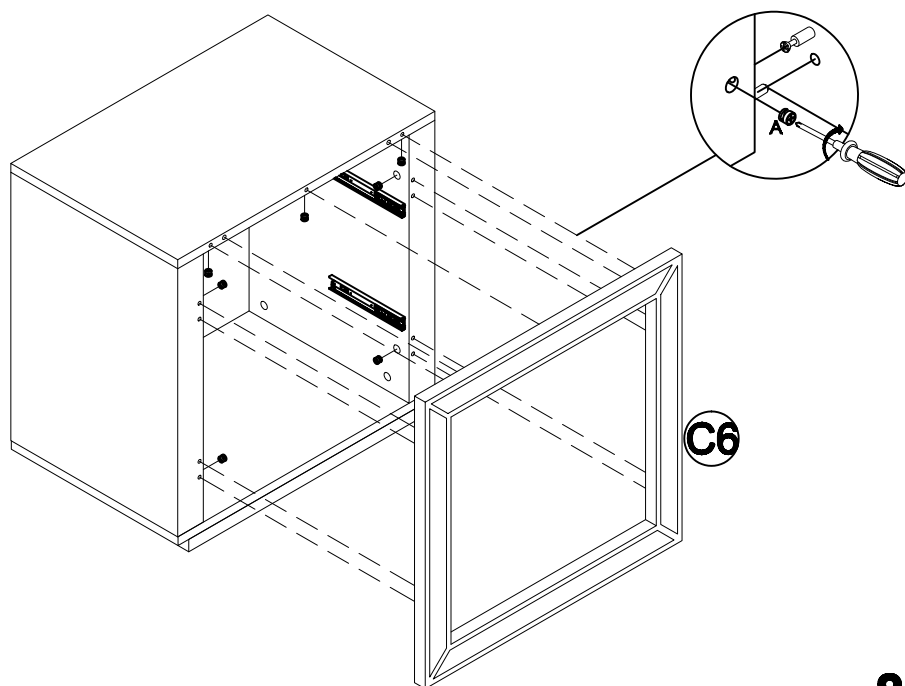

STEP 7:
Attach Connector(I) to Panel(C5) with Screw(J).

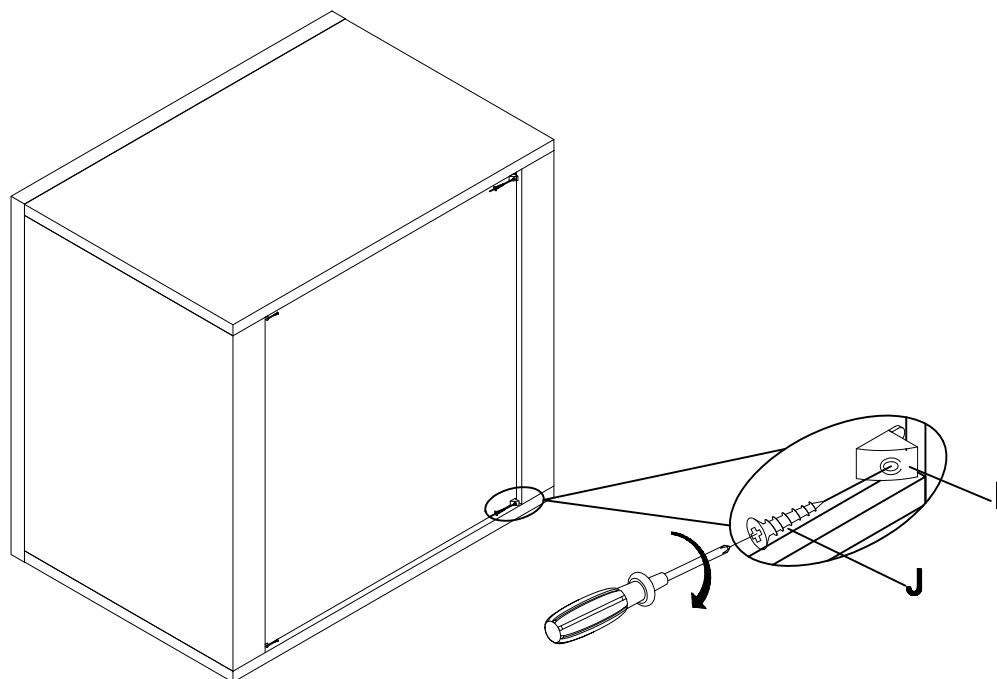


STEP 8:
Attach Panel(C10&C11) to Panel(C9). And turn Cam lock(A) to lock into the head of Cam Pin(A). Insert Panel(C13) to groove. Attach Panel(C12) to Panel(C10&C11) with Screw(D).

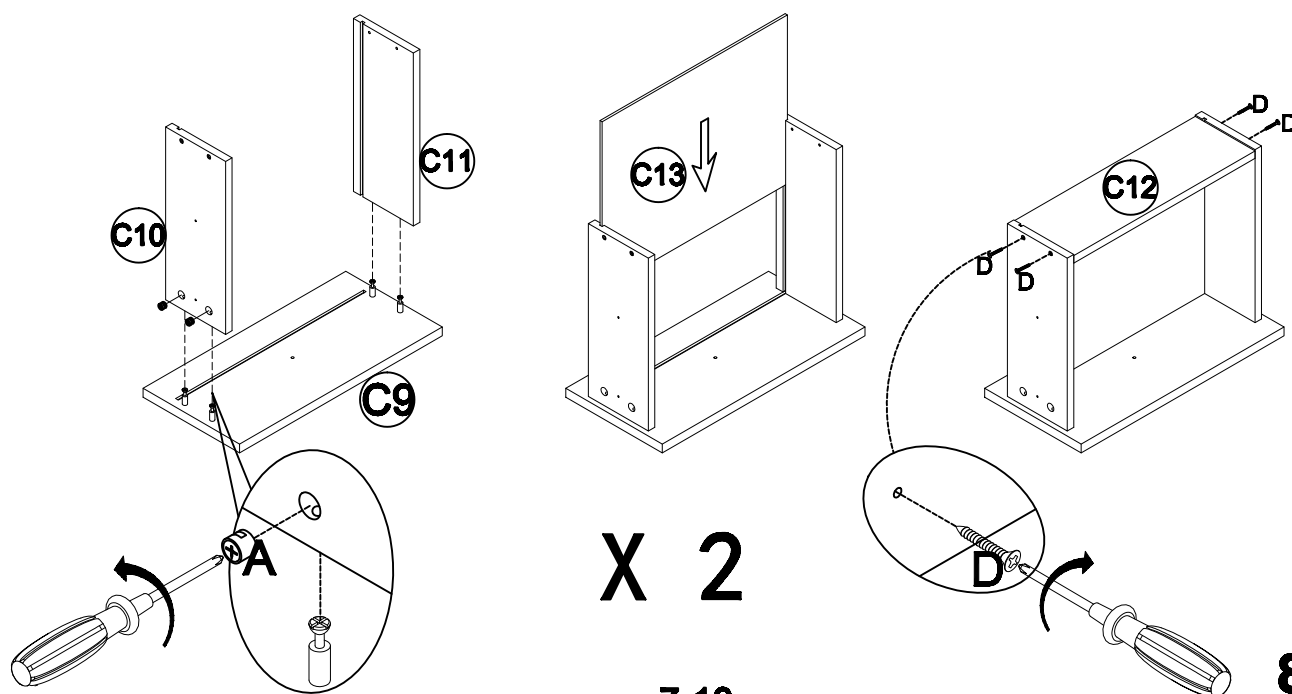


STEP 9:

Attach Runner(H2) to Panel(C10&C11) with Screw(C). Attach Handle(H) to Panel(C9) with Bolt(F).

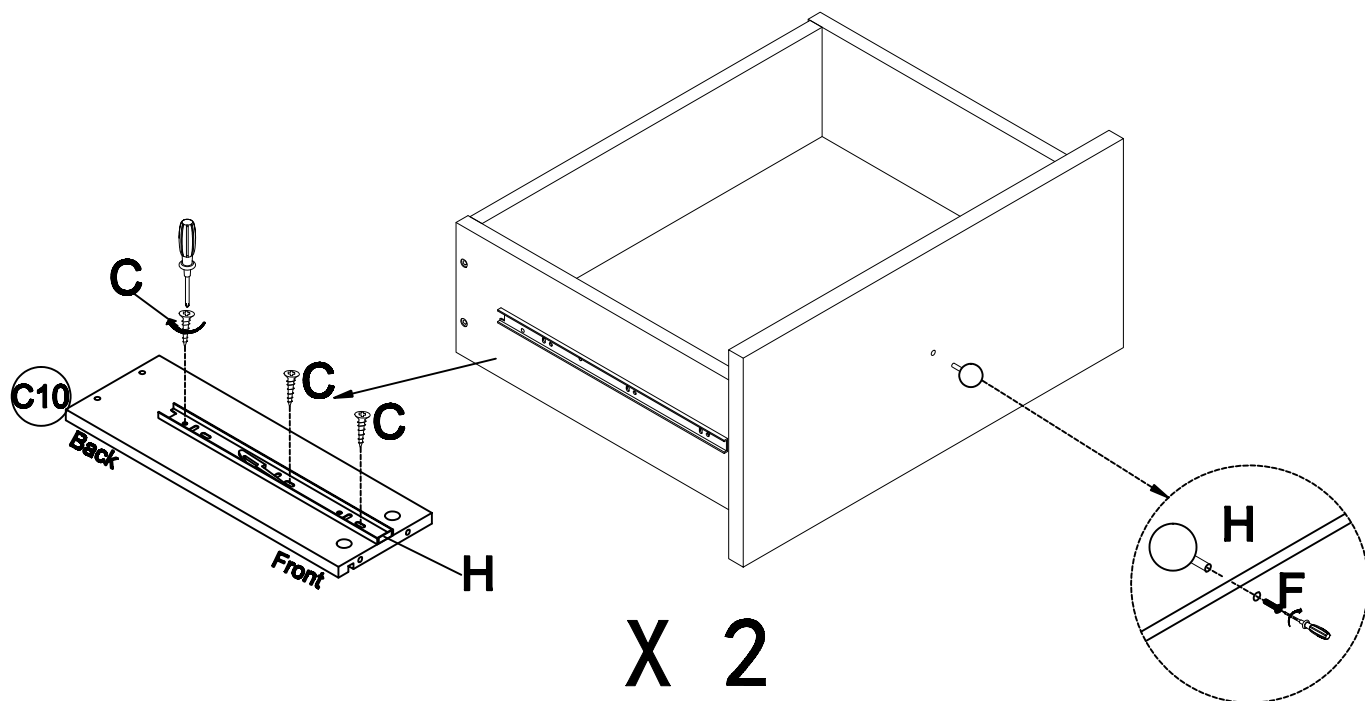

STEP 10:



Insert Drawers into the body.

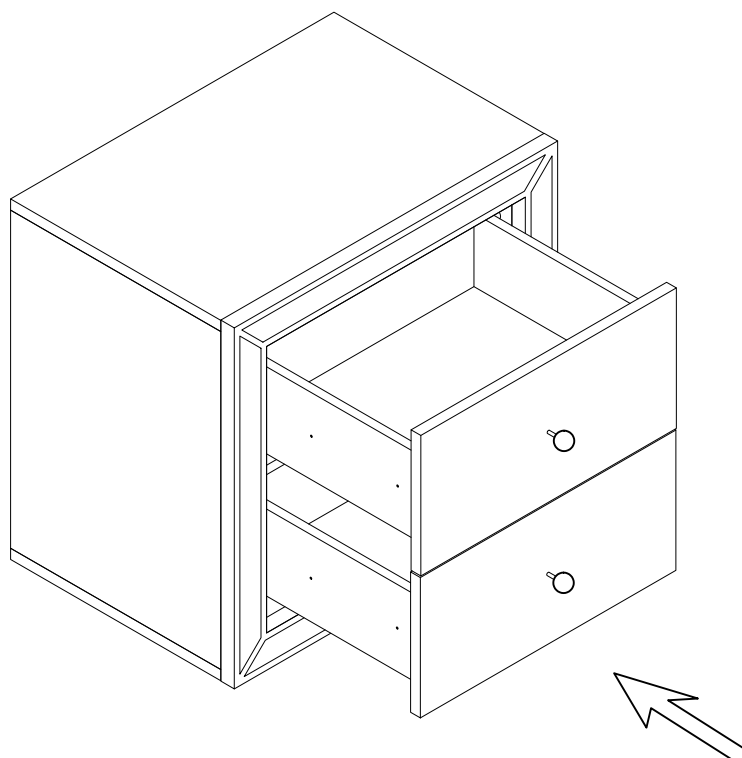

Please slot in the drawer with TIPPING WARNING STICKER inside is slotted to top layer.


Assembly is complete.

**PLEASE PEEL OFF THE
PROTECTIVE LAYER THAT
COVERED THE MIRROR
PANEL AROUND PANEL C6.**

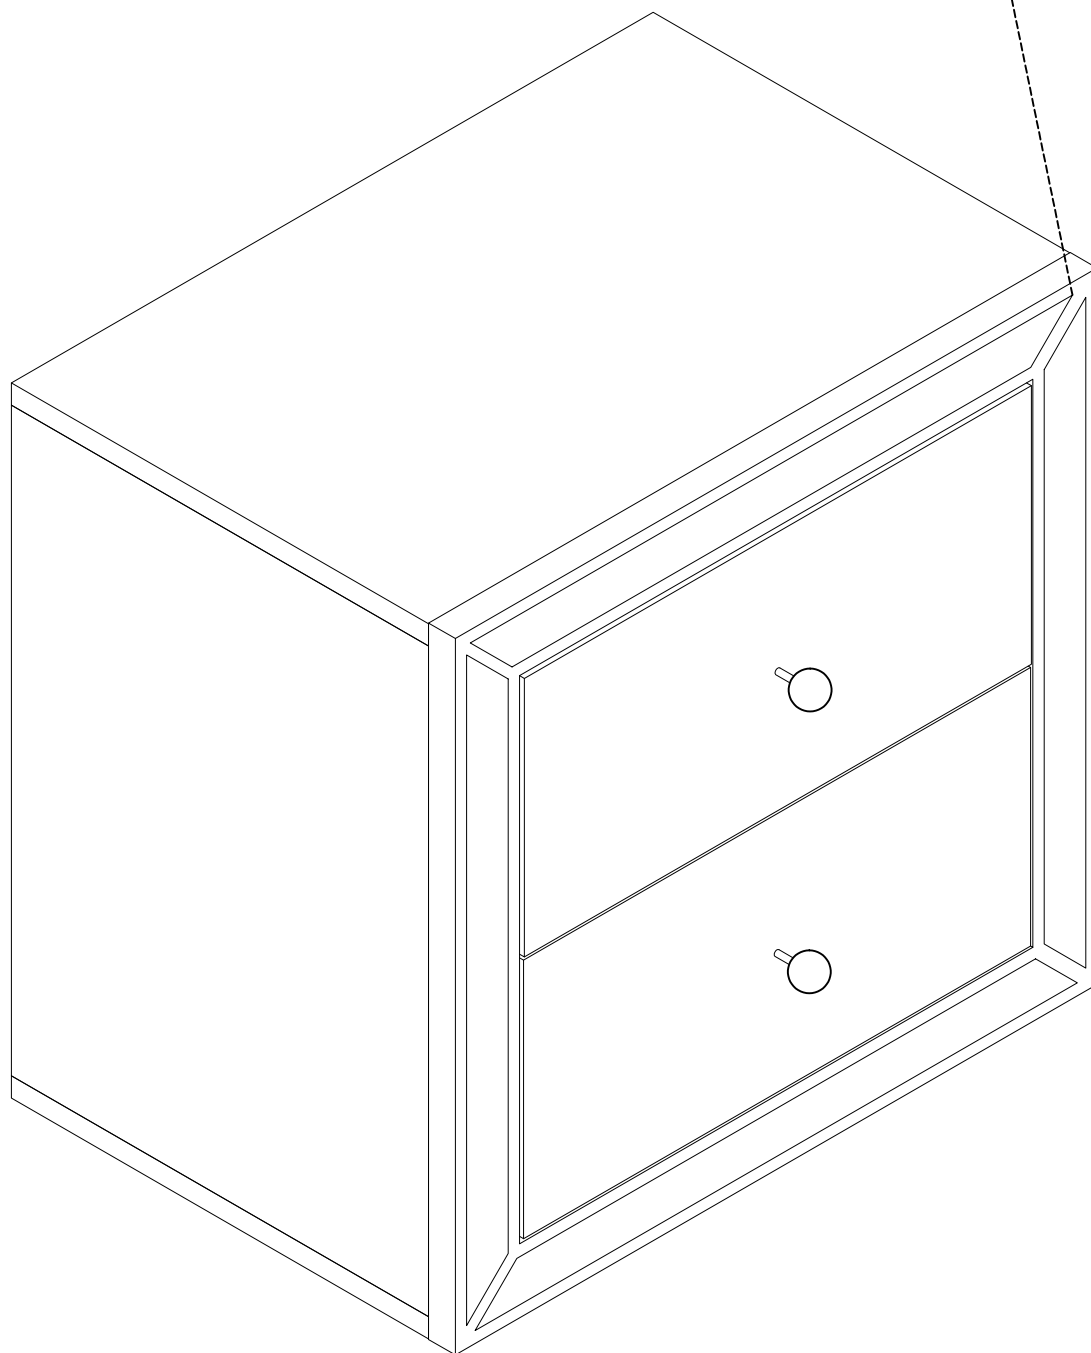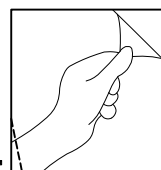

Note -

Do not drag the furniture as this may cause damage to the legs. Instead, use 2 persons to lift carefully from either end.

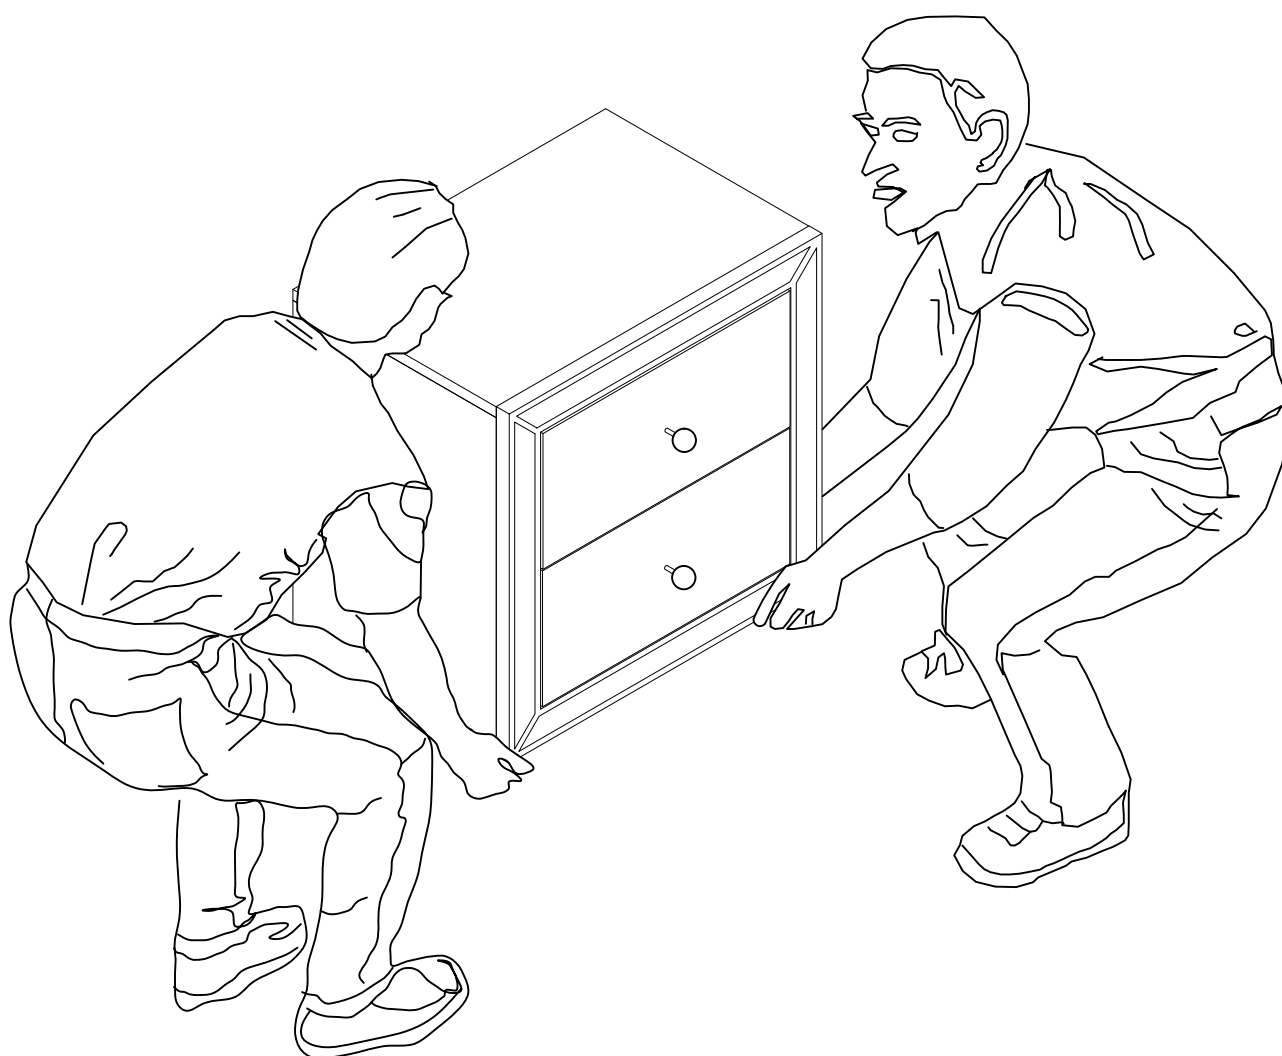

SAFETY BRACKETS INSTRUCTIONS

This furniture poses a tipping risk and as such must be secured to a wall using the provided tipping kit.

1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors. Please enquire with your local hardware supplier for appropriate fixings.
2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.

HARDWARE



Mounting Plate x 2




Wall Strap x 1



Large Screw x2



Small Screw x2

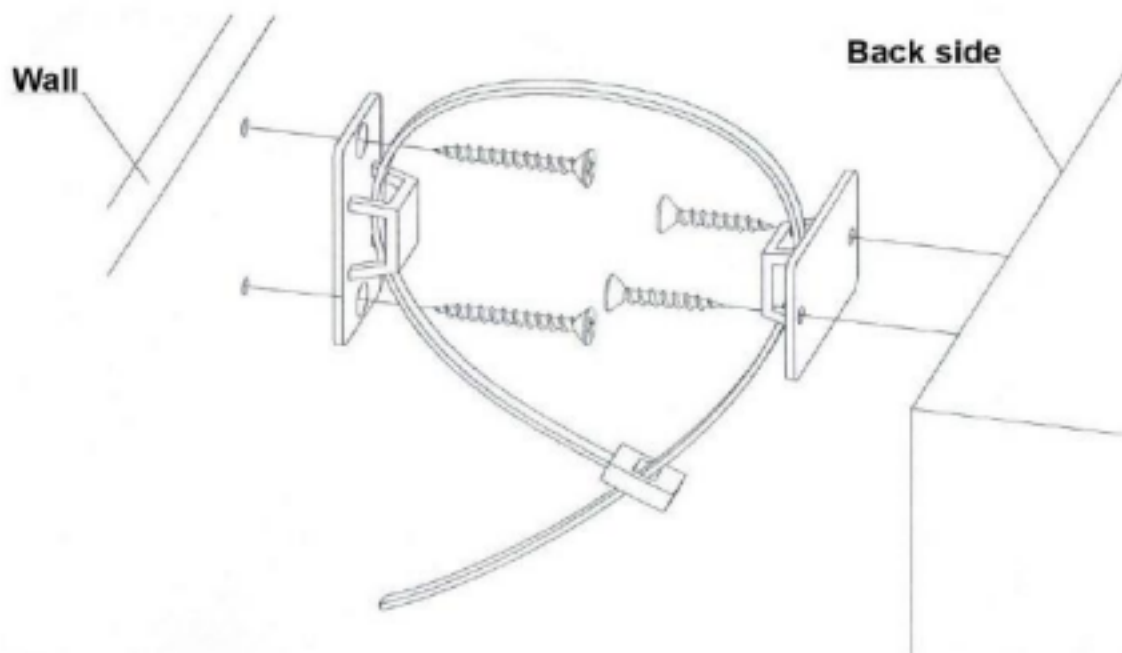

General Product Care

To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.