




ASSEMBLY INSTRUCTION

FILLMORE DESK GY/WT

ITEM CODE : 61351

Imported by Amart Furniture Pty Ltd, Qld, Brisbane Australia. For any assistance with assembly or for missing parts please phone Amart Furniture , Customer Service Free call 1800 351 084

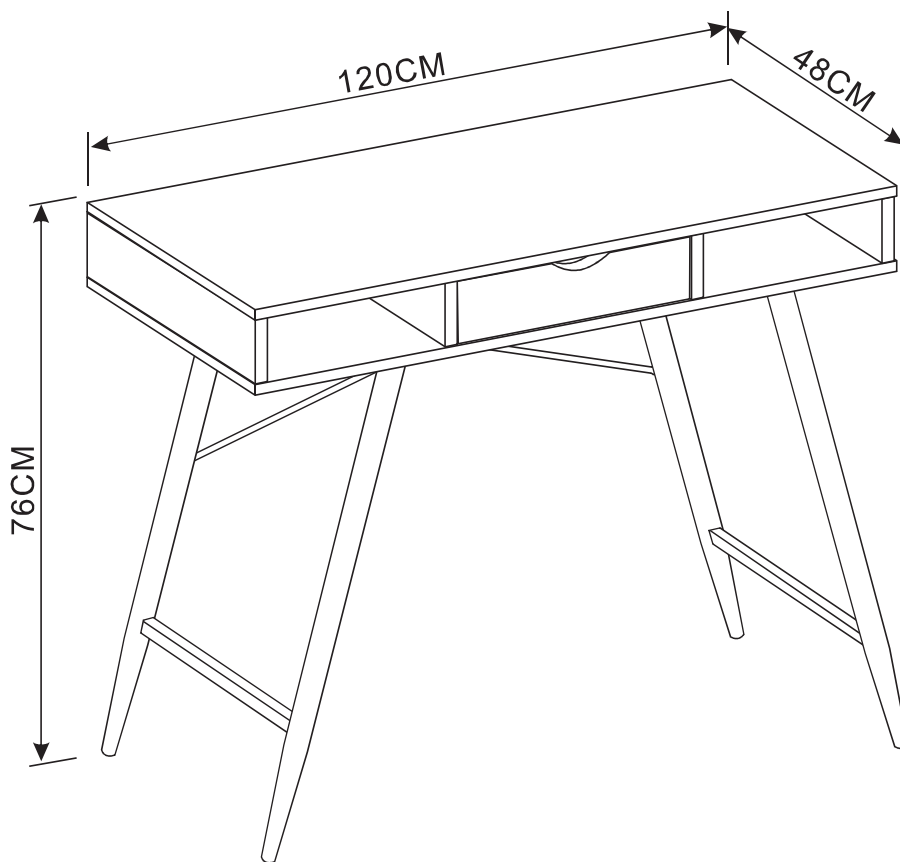


Imported by Amart Furniture Pty Ltd, Brisbane QLD Australia. For any assistance with assembly or for missing parts please phone Amart Furniture, Customer Service Free call 1800 351 084


PRE-ASSEMBLY PREPARATION

BEFORE YOU START:


1. Choose a clean, level, spacious assembly area. Avoid hard surfaces that may damage the product
2. Take care when lifting. Product should be assembled as near as possible to the point of use
3. Ensure that you have all required contents for complete assembly
4. Always read the assembly instructions carefully before beginning assembly.
5. Keep all hardware parts and packaging out of reach of small children.
6. Do not over tighten the screws and bolts as this may damage the threads

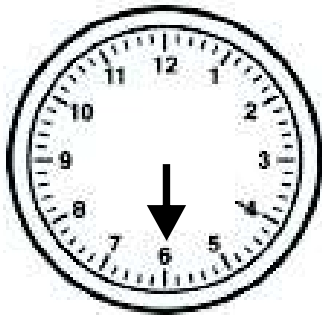

ALLOW 30 MINUTES

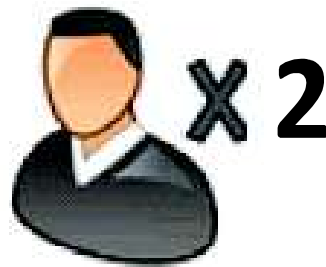


PEOPLE REQUIRED

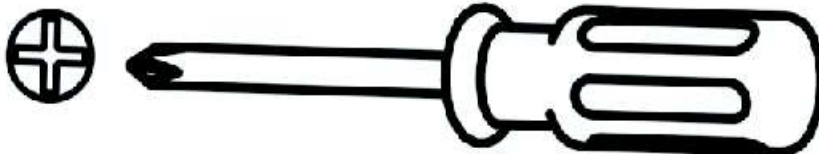

ADDITIONAL TOOLS REQUIRED

WARNING

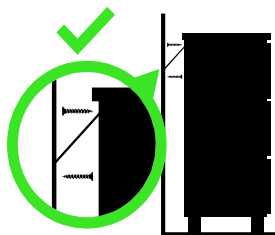

Children have died from furniture tipover.

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low

NEVER put a TV on this furniture




**This is a permanent label.
Do not remove!**


SAFETY BRACKETS INSTRUCTIONS

1. Attach one Mounting Plate to the wall with the Large Screws. Make sure to attach the Mounting Plate into a stud. If mounting into brick or masonry you will need to acquire wall anchors.
2. Attach the second Mounting Plate to the furniture frame with the Short Screws.
3. Move the furniture to its final position. Thread a Wall Strap through the both Mounting Plates and tighten until snug. Do not over tighten.
4. Make sure that the Mounting Plates are firmly attached to the wall and furniture and that the Wall Strap is snug.


HARDWARE

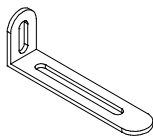


Metal x 2




Wall Nut x 2








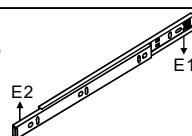


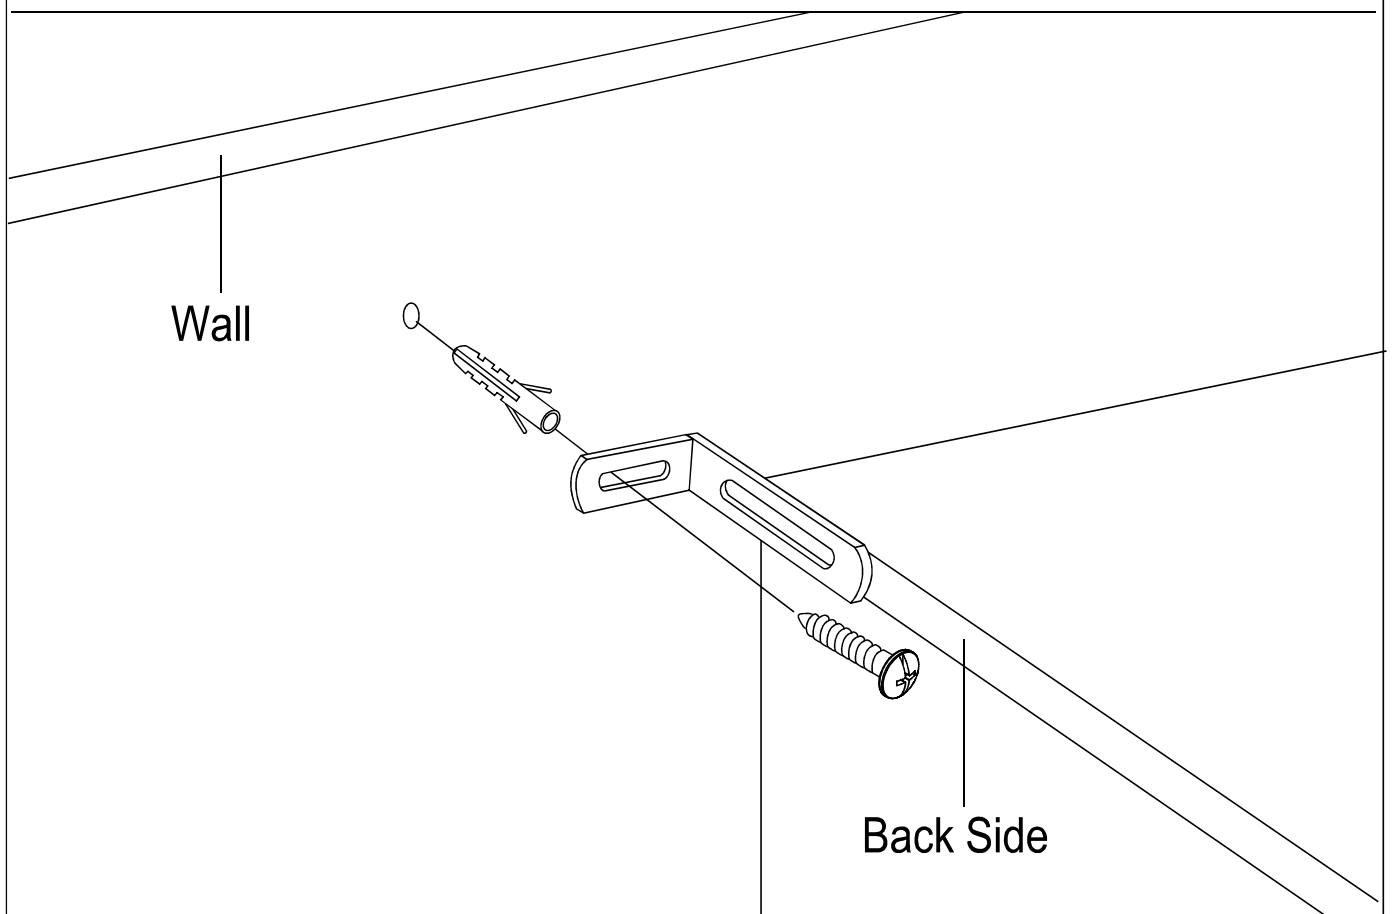






Screw x 2

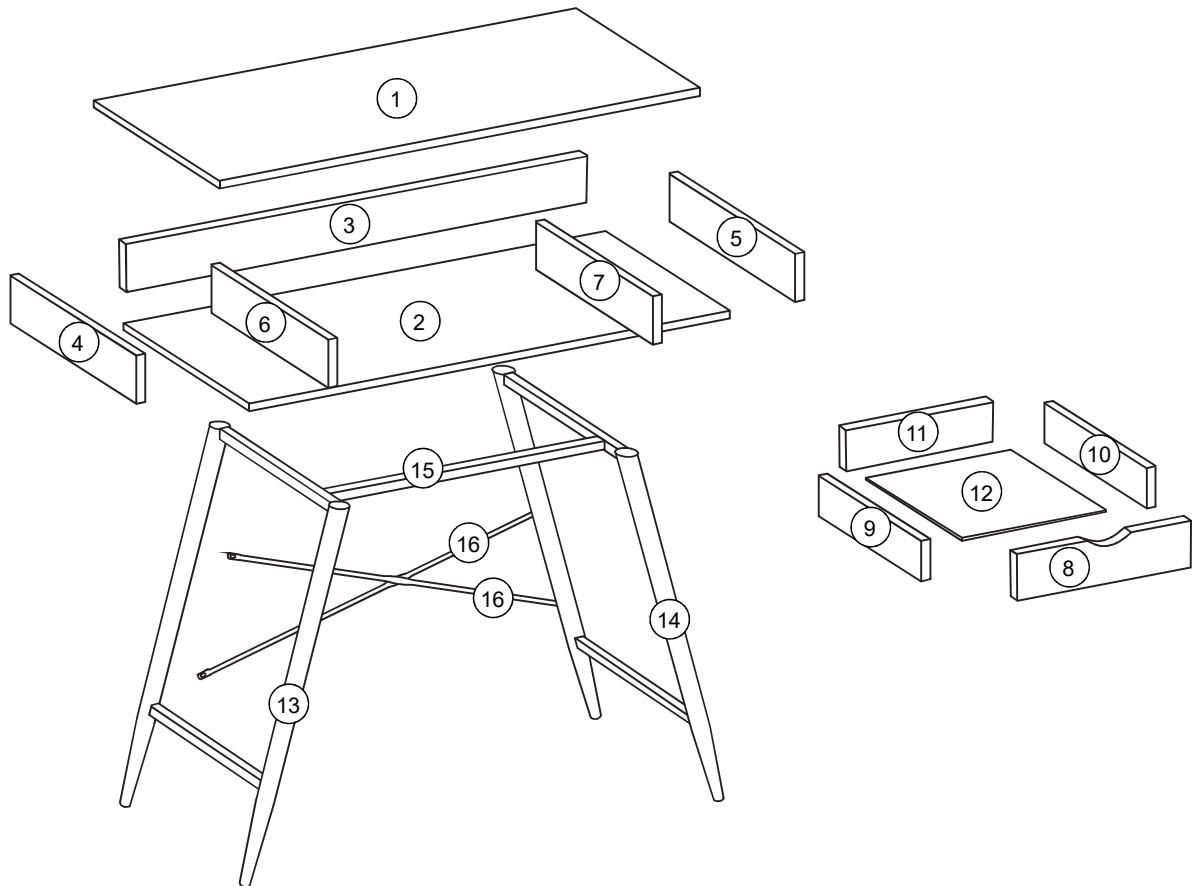


PARTS LIST



				11	Drawer Back Panel
1	Top Panel	6	Left Middle Panel	12	Bottom Drawer Panel
2	Bottom Panel	7	Right Middle Panel	13	Left Metal Frame
3	Back Panel	8	Front Drawer Panel	14	Right Metal Frame
4	Left Side Panel	9	Drawer Left Panel	15	Metal Tube
5	Right Side Panel	10	Drawer Right Panel	16	Metal Tube


A  Bolt 19pcs	B1  M6X30mm 6pcs	B2  M6X25mm 4pcs	C  ST3.5X14mm 16pcs	D  ST3.5X25mm 2pcs
E  Drawer slideway 2pcs	F  ST5X50mm 15pcs	G  M4X25mm 1pc	H  M4 1pc	I  M6 4pcs
J  8X30mm 16pcs	K  ST4X25mm 2pcs	L  Wall Nut 2pcs	M  Metal 2pcs	N  19pcs

STEP 1

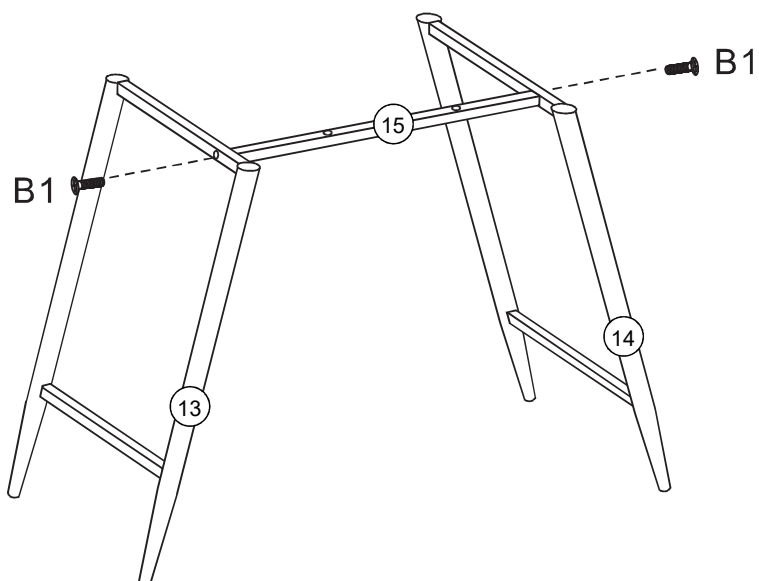

Assemble metal tube (15) to left metal frame (13) and right metal frame (14) using (B1).


STEP 2

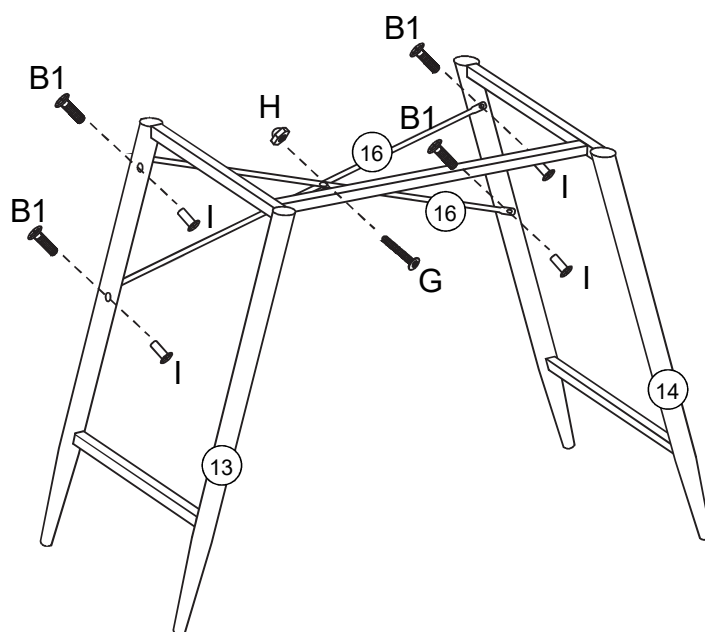

Assemble metal tube (16) with bolts and nut (H).


Assemble metal tube(16) to left metal frame (13) and right frame(14) with part B1 and I.

STEP 3

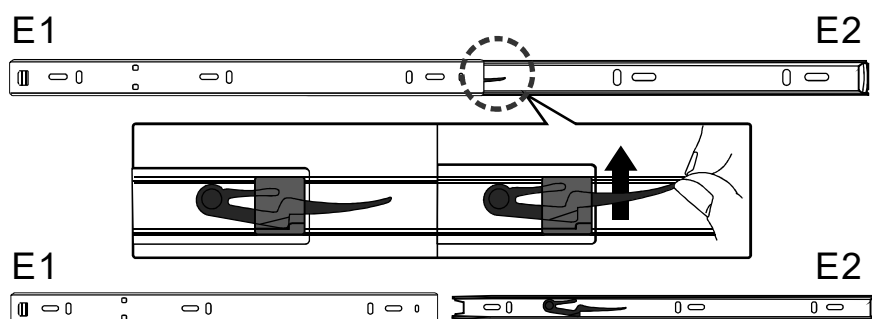



Raise the plastic tab on the runners and separate (E1) from (E2).

STEP 4

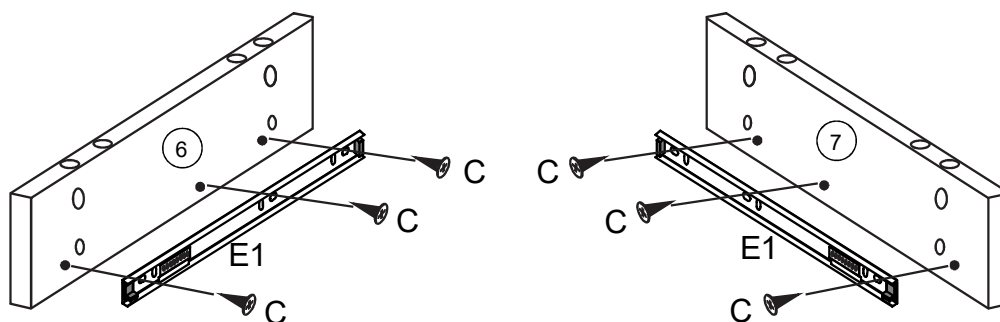


Assemble drawer runner (E1) to left middle panel (6) and right middle panel (7) using screw (C).

STEP 5

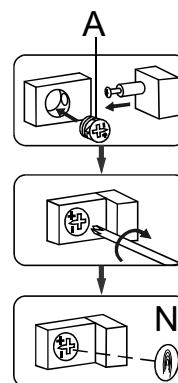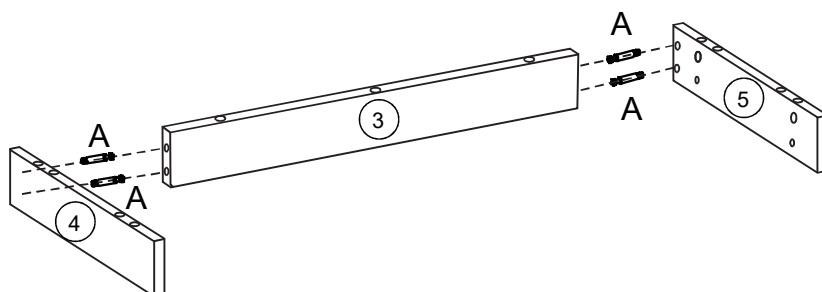


Assemble back panel (3) to left side panel (4) and right side panel (5) using bolt (A).
Place sticker (N) to cover assembled bolt (A).

STEP 6

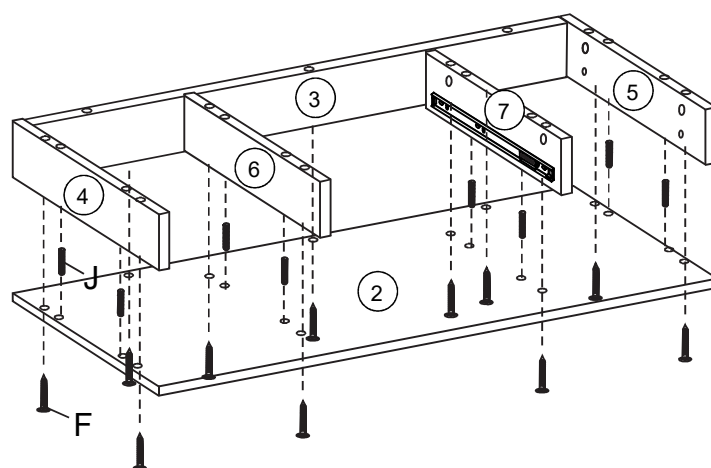


Assemble back panel (3), left side panel (4), right side panel (5), left middle panel (6), right middle panel (7) to bottom panel (2) using screw (F) and wood dowel (J).

STEP 7

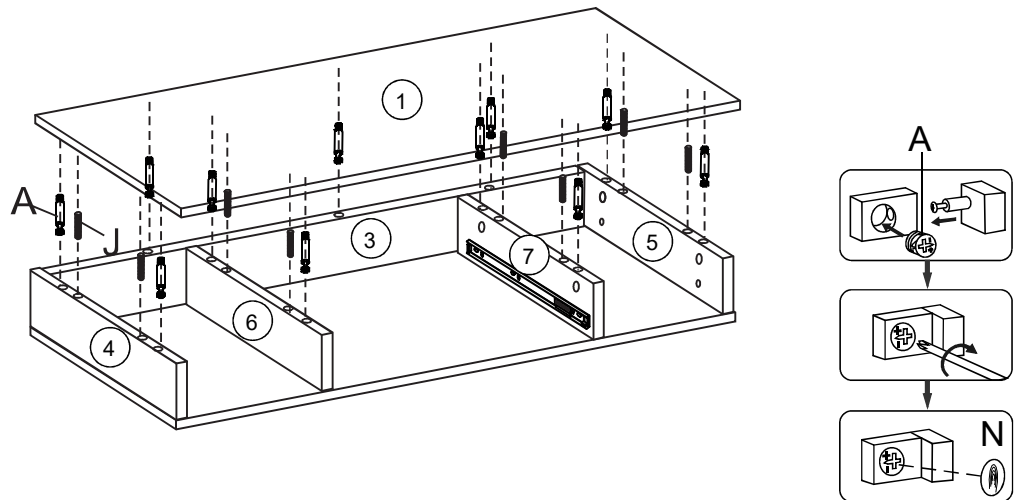


Assemble back panel (3), left side panel (4), right side panel (5), left middle panel (6), right middle panel (7) to top panel (1) using bolt (A) and wood dowel (J).
Place sticker (N) to cover assembled bolt (A).

STEP 8

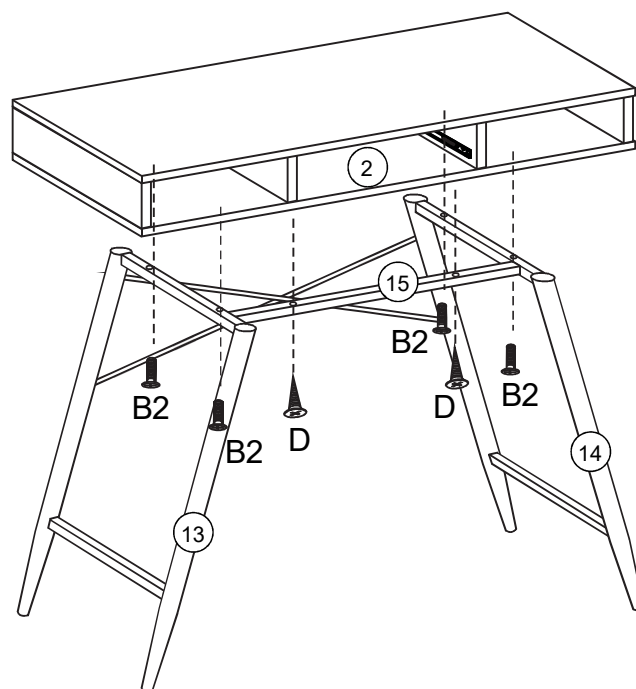



Assemble bottom panel (2) to left metal frame (13) and right metal frame (14) and metal tube (15) using bolt (B2) and screw (D).

STEP 9

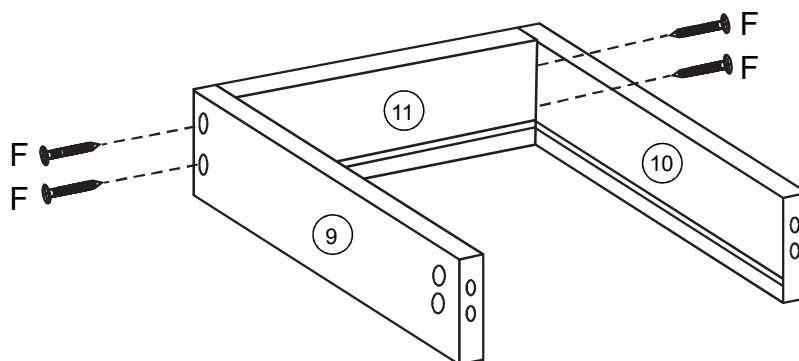


Assemble drawer back panel (11) to drawer left panel (9) and drawer right panel (10) using screw (F).

STEP 10

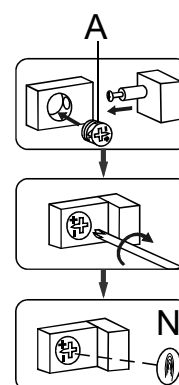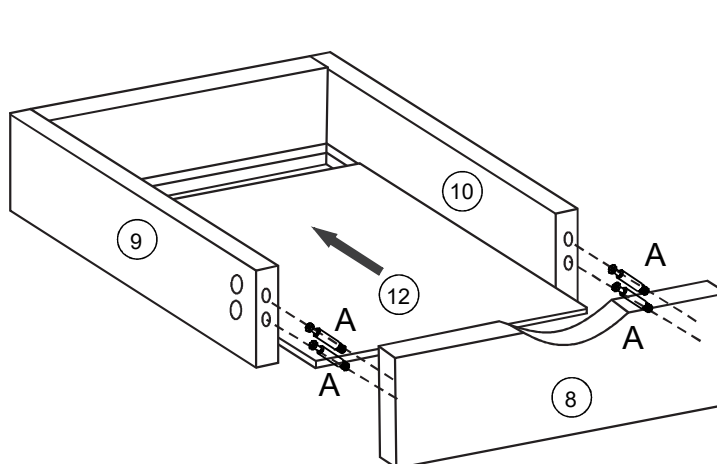


Insert bottom drawer panel (12) to drawer left panel (9) and drawer right panel (10), then assemble front drawer panel (8) to drawer left panel (9) and drawer right panel (10) using bolt (A). Place sticker (N) to cover assembled bolt (A).

STEP 11

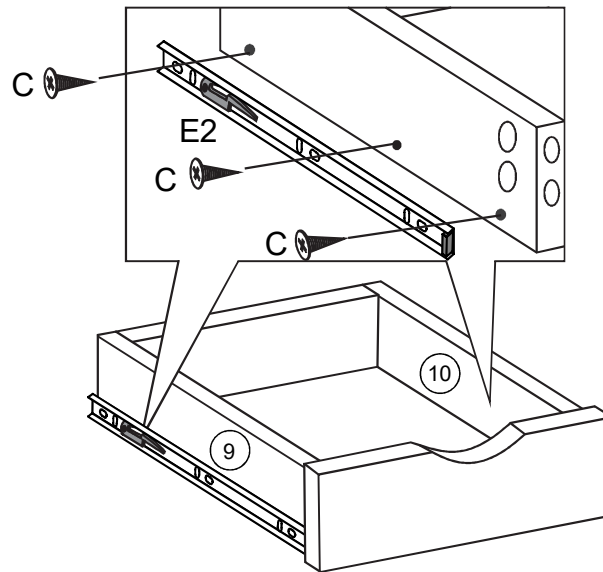


Assemble drawer runner (E2) to drawer left panel (9) and drawer right panel (10) using screw (C).

STEP 12

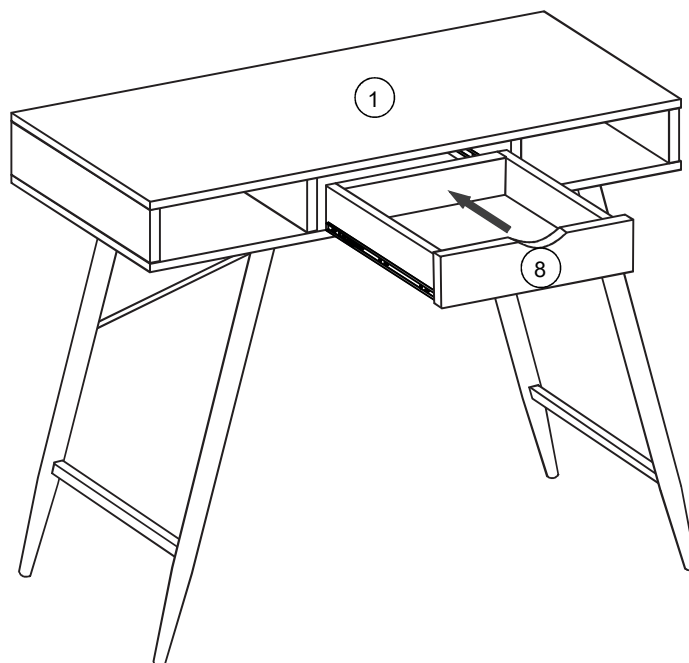


Insert drawer (8).

STEP 13

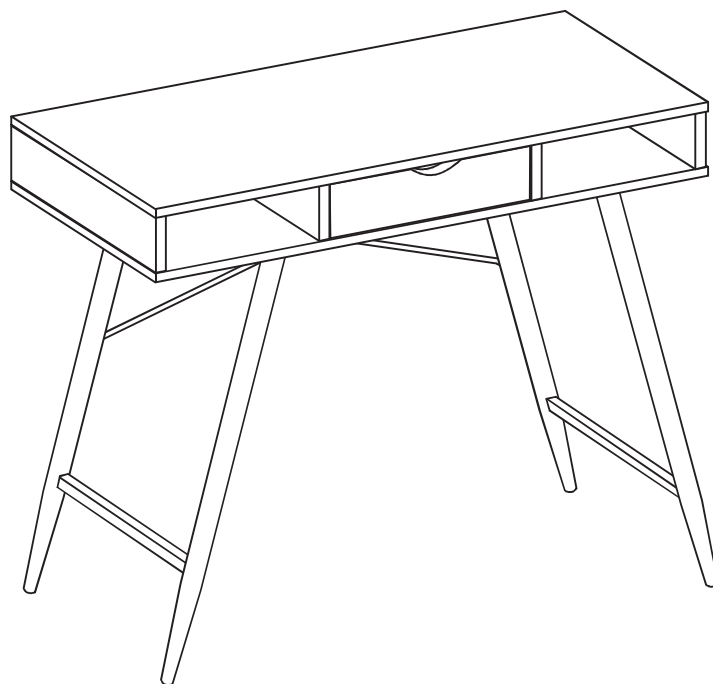

Assemble is completely.

STEP 14

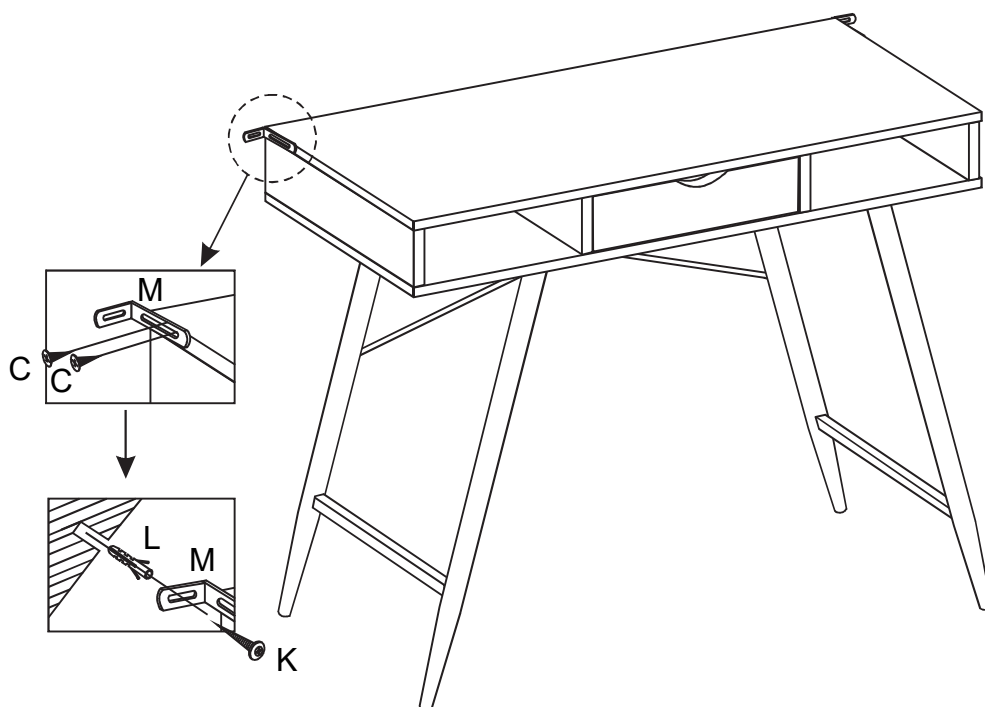

Insert wall nut (L) to the wall, assemble metal (M) to top panel (1) using screw (C), then connect metal (M) and wall nut (L) using screw (K).

GENERAL PRODUCT CARE



To protect your furniture, we suggest the following:

- Avoid placing your furniture in direct sunlight.
- Do not place furniture directly under windows.
- Do not place sharp materials (knife, fork, etc.) directly onto your furniture as sharp material may scrape and damage the finish.
- Do not place material with high temperature directly onto the surface of your furniture.
- Clean up spills quickly. Water left over a prolonged period of time may cause damage. Alcohol, perfume, nail polishes, aftershave and some medication may cause severe finish damage if not cleaned immediately.
- Use a clean, soft, dry, lint free absorbent cloth to clean your furniture. Do not use any detergent as they may contain ingredients that may react and damage the finish.

NOTE: If the above care advise is not adhered to your product warranty may become void